


Miele

Operating and installation instructions

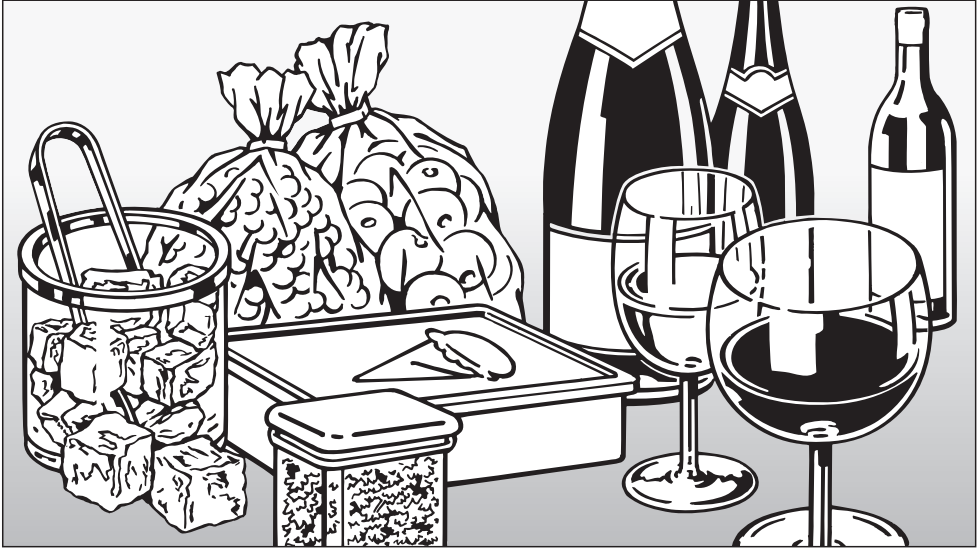


Frost free freezer with wine cooler and ice cube maker KFNS 3929 SE ed

To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.



Contents

Description of the appliance	5
Caring for the environment	7
Warning and Safety instructions	8
How to save energy	12
Switching on and off	14
Wine cooler	14
Freezer section	14
Safety lock	15
Switching off for longer periods of time	15
Temperature displays	16
Temperature display brightness	16
Alarm	18
Temperature alarm	18
Door alarm	18
Switching on the alarm system	18
Switching the alarm off early	18
Using the wine cooler	19
The correct temperature	19
Setting the temperature in the wine cooler	19
Temperature range	19
Dynamic cooling 	20
Switching on Dynamic cooling	20
Switching off Dynamic cooling	20
Storing wine bottles	22
Wooden shelf fronts	22
Descriptive labels	22
Using the freezer section	23
The correct temperature	23
Setting the temperature in the freezer section	23
Freezer section temperature range	23
Freezing fresh food	24
Super freeze	24
Switching on Super freeze	24
Switching off Super freeze	25


Contents

Freezing and storing food	25
Maximum freezing capacity	25
Storing frozen food	25
Home freezing	26
Hints on home freezing	26
Packing	26
Before placing food in the freezer compartment	27
Placing food in the freezer compartment	27
Freezer calendar	27
Marker system for frozen food	27
Defrosting	28
Cooling drinks	28
Freezer tray	28
Cool pack	29
Ice cube maker	30
Defrosting	32
Cleaning and care	33
Cleaning the outer casing, the interior and accessories	33
Cleaning the ice cube tray	33
Ventilation gaps	34
Door seals	34
Metal grille at the back of the appliance	35
Active charcoal filter	35
Problem solving guide	36
Noises	39
After sales service	40
Mains water connection	41
Notes on connecting to the mains water supply	41
Connection to the water inlet	41
Electrical connection	43
Installation	44
Location	44
Climate range	44
Ventilation	44
Installation	44
Aligning the appliance	44


Contents

Installing in a side-by-side combination	45
Installation	45
Joining the two appliances together	45
Changing the door hinging	49
Building in the appliance	53

Description of the appliance

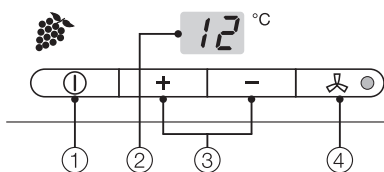


- ① Wine cooler On/Off button
- ② Wine cooler temperature display
- ③ Wine cooler temperature selector buttons
left hand button: warmer
right hand button: colder
- ④ Dynamic cooling / constant humidity button and indicator light
- ⑤ Safety lock indicator light

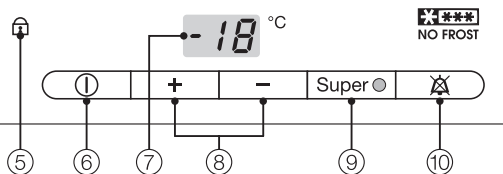

- ⑥ Freezer section On/Off button
- ⑦ Freezer section temperature display
- ⑧ Freezer section temperature selector buttons
left hand button: warmer
right hand button: colder
- ⑨ Super freeze button and indicator light
- ⑩ Alarm off button

Description of the appliance

- ① Wooden shelf front with descriptive labels
- ② Active charcoal filter
- ③ Condensate channel and drain hole
- ④ Ice cube drawer with automatic ice cube maker
- ⑤ Freezer drawers with freezer calendar
- ⑥ Marker system for frozen food

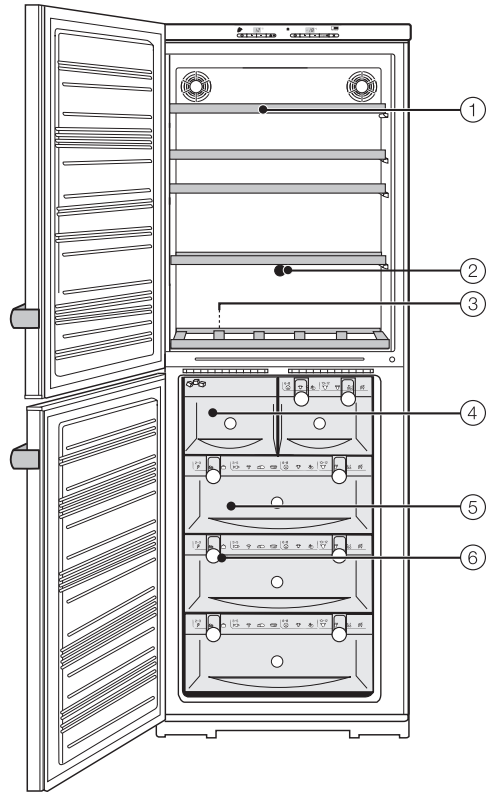

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Rather than just throwing these materials away, please ensure that they are recycled.


Disposal of your old appliance

Please ensure that the appliance presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person. The plug must be rendered useless and the cable cut off directly behind the appliance to prevent misuse. See the "Warning and Safety" section of this booklet for further details.

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance.

Please dispose of your old appliance at your local community waste collection / recycling centre and not with your household waste.

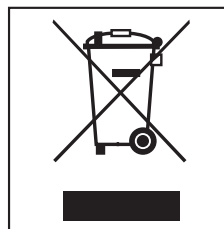

Take care not to damage the pipework at the back of it before or during transportation to an authorised collection depot.

In this way, refrigerant in the pipework and oil in the compressor will be contained, and will not leak out into the environment.

Warning and Safety instructions

This appliance complies with all relevant legal safety requirements. Improper use of the appliance can, however, present a risk of both personal injury and material damage.

Before installation and before using for the first time, read the operating instructions carefully. They contain important notes on installation, safety, operation and care of the appliance. This way you will avoid the risk of accidents and damage to the appliance.

This appliance is not a toy! To avoid the risk of injury, do not allow children to play on or near it, or to play with the controls. Supervise its use by the elderly or infirm

Keep these operating instructions in a safe place and pass them on to any future user.

Correct use

■ This appliance is intended for domestic use only for storing wine as well as for storing deep frozen food, freezing fresh food and for preparing ice.

Any other usage is not supported by the manufacturer and could be dangerous. The manufacturer cannot be held liable for damage caused by incorrect or improper use of the appliance.

Technical safety

■ This appliance contains the coolant Isobutane (R600a), a natural gas which is environmentally friendly. Although it is flammable, it does not damage the ozone layer and does not increase the greenhouse effect. The use of this environmentally friendly coolant has, however, led to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the coolant flowing around the system. This is unavoidable, but does not have any adverse effect on the performance of the appliance.

Care must be taken during transportation and setting up of the appliance that no parts of the cooling system are damaged. Leaking coolant can damage the eyes.

In the event of any damage:

- avoid open fires and anything which creates a spark,
- disconnect from the mains,
- air the room in which the appliance is located for several minutes and
- contact the Service Department for advice.

■ The more refrigerant there is in an appliance, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up. For every 8 g of coolant at least 1 m³ room space is required. The amount of coolant in the appliance is stated on the data plate inside the appliance.

Warning and Safety instructions

Before connecting the appliance to the mains supply make sure that the rating on the data plate corresponds to the voltage and frequency of the household supply. This data must correspond in order to avoid risk of damage to the appliance. If in any doubt, consult a qualified electrician.

The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system, which complies with local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested and where there is any doubt the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

Safe operation of the appliance is only assured if it has been installed and connected in accordance with these operating and installation instructions.

This equipment may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment of the installation has been carried out by a suitably qualified engineer.

Installation work, maintenance and repairs may only be carried out by suitably qualified and competent persons to ensure safety. Repairs and other work by unqualified persons could be dangerous and the manufacturer will not be held liable.

The manufacturer cannot be held liable for damage due to a faulty connection to the mains water supply.

Connection to the mains water supply and any repairs to the ice cube maker must only be carried out by a suitably qualified and competent person.

The ice cube maker is not suitable for connection to a hot water supply.

Before making plumbing connections, ensure the appliance is disconnected from the mains electricity supply.

The appliance is only completely isolated from the electricity supply when:

- it has been switched off at the wall socket and the plug removed,
- the fuse from the fused spur connection unit is withdrawn, or
- the screw-out fuse is removed (in countries where this is applicable).

Do not connect the appliance to the mains electricity supply by an extension lead.

Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

Warning and Safety instructions

Use

■ Never handle frozen food with wet hands. Your hands may freeze to the frozen food. Danger of injury.

■ Do not use any electrical equipment in this appliance, e.g. ice cream makers. Danger of sparking and explosion!

■ Do not take ice cubes out with your bare hands and never place ice cubes or ice lollies in your mouth straight from the freezer. The very low temperature of the frozen ice or lollies can cause frost burn to the lips and tongue.

■ Do not refreeze thawed or partially thawed food. Defrosted food should be used up as quickly as possible as food soon loses its nutritional value and goes off. Defrosted food may only be re-frozen after it has been cooked.

■ Do not store explosive materials in the appliance or any products containing propellants (e.g. spray cans). Thermostats switching on may produce sparks which could present a fire hazard.

■ If storing alcohol with a high percentage proof, make sure it is tightly closed and stored upright. Danger of explosion.

■ Do not store cans or bottles containing carbonated drinks or liquids which could freeze in the freezer. The cans or bottles could explode. Danger of injury and damage to the appliance.

■ When cooling drinks quickly in the freezer make sure bottles are not left in for more than one hour, otherwise they could burst. Danger of injury and damage to the appliance.

■ Observe the "use by" dates given on food to avoid the risk of food poisoning. Storage times will depend on several factors including the freshness and quality of the food as well as the temperature at which it is stored. Follow the instructions given on food manufacturer's packaging on storage conditions required as well as the "use by" date.

■ Do not use sharp edged objects to

- remove frost and ice,
- separate frozen foods and remove ice trays.

They will damage the evaporator causing irreversible damage to the appliance.

■ Never place electric heaters or candles in the appliance to defrost it. These can damage the plastic parts.

■ Do not use defrosting sprays, or de-icers as they could contain substances which could damage the plastic parts and which may cause the build up of gases and pose a danger to health.

■ Do not use any oils or grease on the door seals as these will cause the seals to deteriorate and become porous with time.

Warning and Safety instructions

Do not block the ventilation grilles in the appliance as this would impair the efficiency of the appliance, increase the electricity consumption and could cause damage to the appliance.

The appliance is designed for use within certain climate ranges (ambient temperatures) and should not be used outside this range. The climate range for your appliance is stated on the data plate inside the appliance. Installing it in a room with too low an ambient temperature, e.g. a garage, will lead to the appliance switching off for longer periods so that it cannot maintain the required temperature.

Never use a steam-cleaning appliance to defrost or clean this appliance. Pressurised steam could reach the electrical components and cause a short circuit.

In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surrounding in a clean condition at all times. Any damage caused by cockroaches or vermin will not be covered by the appliance guarantee.

Disposal of your old appliance

Before disposing of an old appliance first make the door latch or lock unusable.

This way you will prevent children from accidentally locking themselves in and endangering their lives.

Before disposing of an old appliance, unplug it and render the plug unusable. Cut off the cable directly behind the appliance and at the plug to prevent misuse.

Be careful not to damage any part of the pipework whilst awaiting disposal, e.g. by

- puncturing the refrigerant channels in the evaporator.
- bending any pipework.
- scratching the surface coating.

Splashes of refrigerant can damage the eyes.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and safety instructions.

How to save energy

	Normal energy consumption	Increased energy consumption
Installation site	In a ventilated room.	In an enclosed, unventilated room.
	Protected from direct sunlight.	In direct sunlight.
	Not situated near to a heat source (radiator, oven).	Situated near to a heat source (radiator, oven).
	Where the ambient room temperature is ideal at approx. 20°C.	Where there is a high ambient room temperature.
Temperature setting with a thermostat which is approximate (set in stages).	With a medium setting of 2 to 3.	With a high setting: The lower the temperature in the appliance, the higher the energy consumption.
Temperature setting with a thermostat which is exact to the degree (digital display).	Cellar section 8 to 12°C	On appliances with winter setting, please make sure that the winter setting is switched off when the ambient temperature is warmer than 16 °C.
	Refrigerator section 4 to 5 °C	
	StayFresh zone just above 0 °C	
	Freezer section -18°C	
Use	Only open the door when necessary and for as short a time as possible.	Frequent opening of the door for long periods will cause a loss of coldness.
	Store food in an organised way.	If food is not stored in an organised way, searching for an item will mean the door is open for longer.
	Allow hot food and drinks to cool down before placing them in the appliance.	Placing hot food in the appliance will cause the compressor to run for a long time, as the appliance will have to work harder to lower the temperature.
	Store food covered or packaged.	The evaporation or condensation of liquids will cause a loss of coldness in the refrigerator.
	Place frozen food in the refrigerator to defrost.	
	Do not over-fill the appliance to allow air to circulate.	

How to save energy

	Normal energy consumption	Increased energy consumption
Defrosting	Defrost the freezer when a layer of ice one centimetre thick has built up.	A layer of ice hinders the cold from reaching the frozen food, and causes an increase in energy consumption.

Switching on and off

Before using for the first time

The stainless steel surface has a layer of protective foil to prevent scratching during transportation.

- Do not remove this foil until the appliance has been installed or built in. Start at one of the upper corners.
- Clean stainless steel surfaces with a suitable conditioning agent for stainless steel.
- Clean the inside of the appliance and the accessories with warm water and a little washing up liquid, and then dry with a soft cloth.

 
Important:

To ensure the correct functioning of the appliance, let it stand for between 1½ and 2 hour after transporting it to its final location before connecting it to the mains.

Switching on

The wine cooler and freezer section are switched on independently of one another so that, if required, you can switch on only one.


Wine cooler



- Press the wine cooler On/Off button on the left hand side of the control panel.

The wine cooler temperature display will light up and the wine cooler starts cooling.

 Freezer section



- Press the freezer section On/Off button on the right hand side of the control panel.

Bars light up in the freezer section temperature display and the freezer section starts cooling.

Allow the appliance to run for a few hours before placing food in it. This will ensure that the temperature is sufficiently low.

Cool pack

Place the cool pack in the top freezer drawer or to save space on the freezer tray. The cool pack will be at its most effective after it has been in the freezer for approx. 24 hours.

Switching off

 
- Press the appropriate On/Off button until the temperature display goes out.

The cooling system is switched off. If this does not happen, then the safety lock has been activated.

Safety lock

The safety lock can be activated to prevent the appliance being switched off inadvertently.

Activating or de-activating the safety lock




- Press and hold the Super freeze button for approx. 5 seconds.

 
The Super freeze indicator light flashes and a **C** flashes in the temperature display.

- Press the Super freeze button again.
- C** lights up in the temperature display.



- You can now choose between **C 0** and **C 1** by pressing the temperature selector buttons:
0: the safety lock is de-activated,
1: the safety lock is activated.
- Press the Super freeze button to save the setting.

The safety lock indicator light  will light up when the safety lock has been activated.



- Press the freezer section On/Off button to come out of the setting mode.

The electronics will then switch over to normal operation after a couple of minutes.

Switching off for longer periods of time

If the appliance is not going to be used for a longer period of time, e.g. whilst on holiday,

- switch the appliance off,
- switch off at the wall socket and withdraw the plug,
- close the stopcock for the water inlet,
- clean the appliance out and
- leave the doors ajar to air the appliance.

If, during a long absence, the appliance is switched off but not cleaned out and the doors are left shut, there is a danger of mould and odours building up inside the appliance.

Temperature displays

During normal operation the temperature displays show the average temperature in the wine cooler and the temperature in the warmest part of the freezer section.

If the temperature in the appliance is not within the range that the appliance is able to display (above 0 °C in the wine cooler, and below 0 °C in the freezer section), bars will flash in the temperature displays.

Depending on the ambient temperature and the setting, it can take the appliance up to 8 hours to reach the temperature required and for this temperature to then be shown as a constant temperature in the display.

The **temperature displays flash**, if

- a different temperature is being set,
- the temperature in the wine cooler is too low,
- the temperature in the appliance has risen by several degrees, indicating that the appliance is warming up too much.

A loss of coldness in the freezer section is no cause for concern in the following circumstances:

 
- when the door has been left open for a while, e.g. for removing or storing a large amount of food,
- when freezing large amounts of food at once,
- if the temperature of the food you have recently placed in the freezer section is too warm,

- if the ambient temperature surrounding the appliance is too high.
The appliance is designed for use in specific ambient temperatures (climate ranges). Do not use in ambient temperatures for which it is not designed.

Temperature display brightness

The appliance is supplied with the brightness of the temperature display set as low as possible. However, if the door is opened, a setting changed or if the alarm is sounding, the temperature display will appear much brighter for approx. 1 minute.

You can adjust the level of brightness:



- Press and hold the Super freeze button for approx. 5 seconds.

 
The Super freeze indicator light flashes and a **h** flashes in the temperature display.



- Press one of the temperature selector buttons repeatedly until an **h** appears in the display.
- Press the Super freeze button again.
h lights up in the temperature display.

Temperature displays

- You can now adjust the level of brightness by pressing the temperature selector buttons. You can choose from settings 1 to 5:
1: lowest setting,
5: brightest setting.
- Press the Super freeze button to save the setting.



- Press the freezer section On/Off button to come out of the setting mode.

The electronics will then switch over to normal operation after a couple of minutes.

Alarm

Your appliance has been fitted with a warning system to protect your stored wine and frozen food from a change in temperature and also to save energy.

Temperature alarm

An alarm will sound and the relevant temperature display will flash, if the temperature in the wine cooler is too cold or too warm or if the temperature in the freezer section is not cold enough.

The temperature the appliance is set at determines the temperature the appliance recognises as being too warm or too cold.

The alarm will sound and the relevant temperature display will also flash:

- when freezing large amounts of food at once.
- if the doors have been left open for a while, e.g. in order to load, to re-arrange or to take out frozen food or wine bottles.

The temperature display continues to flash until the set temperature has been reached.

Door alarm

If one of the doors has been left open for more than approx. 60 seconds the alarm will sound.

The alarm will stop as soon as the door is closed.

Switching on the alarm system

The alarm system is always active. It does not have to be switched on manually.

Switching the alarm off early

Once the set temperature has been reached in the wine cooler or the freezer section, the alarm switches off and the temperature display stops flashing and lights up constantly. However, if the noise disturbs you, you can turn the alarm off before this if you wish.



- Press the alarm off button. The alarm will stop. The relevant temperature display will continue to flash until the set temperature has been reached. The display then stops flashing and lights up constantly. The alarm system is now ready should it be needed again.

Using the wine cooler

Wine keeps on maturing depending on the surrounding conditions. The length of time for which wine can be kept in good condition will depend on the temperature but also the air humidity.

The correct temperature

Wine can be stored at a temperature between 5°C and 18°C. The optimum temperature is around 8 - 12°C. Most white wines can be consumed at this temperature. It is best to take red wine out of the wine cooler about two hours before drinking. Open the wine to allow it to breathe and to develop its aroma. After two hours red wine will be at the correct temperature for drinking.

If wine is stored at a temperature above 22°C it will mature too quickly. Wine should not be stored below 5°C for a long period of time as it will not mature fully at this low temperature.

Fluctuations in temperature put wine under stress and interrupt the maturing process. It is therefore very important to maintain a constant temperature.

Safety feature

A thermostat prevents the temperature in the wine cooler falling below 2°C. If the external temperature should drop below this level, a heater element in the appliance switches on automatically to keep the temperature inside as constant as possible.

Setting the temperature in the wine cooler

Use the two buttons underneath wine cooler temperature display to set the temperature.

Press the



- | | |
|--------------------|----------------------------|
| left hand button: | to raise the temperature |
| right hand button: | to reduce the temperature. |

The temperature being set will flash in the display.

After setting the temperature you can see the following information in the display by pressing the +/- buttons:

- When first pressed: the **last temperature selected** flashes.
- Each subsequent press of the button adjusts the temperature shown in 1 °C steps.
- Keeping the button pressed in adjusts the temperature continually.

Approx. 5 seconds after letting go of the button, the current **actual** temperature of the wine cooler is automatically shown.

Temperature range

The temperature can be adjusted from 5 °C to 18 °C.

Using the wine cooler

Humidity

It is very important to store wine in an atmosphere with a high humidity level (60 - 70 %) so that the corks remain moist on the outside. A refrigerator with its low humidity level is therefore not the best place to store wine. At a low humidity level corks dry out from the outside and so do not seal the bottles as tightly. This is why wine always has to be stored on its side so that the wine keeps the corks moist from the inside too. Air entering the bottle will inevitably spoil the wine.

 
Useful tip: Before serving, stand the wine upright for at least two hours, or the entire day if possible, to allow any sediment to settle at the bottom of the bottle.


Dynamic cooling

With Dynamic cooling the relative humidity inside the wine cooler and the temperature are distributed evenly around the interior which enables you to store all your wine under the exactly the same excellent conditions.

The fan will switch itself on automatically at regular intervals to ensure that the humidity level in the wine cooler remains constant.


Switching on Dynamic cooling



- For a constant circulation of air inside the wine cooler, press the Dynamic cooling button . The indicator light will come on.

Switching off Dynamic cooling

Because the appliance uses more energy when Dynamic cooling is switched on, it should not be left switched on all the time.

- To switch it off, press the Dynamic cooling button . The indicator light will go out.

The fan automatically switches off whilst the door is open.

Air filtering with the active charcoal filter

The active charcoal filter maintains the air quality in the wine cooler by filtering the incoming air to ensure that all air entering the appliance is fresh and free from dust and smells.

Replace the active charcoal filter with a new one once a year (see "Cleaning and care").

Storing wine bottles

Wooden shelf fronts

Any vibration or movement of the bottle can affect the wine by interrupting the natural respiration process and so impair the taste.

As far as possible, store bottles of the same type of wine beside each other on the same shelf. Removing a bottle of one type will then leave the other types undisturbed and will avoid the need to move different bottles around.

The wine cooler can hold a maximum of 42 bottles (standard 0.75 litre Bordeaux wine bottles).

Descriptive labels

Use the labels supplied to identify your wine quickly and easily. Insert the labels into the wooden shelf fronts from above.

Additional labels can be purchased from your dealer.

The correct temperature

To freeze fresh food and to store frozen food for a long time, a temperature colder than **-18 °C** is required. At this temperature the growth of micro-organisms is generally halted. As soon as the temperature rises above **-10 °C**, the micro-organisms become active in the food again so that it cannot be kept as long. For this reason, partially defrosted or defrosted food must not be re-frozen. Food may be re-frozen once it has been cooked, as the high temperatures achieved when cooking destroy most micro-organisms.

Setting the temperature in the freezer section

Use the two buttons underneath the freezer section temperature display to set the temperature.

Press the



left hand button: to raise the temperature

right hand button: to reduce the temperature.

The temperature being set will flash in the display.

After setting the temperature you can see the following information in the display by pressing the buttons:

- When first pressed, the **last temperature selected** flashes.

- Each subsequent press of the button adjusts the temperature shown in **1 °C** steps.
- Keeping the button pressed in adjusts the temperature continually.

Approx. 5 seconds after letting go of the button, the current **actual** temperature of the freezer section is automatically shown.

If you have adjusted the temperature, **wait for approx. 6 hours if the appliance is not very full** and for **approx. 24 hours if the appliance is full** before checking the temperature display as it will take this long for the display to give an accurate reading. If, after this time, the temperature is still too high or too low, you will need to adjust it again.

Freezer section temperature range

The temperature can be adjusted from **-14 °C** to **-28 °C**.

The ambient temperature in the room and the installation location can affect the time it takes for the appliance to reach the lowest temperature. If the ambient temperature is too high, the appliance may not reach the lowest temperature.

Using the freezer section

Freezing fresh food

Fresh food should be frozen as quickly as possible. This way the nutritional value of the food, its vitamin content, appearance and taste are not impaired.

Food which takes a long time to freeze will lose more water from its cells, which then shrink.

During the defrosting process, only some of this water is reabsorbed by the cells; the rest collects around the food. In practice this means that the food loses a large degree of its moisture. The rest collects around the food.

If food is frozen quickly, the cells have less time to lose moisture, so they shrink less.

As there is not so much moisture, it is easier for the food to reabsorb it during the defrosting process. and very little water collects around the defrosted food.

Super freeze

 
Switch the Super freeze function on before putting fresh food into the freezer section.

Exceptions:

- when putting in food that is already frozen.
- when freezing less than 2 kg fresh food daily.

Switching on Super freeze

When freezing small quantities of food in the freezer section, the Super freeze function should be switched on **6 hours beforehand**. When freezing **the maximum load of food** the Super freeze function should be switched on **24 hours beforehand**.



- Press the Super freeze button. The Super freeze indicator light will come on.

The appliance works at full power to lower the temperature in the appliance.

Switching off Super freeze

Depending on the amount of food placed in the freezer section, the Super freeze function will switch off automatically after approx. 30 to 65 hours. The Super freeze indicator light will go out and the appliance will continue running at normal power.

To save energy the Super freeze function can be switched off once a constant temperature of $-18\text{ }^{\circ}\text{C}$ or colder has been reached in the freezer section.

- Press the Super freeze button. The Super freeze indicator light will go out, and the appliance will continue to operate at normal power.

Freezing and storing food

Maximum freezing capacity

To ensure that fresh food placed in the freezer freezes through to the core as quickly as possible, the maximum freezing capacity must not be exceeded. The maximum freezing capacity for freezing within a 24-hour period is given on the data plate "Freezing capacitykg/24 hrs".

Storing frozen food

When buying frozen food to store in your freezer compartment, check

- that the packaging is not damaged,
 - the use by date,
 - the temperature at which the frozen food is being stored in the shop. The length of time it can be kept is reduced if it has been stored at a temperature warmer than $-18\text{ }^{\circ}\text{C}$.
- Buy frozen food once you have finished the rest of your shopping, and wrap it in newspaper or use a cool bag or cool box to transport it.
 - Store it in the freezer section as soon as possible.

Never re-freeze partially or fully defrosted food. Consume defrosted food as soon as possible as it will lose its nutritional value and spoil if left for too long. Defrosted food may only be re-frozen after it has been cooked.

Using the freezer section

Home freezing

Only freeze fresh food which is in a good condition.

Hints on home freezing

- The following types of food **are suitable** for freezing:
Fresh meat, poultry, game, fish, vegetables, herbs, fresh fruit, dairy products, pastry, leftovers, egg yolks, egg whites and a range of pre-cooked meals.
- The following types of food **are not suitable** for freezing:
Grapes, lettuce, radishes, sour cream, mayonnaise, eggs in their shells, onions, whole raw apples and pears.
- To retain colour, taste and vitamin C, vegetables should be blanched after they have been trimmed and washed. To blanch: bring a large saucepan of water to the boil, immerse the vegetables in the fast boiling water for 2-3 minutes, depending on variety. Remove, and plunge into cold water to cool quickly. Drain and pack ready for freezing.
- Lean meat freezes better than fatty meat, and can be stored for considerably longer.
- To prevent chops, steaks, cutlets or rolled meat from freezing together in solid blocks when packed, separate with a sheet of plastic freezer film.
- Do not season fresh foods or blanched vegetables before freezing. Only season cooked food

lightly before freezing, but care should be taken as the taste of some spices alters when frozen.

- Do not place hot foods or drinks in the freezer. This causes already frozen food to thaw, and increases the energy consumption considerably. Allow hot foods and drinks to cool down before placing them in the freezer.

Packing

- Freeze food in portions.

Unsuitable packing material

- wrapping paper
- grease-proof paper
- cellophane
- bin bags
- plastic carrier bags

Suitable packing material

- plastic freezer film
- freezer bags
- aluminium foil
- freezer containers

- Expel as much air as possible from bags etc. before sealing them, to prevent freezer burn on food.
- Close the packaging tightly with
 - rubber bands
 - plastic clips
 - string or bag ties
 - freezer tape.

Freezer bags may also be sealed using home heat sealing kits.

- Make a note of the contents and the date of freezing on the packaging.

Using the freezer section

Before placing food in the freezer compartment

- When freezing more than 2 kg of fresh food, switch on the Super freeze function for some time before placing the food in the freezer section (see "Super freeze").

Placing food in the freezer compartment

Food to be frozen can be placed anywhere in the freezer section.

Large quantities can be placed directly on to the glass cold plates to freeze the food quickly. To do this first take out one or more freezer drawers.

When freezing **large items** e.g. a turkey or a large joint of meat, the glass cold plate between two of the drawers as well as one of the freezer drawers can be removed to give more room. This way food can be stored in the space of two drawers.

The bottom drawer must not be taken out of the appliance.

Each drawer and glass cold plate can be loaded with a maximum of 25 kg.

If you remove the top freezer drawer make sure that you do not block the ventilation slits in the back wall of the appliance. They are important for trouble-free operation of the appliance.

- Make sure that the packaging and containers are dry to prevent them sticking together when frozen.

When freezing, make sure that food already frozen does not come into contact with fresh food being frozen as this could cause the frozen food to begin to defrost.

Freezer calendar


The freezer calendar on the freezer drawer gives the length of time which various foods can be stored for effectively.

Where the storage time given on the packaging differs, follow the advice on the packaging.

Marker system for frozen food

Markers serve as a reminder of how long food has been stored.

Each freezer drawer has two slide markers with dials. The months are represented on the dials as 1 - 12.

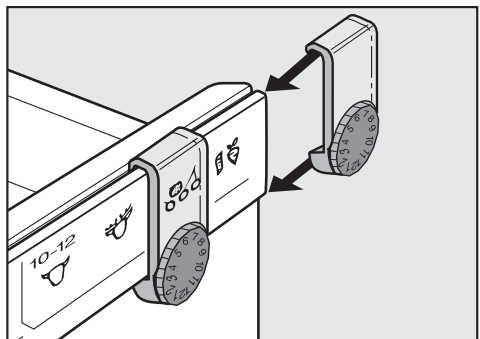

- Slide the markers onto the guide runners on the edge of the drawers.

Using the freezer section

Use the markers to indicate the type of food being frozen, and turn the dials to the appropriate number to indicate the month the food was first placed in the freezer.

Defrosting

Frozen food can be defrosted in different ways:

- in a microwave oven,
- in an oven using the "Fan" or "Defrost" setting,
- at room temperature,
- in a refrigerator,
- in a steam oven.

Poultry It is particularly important to observe food hygiene rules when defrosting poultry. Do not use the liquid from defrosted poultry. Pour it away and wash the container it was in, the sink and your hands. Danger of salmonella poisoning.

Fruit should be defrosted at room temperature in its packing, or in a covered bowl.

Most vegetables can be cooked while still frozen. Just put straight into boiling water or hot fat. The cooking time is slightly less than that of fresh vegetables.


Never re-freeze partially or fully defrosted food. Consume defrosted food as soon as possible as it will lose its nutritional value and spoil if left for too long. Defrosted food may only be re-frozen after it has been cooked.

Cooling drinks

When placing bottles in the freezer section for rapid cooling, **make sure they are not left in for more than one hour** as they could burst.

Freezer tray

The freezer tray is useful for freezing small items such as berries and vegetables. They can be frozen individually and therefore maintain their shape when defrosted.

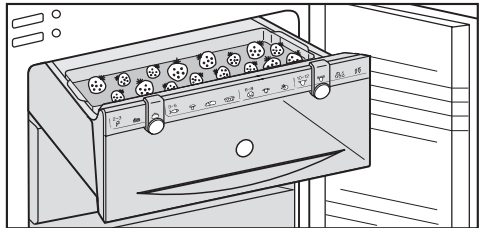

- Space the food out loosely on the tray.
- Hang the tray in one of the upper freezer drawers.

Leave food for 10 - 12 hours to freeze thoroughly on the tray. Transfer it to a freezer bag or suitable container once frozen. Place the bag or container in the freezer drawer.

Cool pack

The cool pack prevents the temperature in the freezer rising too quickly in the event of a power cut.

Place the cool pack in the upper drawer directly on top of food or to save space on the freezer tray. The cool pack will be at its most effective after it has been in the freezer for approx. 24 hours.

If there is a power cut, place the cool pack directly on top of the frozen food in the upper drawer so that the food will be kept cold for as long as possible.

When placing fresh food in the freezer, use the cool pack to separate the fresh food from the food which is already frozen so that the frozen food does not begin to thaw.


The cool pack can also be used in a cool bag to keep food or drinks cool for a short period of time.

Ice cube maker

For the automatic ice cube maker to operate it must be connected to the mains water supply.

Switching on

- Switch on the freezer section.
- Open the top left drawer in the freezer section.

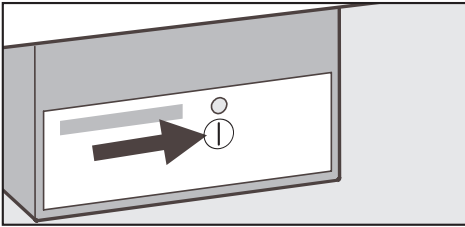

- Press the On/Off button on the ice cube maker. The indicator light will come on.
- Close the drawer.

The drawer must be completely shut for ice cubes to be produced.

After the appliance is switched on for the first time it can take up to 24 hours for the first ice cubes to drop out of the ice cube maker and collect in the drawer.

Thereafter, when the ice cube maker is switched off and then on again it will take up to a maximum of 6 hours for ice cubes to be produced.

To ensure that the water pipes are thoroughly flushed through before use, ice cubes from the first three ice cube making processes must not be consumed.

This applies not only to when the appliance is installed for the first time but also if the appliance has been out of use for a longer period (e.g. whilst on holiday).

Making a large amount of ice cubes

The amount of ice cubes which the appliance makes depends on the temperature in the freezer section. The lower the temperature, the more ice cubes are produced within a certain time frame.

Ice cube production is halted automatically as soon as the ice cube drawer is full.

If you require a large amount of ice cubes,

- replace the full ice cube drawer with the drawer beside it on the right.

The ice cube maker will begin to produce ice cubes again as soon as this new drawer has been placed in position and closed properly.

Switching off the ice cube maker

The ice cube maker can be switched off independently of the freezer section if you do not want the appliance to make any ice cubes.

- Press the On/Off button on the ice cube maker until the indicator light goes out.

If the ice cube maker is switched off, the ice cube drawer can be used as an extra drawer for freezing fresh food and storing frozen food.

Defrosting

Wine cooler

Condensate and frost can build up on the back wall of the wine cooler whilst it is in use. These are automatically removed and defrosted by the appliance.

The condensate is drained away via a channel and drain hole into an evaporation system at the back of the appliance.

Ensure that the condensate channel and drain hole are kept clean and are never blocked so that condensate can flow away without hindrance.

Freezer section

This freezer is equipped with a "Frost free" system. The freezer section defrosts automatically.

The moisture generated by defrosting collects on the condenser and is automatically dissipated from time to time.

This enables the freezer section to remain permanently ice-free while the food remains frozen. This system will not cause food stored in the freezer to defrost!

Never use cleaning agents containing abrasive substances such as sand, soda, acids or chemical solvents. "Non-abrasive" cleaning agents are also unsuitable as they can cause matt areas to appear.

For stainless steel surfaces, use a proprietary stainless steel cleaning agent.

Do not let water get into the electronic unit, ventilation gaps or into the light.

Do not let water get into the drainage channel and drain hole when cleaning.

Do not use steam cleaning apparatus to clean the appliance. Steam could reach the electrical components and cause a short circuit.

The data plate located inside the appliance must not be removed. It contains information which is required in the event of a service call.

Before cleaning

- Switch the appliance off by pressing both On/Off switches, switch off at the socket and remove the plug.
- Take any frozen food out of the appliance and store it in a cool place.
- Take out any removable parts e.g. shelves for cleaning.

Cleaning the outer casing, the interior and accessories

Use warm water with a little washing up liquid. Wash all accessories by hand only. Do not wash in a dishwasher.

- Clean the appliance at least once a month.
- Clean the condensate channel and drain hole in the wine cooler frequently, so that condensate can drain away unhindered. Use a straw or similar to clear the drain if necessary.
- Clean stainless steel surfaces with a suitable cleaning agent following the manufacturer's instructions on the packaging.
- After cleaning, wipe the interior and accessories with a damp cloth and dry with a soft cloth. Leave the doors open to air the appliance for a short while.

E-Cloth

- A microfibre "E-Cloth" is available from the Miele UK Spare Parts Department which is suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals.

Cleaning the ice cube tray

The ice cubes are formed in a tray before they are dropped down into the drawer.

This tray should be cleaned regularly to remove any stale ice or water.


Cleaning and care

- Connect the appliance to the electricity supply.
- Press the On/Off button on the ice cube maker. The indicator light will come on.
- Empty the ice cube drawer.
- Press the On/Off button on the ice cube maker and hold it pressed in for approx. 10 seconds (after about a second the ice cube maker will switch off and the indicator light will go out).

The indicator light will flash.

- Push the ice cube drawer in as far as it will go within the next 60 seconds.

The ice cube tray will then rotate into an angled position which makes it easier for cleaning:

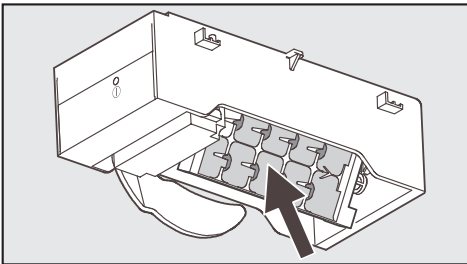

- Wait until the ice cube tray has completed this rotation before continuing.
- Then take the ice cube drawer out of the appliance and clean it.
- Now clean the ice cube tray with hot water and a little washing up liquid or sterilising fluid. Rinse thoroughly afterwards.

- Press the On/Off button on the ice cube maker.

The ice cube tray will return to its original position.

- Then put the ice cube drawer back in the appliance and close it.

The ice cube maker will begin to produce ice cubes again after a maximum of 6 hours.

If the ice cube maker has not been used for a while, it is important to clean the ice cube tray before using it again.

Ventilation gaps

- The ventilation gaps should be cleaned on a regular basis with a brush or vacuum cleaner. A build up of dust will increase the energy consumption of the appliance.

Door seals

Do not use any grease or oil on the door seals as these will cause the seals to deteriorate and become porous over time.

The door seals should be cleaned regularly with clean water and then wiped dry with a soft cloth.


Metal grille at the back of the appliance

The metal grille at the back of the appliance (heat exchanger) should be dusted at least once a year. A build-up of dust will increase the energy consumption of the appliance.

When cleaning the grille, make sure that the pipework and other components do not get broken or damaged in any way.

Active charcoal filter

Replace the active charcoal filter with a new one once a year. Active charcoal filters are available from your dealer or the Miele Spare Parts Dept.

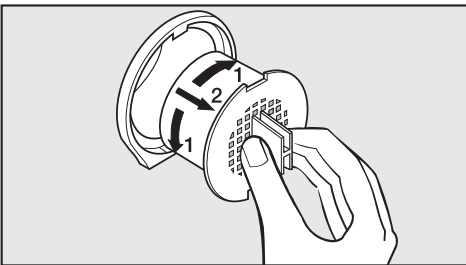

- Turn the filter 90° clockwise or anti-clockwise.
- Remove the filter.
- Insert a new filter with the handle in the vertical position.
- Turn the filter 90° clockwise or anti-clockwise until it clicks into position.

After cleaning

- Replace all shelves and accessories in the wine cooler.
- Put the wine bottles back in the wine cooler and close both the appliance doors.
- Insert the plug in the socket and switch the wine cooler and the freezer section back on.
- Switch on the Super freeze function so that the freezer section can cool down quickly. The indicator light will come on.
- Once the temperature in the freezer section has reached the required temperature place the food back in the freezer drawers and place them back in the freezer section.
- Switch off Super freeze by pressing the Super freeze button when the temperature in the freezer is a constant -18 °C or colder. The indicator light will go out.

Problem solving guide

Repairs to electrical appliances should only be carried out by a suitably qualified and competent person in accordance with local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Some minor problems can be corrected without contacting the Service Department.

What to do if . . .

. . . the wine cooler or freezer section does not get cool.

- Check whether the respective section is switched on. The relevant temperature display must be lit up.
- Check that the plug is correctly inserted in the socket and switched on.
- Check that the fuse is not defective and that the mains fuse has not blown. If it has, contact the Miele Service Department.

. . . the door to the freezer section will not open because it has been opened and closed too many times in succession.

This is not a fault. The suction caused by opening and closing the door is preventing the door from opening. Wait a few minutes and then try again. It should now open without force.

. . . the temperature in the wine cooler or freezer section is too low.

- Select a warmer temperature.
- Check that the doors have been closed properly.
- Super freeze has not switched itself off. Super freeze only switches itself off after 30-65 hours.

. . . the appliance is switching in too frequently and for too long.

- Check whether the ventilation gaps have been covered over or become too dusty.
- Check whether, the metal grille (heat exchanger) at the back of the appliance has become too dusty.
- The doors have been opened too frequently, or a large amount of fresh food has been put in at once for freezing.
- Check that the doors have been closed properly.

. . . food has frozen together.

Use a blunt instrument, e.g. a spoon handle or plastic scraper, to prise it apart carefully.

... the alarm sounds and the wine cooler or freezer section temperature display flashes.

The wine cooler is too warm or too cold in relation to the set temperature or the freezer section is too warm in relation to the set temperature because

- the doors have been opened too frequently, or large amounts of fresh food have been put in at once for freezing.
- the ventilation gaps are blocked.

Once the problem has been resolved the temperature display for the freezer section or the wine cooler will light up constantly and the alarm will stop.

... a bar is lit up or flashing in the temperature displays.

Check the temperature displays about 6 hours after switching on the appliance. The display will not show a temperature until the temperature in the appliance has reached a certain level.

... the following messages show in the temperature display "F0" to "F5".

There is a fault. Call the Service Department.

... "nA" appears in the temperature display.

The freezer section temperature has risen too high at some point during the last couple of days because of a power cut.

- Press the alarm off button whilst "nA" is lit up in the display.

The temperature display will show the warmest temperature recorded in the freezer section during the power cut.

Depending on the temperature displayed, you should check the condition of food in the freezer. If it has defrosted or started to defrost check that it is still safe to use, and if so, use it as quickly as possible. Defrosted food may only be re-frozen after it has been cooked.

The warmest temperature will show in the display for about 1 minute. The actual temperature in the freezer section will then show in the display again.

... you cannot switch the ice cube maker on.

- Check whether the appliance is connected to the electricity supply.

... The ice cube maker is not producing any ice cubes.

- Was the water inlet pipe purged of air by a qualified and competent person before the appliance was used for the first time?
- Check whether the ice cube maker is switched on.
- Check whether the freezer section is switched on.
- Check whether the water inlet is open.
- Check that the ice cube drawer has been closed properly.

Remember it can take up to 24 hours to produce the first ice cubes.

Problem solving guide

... the indicator light on the ice cube maker is flashing

There is a fault. Call the Service Department.

... the Super freeze indicator light does not light up although the appliance is working.

The indicator light is defective. Call the Service Department.

... you cannot switch the appliance off.

The safety lock has been activated.

... the floor of the wine cooler is wet.

The drain hole is blocked.

- Clean the condensate channel and drain hole.

If you still cannot remedy the fault having followed these suggestions, please contact the Miele Service Department.

To prevent unnecessary loss of temperature it is advisable not to open the door while waiting for the appliance to be serviced.

Normal noises	What causes them
Brrrrr...	Humming noise made by the motor (compressor). This noise can get louder for brief periods when the motor is switching on.
Blubb, blubb....	A gurgling noise can be heard when coolant is circulating through the pipes.
Click....	Clicking sounds are made when the thermostat switches the motor on and off.
Sssrrrrr....	On multi-zone and frost-free appliances you can sometimes just hear the movement of air circulating inside the appliance.

Remember that the noise of the compressor and the coolant circulating in the system is unavoidable.

Noises that you can easily rectify	What causes them, and what can you do about them?
Rattling, vibrating	The appliance is uneven: Realign the appliance using a spirit level, by raising or lowering the screw feet underneath the appliance.
	The appliance is touching another appliance or piece of furniture: Move it away.
	Drawers, baskets or shelves are unstable or sticking: Check all removable items and refit them correctly.
	Are any bottles or containers unstable or knocking against each other? Separate them.
	The transport cable clips are hanging loose at the back of the appliance: Remove the clips.

After sales service

In the event of a fault which you cannot correct yourself, or if the appliance is under guarantee, please contact:

– Your Miele Dealer

or

– The Miele Service Department (see back cover for address).

When contacting your Dealer or the Service Department, please quote the model and serial number of your appliance. This information is given on the data plate.

Please note that telephone calls may be monitored and recorded for training purposes.

Mains water connection

Notes on connecting to the mains water supply

Connection to the mains water supply should only be carried out by a qualified and competent person in accordance with national and local regulations.

The water quality must conform to the requirements for drinking water in the country the appliance is being installed in.


- All items used for connecting the appliance to the mains water supply must comply with the current national and local safety regulations in the country in which the appliance is being installed.
- The appliance is only suitable for connection to the cold water supply.
- The water pressure (flow rate) must be between 1.5 and 6 bar.
- The stainless steel hose is 1.5 m long. This may only be lengthened by means of a Miele extension hose. This extension hose is available from the Miele Spare Parts Department and must only be fitted by a suitably qualified fitter.
- A stopcock must be provided between the stainless steel hose and the household water supply to ensure that the water supply can be cut off if necessary.

The stopcock should be easily accessible after the appliance has been built in.

Connection to the water inlet

Before making plumbing connections, ensure the appliance is disconnected from the mains electricity supply.

Connection to the mains water supply should incorporate a mains stopcock with $\frac{3}{4}$ " thread.

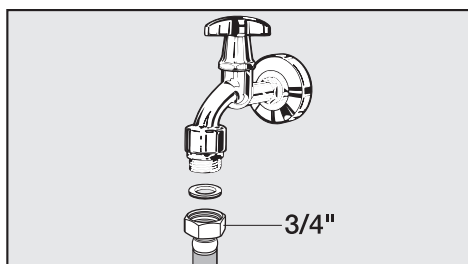


- Connect the stainless steel hose to the stopcock.
- Ensure that it is screwed into position correctly.

Before using the appliance for the first time the water inlet pipe should be purged of air by a qualified and competent person.

- To do so the stainless steel hose should be filled as far as possible with water before being connected to the solenoid valve.
- Mop up any spillages with a cloth.

Mains water connection

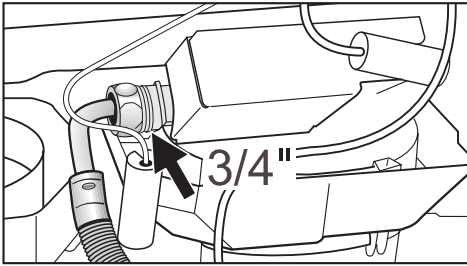

- The stainless steel hose should be attached to the solenoid valve at the base of the appliance at the back.
- Ensure that the hose is fitted correctly and that it is water tight.
- Turn on the stopcock slowly and check the whole water system for leaks.
- The appliance can then be connected to the electricity supply.
- Push the appliance into its final position.

When doing so, make sure that the stainless steel hose is not kinked or damaged.

After a maximum of 24 hours the first ice cubes will drop out of the ice cube maker and collect in the drawer.

Electrical connection U.K.

All electrical work should be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations (BS 7651 in the UK).

The appliance is supplied with a mains cable and moulded plug ready for connection to an a.c. single phase 220-240 V 50 Hz supply.

Please ensure that the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable switched socket which is easily accessible. For extra safety it is advisable to install a residual current device (RCD) with a trip current of 30 mA (in accordance with DIN VDE 0664, VDE 0100, Section 739).

Do not connect the appliance to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

The appliance must not be connected to an inverter and must not be used with a plug adapter as these can cause damage to the appliance's electronic unit.

Non-rewireable plugs (BS 1363)

The fuse cover must be re-fitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words in the base of the plug (as applicable to the design of the plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

WARNING
THIS APPLIANCE MUST BE
EARTHED

Installation

Do not place any appliance which gives off heat, such as a toaster or microwave oven, on top of this appliance, as this would increase the appliance's energy consumption.

Location

The appliance should be installed in a dry, well-ventilated room.

It should not be installed where it is exposed to direct sunlight or directly adjacent to a heat-producing appliance such as an oven or a radiator.

The room temperature should not go above or below the climate range for which the appliance is designed.

The higher the ambient temperature of the room, the more energy the appliance requires to operate.

Climate range

The appliance is designed for use within certain climate ranges (ambient temperatures), and should not be used outside this range. The climate range of this appliance is stated on the data plate inside the appliance.

Climate range	Ambient room temperature
SN	+10 °C to +32 °C
N	+16 °C to +32 °C
ST	+18 °C to +38 °C
T	+18 °C to +43 °C
SN-ST	+10 °C to +38 °C
SN-T	+10 °C to +43 °C

Operating in a room which is too cold will cause the cooling system to switch off for too long causing the internal temperature in the appliance to rise

with the risk of food deteriorating and going off.


Ventilation

Air at the back of the appliance gets warm. To ensure sufficient ventilation, the ventilation gaps must not be covered or blocked in any way. They should be dusted on a regular basis.

Installation

- Remove any cable clips from the back of the appliance.
- Check that all parts at the back of the appliance are unhindered. Remove any hindrance.
- Carefully push the appliance into position.

Aligning the appliance

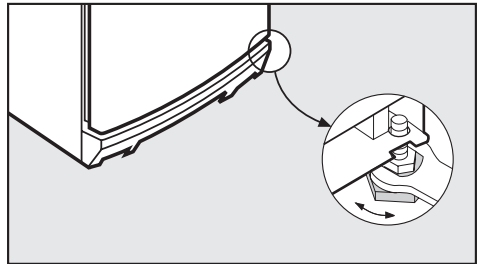

- To align the appliance adjust the feet using the spanner supplied.

Installing in a side-by-side combination

To avoid a build-up of condensation and resultant damage, refrigerators and freezers should not normally be installed side-by-side.

However, this appliance has side wall heating, and can be installed side-by-side with certain other Miele appliances.

Your dealer will be able to advise you on which models are suitable.


Installation

- This appliance must be installed to the left of any refrigerator when viewed from the front. The side wall heating in the right-hand wall is insulated to prevent the build-up of condensation between the two appliances.
- Place the two appliances as close as possible to their final position so that they can be aligned for any unevenness in the floor. The back of the appliances still needs to be kept accessible to complete the installation.

Joining the two appliances together


You will need a spirit level, spanners, a torque screwdriver and a socket wrench.

- Before starting, peel off any protective foil from appliance.
- Place the appliances next to one another so that the fronts are aligned, leaving a gap of 10 mm between them.

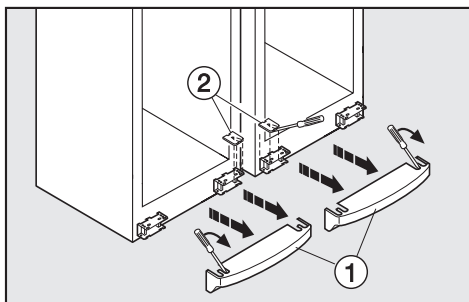


- Open the appliance doors, and use a screwdriver to lever plinth facings ① out, then pull them forwards and off.
- Use a screwdriver to remove covers ②.

Installing in a side-by-side combination

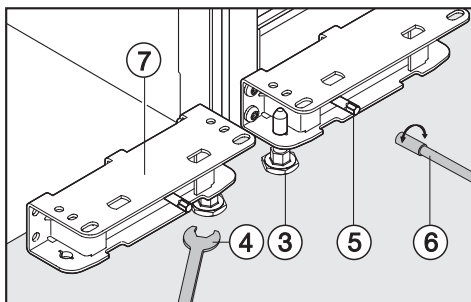

- Align both appliances using a spirit level.
- Align front feet ③ using a spanner ④.
- Align the back feet using adjusting device ⑤ and socket wrench ⑥. Turn the adjusting device clockwise to raise the appliance up at the back.
- Close the doors to check whether the door handles are correctly aligned with one another.


Make sure that bearing blocks ⑦ are aligned with one another. If they are not, the covers will not fit properly.

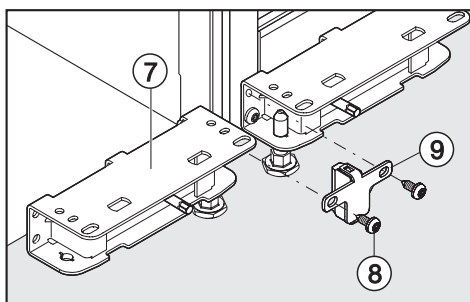


- Remove top screws ⑧ from bearing blocks ⑦.
- Loosely attach lower bracket ⑨ with screws ⑧.
- Push the two appliances together, and align them again.
- Now tighten screws ⑧.

Do not move the appliances until all the brackets are securely fitted.

Installing in a side-by-side combination

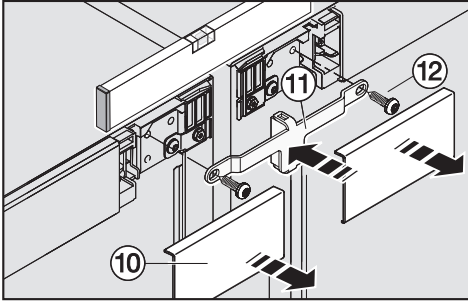

- Remove covers ⑩ from both appliances.
- Loosely attach large upper bracket ⑪ using long screws ⑫.
- Push the two appliances together, and align them again.
- Now tighten the screws ⑫.

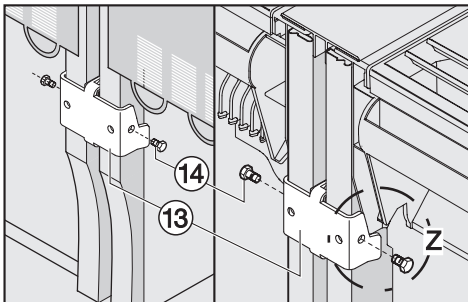

- Position wide brackets ⑬ at the top and bottom on the back, and push the top bracket upwards until it is in the correct position (z).
- Secure the brackets at the sides using screws ⑭.


To avoid vibrations, neither the brackets nor the screws should touch the pipework on the back of the appliances.

- Plug the two appliances into the mains electricity supply points.

Appliances with integrated ice-maker (depending on model):
Plumb the appliance into the mains water supply.



- Carefully push the two appliances back into their final position. It is easier if you raise the appliances at the front, and roll them back on their rear rollers.

The height of the appliances can be aligned again if necessary.

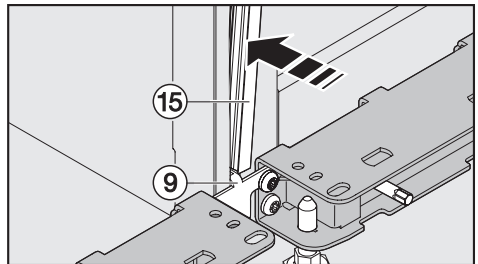

- Position the long stainless steel trim ⑮ lightly in the gap, making sure that it is located above bracket ⑨.
- Then push it carefully into the gap. Use a soft cloth to do this to avoid denting the trim.
- Carefully remove the protective foil from the stainless steel trim.

Installing in a side-by-side combination

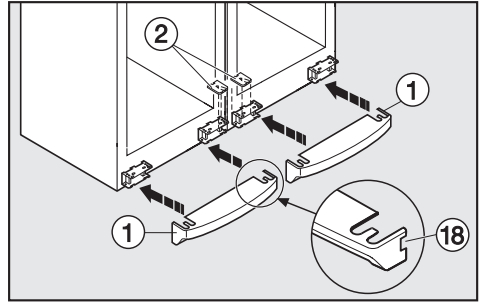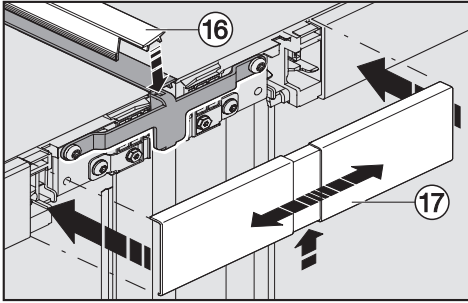


- Push short trim ⑯ into the gap at the top. Make sure that the gap in the trim faces the front. The trim must sit flush with the top of the appliances at the front.
- Fit cover ⑰ in the space between the control panels. Make sure that the outer edges of the cover are flush with the control panels. The cover can be pulled out to adjust it to the right size.
The gap in the cover must face downwards to fit properly over the stainless steel trim.
- Break off thin tags ⑱ from plinth facings ①. Important: Make sure you remove these from the correct side - i.e. from the handle side of the appliances.
- Refit plinth facings, pushing firmly into position.
- Refit covers ②.

Changing the door hinging

The appliance is supplied left hand hinged. If right hand door hinging is required, follow the instructions below.

Removing the door handles:

First the side section of the handle must be removed:

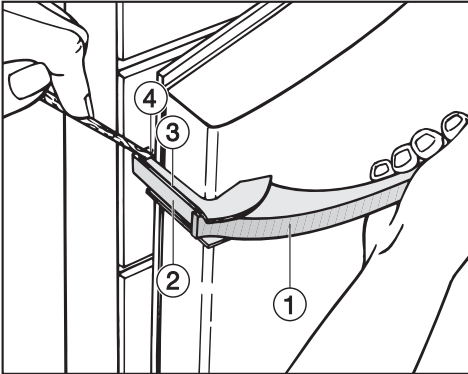

- Pull door handle ① towards you. Side section ② slides back, creating a gap ④ between side section ② and mounting plate ③.
- Place a suitable object (e.g. a spoon handle) in gap ④, and slowly lever the handle towards the door.

Be careful not to let the "spoon handle" slip, causing damage to the appliance.


The side section ② can now be removed.

- Pull side section ② out of the guides on the mounting plate.
- Loosen the 4 screws (Torx 15) in the mounting plate, and remove the handle.

- Remove the cover caps from the opposite side, and fit them into the empty holes.


Changing over the doors:

- Open the lower door.

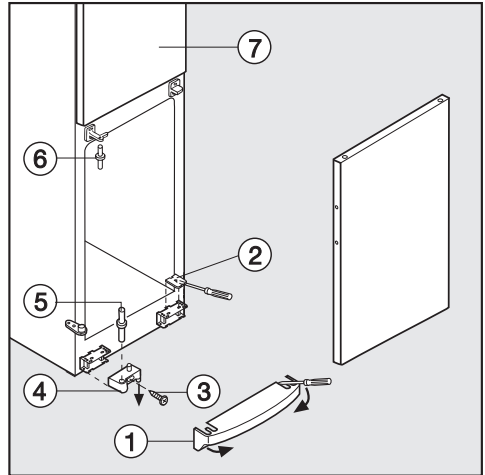

- Use a screwdriver to lever plinth ① out, then pull it forwards and out.
- Use a screwdriver to remove cover ②, then close the door.
- Remove screw ③ completely.
- Pull door support ④ together with hinge pin ⑤ downwards, then tilt it forwards and take it off.
- Open the lower appliance door, move it downwards and take it off.
- With the upper door ⑦ closed, pull hinge pin ⑥ downwards to remove it.
- Open the upper door, and pull it downwards and off.

Changing the door hinging

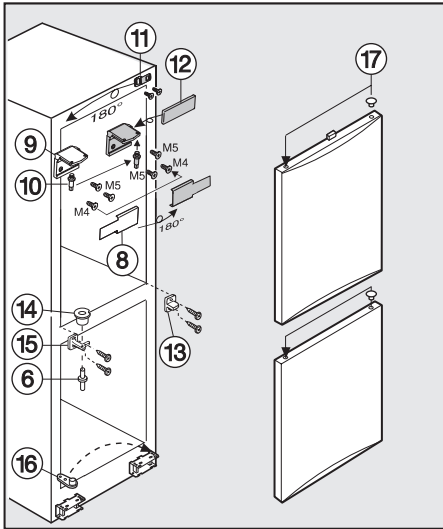


- Remove cover ⑧, and unscrew hinge bracket ⑨.
- Fit hinge pin ⑩ in the second hole of hinge bracket ⑨.
- Refit bracket ⑪ and cover ⑫ turned through 180° on the opposite side.
- Screw hinge bracket ⑨ into the opposite side.
The **M4 screw** has to be screwed into the left hole of the hinge bracket.
- Turn cover ⑧ through 180°, and fit it on the other side.
- Exchange cover ⑬ in the middle of the appliance with hinge bracket ⑮.
To do this:
Unscrew cover ⑬ and hinge bracket ⑮, turn them around and screw in on the opposite side.
- Pull bearing bush ⑭ downwards out of hinge bracket ⑮ and refit it from above into the hinge bracket.

- Remove spacer ⑯ with a screwdriver and refit it on the opposite side.
- Remove plugs ⑰ from the door bearing bushes in the doors and refit on the opposite side.
- Hang the upper door on hinge pin ⑩ and then close the appliance door.
- Push middle hinge pin ⑥ from below through hinge bracket ⑮ into the upper appliance door.
- Check that the upper door is correctly aligned. If necessary align it using the long slots in hinge bracket ⑮.
- Hang the lower door in hinge bracket ⑮ then close the appliance door.

Changing the door hinging


In the following illustration the lower door is not shown in the closed position to make it easier to see what happens next.

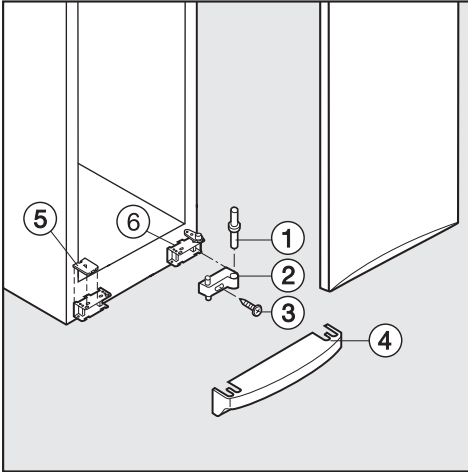

- Turn door support ② around, pull hinge pin ① out, and refit on the opposite side.
- Fit both parts into hinge plate ⑥. To do this push hinge pin ① through hinge plate ⑥ into door support ②. Swing the door support in, push upwards and re-assemble with screw ③.
- Align the lower door with the appliance housing using the long slot in hinge plate ⑥. Then tighten screw ③.
- Refit plinth fascia ④, pushing it firmly into position.
- With the lower door open, secure cover ⑤ to the front of the plinth fascia.

Refitting the handles:

Please make sure you follow the instructions below carefully when you refit the handle. The door seal will be damaged if the handle is fitted incorrectly.

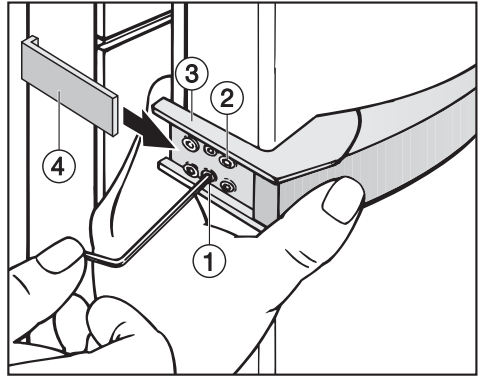

- Loosely attach the handle to the opposite side of the door with the two front screws ②.

Mounting plate ③ must be positioned on the side of the door so that when the door is **closed** it is flush with the side of the appliance.

If this is not the case,

- Tighten both grub screws ① with the allen key provided until mounting plate ③ lines up correctly.
- Then tighten all 4 fixing screws ②.
- Slide the side section of the handle ④ into the guides on the mounting plate until it clicks into place.


Changing the door hinging

It is important to check that the side section of the handle ④ does not come into contact with the door seal when opening the door, as this would damage the door seal permanently.

If, after you have refitted the handle, you find that the side section does touch the door seal when the door is opened:

- Realign mounting plate ③ with grub screws ① until the mounting plate and the side section of the handle ④ are at the correct angle and the side section does not touch the seal when the door is opened.

Building in the appliance

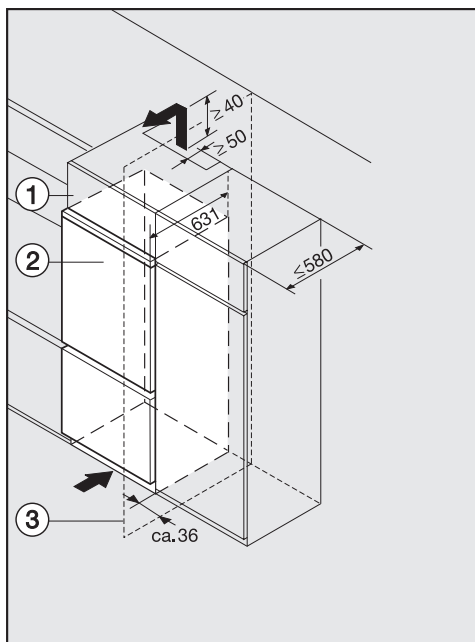

The air inlet and outlet must not be covered or blocked in any way. They should be dusted on a regular basis.

When built into a kitchen run (max. depth 580 mm) the appliance can be installed directly next to a kitchen furniture housing unit. The appliance door (2) will protrude in front of furniture fronts at the sides by 34 mm and by 51 mm in the middle of the door. This enables the doors to be opened and shut without being obstructed.

When **installed next to a wall** (3) a distance of approx. 36 mm is needed on the hinge side between the wall and the appliance, so that the doors and handles have sufficient space for opening.

The appliance can be installed in a kitchen run. To match the height of the rest of the kitchen, the appliance can be fitted with a suitable top box (1).

A ventilation gap of at least 50 mm depth must be allowed for behind the appliance and top box, if fitted, for air to circulate.

A gap of at least 40 mm is required between the top of the appliance (or top box) and the ceiling to ensure that air can circulate without hindrance.

Otherwise the appliance has to work harder, resulting in an increase in electricity consumption.

**United Kingdom:**

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
tel. Abingdon (01235) 554455
Service Office: (01235) 554466
fax (01235) 554477
Internet: www.miele.co.uk

Ireland:

Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 46 10 710, Fax: (01) 46 10 797
Email: info@miele.ie
Internet: <http://www.miele.ie>

Australia:

Miele Australia Pty. Ltd.
A.C.N. 005635398
1 Gilbert Park Drive
Knoxfield, VIC 3180
Telephone: (03) 9764 7100
Fax: (03) 9764 7129
Internet: www.miele.com.au

Distributor New Zealand:

Steelfort Engineering Company. Ltd.
500 Rangitikei Street
Palmerston North, Priv. Bag 11045, NZ
Telephone: (06) 350 1350
Fax: (06) 356 1507

South Africa:

Miele (Pty) Ltd
63 Peter Place
Bryanston 2194
P.O. Box 69434
Bryanston 2021
Tel.: (011) 548 1900
Telefax (011) 548 1935
Internet: www.miele.co.za
E-mail: info@miele.co.za

Singapore:

Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel : +65-67351191
Fax: +65-67351161
Email: infosea@miele.com.sg
Internet: www.miele.sg

Hong Kong:

Miele (Hong Kong) Limited
AIA Plaza, 24th Floor
18 Hysan Avenue
Causeway Bay
Hong Kong
Tel.: (852) 2610 1331
Fax: (852) 2610 1013
E-mail: mielehk@miele.com.hk

Miele

Operating and installation instructions



Refrigerator with StayFresh section KFNS 3929 SE ed

To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed or used for the first time.




Contents

Guide to the appliance	4
Caring for the environment	6
Warning and Safety instructions	7
How to save energy	11
Switching on and off	13
Safety lock	13
Switching off for longer periods of time	14
The correct temperature	15
. . . in the refrigerator section and in the StayFresh zone	15
Setting the temperature in the refrigerator section	15
Temperature range	16
Setting the temperature in the StayFresh zone	16
Temperature display	17
Temperature display brightness	17
Alarm	18
Switching the alarm off early	18
Switching on the alarm system	18
Super cool	19
Using the refrigerator efficiently	20
Different storage zones	20
Warmest area	20
Coldest area	20
StayFresh zone	20
Low humidity level 	21
High humidity level 	21
Food which should not be stored in a refrigerator	21
Storing food correctly	22
Fruit and vegetables	22
Different types of unpacked meats and vegetables must be kept separate	22
Protein rich foods	22
Meat	22
Adjusting the interior fittings	23
Automatic defrost	24
Refrigerator section and StayFresh zone	24

Contents

Cleaning and care	25
Cleaning the outer casing, the interior and accessories	25
Ventilation gaps	26
Door seal	26
Problem solving guide	27
Noises	29
After sales service	30
Electrical connection	31
Installation	32
Location	32
Climate range	32
Side-by-side installation	32
Ventilation	32
Installation	33
Aligning the appliance	33
Changing the door hinging	34
StayFresh zone compartments	37
Building in the appliance	38

Guide to the appliance

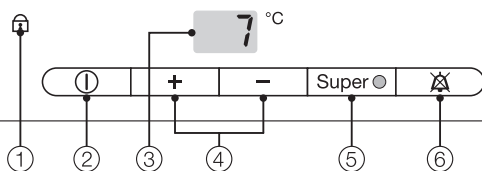

① Safety lock indicator light

② On/Off button

③ Temperature display


④ Controls for setting the temperature
left hand button: warmer
right hand button: colder

⑤ Super cool button and
indicator light

⑥ Alarm off button

Guide to the appliance

- ① Interior lighting
- ② Butter and cheese compartment
- ③ Egg tray
- ④ Shelf
- ⑤ Fruit and vegetable containers
- ⑥ Bottle shelf
- ⑦ StayFresh zone, dry compartment
- ⑧ Condensate channel and drain hole
- ⑨ Control for setting the moisture level in the humidity controlled compartment
- ⑩ StayFresh zone, humidity controlled compartment

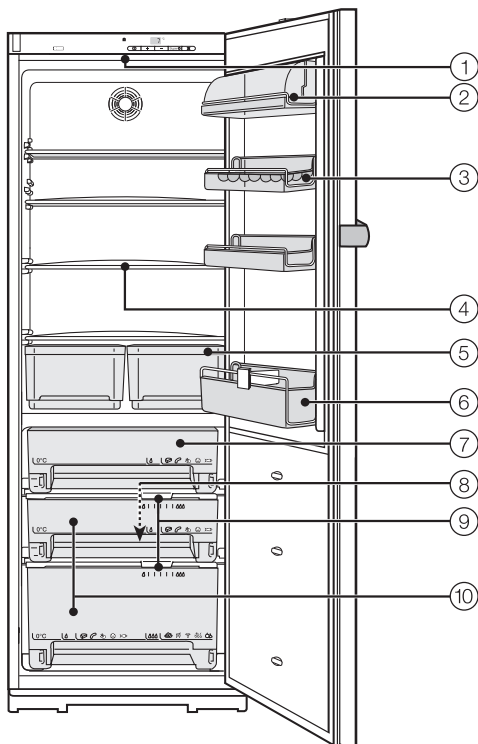

Caring for the environment

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.


Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Rather than just throwing these materials away, please ensure that they are recycled.

Disposal of your old appliance

Please ensure that the appliance presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person. The plug must be rendered useless and the cable cut off directly behind the appliance to prevent misuse. See the "Warning and Safety" section of this booklet for further details.

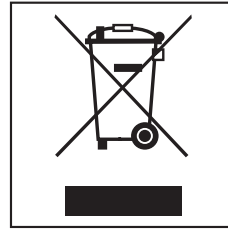

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance.

Please dispose of your old appliance at your local community waste collection / recycling centre and not with your household waste.

Take care not to damage the pipework at the back of it before or during transportation to an authorised collection depot.

In this way, refrigerant in the pipework and oil in the compressor will be contained, and will not leak out into the environment.

Warning and Safety instructions

This appliance complies with all relevant legal safety requirements. Improper use can, however, present a risk of both personal injury and material damage.

To avoid the risk of accidents and damage to the appliance, read these instructions carefully before installation and before using for the first time. They contain important notes on the installation, safety, operation and care of the appliance.

Keep these instructions in a safe place and pass them on to any future user.

Correct use

■ This appliance is intended for domestic use only for the cool storage of food and drink. Any other usage is not supported by the manufacturer and could be dangerous. The manufacturer cannot be held liable for damage caused by incorrect or improper use of the appliance.

This appliance is not a toy! To avoid the risk of injury, do not allow children to play on or near it, or to play with the controls. Supervise its use by the elderly or infirm.

Technical safety

■ This appliance contains the coolant Isobutane (R600a), a natural gas which is environmentally friendly. Although it is flammable, it does not damage the ozone layer and does not increase the greenhouse effect. The use of this coolant has, however, led to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the coolant flowing around the system. This is unavoidable, but does not have any adverse effect on the performance of the appliance. Care must be taken during transportation and setting up of the appliance that no parts of the cooling system are damaged. Leaking coolant can damage the eyes.

In the event of any damage:

- avoid open fires and anything which creates a spark,
- disconnect from the mains,
- air the room in which the appliance is located for several minutes and
- contact the Service Department for advice.

■ The more coolant there is in an appliance, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up. For every 8 g of coolant at least 1 m³ of room space is required. The amount of coolant in the appliance is stated on the data plate inside the appliance.

Warning and Safety instructions

Before connecting the appliance to the mains supply make sure that the rating on the data plate corresponds to the voltage and frequency of the household supply. This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.

The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system which complies with local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested, and where there is any doubt, the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

Safe operation of the appliance is only assured if it has been installed and connected in accordance with these operating and installation instructions.

This equipment may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment of the installation has been carried out by a suitably qualified engineer.

Installation work, maintenance and repairs may only be carried out by suitably qualified and competent persons in accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous and the

manufacturer will not be held liable. Ensure current is not supplied to the appliance until after maintenance or repair work has been carried out.

The appliance is only completely isolated from the electricity supply when:

- it has been switched off at the wall socket and the plug has been withdrawn, or
- the mains fuse is withdrawn, or
- the screw-out fuse is removed (in countries where this is applicable).

Do not connect the appliance to the mains electricity supply by an extension lead.

Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

Use

Do not store explosive materials in the appliance or any products containing propellants (e.g. spray cans). Thermostats switching on may produce sparks which could present a fire hazard. Flammable compounds could explode.

Do not use any electrical equipment in this appliance, e.g. ice cream makers. Danger of sparking and explosion!

If storing alcohol with a high percentage proof, make sure it is tightly closed and stored upright. Danger of explosion.

Warning and Safety instructions

■ Observe the "use by" dates given on food to avoid the risk of food poisoning. Storage times will depend on several factors, including the freshness and quality of the food as well as the temperature at which it is stored. Follow the instructions given on food manufacturer's packaging on storage conditions required, as well as the "use by" date.

■ Do not use sharp edged objects to – remove frost and ice,
– separate food which has become frozen. They will damage the evaporator, causing irreversible damage to the appliance.

■ Do not use defrosting sprays or de-icers, as they might contain substances which could damage the plastic parts or which could cause a build-up of gases and pose a danger to health.

■ Do not use any oils or grease on the door seal, as these will cause the seal to deteriorate and become porous with time.

■ If storing bottles of oil or food containing high levels of fat or oil in the appliance, take care not to let the fat or oil come into contact with plastic components. These can cause stress cracks to occur in the plastic components.

■ Do not block the ventilation gaps in the appliance as this would impair the efficiency of the appliance, increase the electricity consumption and could cause damage to the appliance.

■ The appliance is designed for use within certain climate ranges (ambient temperatures), and should not be used outside this range. The climate range for your appliance is stated on the data plate inside the appliance. Installing it in a room with too low an ambient temperature, e.g. a garage, will lead to the appliance switching off for longer periods so that it cannot maintain the required temperature.

■ Do not use a steam-cleaning appliance to clean this appliance. Pressurised steam could reach the electrical components and cause a short circuit.

■ In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Warning and Safety instructions

Disposal of your old appliance

■ Before disposing of an old appliance, first make the door latch or lock unusable.

This way you will prevent children from accidentally locking themselves in and endangering their lives.

■ Disconnect the appliance. Cut off the cable and render any plug unusable.

■ Be careful not to damage any part of the pipework whilst awaiting disposal, e.g. by

- puncturing the refrigerant channels in the evaporator.
- bending any pipework.
- scratching the surface coating.

Splashes of refrigerant can damage the eyes.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

How to save energy

	Normal energy consumption	Increased energy consumption
Installation site	In a ventilated room.	In an enclosed, unventilated room.
	Protected from direct sunlight.	In direct sunlight.
	Not situated near to a heat source (radiator, oven).	Situated near to a heat source (radiator, oven).
	Where the ambient room temperature is ideal at approx. 20°C.	Where there is a high ambient room temperature.
Temperature setting with a thermostat which is approximate (set in stages).	With a medium setting of 2 to 3.	With a high setting: The lower the temperature in the appliance, the higher the energy consumption.
Temperature setting with a thermostat which is exact to the degree (digital display).	Cellar section 8 to 12°C	On appliances with winter setting, please make sure that the winter setting is switched off when the ambient temperature is warmer than 16 °C.
	Refrigerator section 4 to 5 °C	
	StayFresh zone just above 0 °C	
	Freezer section -18°C	
Use	Only open the door when necessary and for as short a time as possible.	Frequent opening of the door for long periods will cause a loss of coldness.
	Store food in an organised way.	If food is not stored in an organised way, searching for an item will mean the door is open for longer.
	Allow hot food and drinks to cool down before placing them in the appliance.	Placing hot food in the appliance will cause the compressor to run for a long time, as the appliance will have to work harder to lower the temperature.
	Store food covered or packaged.	The evaporation or condensation of liquids will cause a loss of coldness in the refrigerator.
	Place frozen food in the refrigerator to defrost.	
	Do not over-fill the appliance to allow air to circulate.	

How to save energy

	Normal energy consumption	Increased energy consumption
Defrosting	Defrost the freezer when a layer of ice one centimetre thick has built up.	A layer of ice hinders the cold from reaching the frozen food, and causes an increase in energy consumption.

Before using for the first time

 
The stainless steel surface has a layer of protective foil to prevent scratching during transportation.

- Do not remove this foil until the appliance has been installed or built in. Start at one of the upper corners.
- Clean stainless steel surfaces with a suitable conditioning agent for stainless steel.
- Clean the inside of the appliance and the accessories with warm water and a little washing up liquid, and then dry with a soft cloth.

Important:

To ensure the correct functioning of the appliance, let it stand for between 1½ and 2 hour after transporting it to its final location before connecting it to the mains.

Switching on



- Press the On/Off button.

The temperature display lights up, the appliance starts cooling. The interior light will come on when the door is opened.

Allow the appliance to run for a few hours before placing food in it. This will ensure that the temperature is sufficiently low.

Switching off

 
- Press the On/Off button until the temperature display goes out.

The cooling system is switched off. (If this does not happen, the safety lock is still activated).

Safety lock

The safety lock can be activated to prevent the appliance being switched off inadvertently.

Activating or de-activating the safety lock



- Press and hold the Super cool button for approx. 5 seconds.


The Super cool indicator light flashes and a **c** flashes in the temperature display.

 
- Press the Super cool button again.
c lights up in the temperature display.



- You can now choose between **c 0** and **c 1** by pressing the temperature selector buttons:
0: the safety lock is de-activated,
1: the safety lock is activated.
- Press the Super cool button to save the setting.

Switching on and off

The safety lock indicator light  will light up when the safety lock has been activated.



- Press the On/Off button to come out of the setting mode.

Otherwise the electronics will revert to normal operation after a couple of minutes.

Switching off for longer periods of time

If the appliance is not going to be used for a longer period of time, e.g. whilst on holiday,

- switch the appliance off,
- switch off at the wall socket and withdraw the plug,
- clean the appliance out and
- leave the door ajar to air the appliance.

If, during a long absence, the appliance is switched off but not cleaned out and the door is left shut there is a danger of mould and odours building up inside the appliance.

The correct temperature

It is very important to set the correct temperature for storing food in the appliance. Micro-organisms will cause food which is not stored at the correct temperature to deteriorate rapidly. Temperature influences the growth rate of these micro-organisms. Reducing the temperature reduces their growth rate.

The temperature in the appliance will rise:

- the more often the door is opened and the longer it is kept open,
- if too much food is stored in it at once,
- the warmer the food is which is being put into it,
- the higher the ambient temperature surrounding the appliance.
The appliance is designed for use in specific ambient temperatures (climate ranges). Do not use in ambient temperatures for which it is not designed.

... in the refrigerator section and in the StayFresh zone

We recommend a temperature of **4 °C** in the refrigerator section.

The temperature in the StayFresh zone is controlled automatically and is maintained at approx. 0 °C.

Setting the temperature in the refrigerator section

Use the two buttons underneath the temperature display to set the temperature for the refrigerator section.

Press the



- left hand button: to raise the temperature
right hand button: to reduce the temperature

The temperature being set will flash in the display.

After setting the temperature you can see the following information in the display by pressing the buttons:

- When first pressed, the **last temperature selected** flashes.
- Each subsequent press of the button adjusts the temperature shown in 1 °C steps.
- Keeping the button pressed in adjusts the temperature continually.

Approx. 5 seconds after letting go of the button the display will change to show the current average temperature.

The correct temperature

If you have adjusted the temperature, **wait for approx. 6 hours if the appliance is not very full and for approx. 24 hours if the appliance is full**, before checking the temperature display as it will take this long for the display to show the accurate temperature of the appliance. If, after this time, the temperature is still too high or too low, you will need to adjust it again.

 
Temperature range

The temperature can be adjusted from: 4 °C to 9 °C

The ambient temperature in the room and the installation location can affect the time it takes for the appliance to reach the lowest temperature. If the ambient temperature is too high, the appliance may not reach the lowest temperature.

Setting the temperature in the StayFresh zone

The temperature in the StayFresh zone is automatically held at approx. 0 °C. It can be raised or lowered, e.g. if you want to use it for storing items like fish.



- Press and hold the Super cool button for approx. 5 seconds.

 
The Super cool indicator light flashes and a **⏏** flashes in the temperature display.



- Press one of the temperature selector buttons repeatedly until a **b** appears in the display. Press the Super cool button again.
- **b** lights up in the display.
- You can now adjust the temperature in the StayFresh zone by pressing the temperature selector buttons. You can choose from settings **1** to **9**:
1: lowest temperature,
9: highest temperature.

b 5 is the default setting for the StayFresh zone. If a setting of **b 1** to **b 4** is selected, the temperature can fall below 0°C. Food could freeze!

- Press the Super cool button to save the setting.



- Press the On/Off button to come out of the setting mode.

Otherwise the electronics will revert to normal operation after a couple of minutes.

The correct temperature

Temperature display

During normal operation, the temperature display on the control panel shows the average temperature in the refrigerator section.

If the temperature is not within the range that the appliance is able to display (0 °C to 19 °C), bars will flash in the temperature display.

The **temperature display will flash**, if

 
- a different temperature is being set,
- the temperature in the appliance has risen by several degrees, indicating that the appliance is warming up too much.

This loss of coldness is no cause for concern if it is due to the door being left open for a while, e.g. for removing or storing a large amount of food.

Temperature display brightness

The appliance is supplied with the brightness of the temperature display set as low as possible. However, if the door is opened, a setting changed or if the alarm is sounding, the temperature display will appear much brighter for approx. 1 minute.

You can adjust the level of brightness:



- Press and hold the Super cool button pressed in for approx. 5 seconds.

The Super cool indicator light flashes and a **c** flashes in the temperature display.



 
- Press one of the temperature selector buttons repeatedly until an **h** appears in the display.

- Press the Super cool button again.

h lights up in the temperature display.

- You can now adjust the level of brightness by pressing the temperature selector buttons. You can choose from settings 1 to 5:
1: lowest setting,
5: brightest setting.

- Press the Super cool button to save the setting.



- Press the On/Off button to come out of the setting mode.

Otherwise the electronics will revert to normal operation after a couple of minutes.

Alarm

Your appliance has been fitted with an alarm to avoid energy being wasted if the door is left open and to prevent stored food becoming too warm.

The alarm will sound if the door is left open for more than approx. 60 seconds. The alarm will stop as soon as the door is closed.

If you want to keep the door open for more than approx. 60 seconds, intentionally, we recommend that you switch the alarm off.

Switching the alarm off early



- Press the alarm button.

The alarm will stop.

Switching on the alarm system

The alarm system switches back on automatically as soon as the door is closed. It does not have to be switched on manually.

Super cool

The Super cool function can be used to rapidly reduce the temperature in the refrigerator section to its lowest setting (depending on the room temperature).

Switching on Super cool

Super cool is particularly recommended for faster chilling of large amounts of fresh food or drink.



- Press the Super cool button. The Super cool indicator light will come on.

The appliance works at full power to lower the temperature in the appliance.

Switching off Super cool

The Super cool function switches itself off automatically after approx. 6 hours. The indicator light goes out and the appliance continues running at normal power.

To save energy, the Super cool function can be switched off once food and drinks are sufficiently chilled.

- Press the Super cool button. The Super cool indicator light will go out, and the appliance will continue to operate at normal power.

Using the refrigerator efficiently

Different storage zones

Due to the natural circulation of the air in the appliance, there are different temperature zones in the refrigerator section. Cold, heavy air sinks to the lowest section of the appliance. Make use of the different zones when placing food in the appliance.

Warmest area

The warmest area is in the top section of the door. Use this for storing butter and cheese.

Coldest area

The coldest area in a refrigerator is normally directly above the vegetable containers. In this appliance, however, the coldest area is in the StayFresh zone.

Use the coldest areas in the refrigerator section and in the StayFresh zone for all delicate and highly perishable food, e.g.

- fish, meat, poultry,
- sausage products, ready meals,
- dishes or baked goods containing eggs or cream,
- fresh dough, cake mixtures, pizza or quiche dough,
- soft cheese and other dairy products,
- pre-packed vegetables and other fresh food with a label stating it should be kept at a temperature of approx. 4 °C.

Do not store explosive materials in the appliance or any products containing propellants (e.g. spray cans). Danger of explosion.

If storing alcohol with a high percentage proof, make sure it is tightly closed, and store upright.

If storing bottles of oil or food containing high levels of fat or oil in the appliance, take care not to let the fat or oil come into contact with plastic components. These can cause stress cracks to occur in the plastic components.

Food must not touch the back wall of the appliance, as it may freeze to the back wall.

StayFresh zone

A temperature of between 0 - 3 °C combined with a high humidity level provides the optimum storage conditions for fresh food, enabling it to be kept fresher for longer than in a refrigerator.

The freshness of food when first placed in the appliance is an important factor in determining how long it stays fresh. Bear this in mind when shopping.

The temperature in the StayFresh zone is automatically held at approx. 0 °C.

Using the refrigerator efficiently

The StayFresh zone is divided into two areas:

- The **dry compartment** has a relative humidity level of approx. 45 %.
- The **humidity controlled compartment** has a control for setting the humidity level between 45 % and 90 %. Slide the control to the humidity level you require.

The humidity level will also be affected by the moisture content of the food being stored and how often the compartment is opened.

Low humidity level ▲

- To set a humidity level of approx. 45 %, slide the control for the humidity controlled compartment over to the left ▲.

This humidity level is suitable for storing particularly delicate food such as fresh fish, shell fish, meat, poultry, sausage, dairy products and salads.

Keep food covered or packaged in this compartment with the exception of meat.

High humidity level ▲▲▲

- To set a humidity level of approx. 90 %, slide the control for the humidity controlled compartment over to the right ▲▲▲.

This humidity level is suitable for storing fresh produce such as vegetables, salad, herbs, and seasonal fruit.

Store these types of food uncovered in the compartment.

Food which should not be stored in a refrigerator

Not all food is suitable for storing in the refrigerator. These include:

- Fruit and vegetables which are sensitive to cold, such as bananas, avocado pears, papaya, passion fruit, aubergines/eggplant, peppers/capsicum, tomatoes and cucumbers
- Fruit which is not yet ripe
- Potatoes
- Some hard cheeses, e.g. Parmesan

Using the refrigerator efficiently

Storing food correctly

Store food covered or packaged. This will prevent food smells or tastes from affecting other foods, and prevent food from drying out and also any cross-contamination of bacteria. The growth of bacteria, such as salmonella, can be avoided by setting the correct temperature and maintaining good standards of hygiene.

Fruit and vegetables

Fruit and vegetables can be stored loose in the vegetable containers. However, you should bear in mind that some types of vegetables give off a natural gas which speeds up the rate at which food perishes. Some fruit and vegetables react strongly to this gas and should not be stored together.

Examples of fruit which produce a large amount of this natural gas are:

Apples, apricots, pears, nectarines, peaches, plums, avocado pears and figs.

Examples of fruit and vegetables which react strongly to the natural gases given off by other types of fruit and vegetables are:

Kiwis, broccoli, cauliflower, Brussels sprouts, mangos, honeydew melons, apples, apricots, cucumbers, tomatoes, pears, nectarines and peaches.

Different types of unpacked meats and vegetables must be kept separate.

To avoid any microbiological cross-contamination, these foods may only be stored together if they are wrapped.

Protein rich foods

Please note that foods rich in protein deteriorate faster than others. Shell fish for example deteriorates faster than fish, and fish deteriorates faster than meat.

Meat

Store meat in suitable containers, but uncovered in the low humidity compartment. (Undo wrappings and leave containers open). The surface of the meat will dry out slightly and protect it from bacterial growth thus increasing its storage qualities. To prevent the risk of bacterial contamination keep meat stored in suitable containers and do not let different types of meat come into direct contact with each other.

Take food out of the StayFresh zone approx. 30 - 60 minutes before using it. The aroma and taste do not fully develop until the food has reached room temperature.

Adjusting the interior fittings

Moving the shelves

The shelves can be adjusted according to the height of the food.

- Pull the shelf forward as far as it will go; then lift it upwards to remove it.
- With the rear barrier facing upwards, place the shelf at the required position.

The rear barrier must face upwards to prevent food from touching the back of the appliance and freezing to it.

Split shelf

In order to accommodate tall items in the appliance, one of the shelves is divided. The front section can be pushed under the rear section.

- Pull the front half of the glass shelf forwards slightly and then push it carefully under the rear half.

Adjusting the door shelves

- Push the door shelf upwards, then remove it by pulling it forwards.
- Replace the door shelf at the required position. Ensure that it is securely pushed back into position.


Moving the bottle divider

(Depending on model)

The bottle divider can be moved to the left or right to ensure that bottles are held securely in position when the door is opened and shut.

StayFresh zone compartments

- When loading and unloading items, pull the compartment right out by taking hold of it at the back and lifting it up to remove it.

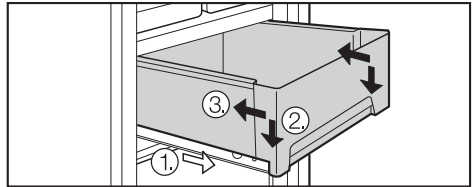

- To put it back in, pull the runners ① right out and place the compartment on top of the runners. **The front of the runners must be right up against the front of the compartment ②.** Push the compartment back in ③.

Automatic defrost

Refrigerator section and StayFresh zone

Condensate and frost can build up on the back wall of the refrigerator section and the StayFresh zone whilst in use. These are automatically removed and defrosted by the appliance.

The condensate is drained away via a channel and drain hole into an evaporation system at the back of the appliance.

Ensure that the condensate channel and drain hole are kept clean and are never blocked so that condensate can flow away without hindrance.

Never use cleaning agents containing abrasive substances such as sand, soda, acids or chemical solvents. "Non-abrasive" cleaning agents are also unsuitable as they can cause matt areas to appear.

Stainless steel surfaces should be cleaned with a proprietary stainless steel cleaner following the manufacturer's instructions on the packaging.

Make sure that no water can penetrate into the electronic unit or into the light.

Do not let water get into the drainage channel and drain hole when cleaning.

Do not use steam cleaning apparatus to clean the appliance. Steam could reach the electrical components and cause a short circuit.

The data plate located inside the appliance must not be removed. It contains information which is required in the event of a service call.

Before cleaning

- Switch the appliance off, switch off at the socket and remove the plug.
- Take any food out of the appliance and store it in a cool place.

- Take out any removable parts e.g. shelves for cleaning.
- The stainless steel trim can be pulled off the front edge of the refrigerator section shelves for cleaning.

Cleaning the outer casing, the interior and accessories

- Clean the refrigerator section and the StayFresh zone at least once a month.
- Accessories and shelves should all be hand-washed. The butter dish is, however, dishwasher safe.
- Clean the condensate channel and drain hole frequently, so that condensate can drain away unhindered. Use a straw or similar to clear the drain if necessary.
- Clean stainless steel surfaces with a suitable cleaning agent following the manufacturer's instructions on the packaging.
- After cleaning, wipe the interior and accessories with a damp cloth and dry with a soft cloth. Leave the door open to air the appliance for a short while.

E-Cloth

- A microfibre "E-Cloth" is available from the Miele UK Spare Parts Department which is suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals.

Cleaning and care

Ventilation gaps

- The ventilation gaps should be cleaned on a regular basis with a brush or vacuum cleaner. A build up of dust will increase the energy consumption of the appliance.

Door seal

Do not use any oils or grease on the door seal as these will cause the seal to deteriorate and become porous over time.

The door seal should be cleaned regularly with clean water and then wiped dry with a soft cloth.

Metal grille at the back of the appliance

The metal grille at the back of the appliance (heat exchanger) should be dusted at least once a year. A build-up of dust will increase the energy consumption of the appliance.

When cleaning the grille, make sure that the pipework and other components do not get broken or damaged in any way.

After cleaning

- Replace all shelves and accessories in the refrigerator section and the StayFresh zone and put your food back into the appliance.
- Close the appliance door, insert the plug in the socket and switch the appliance back on.

Repairs to electrical appliances should only be carried out by a suitably qualified and competent person in accordance with local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Some minor problems can be corrected without contacting the Miele Service Department.

What to do if . . .

. . . the appliance does not get cold.

- Check whether the appliance has been switched on. The temperature display must be lit up.
- Check that the plug is correctly inserted in the socket and switched on.
- Check that the fuse is not defective and that the mains fuse has not blown. If it has, contact the Miele Service Department.

. . . the temperature in the refrigerator section is too low.

- Select a warmer temperature.

. . . the appliance is switching in too frequently and for too long.

- Check whether the ventilation gaps have been covered over or become dusty.

- Check whether the metal grille (heat exchanger) at the back of the appliance has become too dusty.
- The door has been opened too frequently, or a large amount of food has been put in at once.
- Check that the door has been closed properly.

. . . The temperature display is flashing.

The temperature has risen by several degrees in the refrigerator section because

- large quantities of food which are too warm have been placed in the appliance.
- the door was left open for too long whilst putting food into the appliance or rearranging it.

When you finish putting food into the appliance or rearranging it the electronics automatically adjust the temperature to the one last set. A loss of coldness for a short period will not affect the food in the appliance.

. . . the following messages show in the temperature display "F0" to "F5".

There is a fault. Call the Service Department.

. . the alarm sounds.

Has the appliance door been open for longer than 60 seconds?

- Close the door.

Problem solving guide

... the floor of the refrigerator section or the StayFresh zone is wet.

The drain hole is blocked.

- Clean the condensate channel and drain hole.

... the interior lighting in the refrigerator section is not working.


- Was the door left open for too long? The lighting switches itself off automatically after approx. 15 minutes.

If the door has not been left open for this length of time the interior lighting is defective.


To change it follow the instructions below. The lighting component required (cool touch lamp with light diodes) is available from the Miele Spare Parts Department.

Take care when removing the lamp cover. Do not look at the LEDs with optical instruments.

- Disconnect the appliance from the mains. Switch off at the wall and withdraw the plug from the socket, or disconnect the mains fuse or remove the screw-out fuse in countries where this is applicable.

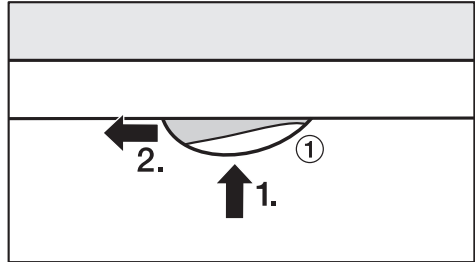

- Press the lamp cover ① to the ceiling and then pull it forward to release it.

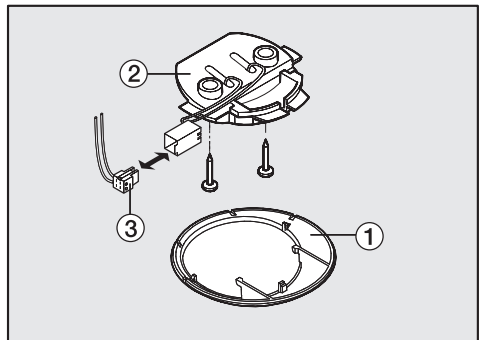

- Unscrew the lighting component ② and disconnect the cable and plug connectors ③.
- Fit the new lighting component by reversing the above procedure.

If you still cannot remedy the fault having followed these suggestions, please contact the Miele Service Department.

To prevent unnecessary loss of temperature it is advisable not to open the door while waiting for the appliance to be serviced.

Normal noises	What causes them
Brrrrr...	Humming noise made by the motor (compressor). This noise can get louder for brief periods when the motor is switching on.
Blubb, blubb....	A gurgling noise can be heard when coolant is circulating through the pipes.
Click....	Clicking sounds are made when the thermostat switches the motor on and off.
Sssrrrrr....	On multi-zone and frost-free appliances you can sometimes just hear the movement of air circulating inside the appliance.

Remember that the noise of the compressor and the coolant circulating in the system is unavoidable.

Noises that you can easily rectify	What causes them, and what can you do about them?
Rattling, vibrating	The appliance is uneven: Realign the appliance using a spirit level, by raising or lowering the screw feet underneath the appliance.
	The appliance is touching another appliance or piece of furniture: Move it away.
	Drawers, baskets or shelves are unstable or sticking: Check all removable items and refit them correctly.
	Are any bottles or containers unstable or knocking against each other? Separate them.
	The transport cable clips are hanging loose at the back of the appliance: Remove the clips.

After sales service

In the event of a fault which you cannot correct yourself, or if the appliance is under guarantee, please contact:

– your Miele Dealer

or

– the Miele Service Department (see back cover for address).

When contacting your Dealer or the Service Department, please quote the model and serial number of your appliance. This information is given on the data plate.

Please note that telephone calls may be monitored and recorded for training purposes.

Electrical connection U.K.

All electrical work should be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations (BS 7651 in the UK).

The appliance is supplied with a mains cable and moulded plug ready for connection to an a.c. single phase 220-240 V 50 Hz supply.

Please ensure that the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable switched socket which is easily accessible. For extra safety it is advisable to install a residual current device (RCD) with a trip current of 30 mA (in accordance with DIN VDE 0664, VDE 0100, Section 739).

Do not connect the appliance to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

The appliance must not be connected to an inverter and must not be used with a plug adapter as these can cause damage to the appliance's electronic unit.

Non-rewireable plugs (BS 1363)

The fuse cover must be re-fitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words in the base of the plug (as applicable to the design of the plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

WARNING
THIS APPLIANCE MUST BE
EARTHED

Installation

Do not place any appliance which gives off heat, such as a toaster or microwave oven, on top of this appliance, as this would increase the appliance's energy consumption.

Location

The appliance should be installed in a dry, well-ventilated room.

The room temperature should not go above or below the climate range for which the appliance is designed.

The higher the ambient temperature of the room, the more energy the appliance requires to operate.

It should not be installed where it is exposed to direct sunlight or directly adjacent to a heat-producing appliance such as an oven or a radiator.

Climate range

The appliance is designed for use within certain climate ranges (ambient temperatures), and should not be used outside this range. The climate range of the appliance is stated on the data plate inside the appliance.

Climate range	Ambient room temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+18°C to +38°C
T	+18°C to +43°C
SN-ST	+10 °C to +38 °C
SN-T	+10 °C to +43 °C

Operating in a room which is too cold will cause the cooling system to switch off for too long, causing the internal temperature in the appliance to rise

with the risk of food deteriorating and going off.

Side-by-side installation

To avoid a build-up of condensation and resultant damage, refrigerators and freezers should not generally be installed side-by-side next to another refrigerator or freezer.

However, there are certain models with insulated side wall heating which are suitable for side-by-side installation with this refrigerator.

Ask your dealer which models can be combined with your refrigerator.

- Instructions on how to install the two appliances side-by-side are given in the instruction booklet supplied with the matching freezer or fridge-freezer.


Ventilation

Air at the back of the appliance gets warm. To ensure sufficient ventilation, the ventilation gaps must not be covered over. The air inlet and outlet must not be covered or blocked in any way. They should be dusted on a regular basis.

Installation

- Remove any cable clips from the back of the appliance.
- Check that all parts at the back of the appliance are unhindered. Carefully remove any hindrance.
- Carefully push the appliance into position. The appliance can be placed directly against a wall.

Aligning the appliance

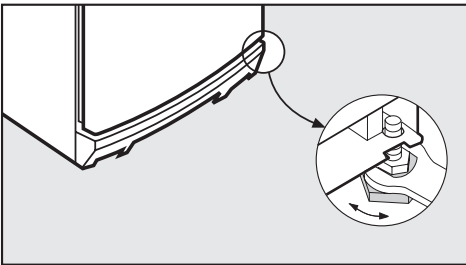


- To align the appliance adjust the feet using the spanner supplied.

Changing the door hinging

The appliance is supplied right hand hinged. If left hand door hinging is required, follow the instructions below.

Removing the door handle:

First the side section of the handle must be removed:

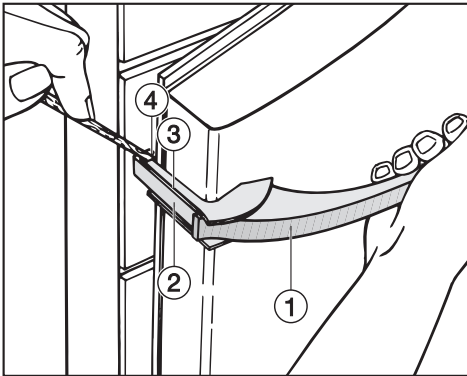

- Pull door handle ① towards you. Side section ② slides back, creating a gap ④ between side section ② and mounting plate ③.
- Place a suitable object (e.g. a spoon handle) in gap ④, and slowly lever the handle towards the door.

Be careful not to let the "spoon handle" slip, causing damage to the appliance.


The side section ② can now be removed.

- Pull side section ② out of the guides on the mounting plate.
- Loosen the 4 screws (Torx 15) in the mounting plate, and remove the handle.

- Remove the cover caps from the opposite side, and fit them into the empty holes.

Changing over the door:


- Open the appliance door.

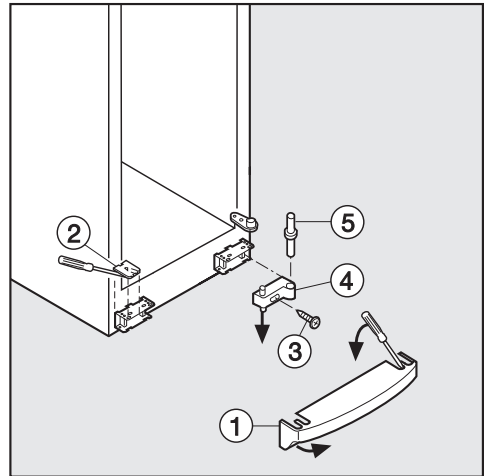

- Use a screwdriver to lever plinth ① out, then pull it forwards and out.
- Use a screwdriver to remove cover ②, then close the door.
- Remove screw ③ completely.
- Pull door support ④ together with hinge pin ⑤ downwards, then tilt it forwards and take it off.

Changing the door hinging

- Open the appliance door, tilt it downwards and take it off.

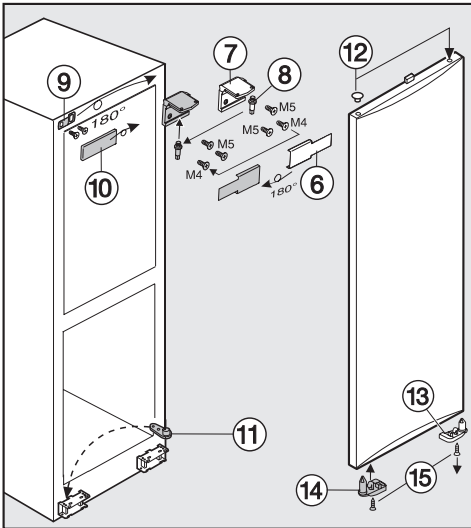


Keep it in a safe place just in case you ever decide to change the door hinging back to right hand hinging.

- Screw the tappet supplied ⑭ into the opposite side using the same screw ⑮.
- Hang the door on hinge pin ⑧ and then close the appliance door.

In the following illustration the door is not shown in the closed position to make it easier to see what happens next.

- Remove cover ⑥, and unscrew hinge bracket ⑦.
- Fit hinge pin ⑧ in the second hole of hinge bracket ⑦.
- Refit bracket ⑨ and cover ⑩ turned through 180° on the opposite side.
- Screw hinge bracket ⑦ into the opposite side.
The **M4 screw** has to be screwed into the left hole of the hinge bracket.
- Turn cover ⑥ through 180°, and fit it on the other side.
- Remove spacer ⑪ with a screwdriver and refit it on the opposite side.
- Remove plug ⑫ from the door bearing bush in the door and refit on the opposite side.
- Unscrew tappet ⑬.

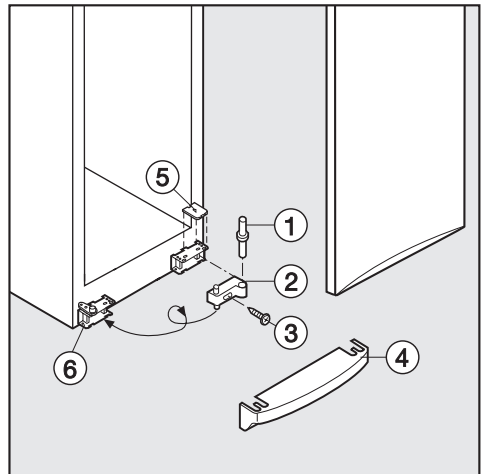


- Turn door support ② around, pull hinge pin ① out, and refit on the opposite side.
- Fit both parts into hinge plate ⑥. To do this push hinge pin ① through hinge plate ⑥ into door support ②. Swing the door support in, push upwards and re-assemble with screw ③.

Changing the door hinging

- Align the door with the appliance housing using the long slot in hinge plate ⑥. Then tighten screw ③.
- Refit plinth fascia ④, pushing it firmly into position.
- With the door open, position cover ⑤ in the front of the plinth fascia, and push it firmly into position.

Refitting the handle:

Please make sure you follow the instructions below carefully when you refit the handle. The door seal will be damaged if the handle is fitted incorrectly.

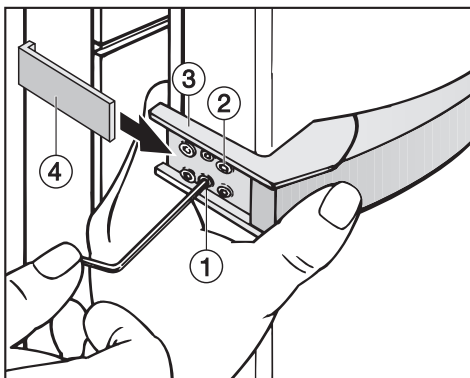

- Loosely attach the handle to the opposite side of the door with the two front screws ②.

Mounting plate ③ must be positioned on the side of the door so that when the door is **closed** it is flush with the side of the appliance.

If this is not the case,

- Tighten both grub screws ① with the allen key provided until mounting plate ③ lines up correctly.

- Then tighten all 4 fixing screws ②.
- Slide the side section of the handle ④ into the guides on the mounting plate until it clicks into place.


It is important to check that the side section of the handle ④ does not come into contact with the door seal when opening the door, as this would damage the door seal permanently.

If, after you have refitted the handle, you find that the side section does touch the door seal when the door is opened:


- Realign mounting plate ③ with grub screws ① until the mounting plate and the side section of the handle ④ are at the correct angle and the side section does not touch the seal when the door is opened.

StayFresh zone compartments

- Pull the compartment right out by taking hold of it at the back and lifting it up to remove it.

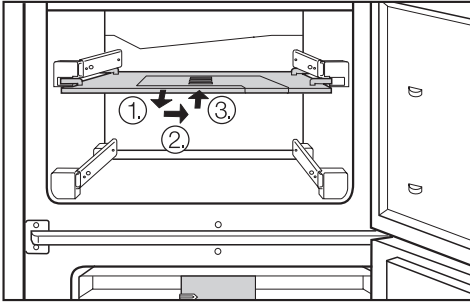


- Pull the compartment lid forwards ①.
- Push the compartment lid in towards the side that the appliance is going to be opened from once the hinges have been changed over ②, and fit it back on the runners.
- Push the lid in until it engages ③.

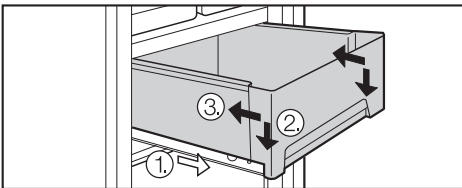

- To put the compartment back in, pull the runners ① right out and place the compartment on top of the runners close up against the door opening side. **The front of the runners must be right up against the front of the compartment ②.** The compartment will click into position. You can now push the compartment back in ③.

Make sure that the compartment lid covers the compartment correctly.

Building in the appliance

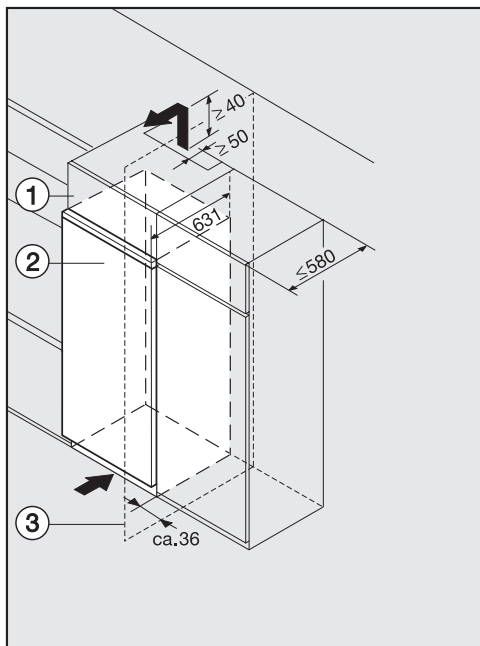

The air inlet and outlet must not be covered or blocked in any way. They should be dusted on a regular basis.

When built into a kitchen run (max. depth 580 mm) the appliance can be installed directly next to a kitchen furniture housing unit. The appliance door (2) will protrude in front of furniture fronts at the sides by 34 mm and by 51 mm in the middle of the door. This enables the doors to be opened and shut without being obstructed.

When **installed next to a wall** (3) a distance of approx. 36 mm is needed on the hinge side between the wall and the appliance, so that the door and the handle have sufficient space for opening.

600 mm wide appliances can be installed into a kitchen run. To match the height of the rest of the kitchen, the appliance can be fitted with a suitable top box (1).

A ventilation gap of at least 50 mm depth must be allowed for behind the appliance and top box, if fitted, for air to circulate.

A gap of at least 40 mm is required between the top of the appliance (or top box) and the ceiling to ensure that air can circulate without hindrance. Otherwise the appliance has to work harder, resulting in an increase in electricity consumption.

**United Kingdom:**

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
tel. Abingdon (01235) 554455
Service Office: (01235) 554466
fax (01235) 554477
Internet: www.miele.co.uk

Ireland:

Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 46 10 710, Fax: (01) 46 10 797
Email: info@miele.ie
Internet: <http://www.miele.ie>

Australia:

Miele Australia Pty. Ltd.
A.C.N. 005635398
1 Gilbert Park Drive
Knoxfield, VIC 3180
Telephone: (03) 9764 7100
Fax: (03) 9764 7129
Internet: www.miele.com.au

Distributor New Zealand:

Steelfort Engineering Company. Ltd.
500 Rangitikei Street
Palmerston North, Priv. Bag 11045, NZ
Telephone: (06) 350 1350
Fax: (06) 356 1507

South Africa:

Miele (Pty) Ltd
63 Peter Place
Bryanston 2194
P.O. Box 69434
Bryanston 2021
Tel.: (011) 548 1900
Telefax (011) 548 1935
Internet: www.miele.co.za
E-mail: info@miele.co.za

Singapore:

Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel : +65-67351191
Fax: +65-67351161
Email: infosea@miele.com.sg
Internet: www.miele.sg

Hong Kong:

Miele (Hong Kong) Limited
AIA Plaza, 24th Floor
18 Hysan Avenue
Causeway Bay
Hong Kong
Tel.: (852) 2610 1331
Fax: (852) 2610 1013
E-mail: mielehk@miele.com.hk