 
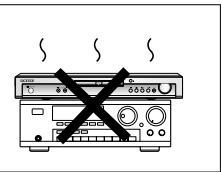 
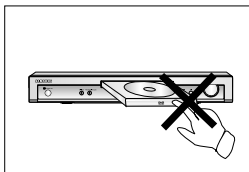 


Precautions

UTION : USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN
CIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

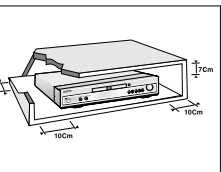

UTION : LASER RADIATION WHEN OPEN
DO NOT STARE INTO BEAM
RAYONNEMENT LASER EN CAS D'OUVERTURE,
NE PAS REGARDER DANS LE FANDEAU
LASERSTRAALING, WENN ABERGEÖFFNET
GEÖFFNET, NICHT IN DEN STRAHL, BLICKEN
SE IKKE I ØI STRÅLEN
LASERSTRÅLING NÄR DENNA DEL ÄR
ÖPPNAD, STRÅLA EJ IN STRÅLEN
AVATTAESSA OLEET ALTTIIN
LASERSTRÅLLE, ÄLÄ TULEOTA SÄTEISEEN,
LASERSTRÅLING INGEN GEÖPPEND,
BLIK NETT IN DE STRAAL
CLASS 1
LASER PRODUCT

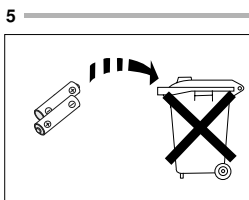 
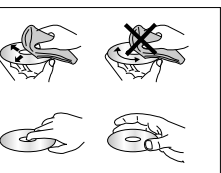 
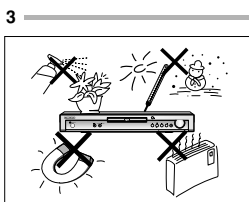 


Table of contents

Setup	
General Features	6
Disc Type and Characteristics	7
Description-Front Panel	8
Description-Rear Panel	9
Four of the Remote Control	10
Connections	
Choosing a Connection	12
Basic Functions	
Playing a Disc	17
Using the Search & Skip Functions	19
Using the Display Function	20
Using the Disc and Title Menu	21
Using the Function Menu	22
Repeat Play	23
Advanced Functions	
Adjusting the Aspect Ratio (EZ View)	24
Slow Repeat play	26
Selecting the Audio Language	27
Selecting the Subtitle Language	28
Changing the Camera Angle	29
Using the Instant Replay/Skip Function	30
Using the Bookmark Function	31
Using the Zoom & 3D Sound Functions	32
MP3/WMA Play	33
Program Play & Random Play	35
Picture CD Playback	36
Changing Setup menu	
Using the Setup Menu	38
Setting Up the Language Features	39
Setting Up the Audio Options	41
Setting Up the Display Options	42
Setting Up the Parental Control	44
Setting Up the DVI Output	45
Controlling a TV with the remote	46
Reference	
Troubleshooting	47
Specifications	49

SETUP

CONNECTIONS

BASIC FUNCTIONS

ADVANCED FUNCTIONS




CHANGING SETUP MENU

REFERENCE



Disc Type and Characteristics








DVD player is capable of playing the following types of discs with the corresponding logos:

Disc Types (Logos)	Recording Types	Disc Size	Max. Playing Time	Characteristics
 DVD VIDEO	Audio + Video	12 Cm	Single-sided 240 min. Double-sided 480 min.	• DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system. • Various screen and audio functions can be easily selected through the on-screen menu.
		8 Cm	Single-sided 80 min. Double-sided 160 min.	
 DVD-VIDEO	Audio + Video	12 Cm	74 min.	• Video with CD sound, VHS quality & MPEG-1 compression technology.
		8 Cm	20 min.	
 DVD-AUDIO	Audio	12 Cm	74 min.	• CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.
		8 Cm	20 min.	

SETUP



Disc Markings

						
• PAL broadcast system in U.K, France, Germany, etc.	• Dolby Digital disc	• Stereo disc	• Digital Audio disc	• DTS disc	• MP3 disc	• DCDi

 
Region Number

DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

Region Number for this player is described on the rear panel of the player.



Description-Rear Panel

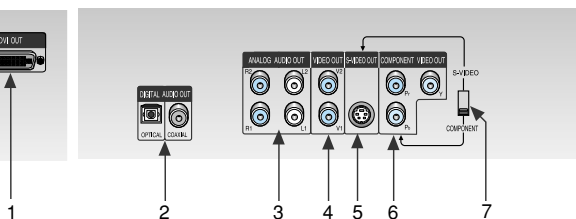

SETUP

Rear Panel

DVI OUT JACK
Use the DVI cable to connect this jack to the DVI jack on your television for a higher quality picture.

DIGITAL AUDIO OUT JACKS
Use either an optical or coaxial digital cable to connect to a compatible Dolby Digital receiver.
Use to connect to an A/V Amplifier that contains a Dolby Digital or DTS decoder.

ANALOG AUDIO OUT JACKS
Connect to the Audio input jacks of your television, audio/video receiver.

VIDEO OUT JACK
Use a video cable to connect to the VIDEO input jack on your television.
The PROGRESSIVE SCAN button must be set to off.

S-VIDEO JACK
Use the S-Video cable to connect this jack to the S-Video jack on your television for a higher quality picture. The S-Video must be selected in the VIDEO OUT SELECT.
The PROGRESSIVE SCAN button must be set to off.

COMPONENT VIDEO OUT JACKS
Use these jacks if you have a TV with Component Video in jacks. These jacks provide Pr, Pb and Y video. Along with Component Video provides the best picture quality.
The PROGRESSIVE SCAN button is set to on, progressive scan mode will work.
The PROGRESSIVE SCAN button is set to off, interlace scan mode will work.
Component is selected, S-Video output will not work.

VIDEO OUT SELECT SWITCH
Use the switch to set video out.
S-Video is selected, Component will not work.

Important Note

 
Consult your TV User's Manual to find out if your TV supports Progressive Scan.
Progressive Scan is supported, follow the TV User's Manual's instructions regarding Progressive Scan settings in the TV's menu system.

PROGRESSIVE SCAN button is set to on, VIDEO and S-VIDEO will not work.
Make sure to stop DVD playback before enabling the PROGRESSIVE SCAN function.

Choosing a Connection

Connection to a TV (For Video)

(Normal, Widescreen, Projection, etc..)

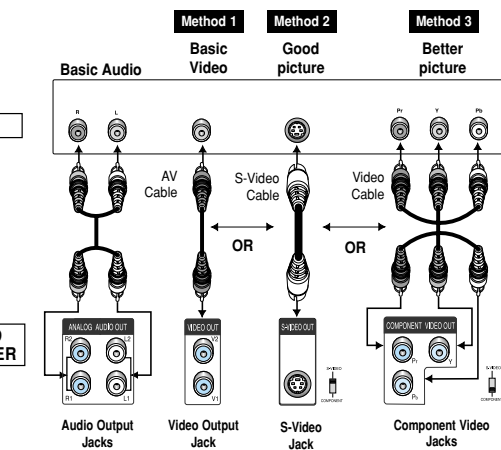

- 1 DVD Player + TV with Video Input Jack
- 2 DVD Player + TV with S-Video Input Jack
(If S-Video is selected in the VIDEO OUT SELECT.)
- 3 DVD Player + TV with Component Video Jacks
(If Component Video is selected in the VIDEO OUT SELECT.)

NOTE

If Component Video is selected, S-Video will not work.
If PROGRESSIVE SCAN is set to on VIDEO and S-VIDEO will not work.

CONNECTIONS



Choosing a Connection

DVI VIDEO Specifications

When you press the DVI VIDEO button ; (PAL disc play)
6p DVI output will be selected when the "Red" light comes on.
0p DVI output will be selected when the "Blue" light comes on.
80i DVI output will be selected when the "Green" light comes on.

When you press the DVI VIDEO button ; (NTSC disc play)
0p DVI output will be selected when the "Red" light comes on.
0p DVI output will be selected when the "Blue" light comes on.
80i DVI output will be selected when the "Green" light comes on.

Important Note

Digital Visual Interface)
an interface to enable the digital transmission of video signals between various digital devices.
DVI, the DVD player transmits a digital video signal and displays a vivid picture on a TV having
jack.
Description of the DVI connection
connector : digital signal only.
connector : digital and analog signal.
When the player is using DVI-I connector, the output from a DVI-I is only a digital signal.
Does not support HDCP (High-bandwidth Digital content protect), snow noise appears
screen.
Be careful that various connectors are similar to DVI connector, for example VESA PnD, VESA DFD
to on.
Have we adopt DVI?
Initially, with an analog TV, an analog video signal is input to VIDEO IN.
However, when playing a DVD title the data transmitted to a TV is digital. Therefore either a digital-to-
analog converter(in the dvd player) and an analog-to-digital converter (in the TV) is required. During
conversion, the picture quality is degraded due to noise and loss of signal.
Digital technology requires no D/A conversion and DVI is a pure digital signal from the player to your TV.
What is the HDCP?
(High-bandwidth Digital Content Protection) is a system for protecting DVD content outputted via
from being copied. It provides a secure digital link between a video source(PC, DVD, etc) and a
display device(TV, projector . etc). Content is encrypted at the source device to prevent unauthorized
from being made.

CONNECTIONS



Playing a Disc

Before Play

on your TV and press the TV/VIDEO button to select the video
on your Audio System and select AUX, CD or DVD.
ugging in the player, the first time you press the DVD
R button, this screen comes up :
want to select the language, press a NUMBER button.
screen will only appear the very first time you plug in the player.)



Play


press the OPEN/CLOSE button.
STANDBY indicator light goes out and the tray opens.
ce a disc gently into the tray with the disc's label
ing up.

press the PLAY/PAUSE (▶||) button or OPEN/CLOSE
ton to close the disc tray.

opping Play
ss the STOP (■) button during play.

moving Disc
ss the OPEN/CLOSE button.

using Play
ss the PLAY/PAUSE (▶||) or STEP button on the remote during play.
reen stops, no sound.
resume again, press PLAY/PAUSE (▶||) button once again.

 


Using the Search & Skip Functions

play, you can search quickly through a chapter or track or use the skip
n to jump to the next selection.

Searching through a Chapter or Track

play, press the SEARCH (◀◀ or ▶▶) button on the remote.
he SEARCH (◀◀ or ▶▶) button on the remote for more than 1 second and press again
continuously to search at a faster speed on the DVD, VCD, CD.

 2X, 4X, 8X, 16X, 32X, 128X
4X, 8X
2X, 4X, 8X



Skipping Tracks

play, press the SKIP (◀◀ or ▶▶) button.
playing a DVD, if you press the ▶▶ button, it moves to the next chapter.
press the ◀◀ button, it moves to the beginning of the chapter.
ore press makes it move to the beginning of the previous chapter.
playing a VCD 2.0 in Menu Off mode, a VCD 1.1 or a CD, if you press
button, it moves to the next track. If you press the ◀◀ button,
s to the beginning of the track.
ore press makes it move to the beginning of the previous track.
k exceeds 15 minutes when playing a VCD and you press the ▶▶
it moves forward 5 minutes. If you press the ◀◀ button, it moves
rd 5 minutes.

Using the Disc and Title Menu

Using the Disc Menu

During the playback of a DVD disc, press the **DISC MENU** button on the remote.

 
Select **Disc Menu** using the UP/DOWN buttons, then press the **RIGHT** or **ENTER** button.



Using the Title Menu

During the playback of a DVD disc, press the **DISC MENU** button on the remote.

Select **Title Menu** using the UP/DOWN buttons, then press the **RIGHT** or **ENTER** button.



NOTE

Depending on the disc, the Title and Disc Menus may not work.
Menu will only be displayed if there are at least two titles in the disc.
You can also use the Disc Menu, using the **DISC MENU** button on the remote.
In D2.0, the **DISC MENU** button works as a conversion switch between Menu On and Menu Off mode.

Repeat Play

the current track, chapter, title, a chosen section (A-B), or all of the disc.

When playing a DVD

Press the REPEAT button on the remote.
Repeat screen appears.

Select Chapter, Title or A-B using the
LEFT/RIGHT buttons.

REPEAT A-B
Press the REPEAT button. Select A-B on screen with the
LEFT/RIGHT buttons on the remote.
Press ENTER at the point where you want the repeat play to
start (A). The B is automatically highlighted.
Press ENTER at the point where you want the repeat play to
stop (B).
To terminate the function, press the 'CLEAR' button.
B REPEAT does not allow you to set point (B) until at least
30 seconds has elapsed after point (A) has been set.

Press ENTER.

To return to normal play, press REPEAT again,
then press the LEFT/RIGHT buttons to select Off.
Press ENTER.

DVD



VCD/CD



BASIC
FUNCTIONS

NOTE

The player repeats play by chapter or title. CD and VCD repeat play by disc or track.
Depending on the disc, the Repeat function may not work.
In VCD 2.0 mode (Menu On mode), this function does not work.

You are using a 4:3 TV

For 16:9 aspect ratio discs

- **4:3 Letter Box**

Displays the content of the DVD title in 16:9 aspect ratio.

The black bars will appear at the top and bottom of the screen.

- **4:3 Pan Scan**

The left and right of the screen are cut off and displays the central portion of the 16:9 screen.

- **Screen Fit**

The top and bottom of the screen are cut off and the full screen appears. The picture will look vertically stretched.

- **Zoom Fit**

The top, bottom, left and right of the screen are cut off and the central portion of the screen is enlarged.

For 4:3 aspect ratio discs

- Normal Screen

Displays the content of the DVD title in 4:3 aspect ratio.

- **Screen Fit**

Screen Fit
The top and bottom of the screen are cut off and the full screen appears. The picture would look vertically stretched.

- **Zoom Fit**

The top, bottom, left and right of the screen are cut off and the central portion of the screen is enlarged.



TE

function may behave differently depending on the type of disc.

Selecting the Audio Language

Press the AUDIO button to select a desired language quickly and easily with the AUDIO button.

Pressing the AUDIO button

Press the AUDIO button.

Use the LEFT/RIGHT buttons to select the desired language on a DVD.

 
The audio languages are represented by abbreviations.

Use the LEFT/RIGHT buttons to select Stereo, Left or Right. (On VCD/CD)

DVD



VCD/CD

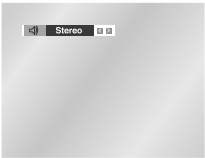

ADVANCED
FUNCTIONS

NOTE

The function depends on what languages are encoded on the disc and may not work with all DVDs.
A DVD disc can contain up to 8 audio languages.

to have the same audio language come up whenever you play a DVD;
Go to "Setting Up the Language Features" on page 40.

Changing the Camera Angle

If a DVD contains multiple angles of a particular scene, you can select the Angle

Pressing the ANGLE button

Press the ANGLE button to see if an ANGLE
() mark is present at the upper left hand
of the screen.



When an ANGLE mark is shown, press the
ANGLE button, then an ANGLE select icon
appear at the upper left hand corner of
screen.

Use the LEFT/RIGHT buttons to select the
desired screen angle.

To turn off the display, press the ANGLE
button again.



Using the Bookmark Function

This feature lets you bookmark sections of a DVD or VCD (MENU OFF mode) so you can find them at a later time.

Using the Bookmark Function (DVD/VCD)

During play, press the BOOKMARK button on the remote. The Bookmark icons will be displayed.

Use the LEFT/RIGHT buttons to move to the desired bookmark icon.

When you reach the scene you want to mark, press the ENTER button. The icon will change to a number (1, 2, or 3).

Press the BOOKMARK button to turn off the display.



Calling a Marked Scene

During play, press the BOOKMARK button on the remote.

Use the LEFT/RIGHT buttons to select a marked scene.

Press the PLAY/PAUSE (▶||) buttons to skip to the marked scene.



ADVANCED
FUNCTIONS

Deleting a Bookmark

During play, press the BOOKMARK button on the remote.

Use the LEFT/RIGHT buttons to select the bookmark number you want to delete.

Press the CLEAR button to delete a bookmark number. Press the BOOKMARK button to turn off the display.

NOTE

- Up to three scenes may be marked at a time.
- When in VCD 2.0 mode (Menu On mode), this function does not work.
- Depending on the disc, the Bookmark function may not work.

MP3/WMA Play

When an MP3/WMA Disc is inserted into the DVD player, the first song file of the first folder

If more than two file extensions are present, select the media of your choice by pressing UP/DOWN, then press the ENTER button. To change the currently playing media, press the STOP (■) button twice and then press the DISC MENU button. If the DISC MENU button on the remote controller is pressed for 60 seconds, the menu will disappear and the selected item will be played.



MP3/WMA Play Function

When the first song file is playing, the music folder menu will appear on the right side of the screen.

Up to 8 music folders can be displayed at a time. If you have more than 8 folders on a disc, press the LEFT/RIGHT buttons to bring the next folder up on the screen.

 


ADVANCED
FUNCTIONS

Use the UP/DOWN buttons to select the desired music folder, then press ENTER. Use the UP/DOWN buttons again to select a song file. Press ENTER to begin playback of the song file.

Program/Random playback

Press the PROG button to switch between the PROGRAM and RANDOM modes. See page 35 for more information on these modes.

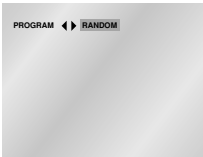

NOTE

Press the REPEAT button to hear only music continuously and press it once again to release. PROGRAM/RANDOM playback cannot be used if the disc contains more than two types of file extensions.

Program Play & Random Play

Program Play (CD/MP3/WMA)


Press the PROG button.

Use the LEFT/RIGHT buttons to select PROGRAM. Press the ENTER button.

Use the UP/DOWN/LEFT/RIGHT buttons to select the first track to add to the program. Press the ENTER button. The selection numbers appear in the Program Order box.

Press the PLAY/PAUSE (▶||) button.

 The disc will be played in programmed order.

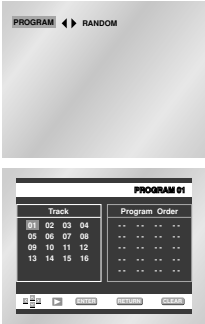

Random Play (CD/MP3/WMA)

Press the PROG button.

Use the LEFT/RIGHT buttons to select RANDOM. Press the ENTER button.

The disc will be played in random order.



ADVANCED
FUNCTIONS

NOTE

Depending on the disc, the Program and Random Play functions may not work.

To resume normal play, press the CLEAR button.

PROGRAM/RANDOM playback cannot be used if the disc contains more than two types of file extensions.

The unit can support a maximum of 99 programmed order.

Picture CD Playback

R JPEG Discs

Files with the ".jpg" and ".JPG" extensions can be played.
If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
The name of the JPEG file may not be longer than 8 characters and should contain no blank spaces or special characters (. / = +).
Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
A maximum of 500 images can be stored on a single CD.
Kodak Picture CDs are recommended.
When playing a Kodak Picture CD, only the JPEG files in the pictures folder can be played.
Picture discs other than Kodak Picture CD may take longer to start playing or may not play at all.
If the number of files in 1 Disc is over 500, only 500 JPEG file can be played.
If the number of folders in 1 Disc is over 300, only JPEG files in 300 folders can be played.

ADVANCED
FUNCTIONS

 
Setting Up the Language Features

set the player menu, disc menu, audio and subtitle language in advance, will come up automatically every time you watch a movie.

Changing the Player Menu Language

With the unit in Stop mode, press the MENU button.
Select **Setup** using UP/DOWN buttons, then RIGHT or ENTER button.
Select **Language Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
Select **Player Menu** using UP/DOWN buttons, then press the RIGHT or ENTER button.
Use the UP/DOWN buttons to select '**English**'.
Press the ENTER button.
English is selected and the screen returns to SETUP menu.
To make the SETUP menu disappear, press the RETURN or LEFT button.

e.g) Setting up in English.

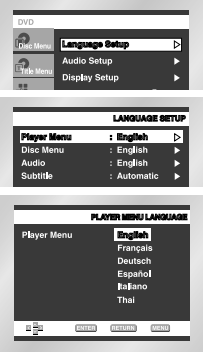

Changing the Disc Menu Language

This function changes the text language only on the disc screens.
With the unit in Stop mode, press the MENU button.
Select **Setup** using UP/DOWN buttons, then RIGHT or ENTER button.
Select **Language Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
Select **Disc Menu** using UP/DOWN buttons, then press the RIGHT or ENTER button.
Use the UP/DOWN buttons to select '**English**'.
Select "Others" if the language you want is not listed.
Press the ENTER button.
English is selected and the screen returns to SETUP menu.

e.g) Setting up in English.



Setting Up the Audio Options

With the unit in Stop mode, press the MENU button.

Select **Setup** using UP/DOWN buttons, then RIGHT or ENTER button.

Select **Audio Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.

Use the UP/DOWN buttons to select the desired option. Then press the RIGHT or ENTER button.

Dolby Digital Out

PCM :
Converts to PCM(2CH) audio.
Select PCM when using the Analog Audio Outputs.

Bitstream :
Converts to Dolby Digital Bitstream (5.1CH).
Select Bitstream when using the Digital Audio Output.

NOTE Be sure to select the correct Digital Output or no audio will be heard.

DTS

Off : Doesn't output digital signal.
On : Outputs DTS Bitstream via digital output only.
Select DTS when connecting to a DTS Decoder.

Dynamic Compression

On : To select dynamic compression.
Off : To select the standard range.

PCM Down Sampling

On : Select this when the amplifier connected to the player is not 96KHz compatible.
In this case, the 96KHz signals will be down converted to 48KHZ.
Off : Select this when the amplifier connected to the player is 96KHz compatible.
In this case, all signals will be output without any changes.

 
NOTE

To make the **SETUP** menu disappear or return to menu screen during set up;
PRESS RETURN or LEFT button.

Manufactured under license from Dolby Laboratories.

TM and the double-D symbol are trademarks of Dolby Laboratories.

and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

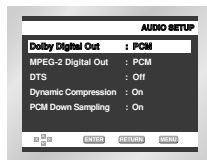

MPEG-2 Digital Out

1. PCM :
Converts to PCM(2CH) audio.
Select PCM when using the Analog Audio Outputs.

2. Bitstream :
Converts to MPEG-2 Digital Bitstream (5.1CH or 7.1CH).
Select Bitstream when using the Digital Audio Output.

CHANGING
SETUP MENU

Setting Up the Display Options

Aspect

Depending on the type of television you have, you may want to adjust the screen setting (aspect ratio).

4:3 Letter Box :

Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.

4:3 Pan Scan :

Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)

16:9 Wide :

You can view the full 16:9 picture on your widescreen TV.

Still Mode

These options will help prevent picture shake in still mode and display small text clearer.

Auto : When selecting Auto, Field/Frame mode will be automatically converted.

Field : Select this feature when the screen shakes in the Auto mode.

Frame : Select this feature when you want to see small letters more clearly in the Auto mode.

Screen Messages

Select to turn on-screen messages On or Off.

Front Display

Select the brightness of the unit's front panel display.

Auto Dim : Makes the Front Panel Display dim automatically when playing a DVD.

Bright : Makes the Front Panel Display bright.

Dim : Makes the Front Panel Display dim.

Back Level

Select the brightness of the screen.(On/Off)

SC Disc Output

Select "NTSC" if the screen only has one NTSC-video entrance. If this is not the case, you can choose to leave "PAL 60Hz" as is.



 
Setting Up the DVI Output

With the unit in Stop mode, press the MENU button.

Select **Setup** using UP/DOWN buttons,
then press the RIGHT or ENTER button.

Select **DVI Output** using UP/DOWN buttons,
then press the RIGHT or ENTER button.

The function corrects a biased TV screen to secure
normal view.
Select A or B Mode.

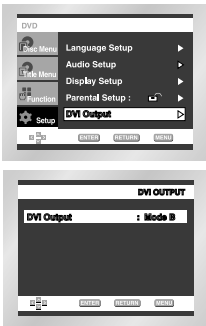

Troubleshooting

If you are requesting service (troubleshooting), please check the following.

Problem	Action	Page
Disc cannot be played with remote.	<ul style="list-style-type: none">• Check the batteries in the remote. May need replacing.• Operate the remote control at a distance of no more than 20 feet.• Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote to reset it. Reinstall batteries and try remote again.	P4
Disc does not play.	<ul style="list-style-type: none">• Ensure that the disc is installed with the label side facing up.• Check the region number of the DVD.	P7
5.1 channel sound is not reproduced.	<ul style="list-style-type: none">• 5.1 channel sound is reproduced only when the following conditions are met:<ul style="list-style-type: none">1) The DVD player is connected with the proper amplifier2) The disc is recorded with 5.1 channel sound.• Check whether the disc being played has the "Dolby 5.1 ch" mark on the outside.• Check if your audio system is connected and working properly.• In a SETUP Menu, is the Audio Output set to Bitstream?	P12 P41
Feature icon appears on screen.	<ul style="list-style-type: none">• The features or action cannot be completed at this time because:<ul style="list-style-type: none">1. The DVD's software restricts it.2. The DVD's software doesn't support the feature (e.g., angles).3. The feature is not available at the moment.4. You've requested a title or chapter number or search time that is out of range.	P18
Menu icon doesn't appear.	<ul style="list-style-type: none">• Check if the disc has a Menu.	
Function differs from the menu selection.	<ul style="list-style-type: none">• Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function.	P38-44
Screen ratio cannot be changed.	<ul style="list-style-type: none">• The Screen Ratio is fixed on your DVDs.	P42-43
Audio output is not correct.	<ul style="list-style-type: none">• Make sure you have selected the correct Digital Output in the Audio Options Menu.	P41
Parental lock password is not working.	<ul style="list-style-type: none">• Press power on from a cold start with no disc in the unit. Press the STOP (■) and PLAY (▶) buttons simultaneously on the front panel for three seconds. The Select Menu Language display will appear. Select the desired language button. Press the MENU button on the remote control to select the Parental Mode. The Parental Mode is now unlocked as indicated on the display. Press the DOWN button to select Parental. Press ENTER and the Create Password display will appear. You can now set your rating level and change your password to a new number.	P44
Experiencing other problems.	<ul style="list-style-type: none">• Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again.• If the problem still cannot be solved, please contact your nearest authorized service center.	

REFERENCE

Specifications

	Power Requirements	AC 110~240V, 50/60 Hz
	Power Consumption	18 W
	Weight	2.5 Kg
	Dimensions	430mm (W) X 240mm (D) X 60mm (H)
	Operating Temperature Range	+5°C to +35°C
	Operating Humidity Range	10 % to 75 %
	DVD (DIGITAL VERSATILE DISC)	Reading Speed : 3.49 m/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 12Cm (COMPACT DISC)	Reading Speed : 1.2 to 1.4 m/sec. Maximum Play Time : 74 min.
	CD : 8Cm (COMPACT DISC)	Reading Speed : 1.2 to 1.4 m/sec. Maximum Play Time : 20 min.
	VCD : 12Cm	Reading Speed : 1.2 to 1.4 m/sec. Maximum Play Time : 74 min. (Video + Audio)
	Composite Video	2 channel : 1.0 Vp-p (75 Ω load)
	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
	S-VIDEO	Luminance Signal : 1.0 Vp-p (75 Ω load) Chrominance Signal : 0.3 Vp-p (75 Ω load)
	DVI	Digital Visual Interface (50 Ω load)
	2 channel	L(1/L), R(2/R)
	*Frequency Response	48 kHz Sampling : 4 Hz to 22 kHz 96 kHz Sampling : 4 Hz to 44 kHz
	*S/N Ratio	110 dB
	*Dynamic Range	100 dB
	*Total Harmonic Distortion	0.004 %

*: Nominal specification

Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
Weight and dimensions are approximate.

REFERENCE