



HD-IVS for ARRICAM LT

K2.47060.0

Instruction Manual

Attention:

This is only a preliminary version.

The content may be changed without notice.

ARRI assumes no responsibility for errors in this manual.

A final version will be delivered as soon as possible.

Preliminary Version February 2010



K5.40829.0


0036-39-00-00-01

K0219

1	Quick Reference.....	3
2	Safety Instructions and Legal Disclaimer	5
2.1	Safety Instructions.....	5
2.2	Legal Disclaimer	7
2.3	Declaration of Conformity	8
3	General Description of the ARRICAM LT HD -IVS	9
3.1	Order Numbers.....	11
3.2	Installing the HD-IVS Lens.....	11
3.3	Changing the IVS Lens.....	16
3.4	Installation of the HD IVS onto the ARRICAM LT	20
3.5	Outputs	21
3.6	HD-SDI Output without Graphic Overlay.....	21
3.7	HD-SDI Output with Graphic Overlay	22
3.8	Mini Monitor Output.....	22
4	Standard Video Controls	24
4.1	Switch On, Off and Check/Hide Menu.....	24
4.2	Iris	25
4.3	Alignment of the Image Position (X-, Y- and Rotation)	25
4.4	Focus	26
4.5	White Balance (WB).....	27
4.6	Gain Control.....	31
4.7	Changing Format marking number	33
4.8	Ground Glass Cancellation (GGC) On/Off	35
4.9	Ground Glass Cancellation Iris Setting	36
4.10	HD Link Speed	39
4.11	HD-Link Mode.....	40
4.12	Storing a Video Image to Internal Memory	41
5	Insert Facilities	42
5.1	Setting the On-Screen Displays.....	42
5.2	Main Menu	44
5.3	Load/Store Menu.....	45
5.4	White Balance, Manual Gain Control and Color Bars Menu.....	49
5.5	Video Adjustment Menu.....	57
5.6	Format Marking Menu	65
5.7	Compare/Store Menu.....	69
5.8	System, LDS and Status Info.....	76
5.9	User Text Menu	83
5.10	GGC.....	89
5.11	Time Code	97
5.12	Meta Data	105
5.13	SERVICE	107
5.14	Check.....	113
6	Technical Data	114
7	Index.....	115
8	ARRI Service Centers.....	118

1 Quick Reference

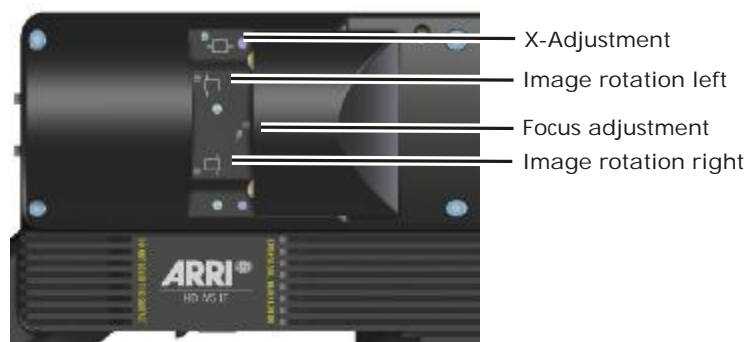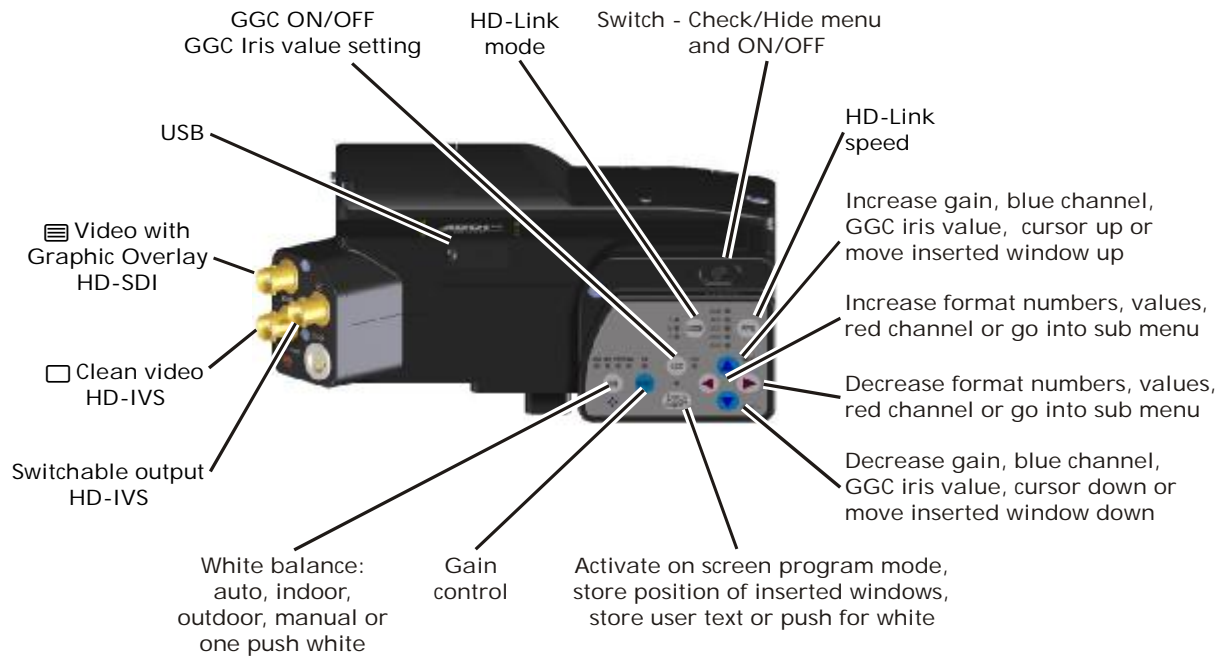

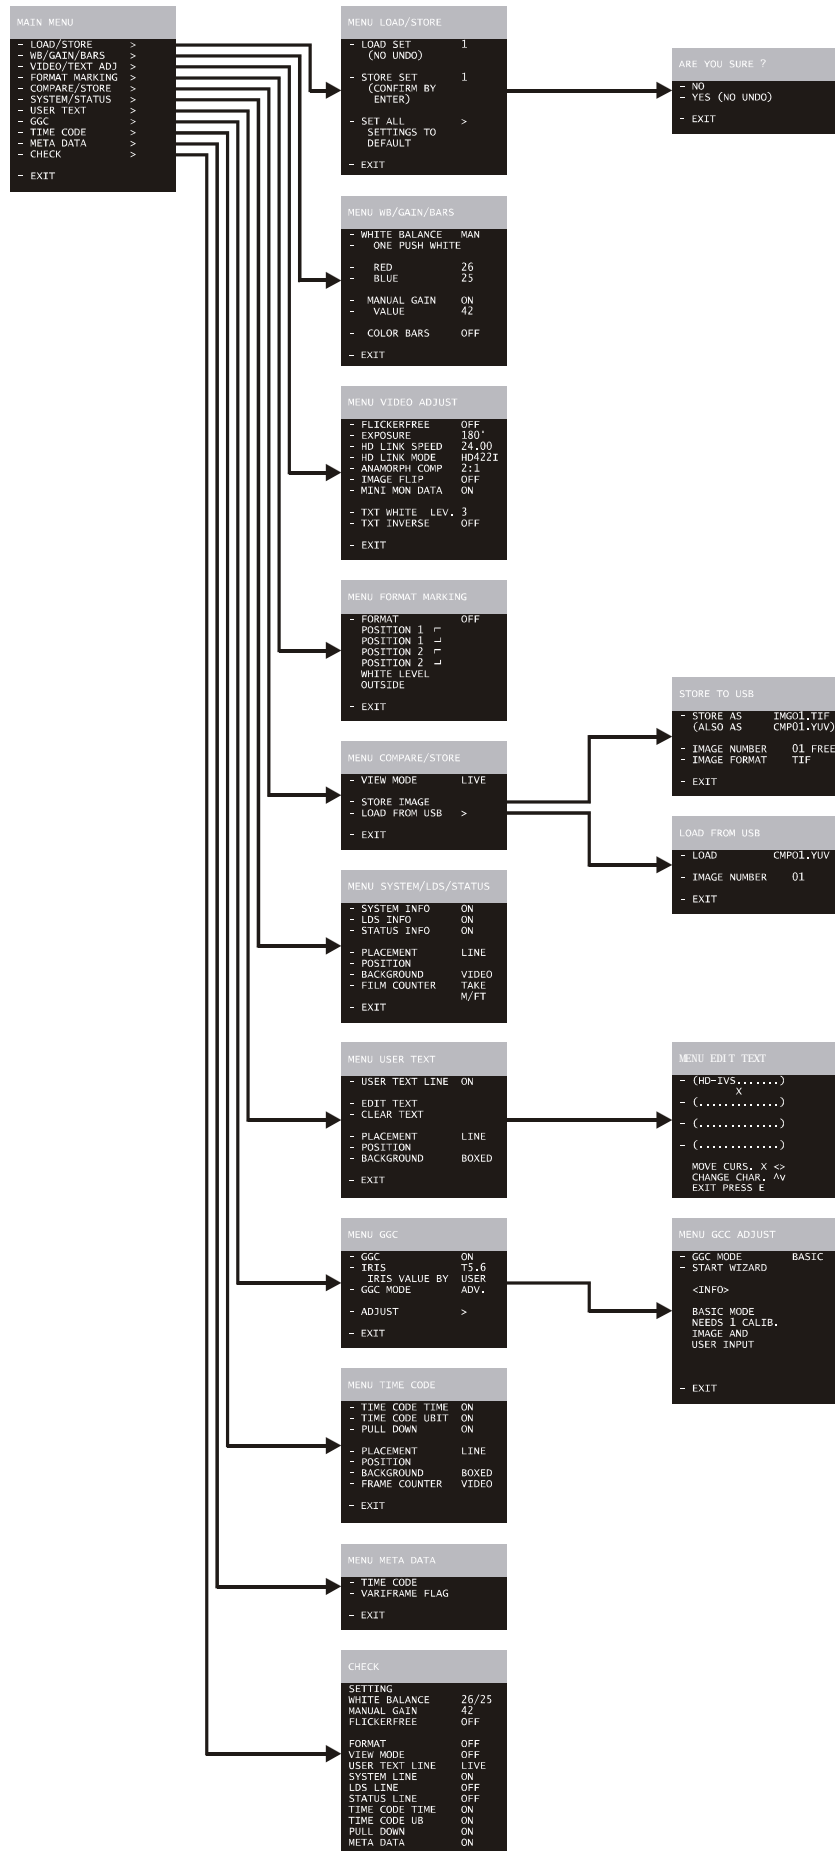

2 Safety Instructions and Legal Disclaimer

2.1 Safety Instructions

Please always follow these instructions to help ensure against injury to yourself and damage to the system or other objects.

This safety information is additional to the product-specific operating instructions in general and must be strictly observed for safety reasons. Furthermore, you are obliged to incorporate and observe sufficient safety measures of your own.

Warning signs



This symbol indicates possible risk of injury or damage to the equipment.



This symbol indicates the risk of electric shock or fire danger that could result in injury or equipment damage.

General safety instructions

- Read and understand all safety and operating instructions before you operate or install the system.
- Retain all safety and operating instructions for future reference.
- Heed all warnings on the system and in the safety and operating instructions before you operate or install the system. Follow all installation and operating instructions.
- Do not use accessories or attachments not recommended by ARRI, as they may cause hazards and void the warranty.
- Do not repair any part of the system. Repairs must be carried out only by authorized ARRI repair shops.
- Do not remove any safety measure of the system.
- Do not operate the system in high humidity areas or expose it to water or moisture.
- Do not place the system on an unstable cart, stand, tripod, bracket, or table. The system may fall, causing serious personal injury and damage to the system or other objects.

- Operate the system using only the type of power source indicated in the manual. Unplug the power cord by gripping the power plug, not the cord.
- Never insert objects of any kind into any part of the system through openings, as the objects may touch dangerous voltage points or short-circuit connections. This could cause fire or electrical shock.
- Unplug the system from the power outlet before opening any part of the system or before making any changes on the systems, especially the attaching or removing of cables.
- Do not use solvents to clean.
- Clean optical surfaces only with a lens brush or a clean lens cloth! In case of solid dirt moisten a lens cloth with pure alcohol.
- Do not loosen any screws, which are painted over!
- Danger of injury: After switching the drive direction the focus and iris motors automatically move.
- The antennas must always be kept screwed on to their bushing to protect the highly precise antenna bushing (Reverse-SMA).
- In order to ensure optimal radio connection the bushing must be free of dust and dirt at all times. If necessary, remove the antenna and clean antenna and bushing using pressured air. Do not use any tools that can harm antenna or bushing.

Specific safety instructions:

- As the end-stops of the iris ring on the ARRIMACROS change when the lens is focused, the ARRIMACROS may not be used with the LCS or the WRC-1 system.
- Danger of injury with the rotating drive gears on the lens barrel, or when switching the operating direction on the UMC-1, LDB and FEM-2!
- Any violation of the safety instructions or neglect in personal care could cause serious injuries (including death) and damages on the system or other objects.

Note: Notes are used to indicate further information or information from other instruction manuals.

→ Photo indicates objects which are shown in the illustration.

Product Identification

When ordering parts or accessories, or if any questions should arise, please advise your type of product and serial number.

2.2 Legal Disclaimer

Before using the products described in this manual, be sure to read and understand all relevant instructions. The HD-IVS System is only available for commercial customers. By utilization the customer agrees, that the ARRI HD-IVS or other components of the system are only deployed for commercial use. Otherwise the customer has the obligation to contact ARRI preceding the utilization.

While ARRI endeavors to enhance the quality, reliability and safety of their products, customers agree and acknowledge that the possibility of defects thereof cannot be eliminated entirely. To minimize risks of damage to property or injury (including death) to persons arising from defects in the products, customers must incorporate sufficient safety measures in their work with the system and have to heed the stated canonic use.

No part of this document may be copied or reproduced in any form or by any means without prior written consent of ARRI. ARRI assumes no responsibility for any errors that may appear in this document. The information is subject to change without notice.

For current design-in, refer to the latest publications of ARRI data sheets or data books, etc., for the most up-to-date specifications. Not all products and/or types are available in every country. Please check with an ARRI sales representative for availability and additional information.

ARRI and its subsidiaries do not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from the use of ARRI products or any other liability arising from the use of such products. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of ARRI or others.

ARRI and its subsidiaries expressly exclude any liability, warranty, demand or other obligation for any claim, representation, or cause, or action, express or implied, whether in contract or tort, including negligence, or incorporated in terms and conditions, whether by statute, law or otherwise. In no event shall ARRI or its subsidiaries be liable for or you have a remedy for recovery of any special, direct, indirect, incidental, or consequential damages, including but not limited to lost profits, lost savings, lost revenues or economic loss of any kind or for any claim by third party, downtime, good-will, damage to or replacement of equipment or property, any costs or recovering of any material or goods associated with the

assembly or use of our products, or any other damages or injury of persons and so on or under any other legal theory.

In the case one or all of the forgoing clauses are not allowed by applicable law, the fullest extent permissible clauses by applicable law are validated.

ARRI is a registered trademark of Arnold & Richter Cine Technik GmbH & Co Betriebs KG.

2.3 Declaration of Conformity



Declaration of Conformity

This declaration is valid for following product:

Equipment: **Integrated Video System**

Type: **HD IVS LT for ARRICAM LT
with HD Mini Monitor 7" T**

Hereby the equipment is confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2004/108/EEC).

The following company is responsible for this declaration:

Arnold & Richter Cine Technik
GmbH & Co Betriebs KG
Türkenstrasse 89
80799 München
Germany

The measurements were carried out in an accredited laboratory.

For the evaluation of above mentioned Council Directives for Electromagnetic Compatibility following standards were consulted:

DIN EN 55103-1: 1997-06
DIN EN 55103-2: 1997-06

December 10th, 2009 / Munich

Date / Place

A handwritten signature in black ink, appearing to be 'J. Richter', is written over a horizontal line.

Signature of responsible Person

3 General Description of the ARRICAM LT HD -IVS

The Integrated HD Video-Assist System (HD-IVS) for the ARRICAM LT is a breakthrough product, which uses innovative digital technology to create high definition video assist images for the ARRICAM LT film cameras. Wide dynamic range, excellent color reproduction and low noise are combined with ARRI's unique Ground Glass Cancellation (GGC) technology to create beautiful, high resolution preview images. The HD-IVS provides a superior image for the director and cinematographer on the set, allowing them to judge each take while shooting on 35mm film.

Main Features

- High resolution
Because of a sensor with 1920 x 1080 pixels, the resolution is dramatically increased resulting in an unprecedented image quality.
- 3 Stops more dynamic range than standard IVS
The HD-IVS works internally with 12 bit pixel depth and only for the output it is re-sampled down to 10 bit. This creates a higher dynamic resulting in more details in shadow areas.
- Anamorphic de-squeeze
To de-squeeze anamorphic images, the HD-IVS comes with software options for a de-squeeze factor of 2 and 1.3.
- Screen capture
Individual still images can be stored on a standard USB stick in a standard bitmap format.
- Ground Glass Cancellation(GGC) for a clean image
The structure of the ground glass in the optical system can be recognized, stored, and electronically subtracted from the actual image. Therefore the image does not show the ground glass structure any more.
- Less noise through optimized exposure control
Because of a motorized iris in the HD video assist the IVS lens is always controlled so that a maximum amount of light reaches the video assist sensor. Thus less electronic gain is needed and the noise is reduced.
- Excellent color reproduction
A state-of-the-art bayer mask on the sensor and a high sophisticated color processing electronic ensure an excellent color reproduction.
- Flicker-free
An integrated digital frame store enables the video camera to be synchronized to the film camera's mirror shutter and provides (in manual gain control mode) a flicker-free video image from 1 fps to

maximum speed; the video image is always taken at the ideal position of the mirror shutter.

Flicker free can be switched off to bypass the digital frame store and to have minimal delay in the video system.

- Full white balance control
Indoor, -outdoor, automatic, manual and one -push white for an automatic detection of white charts.
- Store and recall settings
All settings can be stored and recalled. Through this, it is possible for example to trim all the settings for indoor shooting, store them, have some exterior scenes, go back indoor and call the old settings back.

Up to 6 settings can be stored.

- Integrated frame line inserter
Frame lines can be electronically added to the video image. This ensures that the frame lines are visible even in difficult conditions. The area outside the frame lines can be darkened electronically in three different steps to emphasize the important image area.
- Camera status display
Camera status information, e.g. camera speed and film counter data are passed on a bus interface from the camera to the video assist and can be displayed in a camera status line on the monitor.
- System display
Camera system information is available in the video assist. Thus, it is possible to see camera warnings such as "movement open" or "low battery" on the monitor.
- Integrated text inserter
Additional text, such as take numbers or production name, can be added to the video image by entering the text on the HD-IVS.
- On-Screen programming
All functions, which do not affect the image appearance directly, such as frame lines, can be conveniently programmed with an on-screen programming menu on the video monitor.
- Dedicated controls
Important image changes, such as gain or white balance, can be done immediately parallel to the on-screen programming with dedicated keys.
- Image compare function
It is possible to store a particular image and compare it against other

images. This clearly shows the difference between the images, e.g. during stop effect shots.

- Automatic and manual gain control
The gain is controlled automatically to its best value but can also be set manually.
- Mini monitor connector:
The HD-IVS has a BNC connector for an HD-IVS Mini Monitor. The mini monitor needs to get power on a separate power cable.

3.1 Order Numbers

ARRICAM LT HD-IVS order number:

K2.47060.0	HD-IVS for ARRICAM LT
K2.64200.0	IVS Lens for 4:3 Format
K2.64201.0	IVS Lens for 16:9 Format
K0.60097.0	Set HD-IVS ARRICAM LT plus IVS Lens for 4:3 Format
K0.60097.A	Set HD-IVS ARRICAM LT plus IVS Lens for 16:9 Format

A1.5 mm hex key for image adjustment is included in K2.47060.0

3.2 Installing the HD-IVS Lens

The HD IVS allows the use of two different IVS prime lenses as a video assist lens. The 4:3 IVS lens is optimized for taller aspect ratios such as 4:3 or anamorphic formats. The full 4:3 ground glass image will be displayed on 1440 x 1080 pixels on the HD monitor, leaving black vertical bars to the left and right of the image ("pillar box"). These black bars optionally display metadata or the OSD menu.

The 16:9 IVS lens is optimized for aspect ratios of 16:9 or wider. A 16:9 aspect ratio image from the ground glass will be displayed on the full HD monitor in 1920 x 1080 pixels.

Note: If a 4:3 IVS lens is installed together with a 16:9 ground glass, black areas will appear not only left and right but also top and bottom of the monitor screen. The usable image on the monitor will be too small. Vice versa, if a 16:9 IVS lens is installed together with a 4:3 ground glass, the image will be cropped on top and bottom. Both situations are not recommendable. Please use an appropriate combination of ground glass and IVS lens.



This operation should be carried out only by an experienced technician.

Use appropriate care to avoid electro static discharge.

Do not touch optical surfaces and do not use force.


If you feel uncomfortable in changing the IVS Lens, please don't hesitate to consult one of the authorized ARRI Service Centers.

A 3 mm, a 2mm and a 1,5mm hex key, and a pair of tweezers are used.



To take the cover (shown on the next image) off the HD-IVS-LT, loosen the captive screws S1 and S2 with a 3 mm hex key → [Photo](#)

The cover will drop off.

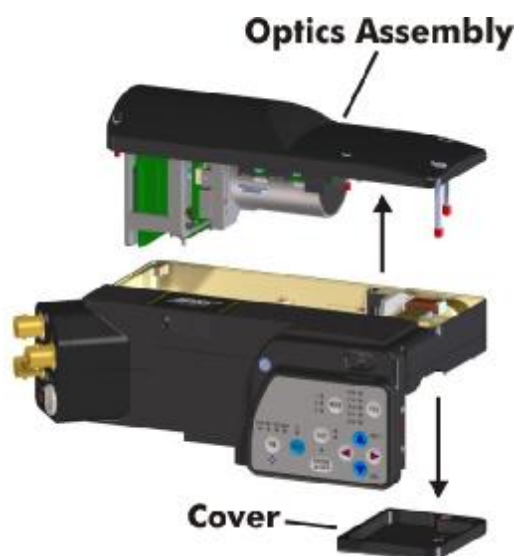


To lift the optics assembly off the video assist, loosen the captive screws S3 to S6 with a 2 mm hex key as shown on the previous image. → [Photo](#)




Don't pull on the flexible PCB.



Disconnect the connector
→ Photo
by using a pair of tweezers.

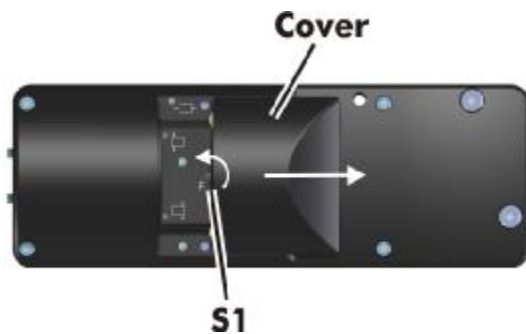

Turn the focus screw S1 → Photo
counter clockwise by using a 1.5
mm hex key until the lens comes
loose (as shown on the next
image) and pull it out carefully.

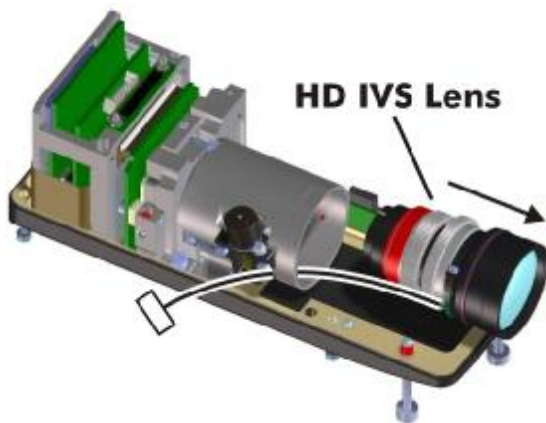

Make sure the flexible PCB and its
connector slips through the
housing, without being pulled.
→ Photo




The focus ring has to be in the correct position, to reassemble the lens:

Turn the focus ring as shown in the image until it reaches the end stop – then turn it back a quarter of a revolution to loosen it. → Photo




Make sure that the small pin on the lens fits the groove in the optics assembly. → Photo

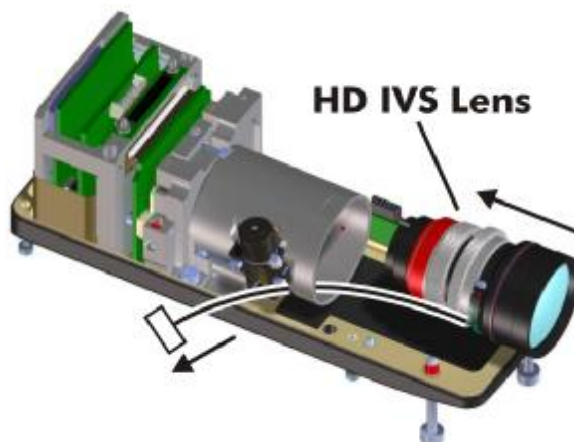

Carefully feed the connector and the flexible PCB through the housing. → Photo



Push the lens gently against IVS and turn the focus screw S1 clockwise by using a 1.5 mm hex key until the lens gets pulled in. → Photo

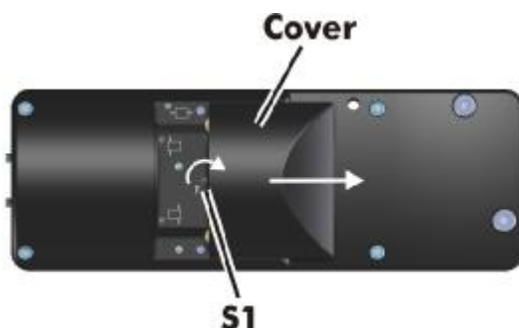

Plug in the connector and reassemble the optics assembly in reverse order.



Make sure to mount the correct Lens Type Marker on the HD-IVS, so that it is visible from the outside which type of lens is used. The information 4:3 and 16:9 are each printed on one side of the plate. To change, unscrew the two screws S1 and S2 using a 1,5mm hex key, and screw the correct side of the plate with the two screws back on again.

→ Photo

3.3 Changing the IVS Lens

The HD IVS allows the use of two different IVS prime lenses as a video assist lens. The 4:3 IVS lens is optimized for taller aspect ratios such as 4:3 or anamorphic formats. The full 4:3 ground glass image will be displayed on 1440 x 1080 pixels on the HD monitor, leaving black vertical bars to the left and right of the image ("pillar box"). These black bars optionally display metadata or the OSD menu.

The 16:9 IVS lens is optimized for aspect ratios of 16:9 or wider. A 16:9 aspect ratio image from the ground glass will be displayed on the full HD monitor in 1920 x 1080 pixels.

Note: If a 4:3 IVS lens is installed together with a 16:9 ground glass, black areas will appear not only left and right but also top and bottom of the monitor screen. The usable image on the monitor will be too small. Vice versa, if a 16:9 IVS lens is installed together with a 4:3 ground glass, the image will be cropped on top and bottom. Both situations are not recommendable. Please use an appropriate combination of ground glass and IVS lens.




This operation should be carried out only by an experienced technician.

Use appropriate care to avoid electro static discharge.


Do not touch optical surfaces, do not use force.

A 3 mm, a 2 mm and a 1.5 mm hex key, and a pair of tweezers are used.

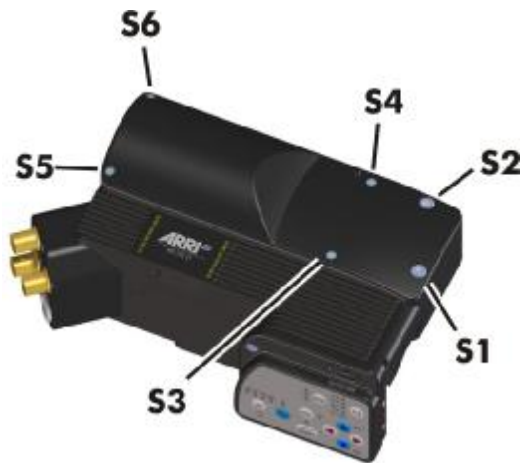

To take the cover (shown on the next image) off the HD-IVS-LT, loosen the captive screws S1 and S2 with a 3 mm hex key → Photo


The cover will drop off.

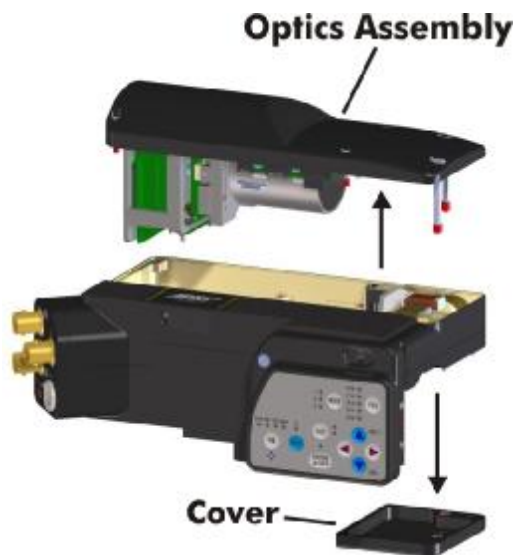


To lift the optics assembly off the video assist, loosen the captive screws S3 to S6 with a 2 mm hex key as shown on the previous image. → Photo




Don't pull on the flexible PCB.

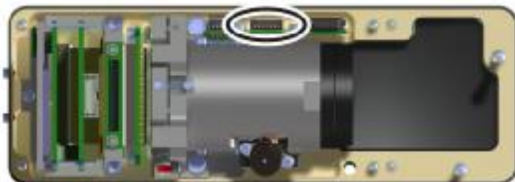

Disconnect the connector
→ Photo
by using a pair of tweezers.

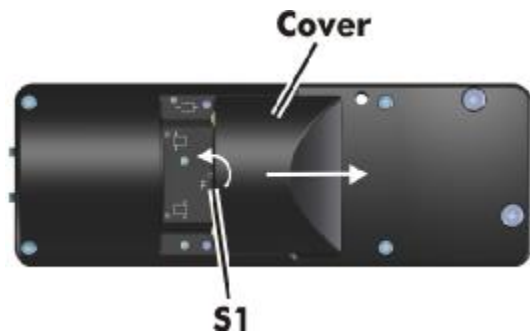

Turn the focus screw S1 → Photo counter clockwise by using a 1.5 mm hex key until the lens comes loose (as shown on the next image) and pull it out carefully.

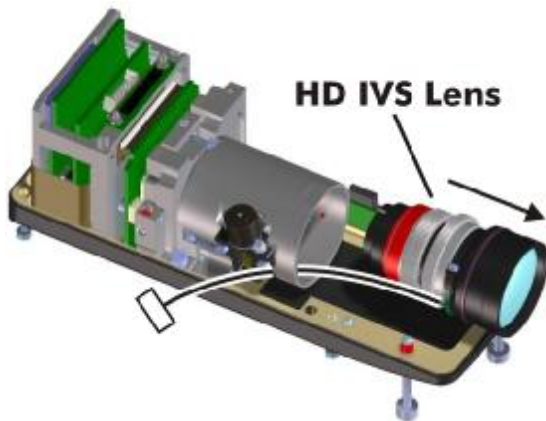

Make sure the flexible PCB and its connector slips through the housing, without being pulled.
→ Photo




The focus ring has to be in the correct position, to reassemble the lens:

Turn the focus ring as shown in the image until it reaches the end stop – then turn it back a quarter of a revolution to loosen it. → Photo




Make sure that the small pin on the lens fits the groove in the optics assembly. → Photo

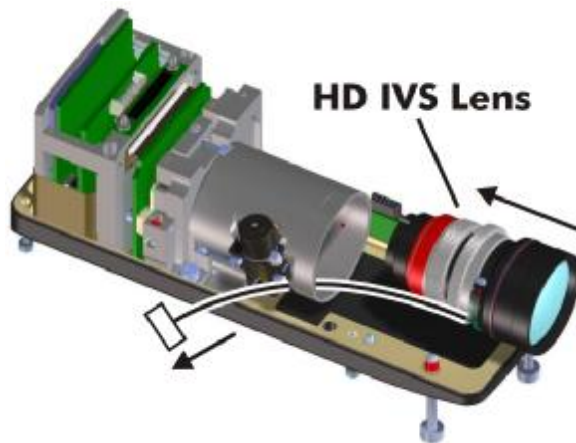

Carefully feed the connector and the flexible PCB through the housing. → Photo



Push the lens gently against IVS and turn the focus screw S1 clockwise by using a 1.5 mm hex key until the lens gets pulled in. → Photo

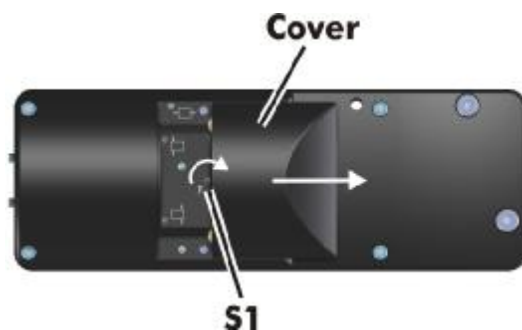


Plug in the connector and reassemble the optics assembly in reverse order.



Make sure to mount the correct Lens Type Marker on the HD-IVS, so that it is visible from the outside which type of lens is used. The information 4:3 and 16:9 are each printed on one side of the plate. To change, unscrew the two screws S1 and S2 using a 1.5 mm hex key, and screw the correct side of the plate with the two screws back on again. → Photo

3.4 Installation of the HD IVS onto the ARRICAM LT

A 3 mm and a 1.5 mm hex key are used.

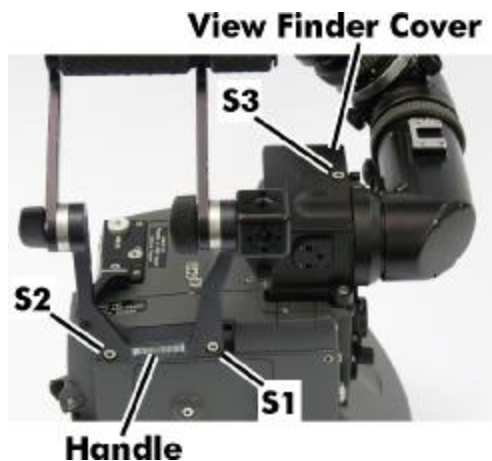

First remove the handle after loosening the captive screws S1 and S2 with a 3 mm hex key.
→ Photo

Loosen the captive screw S3 with a 3 mm hex key and remove the view finder cover. → Photo



Take the cover off the HD IVS.

To do so loosen the screws S1 and S2 with a 3 mm hex key. The cover, which is located on the other side, will fall off. → Photo



Mount the HD IVS onto the ARRICAM LT view finder as shown → Photo. Use a 3 mm hex key to tighten screws S1 and S2.



Now the handle can be mounted back on by securing the screws S1 and S2 with a 3 mm hex key.

3.5 Outputs

The HD-IVS has three HD-SDI outputs, one for video with text and graphic overlay and one for video without text and graphic and one output switchable between the two. The output is HD-SDI with 4:2:2 color sampling. The HD-Link speed is selectable between 23.976, 24, 25, 29.97 and 30 FPS, the mode can be progressive, interlaced or segmented.

Additionally, the IVS has a DATA output for future use. However, at this point, the software is not implemented.

3.6 HD-SDI Output without Graphic Overlay



HD-SDI Output without graphic overlay

In the normal HD-SDI video output, marked with the ☐ symbol → Photo, no graphic information is inserted.

The outputs are standard BNC sockets for 75 Ω terminated video signals. All outputs can be used simultaneously.




In order to ensure appropriate image quality, make sure to use cables which are capable to handle the 1.5 GB/s data rate of the HD-SDI signal. We recommend cables according to RG 59 standard.

3.7 HD-SDI Output with Graphic Overlay



HD-SDI Output with graphic overlay

In the output HD-SDI with graphic overlay, marked with the  symbol
→ Photo, additional data such as frame lines, camera status information, camera system information and a user text line are inserted.

The outputs are standard BNC sockets for 75 Ω terminated video signals. All outputs can be used simultaneously.



In order to ensure appropriate image quality, make sure to use cables which are capable to handle the 1.5 GB/s data rate of the HD-SDI signal. We recommend cables according to RG 59 standard.

3.8 Mini Monitor Output



HD-SDI Output with switch able graphic overlay

The HD-IVS has a BNC connector for a standard mini-monitor. This delivers the HD-SDI signal to the mini-monitor. → Photo


Power needs an additional cable from the RC connector of the film camera to the power in of the mini monitor

The RS output pinning is:

Pin-Outs RS-Connector
(seen from outside)

+24 V, 1.6 A max

Pin 2

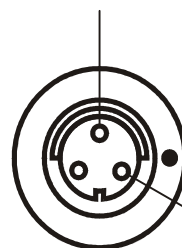

GND
Pin 1








RS Connector



In order to ensure appropriate image quality, make sure to use cables which are capable to handle the 1.5 GB/s data rate of the HD-SDI signal. We recommend cables according to RG 59 standard.

As there is only one mini monitor connector, it is possible to switch between signals without graphic overlay and signals with graphic overlay on this output.

MENU VIDEO ADJUST		
-	FLICKERFREE	OFF
-	EXPOSURE	180°
-	HD LINK SPEED	24.00
-	HD LINK MODE	HD422I
-	ANAMORPH COMP	2:1
-	IMAGE FLIP	OFF
-	MINI MON DATA	ON
-	TXT WHITE LEV.	3
-	TXT INVERSE	OFF
-	EXIT	

To switch between normal video and video with data on the mini monitor output, use the on-screen program mode. Enter the main menu by pressing the Enter/Insert key  for more than three seconds. Go to sub menu VIDEO ADJUST. Move the cursor with the keys  and  to the line - MINI MON DATA → Photo. The key  or  will switch the video overlay in the mini monitor output on and off.

See chapter 5 Inserter Facilities for information on the on-screen program mode.

4 Standard Video Controls

The HD-IVS can be used like a standard video system if no inserter features are used.



Switch M/ON/OFF

Note: All currently used settings are stored, even if the HD-IVS or the camera is switched off. After restarting the HD-IVS the settings are unchanged, except for the image stored mode, which will always come up in live mode and color bars, which will not be visible after power up.

4.1 Switch On, Off and Check/Hide Menu

The HD-IVS can be switched on and off independently from the film camera, as long as the film camera has power. Turning off the film camera will also shut the HD-IVS down. → Photo

The OFF position switches the HD-IVS off without affecting the film camera. The ON position activates the HD-IVS.

Check Menu

If the on-screen program mode is off during normal operation, the Menu (M) position shows an overview of the HD-IVS settings.

→ Photo



Switch

Hide Menu

If the on-screen program mode is on in order to change the settings, the Menu (M) position clears the screen. For example, if color is to be changed with the on-screen program tool, the on-screen program window overlays the image. To see the image and its color appearance, go to M position. The menu window disappears but the on-screen program mode is still on. By releasing the switch, the menu window will come back in the programming mode.

4.2 Iris

The HD-IVS has an iris inside the IVS lens. It is automated in such a way, that the CCD sensor receives just the right amount of light in order not to be overexposed. By this, the electronic amplification of the image (gain) can be minimized. This avoids noise in the video image.

Only a relatively small portion of the light which passes through the film camera's lens reached the CCD-Chip of the video assist, as the light is shared between the view finder, the CCD-Chip and the film. Therefore, the normal operation mode is with the iris fully open and the different exposure levels are compensated by the electronic gain. Only for special applications in which a lot of light is used, e.g. motion effects, the light level exceeds the range for electronic gain. In this case the motor closes the iris.

In manual gain control mode (MGC on) neither the electronic gain nor the iris changes, unless the keys MGC+ ▲ or MGC- ▼ are used. First the electronic gain is reduced. Only if the electronic gain is all the way down will the iris close.

In automatic gain mode (MGC off) it works the same way. First the electronic gain is reduced, and then the iris will stop down.

To avoid noise from the iris motor interfering with sound recording, the IVS lens motor will not move when automatic gain is selected (MGC off) and the camera runs at speeds between 21 FPS and 35 FPS.

No mechanical adjustments can be made for the iris.


4.3 Alignment of the Image Position (X-, Y- and Rotation)


The position of the image on the CCD-Chip and its focus can vary slightly from camera to camera. The video image on the monitor may appear not centered, rotated or out of focus.


All settings can be made by using a 1.5 mm hex key, which is delivered with the HD-IVS.



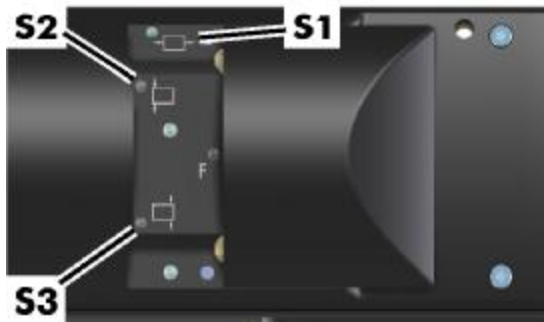


Do not use force!



Screw S 1  moves the video image on the monitor horizontally. → Photo

Screw S 2  rotates the image around a point which is located in the middle of the right image border. → Photo

Screw S 3  rotates the image around a point which is located in the middle of the left image border → Photo

Therefore, the screw S 2  and screw S 3  work as a y-adjustment as well as an adjustment for rotation.

4.4 Focus



Do not use force!



Focus can be changed, using the screw S 4, which is marked with the F Symbol.
→ Photo

4.5 White Balance (WB)

The HD-IVS offers a choice for:


- White Balance between an automatic control (AWB) and manual settings.
- a fixed setting of indoor (IND)
- a fixed setting for outdoor (OTD)
- the so called one-push white procedure which takes a white object such as a piece of paper as a white reference and sets color balance accordingly.
- a full manual control of white balance (MAN).



White balance can be adjusted in two different ways. It is possible to control it using the keyboard on the HD-IVS or using the on-screen control menu.



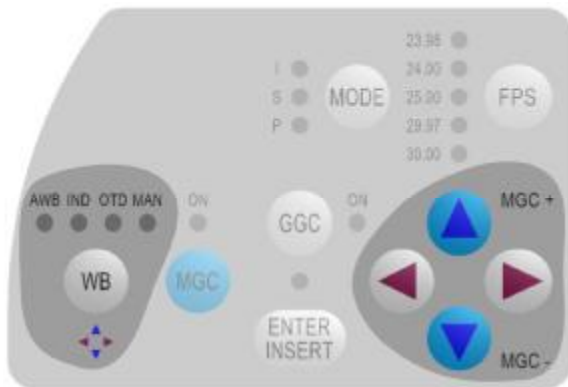



4.5.1 Using the Keyboard






Although all settings are done on the HD-IVS, please always check all the changes on the connected monitor.

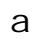

By pressing the WB key  → Photo, the setting will be changed from AWB, IND, OTD to MAN. The corresponding LED is lit. The next click on the WB key  will cause the MAN LED to blink. → Photo

Now, it is possible to change the red and blue channel using the color-coded , ,  and  keys. The next click on the WB key  or waiting longer than 5 seconds without pressing any key will cause the MAN LED to be constantly on. Another click on the WB key  will lead back to AWB. An illuminated LED shows the selected mode.

For the one push white mode, use the MAN setting by pushing the key , point the film camera at a white surface, e.g. a sheet of white paper in front of the camera, and make sure that the MAN LED and the Enter Insert LED are flashing. Use sufficient lighting for the white object. Then press the  key. Another click on the WB key  will lead back to WB. An illuminated LED shows the selected mode.

If automatic White Balance (AWB) is selected, the HD-IVS will automatically set White Balance. For this no manual steps are necessary → Photo.

If indoor (IND) is selected → Photo white balance is optimized for tungsten lighting with 3200 K.

The outdoor (OTD) setting → Photo optimizes the white balance for daylight with 5600 K.

The LEDs on the keypad will follow the changes which are made in the menu and vice versa, if the setting is changed via the keypad, the on-screen menu will follow.

Note: With the MAN LED constantly on, no color settings can be made to avoid accidental handling.

Note: The one push white facility is only available when the exposure is within the normal range. If the image is over- or underexposed, one push white will not work.





Note: Changing red, blue and gain will change green. The video signal is the addition of red, green and blue and amplified by the gain. Decreasing red and blue and increasing gain can increase green.


4.5.2 Using the On-Screen Menu

MENU WB/GAIN/BARS			
-	WHITE BALANCE	MAN	
-	ONE PUSH WHITE		
-	RED	26	
-	BLUE	25	
-	MANUAL GAIN	ON	
-	VALUE	42	
-	COLOR BARS	OFF	
-	EXIT		

Please see chapter 5 Inserter Facilities for basics on the On-Screen display.

Parallel to the control via keyboard, the white balance can also be programmed via the on-screen menu.

Enter the main menu by pressing the Enter/Insert key  for more than three seconds. Go to sub menu WB/GAIN/BARS. By using the keys  and  move the cursor to the line - WHITE BALANCE → Photo. Pressing the key  will switch from Automatic White Balance (AWB), Indoor (IND)

and Outdoor (OTD) to Manual (MAN) and back Automatic White Balance. The key  will go the opposite direction.

If white balance is on manual, the display will change. Dashes will appear left of ONE PUSH WHITE; RED and BLUE indicating that the ONE PUSH WHITE procedure can be activated or red and blue saturation of the video image can now be changed.

One-push white

MENU WB/GAIN/BARS		
-	WHITE BALANCE	MAN
-	ONE PUSH WHITE	
-	RED	26
-	BLUE	25
-	MANUAL GAIN	ON
-	VALUE	42
-	COLOR BARS	OFF
-	EXIT	

Note: ONE PUSH WHITE is only available, when white balance is set to manual.

If manual WHITE BALANCE is set to MAN, it is possible to use the one push white facility or to adjust the red and blue saturation of the video image manually.

Move the cursor by using the keys ▲ and ▼ to the line - ONE PUSH WHITE
→ Photo. Point with the camera to a white surface, e.g. hold a sheet of white paper in front of the camera and ensure proper lighting.

Press the key ► to start the ONE PUSH WHITE facility, thus adjusting the white balance to the white in front of the camera.

The LEDs on the keypad will follow the changes which are made in the menu and vice versa, if the setting is changed via the keypad, the on-screen menu will follow.

Manual White Balance red increase/decrease

MENU WB/GAIN/BARS		
-	WHITE BALANCE	MAN
-	ONE PUSH WHITE	
-	RED	26
-	BLUE	25
-	MANUAL GAIN	ON
-	VALUE	42
-	COLOR BARS	OFF
-	EXIT	

Note: Manual white balance red increase/decrease is only available if WHITE BALANCE control is on manual.

If WHITE BALANCE is on MAN, it is possible to adjust the red and blue saturation of the video image manually.

Move the cursor by using the keys ▲ and ▼ to the line - RED → Photo. Pressing the key ► will increase the red in the video image; the key ◀ will decrease it. The range for this is from 0 (lowest) to 63 (highest).

If the keys ► or ◀ are pressed briefly, the value changes by one increment measure, if the keys are pressed longer, the value will continue to change.

The LED on the keyboard will follow the changes which are made in the menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.



Manual White Balance blue increase/decrease

MENU WB/GAIN/BARS		
-	WHITE BALANCE	MAN
-	ONE PUSH WHITE	
-	RED	26
-	BLUE	25
-	MANUAL GAIN	ON
-	VALUE	42
-	COLOR BARS	OFF
-	EXIT	

Note: Manual WHITE BALANCE -BLUE increase/decrease is only available if white balance control is on manual.

If manual WHITE BALANCE is on MAN, it is possible to adjust the red and blue saturation of the video image manually.

Move the cursor by using the keys ▲ and ▼ to the line - BLUE → Photo. Pressing the key ► will increase the blue in the video image; the key ◀ will decrease it. The range for

this is from 0 (lowest) to 63 (highest). If the key  or  is pressed briefly, the value is changes by one increment, if the keys are pressed longer, the value will continue to change.

The LED in the keyboard will follow the changes which are made in the menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

4.6 Gain Control

The HD-IVS can change the brightness of the video image electronically. This gain control can be automatic or manual.


If the automatic control is selected, the HD-IVS delivers the best possible image brightness at all the time. Light changes in front of the film camera are compensated by the HD-IVS; the brightness impression remains almost unchanged.


Gain control can be adjusted in two different ways. It is possible to control it using the keyboard on the HD-IVS or using the on-screen control menu.



4.6.1 Using the Keyboard



Although all settings are done on the HD-IVS, please always check all the changes on the connected monitor as well.

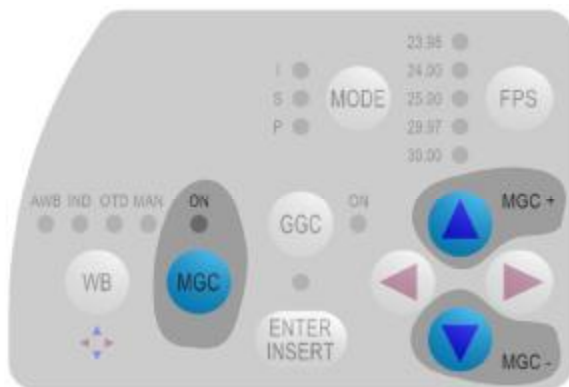

By pressing the key  the setting alters between manual and automatic control. An illuminated LED shows the setting manual gain control (MGC). → Photo

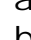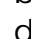If manual gain control is selected (LED is on), the brightness of the video image can be manually altered. By using the  or  key brightness can be increased or decreased. An automatic compensation of different light levels in front of the camera is suppressed.


The LED on the keyboard will follow the changes which are made in the menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

4.6.2 Using the On-Screen Menu

Please see chapter 5 Inserter Facilities for basics on the On-Screen display.

MENU WB/GAIN/BARS		
-	WHITE BALANCE	MAN
-	ONE PUSH WHITE	
-	RED	26
-	BLUE	25
-	MANUAL GAIN	ON
-	VALUE	42
-	COLOR BARS	OFF
-	EXIT	

Parallel to the control via the keyboard, the manual gain control can also be programmed via the on-screen menu. Manual gain control can be switched on or off. If it is on, specific values can be set between 0 (low gain) and 63 (high gain).

Enter the main menu by pressing the Enter/Insert key  for more than three seconds. Go to sub menu WB/GAIN/BARS → Photo. Move the cursor with the keys ▲ and ▼ to the line - MANUAL GAIN. Pressing the key ► or ◀ will switch manual gain control off and on.

If manual gain control is on, the display will change. A dash will appear before VALUE indicating that the gain can be changes manually.

The LED on the keyboard will follow the changes which are made in the menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

Manual Gain increase/decrease

Note: MANUAL GAIN increase/decrease is only available if manual gain control is on.

Move the cursor by using keys ⬆ and ⬇ to the line – VALUE → Photo.
Pressing the key ▶ will increase the gain; the key ◀ will decrease it.

The range for this is from 0 (lowest gain) to 63 (highest gain).

If the keys ▶ or ◀ are pressed briefly, the value changes by one increment, if the keys are pressed longer, the value will continue to change.

The LED on the keyboard will follow the changes which are made in this menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

4.7 Changing Format marking number

The HD-IVS can insert different format markings. It is possible to have

- No format marking (OFF),
- Format marking number one (1),
- Format marking number two (2)
- Or both format markings at the same time (1 & 2) on display.



4.7.1 Using the Keyboard



Note: The adjustment of the different format markings can only be done via the on-screen display as described in chapter 5.6 Format Marking Menu.





However, it is possible to select which format markings are displayed via the keyboard.

The FORMAT MARKING selection is only available, when the WHITE BALANCE manual mode is not active (when the WB MAN LED is not flashing). If WHITE BALANCE manual mode is active, please wait for more than 5 seconds without pressing any key to leave this mode.






The key  will switch from OFF, 1, 2 to 1&2. The key  will switch in opposite order. → Photo

4.7.2 Using the On-Screen Menu

Please see chapter 5 Inserter Facilities for basics on the On-Screen display.

MENU FORMAT MARKING		
-	FORMAT	OFF
	POSITION 1	
	POSITION 1	
	POSITION 2	
	POSITION 2	
	WHITE LEVEL	
	OUTSIDE	
-	EXIT	

Parallel to the control via keyboard, the format marking number can also be programmed via the on-screen menu.

Enter the main menu by pressing the Enter/Insert key  for more than three seconds. Go to sub menu FORMAT MARKING → Photo. Move the cursor with the keys  and  to the line - FORMAT. Pressing the key  will switch from OFF, 1, 2 to 1&2. The key  will go in the opposite order.

4.8 Ground Glass Cancellation (GGC) On/Off


All video assists capture the image they see on the ground glass of the film camera; this ensures that the framing and the impression of depth of field are identical between the film and the video assist image. The ground glass is an integral part of the optical viewfinder, a feature of 35 mm film cameras much loved by camera operators. Unfortunately, the ground glass also creates a visible texture on traditional video assists.


By recording one or a few images in neutral grey whenever a new ground glass is placed into the camera or an extreme wide angle camera lens is used, the HD-IVS knows the precise ground glass texture and can use its powerful image processor to remove it from the images. This Ground Glass Cancellation (GGC) technology delivers a clean preview image without any distracting texture.

4.8.1 Using the Keyboard



Note: The setup of the GGC can be done only in the on-screen menu as described in chapter 5.10 CCG Control

The Ground Glass Cancellation can be switched on and off using the keyboard. Pressing the key  longer than three seconds will switch GGC on and off. The illuminated LED shows the ON mode. → [Photo](#)

Note: pressing the key  briefly (less than 1.5 seconds) will allow change the GGC Iris value. See next chapter 4.9 Ground Glass Cancellation Iris Setting for details.

The LED in the keyboard will follow the changes which are made in the menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.




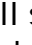
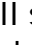
4.8.2 Using the On-Screen Menu

MENU GGC	
- GGC	ON
- IRIS	T5.6
IRIS VALUE BY	USER
- GGC MODE	ADV.
- ADJUST	>
- EXIT	



Although all settings are done on the HD-IVS, please always check all the changes on the connected monitor as well.

Parallel to the control via keyboard, the GGC software can be switched on and off via the on screen menu.

Enter the main menu by pressing the Enter/Insert key  for more than three seconds. Go to sub menu CCG. Move the cursor by using the keys  and  to the line - GGC → Photo. Pressing the key  or  will switch GGC off and on. If manual GGC is on, the LED on the keyboard will be on.

The LED on the keyboard will follow the changes which are made in this menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

4.9 Ground Glass Cancellation Iris Setting




If Lens Data Lenses are used, the iris value will be passed onto the HD-IVS automatically. No manual input is necessary. If lenses without the LDS system are used the line IRIS VALUE BY will be on USER. See chapter 5.10 Iris Value. In this case it is possible, that the operator reads the f-stop values from the lens and enters the value manually.


4.9.1 Using the Keyboard



Note: The setup of the GGC can be done only in the on-screen menu as described in chapter 5.10 CCG Control

If this mode can not be selected, please check the setting of IRIS VALUE BY. See chapter 5.10.2 Iris. Changing of GGC value for the iris is only necessary if lenses without the Lens Data System are used.

Press the key  briefly (less than 1.5 seconds). The LED next to GGC will blink, showing that it is now possible to change the GGC value for iris. Use the keys  and  to increase or decrease the GGC value for iris. → Photo

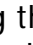Note: Pressing the key  longer than 3 seconds will switch the GGC software on and off. See last chapter 4.8 Ground Glass Cancellation On/Off for details.

The LED on the keyboard will follow the changes which are made in this menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

It is recommendable to switch the Lens Data info on, as described in chapter 5.8.2 to get visible information on the applied GGC value for iris

Using the on-screen menu






MENU GGC	
- GGC	ON
- IRIS	T5.6
IRIS VALUE BY USER	
- GGC MODE	ADV.
- ADJUST	>
- EXIT	



Check all settings on the connected monitor.

Parallel to the control via the keyboard, the GGC value for the iris can be switched on and off via the on screen menu.

Note: The IRIS setting is only available if lenses without the Lens Data System are used as described in the chapter 5.10.2 Iris.

Enter the main menu by pressing the Enter/Insert key  for more than three seconds. Go to sub menu CCG. Move the cursor by using keys  and  to the line - IRIS → Photo. Pressing the key  will increment the iris value by one f-stop. Pressing the key  will decrease the iris value by one f-stop.

The LED on the keyboard will follow the changes which are made in this menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

4.10 HD Link Speed

The HD-IVS allows to set the HD-link speed to 23.976 FPS, 24 FPS, 25 FPS, 29.97 FPS and 30 FPS.



Please make sure that the selected HD link speed is supported by your recording device and monitor.

4.10.1 Using the Keyboard



Pressing the key  will switch from 23.976 FPS to 30 FPS link speeds.

→ Photo


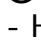
Please note that the control via the keyboard is possible, even if the monitor does not support the selected link speed. Therefore control via the keyboard is always possible.

The LED on the keyboard will follow the changes which are made in this menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.



4.10.2 Using the on-screen menu

Please see chapter 5 Inserter Facilities for basics on the On-Screen display.

MENU VIDEO ADJUST		
-	FLICKERFREE	OFF
-	EXPOSURE	180°
-	HD LINK SPEED	24.00
-	HD LINK MODE	HD422I
-	ANAMORPH COMP	2:1
-	IMAGE FLIP	OFF
-	MINI MON DATA	ON
-	TXT WHITE LEV.	3
-	TXT INVERSE	OFF
-	EXIT	

Move the cursor with the keys  and  to the line.

- HD LINK SPEED → Photo.

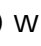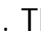Pressing the key  will switch from 23.976 FPS to 30 FPS and back to 23.976 FPS. The key  will switch in opposite direction

The LEDs on the keypad will follow the changes which are made in the menu and vice versa, if the setting is changed via the keypad, the on-screen menu will follow.

4.11 HD-Link Mode


The HD-IVS allows to use either progressive, interlaced or segmented image transfer mode.



Please make sure that the selected HD link speed is supported by your recording device and monitor.

4.11.1 Using the Keyboard




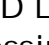
Pressing key  will witch from interlaced (I) to segmented (S) and to progressive (P) link mode.
→ Photo

Please note that the control via the keyboard is possible, even if the monitor does not support the selected link speed. Therefore, control via the keyboard is always possible.



The LEDs on the keypad will follow the changes which are made in the menu and vice versa, if the setting is changed via the keypad, the on-screen menu will follow.

4.11.2 Using the On-Screen Menu

MENU VIDEO ADJUST		
- FLICKERFREE	OFF	
- EXPOSURE	180°	
- HD LINK SPEED	24.00	
- HD LINK MODE	HD422I	
- ANAMORPH COMP	2:1	
- IMAGE FLIP	OFF	
- MINI MON DATA	ON	
- TXT WHITE LEV.	3	
- TXT INVERSE	OFF	
- EXIT		


Move the cursor by using the keys  and  to the line.

- HD LINK MODE → Photo.

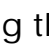Pressing the key  will switch from progressive (P) to interlaced (I) and segmented (S). The key  will switch in opposite direction.


The LEDs on the keypad will follow the changes which are made in the menu and vice versa, if the setting is changed via the keypad, the on-screen menu will follow.


4.12 Storing a Video Image to Internal Memory

The HD-IVS can store an image, display it or overlay it against the live image in front of the camera to compare both images. Although the functions to display a stored image and to compare a stored image against a live image are only available in the on-screen program mode, it is possible to store an image any time using the Enter/Insert key .

4.12.1 Using the Keyboard




Pressing the Enter/Insert key  briefly (less than 1.5 seconds) will store an image in the frame store.
→ Photo


Every time when the Enter/Insert key  are briefly pressed, a new image is stored. The previous image will be overwritten.





To view the stored image, or to compare it against a live image, please enter the on-screen program mode, as described in chapter 5.7.1 View Mode.

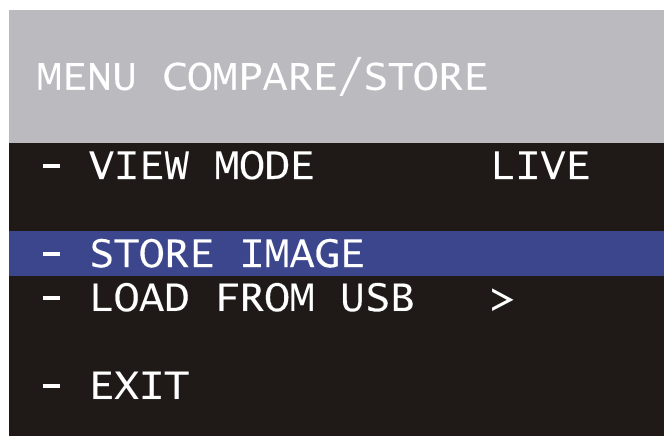4.12.2 Using the On-Screen Menu

Please see chapter 5 Inserter Facilities for basics on the On-Screen display.



Enter the main menu by pressing the Enter/Insert key  for more than three seconds.

Go to sub menu COMPARE/STORE. Move the cursor by using the keys  and  to the line - STORE IMAGE → Photo. Pressing the key  or  will store the image. The word **DONE** will appear for a few seconds to show that an image was stored.

The stored image is saved until a new image is stored or until the HD-IVS power was shut down.

5 Inserter Facilities

In addition to the usual video assist functions, the HD-IVS offers a variety of inserter facilities. There are three different groups of information:

- Format markings

Format markings, which are inserted electronically, are often more visible than format markings on the ground glass or on the ARRIGLOW.

- Manually readable information

Camera status
System line
Lens Data information
User text
Time Code

- Machine readable meta data

Time Code
Variframe Flag


Note: All inserted data is only available at the outputs Video with graphic overlay.


Note: All engravings from the ground glass (e. g. TV-Safe etc.) are visible at all times at all outputs.





Note: All currently used settings are stored even if the HD-IVS or the camera is switched off or disconnected from the power supply. After restarting the HD-IVS the settings are unchanged, except for the image stored mode, which will always come up in live mode and color bars, which will not be visible after power up.





5.1 Setting the On-Screen Displays


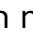



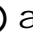



Note: Data inserted during programming is not fully updated (e. g. Frame Counter Information). To get information updated, leave the on-screen display menu by pressing the Enter/Insert key  for more than three seconds. → Photo



Once the on-screen display is activated by pressing the Enter and Insert key  for more than three seconds, the following procedure is used to select and set all functions within the main menu and the sub menus:

Pressing the key  or  will move the cursor up or down. Pressing the key  or  activates sub menus.


Within sub menus the cursor can be moved up and down again by pressing the key  or . The keys  or  will now change settings (e. g. switch the insertion of a user text window on and off), or activate functions (position mode of a window or EXIT).

If the windows position mode is activated, the keys  or  will move the menu window across the video image. To leave the position mode press the Enter/Insert key  briefly.

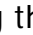
To go from a sub menu back to the main menu, position the cursor by using the keys  and  on the line EXIT and press the key  or .

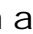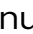
Active lines are marked with a dash symbol –. They can be reached with the cursor within a menu using the keys  and . Lines may not be active because the currently selected mode does not support this feature. E.g. when gain is not in manual control mode, the line value is not active because value cannot be changed in the automatic control mode. In this case, no dash symbol – is displayed and the line cannot be reached with the cursor. To activate this line, switch from automatic to manual gain control mode.

Note: As soon as any key is pressed, the settings change immediately.


Note: Pressing the Enter/Insert key  for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode.

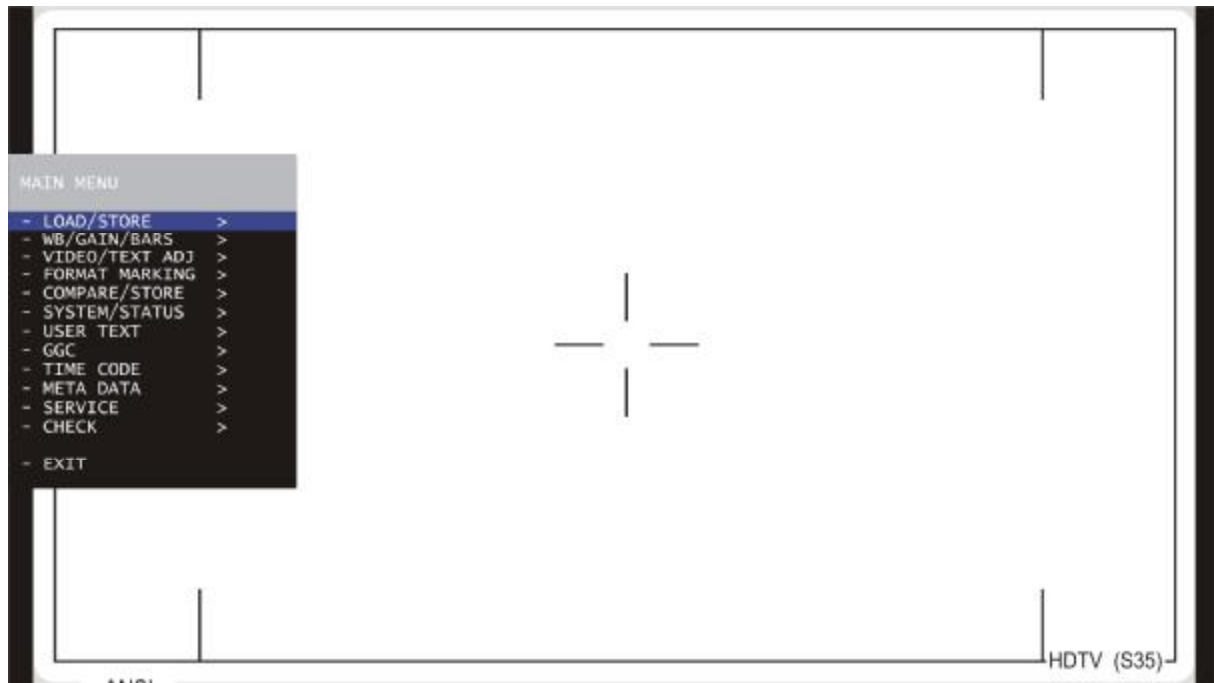



5.2 Main Menu




The inserter's main menu is displayed on the monitor screen when the on-screen programming is activated by pressing the Enter/Insert key  for more than three seconds.

An illuminated LED indicates that the on-screen programming is activated.

Note: Pressing the Enter/Insert key  for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode.

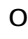The keys  or  move the cursor up or down. Pressing the key  or  will lead into a sub menu.

5.3 Load/Store Menu

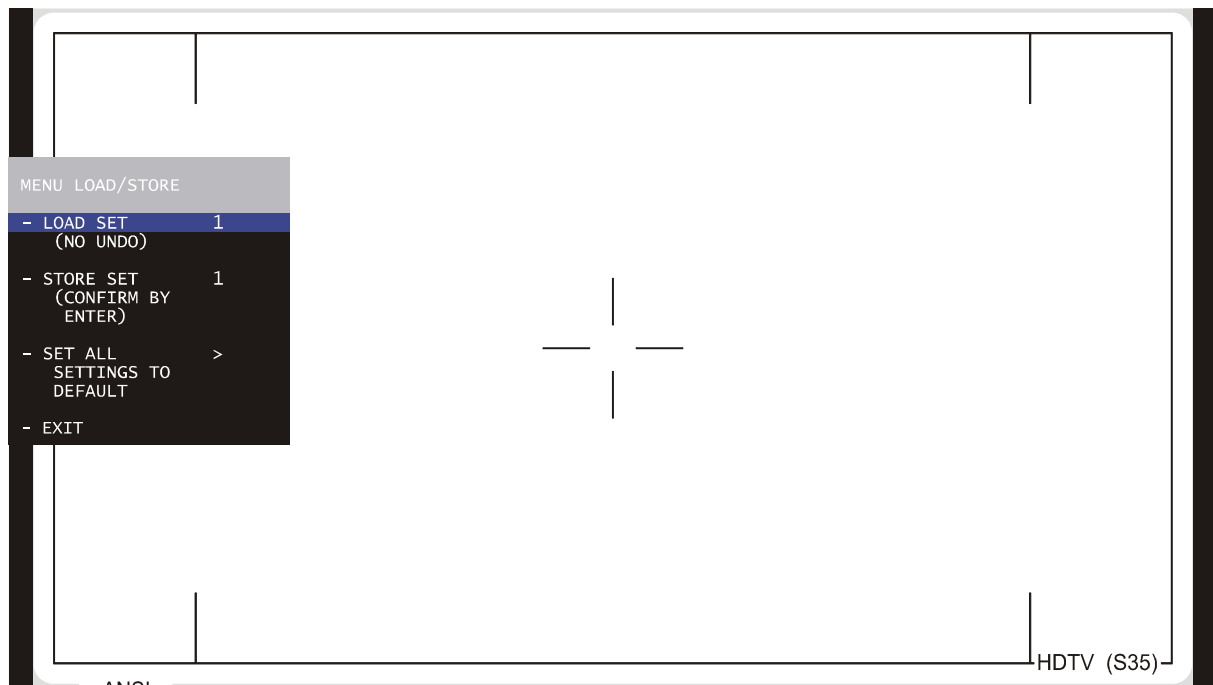

The HD-IVS can store up to 6 sets of settings and recall them. Thus it is for example possible to make all settings indoor shooting and store them as setting 1. Shooting continues with some exterior scenes and the operator adjusts all settings and stores them as setting 2. When the work is continued indoor, it is very easy recalling all the settings stored as setting 1 and get the same image appearance as previously.

One set of settings consists of all set-ups in the HD-IVS. Everything, which can be set electronically, will be stored and recalled. All video adjustments such as manual gain control, white balance, flicker free, outputs with or without data as well as all inserter setups, e.g. user text insertion off or on, frame lines and so on, are stored and recalled.

The adjustment of the white level of the inserted data and an inverse display is described in chapters 5.5.8 White Level and 5.5.9 Inverse.



All changes are immediately active.

Check all settings on the connected monitor.

- Enter the Load/Store submenu from the main menu.

5.3.1 Load Settings

MENU LOAD/STORE		
- LOAD SET	1	
(NO UNDO)		
- STORE SET	1	
(CONFIRM BY ENTER)		
- SET ALL SETTINGS TO DEFAULT	>	
- EXIT		

It is possible to load one out of six settings. Those new settings will influence all adjustments which can be made electronically.

Note: The new settings will immediately replace the previous settings. If the old settings might be needed, store them first as described in the next chapter 5.3.2 Store Settings.

Move the cursor by using the keys ▲ and ▼ to the line - LOAD SET → Photo. Pressing the key ► will switch from 1 to


2 all the way up to 6 and back to 1, the key ◀ will switch in the opposite order. Pressing either the key ► or ◀ will immediately load the new settings.

5.3.2 Store Settings

MENU LOAD/STORE		
- LOAD SET	1	
(NO UNDO)		
- STORE SET	1	
(CONFIRM BY ENTER)		
- SET ALL SETTINGS TO DEFAULT	>	
- EXIT		


The set of settings, that are currently active, can be stored as one out of six settings.

Move the cursor with the keys ▲ and ▼ to the line - STORE SET → Photo. Pressing the key ► will switch from 1 to 2 all the way up to 6 and back to 1, the key ◀ will switch in the opposite order.

When the demanded number was reached, press the Enter/Insert key  to store this setting under the given number. The word **DONE** will appear for three seconds to indicate that the setting was stored. After this, the display will return to its normal mode.


5.3.3 Default

Note: After the function SET ALL SETTINGS TO DEFAULT was selected, all settings are cleared. They cannot be recalled.

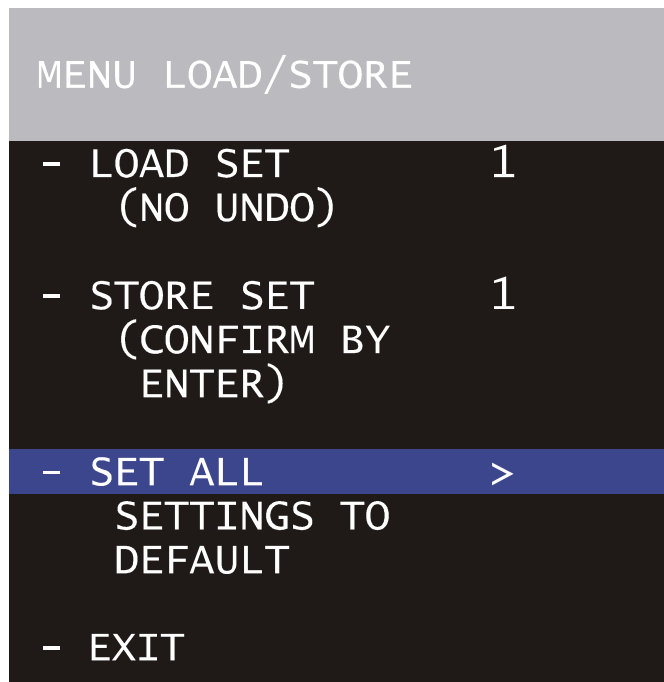

This menu recalls a default setting of all values. Here it is possible to change back to factory settings for the HD-IVS.

Move the cursor by using the keys ⬆ and ⬇ to the line - SET ALL → Photo. Pressing the key ⬇ or ⬆ recalls the default values.

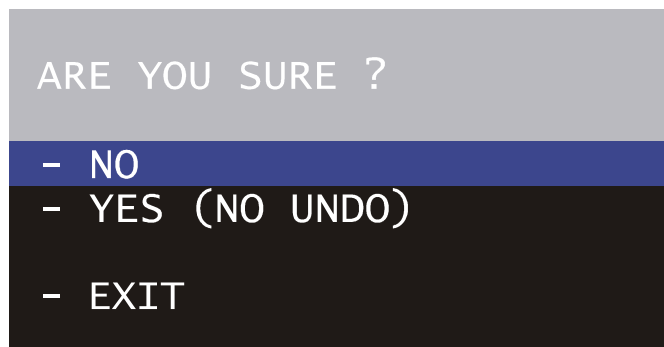

It is necessary to re-confirm the reset, as all settings will be cleared. This window will appear with the cursor in the line NO → Photo. Pressing the key ⬇ or ⬆ will cancel this procedure.





To clear everything, move the cursor by using the keys ⬆ and ⬇ to the line - YES → Photo. Pressing the key ⬇ or ⬆ sets all settings to default.


If the cursor is in position EXIT and the key ⬇ or ⬆ is pressed, the HD-IVS will return to the Load/Store menu without setting everything to default.

5.3.4 Exit


MENU LOAD/STORE	
- LOAD SET (NO UNDO)	1
- STORE SET (CONFIRM BY ENTER)	1
- SET ALL SETTINGS TO DEFAULT	>
- EXIT	

Use exit to return to the main menu.

Move the cursor with the keys  and  to the line - EXIT → Photo and press the key  or .

Note: Pressing the Enter/Insert key  for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.4 White Balance, Manual Gain Control and Color Bars Menu

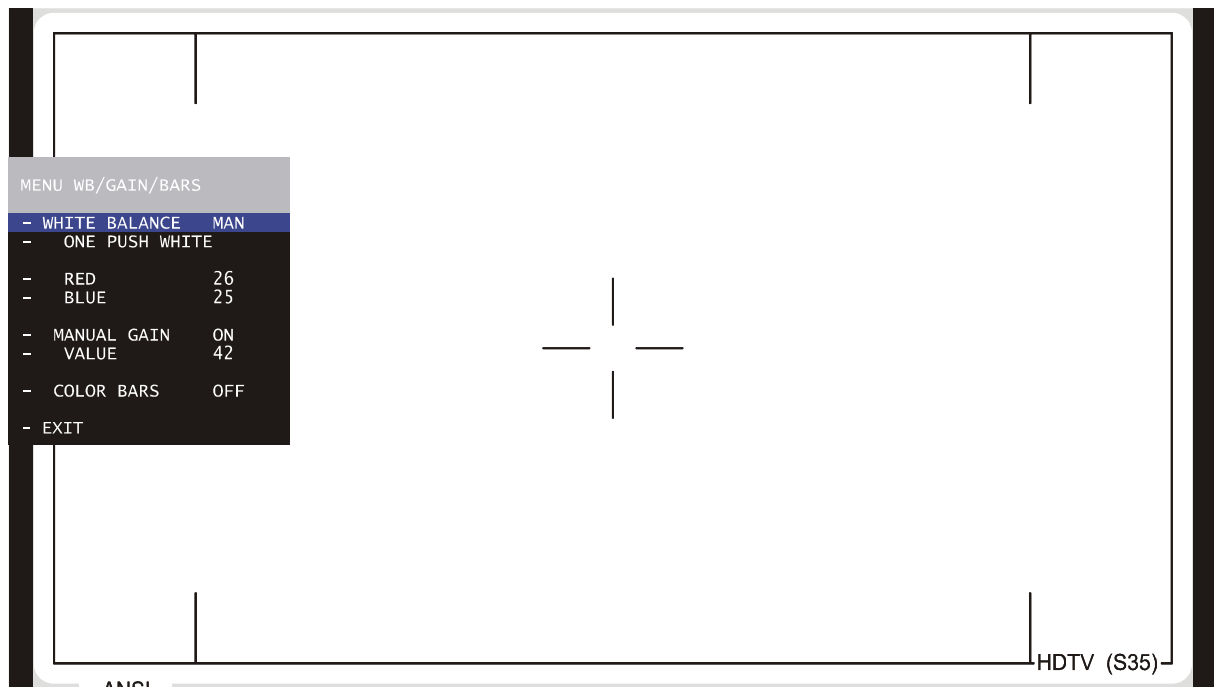

WHITE BALANCE and MANUAL GAIN control allow to change the color appearance and brightness of the video image.



All changes are immediately active.

Check all settings on the connected monitor.

- Enter the WB/Gain submenu from the main menu.

5.4.1 White Balance (Indoor/Outdoor/Automatic/Manual)

MENU WB/GAIN/BARS			
-	WHITE BALANCE	MAN	
-	ONE PUSH WHITE		
-	RED	26	
-	BLUE	25	
-	MANUAL GAIN	ON	
-	VALUE	42	
-	COLOR BARS	OFF	
-	EXIT		

Parallel to the control via keyboard, the WHITE BALANCE can also be programmed via the on-screen menu. It switches from Indoor, Outdoor and Automatic to Manual.

Move the cursor with the keys \uparrow and \downarrow to the line - WHITE BALANCE \rightarrow Photo. Pressing the key \rightarrow will switch from Automatic White Balance (AWB), Indoor (IND) and Outdoor (OTD) to Manual (MAN) and back Automatic White Balance. The key \leftarrow will switch in the opposite order.

If WHITE BALANCE is on manual, the display will change. In front of RED and BLUE will appear dashes indicating that the red and blue saturation of the video image can now be changed.

The LEDs on the keypad will follow the changes which are made in the menu and vice versa, if the setting is changed via the keypad, the on-screen menu will follow.

One-push white

MENU WB/GAIN/BARS			
-	WHITE BALANCE	MAN	
-	ONE PUSH WHITE		
-	RED	26	
-	BLUE	25	
-	MANUAL GAIN	ON	
-	VALUE	42	
-	COLOR BARS	OFF	
-	EXIT		

Note: One push white is only available, when white balance is set to manual.

If manual white balance is set to MAN, it is possible to use the one push white facility or to adjust the red and blue saturation of the video image manually.

Move the cursor by using the keys \uparrow and \downarrow to the line - ONE PUSH WHITE \rightarrow Photo. Point with the camera to a white surface, e.g. hold a sheet of white paper in front of the camera. Press the key \rightarrow or

⏮ to start the one push white facility, thus adjusting the white balance to the white in front of the camera.

5.4.2 Manual White Balance Red Increase/Decrease

MENU WB/GAIN/BARS		
-	WHITE BALANCE	MAN
-	ONE PUSH WHITE	
-	RED	26
-	BLUE	25
-	MANUAL GAIN	ON
-	VALUE	42
-	COLOR BARS	OFF
-	EXIT	

Note: Manual WHITE BALANCE red increase/decrease is only available if WHITE BALANCE control is on manual.

If the setting WHITE BALANCE is on MAN, it is possible to adjust the red and blue saturation of the video image manually.

Move the cursor by using the keys ⬆ and ⬇ to the line - RED → Photo. Pressing the key ⬆ will increase the red in the video image; the key ⬇ will decrease it.

The range for this is from 0 (lowest) to 63 (highest).

If the key ⬆ or ⬇ is pressed briefly, the value is changes by one increment, if the keys are pressed longer, the value will continue to change.

The LED on the keyboard will follow the changes which are made in the menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

5.4.3 Manual White Balance Blue Increase/Decrease

MENU WB/GAIN/BARS			
-	WHITE BALANCE	MAN	
-	ONE PUSH WHITE		
-	RED	26	
-	BLUE	25	
-	MANUAL GAIN	ON	
-	VALUE	42	
-	COLOR BARS	OFF	
-	EXIT		

Note: MANUAL WHITE BALANCE blue increase/decrease is only available if white balance control is on manual.

If setting WHITE BALANCE is on MAN, it is possible to adjust the red and blue saturation of the video image manually.

Move the cursor by using the keys ▲ and ▼ to the line – BLUE → Photo. Pressing the key ► will increase the blue in the video image; the key ◀ will decrease it.

The range is from 0 (lowest) to 63 (highest).

If the key ► or ◀ is pressed briefly, the value changes by one step, if the keys are pressed longer, the value will continue to change.

The LED on the keyboard will follow the changes which are made in this menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

5.4.4 Manual Gain Control ON/OFF

MENU WB/GAIN/BARS		
-	WHITE BALANCE	MAN
-	ONE PUSH WHITE	
-	RED	26
-	BLUE	25
-	MANUAL GAIN	ON
-	VALUE	42
-	COLOR BARS	OFF
-	EXIT	

Parallel to the control via the keyboard, the MANUAL GAIN control can also be programmed via the on-screen menu. MANUAL GAIN control can be switched ON or OFF. If it is on, values between 0 (low gain) and 63 (high gain) can be set. If it is off, an automatic mode is active.

Move the cursor by using the keys ▲ and ▼ to the line - MANUAL GAIN → Photo. Pressing the key ► or ◀ will switch MANUAL GAIN control off and on. If manual gain control is on, the display will change. A dash will appear in front of VALUE, indicating that the gain can be changes manually.

The LED on the keyboard will follow the changes which are made in the menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

5.4.5 Manual Gain Increase/Decrease

MENU WB/GAIN/BARS		
-	WHITE BALANCE	MAN
-	ONE PUSH WHITE	
-	RED	26
-	BLUE	25
-	MANUAL GAIN	ON
-	VALUE	42
-	COLOR BARS	OFF
-	EXIT	

Note: MANUAL GAIN increase/decrease is only available if MANUAL GAIN control is on.

If MANUAL GAIN is on, it is possible to adjust the gain manually.

Move the cursor by using the keys ▲ and ▼ to the line – VALUE → Photo. Pressing the key ► will increase the gain; the key ◀ will decrease it.

The range is from 0 (lowest gain) to 63 (highest gain). If the key ► or ◀ is pressed briefly, the value changes by one increment, if the key is pressed longer, the value will continue to change.

The LED on the keyboard will follow the changes which are made in this menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

5.4.6 Color Bars

MENU WB/GAIN/BARS			
-	WHITE BALANCE	MAN	
-	ONE PUSH WHITE		
-	RED	26	
-	BLUE	25	
-	MANUAL GAIN	ON	
-	VALUE	42	
-	COLOR BARS	OFF	
-	EXIT		

COLOR BARS can be displayed instead of the video image. The bars are helpful to set up or check monitors, which are connected to the HD-IVS.

Note: If the IVS is switched off and on again, it will always start in the mode COLOR BARS OFF to avoid accidental use of this mode.

Move the cursor by using the keys ▲ and ▼ to the line – COLOR BARS → Photo.

Pressing the key ► or key ◀ will switch the on and off.

Note: The color bars will fill the entire screen of the monitor and the on screen program menu will not visible any more. Pressing the key ► or key ◀ will switch the color bars on and off.

5.4.7 Exit


MENU WB/GAIN/BARS		
-	WHITE BALANCE	MAN
-	ONE PUSH WHITE	
-	RED	26
-	BLUE	25
-	MANUAL GAIN	ON
-	VALUE	42
-	COLOR BARS	OFF
-	EXIT	

Use EXIT to return to the main menu.

Move the cursor by using the keys ▲ and ▼ to the line – EXIT → Photo and press the key ► or ◀.

Note: Pressing the Enter/Insert key for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.5 Video Adjustment Menu

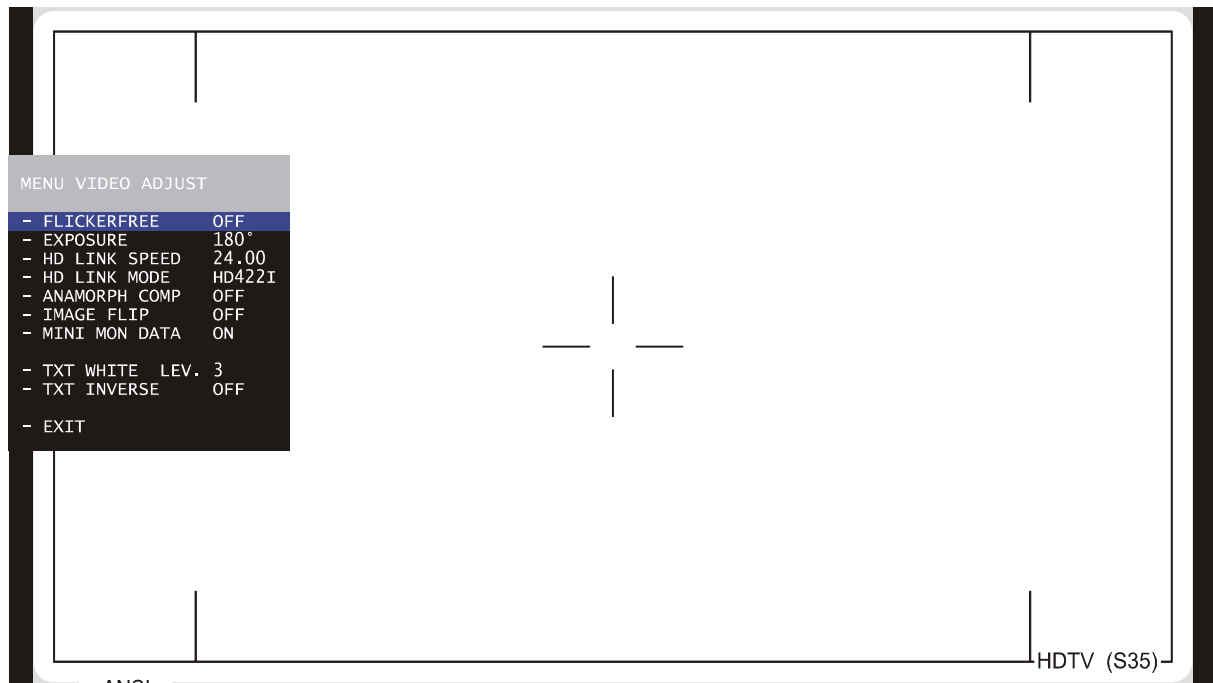

This sub menu allows changing basic video settings as well as the appearance of the inserted readable text.



All changes are immediately active.

Check all settings on the connected monitor.

- Enter the Video/Text Adjust submenu from the main menu.

5.5.1 Flicker Free On/Off

Flicker free can be switched off in order to bypass the digital frame store and have the video assist output with no delay.

The film camera runs normally at a different link speed than the video assist. For example, the film camera runs at 24 FPS and the HD-link speed is at 25 FPS. This would normally cause different brightness from one video image to the next one. To eliminate this so called flicker, video images are stored at the speed of the film camera into the video frame storage and recalled in the speed of the video system. This storage might cause a slight delay, which is not desirable in some crucial time conditions, e.g. motion control or shooting of a pop video.

Therefore, it is possible to switch the flicker free system off. This will minimize the delay. However, flicker will occur in this mode.

MENU VIDEO ADJUST	
- FLICKERFREE	OFF
- EXPOSURE	180°
- HD LINK SPEED	24.00
- HD LINK MODE	HD422I
- ANAMORPH COMP	2:1
- IMAGE FLIP	OFF
- MINI MON DATA	ON
- TXT WHITE LEV.	3
- TXT INVERSE	OFF
- EXIT	

Move the cursor by using the keys ▲ and ▼ to the line - FLICKERFREE → Photo. Pressing the key ► or ◀ will switch flicker free mode off and on.

Note: The lowest camera speed for flicker free display is 5 FPS in automatic GAIN CONTROL mode and 1 FPS in manual GAIN CONTROL mode.

5.5.2 Exposure

The exposure time of the video assist can be programmed to follow the exposure time of the film. Thus, identical motion blur on film and video assist is achieved. The mirror shutter of the film camera consist of a reflective part, which will always send light for 180° of one exposure cycle into the view finder system and a plate, which can optionally reduce the exposure time of the film to get different resolution of motion. The video assist can now be programmed to work the same way. The option "180°" will set the video assist to be exposed for the maximum available time. Thus the image will be brightest. Alternatively, the setting "FILM" will cause the video assist to learn the open sector of the shutter mirror system and will adopt the time, where the CCD Chip is light sensitive to the same timing.

MENU VIDEO ADJUST	
- FLICKERFREE	OFF
- EXPOSURE	180°
- HD LINK SPEED	24.00
- HD LINK MODE	HD422I
- ANAMORPH COMP	2:1
- IMAGE FLIP	OFF
- MINI MON DATA	ON
- TXT WHITE LEV.	3
- TXT INVERSE	OFF
- EXIT	

Move the cursor by using the keys \uparrow and \downarrow to the line - EXPOSURE \rightarrow Photo. Pressing the key \rightarrow or \leftarrow will switch from 180° to FILM.



While the camera is ramping up or down, the trigger for the exposure of the CCD-Chip in mode "EXPOSURE FILM" might occasionally fall into a phase where the CCD-Chip is not ready causing one very bright or dark image.

5.5.3 HD Link Speed

MENU VIDEO ADJUST	
- FLICKERFREE	OFF
- EXPOSURE	180°
- HD LINK SPEED	24.00
- HD LINK MODE	HD422I
- ANAMORPH COMP	2:1
- IMAGE FLIP	OFF
- MINI MON DATA	ON
- TXT WHITE LEV.	3
- TXT INVERSE	OFF
- EXIT	

The HD-IVS allows setting the HD-link speed to 23.976 FPS, 24 FPS, 25 FPS, 29.97 FPS and 30 FPS.



Please make sure that the selected HD link speed is supported by your recording device and monitor.

Move the cursor with the keys \uparrow and \downarrow to the line. HD LINK SPEED \rightarrow Photo. Pressing the key \rightarrow will switch from 23.976 FPS to 30 FPS and back to 23.976 FPS. The key \leftarrow will switch in opposite direction.

The LEDs on the keypad will follow the changes which are made in the menu and vice versa, if the setting is changed via the keypad, the on-screen menu will follow.

5.5.4 HD Link Mode

MENU VIDEO ADJUST		
-	FLICKERFREE	OFF
-	EXPOSURE	180°
-	HD LINK SPEED	24.00
-	HD LINK MODE	HD422I
-	ANAMORPH COMP	2:1
-	IMAGE FLIP	OFF
-	MINI MON DATA	ON
-	TXT WHITE LEV.	3
-	TXT INVERSE	OFF
-	EXIT	

The HD-IVS allows using either a progressive, interlaced or segmented image transfer mode.



Please make sure that the selected HD link speed is supported by your recording device and monitor.

Move the cursor by using the keys ▲ and ▼ to the line.HD LINK MODE → Photo. Pressing the key ► will switch from progressive (P) to interlaced (I) and segmented (S). The key ◀ will switch in opposite direction.

The LEDs in the keypad will follow the changes which are made in the menu and vice versa, if the setting is changed via the keypad, the on-screen menu will follow.

5.5.5 Anamorphic De-Squeeze

The HD-IVS can de-squeeze images from anamorphic lenses in a morphing factor of 2 or 1.3.

If a factor 2 anamorphic lens is used, the IVS will squeeze the image by a factor of 2, center it on the monitor screen and fills the rest with black lines. For this, it is necessary to use a 4:3 IVS lens.

If a factor 1.3 anamorphic lens is used, the image is squeezed by a factor 0.75, again centered on the monitor screen and the rest of the screen is filled with black. For this, it is necessary to use a 16:9 IVS lens.

MENU VIDEO ADJUST	
- FLICKERFREE	OFF
- EXPOSURE	180°
- HD LINK SPEED	24.00
- HD LINK MODE	HD422I
- ANAMORPH COMP	2:1
- IMAGE FLIP	OFF
- MINI MON DATA	ON
- TXT WHITE LEV.	3
- TXT INVERSE	OFF
- EXIT	

Move the cursor by using the keys ▲ and ▼ to the line ANAMORPH COMP

→ Photo.

Pressing the key ► will switch from OFF to 2:1 to 1.3:1 and OFF again. The key ◀ will switch in opposite direction.

5.5.6 Image Flip

The HD-IVS can flip the image on the screen vertically and horizontally if necessary.

MENU VIDEO ADJUST	
- FLICKERFREE	OFF
- EXPOSURE	180°
- HD LINK SPEED	24.00
- HD LINK MODE	HD422I
- ANAMORPH COMP	2:1
- IMAGE FLIP	OFF
- MINI MON DATA	ON
- TXT WHITE LEV.	3
- TXT INVERSE	OFF
- EXIT	

Move the cursor by using the keys ▲ and ▼ to the line IMAGE FLIP → Photo.

Pressing the key ► will switch from OFF to horizontal (H), vertical (V), 180 ° rotated (H+V) and back to OFF. The key ◀ will switch in opposite direction.


Note: To avoid confusion, the HD-IVS will always power up in the mode IMAGE FLIP OFF.





5.5.7 Mini-Monitor Output as Normal Video or Video with Data

MENU VIDEO ADJUST		
-	FLICKERFREE	OFF
-	EXPOSURE	180°
-	HD LINK SPEED	24.00
-	HD LINK MODE	HD422I
-	ANAMORPH COMP	2:1
-	IMAGE FLIP	OFF
-	MINI MON DATA	ON
-	TXT WHITE LEV.	3
-	TXT INVERSE	OFF
-	EXIT	

The mini monitor output can be programmed to have normal video or video with data.



If the on-screen menu control is on (green LED next to the Enter/Insert key  is on), there will always be data in this output. This is necessary because if the output is switched to data off, no insert would be available and therefore, it would be impossible to go back into the on-screen menu to change the settings.

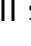Move the cursor by using the keys  and  to the line - MINI MON DATA → Photo. Pressing the key  or  will switch insertion of data in the mini monitor ON and OFF.

5.5.8 White Level

MENU VIDEO ADJUST	
- FLICKERFREE	OFF
- EXPOSURE	180°
- HD LINK SPEED	24.00
- HD LINK MODE	HD422I
- ANAMORPH COMP	2:1
- IMAGE FLIP	OFF
- MINI MON DATA	ON
- TXT WHITE LEV.	3
- TXT INVERSE	OFF
- EXIT	

This setting is used to change the brightness of all manually readable windows but the frame lines. Value 1 means dark gray, value three corresponds to bright white characters.

Move the cursor by using the keys ▲ and ▼ to the line - TXT WHITE LEV → Photo. By pressing the key ► the values for the brightness of the characters will increase beginning from 1 to 3, and after that back to 1. The key ◀ will decrease in the opposite direction.

5.5.9 Inverse

MENU VIDEO ADJUST	
- FLICKERFREE	OFF
- EXPOSURE	180°
- HD LINK SPEED	24.00
- HD LINK MODE	HD422I
- ANAMORPH COMP	2:1
- IMAGE FLIP	OFF
- MINI MON DATA	ON
- TXT WHITE LEV.	3
- TXT INVERSE	OFF
- EXIT	

This menu changes the appearance of all manually readable windows. The format markings are not changed. If inverse OFF is selected, the characters will appear white. If the background is BOXED it will appear black in this case. If inverse ON is selected, the characters will appear black. If the background is BOXED it will appear white in this case.

Move the cursor by using the keys ▲ and ▼ to the line - INVERSE → Photo. The keys ► or ◀ will switch between ON and OFF.

5.5.10 Exit


MENU VIDEO ADJUST	
- FLICKERFREE	OFF
- EXPOSURE	180°
- HD LINK SPEED	24.00
- HD LINK MODE	HD422I
- ANAMORPH COMP	2:1
- IMAGE FLIP	OFF
- MINI MON DATA	ON
- TXT WHITE LEV.	3
- TXT INVERSE	OFF
- EXIT	

Use exit to return to the main menu.

Move the cursor by using the keys \blacktriangle and \blacktriangledown to the line – EXIT → Photo and press the key \blacktriangleright or \blacktriangleleft .

Note: Pressing the Enter/Insert key for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.6 Format Marking Menu

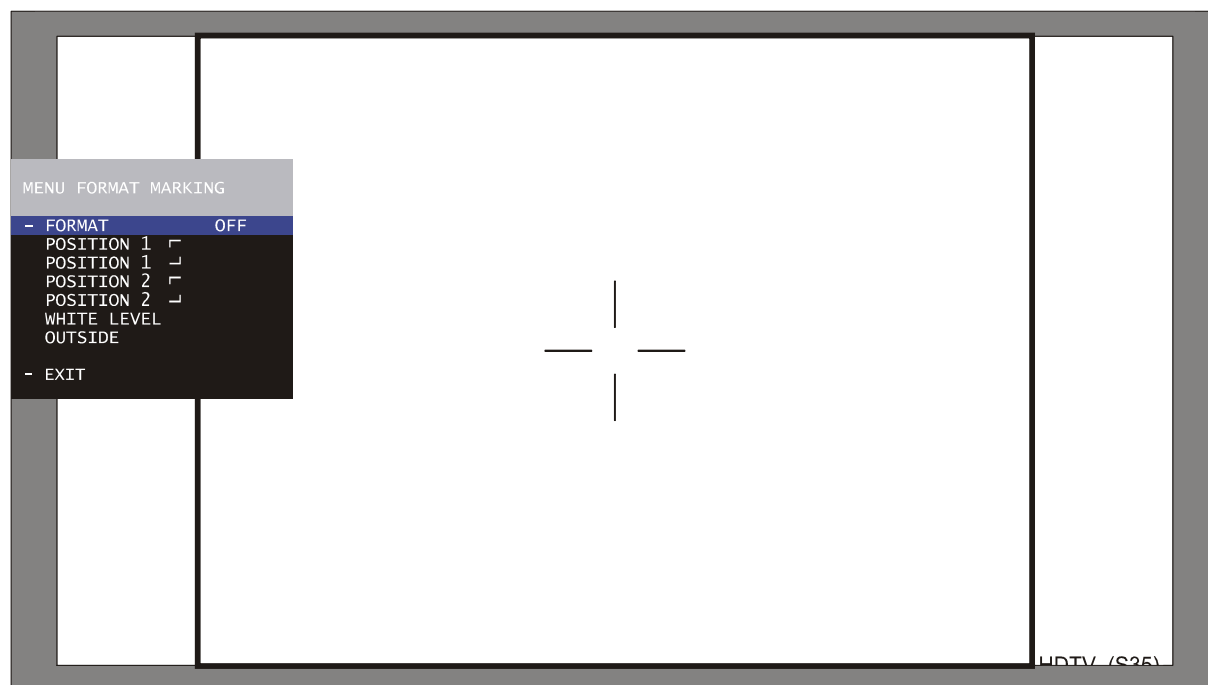

The HD-IVS can insert two different format markings electronically in the video image, either individually or simultaneously. The position of these format markings can be set anywhere on the screen, to line up exactly with the ground glass markings. The brightness is adjustable in four steps and the area outside of one format marking can be electronically darkened.



All changes are immediately active.

Check all settings on the connected monitor.

- Enter the Format Marking submenu from the main menu.


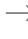
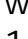
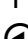
5.6.1 Activate Format Markings

If the electronic format markings are not parallel to the ground glass format markings, readjust the CCD chip with the alignment screw, as shown in chapter 4.3 Alignment of the Image Position (X-, Y- and Rotation)

Note: Only active frame lines can be positioned. If no frame line is on (FORMAT OFF), no position line can be reached with the cursor. If Format 1 is on, only - POSITION 1 can be reached with the cursor. Only if format 1 & 2 is selected, all - POSITION lines can be used.

MENU FORMAT MARKING		
-	FORMAT	OFF
	POSITION 1	┐
	POSITION 1	└
	POSITION 2	┐
	POSITION 2	└
	WHITE LEVEL	
	OUTSIDE	
-	EXIT	

It is possible to have no format marking (OFF), format marking number one (1), format-marking number two (2) or both format markings at the same time (1 & 2) on display.

Move the cursor with the keys  and  to the line - FORMAT → Photo. Pressing the key  will switch from OFF to 1 to 2 to 1 & 2 and back to OFF, the key  will switch in the opposite direction.















5.6.2 Position - Positioning of the Format Marks



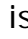



MENU FORMAT MARKING		
-	FORMAT	1
-	POSITION 1	┐ <> ^VE
-	POSITION 1	└
	POSITION 2	┐
	POSITION 2	└
-	WHITE LEVEL	2
-	OUTSIDE	VID
-	EXIT	

The format markings can be adapted to every different format. The format markings on the ground glass serve as a reference.





To align format 1, make sure that FORMAT 1 or FORMAT 1&2 is selected. To align format 2, make sure that FORMAT 2 or FORMAT 1&2 is selected.

To match the electronic format markings with the ground glass markings proceed as follows:

- Point the film camera towards a bright object so that the format markings on the ground glass are clearly visible.
- Move the cursor by using the keys  and  to the line - POSITION 1  → Photo or - POSITION 2  → Photo, depending on whether format 1 or format 2 should get adjusted. The symbol  indicates that the top line and the left line can be moved. To move the top line up and down, use the keys  and , to move the left line left and right use the keys  and . When the desired position is set, press the Enter/Insert key .
- Move the cursor by using the keys  and  to the line - POSITION 1  → Photo or - POSITION 2  → Photo, depending on whether format 1 or




format 2 should get adjusted. The symbol  indicates that the bottom line and the right line can be moved. To move the bottom line up and down, use the keys  and , to move the right line left and right use the keys  and . When the desired position is set, press the Enter/Insert key .

5.6.3 White Level - Setting the Brightness of the Format Markings

MENU FORMAT MARKING		
-	FORMAT	2
	POSITION 1	
	POSITION 1	
-	POSITION 2	
-	POSITION 2	
-	WHITE LEVEL	2
-	OUTSIDE	VID
-	EXIT	



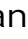

The brightness of the format markings can be set to black (0), dark gray (1), and light gray (2) or white (3).

Note: This function is only available if at least one format marking is activated.

Move the cursor by using the keys  and  to the line - WHITE LINE → Photo. Pressing the key  will switch the settings form 0 to 1 to 2 to 3 and back to 0, pressing the

key  will switch the settings in the opposite direction.

5.6.4 Outside - Darkening the Area outside of the Format Markings

MENU FORMAT MARKING		
-	FORMAT	2
	POSITION 1	
	POSITION 1	
-	POSITION 2	
-	POSITION 2	
-	WHITE LEVEL	2
-	OUTSIDE	VID
-	EXIT	

Note: This function is only available if at least one format marking is activated.

The brightness of the area outside of one format marking can be reduced electronically to emphasize the important image area.

Move the cursor ➤ with the keys ⬆ and ⬇ to the line - OUTSIDE. Pressing the key ▶ will switch from no shading (VID), light shading (LIGHT), dark shading (DARK) to BLACK and back to VID. Pressing the key ◀ will switch the settings in the opposite direction.

5.6.5 Exit


MENU FORMAT MARKING			
-	FORMAT		2
	POSITION 1	┐	
	POSITION 1	└	
-	POSITION 2	┐	
-	POSITION 2	└	
-	WHITE LEVEL		2
-	OUTSIDE		VID
-	EXIT		

Use exit to return to the main menu.

Move the cursor by using the keys ⬆ and ⬇ to the line - EXIT → Photo and press the key ▶ or ◀.

Note: Pressing the Enter/Insert key for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.7 Compare/Store Menu

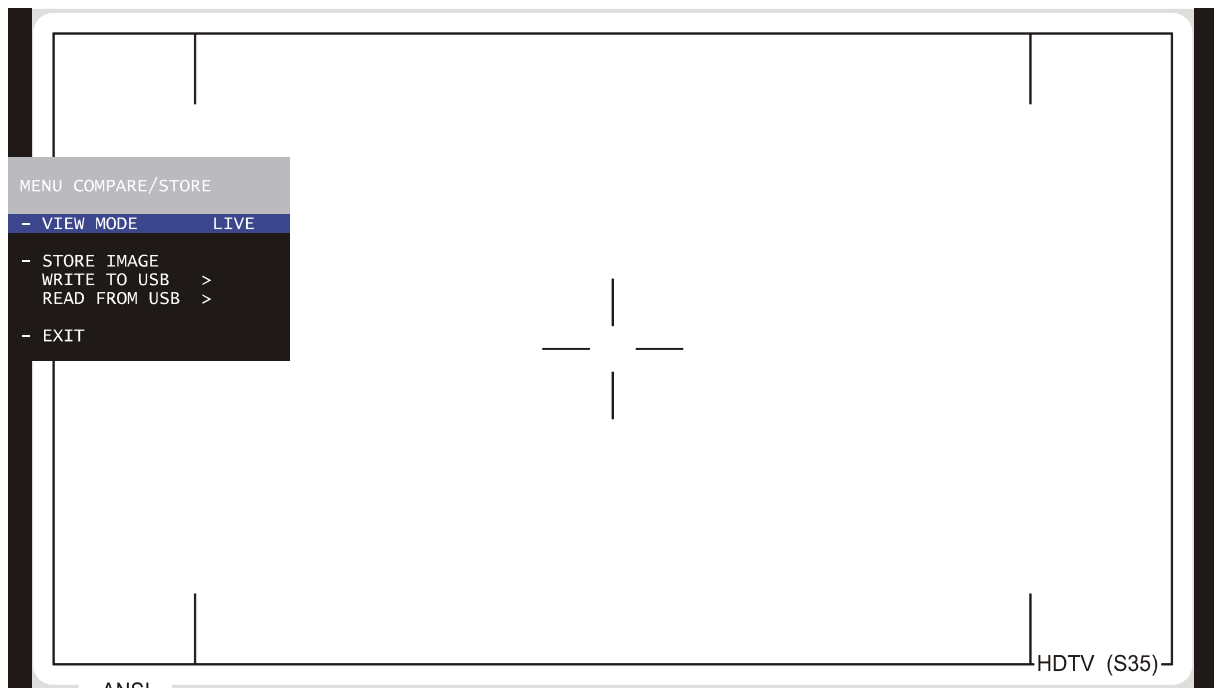

The HD-IVS can store one particular image to its internal memory or up to 9 images to an USB stick, display them or overlay them against the live image in front of the camera to compare both images.




All changes are immediately active.

Check all settings on the connected monitor.

- Enter the Compare/Store submenu from the main menu.

5.7.1 View Mode

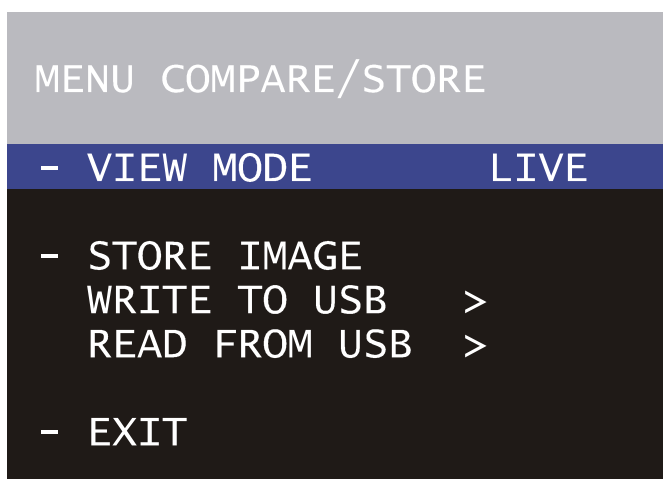

VIEW MODE allows selecting whether a live image, a stored image or both images alternating are displayed. (Please see next chapter 5.7.2 Store Image how to store an image onto the internal memory.)

A stored image can only be an image on the internal memory. If an image on the USB stick is to be used either for the stored or the compare mode, please load this image onto the internal memory first. Please

see chapter 5.7.4 for a description on how to transfer images from the USB stick into the internal memory.


Move the cursor by using the keys ▲ and ▼ to the line - VIEW MODE → Photo. Pressing the key ► will switch from LIVE to STORED to COMP and back to LIVE. The key ◀ will switch in the opposite direction.


If LIVE is selected, the actual image will be displayed. If STORED is selected, an image, which was stored previously, will be displayed and if COMP is selected, a live image and a stored image will be mixed to show the difference between the images.

The stored image is available until a new image is stored or until the HD-IVS power was shut down.

Please note that this setting is always in the LIVE mode after power up in order to avoid a frozen image on the screen.

5.7.2 Store Image to Internal Memory

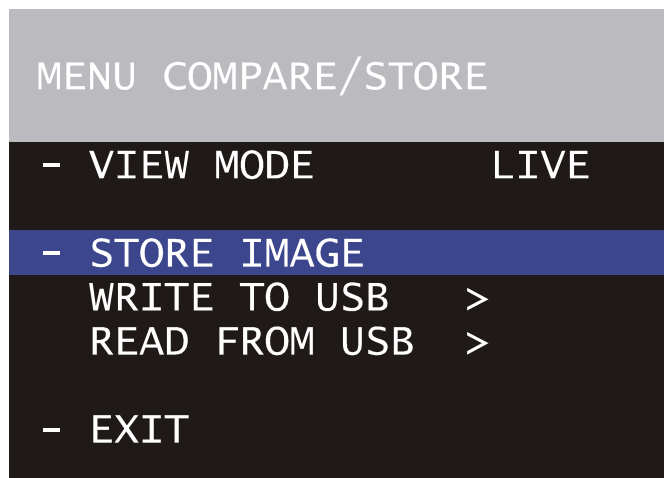


The HD-IVS can store an image to its internal memory, display that or overlay it against the live image in front of the camera to compare both images. Parallel to pressing the Enter/Insert key  shortly (less than 1.5 seconds), the STORE IMAGE command in the on-screen program mode will grab one particular image, no matter of the selected display mode. (Please see the last chapter 5.7.1 View Mode for information on different display modes, e.g. Live, Store and Compare).

Move the cursor by using the keys ▲ and ▼ to the line - STORE IMAGE → Photo. Pressing the key ► or ◀ will store the image. The word **DONE** will appear for a few seconds to show that an image was stored.

The stored image is available until a new image is stored or until the HD-IVS power was shut down.

5.7.3 Write Image to USB Stick

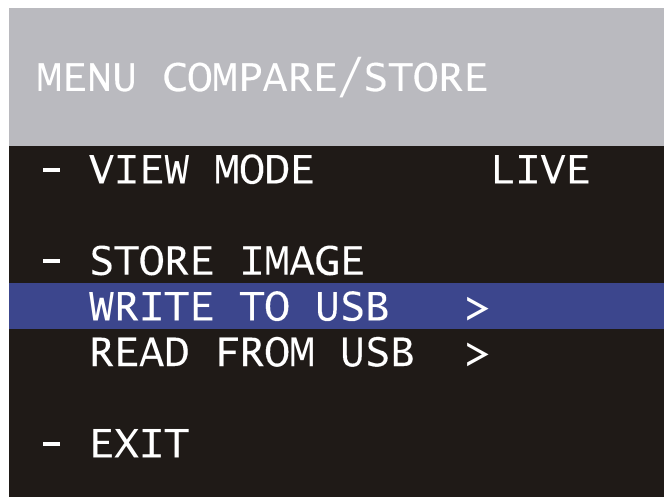






The HD-IVS can write up to 10 images to an USB stick either as JPG or TIF files. This way, they can be transferred to a computer.

To write an image onto the USB stick it is necessary to store it onto the internal memory first and transfer it to the USB stick in a second step.


Additionally to the JPG or TIF file, a raw file in the YUV

format will be written onto the USB stick. The YUV format is the raw format of the image sensor. This file can be loaded back into the IVS internal memory and can be used for the STORED or COMP function which was described in chapter 5.7.1 View mode.

Parallel to pressing the Enter/Insert key  shortly (less than 1.5 seconds), the store image command in the on-screen program mode will grab an image, independently of the selected display mode. (Please see last chapter 5.7.1 View Mode for information on different display modes, e.g. Live, Store and Compare).

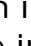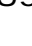Make sure that an USB stick is inserted in the USB port. Move the cursor by using the keys  and  to the line - STORE IMAGE. Pressing the key  or  will store the image. The word **DONE** will appear for a few seconds to show that an image was stored. However, this will cause the image to be stored in the internal memory. The menu will change automatically into the write to USB sub menu.

WRITE AS

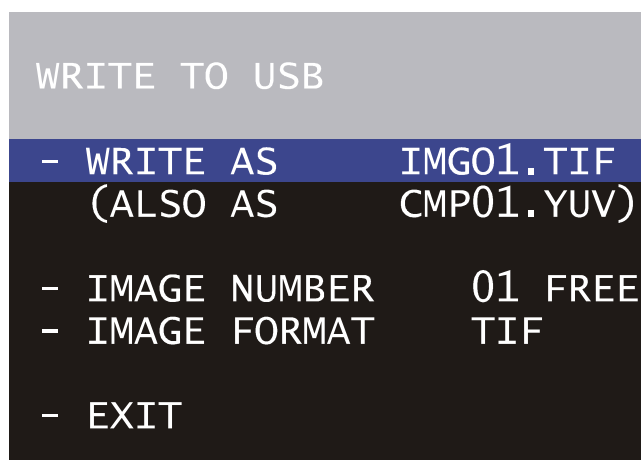

Calling the Write as a function will transfer the image from the internal memory to the USB stick.




The line IMAGE NUMBER will show whether this number is still free or is already being used. If it is already being used, the file old will be overwritten.

Move the cursor by using the keys ▲ and ▼ to the line – WRITE AS
→ Photo. If the image number and file format is OK, press the key ► or ◀.
This will transfer the image from the internal memory onto the USB stick
which will take several seconds.

The word **DONE** will appear for a few seconds to show that an image was
written to the USB stick. Do not unplug the USB stick while the image is
transferred to the USB stick.

IMAGE NUMBER

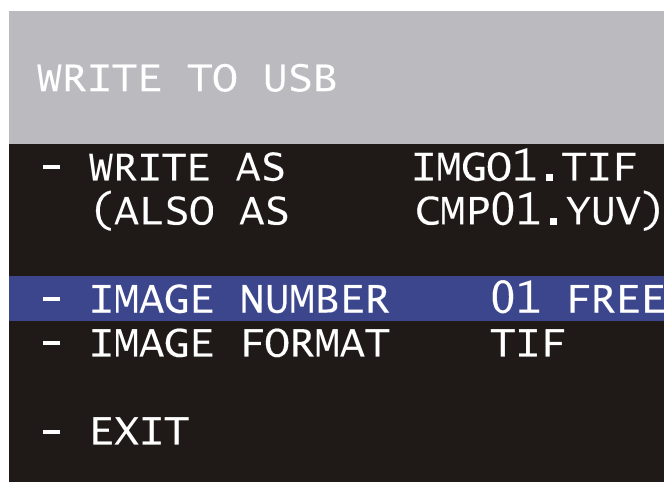


This will determine the file
name for the store process. It
can be set between 01 and 10.

Move the cursor by using the
keys ▲ and ▼ to the line –
IMAGE NUMBER → Photo.
Pressing the key ► or ◀ will
increase or decrease the file
number.

The information whether the
file is FREE or already USED on
the USB stick is displayed

IMAGE FORMAT

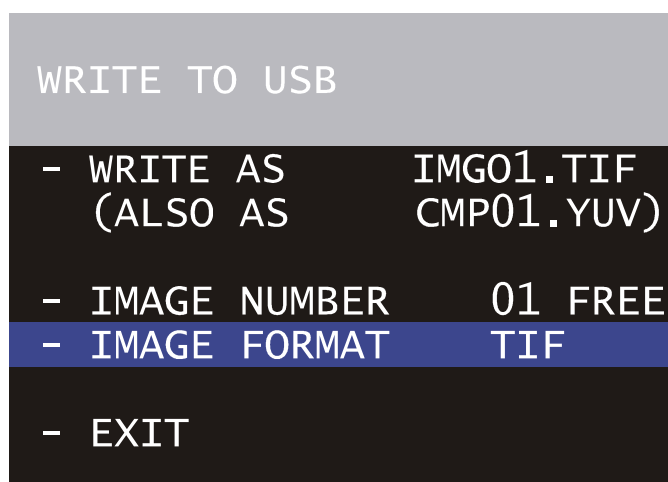


This setting will set the file
format either to JPG or to TIF.





Move the cursor by using the
keys ▲ and ▼ to the line –
IMAGE FORMAT → Photo.
Pressing the key ► or ◀ will
switch between the two
formats.

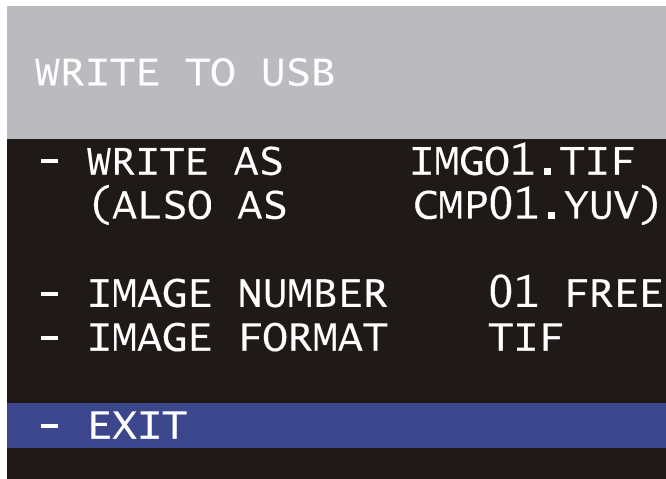
Note: Parallel to the selected file type the image will be also stored in the
YUV format, which is the internal format of the image sensor. This
file can be used for the STORED and COMP function as described in
chapter 5.7.1 View Mode

EXIT




This setting will cause the software to return the menu compare/store.

Move the cursor by using the keys  and  to the line – EXIT → Photo and press the key  or .


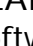
Note: Pressing the Enter/Insert key  for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.7.4 Read from USB

In order to use an image on the USB stick for the STORED or COMP feature, it is necessary to transfer it from the USB stick into the internal memory first and apply the stored or compare software in a second step. See chapter 5.7.1 View Mode for details. For this, the files in the YUV format (raw format of the image sensor) have to be used, which are stored on the USB stick parallel to the selected file format (TIF or JPG). See chapter 5.7.3 Store image to USB stick.

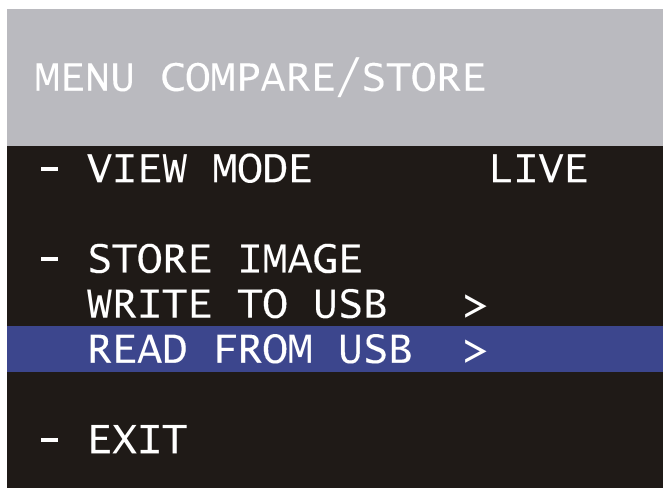

The line READ FROM USB will transfer one file in YUV format from the USB stick into the internal memory.


Move the cursor by using the keys  and  to the line – READ FROM USB → Photo. The software will go to the sub menu READ FROM USB



The current image in the internal memory will be overwritten.

This line can only be highlighted and used if an USB stick is in the USB Port.


READ

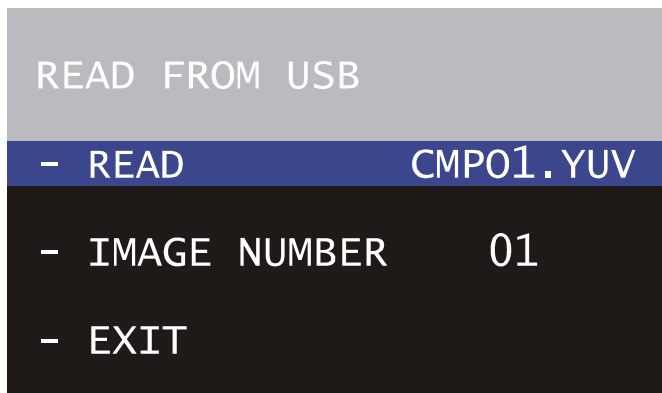

Move the cursor by using the keys \uparrow and \downarrow to the line – READ → Photo and press the key \rightarrow or \leftarrow . This will transfer the YUV image from the USB stick to the internal memory which will take several seconds.

The word **DONE** will appear for a few seconds to show that an image was written to the internal memory. Do not unplug the USB stick while the image is transferred to the internal memory.


IMAGE NUMBER

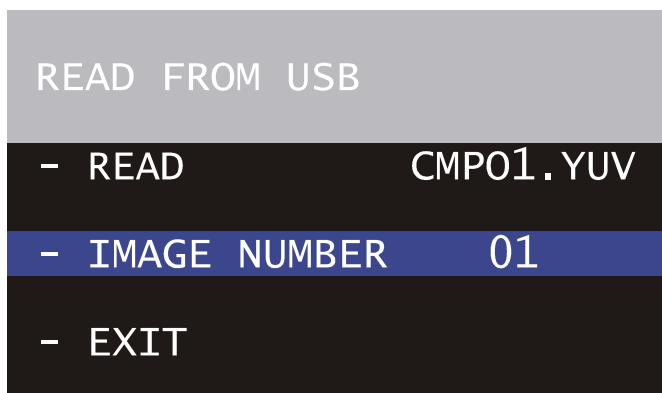

This setting will determine the file which will be loaded. It can be set between 01 and 10.

Move the cursor by using the keys \uparrow and \downarrow to the line – IMAGE NUMBER → Photo. Pressing the key \rightarrow or \leftarrow will increase or decrease the file number.

EXIT

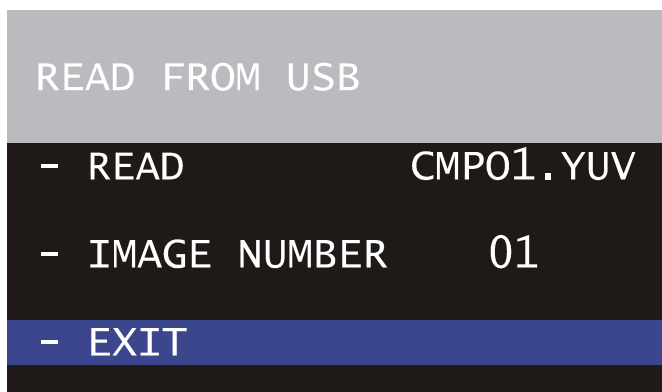


This setting will cause the software to return to the menu compare/store.




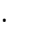
Move the cursor by using the keys \uparrow and \downarrow to the line – EXIT → Photo and press the key \rightarrow or \leftarrow .

Note: Pressing the Enter/Insert key ENTER/INSERT for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

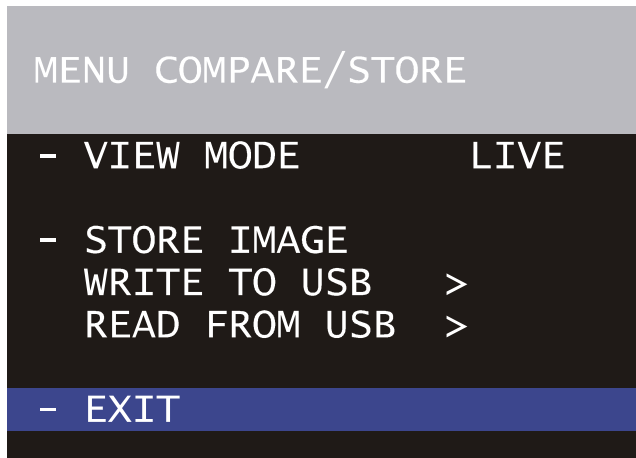5.7.5 Exit



Use EXIT to return to the main menu.

Move the cursor by using the keys  and  to the line - EXIT → Photo and press the key  or .

Note: Pressing the Enter/Insert key for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.8 System, LDS and Status Info



The HD-IVS can insert the camera system, Lens Data (LDS) and status information into the video image.


The setting SYSTEM INFO inserts information from the film camera such as

- Movement open
- Async
- Inching
- Low Battery
- Dust Check
- etc


When the status line is switched on, an additional line will appear, similar to this:

MOVEMENT OPEN

The Lens Data Info will insert information regarding the lens and the lens settings such as:

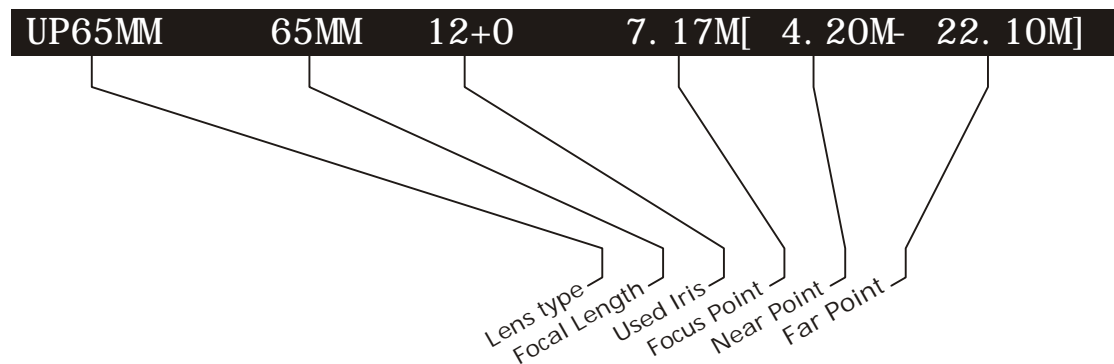


Additionally, it is possible to insert camera status information in a separate line. A line similar to this will appear:

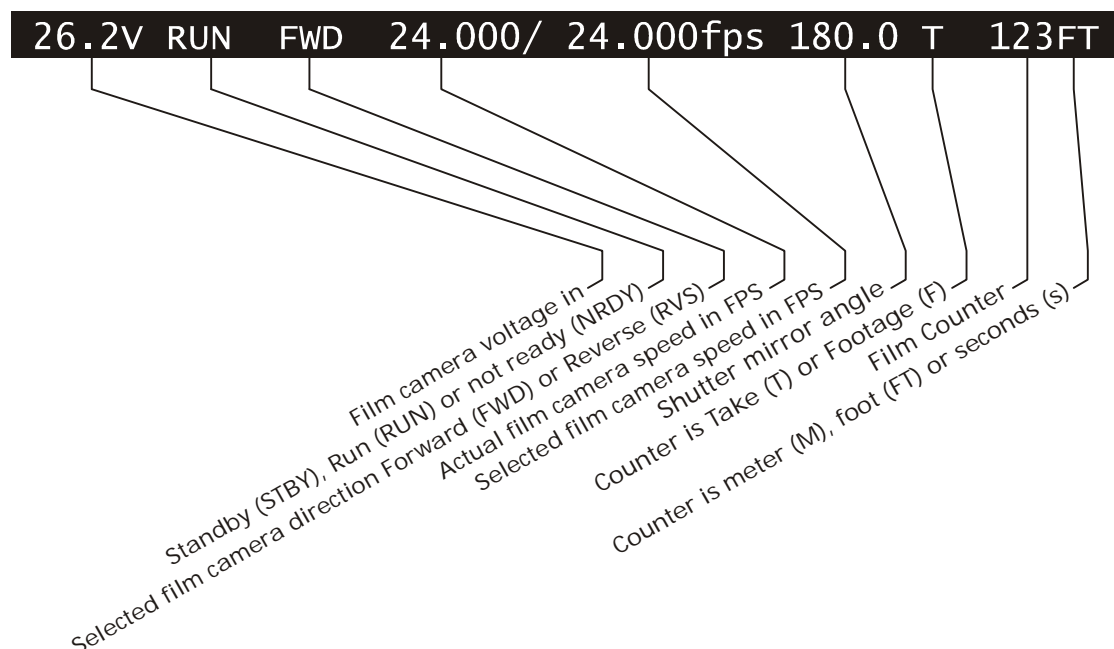

The film counter gets its data from the film camera. Therefore the data on the HD-IVS is identical to the data in the film camera.

If the film counter is in the take mode, the data in meter, foot or seconds of the last take are displayed. In the mode footage, the added length of the film through the camera in meter or feet is displayed.

Note: During programming the inserted data is not being fully updated (e.g. Frame Counter Information). To get the information updated, leave the on-screen display menu by pressing the Enter/Insert key  for more than three seconds.

After powering the film camera up, no mirror shutter angle is displayed. Data will appear only after some revolutions of the mirror shutter.

System info, LDS info and Status info are displayed together as a package. If all three lines are on, the upper line will always be status, the center LDS and the lower line system. Positioning always affects all lines.

Like all readable information, the data is inserted as a window on the monitor image. The system, LDS and status window can be switched on and off independently. Background and position can be altered without affecting the settings of other windows.

The adjustment of the white level of the inserted data is described in chapters 5.5.8 White Level, an inverse display is described in chapters 5.5.9 Inverse.



All changes are immediately active.

Check all settings on the connected monitor.

- Enter the System/LDS/Status submenu from the main menu.

5.8.1 System Info

MENU SYSTEM/LDS/STATUS		
-	SYSTEM INFO	ON
-	LDS INFO	ON
-	STATUS INFO	ON
-	PLACEMENT	LINE
-	POSITION	
-	BACKGROUND	VIDEO
-	FILM COUNTER	TAKE
-	EXIT	M/FT

This sub menu setting switches the insertion of camera system data ON and OFF independently of other inserted data.

Move the cursor by using the keys ▲ and ▼ to the line - SYSTEM LINE → Photo. The keys ► or ◀ switch the insertion on and off.

A line similar to the one below will appear:

MOVEMENT OPEN

Placement, Position and Background is only available if at least one of the three lines is on. Film Counter is only available if the Status Line is on.

To clear this message, eliminate the cause of the problem. In this example close the movement block.

5.8.2 LDS Info

MENU SYSTEM/LDS/STATUS	
- SYSTEM INFO	ON
- LDS INFO	ON
- STATUS INFO	ON
- PLACEMENT	LINE
- POSITION	
- BACKGROUND	VIDEO
- FILM COUNTER	TAKE M/FT
- EXIT	

This sub menu setting switches the insertion of Lens Data Information (LDS) ON and OFF independently of other inserted data.

Move the cursor by using the keys ▲ and ▼ to the line - LDS LINE → Photo. The keys ► or ◀ switch the insertion on and off.

A line similar to the one below will appear:

UP65MM 65MM 12+0 7. 17M[4. 20M- 22. 10M]

Placement, Position and Background is only available if at least one of the three lines is on. Film Counter is only available if the Status Line is on.

5.8.3 Status Info

MENU SYSTEM/LDS/STATUS	
- SYSTEM INFO	ON
- LDS INFO	ON
- STATUS INFO	ON
- PLACEMENT	LINE
- POSITION	
- BACKGROUND	VIDEO
- FILM COUNTER	TAKE M/FT
- EXIT	

This sub menu setting switches the insertion of camera status data ON and OFF independently of other inserted data.

Move the cursor by using the keys ▲ and ▼ to the line - STATUS INFO → Photo. The keys ► or ◀ switch the insertion on and off.

A line similar to the one below will appear:

25.7V RUN FWD 24.000/24.000fps 180.0 T 123FT

Placement, Position and Background is only available if at least one of the three lines in on, Film Counter only if Status Line is on.


5.8.4 Placement

MENU SYSTEM/LDS/STATUS		
-	SYSTEM INFO	ON
-	LDS INFO	ON
-	STATUS INFO	ON
-	PLACEMENT	LINE
-	POSITION	
-	BACKGROUND	VIDEO
-	FILM COUNTER	TAKE
-	EXIT	M/FT

The system, LDS and status window can be positioned either as lines on the screen (mode LINE) or on the right hand side of the screen (mode BLOCK), which is particularly helpful if a 4:3 image is used.

POSITION is only available if at least one of the three lines is on.

Move the cursor by using the keys \uparrow and \downarrow to PLACEMENT \rightarrow Photo. Change the placement mode from LINE to BLOCK and back with the keys \rightarrow or \leftarrow .

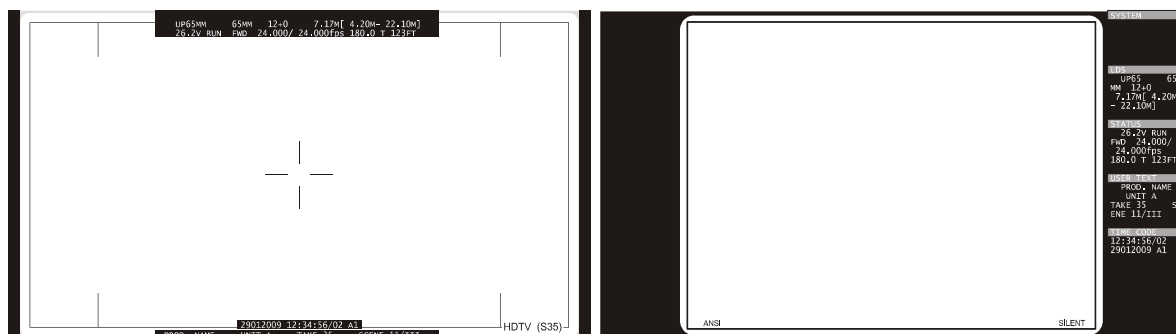

The text layout in mode BLOCK is designed so that the readability is best. Therefore the order of information is different than in the LINE mode.

5.8.5 Position

MENU SYSTEM/LDS/STATUS	
- SYSTEM INFO	ON
- LDS INFO	ON
- STATUS INFO	ON
- PLACEMENT	LINE
- POSITION	
- BACKGROUND	VIDEO
- FILM COUNTER	TAKE M/FT
- EXIT	

Note: POSITION is only available if at least one of the three lines is on and PLACEMENT is in mode LINE (see last chapter 5.8.4 Placement)

The info window can be positioned anywhere on the monitor screen.

Move the cursor by using the keys ▲ and ▼ to the line - POSITION → Photo. Call the positioning mode with the keys ► or ◀. The following menu is displayed on the screen:

-> - POSITION ^v E

The keys ▲ and ▼ move the info window up and down. When the desired position has been set, confirm by pressing the Enter/Insert key .

5.8.6 Background

MENU SYSTEM/LDS/STATUS	
- SYSTEM INFO	ON
- LDS INFO	ON
- STATUS INFO	ON
- PLACEMENT	LINE
- POSITION	
- BACKGROUND	VIDEO
- FILM COUNTER	TAKE M/FT
- EXIT	

The background of the info window can be set electronically to black in normal display mode or to white in inverse mode (BOXED) to improve the readability. If this is not activated, the area around the text is the normal video image (VIDEO).

Move the cursor by using the keys ▲ and ▼ to the line - BACKGROUND → Photo. The key ► or ◀ switch between BOXED and VIDEO.

5.8.7 Film Counter

MENU SYSTEM/LDS/STATUS		
-	SYSTEM INFO	ON
-	LDS INFO	ON
-	STATUS INFO	ON
-	PLACEMENT	LINE
-	POSITION	
-	BACKGROUND	VIDEO
-	FILM COUNTER	TAKE
		M/FT
-	EXIT	

FILM COUNTER is tied to the footage counter of the film camera. It always displays the values which are in the camera. Therefore there is no set or reset of film counter data on the HD-IVS.

Move the cursor by using the keys ▲ and ▼ to the line - FILM COUNTER → Photo. The keys ► will switch from TAKE (M/FT), TAKE (SEC) to FTGE and back to TAKE (M/FT). The key ◀ will switch in the reverse order.

Note: The scale units meter or feet is taken over from the setting of the camera. If meters are selected in the camera, the data in the HD-IVS will also be displayed in meters.

5.8.8 Exit


MENU SYSTEM/LDS/STATUS		
-	SYSTEM INFO	ON
-	LDS INFO	ON
-	STATUS INFO	ON
-	PLACEMENT	LINE
-	POSITION	
-	BACKGROUND	VIDEO
-	FILM COUNTER	TAKE
		M/FT
-	EXIT	

Use EXIT to return to the main menu.

Move the cursor by using the keys ▲ and ▼ to the line - EXIT → Photo and press the key ► or ◀.

Note: Pressing the Enter/Insert key for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.9 User Text Menu

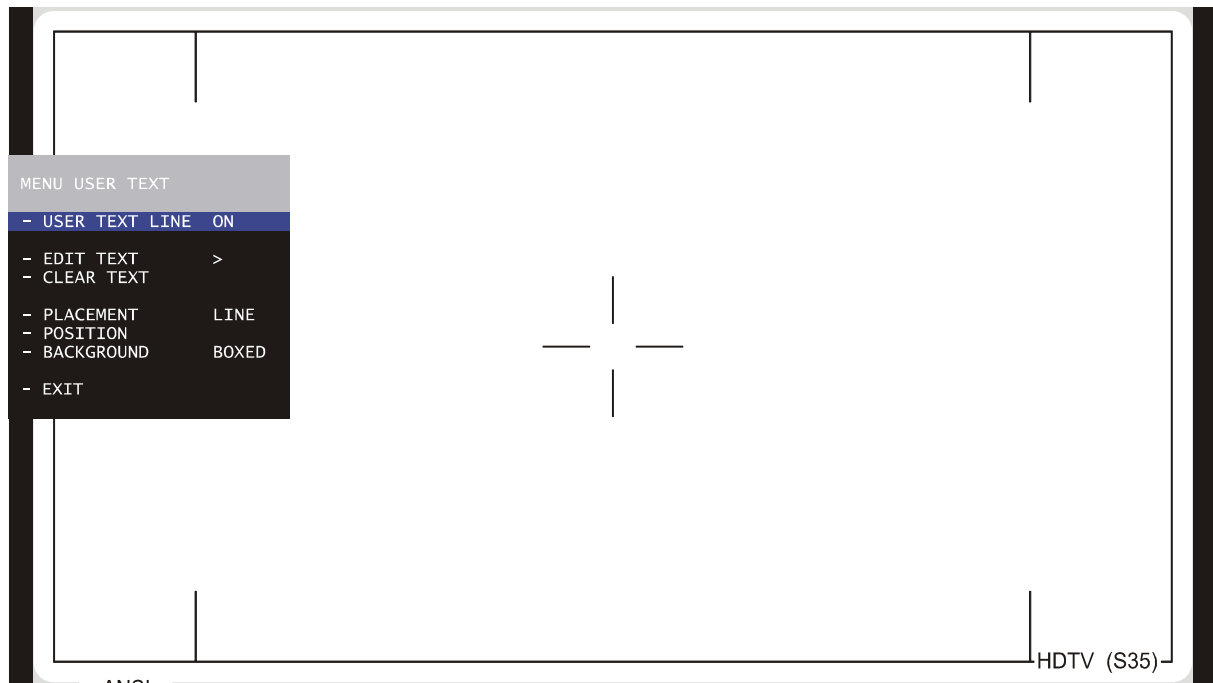

The HD-IVS can insert additional text into the video image, for example the production name or a scene number. The text can be entered on the HD-IVS using the EDIT TEXT facility.

If information is stored in the text memory, it will remain there until the memory is cleared or it is overwritten by new information, even if the HD-IVS or the camera is switched off or disconnected from the power supply. This enables for example a camera rental house to store information, which is then available to the production team. This might for example be the production name.

Like all manually readable information, the data is inserted as a window on the monitor image. The user text window can be switched on and off independently. Background, position and character format can be altered without affecting the settings of other windows.

This additional line shows the text information, similar the one below:

- PROD. NAME UNIT A TAKE 35 SCENE 11/III-

The adjustment of the white level of the inserted data is described in chapters 5.5.8 White Level, an inverse display is described in chapters 5.5.9 Inverse.



All changes are immediately active.

Check all settings on the connected monitor.

- Enter the User Text submenu from the main menu.

5.9.1 User Text Line

MENU USER TEXT		
-	USER TEXT LINE	ON
-	EDIT TEXT	>
-	CLEAR TEXT	
-	PLACEMENT	LINE
-	POSITION	
-	BACKGROUND	BOXED
-	EXIT	

This sub menu setting switches the insertion of additional text ON and OFF independently of other inserted data.

Move the cursor by using the keys ▲ and ▼ to the line - USER TEXT LINE → Photo. The keys ► or ◀ switch the insertion on and off.

The default text is in dotted characters.

5.9.2 Edit Text


MENU USER TEXT		
-	USER TEXT LINE	ON
-	EDIT TEXT	>
-	CLEAR TEXT	
-	PLACEMENT	LINE
-	POSITION	
-	BACKGROUND	BOXED
-	EXIT	

The text can be edited on the HD-IVS without the use of additional devices.

Move the cursor by using the keys ▲ and ▼ to the line - EDIT TEXT → Photo. Activate the edit menu with the keys ► or ◀.

This will lead into the editing submenu.

The following menu is displayed on the screen:

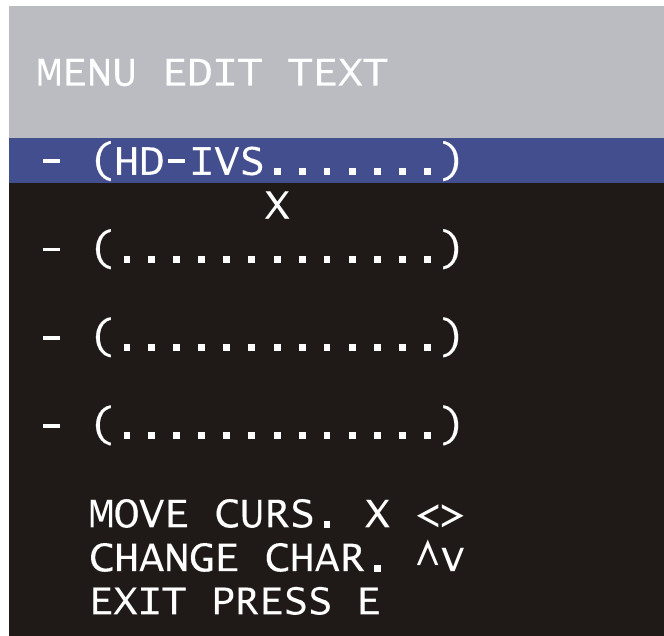


The **X**-Symbol shows, which position in the user text line is to be changed. To move this text inserter cursor **X** left and right, use the keys **▶** and **◀**.

To change the character on the position of the text inserter cursor **X**, use the keys **▲** and **▼**.

After the necessary character was found, move the text inserter cursor **X** to the next position.

To leave the text edit mode, press the Enter/Insert key **ENTER/INSERT**. This will lead back to the user text menu.

5.9.3 Clear Text

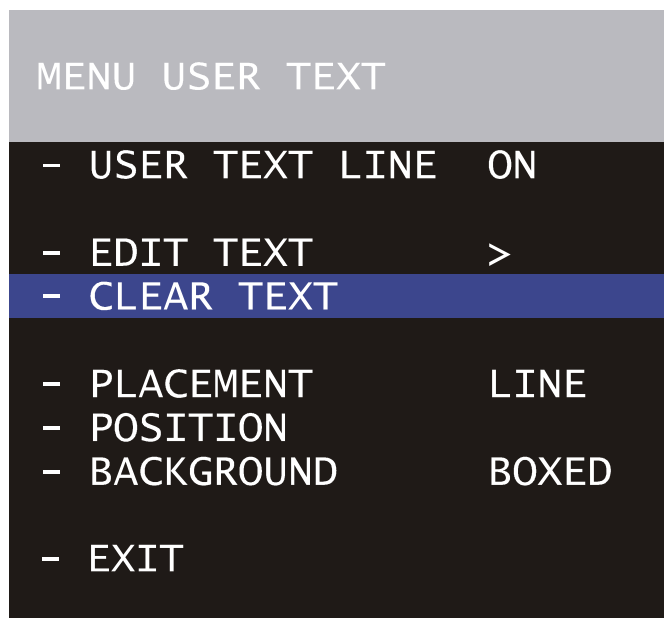

The user text line can be cleared on the HD-IVS without an external device. When the text is cleared, the default line (a dotted line) will appear.



A cleared line cannot be recalled any more.

Move the cursor by using the keys **▲** and **▼** to the line - CLEAR TEXT → Photo. Pressing the keys **▶** or **◀** will clear the line.

The default text is in dotted characters.


5.9.4 Placement

MENU USER TEXT		
-	USER TEXT LINE	ON
-	EDIT TEXT	>
-	CLEAR TEXT	
-	PLACEMENT	LINE
-	POSITION	
-	BACKGROUND	BOXED
-	EXIT	

The user text window can be positioned either as lines on the screen (mode LINE) or on the right hand side of the screen (mode BLOCK), which is particularly helpful if a 4:3 image is used.

POSITION is only available if at least one of the three lines is on.

Move the cursor by using the keys \uparrow and \downarrow to the line - PLACEMENT \rightarrow Photo. Using the keys \rightarrow or \leftarrow will change the placement mode from LINE to BLOCK and back.

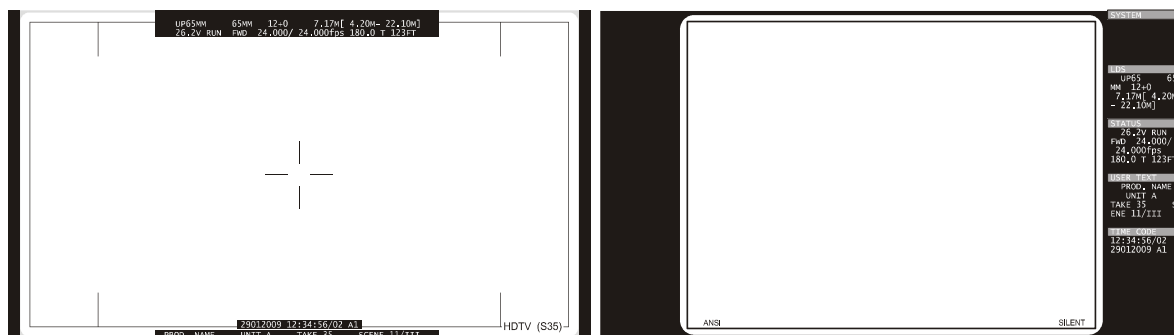

The text layout in mode BLOCK is designed so that the readability is best. Therefore, the order of information is different than in the LINE mode.

5.9.5 Position


MENU USER TEXT		
-	USER TEXT LINE	ON
-	EDIT TEXT	>
-	CLEAR TEXT	
-	PLACEMENT	LINE
-	POSITION	
-	BACKGROUND	BOXED
-	EXIT	

Note: POSITION is only available if Placement is in mode LINE (see last chapter 5.9.4 Placement)

The user text window can be positioned anywhere on the monitor screen.

Move the cursor by using the keys ▲ and ▼ to the line - POSITION → Photo. Activate the positioning mode with the keys ► or ◀. The following menu is displayed on the screen:

```
--> - POSITION      ^v E- -
```

The keys ▲ and ▼ move the window up and down. When the desired position has been set, confirm by pressing the Enter/Insert key .

5.9.6 Background

MENU USER TEXT		
-	USER TEXT LINE	ON
-	EDIT TEXT	>
-	CLEAR TEXT	
-	PLACEMENT	LINE
-	POSITION	
-	BACKGROUND	BOXED
-	EXIT	

The background of the window can be set electronically to black in normal display mode or to white in inverse mode (BOXED) in order to improve readability. If it is not activated, the area around the text is the normal video image (VIDEO).


Move the cursor by using the keys ▲ and ▼ to the line - BACKGROUND → Photo. The key ► or ◀ switch between BOXED and VIDEO.

5.9.7 Exit


MENU USER TEXT		
-	USER TEXT LINE	ON
-	EDIT TEXT	>
-	CLEAR TEXT	
-	PLACEMENT	LINE
-	POSITION	BOXED
-	BACKGROUND	
-	EXIT	

Use EXIT to return to the main menu.

Move the cursor by using the keys ▲ and ▼ to the line – EXIT → Photo and press the keys ► or ◀.

Note: Pressing the Enter/Insert key  for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.10 GGC

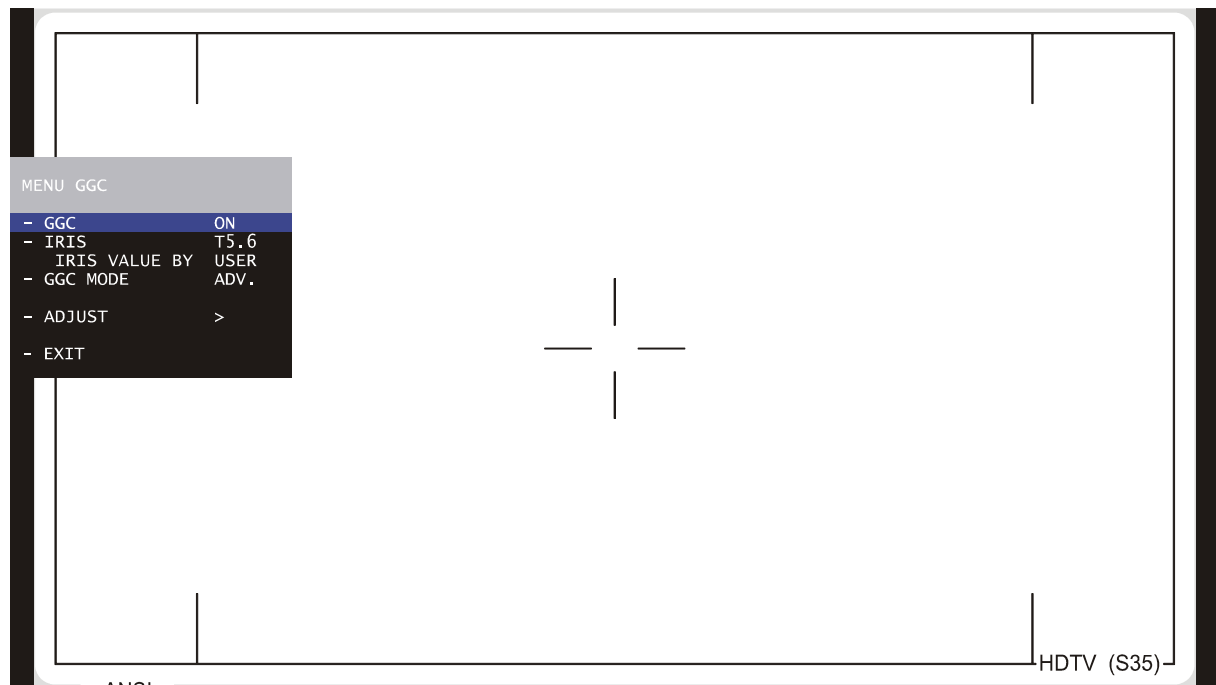

All video assists capture the image they see on the ground glass of the film camera; this ensures that framing and the impression of depth of field are identical between the film and the video assist image. The ground glass is an integral part of the optical viewfinder, a feature of 35 mm film cameras much loved by camera operators. Unfortunately, the ground glass also creates a visible texture on traditional video assists. By recording one or three so called calibration images of neutral white whenever a new ground glass is placed into the camera or an extreme wide angle camera lens is used, the precise ground glass texture is set for the HD-IVS, which then can use its powerful image processor to remove it from the images. This Ground Glass Cancellation (GGC) technology delivers clean and sharp preview images without any distracting texture.

The visibility of the ground glass texture depends on the f-stop of the film camera lens. It is more visible if the camera lens is stopped down. To get the best possible cancellation of the texture, it is necessary to record a series of three calibration images at different f-stops and to apply one of the three calibration images depending on the actually used f-stop. This is called advanced mode.

As the recording of the three calibration images in the advanced mode does take some time, there is also a so called basic mode, where only one calibration image is necessary.

For more details on basic and advanced mode see chapter 5.10.3 GGC Mode. Please see also the camera manuals for details on the Lens Data System and the Lens Control System.

Regardless if one or three calibration images are recorded, it is necessary to have a completely white object in front of the film camera which is evenly illuminated with sufficient light (eg. 4,500 Lux or 400 Foot-candles which equals f-stop 5.8 for a 100 ASA film at 24 FPS and 180° shutter).



All changes are immediately active.

Check all settings on the connected monitor.

- Enter the GGC submenu from the main menu.

5.10.1 Ground Glass Cancellation ON/OFF

MENU GGC	
- GGC	ON
- IRIS	T5.6
- IRIS VALUE BY	USER
- GGC MODE	ADV.
- ADJUST	>
- EXIT	

Parallel to the control via the keyboard, the CCD software can be switched on and off via the on-screen menu.

Move the cursor by using the keys ▲ and ▼ to the line - GGC → Photo. Pressing the keys ► or ◀ will switch GGC off and on. If manual GGC is on, the LED on the keyboard will be on.

The LED on the keyboard will follow the changes which are made in this menu and vice versa, if this setting is changed via the keyboard, the on-screen menu will follow.

5.10.2 Iris

MENU GGC	
- GGC	ON
- IRIS	T5.6
- IRIS VALUE BY	USER
- GGC MODE	ADV.
- ADJUST	>
- EXIT	

If Lens Data Lenses are used and the mode IRIS VALUE BY is on LDS, the iris value will be passed onto the HD-IVS automatically. No manual input is necessary. If lenses without the LDS system are used, the setting IRIS VALUE BY will be on USER. In this case it is possible that the operator reads the iris value from the lens and enters the value manually.

Note: Iris data is only available in mode IRIS VALUE BY USER as described in the next chapter 0.

Move the cursor by using the keys ▲ and ▼ to the line – IRIS
→ Photo. Pressing the key ► will increase the iris value by one f-stop.
Pressing the key ◀ will decrease the iris value by one f-stop.

Iris Value will switch automatically between LDS and USER, depending on which type of lens is used. If Lens Data Lenses are used, the iris value will be passed onto the HD-IVS automatically. No manual input is necessary. If lenses without the LDS system are used, the setting IRIS VALUE BY will be on USER. In this case it is possible that the operator reads the iris data from the lens and enters the value manually. No manual access is possible if lens data lenses are used.

5.10.3 GGC Mode

The visibility of the ground glass texture depends on the f-stop of the film camera lens. It is more visible if the lens is stopped down. In order to allow a choice between best results and easy operation, the HD-IVS offers two different modes for GGC.

Advanced mode

In the advanced mode a series of three calibration images is recorded on different f-stops (2.8, 8 and 16). In this operation mode, the HD-IVS switches between those three calibration images if the iris is changed. In between the calibration images, the software will calculate the missing f-stops. For example, based on a calibration image on T 8, the software can calculate the T 5.6 and the T 11 image with good results. Thus the CCG works well over the entire iris range.

In live mode, it makes a difference whether Lens Data Lenses are used or not. If Lens Data Lenses are used, the information on the iris is automatically transferred to the HD-IVS and used for the necessary calculation. No manual action is needed. If no LDS lenses are used, the user can read the T-Stop from the lens and enter it manually into the HD-IVS to get the best possible GGC result.

Basic mode

In order to save some time in producing the calibration images, it is also possible to select the basic mode. In this mode only one calibration image is used. It works best, if this calibration image is taken at the same T-stop that is used for the live operation mode. For example the calibration image can be recorded at T-stop 5.6 and the camera is used with a T-stop of 5.6.

Still it is possible to use the calculation to deviate from that situation. In our example, it is no problem to calculate the missing calibration image at T 4 and T 8 or even further away from the initial T-stop. However, if the calculation is used for T-stops which are too far away from the initial situation, e.g. the calibration image was taken at T-stop 5.6 and the used T-stop is 2, the results will be below the best possible result.

As this mode is mainly used if no Lens Data Lenses or Lens Control Motors are used, there is no software support to record the calibration image. There is however a wizard, which guides the user through the process.

In live mode, there is a difference whether Lens Data Lenses are used or not. If they are used, the information on the iris is automatically transferred to the HD-IVS and used for the necessary calculation. No manual action is needed. If no LDS lenses are used, the user can read the T-Stop from the lens and enter it manually into the HD-IVS to get the best possible GGC result.

MENU GGC		
- GGC	ON	
- IRIS	T5.6	
IRIS VALUE BY	USER	
- GGC MODE	ADV.	
- ADJUST	>	
- EXIT		

Move the cursor by using the keys ▲ and ▼ to the line – GGC MODE → Photo. Pressing the keys ► or ◀ will switch between BASIC and ADVANCED (ADV.).

5.10.4 ADJUST

In order to use the Ground Class Cancellation (GGC) software, it is necessary to grab either three calibration images in advanced mode or one calibration image in basic mode. For this, point the camera to a white surface, e. g. a piece of paper. Make sure it is evenly illuminated with sufficient light. If exposure is out of range, warnings will appear.

A wizard will guide through the procedure. This wizard is different depending on the GGC Mode setting (basic or advanced) and the Lens Data Lenses and Lens Control Motors.

MENU GGC	
- GGC	ON
- IRIS	T5.6
IRIS VALUE BY	USER
- GGC MODE	ADV.
- ADJUST	>
- EXIT	

Move the cursor by using the keys \blacktriangle and \blacktriangledown to the line – ADJUST → Photo. Pressing the keys \blacktriangleright or \blacktriangleleft will activate the wizard, depending on the setting GGC MODE and if LDS Lenses and Lens Control Motors are used.

If there is not enough or too much light for this procedure or if the chart is unevenly lit, the wizard will stop and warnings will appear:

MENU GCC ADJUST	
- GGC MODE	BASIC
ABORTED	
<INFO>	
EXPOSURE TOO LOW. PLEASE INCREASE THE LIGHT THE CHART AND REPEAT THE PROCEDURE	
- EXIT	


MENU GCC ADJUST	
- GGC MODE	BASIC
ABORTED	
<INFO>	
EXPOSURE TOO HIGH. PLEASE REDUCE THE LIGHT ON THE CHART AND REPEAT THE PROCEDURE	
- EXIT	

MENU GCC ADJUST	
- GGC MODE	BASIC
ABORTED	
<INFO>	
THE CHART IS NOT EVEN ILLUMINATED. PLEASE ADJUST THE LIGHT AND REPEAT THE PROCEDURE	
- EXIT	

Increase or decrease the light on the test chart or make shure that the chart is evenly lit. The warning "Exposure too different" may also appear if the chart is not a uniform structure but a real image.

As a rule of thumb, we recommend 4,500 Lux or 400 Foot-candles which equals f-stop 5.8 for a 100 ASA film at 24 FPS and 180° shutter.

Basic Mode



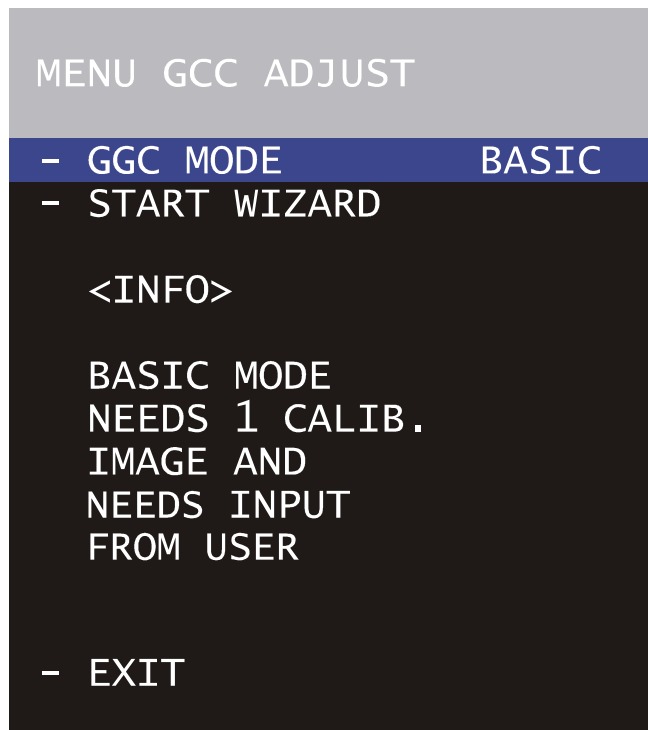


The setting GGC allows switching between mode BASIC and ADVANCED as long as the wizard is not active.

Move the cursor by using the keys \uparrow and \downarrow to the line – GGC MODE \rightarrow Photo. Pressing the keys \rightarrow or \leftarrow will switch between BASIC and ADVANCED (ADV.).



Move the cursor by using the keys \uparrow and \downarrow to the line – START WIZARD \rightarrow Photo. Pressing the keys \rightarrow or \leftarrow will start the wizard.

Follow the instructions:

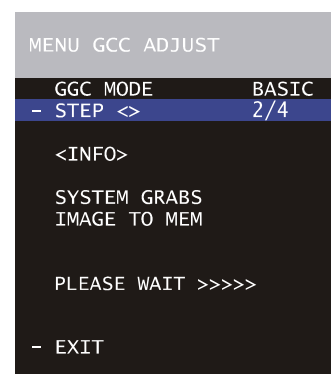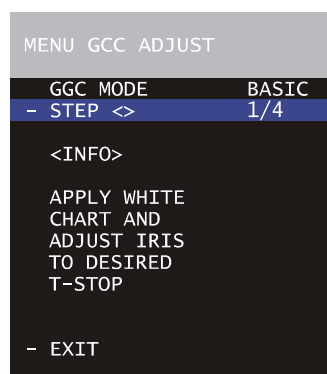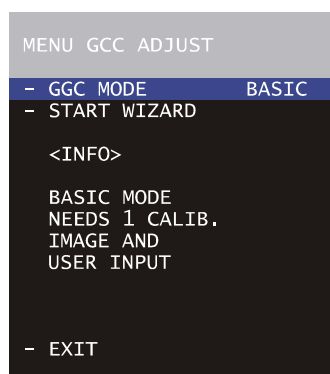


Start wizard

Confirm with key \rightarrow or \leftarrow

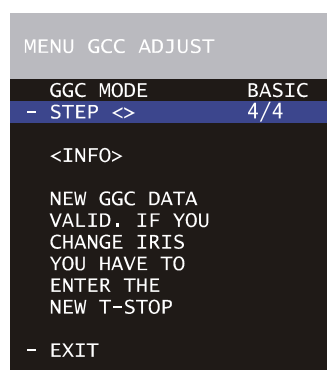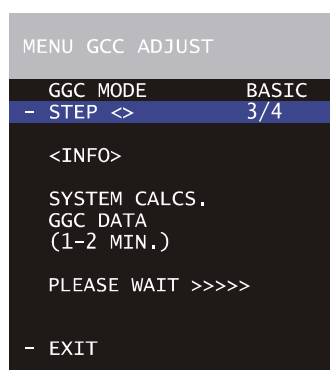

Note: - EXIT will cancel the procedure.

Advanced Mode



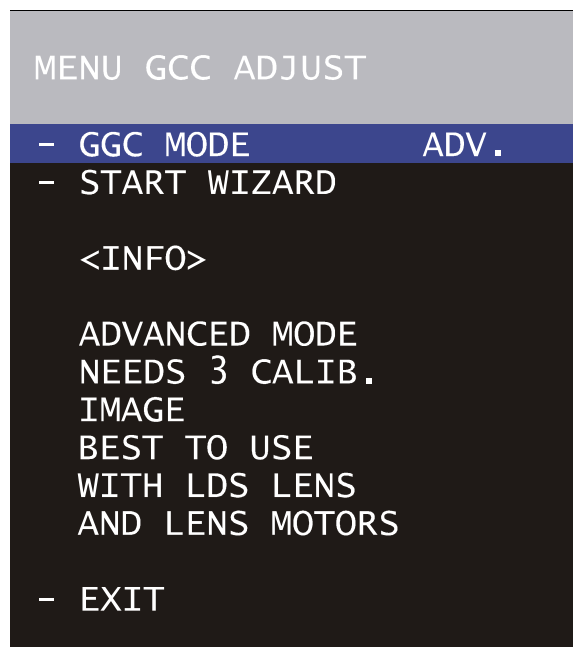


The setting GGC allows switching between BASIC and ADVANCED mode as long as the wizard is not active.

Move the cursor by using the keys \uparrow and \downarrow to the line - GGC MODE \rightarrow Photo. Pressing the key \rightarrow or \leftarrow will switch between BASIC and ADVANCED (ADV.).




Move the cursor by using the keys \uparrow and \downarrow to the line - START WIZARD \rightarrow Photo. Pressing the key \rightarrow or \leftarrow will start the wizard.

Follow the instructions

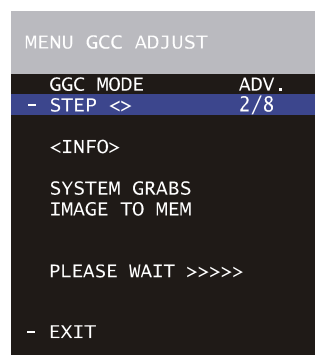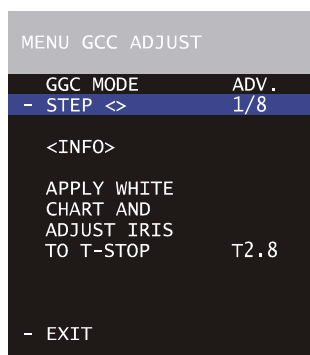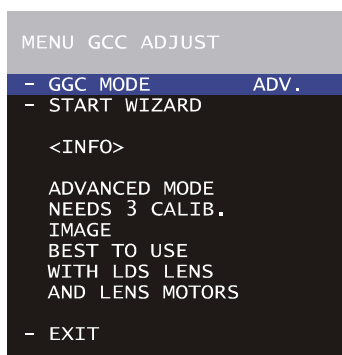

Start wizard

Confirm with keys \rightarrow or \leftarrow

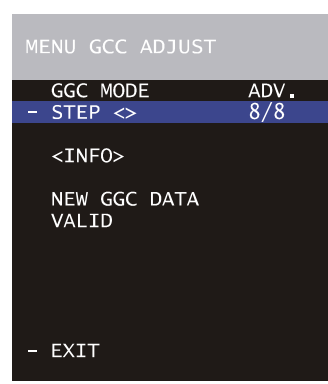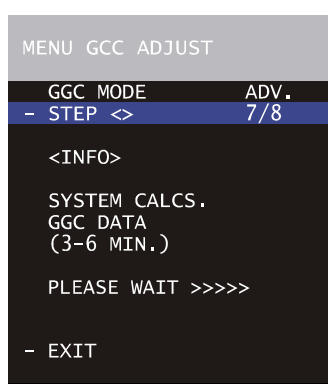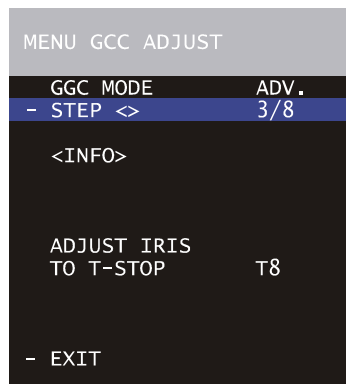





Confirm with keys \rightarrow or \leftarrow . Repeat for T8 and 16


Note: - EXIT will cancel the procedure

Exit




Use EXIT to return to the main menu.

Move the cursor by using the keys  and  to the line – EXIT → Photo and press the keys  or .

Note: Pressing the Enter/Insert key  for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.11 Time Code

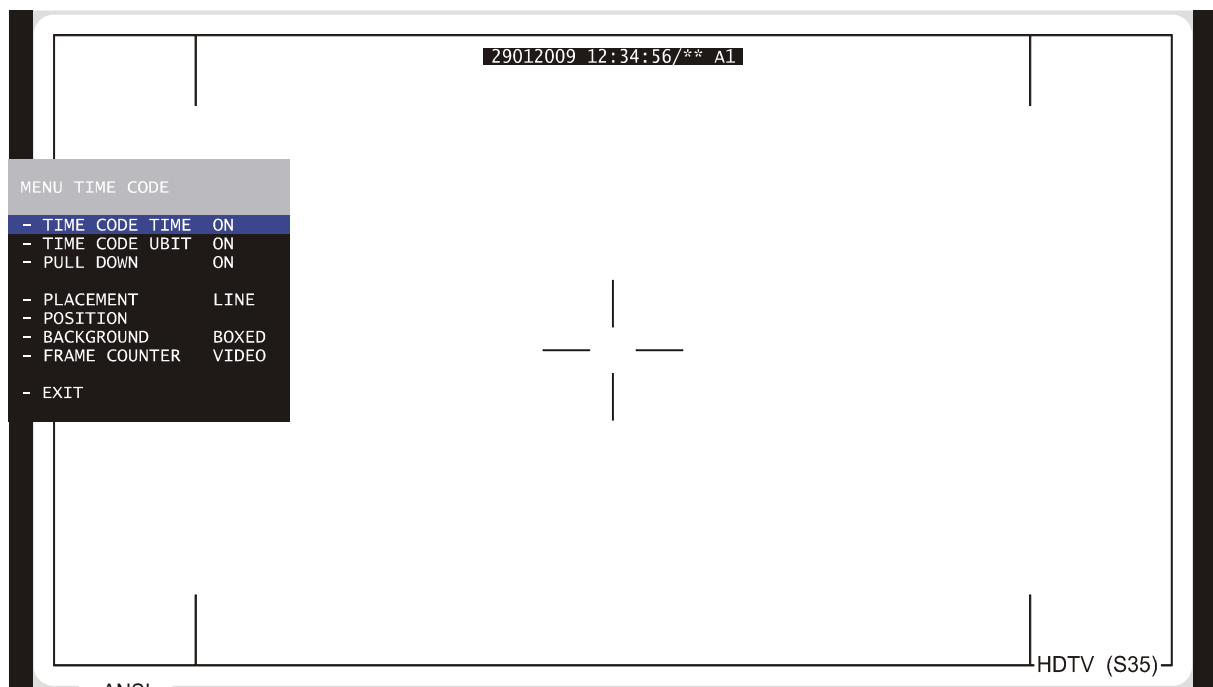

The HD-IVS can insert the film cameras time code, the user bits and pull down information into the video assist image to create a direct link to the post production.

It is possible to insert a time code, which is related to the film camera speed, e.g. 24 fps, or a time code which counts according to the selected HD-link speed, e.g. 25 fps.

Pull down information indicates if the actual displayed image is a new image or if this image is a repetition of the previous image because of the compensation of the different frame rates between the film camera and the HD-link speed.

This additional line shows the Time Code, User Bit and Pull down information:

29012009 12:34:56/** A1

Note: The frame information (the last two digits of the time code display) is only active if time code is actually recorded on film. If there is no time code recording on film, because for example the camera is not running on a time code speed, only the symbol ** is displayed on that position.

The adjustment of the white level of the inserted data is described in chapters 5.5.8 White Level, an inverse display is described in chapters 5.5.9 Inverse.



All changes are immediately active.
Check all settings on the connected monitor.



It is recommended to check the requirements of all facilities involved in post-production prior to shooting.

- Enter the Time Code submenu from the main menu.

5.11.1 Time Code Time ON/OFF

Time Code is a method of identifying individual film frames. For this every image gets a time stamp as HH:MM:SS:FF (H-hours, M-minutes, S-seconds and F-frames). A Time Code might be 12:23:32:02, showing time when the film frame was recorded, the so-called time-of-day system. The same time code can be recorded on the film inside the film camera and on the image of the HD-IVS. This creates a reference between an image of the HD-IVS and an image on the film. Therefore Edit Decision Lists (EDL) based on HD-IVS images can be used to edit the film.

MENU TIME CODE			
-	TIME CODE TIME	ON	
-	TIME CODE UBIT	ON	
-	PULL DOWN	ON	
-	PLACEMENT	LINE	
-	POSITION		
-	BACKGROUND	BOXED	
-	FRAME COUNTER	VIDEO	
-	EXIT		

This setting switches the insertion of Time Code information ON and OFF independently of other inserted data.

Move the cursor by using the keys and to the line - TIME CODE TIME → Photo. The keys or switch the insertion on and off.

Note: The insertion of the Time Code/User Bit and Pull Down window is only visible if at least one of the three items is ON.

5.11.2 Time Code Time ON/OFF

User Bits are additional information bits within the time code format. They can be used at user's discretion. However, it is recommendable to use them for the date. Every bit can contain a figure 0 to 9 and a letter A to F. A possible user bit entry could be 081209C1, which stands for December 09th 2008 Camera 1.

MENU TIME CODE			
-	TIME CODE	TIME	ON
-	TIME CODE	UBIT	ON
-	PULL DOWN		ON
-	PLACEMENT		LINE
-	POSITION		
-	BACKGROUND		BOXED
-	FRAME COUNTER		VIDEO
-	EXIT		

This setting switches the insertion of USER BIT information ON and OFF independently of other inserted data.

Move the cursor by using the keys ⬆ and ⬇ to the line – TIME CODE UBIT → Photo. The keys ⬇ or ⬆ switch the insertion on and off.

Note: The insertion of the Time Code/User Bit and Pull Down window is only visible if at least one of the three items is ON.


5.11.3 Pull Down ON/OFF

The HD-IVS can generate information on whether the current video image corresponds to a new film frame or whether it is a repeated video image. The Pull-Down information displays that in manually readable form.

The HD-Link speed of the HD-IVS can be set to one of the following five speeds: 23.976, 24, 25, 29.97 and 30 FPS. The ARRICAM LT can run anywhere between 1 and 48 FPS. Sometimes it is necessary to use a different HD-Link speed than the standard 24 FPS frame rate of a film camera, e.g. because of recording or post production requirements. In that case the HD-IVS has to deal with the different frame rates. This is achieved with a frame store, which alternatively either adds additional video images or drops images. The Pull-Down information provides information on the duplicated video images.

In practice, the most important case is a film camera speed of 24 FPS and an HD-Link speed off 30 FPS.

That creates a situation shown in this drawing.

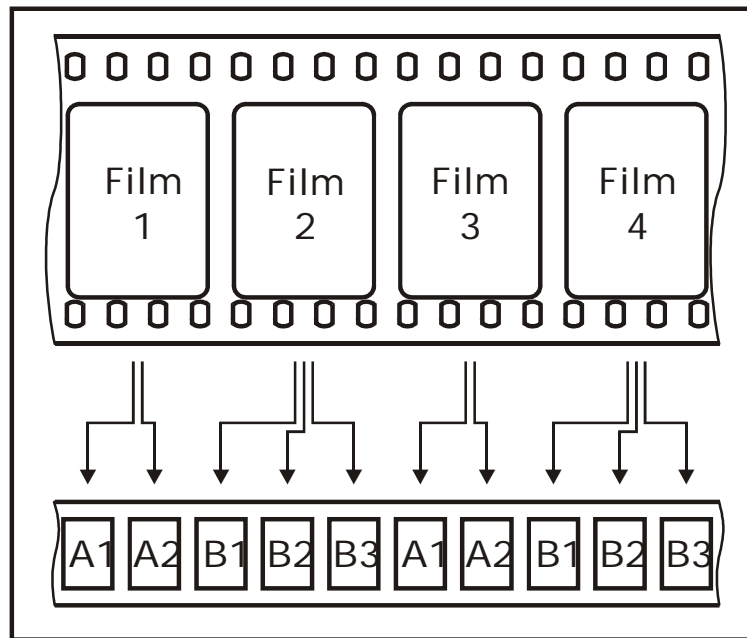

From the first film frame, two video fields are derived. From the second film frame, three video fields are obtained. From the next film frame, two video fields are derived and so on.

The Pull-Down information is created as follows:

Every time, the video field corresponds to a new film frame, the letter changes either from A to B or from B to A, and the number is set to 1. As long as no new film frame is taken, the video fields are counted, beginning from 1. Consequently A2 is the first repetition of A1. B2 would be the first repetition of B1, and B3 would be the second repetition.

In spite of the fact that the name Pull-Down comes from the working practice in the NTSC systems, where on a telecine the film is running on 23.976 fps and gets converted to 29.97 fps, the definition of Pull-Down information on the IVS can also be applied to any combination between HD-Link speed and film camera speed.

Although this information shows the HD-Link mode to be in interlaced mode, the same system works also for progressive mode. The system only uses half of the duplicated images.

Note: Pull-Down information is only inserted, when time code is actually recorded on film. If there is no time code recording, for example because the camera is not running on a time code speed, only A1 will be displayed.

This setting switches the insertion of PULL DOWN information ON and OFF independently of other inserted data.

MENU TIME CODE			
-	TIME CODE	TIME	ON
-	TIME CODE	UBIT	ON
-	PULL DOWN		ON
-	PLACEMENT		LINE
-	POSITION		
-	BACKGROUND		BOXED
-	FRAME COUNTER		VIDEO
-	EXIT		

Move the cursor by using the keys ▲ and ▼ to the line - PULL DOWN → Photo. The keys ► or ◀ switch the insertion on and off.

Note: The insertion of the Time Code/User Bit and Pull Down window is only visible if at least one of the three items is ON.


5.11.4 Placement

MENU TIME CODE			
-	TIME CODE	TIME	ON
-	TIME CODE	UBIT	ON
-	PULL DOWN		ON
-	PLACEMENT		LINE
-	POSITION		
-	BACKGROUND		BOXED
-	FRAME COUNTER		VIDEO
-	EXIT		

Placement is only available if at least one of the three items Time Code, User Bits or Pull Down is on.

Note: The Time Code window can be positioned either as lines on the screen (LINE mode) or on the right hand side of the screen (BLOCK mode), which is particularly helpful if a 4:3 image is used.

Move the cursor by using the keys ▲ and ▼ to the line - PLACEMENT → Photo. Using the keys ► or ◀ will change the placement mode from LINE to BLOCK and back.

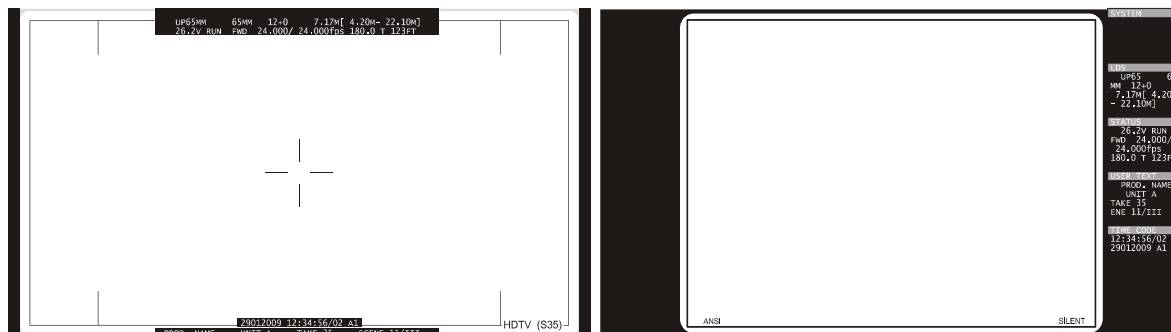

The text layout in BLOCK mode is designed so that the readability is best. Therefore, the order of information is different than in the LINE mode.

5.11.5 Position

MENU TIME CODE			
-	TIME CODE	TIME	ON
-	TIME CODE	UBIT	ON
-	PULL DOWN		ON
-	PLACEMENT		LINE
-	POSITION		
-	BACKGROUND		BOXED
-	FRAME COUNTER		VIDEO
-	EXIT		

Note: POSITION is only available if PLACEMENT is in mode LINE (see last chapter 5.11.4 Placement)

The Time Code window can be positioned anywhere on the monitor screen.

Move the cursor by the keys \uparrow and \downarrow to the line - POSITION \rightarrow Photo. Activate the positioning mode with the keys \rightarrow or \leftarrow . The following menu is displayed on the screen:

--> - POSITION ^v E--

The keys \uparrow and \downarrow move the window up and down. When the desired position has been set, confirm by pressing the Enter/Insert key ENTER/INSERT .

5.11.6 Background

MENU TIME CODE			
-	TIME CODE	TIME	ON
-	TIME CODE	UBIT	ON
-	PULL DOWN		ON
-	PLACEMENT		LINE
-	POSITION		
-	BACKGROUND		BOXED
-	FRAME COUNTER		VIDEO
-	EXIT		

Note: BACKGROUND is only available if at least one of the three items Time Code, User Bits or Pull Down is on.

The background of the window can be set electronically to black in normal display mode or to white in inverse mode (BOXED) to improve the readability. If this is not activated, the area around the text is the normal video image (VIDEO).

Move the cursor by using the keys ▲ and ▼ to the line – BACK-GROUND → Photo. The keys ► or ◀ switch between BOXED and VIDEO.

5.11.7 Frame Counter

Very often the camera is set to run in a different speed than the video system, e.g. the film camera runs at 24 FPS and the HD-Link is on 30 FPS. In order to adapt to the specific needs there are two different time code formats possible.

To have the time code count related to the film camera, select the mode "Frame counter Film", which is often referred to as "film related time code". In this mode, the frame counter of the time code (the last two digits of the time code display) is increased by 1 if the film is advanced by one frame e.g. 24 times a second at 24 fps. By this it is easy to identify one particular film frame by looking at the video image. On the other hand, this mode will create an unusual time code count because some video images are repeated to cope with the different frame rates of the video and the film camera. These repeated images will get duplicated time codes which will create error messages on some time code readers.

To relate the time code count to the video system, select mode "Frame counter Video". This is often referred to as "video related time code". Every full video frame will advance the time code by 1 e.g. 30 times at an HD-Link speed of 30 FPS. By this the IVS creates a standard time code. On the other hand, it is more difficult to get the link back to the time code, which was recorded on film. To get a reliable relation, it is necessary to utilize the Variframe Flag, which is described in the chapter 5.12.2 Variframe Flag

At every full second, both time counts are identical.

The FRAME COUNTER can either be FILM or VIDEO.

MENU TIME CODE			
-	TIME CODE	TIME	ON
-	TIME CODE	UBIT	ON
-	PULL DOWN		ON
-	PLACEMENT		LINE
-	POSITION		
-	BACKGROUND		BOXED
-	FRAME COUNTER		VIDEO
-	EXIT		

Note: FRAME COUNTER is only available if Time Code is on.


Move the cursor by using the keys ▲ and ▼ to the line - FRAME COUNTER → Photo. The keys ► or ◀ switch between FILM and VIDEO.

5.11.8 Exit


MENU TIME CODE			
-	TIME CODE	TIME	ON
-	TIME CODE	UBIT	ON
-	PULL DOWN		ON
-	PLACEMENT		LINE
-	POSITION		
-	BACKGROUND		BOXED
-	FRAME COUNTER		VIDEO
-	EXIT		

Use exit to return to the main menu.

Move the cursor by using the keys ▲ and ▼ to the line - EXIT → Photo and press the key ► or ◀.

Note: Pressing the Enter/Insert key  for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.12 Meta Data

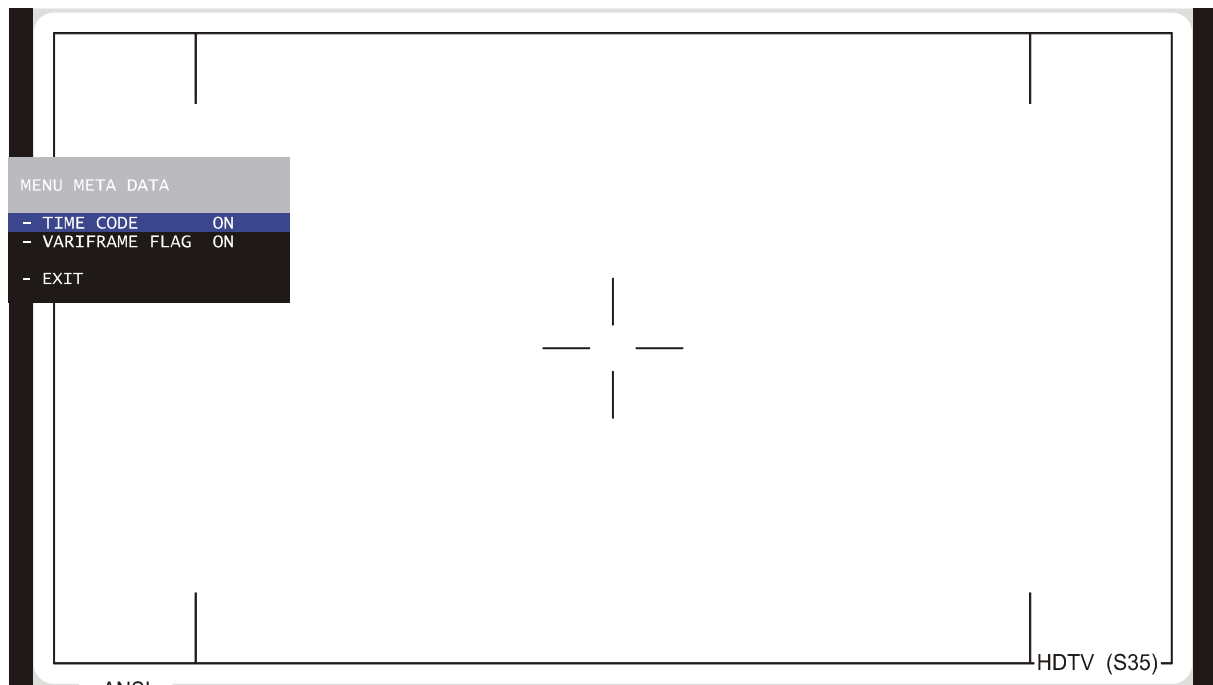

Meta Data refers to a set of machine readable information, which are included in the HD-SDI signal, such as Time Code and a Variframe Flag.

Time Code and Variframe Flag are standardized in SMPTE RP 188. They will be inserted in the video line 6.




All changes are immediately active.

Check all settings on the connected monitor.

- Enter the Meta Data submenu from the main menu.

5.12.1 Meta Data Time Code ON/OFF

Time Code is a method of identifying individual film frames. For this every image gets a time stamp as HH:MM:SS:FF (H-hours, M-minutes, S-seconds and F-frames). Therefore a Time Code might be 12:23:32:02, showing when the film frame was recorded, the so-called time-of-day system. The same time code can be recorded on the film inside the film camera and on the image of the HD-IVS. This creates a reference between an image of the HD-IVS and an image on the film. So Edit Decision Lists (EDL) based on HD-IVS images can be used to edit the film. This information as metadata is embedded in the HD-SDI.

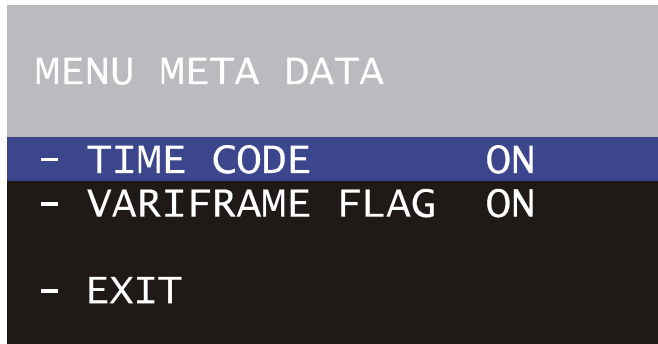


This setting switches the insertion of Time Code information as metadata in the HD-SDI signal ON and OFF independently of other inserted data.

Move the cursor by using the keys ▲ and ▼ to the line – TIME CODE → Photo. The keys

▶ or ◀ switch the insertion on and off.

5.12.2 Variframe Flag ON/OFF


The Variframe Flag identifies duplicated video images similar to the pull down information.

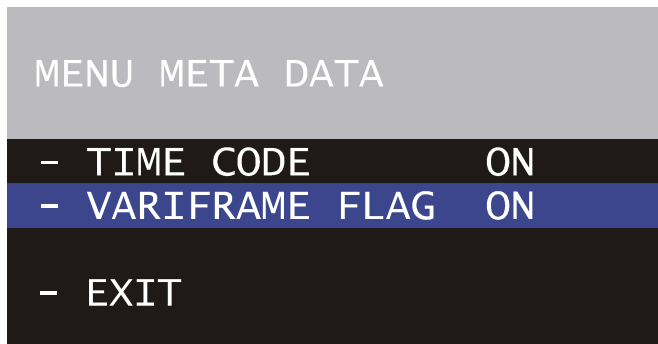

This setting switches the insertion of Variframe Flags in the HD-SDI signal ON and OFF independently of other inserted data.


Move the cursor with the keys ▲ and ▼ to the line – VARIFRAME FLAG → Photo. The keys ▶ or ◀ switch the insertion on and off.

5.12.3 Exit

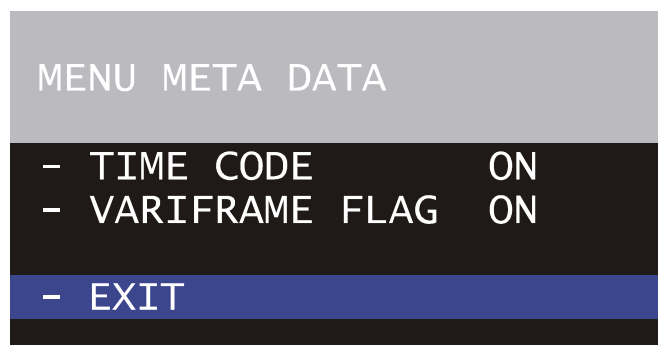


Use EXIT to return to the main menu.

Move the cursor by using the keys ▲ and ▼ to the line – EXIT → Photo and press the keys ▶ or ◀.

Note: Pressing the Enter/Insert key  for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.13 SERVICE

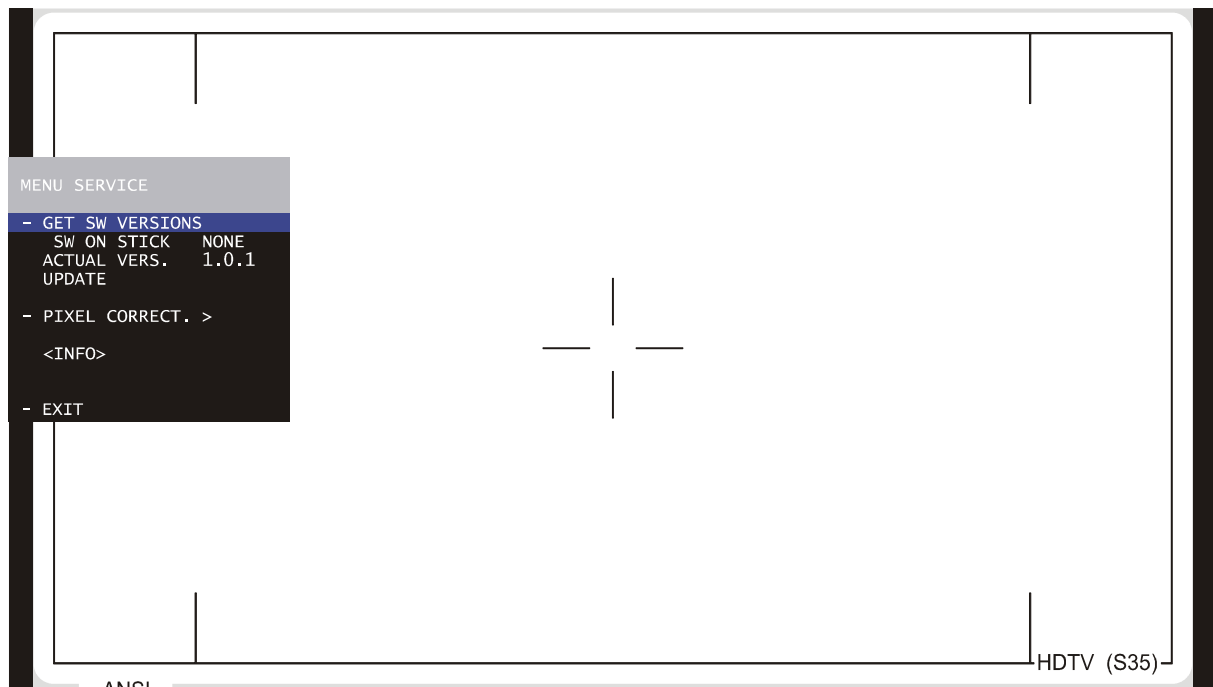

This submenu allows to identify the current software version used on the HD-IVS, to check if HD-IVS software is on the USB stick, to update the software of the HD-IVS and to compensate defect pixels on the CCD-Sensor.

When software updates become available, they will be sent by ARRI. It is then necessary to transfer the software onto an USB stick prior to update of the HD-IVS.




All changes are immediately active.

Check all settings on the connected monitor.

- Enter the Service submenu from the main menu.

5.13.1 Get SW Version

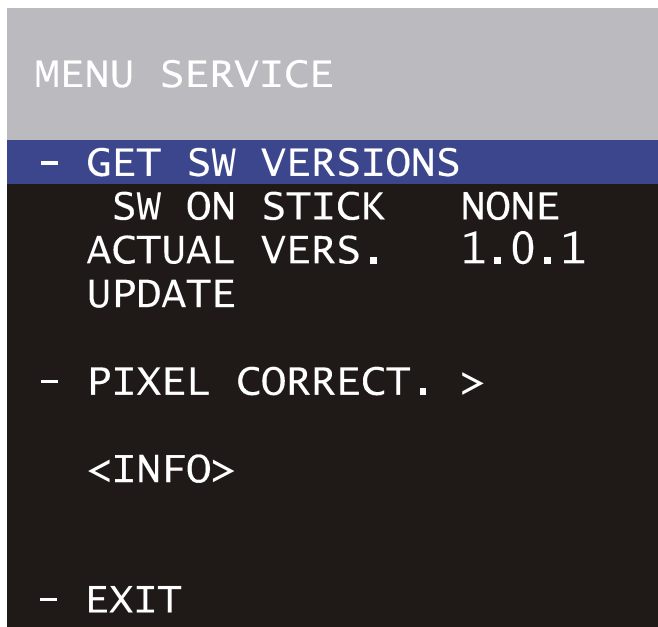


This setting allows to identify the current software version on the USB stick. If no USB stick is attached to the HD-IVS or if no HD-IVS software is on the stick, the information NONE is displayed.

The line ACTUAL VERS always displays the current software version currently on the HD-IVS.

Move the cursor by using the keys \uparrow and \downarrow to the line - GET SW VERSIONS → Photo. Pressing the keys \rightarrow or \leftarrow will check for software on the USB stick and display the version number.

5.13.2 UPDATE

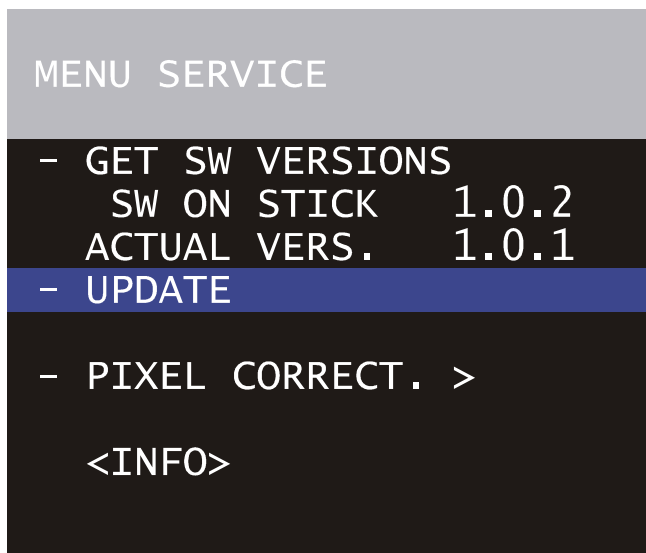

This line starts the software update procedure. Software from the USB stick is loaded into the HD-IVS and replaces the current software.

Move the cursor with the keys \uparrow and \downarrow to the line - UPDATE → Photo. The keys \rightarrow or \leftarrow will start the software update procedure.



Do not switch the HD-IVS or the film camera off and do not disconnect the film camera from power supply during the update process.


To start the update process, move the cursor by using the keys \uparrow and \downarrow to the line – YES \rightarrow Photo. Pressing the key \rightarrow or \leftarrow will start the update.

If the cursor is in position EXIT and the key \rightarrow or \leftarrow is pressed, the HD-IVS will return to the SERVICE Menu.

While the update process is running, status information about the update process is displayed, e.g. DELETING I FLASH – PLEASE WAIT ... or I FLASH WRITE STATUS – 17 %

The HD-IVS will restart at the end of the update procedure automatically.

5.13.3 PIXEL CORRECTION

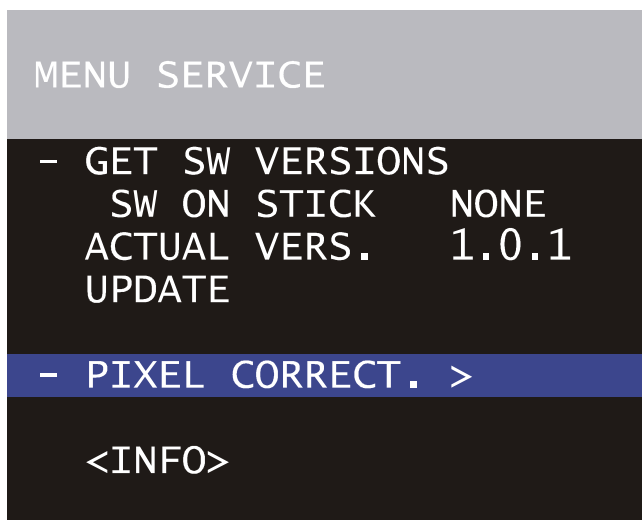

High definition image sensors with a resolution of 1920 x 1080 pixels contain more than two million individual photo receivers. It is almost impossible, to produce sensors where all pixels function correctly. There will always be some either not light sensitive or hyper sensitive. If the sensitivity of the sensor is increased, the number of defect pixels can increase.

The state-of-the art solution to this problem is not to use the defect pixels and reconstruct the missing information based on the neighboring pixels.

The line PIXEL CORRECTION will lead into a setup for pixel correction.

Move the cursor with the keys \uparrow and \downarrow to the line – PIXEL CORRECTION \rightarrow Photo. The keys \rightarrow or \leftarrow will start lead into the pixel correction menu.

Pixel Correction Menu

PIXEL CORRECTION		
-	SHOW PIXELS	176
-	AUTODETECT	176
	STORE PIXELS	
-	MOVE MENU	
-	EXIT	

SHOW PIXELS

This line shows how many defect pixels are covered currently by the HD-IVS software and to mark them on the HD-IVS monitor.

To mark the defect pixels move the cursor with the keys ▲ and ▼ to the line - SHOW PIXELS → Photo. The keys ► or ◀ will highlight the currently covered pixels on the HD-IVS monitor

PIXEL CORRECTION		
-	SHOW PIXELS	176
-	AUTODETECT	BUSY
	STORE PIXELS	
-	MOVE MENU	
-	EXIT	


AUTODETECT

The HD-IVS detects defect pixels automatically. For this please have the HD-IVS running for at least 45 minutes and make sure that the HD-IVS does not get any light, e.g. by closing all camera apertures using lens caps, closing the ocular and applying all other covers. The HD-IVS will look for all pixels which do not show the average black level and cover them up.

Move the cursor with the keys ▲ and ▼ to the line - AUTODETECT → Photo. The keys ► or ◀ will start the procedure. BUSY will indicate, that the procedure is in progress.




Please check the picture to verify if the result is satisfactory and store the result as described in the next chapter. If not, please repeat the procedure.

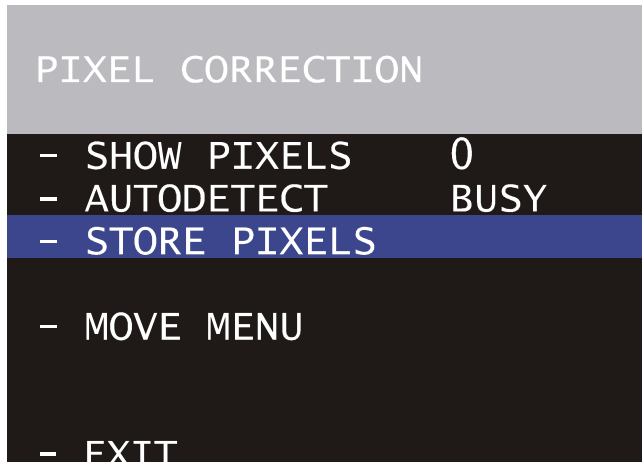

STORE PIXELS


After the AUTODETECT procedure is completed, it is necessary to store the result.

Move the cursor with the keys ▲ and ▼ to the line - STORE PIXELS → Photo. The keys ► or ◀ will store them permanently.

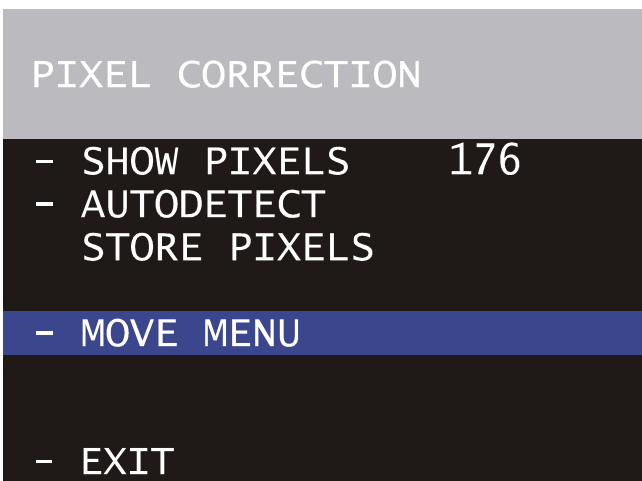

The default position of the control menu is on the left side of the screen overlaying the image. Therefore dead pixels beneath this menu can not be seen. To show them it is possible to move the menu to the right side of the screen.

Move the cursor with the keys ▲ and ▼ to the line - MOVE MENU → Photo. The keys ► or ◀ will move the menu.

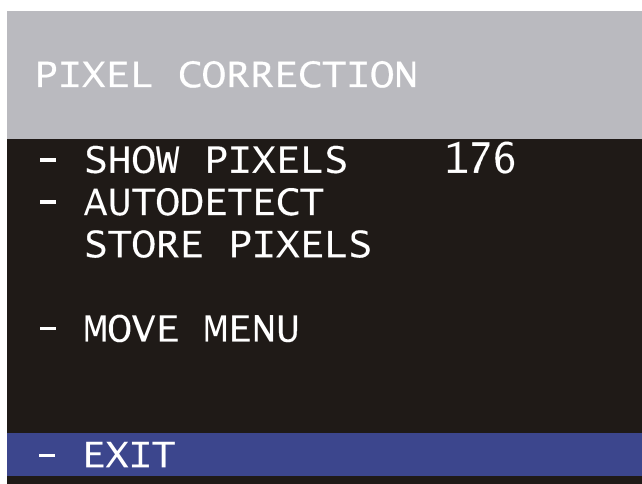

EXIT

Use EXIT to return to the service menu


Move the cursor with the keys ▲ and ▼ to the line - MOVE MENU → Photo. The keys ► or ◀ will move the menu.

5.13.4 Exit




Use EXIT to return to the main menu.

Move the cursor by using the keys ▲ and ▼ to the line – EXIT → Photo and press the keys ► or ◀.

Note: Pressing the Enter/Insert key  for more than three seconds will cause the system to exit the on-screen programming mode completely, regardless of which menu is activated, with the exception of the positioning mode and the color bars.

5.14 Check

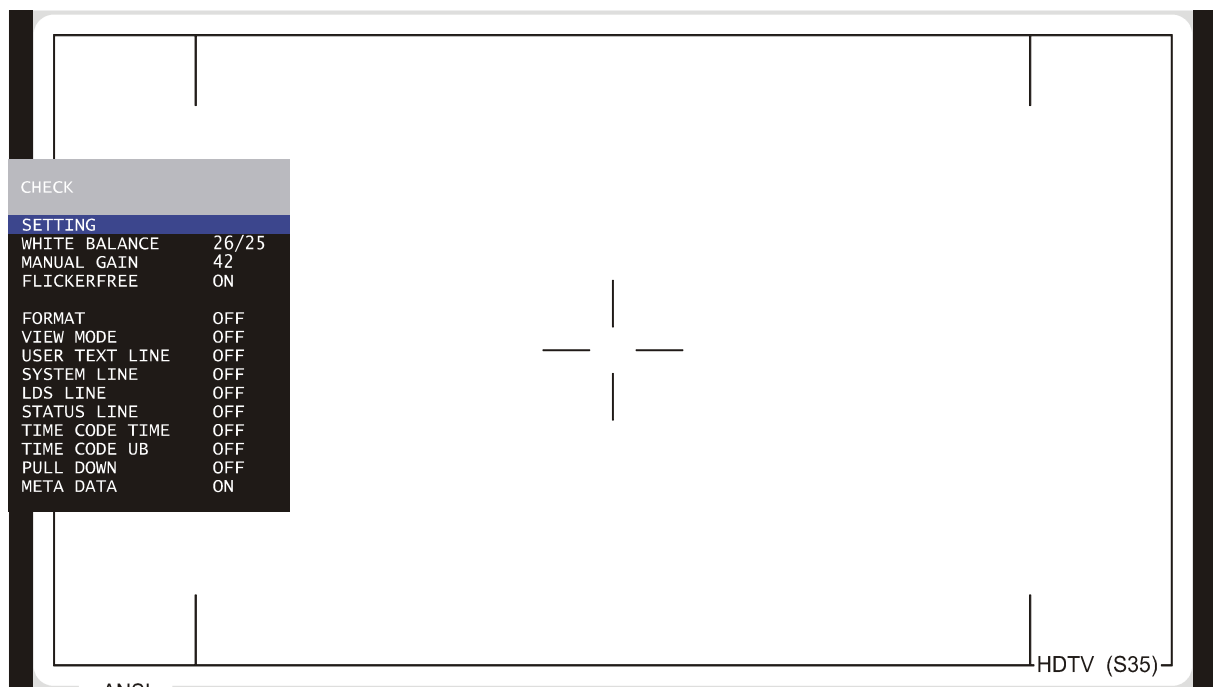

Parallel to the use of the position M in the on/off switch (see chapter 4.1) it is possible to get a summary of the settings in use.



Check all settings on the connected monitor.

- Enter the Check information from the main menu.

CHECK	
SETTING	
WHITE BALANCE	26/25
MANUAL GAIN	42
FLICKERFREE	OFF
FORMAT	OFF
VIEW MODE	OFF
USER TEXT LINE	LIVE
SYSTEM LINE	ON
LDS LINE	OFF
STATUS LINE	OFF
TIME CODE TIME	ON
TIME CODE UB	ON
PULL DOWN	ON
META DATA	ON

An overview similar to this
→ Photo will appear.

No adjustments can be made
within this menu.

6 Technical Data

Weight	1060 g/2.3 lbs TS
Power Consumption	approx. 19 W
Output resolution	1920x1080
BNC 1 output	HD-SDI without graphic overlay
BNC 2 output	HD-SDI with graphic overlay
BNC 3 output without graphic overlay	HD-SDI switchable with or
Internal processing bit depth	12
Output bit depth	10
Color sampling	4:2:2
Output modes segmented frame or interlaced	progressive, progressive
HD-SDI Link speeds	23.976, 24, 25, 29.97 and 30 FPS
Options content on HD monitor	IVS lenses for 4:3 or 16:9 image
White balance manual and One-Push-White	indoor, outdoor, automatic,
Gain	Automatic and Manual

7 Index

A	
Advanced Mode	91
Alignment	26
Focus	26
Screws	26
ANAMORPH COMP	60
Anamorphic De-squeeze	9
Autodetect	110
Automatic	
Gain Control	31
White Balance	28
AWB	27
B	
Basic Mode	92
C	
Changing	
Blue	28, 31, 52
Format Marking Number	33
Green	28
Red	28, 30, 51
CHECK Menu	113
Check Menue	24
Clear	
Text	85
Color Bars	55
Compare	69
Compare/Store Menu	69
Display Mode	69
Exit	75
Load from USB	73
Store image to internal memory	70
Store image to USB stick	71
D	
Darkening the Outside Area	67
Daylight	28
Declaration of Conformity	8
Default	47
Different Speed between Video and Film	99, 103
Disclaimer	7
Display Mode	69
Dynamic	9
E	
Edit Text	84
Enter/Insert	44
Exit	48, 56, 64, 68, 75, 82, 88, 96, 104, 106, 112
Exposure	58

F	
Film Counter	82
Film Related Time Code	103
Flicker Free On/Off	57
Focus Adjustment	26
Format Marking	42
Format Marking Menu	65
Activate	65
Brightness	67
Darkening the outside Area	67
Exit	68
Positioning	66
White Level	67
Frame Information	97
Frame Store and Compare	69
Framecounter	103
Film	103
Video	103
G	
Gain Control	31, 32
Automatic	31
Manual increase/decrease	33
Manual increase/decrease	31
Gain Control On/OFF	53
General Description	9
Get SW Version	108
GGC	35, 90
Adjust	93
Adjust Basic Mode	94
Adjust Mode Advanced	95
Adjust Mode Automatic	95
Advanced Mode	91
Basic Mode	92
GGC Mode	91
Iris	36, 90
Iris Value	91
Menu	89
Menu Exit	96
GGC Menu	96
Ground Glass Cancellation	9, 35, 90
Adjust	93
Adjust Basic Mode	94
Adjust Mode Advanced	95
Advanced Mode	91
Basic Mode	92
GGC Mode	91
GGC ON/OFF	90
Iris	36, 90
Iris Value	91
Ground Glass Cancellation Menu	89
Exit	96
H	
HD Link Speed	39, 59
HD Mode	40

HD-IVS	
Off	24
On	24
HD-SDI Outputs with overlay	23
HD-SDI Outputs with overlay	22
HD-SDI Outputs without overlay	23
HD-SDI Outputs without overlay	21
Hide Menue	24

I

Image	
Position	25
Image Flip	61
IND	27
Indoor	27
Insertor	44
Insertor Facilities	42
Installation HD IVS	20
Installing the HD-IVS Lens	11
Inverse	63
Iris	25
IVS Lens	16

L

LDS Info	76
Legal Disclaimer	7
Lens	16
Lens 16 by 9	16
Lens 4 by 3	16
Load from USB	73
Load Settings	46
Load/Store Menu	45
Default	47
Exit	48
Load Settings	46
Store Settings	46

M

Machine readable meta data	42
Main Features	9
Main Menu	44
MAN	27
Man Readable Information	42
Manual	
Gain Control	31
Gain Control ON/OFF	53
Gain Increase/Decrease	54
White Balance Blue	52
White Balance Red	51
Meta Data	
Menu Exit	106
Meta Data	
Time Code On/Off	105
Variframe Flag ON/OFF	106
META DATA Menu	105
Mini Monitor Output	22, 62
Move Menu	111

O

One push white	50
One-Push-White	27, 29
On-Screen	
Displays	42
Program Menu	44
Order Numbers	11
OTD	27
Outdoor	27
Outputs	21, 114
General	21
HD-SDI Outputs with overlay	22
HD-SDI Outputs without overlay	21
Mini Monitor	22

P

Pixel Correction	109, 110
Power Consumption	114
Product Identification	7
Pull Down ON/OFF	99
Pull-Down 2/3	100
Pull-Down Information	99

Q

Quick Reference	3
-----------------	---

R

Repeated Video Images	99, 103
Resolution	9, 114

S

Safety Instructions	5
Screen capture	9
Service	
Exit	112
Get SW Version	108
Pixel Correction	109
Update	108
Service Centers	118
SERVICE Menu	107
Settings	45
Show Pixel	110
Standard Video Controls	24
Automatic Gain Control	31
Changing Format Marking Number	33
Focus	26
Gain Control	31, 32
Ground Glass Cancellation	35
HD Link Speed	39
HD-Link Speed	40
Iris	25
On/Off and Check/Hide Menu	24
Storing a Video Image	41
White Balance	27, 28
X-, Y- and Rotation Adjustment	25
Status Info	76, 79
Store	69

Image	41	Video	
Image to internal memory	70	Standard Controls	24
Image to USB stick	71	Video Adjust Menu	
Settings	46	Anamorphic De-Squeeze	60
Store Pixels	111	Exit	64
Symbols, Meaning of the	6	Exposure	58
System Info	76, 78, 79	Flicker Free On/Off	57
System/LDS/Status Info	76	HD Link Speed	59
System/LDS/Status Menu		Image FlipMini	61
Status Info	79	Invers	63
System Info	78, 79	Mini Monitor Output	62
System/Status Menu		White Level	60, 63
Background	81	Video Adjustment	
Exit	82	Menu	57
Film Counter	82	Video Related Time Code	103
Placement	80, 86		
Position	81		
T		W	
Technical Data	114	Warning Signs	5
Time Code	98, 105	WB/Gain/Bars Menu	49
Film Related	103	Weight	114
Video Related	103	White Balance	27, 28, 50
Time Code Menu	97	AWB	27
Background	103	Changing Blue	28, 31
Exit	104	Changing Green	28
Framecounter	103	Changing Red	28, 30
Placement	101	IND	27
Position	102	MAN	27
Time Code Pull Down ON/OFF	99	OTD	27
Time Code Time ON/OFF	98	White Balance/Gain/Bars Menu	49
Time Code User Bits ON/OFF	98	Color Bars	55
Tungsten Lighting	28	Exit	56
		Manual Gain Control ON/OFF	53
		Manual Gain Increase/Decrease	54
		Manual White Balance Blue	52
		Manual White Balance Red	51
		One push white	50
		White Balance	50
		White Level	60, 63
U			
Update	108	X	
USB	9, 71	X-Adjustment	26
User Bits	98		
User Text Menu	83	Y	
Background	87	Y-Adjustment	26
Clear Text	85	YUV format	71
Edit Text	84		
Exit	88		
Position	87		
User Text Line	84		
V			
Variframe Flag	106		

8 ARRI Service Centers

Germany:

Arnold & Richter Cine Technik
Türkenstrasse 89
D-80799 München
phone: (089) 3809-0
fax: (089) 3809-1244
e-mail: webmaster@arri.de

USA:

ARRI Inc.
(East Coast)
617 Route 303
Blauvelt, NY 10913-1109
phone: (845) 353 1400
fax: (845) 425 1250
e-mail: info@arri.com

ARRI Inc.
(West Coast)
600 North Victory Blvd.
Burbank, CA 91502-1639
phone: (818) 841 7070
fax: (818) 848 4028
e-mail: info@arri.com

GB:

ARRI (GB) Ltd.
2 Highbridge
Oxford Road, Uxbridge
Middlesex, UB8 1LX
phone: (0) 1895 457 000
fax: (0) 1895 457 001
e-mail: service@arri-gb.com

Italy:

ARRI ITALIA S.R.L.
Viale Edison 318
20099 Sesto S. Giovanni (Milano)
phone: (02) 26 22 71 75
fax: (02) 242 1692
e-mail: info@arri.it

ARRI ITALIA S.R.L.
Via Placanica, 97
00040 Morena (Roma)
phone: (06) 79 89 021
fax: (06) 79 89 02 206
e-mail: info@arri.it

Asia:

ARRI ASIA Ltd
Room 290 3B, 29/F, The Centrium
60 Wyndham Street,
Central, Hong Kong
phone: 2571 6288,
fax: 2875 9181
e-mail: pivan@arriasia.hk

Canada:

ARRI Canada Ltd
415 Horner Avenue, Unit 11
Etobicoke, Ontario
Canada M8W 4W3
phone: (416) 255 33 35
fax: (416) 255 33 99
e-mail: service@arri-can.com