


**MILLTRONICS**

# HYDRORANGER 200

Instruction Manual

October 2002

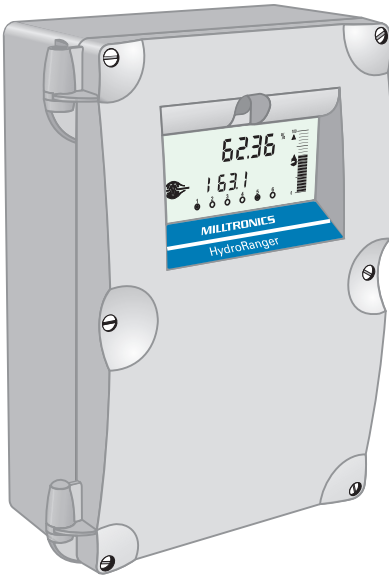

HYDRORANGER 200

## Safety Guidelines

Warning notices must be observed to ensure personal safety as well as that of others, and to protect the product and the connected equipment. These warning notices are accompanied by a clarification of the level of caution to be observed.

## Qualified Personnel

This device/system may only be set up and operated in conjunction with this manual. Qualified personnel are only authorized to install and operate this equipment in accordance with established safety practices and standards.

**Warning:** This product can only function properly and safely if it is correctly transported, stored, installed, set up, operated, and maintained.

**Note:** Always use product in accordance with specifications.

**Copyright Siemens Milltronics Process Instruments Inc. 2002. All Rights Reserved**

**Disclaimer of Liability**

This document is available in bound version and in electronic version. We encourage users to purchase authorized bound manuals, or to view electronic versions as designed and authored by Siemens Milltronics Process Instruments Inc. Siemens Milltronics Process Instruments Inc. will not be responsible for the contents of partial or whole reproductions of either bound or electronic versions.

While we have verified the contents of this manual for agreement with the instrumentation described, variations remain possible. Thus we cannot guarantee full agreement. The contents of this manual are regularly reviewed and corrections are included in subsequent editions. We welcome all suggestions for improvement.

Technical data subject to change.

MILLTRONICS® is a registered trademark of Siemens Milltronics Process Instruments Inc.

**Contact SMPI Technical Publications at the following address:**

Technical Publications  
Siemens Milltronics Process Instruments Inc.  
1954 Technology Drive, P.O. Box 4225  
Peterborough, Ontario, Canada, K9J 7B1  
Email: [techpubs@milltronics.com](mailto:techpubs@milltronics.com)

For the library of SMPI instruction manuals, visit our Web site: [www.milltronics.com](http://www.milltronics.com)

# Table of Contents

---

<b>HydroRanger 200</b> .....	1
The Manual .....	1
Manual Symbols .....	2
Configuration Examples .....	2
<b>Specifications</b> .....	3
<b>Installation</b> .....	7
Mounting .....	7
Mounting Locations .....	7
Mounting Instructions .....	8
HydroRanger 200 Board .....	9
Installing the Battery .....	10
Installing SmartLinx Card .....	10
Optional Equipment .....	10
<b>Wiring</b> .....	11
Terminal Board .....	12
Cables .....	12
Transducers .....	13
Relays .....	13
Temperature Sensor .....	14
mA Input .....	14
mA Output .....	14
Level System Synchronization .....	15
Power .....	15
Digital Communications .....	16
RS-232 Serial Connection .....	16
RS-485 Serial Connection .....	16
<b>Operating the HydroRanger 200</b> .....	17
RUN Mode .....	17
Readings in RUN Mode .....	18
Status Parameters .....	19
Controlling the Display .....	19
Auxiliary Reading .....	20
Multiple Readings .....	21
PROGRAM Mode .....	21
Starting PROGRAM Mode .....	22
Hand Programmer .....	22
Programmer Keys .....	23
Dolphin Plus .....	24
Dolphin Plus Toolbar Buttons .....	25
Activating the HydroRanger 200 .....	26
Changing Parameters .....	26
Security .....	26

Using Units or Percent (%) .....	27
Parameters Types .....	27
Parameter Reset .....	28
Display Readout .....	28
Changing Parameters (Dolphin Plus) .....	29
Parameter Indexing .....	29
Primary and Secondary Indexes .....	31
Starting Measurement .....	32
Startup .....	32
Measurement Conditions .....	33
<b>Relays</b> .....	34
General Introduction .....	34
Relay Function .....	34
Relay States .....	36
Relay Related Parameters .....	36
Relay Activation .....	37
Relay Failsafe .....	38
Preset Applications .....	38
<b>Backup Level Override</b> .....	40
Backup Level Override Parameters .....	40
<b>Discrete Inputs</b> .....	41
Wiring the Discrete Inputs .....	41
Programming the Discrete Input Logic .....	41
<b>mA I/O</b> .....	42
mA Input .....	42
mA Output .....	42
<b>Volume</b> .....	44
Readings .....	44
Tank Shape and Dimensions .....	44
Characterization Chart .....	45
Example Chart .....	45
<b>Alarms</b> .....	47
Level .....	47
Setting Simple Level Alarms .....	48
Rate .....	48
In Bounds / Out of Bounds Range .....	49
Cable Fault .....	49
Temperature .....	49
Loss of Echo (LOE) .....	50
<b>Pump Control</b> .....	51
Setting a Pump Down Group .....	51
Setting a Pump Up (Reservoir) Group .....	52

Other Pump Control Algorithms .....	54
Set Relays to ALTERNATE DUTY BACKUP .....	54
Set Relays to FIXED DUTY ASSIST .....	54
Set Relays to FIXED DUTY BACKUP .....	55
Set Relays to ALTERNATE DUTY SERVICE .....	55
Set Relays to FIRST IN FIRST OUT (FIFO) ASSIST .....	56
Optional Pump Controls .....	56
Starting Pumps by Rate of Level Change .....	56
Rotating Pumps by Service Ratio .....	57
Totalizing Pumped Volume .....	58
Setting Independent Failsafe Controls .....	58
Setting a Pump to Run On .....	59
Setting the Pump Start Delays .....	59
Reducing Wall Cling .....	59
Grouping Pumps .....	60
Setting a Flush Valve .....	60
Relay Controlled by Communications .....	61
Tracking Pump Usage .....	61
<b>Rake (Screen) Control .....</b>	<b>62</b>
Setting a Rake Control .....	62
Setting the Common Parameters .....	63
Set Relay 1 (Operate Rake) .....	63
Set Relays 2 to 4 (Level Alarms) .....	63
<b>External Totalizers and Flow Samplers .....</b>	<b>64</b>
Relay Contacts .....	64
Totalizer .....	64
Flow Sampler .....	65
Based on Volume and Time .....	65
<b>Open Channel Monitoring (OCM) .....</b>	<b>66</b>
Common Parameters .....	66
Setting Zero Head .....	67
Setting Totalized Volume .....	68
Applications Supported by HydroRanger 200 .....	68
PMDs with Exponential Flow to Head Function .....	72
Applicable Weir Profiles .....	72
Non-Applicable Weir Profiles .....	73
Parshall Flume .....	73
Leopold Lagco Flume .....	74
Cut Throat Flume .....	75
Universal Calculation Support .....	76
Typical Flow Characterization .....	76
Example Flumes .....	77
Example Weirs .....	77
<b>Testing the Configuration .....</b>	<b>79</b>
Simulation .....	79
Simulating a Single Measurement .....	79

Simulating a Level Cycle .....	79
Checking Volume Characterization .....	80
Checking OCM Flow Characterization .....	80
I/O Checkout .....	81
Application Test .....	81
<b>HydroRanger 200 Communications .....</b>	<b>83</b>
HydroRanger 200 Communication Systems .....	83
Optional SmartLinx® Cards .....	83
Communication Systems .....	84
Communication Ports .....	84
Modbus .....	84
SmartLinx .....	85
Dolphin Plus .....	85
<b>Communications Installation .....</b>	<b>86</b>
Wiring Guidelines .....	86
Ports 1 and 2 .....	86
Ports 1 and 2: RS-232 RJ-11 Jack and RS-485 Locations .....	86
Port 1: RS-232 RJ-11 Jack .....	87
Port 2: RS-485 .....	87
Configuring Communication Ports (Parameters) .....	88
<b>Modbus Register Map .....</b>	<b>91</b>
Word Order (R40,062) .....	92
Map ID (R40,063) .....	92
Product ID (R40,064) .....	93
Point Data (R41,010 – R41,031) .....	93
Input/Output (R41,070 – R41,143) .....	93
Discrete Inputs (R41,070) .....	94
Relay Outputs (R41,080) .....	94
mA Input (R41,090) .....	94
mA Output (R41,110-41,111) .....	94
Pump Control (R41,400 – R41,474) .....	94
Pump ON Setpoint (R41,420 – R41,425) .....	94
Pump OFF Setpoint (R41,430 – R41,435) .....	95
Pumped Volume (R41,440 – R41,443) .....	95
Pump Hours (R41,450 – R41,461) .....	95
Pump Starts (R41,470 – R41,475) .....	95
Parameter Access (R43,998 – R46,999) .....	95
Parameter Indexing .....	96
Reading Parameters .....	96
Writing Parameters .....	98
Format Words (R46,000 to R46,999) .....	98
Global Index Method (P782 = 0) .....	99
Parameter-Specific Index Method (P782 = 1) .....	99
Format Registers .....	99
<b>Data Types .....</b>	<b>101</b>
Numeric Values .....	101

Bit Values .....	101
Unsigned Double Precision Integer (UINT32) .....	101
Split Values .....	102
Text Messages .....	103
Relay Function Codes (P111 Only) .....	104
<b>Error Handling .....</b>	<b>105</b>
Modbus Responses .....	105
Error Handling .....	105
<b>Communication Troubleshooting .....</b>	<b>107</b>
Generally .....	107
Specifically .....	107
<b>Communication Appendix A: Single Parameter Access (SPA) .....</b>	<b>108</b>
Reading Parameters .....	108
Writing Parameters .....	109
Format Register .....	109
Error Codes .....	110
<b>Parameter Reference .....</b>	<b>111</b>
Helpful Hints .....	111
P000 Lock .....	113
Quick Start (P001 to P007) .....	113
P001 Operation.....	113
P002 Material .....	114
P003 Maximum Process Speed.....	114
P004 Transducer.....	115
P005 Units.....	115
P006 Empty.....	116
P007 Span.....	116
Volume (P050 to P055) .....	117
P050 Tank Shape.....	117
P051 Maximum Volume.....	119
P052 Tank Dimension A.....	119
P053 Tank Dimension L.....	119
P054 Level Breakpoints (Universal Volume Calculation).....	120
P055 Volume Breakpoints and Characterization (Universal Volume Calculation).....	120
Display and Reading (P060 to P062) .....	121
P060 Decimal Position.....	121
P061 Convert Reading.....	121
P062 Offset Reading .....	122
Backup Level Override .....	122
P064 Reading Override Enable.....	122
P065 Reading Override Value.....	123
P066 Override Time Delay.....	123
Failsafe (P070 to P072) .....	124
P070 Failsafe Timer.....	124
P071 Failsafe Material Level.....	124
P072 Failsafe Level Advance.....	125

Relays (P100 to P119) .....	126
P100 Preset Applications.....	126
P110 Level Source.....	127
P111 Relay Control Function.....	127
P112 Relay ON Setpoint.....	128
P113 Relay OFF Setpoint.....	129
P115 Relay Interval Setpoint.....	129
P116 Dead Band .....	129
P118 Relay Output Logic .....	130
P119 Relay Logic Test .....	131
Pump Setpoint Modifiers (P121 and P122) .....	131
P121 Pump by Rate .....	131
P122 Pump Service Ratio .....	132
Independent Relay Failsafe (P129) .....	132
P129 Relay Failsafe .....	132
Advanced Pump Control Modifiers (P130 to P137) .....	133
P130 Pump Run-On Interval.....	133
P131 Pump Run-On Duration.....	134
P132 Pump Start Delay .....	134
P133 Pump Power Resumption Delay.....	135
P136 Wall Cling Reduction .....	135
P137 Pump Group.....	136
Flush Systems (P170 to P173) .....	136
P170 Flush Pump .....	137
P171 Flush Cycles.....	137
P172 Flush Interval.....	137
P173 Flush Duration.....	138
mA Output (P200 to P219) .....	138
P200 mA Output Range .....	138
P201 mA Output Function.....	139
P202 mA Output Allocation .....	139
P203 mA Output Value / Transducer .....	140
Independent mA Setpoints (P210 and P211) .....	140
P210 0/4 mA Output Setpoint.....	141
P211 20 mA Output Setpoint .....	141
mA Output Limits (P212 and P213) .....	141
P212 mA Output Min Limit.....	141
P213 mA Output Max Limit.....	142
mA Output Trim (P214 to P215) .....	142
P214 4 mA Output Trim.....	142
P215 20 mA Output Trim .....	142
mA Output Failsafe (P219) .....	143
P219 mA Output Failsafe .....	143
mA Input (P250 to P260) .....	143
P250 mA Input Range .....	143
P251 0 or 4 mA Input Level.....	144
P252 20 mA Input Level.....	144
P253 Input Filter Time Constant.....	144
P254 Scaled mA Input Value .....	145
P260 mA Raw Input.....	145
Discrete Input Functions (P270 to P275) .....	145



P270 Discrete Input Function.....	145
P275 Scaled Discrete Input Value.....	146
Standard Data Logging (P300 to P321) .....	146
Record Temperatures (P300 to P303) .....	146
P300 Temperature, Transducer Maximum .....	147
P301 Temperature, Transducer Minimum .....	147
P302 Temperature, Sensor Maximum.....	147
P303 Temperature, Sensor Minimum.....	148
Record Readings (P304 and P305) .....	148
P304 Reading Max .....	148
P305 Reading Min .....	148
Pump Records (P310 to P312) .....	149
P309 Pump RUN Time .....	149
P310 Pump Hours.....	149
P311 Pump Starts .....	149
P312 Pump Run Ons .....	150
Flow Records (P320 and P321) .....	150
P320 Flow Max.....	150
P321 Flow Min.....	150
LCD Totalizer (P322 and P323) .....	151
P322 LCD Total Low .....	151
P323 LCD Total High .....	151
Profile Records (P330 to P337) .....	152
P330 Profile Record .....	152
P331 Auto Record Enable.....	153
P332 Auto Record Transducer .....	154
P333 Auto Record Interval .....	154
Auto Record ON and OFF Setpoints (P334 to P337) .....	154
P334 Auto Record ON Setpoint.....	155
P335 Auto Record OFF Setpoint.....	155
P336 Auto Record Filling / Emptying .....	155
P337 Auto Record LOE Time .....	156
Installation Records (P340 to P342) .....	156
P340 Date of Manufacture .....	156
P341 RUN Time .....	156
P342 Start Ups.....	157
Open Channel Monitoring (P600 to P621) .....	157
P600 Primary Measuring Device.....	157
P601 Flow Exponent.....	158
P602 Primary Measuring Device Dimensions.....	159
P603 Maximum Head .....	160
P604 Maximum Flow .....	160
P605 Zero Head.....	161
P606 Time Units .....	161
P607 Flowrate Decimal .....	162
P608 Flowrate Units.....	162
P610 Head Breakpoints .....	163
P611 Breakpoint Flowrates.....	163
P620 Low Flow Cutoff.....	164
P621 Auto Zero Head .....	164
Pumped Volume Totalizer (P622) .....	165

P622 Inflow / Discharge Adjust.....	165
Totalizer (P630 to P645) .....	166
P630 LCD Totalized Multiplier.....	166
P633 LCD Totalized Decimal Position.....	167
P640 Remote Totalized Multiplier.....	167
P641 Flow Sampler Mantissa.....	168
P642 Flow Sampler Exponent.....	168
P645 Relay Duration .....	169
Range Calibration (P650 to P654) .....	169
P650 Offset Calibration.....	169
P651 Sound Velocity Calibration.....	170
P652 Offset Correction .....	171
P653 Velocity .....	171
P654 Velocity at 20°C.....	171
Temperature Compensation (P660 to P664) .....	172
P660 Temp Source.....	172
P661 Temp Fixed.....	172
P663 Temperature Transducer Allocation.....	173
P664 Temperature.....	173
Rate (P700 to P708) .....	174
P700 Max Fill Rate.....	174
P701 Max Empty Rate .....	174
P702 Filling Indicator.....	175
P703 Emptying Indicator .....	175
P704 Rate Filter .....	175
P705 Rate Update Time.....	176
P706 Rate Update Distance .....	176
P707 Rate Value.....	176
P708 Volume Rate Display .....	177
Measurement Verification (P710 to P713) .....	177
P710 Fuzz Filter.....	177
P711 Echo Lock.....	177
P712 Echo Lock Sampling .....	178
P713 Echo Lock Window .....	179
Transducer Scanning (P726 to P729) .....	179
P726 Level System Sync.....	179
P727 Scan Delay.....	179
P728 Shot Delay.....	180
P729 Scan Time .....	180
Display (P730 to P739) .....	180
P730 Auxiliary Reading .....	180
P731 Auxiliary Reading Key.....	181
P732 Display Delay.....	181
P733 Scroll Access .....	182
P735 Backlight.....	182
P737 Primary Reading.....	182
SmartLinx Reserved (750 to 769) .....	183
Communications (P770 to P782) .....	183
P770 Port Protocol .....	183
P771 Network Address .....	183
P772 Baud Rate.....	184

P773 Parity .....	184
P774 Data Bits .....	184
P775 Stop Bits .....	185
P778 Modem Available .....	185
P779 Modem Inactivity Timeout .....	185
P782 Parameter Index Location .....	186
SmartLinx Hardware Testing .....	186
P790 Hardware Error .....	186
P791 Bus Error .....	187
P792 Bus Error Count .....	187
Echo Processing (P800 to P807) .....	187
P800 Near Blanking .....	187
P801 Range Extension .....	188
P802 Transducer with Submergence Shield .....	188
P803 Shot / Pulse Mode .....	189
P804 Confidence Threshold .....	189
P805 Echo Confidence .....	190
P806 Echo Strength .....	190
P807 Noise .....	190
Advanced Echo Processing (P810 to P825) .....	191
P810 Scope Displays .....	191
P815 Echo Time Filtered .....	192
P816 Echo Time Raw .....	193
Profile Pointer (P817 to P825) .....	193
P817 Profile Pointer Time .....	193
P818 Profile Pointer Distance .....	194
P819 Profile Pointer Amplitude .....	194
P820 Algorithm .....	194
P821 Spike Filter .....	195
P822 Narrow Echo Filter .....	195
P823 Reform Echo .....	196
P825 Echo Marker Trigger .....	196
Advanced TVT Adjustment (P830 to P835) .....	197
P830 TVT Type .....	197
P831 TVT Shaper .....	197
P832 TVT Shaper Adjust .....	198
P833 TVT Start Min .....	199
P834 TVT Start Duration .....	199
P835 TVT Slope Min .....	199
Advanced Shot Adjustment (P840 to P852) .....	200
P840 Short Shot Number .....	200
P841 Long Shot Number .....	200
P842 Short Shot Frequency .....	200
P843 Long Shot Frequency .....	201
P844 Short Shot Width .....	201
P845 Long Shot Width .....	201
P850 Short Shot Bias .....	202
P851 Short Shot Floor .....	202
P852 Short Shot Range .....	202
Test (P900 to P913) .....	203
P900 Software Revision Number .....	203

P901 Memory .....	203
P902 Watchdog.....	203
P903 Display .....	203
P904 Keypad .....	204
P905 Transmit Pulse .....	204
P906 RS-232 Port .....	204
P908 Scanner .....	204
P910 Toggle Relays.....	205
P911 mA Output Value .....	205
P912 Transducer Temperature .....	205
P913 Sensor Temperature .....	206
P914 mA Input.....	206
Measurement (P920 to P927) .....	206
P920 Reading Measurement .....	206
P921 Material Measurement.....	207
P922 Space Measurement.....	207
P923 Distance Measurement.....	207
P924 Volume Measurement .....	208
P925 Flow Measurement.....	208
P926 Head Measurement.....	208
P927 Distance Measurement.....	208
Master Reset (P999) .....	209
<b>General Appendix A: Index types .....</b>	<b>211</b>
Index types .....	211
<b>General Appendix B: Technical Reference .....</b>	<b>212</b>
Transmit Pulse .....	212
Echo Processing .....	212
Distance Calculation .....	213
Sound Velocity .....	213
Scanning .....	214
Volume Calculation .....	214
Universal, Curved .....	215
Flow Calculation .....	215
Universal, Linear .....	215
Universal, Curved .....	216
Maximum Process Speed .....	217
<b>General Appendix C: Troubleshooting .....</b>	<b>218</b>
Common Problems Chart .....	218
Noise Problems .....	219
Determine the Noise Source .....	220
Non-Transducer Noise Sources .....	220
Common Wiring Problems .....	221
Reducing Electrical Noise .....	221
Reducing Acoustical Noise .....	221
Measurement Difficulties .....	222
Flashing LOE Display .....	222
Fixed Reading .....	223

Obstructions in the Sound Beam .....	223
Nozzle Mountings .....	224
Set the HydroRanger 200 to Ignore the Bad Echo .....	224
Wrong Reading .....	225
Types of Wrong Readings .....	225
Liquid Splashing .....	225
Adjust the Echo Algorithm .....	225
Transducer Ringing .....	225
<b>General Appendix D: Pump Control Reference .....</b>	<b>227</b>
Pump Control Options .....	227
Pump Groups .....	227
Pump by Rate .....	227
Pump Control Algorithms .....	227
Fixed Duty Assist (P111 = 50) .....	228
Fixed Duty Backup (P111 = 51) .....	228
Alternate Duty Assist (P111 = 52) .....	229
Alternate Duty Backup (P111 = 53) .....	230
Service Ratio Duty Assist (P111 = 54) .....	231
Service Ratio Duty Backup (P111 = 55) .....	231
First In First Out (FIFO) (P111 = 56) .....	232
Pump by Rate (P121) .....	232
Other Pump Controls .....	232
<b>General Appendix E: Updating Software .....</b>	<b>233</b>
Updating Software .....	233
<b>General Appendix F: Upgrading .....</b>	<b>234</b>
Mounting a HydroRanger 200 .....	234
Connecting the Transducer .....	234
HydroRanger to HydroRanger 200 Parameters .....	236



# HydroRanger 200

---

The HydroRanger 200 is a single-point, six relay device that offers both level and volume measurement. It has Open Channel Monitoring capabilities, a larger number of advanced pump control algorithms, and is equipped with digital communications. It offers the latest in echo processing technology and diagnostic features.

The HydroRanger 200 is designed for a variety of applications:

- water and wastewater
- storage tanks, for measuring liquids, slurries, and solids
- open channels, wet wells, pump totalizer, bar screens

## The Manual

The manual provides instruction for the operation of the HydroRanger 200 and is designed to help you get the most out of your instrument.

Information on the following is provided:









- How to program the unit
- Example applications
- Principles of operation
- Parameter values
- Parameter uses
- Outline diagrams
- Wiring diagrams
- Installation requirements
- MODBUS register mapping
- Modem configuration

If you have any questions, comments, or suggestions about the manual contents, please email us at [techpubs@milltronics.com](mailto:techpubs@milltronics.com).

For the complete library of Siemens Milltronics manuals, go to [www.milltronics.com](http://www.milltronics.com).

# Manual Symbols

Please note their use carefully.

	Alternating Current
	Direct Current
	Earth (ground) Terminal
	Protective Conductor Terminal
	Caution (refer to instructions)
	Infra-red communication port on front of instrument
	RJ-11 communications port
	No co-axial cable connections

## Configuration Examples

The configuration examples used in this manual illustrate the versatility of the HydroRanger 200. Because there is often a range of ways to approach an application, other configurations may also apply.

In all examples, substitute your own application details. If the examples do not apply to your application, check the applicable parameter reference for the available options.

Should you require more information, please contact your Siemens Milltronics representative. For a complete list of Siemens Milltronics representatives, go to [www.milltronics.com](http://www.milltronics.com).



# Specifications

---

## Power

### AC version

- 100-230 Vac  $\pm$  15%, 50 / 60 Hz, 36 VA (17W)<sup>1</sup>
- fuse: F3: 2 AG, Slow Blow, 0.375A, 250V

### DC version

- 12-30 Vdc, 20W<sup>1</sup>
- fuse: F3: 2 AG, Slow Blow, 2A, 250V

### Transmitter fuse

- F1: Belling Lee, L754, 4000A HRC, ceramic type, 100mA, 250V

### Temperature Sensor fuse

- F2: Belling Lee, L754, 4000A HRC, ceramic type, 50mA, 250V

## Mounting

### Location

- indoor / outdoor

### Altitude

- 2000m max.

### Ambient temperature

- -20 to 50°C (-5 to 122°F)

### Relative humidity

- suitable for outdoors (Type / Nema 4x, IP65 Enclosure)

### Installation category

- II

### Pollution degree

- 4

---

<sup>1</sup>. Power consumption is listed at maximum.

## Range

- 0.3m (1 ft) to 15m (50 ft), dependent on transducer

## Accuracy

- 0.25% of maximum range or 6mm (0.24"), whichever is greater

## Resolution

- 0.1% of program range<sup>1</sup> or 2mm (0.08"), whichever is greater

## Memory

- 1MB static RAM with battery backup
- 512kB flash EPROM

## Programming

### Primary

- hand held programmer

### Secondary

- PC running Dolphin Plus software

## Display

- back lit LCD

## Temperature Compensation

- Range: -50 to 150°C (-58 to 302°F)

## Source

- integral transducer sensor
- TS-3 temperature sensor
- programmable fixed temperature

## Temperature Error

### Sensor

- 0.09% of range

---

<sup>1</sup> Program range is defined as the empty distance from the face of the transducer (P006) plus any range extension (P801).

## Fixed

- 0.17% per °C deviation from programmed value

## Outputs

### Transducer drive

- 315V peak

### mA Analog

- 0-20 mA
- 4-20 mA
- 750 ohm maximum isolated
- Resolution of 0.1%

### Relays<sup>1</sup>

- Six:
  - 4 control
  - 2 alarm control
- all relays rated 5A at 250Vac, non-inductive

### Control Relays

- 4 Form **A**, **NO** relays (numbers 1,2,4,5)

### Alarm Relays

- 2 Form **C**, **NO**, or **NC** relay (numbers 3,6)

### Communication

- RS-232 running Modbus RTU and ASCII via RJ-11 connector
- RS-485 running Modbus RTU and ASCII via terminal blocks

### Optional

- SmartLinx<sup>®</sup> compatible

## Inputs

### mA (analog) (1)

- 0-20 or 4-20 mA, from alternate device, scalable

---

<sup>1</sup>. All relays are certified only for use with equipment that fails in a state at or under the rated maximums of the relays.

## Discrete (2)

- 10-50Vdc switching level
- logical 0 = < 0.5 Vdc
- logical 1 = 10 to 50 Vdc
- 3mA maximum draw

## Enclosure

- 240mm (9.5") x 1.75mm (6.9"). Width dimension includes hinges.
- Type 4X / NEMA 4X / IP 65<sup>1</sup>
- Polycarbonate

## Weight

- 1.37 kg (3.02 lb)

## Approvals

- See product nameplate

## Compatible Transducers

- Echomax series and STH series

## Transducers

### Base

- single point (44 kHz)
- second transducer can only be used for average or differential

### Cable

- Do not use coaxial cable for transducers (see General Appendix F: Upgrading on page 234 for more information).
- 2-3 copper conductors, twisted with shield, drain wire, 300Vrms, 0.5mm<sup>2</sup> (22-18AWG), nominal capacitance between adjacent conductors @ 1kHz = 19 pF/ft., nominal capacitance between conductor and shield @ 1kHz = 33 pF/ft. (Belden 8760 is acceptable)
- 365m (1200 ft) maximum

**Note:** The HydroRanger 200 is to be used only in the manner outlined in this instruction manual or protection provided by the equipment may be impaired.

<sup>1</sup> For watertight applications, use only approved, suitable size hubs in the enclosure's conduit holes.

# Installation

---

## Notes:

- Installation must only be performed by qualified personnel, and in accordance with local governing regulations.
- This product is susceptible to electrostatic shock. Follow proper grounding procedures.



**All field wiring must have insulation suitable for at least 250 V.**



**Hazardous voltage present on transducer terminals during operation.**



**DC terminals shall be supplied from an SELV source in accordance with IEC 1010-1 Annex H.**

- The non-metallic enclosure does not provide grounding between conduit connections. Use grounding type bushings and jumpers.

## Mounting

### Mounting Locations

#### Recommended

- Ambient temperature is always within -20 to 50°C (-5 to 122°F)
- HydroRanger 200 display window is at shoulder level, unless most interaction is through a SCADA system
- Easy access for hand programmer is provided
- Cable length requirements are minimal
- Mounting surface is free from vibration
- A place for a laptop computer is provided for on-site Dolphin Plus configuration

#### Avoid


- Exposure to direct sunlight. (Provide a sun shield to avoid direct sunlight.)
- Proximity to high voltage/current runs, contacts, SCR or variable frequency motor speed controllers

# Mounting Instructions

Mount the unit where there is sufficient room to swing lid open and have clear access.

**Note:** When routing cable through a conduit, please follow the Cable Routing instructions on page 9 before mounting the HydroRanger 200.

## Enclosure Dimensions

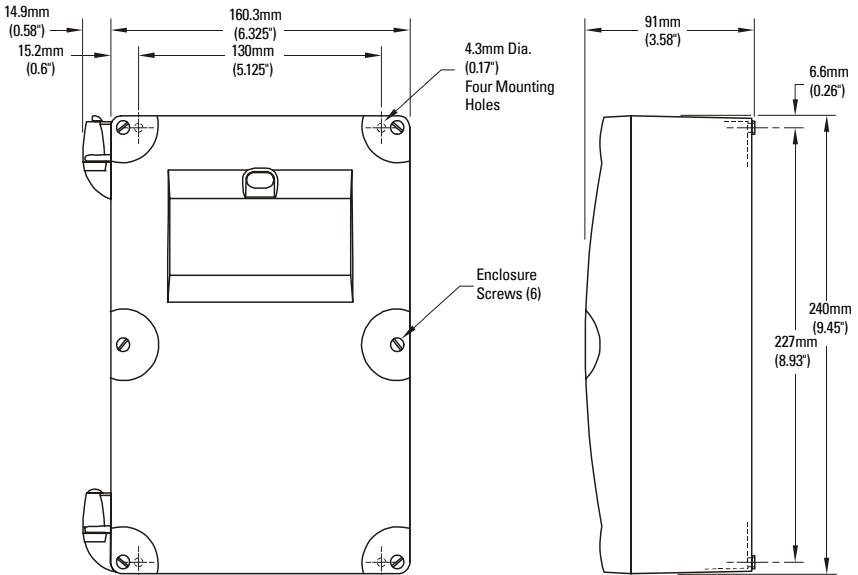


## Mounting the Enclosure

1. Remove the lid screws and open the lid to reveal the mounting screw holes.
2. Mark and drill four holes in the mounting surface for the four screws (customer supplied).
3. Fasten with a long screwdriver.


### Please note:

- Recommended mounting: directly to wall or to electrical cabinet back panel
- Recommended mounting screws: #6
- If alternate mounting surface is used, it **MUST** be able to support four times the weight of the unit.

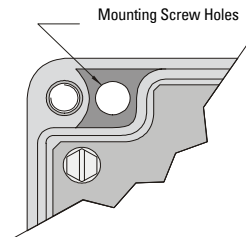

## Cable routed through a conduit:

1. Remove the four mounting screws holding the motherboard to the enclosure.
2. Be careful not to damage the electronics with static electricity. Remove the motherboard from the enclosure by pulling the board straight out.
3. Drill the required cable entry holes. Make sure conduit holes do not interfere with the lower areas on the terminal block, circuit board, or SmartLinX card.
4. Attach the conduit to the enclosure using only approved suitable size hubs for watertight application.
5. Reinstall the motherboard with the mounting screws.

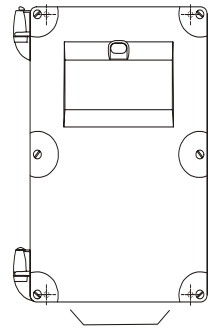


Suitable location for conduit entrances

## Cable exposed and entering through the cable glands:

1. Unscrew the glands and attach them loosely to the enclosure.
2. Thread the cables through the glands. Ensure the power cable is kept separated from the signal cables.
3. Wire the cables to the terminal blocks.
4. Tighten the glands to form a good seal.

**Note:** Where more holes are required than are supplied in the enclosure, follow the *Cable routed through a conduit* steps.

## HydroRanger 200 Board

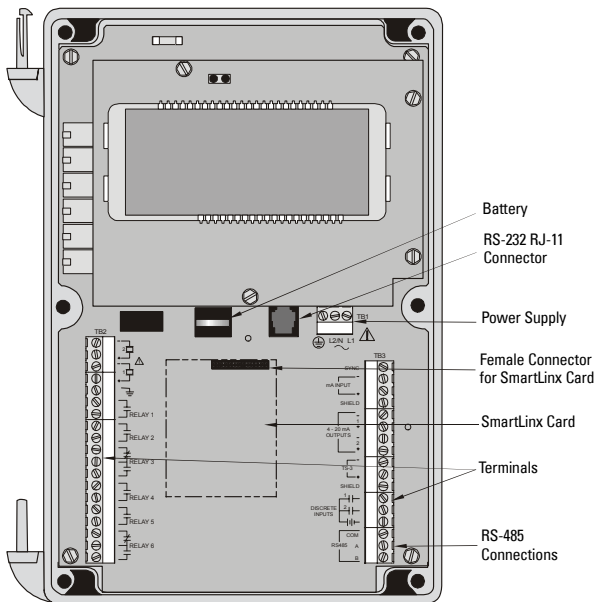

# Installing the Battery

The battery (Rayovac BR2032) has a ten-year life expectancy. Please note the life expectancy may be reduced by ambient temperature. If the unit loses external and battery power, a capacitor will power the RAM for about ten minutes.

## Notes:


- Do not install the memory backup battery until the HydroRanger 200 is installed, as it begins operation immediately.
- The unit is supplied with one battery. Insert the battery into the holder as shown in the following diagram before using the HydroRanger 200.



**Disconnect power before installing or replacing the battery.**

## Installation Steps

1. Open the enclosure lid.
2. Slide the battery into the holder. Be sure to align the + and – terminals correctly.
3. Close and secure enclosure lid.

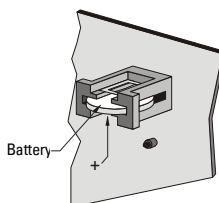

## Installing SmartLinx Card

SmartLinx cards are generally pre-installed. If unit does not have a SmartLinx card, follow these steps to install one. For reference, see board illustration on page 9.

1. Align card with the two mounting posts and then press-fit with the female connector.
2. Use the screws supplied with the card to attach it to the mounting posts.
3. Wire in the SmartLinx card according to SmartLinx Manual.

## Optional Equipment


To communicate with equipment requiring RS-485 capability, Siemens Milltronics offers the RS-485 External Modem Kit. For more information, go to [www.milltronics.com](http://www.milltronics.com).



# Wiring

## Please note:

- Verify that all system components are installed in accordance with instructions.
- Connect all cable shields to the HydroRanger 200 Shield Terminals. Avoid differential ground potentials by not connecting cable shields to ground (earth) anywhere.
- Keep exposed conductors on shielded cables as short as possible to reduce noise on the line caused by stray transmissions and noise pickup.

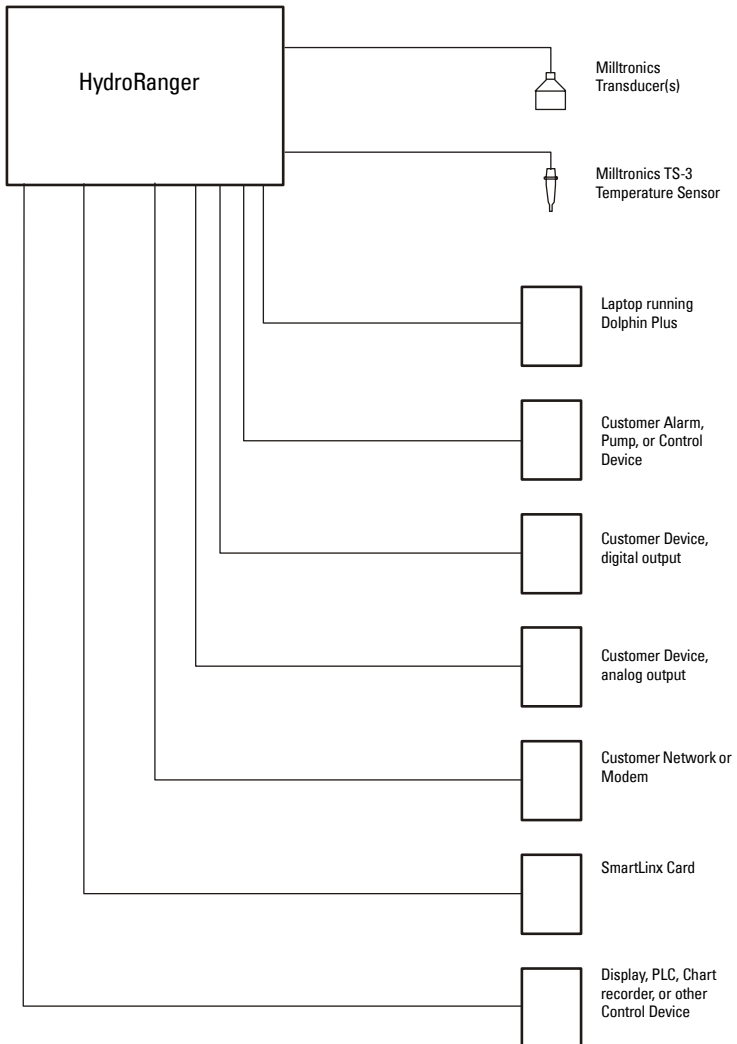


# Terminal Board

The terminal board on the HydroRanger 200 allows all inputs and outputs to be connected simultaneously.

**Note:** Recommended torque on terminal clamping screws.


- 0.56 - 0.79 Nm
- 5 - 7 in.lbs

**Please do not overtighten the screws.**

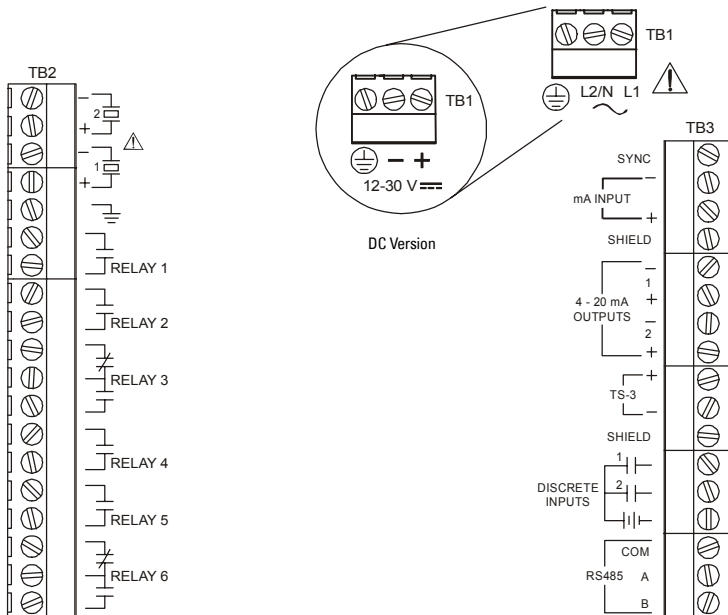

## Cables

The HydroRanger 200 transceiver requires a shielded two-wire connection to the transducer.

Connection	Cable Type
mA input and mA output sync, Temperature sensor, discrete input, dc input Transducer	2-3 copper conductors, twisted, with shield <sup>1</sup> , drain wire, 300V 0.5-0.75 mm <sup>2</sup> (22 - 18 AWG). <b>Maximum length:</b> 365m
	<b>Do not use a coaxial transducer cable extension with the HydroRanger 200. Electrical noise interference affects performance.</b>
Relay output ac input	Relay to be copper conductors per local requirements to meet 250V 5A contact rating.

<sup>1</sup>. Preferred shielding is braided screen.

# Transducers




**Warning:** Hazardous voltage present on transducer terminals during operation.

Run the transducer cable in a grounded metal conduit, separate from other wiring (except TS-3 temperature sensor wiring, if applicable).

## Notes:

- Do not use coaxial cable because of electrical noise interference
- Do not connect the shield and white transducer wires together; wire to separate terminals
- Disregard older transducer manuals that recommend these practices

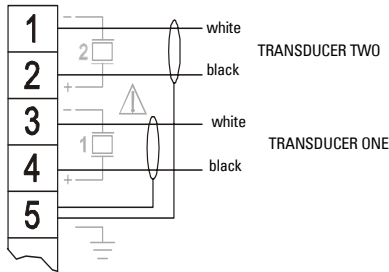


A 0.1  $\mu\text{F}$  (100V or greater) capacitor is included with the HydroRanger 200 for retrofitting old HydroRanger installations. Please see “HydroRanger 200 Installation (for retrofitting HydroRanger Installations)” on page 235.

# Relays

Relay contacts are shown in the de-energized position. All relays are handled identically and can be configured as positive or negative logic using P118.

## Relay Ratings

- four Form **A**, NO relays(1,2,4,5)
- two Form **C**, NO or NC relays (3,6)
- 5A at 250Vac, non-inductive

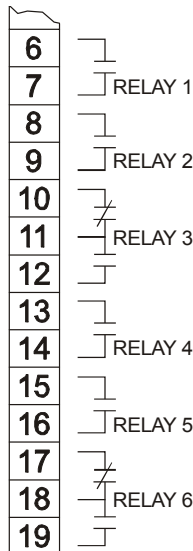

## Power Failure

Relays 1, 2, 4, and 5 are normally open and will fail in the normal state.


Relays 3 and 6 can be wired either normally open or normally closed, and will fail in their de-energized states.

# Temperature Sensor

Accurate temperature readings are critical to accurate level measurements because the speed of sound changes, depending on air temperature, and all Milltronics Echomax and ST-H transducers have an internal temperature sensor.

If the following conditions apply, a separate TS-3 temperature sensor will ensure optimum accuracy:

- the transducer is exposed to direct sunlight (or other radiant heat source)
- the transducer face and monitored surface temperature differs
- faster response to temperature changes is required

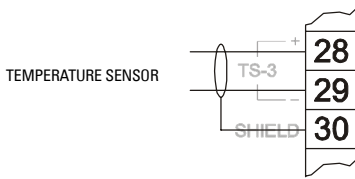


## Note

Use a T-S3 Temperature Sensor only. Leave terminals open (unused) if TS-3 is not deployed.


## mA Input

For more information, consult the Transducer (P004) and mA Input Parameters (P250, P251, and P252) in the parameter reference section.

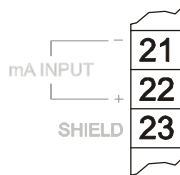

## mA Output

For more information, consult the mA output parameters (P200 to P219) in the parameter reference section.

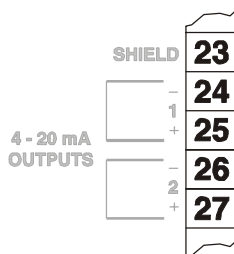


# Level System Synchronization

**Note:** The HydroRanger 200 CANNOT be synchronized with the MultiRanger Plus or the HydroRanger.

When using multiple ultrasonic level monitors, be sure to run the transducer cables in separate grounded metal conduits.

When separate conduits are not possible, synchronize the level monitors so that no unit transmits while another is waiting for echo reception.

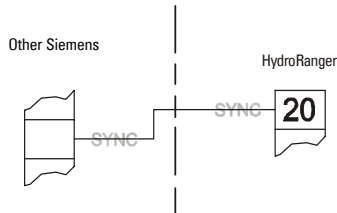

**Synchronizing with another HydroRanger 200 or other Milltronics instruments (DPL+, SPL, XPL+, Hydro+, EnviroRanger, MiniRanger, MultiRanger 100/200):**

- Mount the level monitors together in one cabinet
- Use a common power (mains) supply and ground (earth) for all units
- Interconnect the SYNC terminals of all level monitors
- Contact Siemens Milltronics or your local distributor. See [www.milltronics.com](http://www.milltronics.com).

## Power


### Important!

Before applying power to the HydroRanger 200 for the first time, ensure any connected alarm/control equipment is disabled until satisfactory system operation and performance is verified.

### Notes for AC power connections

- The equipment must be protected by a 15 A fuse, or circuit breaker in the building installation.
- A circuit breaker or switch in the building installation, marked as the disconnect switch, must be in close proximity to the equipment and within easy reach of the operator.

**Note:** Make sure unit is connected to a reliable ground.

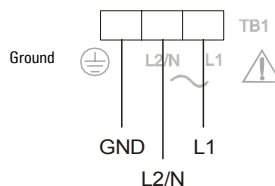


# Digital Communications


Wiring the HydroRanger 200 for communications allows it to be integrated into a full SCADA system or an industrial LAN.

The HydroRanger 200 can also be directly connected to a computer running Dolphin Plus.

## RS-232 Serial Connection

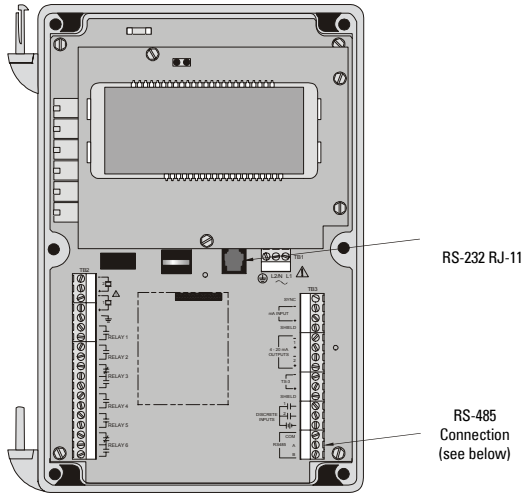


## RS-485 Serial Connection

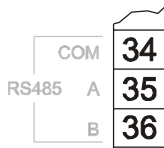

## Discrete Inputs

Discrete inputs have a positive and negative terminal. Requires an external power supply.

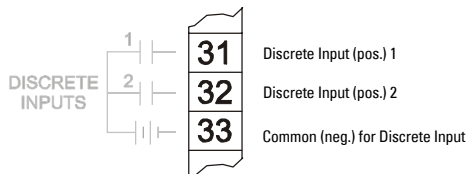

# Operating the HydroRanger 200


The HydroRanger has two modes of operation: **RUN** and **PROGRAM**.

## RUN Mode



In RUN mode, the HydroRanger 200 detects material level and provides control functions. The HydroRanger 200 automatically starts in RUN mode when power is applied.

System status is shown on the unit's LCD, or on a remote communications terminal.

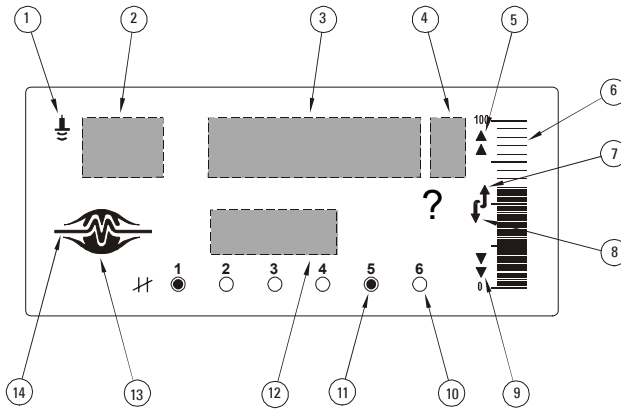


### Display



### Indicator Functions














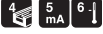


	RUN Mode	PROGRAM Mode
1	index type (see below)	index type (see next table)
2	index	index
3	primary reading	parameter value
4	units	units
5	hi and hi hi alarm designation	auxiliary function
6	level display	n/a
7	filling display	scroll access tag
8	emptying display	scroll access tag
9	lo and lo lo alarm designation	n/a
10	relay # programmed	relay # programmed
11	relay # activated	relay # activated
12	auxiliary reading	parameter number
13	normal operation: 	n/a
14	failsafe operation: 	n/a

## Icons indicating index type (Item 1) edited in PROGRAM mode:

Icon	Index Type
	measurement point or transducer
	relay
	secondary index
mA	mA input or output

## Readings in RUN Mode

Change the displayed values with the keys on the hand programmer. All readings are shown in the Auxiliary field, except for the totalizer and P920.

Key	Function	P#
	Toggle Readings between percent and units: <ul style="list-style-type: none"> <li>Level: 0 – 100%</li> <li>Space or Distance:<sup>1</sup> 100% – 0</li> </ul>	P920
	Accumulated pump running hours <sup>2</sup> for numbered pump.	P310
		
	Hold number key for five seconds to display the number of accumulated pump starts <sup>2</sup> for numbered pump.	P311
		
	Eight-digit totalizer, uses index and reading areas, press again to toggle, P737 sets default. Used for OCM and Pumped Volume.	P322 P323 P920
	Head measurement	P926
	Instantaneous flow based on head (OCM)	P925
	mA Output value	P203
	Temperature	P664
	Rate of level change	P707
	Failsafe Time Left (in %). When the Reading is updated, this value (Auxiliary Reading) resets to 100 and begins to decrease until the next valid measurement is made. If the Failsafe Time Left reaches 0, LOE flashes in the display.	
	Hold for four seconds to show echo confidence	P805
	+ ### Display the value of the entered parameter which is global or indexed by transducer	
	- Pxxx Auxiliary reading displays parameter specified in P731	P731
	Distance	P923

- Distances less than 0.3m (12") from the transducer face cannot be measured reliably. Therefore, a 0% reading is not possible during **Distance** operation.
- If the associated relay is programmed for pump control.



# Status Parameters

Status parameters give the operating status of the HydroRanger 200. You can access parameters with the hand programmer (see page 26) or with Dolphin Plus (see page 22). Remote SCADA system access is also possible.

Parameter		Values
P203	mA Output Value	0 to 22 – Current mA output
P254	Scaled mA Input Value	0 to 9999 – Current mA input after scaling
P275	Scaled Discrete Input Value	Shows current value of discrete input, values vary by DI function
P322	LCD Total Low	The last four digits of the totalizer
P323	LCD Total High	The first four digits of the totalizer
P341	Run Time	The number of days the HydroRanger 200 has been operating
P342	Start Ups	The number of times power has been cycled
P664	Temperature	Current temperature measured by transducer
P707	Rate Value	Current rate of material level change
P708	Volume Rate Display	Current rate of material volume change
P729	Scan Time	Seconds since last level scan
P806	Echo Strength	Strength of primary echo
P920	Reading Measurement	Current primary reading
P921	Material Measurement	Current level from P007–Span
P922	Space Measurement	Empty space above the material level
P924	Volume Measurement	Current volume value, if programmed
P925	Flow Measurement (OCM)	Current flow value, if OCM programmed
P926	Head Measurement (OCM)	Current level, if OCM programmed
P927	Distance Measurement	Distance from transducer face to material

## Controlling the Display

RUN mode provides numerous parameters and variables that you can track on the display (see Display on page 17).


The LCD displays EEEE if a value is too long.

### Adjusting the primary reading for four-digit LCD readout:

Parameter		Action
P060	Decimal Position	Sets maximum number of decimals
P061	Convert Reading	Scales the reading to fit
P062	Offset Reading	Shifts the reading up or down by a fixed amount

## Example

To reference the displayed level to sea level, enter the distance in Units (P005), between Empty (P006) and sea level. (Enter a negative value if Empty is below sea level.)

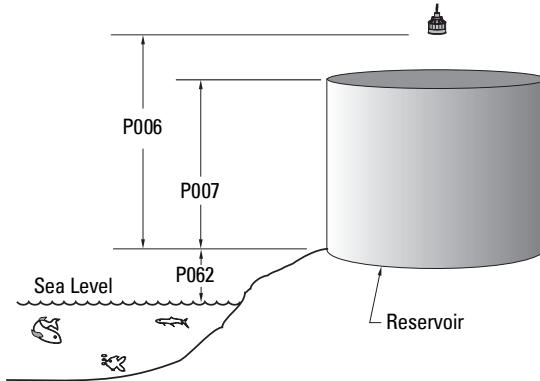

P062 is the distance between sea level and Empty.

## Auxiliary Reading

The Auxiliary Reading area of the LCD displays parameter values while leaving the primary reading on screen.

**Note:** The parameters shown in the auxiliary reading field are indexed as follows:

- global
- by transducer
- by level point

### Setting the Default Auxiliary Reading


To maintain a constant variable display in the auxiliary reading area, set the default.


#### Example

To leave the level reading on the screen and view the echo confidence in the auxiliary reading field, set the following parameter:

Parameter	Index	Value	Description
P730	G	805	Auxiliary field defaults to P805

## Setting a Specific Auxiliary Reading

To display a second auxiliary reading, press  in RUN mode.

**Example:** To set  to display current temperature, go to P731:

Parameter	Index	Value	Description
P731	G	912	Shows P912–Transducer Temperature

## Multiple Readings

During **differential** or **average** operation (P001 = 4 /5), the display scrolls sequentially through Point Numbers 1, 2, and 3. Point 3 is the difference between (or average of) Points 1 and 2.

### Changing Number Scrolling Speed

Parameter	Index	Value	Description
P732	G	5	Hold each value for 5 seconds

See Parameter Indexing on page 31. All the instructions in the following procedures apply to the hand programmer and assume that the HydroRanger 200 is activated.


## PROGRAM Mode

The HydroRanger 200 is programmed by setting its parameters to match your specific application. Most parameters are indexed, allowing you to set the parameter to specific conditions and to more than one input or output. When the HydroRanger 200 is in PROGRAM mode, you can change these parameter values and set operating conditions.

Please refer to the *Parameter Reference* section on page 111 for a full listing and explanations of parameter values.

The HydroRanger 200's primary programming is by the hand programmer. Other access is available through Dolphin Plus software (purchased separately).

### Notes

- To activate PROGRAM from RUN mode, press PROGRAM 
- The display briefly reads ---- while the measurement reading is verified. Reading level and other data is displayed and programmed relays are operated.
- Placing a programmed unit that is in normal operation into PROGRAM mode de-energizes all control relay outputs. Be sure to bypass the HydroRanger 200 while programming it.

# Starting PROGRAM Mode

## Hand Programmer

The hand programmer gives you direct access to the HydroRanger 200.

Aim the hand programmer and press PROGRAM key.

### Note:


- The 3v battery in the hand programmer is not replaceable
- The hand programmer is ordered separately from Siemens Milltronics. Go to [www.milltronics.com](http://www.milltronics.com) for a contact near you.









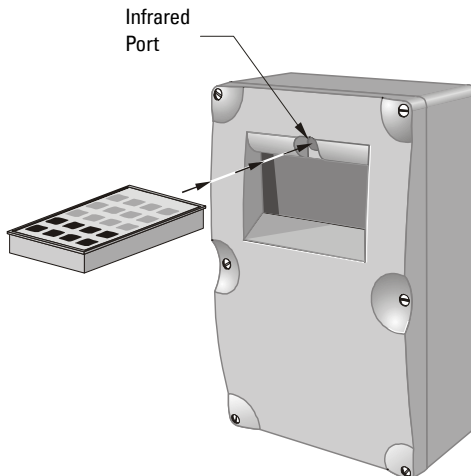











For your convenience, the programmer has a magnetic mounting strip on the back. Keep programmer nearby for easy access.

Point the programmer at the IR port above the display and press the keys.

Unless otherwise noted, each valid key press should produce a change in the LCD. Verify when programming the unit.



# Programmer Keys

Keys	Programming Mode	Run Mode
	1	8-digit Totalizer (toggle)
	2	Pump Running Time
	3	Head
	4	Flow based on Head
	5	mA Output
	6	Temperature
	7	Rate of Change
	8	Failsafe Time Left
	9	N/A
	0	N/A
	Decimal Point (TVT left)	Parameter Value
	Negative Value (TVT right)	Material Level (P731)
	Fire Transducer	Distance
	Run Mode	Program Mode (Key 1)
	Units or %	Units or % (Program Mode) (Key 2)
	Next Display Field	Pause Display Toggle
	Increase Value	Next Index
	Decrease Value	Previous Index
	Enter Value	
	Clear to Preset	


# Dolphin Plus

Use Dolphin Plus software to configure, monitor, tune, and diagnose the HydroRanger 200 from a PC or directly in the field with a laptop.

Dolphin Plus is easy to install and easy to use. Just load the software from the CD onto a desktop PC or Laptop, and then set up or modify complete parameter configurations in a Windows® environment.

 



 


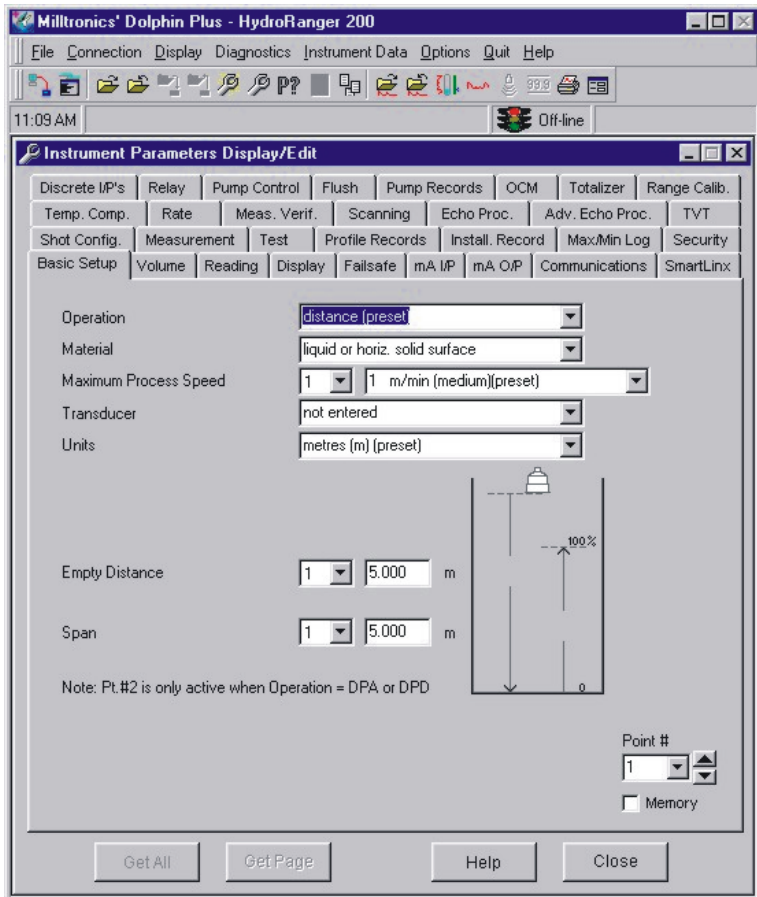







After configuration, use Dolphin Plus to edit parameters, upload and download parameter sets to and from disk, and use parameter sets saved from other instruments. Echo profiles can be used for fine tuning without the need for special instruments. Built-in Quick Start features and Help files guide you through the entire process.

**Note:** Dolphin Plus is ordered separately from Siemens Milltronics.





# Dolphin Plus Toolbar Buttons

The toolbar buttons provide quick access to Dolphin Plus features.

Button	Action
	communicate with instrument—toggle online versus offline
	monitor communications
	send parameter set to instrument
	save parameter set to file
	open the quick start wizard
	open the tabbed parameters window
	find a parameter in the tabbed parameters window
	toggle PROGRAM mode and RUN mode
	open the reporting windows
	load an echo profile from a file
	save the current echo profile to a file
	open the vertical echo profile and tank mimic window
	open the horizontal echo profile window
	take a measurement with the current transducer
	open the reading values (distance measurement) window
	print current echo profile
	open the Echo Info Editor window

# Activating the HydroRanger 200

All the instructions in the following procedures apply to the hand programmer and assume that the HydroRanger 200 is activated.





1. Power the HydroRanger 200.
2. Point the programmer at the unit and press PROGRAM .
3. Press DISPLAY .

## Note: Power up display




- preset to display distance from the face of the transducer to the material
- transducer selection is preset for the XPS-10
- empty distance is preset to 5m

## Changing Parameters

**Note:** If Parameter Value alteration is not permitted, access the Lock parameter (P000) and enter the security code, (see *Security* below).

1. Starting in RUN mode, press PROGRAM  and then press DISPLAY  to put the unit into PROGRAM mode.
2. Press DISPLAY  to select the Parameter Number field.
3. Enter the Parameter Number (e.g. 110). After the third digit is entered, the parameter value is shown.
4. Enter the new value, and press ENTER . The HydroRanger 200 interprets the value, either accepting or replacing it with a valid value.

## Helpful Hints

- For parameters P001 to P007, press a single digit (1–7) and then press DISPLAY  to show that parameter.
- The ? icon indicates that the HydroRanger 200 has accepted the value but that it conflicts with other values entered. Double-check your programming.
- By default, the SCROLL arrows   show only the Quick Start parameters and any that have been changed.
- P733 sets all parameters to be scroll-accessed.

## Security

The Lock parameter (P000) secures the HydroRanger 200 against parameter changes. The unit can still be put into PROGRAM mode when locked, and parameter values can be viewed, but no parameter values can be changed.




When P000 is set to **1954**, programming is enabled. To disable programming, enter another value.

P000 (1954) is a fixed value password. Therefore, you should use other means to secure the HydroRanger 200 if security is a concern.

## Simulation

P000 Lock also controls how simulations affect control relays. By default, control relays are unaffected by simulation levels. But if P000 is set to **-1**, they react to the simulated level. See parameters P925–P927 on page 208 for running a simulation.

## Using Units or Percent (%)

Many parameters can be viewed either in measurement units (P005) or as a percentage. View the parameter and then press MODE  to toggle between units and percentage. The LCD shows the selected measurement type, either units (m, ft) or percentage (%).

Percentage is also available when showing flow and volume with 100%, based on the parameter that defines the maximum.

Measurement	Maximum
Volume	P051
Flow	P604

## Parameters Types

### View Only Parameters

Parameter values indicating status only. They cannot be altered.

### Global Values

Parameter values common to all inputs and outputs on the HydroRanger 200.

When a global parameter is accessed, the index display automatically disappears. When a non-global parameter is accessed, the index display reappears showing the last index number.

### Default Values

Parameter default values are indicated with an \* in the parameter tables.



### P000 Lock

Primary Index	Global	
Value	1954	* OFF: programming permitted
	-1	Simulation Controls (relays energize based on simulated level)
	other	ON: Lock activated and programming not permitted

The asterisk identifies **1954** as the default value.

# Parameter Reset

Returning a parameter to factory default.

1. Display the appropriate parameter number.
2. Display the appropriate index value (if required).
3. Press CLEAR .
4. Press ENTER .

## Master Reset (P999)

Returns all parameters to original values.

Use Conditions:




- before initial system installation
- following a software upgrade

If complete reprogramming is required, use Dolphin Plus to store and retrieve parameters.

When the dual point option is enabled, P999 is indexed by transducer. Use index **00** to reset the entire HydroRanger 200.

# Display Readout


The following readouts are shown when the HydroRanger 200 cannot display a number.

Display	Definition
	Parameter has not been set
	All values not same when viewing index 0
	Value too large for four-digit display

## Changing Parameters (Dolphin Plus)

The other method for changing parameter values is with Dolphin Plus software. It lets you access the HydroRanger 200 from a PC or on site with a laptop and change HydroRanger 200 parameters.

Most examples in this manual use the icons from the hand programmer but nearly all functions are also available through Dolphin Plus.

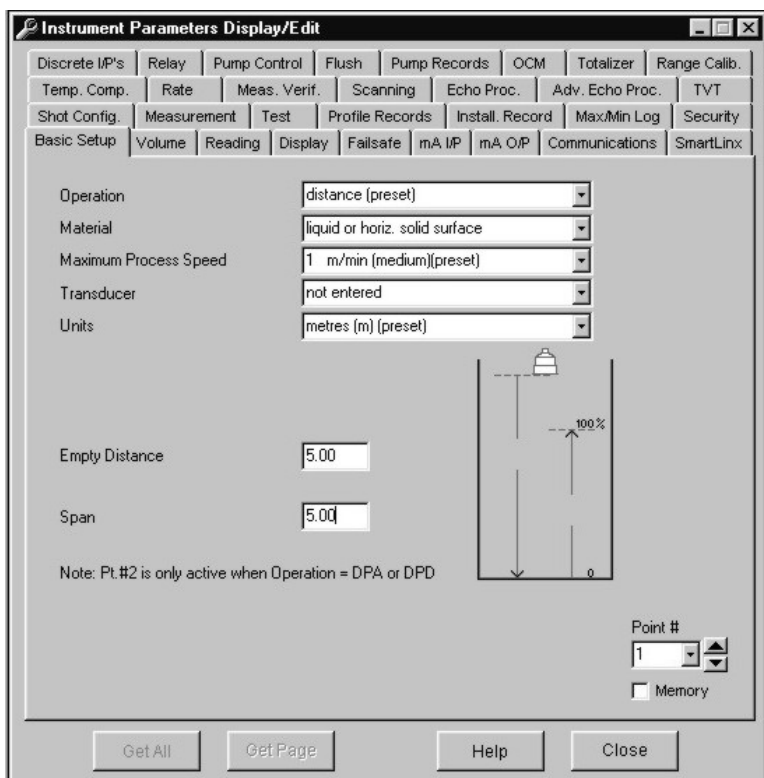


## Parameter Indexing

Parameters are indexed when they apply to more than one input or output. The index value defines the input/output for that parameter. Indexed parameters contain a value for each index, even if that index is not used.

## HydroRanger 200 Display



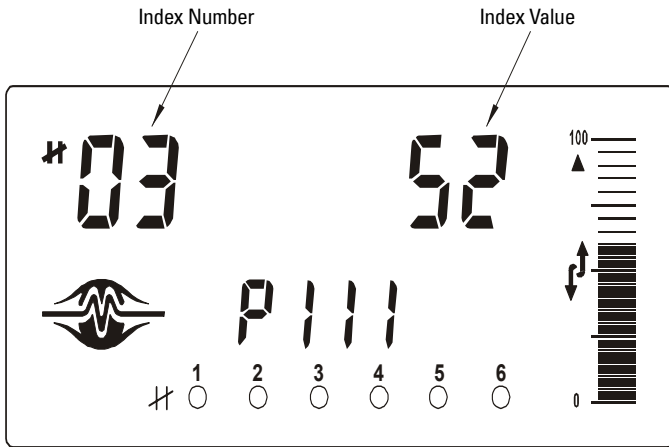

The index number and the index values are displayed above the parameter indicator on the LCD.



### Notes

- An indexed transducer is commonly referred to as a Point (short for 'Measurement Point'). **Point Number** refers to indexed transducers.
- To set all indexed values for a parameter to the same value, use index **0**.
- Transducer parameters are indexed only if Operation (P001) is set to **Difference** (value=4) or **Average** (value=5).

### Accessing a Parameter Index

1. Press DISPLAY  once to clear current parameter field.
2. Enter the new parameter number.
3. Press DISPLAY  twice.
4. Press the number of the required index. Or press ARROW keys   to scroll through the available values.

**Note:** For optimum performance, set values accurately for indexed parameters. Ensure that the correct index value is being changed for each parameter value.


# Primary and Secondary Indexes

**Primary Index:** relates to direct input or output and can refer to relays, communications ports, and other parameters. In parameters that allow secondary indexes, the primary index is often referred to as a **point**.

**Secondary Index:** relates to previously indexed parameters where the parameter requires a second index, permitting multiple values on an indexed input or output.

## Primary Index

**Example Setting:** P111[3] = 52

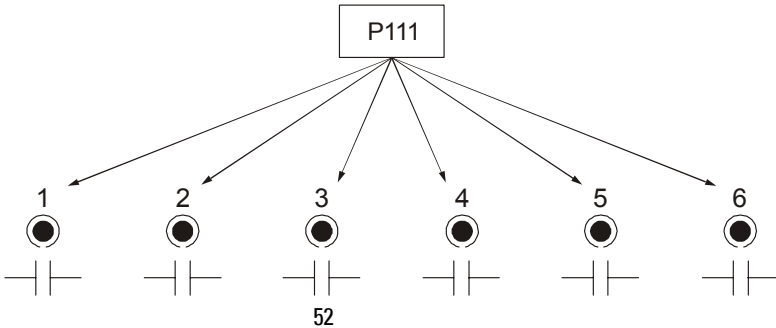




- P111 sets the Relay Control Function
- P111(3) = 52 sets Relay #3 to a value of 52.

## Secondary Index

Parameters with a secondary index permit multiple values for a primary index (point). For example, a volume calculation based on vessel characterization breakpoints requires a distinct set of breakpoints for each measured point.


Thus the primary index refers to the measurement point, and each secondary index refers to a characterization breakpoint value.

### Accessing a Secondary Index

1. Press MODE  and then press DISPLAY  to activate secondary index. The  icon appears under the index field.
2. Enter the secondary index, and then enter the values to set the secondary index.

## Example

P054 provides up to 32 breakpoint levels used with P055 (Volume Breakpoint) for universal volume calculation. The illustration indicates how you can set secondary indexes to specific functions.

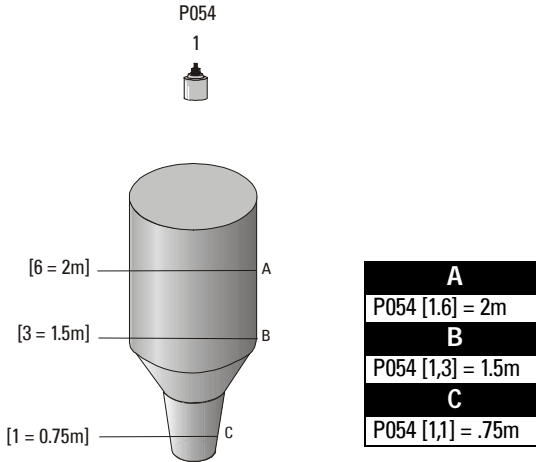

## Starting Measurement

### Startup

The HydroRanger 200 starts in DISTANCE mode with the transducer preset for the XPS-10 and an empty distance of 5 meters. Change the following parameters to reflect your application parameters.

Parameter	Index	Value	Description
P001	G	1	Operation = level
P002	G	1	Material = liquid
P003	G	2	Maximum Process Speed = medium
P004	G	104	Transducer = XPS-15
P005	G	1	Units = meters
P006	G	12	Empty = 12m
P007	G	10	Span = 10m

# Measurement Conditions

The following information will help you configure your HydroRanger 200 for optimal performance and reliability.

## Response Rate

The response rate of the device influences the measurement reliability. Use the slowest rate possible with the application requirements.

The response rate is also important to functions connected to the filling or emptying indicators.

## Dimensions

The dimensions of the vessel, wet well, or reservoir (except empty and span) are only important if you require volume.

Volume is required to report the level value in terms of volume. The pumped volume function can also report pumped volume or pump efficiencies.

## Failsafe

The failsafe parameters ensure that the devices controlled by the HydroRanger 200 default to an appropriate state when a valid level reading is not available.


- P070 – Failsafe Timer activates if an error condition is detected. Upon expiration of the timer, relay status defaults to values based on P071.
- P071 – Failsafe Material Level determines the level reading if the Failsafe Timer expires and the unit is still in an error condition.
- P129 – Relay Failsafe controls the reaction of each relay. See Relay Failsafe on page 38 for more information.

If Failsafe Operation activates frequently, see the *Troubleshooting Appendix* on page 218.

# Relays

Relays are the primary controls of external devices such as pumps or alarms.

The HydroRanger 200 comes with extensive control and alarm functions.

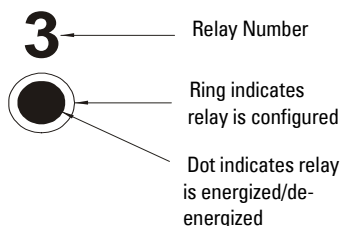

## General Introduction

Six onboard multi-purpose relays are provided on the HydroRanger 200. Each relay may be independently assigned to one function with a corresponding status icon on the LCD.

The relay functions fall under three modes of operation:

Mode	Function
alarm	alarm ON = LCD Icon ON = relay coil de-energized
pump	pump ON = LCD Icon ON = relay coil energized
miscellaneous	contact closed = LCD Icon ON = relay coil energized

## Relay Function

### Alarm

#### Level

In high alarm, the function goes on when the level rises to the ON setpoint and goes off when the level lowers to the OFF setpoint. In low alarm, the function goes on when the level lowers to the ON setpoint and goes off when the level rises to the OFF setpoint.

#### In Bounds

The relay will be in alarm if the level is inside the zone between the setpoints.

#### Out of Bounds

The relay will be in alarm if the level is outside the zone between the setpoints.

#### Rate of Change

In filling alarm, the function goes on when the rate of filling increases to the ON setpoint and goes off when the rate of filling drops to the OFF setpoint. In emptying alarm, the function goes on when the rate of emptying increases to the ON setpoint and goes OFF when the rate of emptying drops to the OFF setpoint. For emptying alarm, the setpoints must be entered as negative values.



## Temperature

In high alarm, the function goes on when the temperature rises to the ON setpoint and goes off when the temperature lowers to the OFF setpoint. In low alarm, the function goes on when the temperature lowers to the ON setpoint and goes off when the temperature rises to the OFF setpoint.

## Loss of Echo

The function goes on when the fail-safe timer expires. The function goes OFF when a valid echo is received (fail-safe timer is reset).

## Pump

### Level

In pump down, the function goes on when the level rises to the ON setpoint and goes off when the level lowers to the OFF setpoint. In pump up, the function goes on when the level lowers to the ON setpoint and goes off when the level rises to the OFF setpoint.

## Miscellaneous

### Totalizer and Samplers

Refer to *Totalizing Pumped Volume* on page 58. Relays are normally de-energized, contact closure is approximately 200 mSec duration.

### Setpoint - ON / OFF

If the ON setpoint is higher than the OFF setpoint, the relay operates as:

- high alarm
- pump down control

If the ON setpoint is lower than the OFF setpoint, the relay operates as:

- low alarm
- pump up control

The ON and OFF setpoints can not be the same on an individual relay but may be common to other relays. The dead band or hysteresis is the difference between the ON and OFF setpoints. For in and out of bounds level alarms, the hysteresis is set at  $\pm 2\%$  of span from either boundary.

## Relay Status – Non Run Modes

When the fail-safe timer expires, pump control relays respond as previously described. However, alarm relays will respond in the following manner:

Fail-Safe Mode	Relay Status	
	High Alarm	Low Alarm
Fail-Safe High	ON	OFF
Fail-Safe Low	OFF	ON
Fail- Safe Hold	HOLD	HOLD

Upon entering the program mode, all pump control relays will be turned OFF. Alarm relays will hold their prior status.

### Cautions:

- If the relay status can affect plant operation or personnel safety, it is advisable to override the relay functions or disconnect the relay wiring during calibration or simulation.
- Keep power disconnected at main breaker when HydroRanger cover is opened.

## Relay States

The relays on the HydroRanger 200 are completely programmable, allowing for any control scheme.

Relay Types
Relay 1,2,4,5 – NO (Form A)
Relay 3,6 – NO / NC (Form C)

## Relay Related Parameters

Some parameters affect how relays react during normal conditions:

### P100–Preset Applications

Sets the HydroRanger 200 to a preset application. These preset applications quickly set up the HydroRanger 200 with a minimum number of parameters.

### P111–Relay Control Function

Sets the default state differently, depending on whether the relay is programmed as an alarm or a control.

### P111–Alarm Functions

The alarm function de-energizes the relay coils. During normal operation (no alarms), the relay coils are energized.

### **P111–Control Functions**

The control function energizes the relay coils. When the instrument is at rest (no controls operating) the relay coils are de-energized.

### **P112–Relay ON Setpoint**

Sets the process point at which the relay is tripped.

### **P113–Relay OFF Setpoint**

Sets the process point at which the relay is reset.

### **P115–Relay Interval Setpoint**

Sets length of time between starts.

### **P116–Dead Band**

Sets distance above and below the bound alarm setpoints.

### **P118–Relay Output Logic**

Affects relay reaction. Reverses the logic (normally-open to normally-closed or vice versa).

### **P129–Relay Failsafe**

Changes how individual relays react to a failsafe condition on the instrument.

## **Relay Wiring Test**

### **P119–Relay Logic Test**

Checks the application wiring by forcing a relay control function, such as a level alarm or pump control setpoint. Ensure all the relay programming and wiring works properly.

Please verify that **ON** and **OFF** respond correctly. Use P119 as a final test once all of the relay programming is done.

## **Relay Activation**

The flexibility of the relay functions ensures that the HydroRanger 200 can support relay wiring for different systems and applications. Use the following as a guide to the most common parameters.

### **Relay Setpoints and Functionality**

When a setpoint is reached, the corresponding action is taken. The setpoint can be an ON or OFF setpoint related to a process variable.

The setpoint can be an ON or OFF setpoint related to a process variable, or a timed setpoint based on interval and duration.

Functions affected by setpoint are configured by parameters that determine the application requirements such as timing. P111 Pump and Control functions (see page 127) sets the function requirements. Other function parameters:

- P132–Pump Start Delay
- P133–Pump Power Resumption Delay
- P645–Relay Duration

## Relay Logic is Modified

Normal operating conditions means that alarms are off and pumps are on. This can be reversed using P118–Relay Output Logic.

## Relay Failsafe



### P129–Relay Failsafe




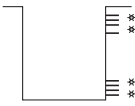
Adjusts how individual relays react to a failsafe condition. Relays can be set to:

- OFF Control is by P071–Failsafe Material Level
- HOLd Keeps the relay in the current state
- dE De-energizes the relay (default for pump controls)
- En Energizes the relay

## Preset Applications

Preset applications set up the relay parameters to predetermined values shown below:

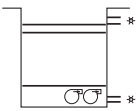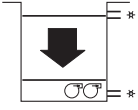Value	#	Parameters Affected						
Off	0	All relays set to <b>OFF</b>						
Wet Well 1 	1	Pump down with the following settings:						
		Parameter	Relay #					
			1	2	3	4	5	6
		P111	52	52	1(H)	1(L)	0	0
		P112	70%	80%	90%	10%	–	–
P113	20%	20%	85%	15%	–	–		
Wet Well 2 	2	Pump down with the following level and rate settings:						
		Parameter	Relay #					
			1	2	3	4	5	6
		P111	52	52	1(H)	1(L)	0	0
		P112	70%	80%	90%	10%	–	–
P113	20%	20%	85%	15%	–	–		
	P121	1						
Because the pumps are started by rate, you must change P703 to desired empty rate.								

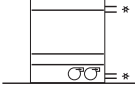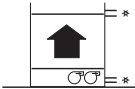Value	#	Parameters Affected						
Reservoir 1 	3	Pump up with the following level settings:						
		Parameter	Relay #					
			1	2	3	4	5	6
		P111	52	52	1(H)	1(L)	0	0
		P112	30%	20%	90%	10%	–	–
P113	80%	80%	85%	15%	–	–		
Reservoir 2 	4	Pump up with the following level and rate settings:						
		Parameter	Relay #					
			1	2	3	4	5	6
		P111	52	52	1(H)	1(L)	0	0
		P112	20%	20%	90%	10%	–	–
P113	80%	80%	85%	15%	–	–		
		P121	1					
Because the pumps are started by rate you must change P702 to desired fill rate.								
Screen 	5	Differential control of a screen or rake:						
		Parameter	Relay #					
			1	2	3	4	5	6
		P110	3	1	2	3	0	0
		P111	50	1(H)	1(L)	1(H)	–	–
		P112	80%	90%	10%	90%	–	–
P113	20%	85%	15%	10%	–	–		
Alarms 	6	General alarms at four setpoints:						
		Parameter	Relay #					
			1	2	3	4	5	6
		P111	1(H)	1(L)	1(HH)	1(LL)	0	0
		P112	80%	20%	90%	10%	–	–
P113	75%	25%	85%	15%	–	–		

# Backup Level Override

Backup level override provides the option of overriding the ultrasonic input with another contacting point level device, for example, the Pointek CLS 200. The ultrasonic reading is fixed at the programmed switch level until the discrete input is released and the ultrasonic device makes its decisions based on the override value.

## Backup Level Override Parameters

### P064: Reading Override Enable

Sets the discrete input as the source of a level reading override.

### P065: Reading Override Value

Substitutes value for current reading when the discrete input (P064) is enabled. Value is added in current units and is valid only for the following:

- level
- space
- distance
- difference
- average modes of operation

### Example

A high level backup switch is connected to Digital Input Two in the same application as Transducer One at level value 4.3m.

### Settings

Parameter	Index	Value
P064	1	2
P064	2	0
P065	1	4.3
P065	2	–

When the level rises to 4.3m and the switch is activated, the reading is forced to 4.3m where it stays until the switch is de-activated.

### P066: Override Time Delay

Sets the time (in seconds) used to calm the override condition input.

# Discrete Inputs

---

## Wiring the Discrete Inputs

Normal state is standard operation, with the HydroRanger 200 sensing the material level and controlling the pumps.

The discrete input contacts are either **normally-open** or **normally-closed** when the system state is normal.

**Example:**

Normal state for a backup high level switch is **open**, and the contacts on the discrete input are wired as **normally-open**.

See *Discrete Inputs* in the *HydroRanger 200 Installation* section on page 16 for complete details on wiring the discrete inputs.

## Programming the Discrete Input Logic

The P270 series of parameters permits control over the discrete input.

DI State	P270 Setting
Normally Open	P270 = 2
Normally Closed	P270 = 3

The current value of the discrete input is reported in P275:

P275 Setting	HydroRanger 200 State
0	Normal State
1	Exception State

# mA I/O

To integrate the HydroRanger 200 with other equipment, use the mA input and outputs.

**Note:** When a mA input parameter is accessed, a mA symbol appears in the upper left corner of the LCD display.

The mA input can be used as a level measurement or can be passed on to a SCADA system.

## mA Input

### Level Reading Parameters

Parameter	Index	Value	Description
P004	1	250	Transducer = mA input 1
P250	1	2	Scale = 4 to 20 mA
P251	1	0	4 mA = 0% of span
P252	1	100	20 mA = 100% of span
P253	1	0	Do not damp the input signal

To pass the mA input on to a SCADA system, read the value from the appropriate communication registers. For more information, see the *Communications* section on page 83.

## mA Output

The HydroRanger 200 has two mA outputs, used to send measurements to other devices.




Configuring the mA output to send a 4 to 20 mA signal scaled from 10% to 90% of span of the second transducer:

Parameter	Index	Value	Description
P200	1	2	set to 4 to 20 range
P201	1	1	send mA proportional to level reading
P202	1	2	base mA on level point 2
P210	1	10	set 4 mA at 10% of span <sup>1</sup>
P211	1	90	set 20 mA at 90% of span <sup>2</sup>
P219	1	0	set failsafe action as 0 mA

1. If the level reading drops below 10% of span, the mA output drops below 4 mA.
2. If the level reading rises above 90% of span, the mA output rises above 20 mA.

 




## Calibrating 4 mA Output

1. Connect the mA receiving device to the HydroRanger 200.
2. Put the HydroRanger 200 into PROGRAM mode.
3. Set P911–mA Output Value to 4.0.
4. View the mA level on the receiving device.
5. If there is a discrepancy, use P214–4 mA Output Trim to correct the value.  
Press MODE  and then the ARROWS   to increase or decrease the trim.
6. Repeat until the mA level on the receiving device equals 4.0 mA.

The unit is now calibrated for 4 mA for the receiving device.

## Calibrating 20 mA Output

1. Connect the mA receiving device to the HydroRanger 200.
2. Put the HydroRanger 200 into PROGRAM mode.
3. Set P911–mA Output Value to 20.0.
4. View the mA level on the receiving device.
5. If there is a discrepancy, use P215–20 mA Output Trim to correct the value.  
Press MODE  and then the ARROWS   to increase or decrease the trim.
6. Repeat until the mA level on the receiving device equals 20.0.

The unit is now calibrated for 20 mA for the receiving device.

## Verifying the mA Range

Checks that the external device can track the entire 4 to 20 mA range sent by the HydroRanger 200.

1. Use P920 to put the HydroRanger 200 into Simulation mode (see page 79).
2. Run the simulation through one complete fill / empty cycle.
3. View P911–mA Output Value to verify that it tracks to the simulation.
4. View the mA value reported on the external equipment to verify that it also tracks to the simulation.

# Volume

Volume is used in two situations:

1. Calculate and display volume instead of level. For programming all setpoint parameters in terms of volume units rather than level units.
2. Calculate pumped volume to accomplish the following:
  - Totalize the volume of material that is pumped out of the wet well

If you require this functionality, please contact your local Siemens Milltronics representative at [www.milltronics.com](http://www.milltronics.com).

## Readings

When using volume, readings are given in arbitrary units specified in P051.

The default is **100**, which gives a reading in percent of total. Use whatever units you want here. If the value is too large for the four-digit LCD, use a larger unit.

 
### Example

If a wet well has a maximum capacity of 250,000 liters, use the value 250.0 for P051 and set the reading in 1000s of liters.

## Tank Shape and Dimensions

There are many common tank shapes to select from. (See P050. If possible, use one of these.) Each tank shape uses the Empty distance (P006) in its calculations of volume.

Some tank shapes also require extra dimensions to calculate the volumes. Do not estimate these values. They must be correct to ensure the accuracy of your volume calculations.

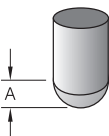

To configure volume for a tank with a half-sphere bottom, set the following:

Parameter	Index	Value	Description
P050	1	4	selects the correct tank shape
P051	1	100	sets maximum volume at 100 (percent)
P052	1	1.3	sets <b>A</b> to 1.3m

### Notes:

- The default reading changes to a range from 0 to 100 (the value in P051)
- Empty (P006) is still measured to the bottom of the tank, not the top of **A**.


# Characterization Chart

If you cannot use a pre-defined tank, then use one of the universal tank shapes and program the characterization curve.

1. Plot a volume to height chart. Usually a tank supplier will provide this chart. However, if you have a custom-built wet well then you will need access to complete drawings of the well or accurate measurements.
2. Enter the curve values from this chart into P054 and P055.
3. Ensure extra points are added around sharp transitions in the wet well volume (e.g. as steps in the well wall).

**Note:** The end points in the curve are **0,0** (fixed) and the point defined by P007–Span and P051–Maximum Volume.

## Example Chart

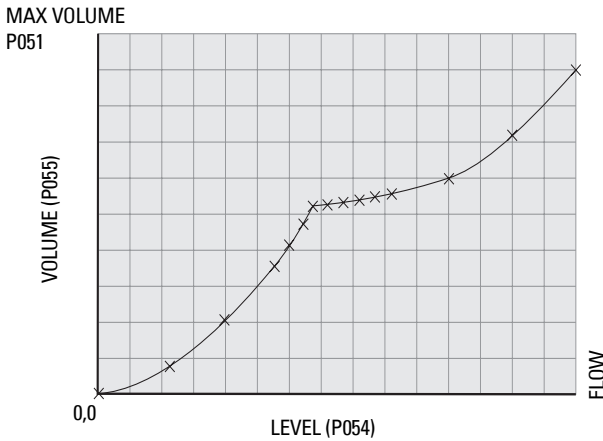

See table below for index values and descriptions


Parameter	Transducer	Index	Value	Description
P054	1	1	0.0	Determines the Level breakpoints at which the volumes are known.
		2	0.8	
		3	2.0	
		4	3.5	
		5	4.1	
		6	4.7	
		7	5.1	
		8	5.2	
		9	5.3	
		10	5.4	
		11	5.5	
		12	5.6	
		13	6.0	
		14	7.2	
		15	9.0	
P055	1	1	0.0	<p>Determines the volumes which correspond to the level breakpoints. The universal calculations interpret between the breakpoints to produce an accurate model of the volume at all level readings.</p> <p><b>Settings</b>  P050 = 9 for linear approximation  P050 = 10 for curved approximation</p> <p>Linear approximation uses a linear algorithm; curved approximation uses a cubic spline algorithm.</p>
		2	2.1	
		3	4.0	
		4	5.6	
		5	5.9	
		6	6.3	
		7	6.7	
		8	7.1	
		9	7.8	
		10	8.2	
		11	8.8	
		12	9.2	
		13	10.9	
		14	13.0	
		15	15.0	

## Level

The level alarm is the most common. Use this alarm to warn you when your process is in danger of being upset due to high or low levels.

Generally, the four alarms used are Hi, Hi Hi, Lo, and Lo Lo.

### Set the Common Parameters

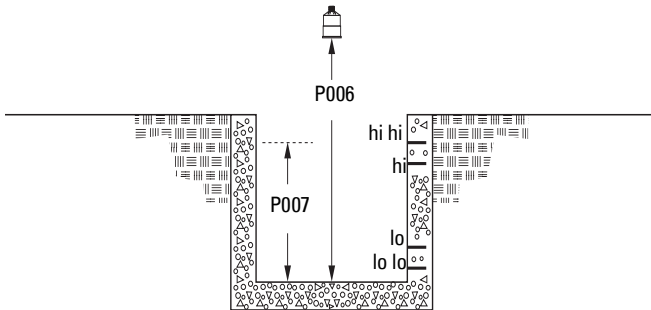


 
 
 
 



**Prerequisite:** You must know the details of your application and substitute the values for the sample values provided. If you are bench testing the unit, then set your test values to be the same as the sample values.





Parameter	Index	Value	Description
P001	G	1	Operation = level
P002	G	1	Material = liquid
P003	G	2	Maximum Process Speed = medium
P004	G	102	Transducer = XPS-10
P005	G	1	Units = meters
P006	G	1.8	Empty = 1.8m
P007	G	1.4	Span = 1.4m

## Setting Simple Level Alarms

To set Relay Five to a standard level alarm (Hi Hi, Hi, Lo, Lo Lo) do the following:

Parameter	Index	Value	Description
P111	5	1	<ul style="list-style-type: none"> <li>Set P111, indexed to relay, to the value 1 for level alarm</li> <li>Press UNIT  to display the Auxiliary Function symbol.</li> <li>Press ARROW keys   as required to scroll to the alarm designation (, , , or ).</li> <li>Press ENTER  to enter the value.</li> </ul>
P112	5	1.2m	Set the <b>ON</b> setpoint
P113	5	1.15m	Set the <b>OFF</b> setpoint

Available designations:

Alarm	Designation
Hi Hi	
Hi	
Lo	
Lo Lo	

## Rate

Rate alarms can trigger an alarm if the vessel is filling/emptying too quickly.

### Setting a Filling Rate Alarm

Parameter	Index	Value	Description
P111	5	4	These settings trip the alarm when the reservoir is filling faster than 1.0m per minute and reset it at 0.9m per minute.
P112	5	1m	
P113	5	0.9m	

### Setting an Emptying Rate Alarm

Parameter	Index	Value	Description
P111	5	4	These settings trip the alarm when the reservoir is emptying faster than 10% of span per minute and reset the alarm when emptying falls to 5%.
P112	5	-10%	
P113	5	-5%	

## In Bounds / Out of Bounds Range

Use the bounded range alarms to detect when the level is inside or outside of the range. By using a bounded range alarm, you can effectively put two level alarms (high and low) on one relay.

### Setting an Out of Bounds Alarm

Parameter	Index	Value
P111	5	3
P112	5	1.3
P113	5	0.3
P116	5	0.05

#### Results:

- Trips alarm above 1.35m and below 0.25m
- Resets alarm below 1.25m and above 0.35m

### Setting an In Bounds Alarm

Parameter	Index	Value
P111	5	2
P112	5	1.3
P113	5	0.3
P116	5	0.05

#### Results:

- Trips alarm below 1.25m and above 0.35m
- Resets alarm above 1.35m and below 0.25m

## Cable Fault

Activates an alarm if transducer cable circuit enters a shorted or opened state.

Parameter	Index	Value	Description
P111	5	7	Alarm on transducer cable fault
P110	5	1	Alarm on Transducer One

## Temperature

Use the temperature alarm to activate an alarm when the temperature reaches the **ON** setpoint (P112). This alarm uses the same setpoint parameters as the level alarms (P112 and P113).

With P112 and P113, you can set a high alarm (**P112 > P113**) or a low alarm (**P112 < P113**).

This table shows a high alarm

Parameter	Index	Value	Description
P111	5	5	Alarm on temperature
P112	5	45	<b>ON</b> setpoint at 45 °C
P113	5	43	<b>OFF</b> setpoint at 43 °C
P110	5	1	Take the temperature reading from Transducer One

The temperature source can be the temperature sensor built into the transducer or an external TS-3, as set by P660.

## Loss of Echo (LOE)

Parameter	Index	Value	Description
P110	5	1	Alarm on LOE for Transducer One
P111	5	6	Alarm on LOE
P070	G	0.5	Trip alarm when 0.5 minutes (30 seconds) pass without detecting a valid echo.




# Pump Control

## Setting a Pump Down Group

### Example: Sewage Wet Well

Setting a group of three pumps to pump down a wet well.

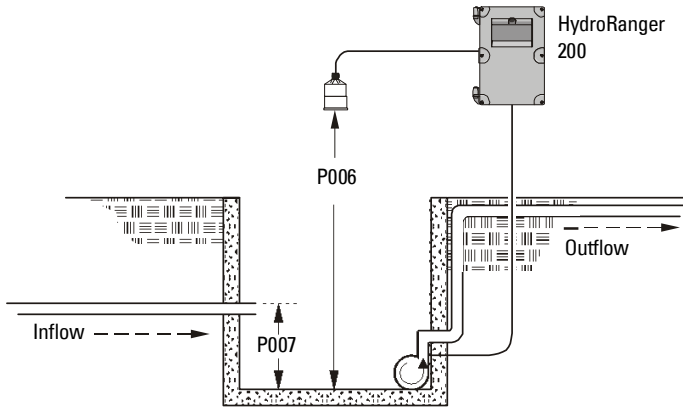

### Set the Common Parameters

**Prerequisite:** Substitute the details of your application in place of the sample values provided. If you are bench testing the unit, set your test values to be the same as the sample values.

Parameter	Index	Value	Description
P001	G	1	Operation = level
P002	G	1	Material = liquid
P003	G	2	Maximum Process Speed = medium
P004	G	102	Transducer = XPS-10
P005	G	1	Units = meters
P006	G	1.8	Empty = 1.8m
P007	G	1.4	Span = 1.4m

## Set Relays to ALTERNATE DUTY ASSIST

Parameter	Index	Value	Description
P111	1	52	Sets the pump relays (index 1, 2, and 3) to ALTERNATE DUTY ASSIST.
P111	2	52	
P111	3	52	

## Set the ON Setpoints


Parameter	Index	Value	Description
P112	1	1.0m	Sets the three setpoints for the pump relays.
P112	2	1.1m	The first cycle will use these setpoints.
P112	3	1.2m	Subsequent cycles rotate the setpoints among the pumps.

## Set the OFF Setpoints

Parameter	Index	Value	Description
P113	0	0.5m	By using index <b>0</b> all six relays are set at the same time, <b>including any alarm relays</b> . Use with caution.

## Setting a Pump Up (Reservoir) Group

Sets a group of three pumps to pump up a reservoir.

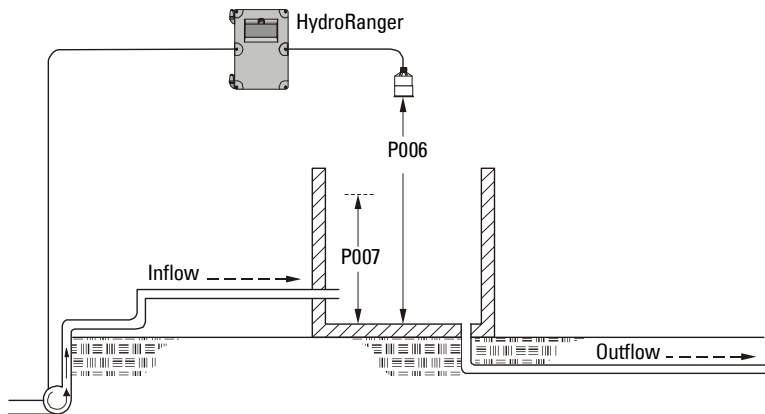

## Set the Common Parameters

**Prerequisite:** Substitute the details of your application in place of the sample values provided. If you are bench testing the unit, set your test values to be the same as the sample values.

Parameter	Index	Value	Description
P001	G	1	Operation = level
P002	G	1	Material = liquid
P003	G	2	Maximum Process Speed = medium
P004	G	102	Transducer = XPS-10
P005	G	1	Units = meters
P006	G	1.8	Empty = 1.8m
P007	G	1.4	Span = 1.4m

## Set Relays to ALTERNATE DUTY ASSIST

Parameter	Index	Value	Description
P111	1	52	Sets the pump relays (index 1, 2, and 3) to ALTERNATE DUTY ASSIST.
P111	2	52	
P111	3	52	

## Set the Relay ON Setpoints

Parameter	Index	Value	Description
P112	1	0.4m	Sets the three setpoints for the pump relays.
P112	2	0.3m	The first cycle will use these setpoints.
P112	3	0.2m	Subsequent cycles rotate the setpoints among the pumps.

## Set the Relay OFF Setpoints

Parameter	Index	Value	Description
P113	0	1.3m	By using index <b>0</b> all six relays are set at the same time, <b>including any alarm relays</b> . Use with caution.

For more information, see *Appendix D: Pump Control Reference* on page 227.

# Other Pump Control Algorithms

## Set Relays to ALTERNATE DUTY BACKUP

Parameter	Index	Value	Description
P111	1	53	Sets the pump relays (index 1, 2, and 3) to ALTERNATE DUTY BACKUP.
P111	2	53	
P111	3	53	

### Set the Relay ON Setpoints

Parameter	Index	Value	Description
P112	1	0.4m	Sets the three setpoints for the pump relays.
P112	2	0.3m	The first cycle will use these setpoints.
P112	3	0.2m	Subsequent cycles rotate the setpoints among the pumps.

### Set the Relay OFF Setpoints

Parameter	Index	Value	Description
P113	0	1.3m	By using index <b>0</b> all HydroRanger 200 are set at the same time, <b>including any alarm relays</b> . Use with caution.

## Set Relays to FIXED DUTY ASSIST

Parameter	Index	Value	Description
P111	1	50	Sets the pump relays (index 1, 2, and 3) to FIXED DUTY ASSIST. Multiple pumps can run simultaneously.
P111	2	50	
P111	3	50	

### Set the Relay ON Setpoints

Parameter	Index	Value	Description
P112	1	0.4m	Sets the three setpoints for the pump relays.
P112	2	0.3m	The first cycle will use these setpoints.
P112	3	0.2m	Subsequent cycles rotate the setpoints among the pumps.

### Set the Relay OFF Setpoints

Parameter	Index	Value	Description
P113	0	1.3m	By using index <b>0</b> all HydroRanger 200 are set at the same time, <b>including any alarm relays</b> . Use with caution.

## Set Relays to FIXED DUTY BACKUP

Parameter	Index	Value	Description
P111	1	51	Sets the pump relays (index 1, 2, and 3) to FIXED DUTY BACKUP. Only one pump will ever run at one time.
P111	2	51	
P111	3	51	

### Set the Relay ON Setpoints

Parameter	Index	Value	Description
P112	1	0.4m	Sets the three setpoints for the pump relays. The setpoints remain attached to the pump relays.
P112	2	0.3m	
P112	3	0.2m	

### Set the Relay OFF Setpoints

Parameter	Index	Value	Description
P113	0	1.3m	By using index <b>0</b> all HydroRanger 200 are set at the same time, <b>including any alarm relays</b> . Use with caution.

## Set Relays to ALTERNATE DUTY SERVICE

Parameter	Index	Value	Description
P111	1	54	Sets the pump relays (index 1, 2, and 3) to SERVICE RATIO DUTY ASSIST
P111	2	54	
P111	3	54	
P122	1	25	Sets the ratio to: 25% – Pump One 50% – Pump Two 25% – Pump Three
P122	2	50	
P122	3	25	

### Set the Relay ON Setpoints

Parameter	Index	Value	Description
P112	1	0.4m	Sets the three setpoints for the pump relays. The first cycle will use these setpoints. Subsequent cycles rotate setpoints among the pumps..
P112	2	0.3m	
P112	3	0.2m	

### Set the Relay OFF Setpoints

Parameter	Index	Value	Description
P113	0	1.3m	By using index <b>0</b> all HydroRanger 200 are set at the same time, <b>including any alarm relays</b> . Use with caution.

# Set Relays to FIRST IN FIRST OUT (FIFO) ASSIST

Parameter	Index	Value	Description
P111	1	56	Sets the pump relays (index 1, 2, and 3) to FIFO DUTY ASSIST.
P111	2	56	
P111	3	56	

## Set the Relay ON Setpoints

Parameter	Index	Value	Description
P112	1	0.4m	Sets the three setpoints for the pump relays. The first cycle will use these setpoints. Subsequent cycles rotate the setpoints among the pumps.
P112	2	0.3m	
P112	3	0.2m	

## Set the Relay OFF Setpoints

Parameter	Index	Value	Description
P113	0	1.3m	By using index <b>0</b> all HydroRanger 200 are set at the same time, <b>including any alarm relays</b> . Use with caution.

# Optional Pump Controls

## Starting Pumps by Rate of Level Change

Use this function when multiple pumps will be controlled by rate of level change rather than setpoints. Pumping costs can be reduced because only the highest ON setpoint needs to be programmed. This results in a lower difference in head to the next wet well which, in turn, results in less energy being used to pump out the well.

Parameter	Index	Value	Description
P112	1	1.35	Starting pumps by rate allows all setpoints to be set higher to save money by pumping from the highest safe level of the wet well.
P112	2	1.35	
P112	3	1.35	
P113	1	0.5m	Notice that all indexed relays for both P112 and P113 are set to the same levels.
P113	2	0.5m	
P113	3	0.5m	
P121	1	1	The pumps will start on 20 second intervals until the rate set in P703 is met.
P121	2	1	
P121	3	1	
P132	G	20.0	

When the first ON setpoint is reached, the pumps will start, one by one, until the material level rate of change is set at the same value or greater than the value in:

- P703 – Emptying Indicator (pump down applications)
- P702 – Filling Indicator (pump up applications)

Set delay between pump starts using P132 – Pump Start Delay.

### Single Point Mode

- Single Point Mode: one pump by rate control available that affects all pumps.

#### Notes:

- Set all pump control relay ON and OFF setpoints to the same value
- If the level is within 5% of Span (P007) of the OFF setpoint, then the next pump is not started

## Rotating Pumps by Service Ratio

**Prerequisite:** Set pump relays to a service ratio value (P111 = 54 or 55).

Parameter	Index	Value	Description
P122	1	1	These values will start Pump Two 50% of the time and Pumps One and Three each 25% of the time.
P122	2	2	
P122	3	1	

#### Notes:

- The HydroRanger 200 will not sacrifice other pumping strategies to ensure that the ratio is held true
- If the pump relays are set to the same value, then the ratio equals 1:1 and all pumps are used equally (preset)

When more than one pump is assigned a Pump Service Ratio value (in any time units) and a pump start is required (P112 Relay Setpoint ON), the pump with the fewest running hours (with respect to the assigned ratio values) starts.




Conversely, when a pump stop is required (P113 Relay Setpoint OFF), the pump with the most running hours (as compared to the assigned ratio values) stops.

# Totalizing Pumped Volume

**Prerequisite:** the volume of the vessel must be known.

Parameter	Index	Value	Description
P001	G	7	Operation = pumped volume
P002	G	1	These parameters are as shown above.
P003	G	2	
P004	G	102	
P005	G	1	
P006	G	1.8	
P007	G	1.4	
P050	G	1	
P051	G	17.6	Max volume is 17.6m <sup>3</sup> or 17,600 liters.
P111	1	52	Sets relays 1, 2, and 3 as a pump group using ALTERNATE DUTY ASSIST CONTROL.
P111	2	52	
P111	3	52	
P112	1	1.0	Sets the <b>ON</b> setpoints for the pump group.
P112	2	1.2	
P112	3	1.4	
P113	0	0.2	Sets the <b>OFF</b> setpoints for the pump group.

## Set in RUN Mode

1. Press PROGRAM  for RUN mode.
2. Press TOGGLE  to display pumped volume on the totalizer.
3. Press AUXILIARY  to display current level in the auxiliary reading area.

## Setting Independent Failsafe Controls

Independent failsafe controls allow you to vary an individual relay from the global failsafe controls programmed in P070 to P072.

### Example:

The global failsafe controls are set to hold and Relay Five is set to trigger an alarm bell.

Parameter	Index	Value	Description
P071	G	HOLD	Keep level at last known value.
P129	5	dE	De-energize Relay Five, and trigger alarm.



## Setting a Pump to Run On

When you need to pump below the normal OFF setpoint, use P130 (Pump Run-On Interval) and P131 (Pump Run-On Duration) to control this event.

### Example:

The pump connected to Relay Three is set to pump for an extra 60 seconds every five times it is triggered.

Parameter	Index	Value	Description
P130	3	5	Wait for Relay Three to pump five times and then run on.
P131	3	60	Run on for 60 seconds.

**Note:** P130 counts when the indexed relay is tripped, not the number of pump cycles. If the indexed relay only trips once every four pump cycles then the actual interval of the run-on will be 20 pump cycles, or five cycles of Relay Three.

## Setting the Pump Start Delays

The pump start delay ensures that all of the pumps do not start at once to avoid power surges. There are two parameters used here: P132–Pump Start Delay and P133–Pump Power Resumption Delay. The default is 10 seconds but you can increase this if your pumps take longer to spin up.

### Example:

The delay between pumps is set to 20 seconds and the delay of the first pump is set to 30 seconds.

Parameter	Index	Value	Description
P132	G	20	Wait at least 20 seconds between pump starts.
P133	G	30	Wait for 30 seconds when power is restored.

## Reducing Wall Cling


Use the Wall Cling parameter to randomly alter the ON and OFF setpoints over a range. This eliminates the ridge of material that builds up at the setpoint that can give false echoes.

This setting may increase the number of days between trips to clean the wet well.

Wall cling reduction is set by P136. The relay setpoints ON and OFF are randomly varied inside a range so the material level does not stop at the same point.

### Example :

A range of 0.5 meters is used to vary the setpoint. The randomly-selected setpoints are always **inside** the ON and OFF setpoints.

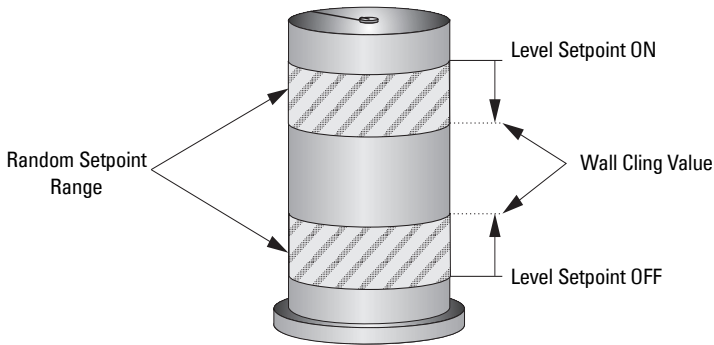

## Grouping Pumps

You can group pumps and use the same pumping algorithm separately on each group. If you specify different pumping algorithms then the pumps are already grouped by algorithm and you do not need to use this parameter.

Group pumps only when four pumps are using the same algorithm and you want to split them into two groups.

### Example:

Pumps One and Two can operate as a group and Pumps Three and Four can operate as another group.

Parameter	Index	Value	Description
P137	1	1	Groups Pumps One and Two
P137	2	1	
P137	3	2	Groups Pumps Three and Four
P137	4	2	

## Setting a Flush Valve

A flush valve stirs up the sediment on the bottom of the well during pumping so that it doesn't accumulate. These parameters will control any relays set with P111 = 64 (Flush Valve).

Most sets of parameters will work with only one or two changes; however, for these parameters to work, all of them must be set to a value.

**Example:**

The flush valve connects to Relay Four and the watched pump is on Relay One.

Parameter	Index	Value	Description
P170	G	1	Watch Relay One to count pump cycles.
P171	G	3	Open the flush valve for 3 cycles.
P172	G	10	Use the flush value every 10 cycles.
P173	G	120	Open the flush valve for 120 seconds.

## Relay Controlled by Communications

A relay can be controlled directly by a remote system through communications. No other control schemes can then be used with a relay configured this way. Communications can be used to force status of some control relays, such as pumps.

**Settings:**

Parameter	Index	Value	Description
P111	5	65	Sets Relay Five to communications control.

## Tracking Pump Usage

You can find out how much an individual pump has been used by viewing the pump records parameters.


Information Available	Parameter Access
Current RUN time	P309
Total pump hours	P310
Total pump starts	P311
Total pump RUN on occurrences	P312

# Rake (Screen) Control


Screens or rakes are mounted on the inflow channel of the wastewater treatment plant to prevent debris from clogging the equipment.

When material builds up on the screen, a level differential is created, and the water level is higher in front of the screen than behind it. When this differential reaches the programmed setpoint, the HydroRanger 200 activates a relay to operate mechanical rakes that clean the screen and ensure a steady flow.

## Setting a Rake Control

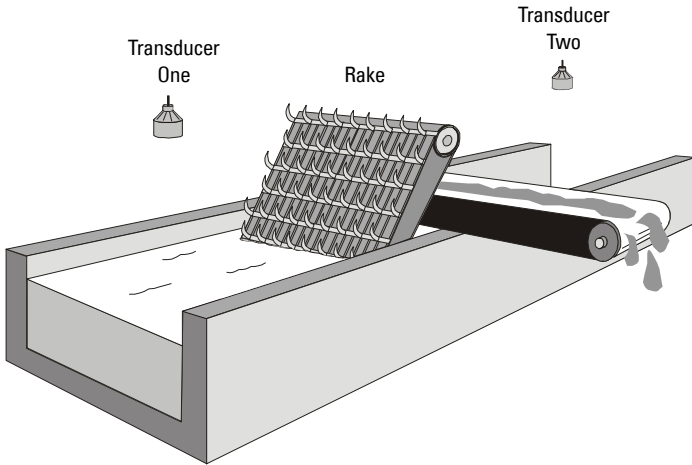

Rake (Screen) Control

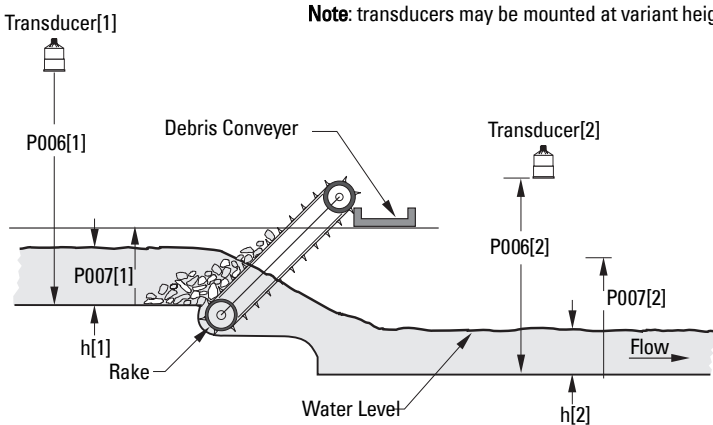

Point Three: Level Distance =  $h[1] - h[2]$

# Setting the Common Parameters

**Prerequisite:** Substitute the details of your application in place of the sample values provided. If you are bench testing the unit, set your test values to be the same as the sample values.

Parameter	Index	Value	Description
P001	G	4	Operation = Differential
P002	G	1	Material = liquid
P003	1,2	2	Max. Process Speed = medium
P004	1,2	102	Transducer = XPS-10
P005	G	1	Units = meters
P006	1	1.8	Empty = 1.8m
	2	2.2	Empty = 2.2m
P007	1	1.4	Span = 1.4m
	2	1.4	Span = 1.4m

## Set Relay 1 (Operate Rake)

Parameter	Index	Value	Description
P110	1	3	Starts the rake when the difference between the two levels rises above 0.4m and stop the rake when the difference falls below 0.1m.
P111	1	50	
P112	1	0.4	
P113	1	0.1	

## Set Relays 2 to 4 (Level Alarms)

P110	2	1	Description
P110	2	1	Sets Relay Two as a high level alarm for Transducer One with an ON setpoint of 1.3m and an OFF setpoint of 1.2m.
P111	2	1	
P112	2	1.3	
P113	2	1.2	
P110	3	2	Sets Relay Three as a low level alarm for Transducer Two with an ON setpoint of 0.2m and an OFF setpoint of 0.4m.
P111	3	1	
P112	3	0.2	
P113	3	0.4	
P110	4	3	Sets Relay Four as a <b>rake failure</b> alarm as it uses the differential level point (3) with an ON setpoint of 1.0m and an OFF setpoint of 0.9m.
P111	4	1	
P112	4	1.0	
P113	4	0.9	

# External Totalizers and Flow Samplers

External totalizers are simple counters which count the number of relay clicks produced by the HydroRanger 200. This is generally used to keep track of OCM or pumped volume totals. Note that both of these values are also stored in the HydroRanger 200 and are available through communications.

Flow samplers are devices which take a sample of liquid when triggered by a relay click. These samples are used to monitor water quality over time. Flow samplers can be driven by OCM volume or by relay click volume settings depending on the application requirements.


## Relay Contacts

Pumped volume is calculated at the end of the pump cycle. Totalized volume given through a relay set up for totalizer (P111[r]=40) will be given in bursts at this time.

Both the open and closed times for the relay contact are provided by P645 and are preset to 0.2 seconds. Partial units are added to the next pump cycle.

### Example

Shows a relay set up to make one contact for every cubic metre (m<sup>3</sup>) of liquid.

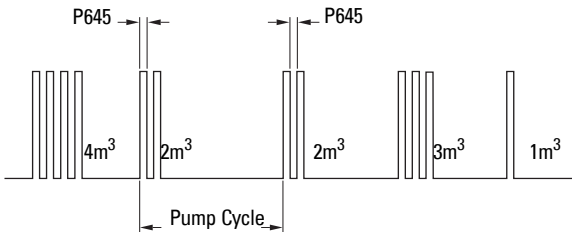

## Totalizer

To set the totalizer to provide relay contact to an external counter, use the following:

Counter Formula	
1 Contact per 10 <sup>P640</sup> units	P640 is preset to 0 so the default number of contacts for a pumped volume cycle is equivalent to the number of volume units.

The source of units depends on the operation:

Operation	Units Source Parameter
OCM (P001=6)	P604–Maximum Flow, or P608–Flowrate Units
Pumped Volume (P001=7)	P051–Max Volume

## Flow Sampler

### Based on Volume and Time

To trigger a flow sampler relay based on flow, use P111[r]=41 and set the other parameters:

Counter Formula
1 Contact per $P641 \times 10^{P642}$ units

Operation	Units Source Parameter
OCM (P001=6)	P604 – Maximum Flow, or P608 – Flowrate Units

By using a mantissa (P641) and an exponent (P642), the relay contacts can be based on a volume other than a multiple of ten.

During the periods of low flow, the sampler may be idle for lengths of time. Program P115 to a time interval in hours to drive the sampler. The sampler will operate based on the volume of flow or the time interval, whichever comes first.

# Open Channel Monitoring (OCM)

An OCM installation is defined one of three ways, based on the Primary Measuring Device (PMD):

## 1. Dimensional (P600 = 2,3,6,7)

For some common weir and flume types. PMD dimensions (P602) are entered directly.

- BS-3680 / ISO 1438/1 Thin plate V notch weir on page 68
- BS-3680 / ISO 4359 Rectangular Flume on page 69
- Palmer Bowlus Flume on page 70
- H Flume on page 71

## 2. Exponential (P600 = 1)

For most other weir and flume types. PMD exponents provided by the manufacturer are entered. Flow is calculated using the exponent (P601) and the maximum values (P603 and P604).

- Standard Weirs on page 72
- Parshall Flume on page 73
- Leopold Lagco on page 74
- Cut Throat Flume on page 75

## 3. Universal (P600 = 4,5)

For all other PMDs, the head-to-flow curve can be plotted based on known breakpoints, usually supplied by the PMD manufacturer.

- Typical Flow Characterization on page 76
- Example Flumes on page 77
- Example Weirs on page 77

## Common Parameters

These Quick Start parameters are required for all installations.

Parameter	Index	Value	Description
P001	G	6	Operation = OCM
P002	G	1	Material = liquid
P003	G	2	Max. Process Speed = medium
P004	G	102	Transducer = XPS-10
P005	G	1	Units = meters
P006	G	1.8	Empty = 1.8m
P007	G	1.0	Span = 1.4m
P801	G	0.8	Range Extension to avoid LOE




# Setting Zero Head


Many PMDs start flowing higher than the traditional empty distance of the application. You can account for the flow in one of two ways:

1. Use P605 (Zero Head) to have OCM calculations ignore levels below that value.  
Possible head =  $P007 - P605$ .

**Note:** P603 (Max. Head) is preset to P007 and is not updated when P605 is used. Make sure you set P603 to the correct value when using P605.

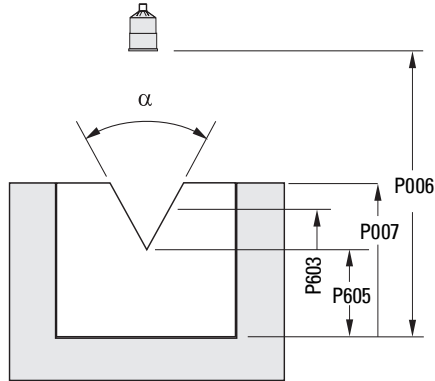

2. Use P801 Range Extension where the Empty level is set to the bottom of the weir, and above the bottom of the channel. It should be used if the surface monitored can fall past the Empty (P006) level in normal operation without reporting an LOE. The value is added to Empty (P006) and can be greater than the range of the transducer.

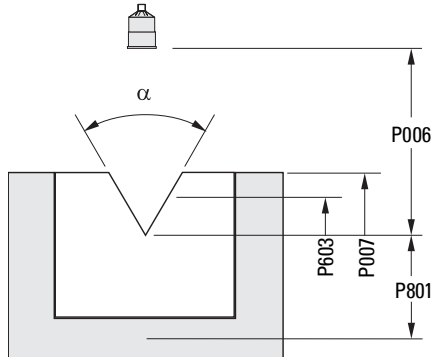

The examples on the following pages show both methods.


# Setting Totalized Volume

To display the totalized volume on the LCD use the following parameters:

Parameter	Index	Value	Description
P737	G	2	Show the eight digit totalizer in the primary display


## Applications Supported by HydroRanger 200

### BS-3680 / ISO 1438/1 Thin plate V notch weir

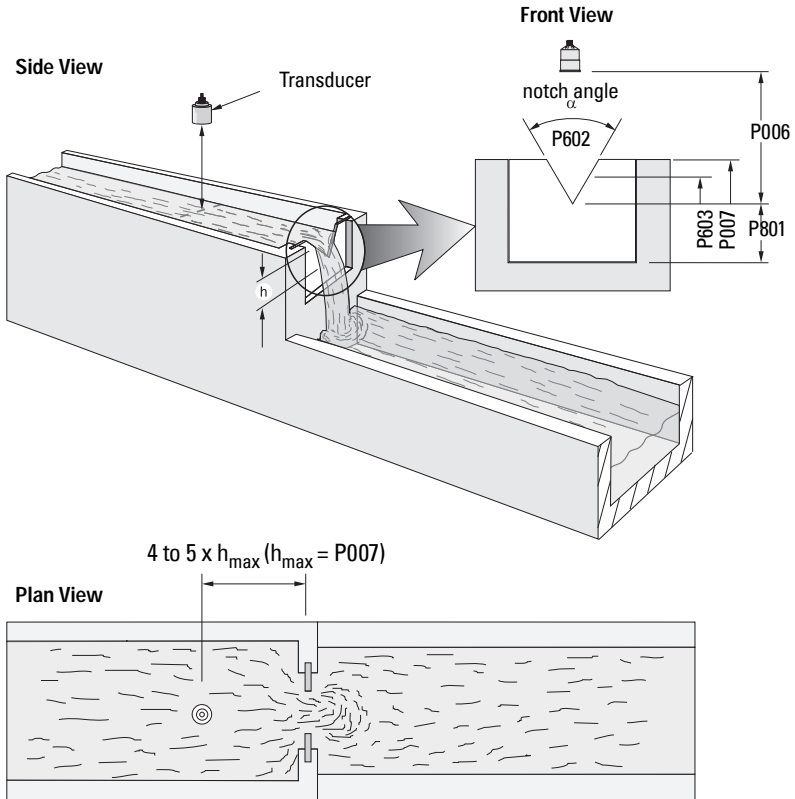


Parameter	Index	Value
P600	G	7-ISO 1438/1 V Notch Weir
P602	1	Notch angle
(view only)	2	Discharge coefficient ( $C_e$ )
P603	G	Maximum Head (preset to P007)
P801	G	Range Extension
P608	G	Flowrate Units

# BS-3680 / ISO 4359 Rectangular Flume

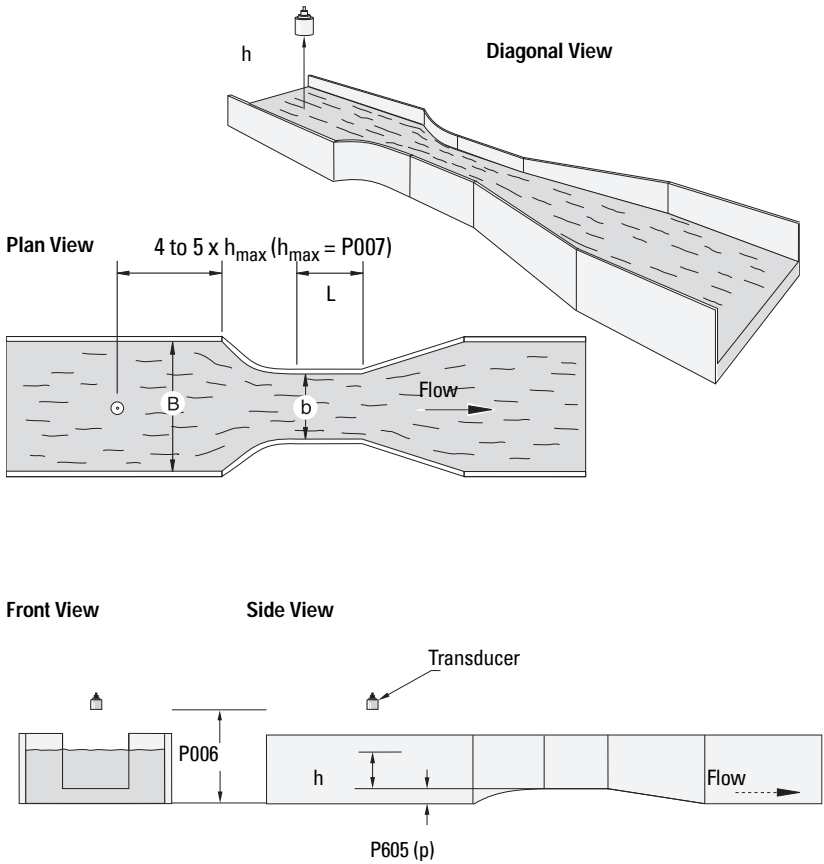

Parameter	Index	Value
P600	G	6-ISO 4359 Rectangular Flume
P602	1	Approach width (B)
	2	Throat width (b)
	3	Hump Height (p)
	4	Throat length (L)
(view only)	5	Velocity coefficient (Cv)
(view only)	6	Discharge coefficient (Cd)
(view only)	7	Cross sectional area
P605	G	Zero Head
P608	G	Flowrate Units

# Palmer Bowlus Flume

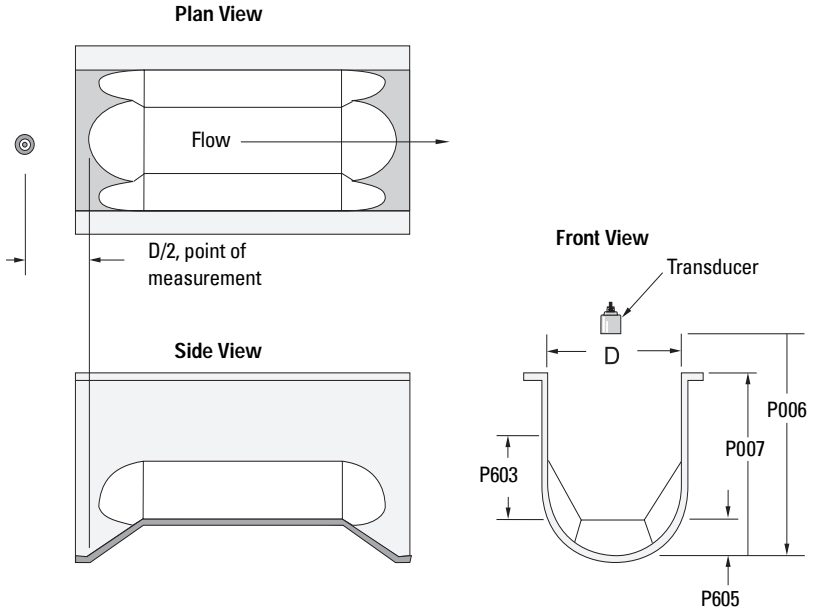


Parameter	Index	Value
P600	G	2-Palmer Bowlus Flume
P602	1	Flume width (D)
P603	G	Maximum Head (preset = P007)
P604	G	Maximum Flow
P605	G	Zero Head
P606	G	Time Units

## Application Information

- Sized by pipe diameter D
- Flume relief is trapezoidal
- Designed to install directly into pipelines and manholes
- Head is referenced to bottom of the throat, not bottom of the pipe
- For rated flows under free flow conditions, the head is measured at a distance of D/2 upstream from the beginning of the converging section

# H Flume

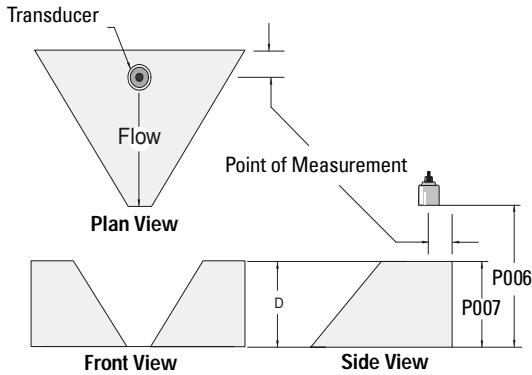

Parameter	Index	Value
P600	G	3-H Flume
P602	1	Flume height (D)
P603	G	Maximum Head (preset = P007)
P604	G	Maximum Flow
P606	G	Time Units

- Sized by maximum depth of flume
- Approach is preferably rectangular, matching width and depth for distance 3 to 5 times the depth of the flume
- May be installed in channels under partial submergence (ratio of downstream level to head). Typical errors are:
  - 1% @ 30% submergence
  - 3% @ 50% submergence
- For rated flows under free flow conditions, the head is measured at a point downstream from the flume entrance


Flume Size (Diameter in feet)	Point of Measurement	
	cm	inches
0.5	5	1¾
0.75	7	2¾
1.0	9	3¾
1.5	14	5½
2.0	18	7¼
2.5	23	9
3.0	28	10¾
4.5	41	16¼

- H flumes come with a flat or sloping floor. The same flow table can be used because error is less than 1%.


# PMDs with Exponential Flow to Head Function

For Primary Measuring Devices (PMDs) that measure flow by an exponential equation, use these parameters. Ensure that you use the correct exponent for your PMD; the values below are samples only.

## Standard Weirs

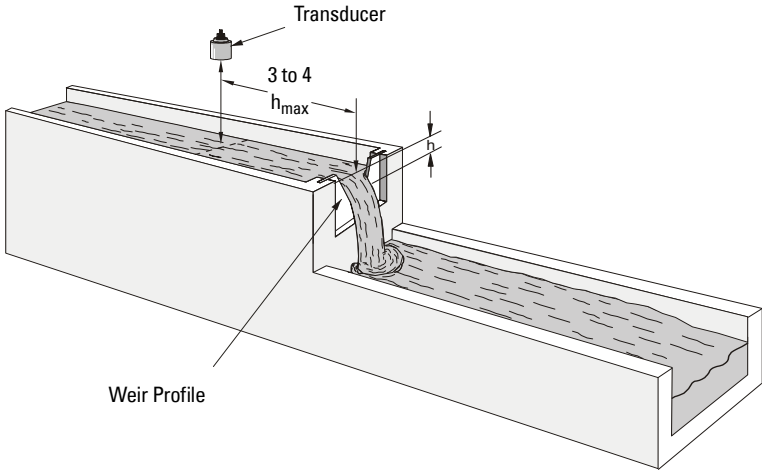


## Applicable Weir Profiles

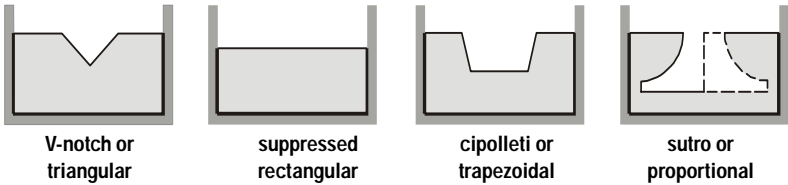

Parameter	Index	Value
P600	G	1 - Exponential Function
P601	G	<b>Weir Type</b>
		<b>Value<sup>1</sup></b>
		V-notch
		Suppressed rectangular
		Cipolletti or trapezoidal
		Sutro or proportional
P603	G	Maximum Head
P604	G	Maximum Flow
P606	G	Time Units
P801	G	Range Extension

<sup>1</sup>. Values are samples only. Consult weir manufacturer's documentation for correct flow exponent.


# Non-Applicable Weir Profiles

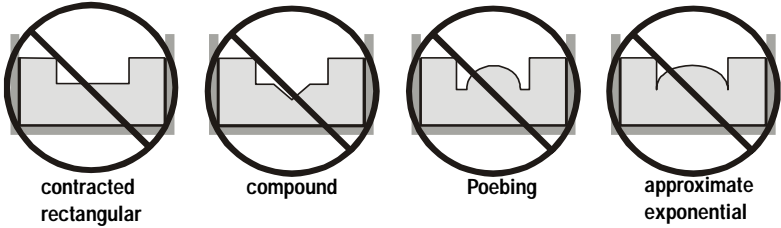

Flows through these weirs can be measured using the Universal Flow Calculation P600 = 4 or 5. See *Universal Calculation Support* on page 76.

## Parshall Flume

**Note:** C = Converging Dimension.

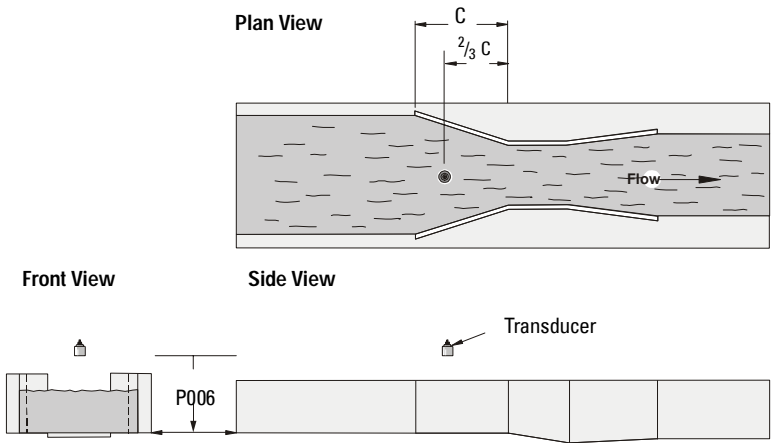


### Application Information

- Sized by throat width
- Set on solid foundation
- For rated flows under free flow conditions, the head is measured at  $\frac{2}{3}$  the length of the converging section from the beginning of the throat section

Parameter	Index	Value
P600	G	1-Parshall Flume
P601	G	1.22-1.607 (consult your flume documentation)
P603	G	Maximum Head
P604	G	Maximum Flow (Q)
P606	G	Time Units

# Leopold Lagco Flume

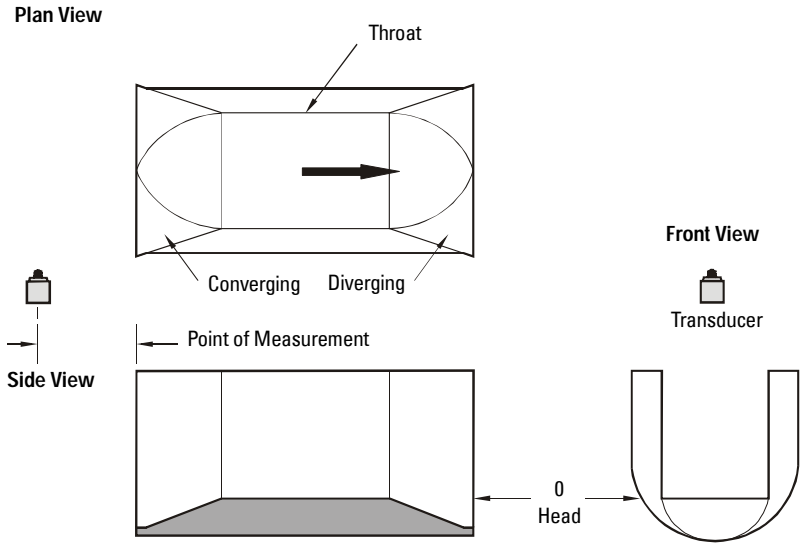

Parameter	Index	Value
P600	G	1–Leopold Lagco Flume
P601	G	1.55
P603	G	Maximum Head (preset P007)
P604	G	Maximum Flow
P605	G	Zero Head
P606	G	Time Units


## Application Information

- Designed to be installed directly into pipelines and manholes
- Leopold Lagco may be classed as a rectangular Palmer-Bowlus flume
- Sized by pipe (sewer) diameter
- For rated flows under free flow conditions, the head is measured at a point upstream referenced to the beginning of the converging section. Refer to the following table:



Flume Size (pipe diameter in inches)	Point of Measurement	
	cm	inches
4-12	2.5	1
15	3.2	1¼
18	4.4	1¾
21	5.1	2
24	6.4	2½
30	7.6	3
42	8.9	3½
48	10.2	4
54	11.4	4½
60	12.7	5
66	14.0	5½
72	15.2	6

## Cut Throat Flume

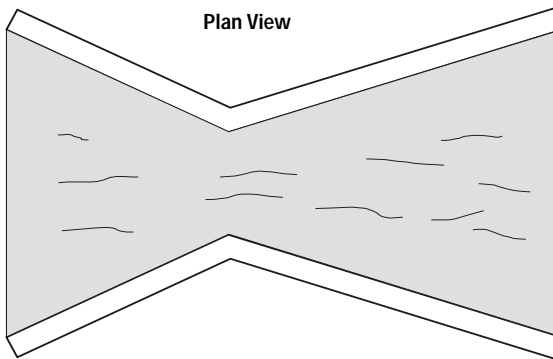

### Application Information

- Similar to Parshall flume except that the floor is flat bottomed and throat has no virtual length.
- Refer to manufacturer's specifications for flow equation and point of head measurement.

Parameter	Index	Value
P600	G	1–Cut Throat Flume
P601	G	1.55
P603	G	Maximum Head (preset P007)
P604	G	Maximum Flow
P606	G	Time Units

# Universal Calculation Support


When the primary measuring device (PMD) doesn't fit one of the standard types, it can be programmed using a universal characterization. When Universal is selected as the PMD type (P600), then both P610 and P611 must be entered to define the flow.

Two curve types are supported:

- P600 = 4-linear (piece wise linear)
- P600 = 5-curved (cubic spline)


Both are shown in the following chart.

## Typical Flow Characterization

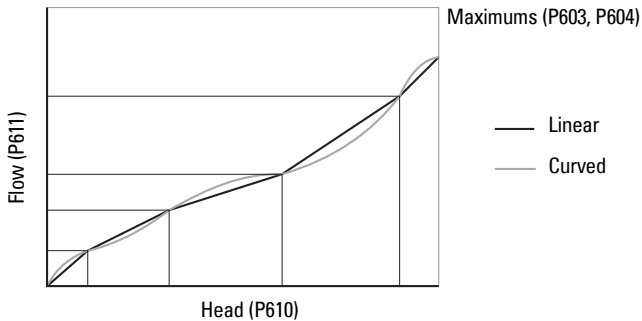

Characterization is achieved by entering the head (P610) and corresponding flow (P611), either from empirical measurement or from the manufacturer's specification. Increasing the number of defined breakpoints will increase the accuracy of the flow measurement.

Breakpoints should be concentrated in areas exhibiting the higher degrees of non linear flow. A maximum of 32 breakpoints can be defined. The curve's end point is always specified by the parameters Maximum Head (P603) and Maximum Flow (P604) for a maximum total of 32 breakpoints.

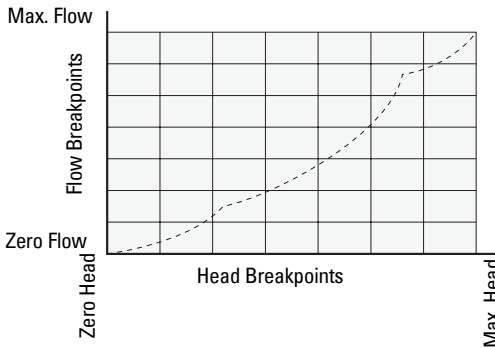


Use as many breakpoints as required by the complexity of your PMD.

See Volume on page 44 for more information and parameters P610 and P611 for characterization.



# Example Flumes

These example flumes would both require a universal calculation.

## Trapezoidal

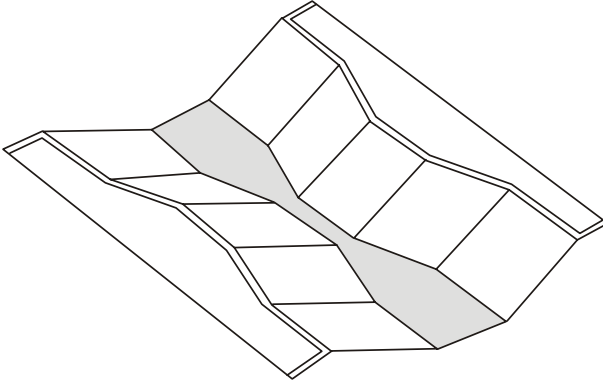


## Dual Range (nested) Parshall

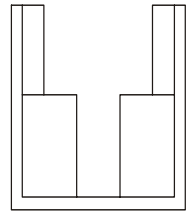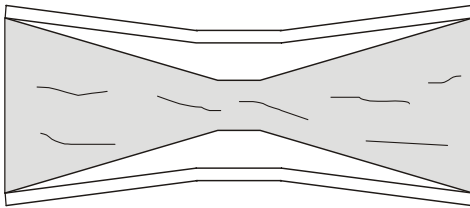


# Example Weirs


These weirs could require universal calculation.

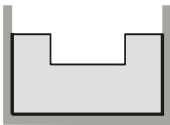


contracted  
rectangular

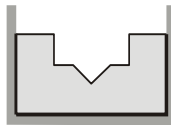

compound

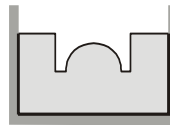

Poebing

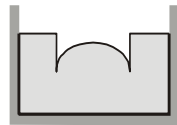

approximate  
exponential

# Notes

---

# Testing the Configuration



After programming the unit, you must test the device to ensure that it performs to your specifications. This test can be run in simulation mode or by varying the level in the application. The latter is preferred as it more accurately represents running conditions. However, if it is not possible to do a physical test, a simulation will ensure that control programming is correct.

## Simulation




In simulation mode, the LCD display reacts to the simulated level changes. Alarm relays will also react to the simulation, but any pump or control relays will not react.

To allow pump or control relays to operate on the simulated level, set P000 to -1.

## Simulating a Single Measurement

Access the appropriate parameter: (press PROGRAM  and then key in the parameter number). Press TRANSDUCER  five times to overcome Echo Lock (P711) if applicable: the associated Reading is displayed in the Parameter Value field, and any **alarm** relays are set accordingly.

### To verify Reading calculations (P920 to P926)



1. Key in a material level in Units (P005) or % of Span (P007).
2. Press ENTER : the calculated Reading is displayed.
3. Verify the calculated Reading.
4. To start a simulation from the level entered, press ARROW  or .

## Simulating a Level Cycle

### To start a (P920, P921, P922, or P923) simulation when level = 0:

Press ENTER  to simulate level rise and fall. At the start of a simulation, the default rate is 1% of Span / second. Press the ARROW  or  to adjust the simulated rate of rise or fall. The maximum rate is 4% of Span / second.


The effect of the ARROW key is determined by the state (rate of rise or fall) immediately before the key is pressed.

Action	State (prior to pressing key)	Effect
Press 	Stop	Rise at 1% of Span / second
	Rise at 1% of Span / second	Rise at 4% of Span / second (max.)
	Rise at 4% of Span / second (max.)	No effect
	Fall at 1% of Span / second	Stop
	Fall at 4% of Span / second	Fall at 1% of Span / second
Press 	Stop	Fall at 1% of Span / second
	Rise at 1% of Span / second	Stop
	Rise at 4% of Span / second (max.)	Rise at 1% of Span / second
	Fall at 1% of Span / second	Fall at 4% of Span / second (max.)
	Fall at 4% of Span / second (max.)	No effect

When the level rises to 100% or falls to 0%, it reverses direction at the same rate.


## Checking Volume Characterization

To confirm universal volume calculations (P050 = 9, 10) are correct:

1. Go to P920
2. Key in a level associated with a known volume
3. Press ENTER 
4. Check the returned volume against the manufacturer's chart
5. Change parameters P054 and P055, as required
6. Repeat steps 2 to 5 until the volume curve is verified

## Checking OCM Flow Characterization

To confirm universal flow calculations (P600 = 4, 5) are accurate:

1. Go to P925
2. Enter a level with a known flow
3. Press ENTER 
4. Check the returned flow against the manufacturer's chart
5. Change parameters P610 and P611, as required
6. Repeat steps 2 to 5 until the flow curve is verified

# I/O Checkout

After you have installed the unit, we recommend that you perform a test to verify the wiring.

## Relays

Use P119 to force a state change and verify that the results are as expected (pump starts, alarm sounds, etc.).

## Discrete Inputs

Use P270 to force the input value and verify that the results are as expected.

1. Go to P270 [DI] where DI = the discrete input to be tested
2. Set P270 to **0 (forced OFF)**
3. Go to P275 [DI] to verify that the value is forced
4. Check the state of outputs to ensure that they respond as expected
5. Go to P270 [DI]
6. Set P270 to **1 (forced ON)**
7. Go to P275 [DI] to verify that the value is forced
8. Check the state of outputs to ensure that they respond as expected

## mA Input

Use P254 to test the mA input value against a true level. Use a trusted external mA source to generate the signal required for testing, and verify the incoming signal with P260. Check that the system responds as expected when the mA level is changed.

## mA Output

Use an external device to test the mA output against the measured level. Check that the mA value changes to reflect the changes in the measured level.

# Application Test

If you are testing the application by varying the material level, (the preferred test method,) make sure that none of the control devices is connected (or at least that no power is available to them).

If you are testing the application in simulation mode (and P000 is not -1), then control relays are not energized and the control devices can remain connected.

While the level is being cycled, check the results of the discrete inputs either by closing the circuit externally (preferred) or by using P270 Discrete Input Function to force the input ON or OFF. Try all possible combinations to thoroughly test the setup. For each combination, run a complete cycle to verify that the relays operate as expected.

Monitor system performance carefully, under all anticipated operating conditions.

1. When the HydroRanger 200 performs exactly as required, programming is complete.
2. If alternate Reading units, Failsafe action, or relay operation is desired, update the parameters for the new functionality.
3. If the system performance experiences problems, see *General Appendix C: Troubleshooting*, on page 218.

If you cannot observe all possible operating conditions during the System Performance Evaluation, use the level simulation (see page 79) to verify programming.

When a simulation is run, alarm relays will react to the simulated level changes, but control relays will not react. You can set P000 to value -1 to trigger the control relays based on the simulated level.


Retest the system every time any control parameters are adjusted.



# HydroRanger 200 Communications

## HydroRanger 200 Communication Systems

The HydroRanger 200 is an integrated level controller capable of communicating process information to a Supervisory Control and Data Acquisition (SCADA) system, via a serial device such as a radio modem, leased line, or dial-up modem.

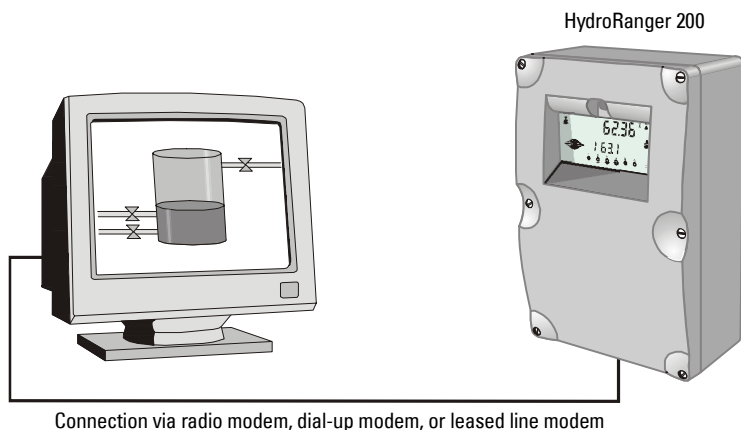

The standard HydroRanger 200 supports the following two communication protocols:

### Modbus

Modbus is an industry standard protocol used by SCADA and HMI systems. The HydroRanger 200 uses Modbus to communicate via the RS-485 port. For a description of the Modbus protocol, contact your local Schneider representative.

### Dolphin

Dolphin is a proprietary Milltronics protocol designed to be used with Dolphin Plus. For more information on Dolphin Plus or to obtain a copy of the software, please go to [www.milltronics.com](http://www.milltronics.com) to contact your Siemens Milltronics representative.

## Optional SmartLinx<sup>®</sup> Cards

The standard HydroRanger 200 unit may also be enhanced with Milltronics SmartLinx<sup>®</sup> communication modules that provide an interface to popular industrial communication systems.

This manual only describes the built-in communications. For more information on SmartLinx, please consult the appropriate SmartLinx manual.

# Communication Systems

The HydroRanger 200 is capable of communicating with most SCADA systems, PLCs, and PCs. The supported protocols are:

- Modbus RTU/ASCII – base unit on RS-232 or RS-485 transport
- Profibus-DP – optional SmartLinX<sup>®</sup> module
- Remote I/O – optional SmartLinX module
- DeviceNet – optional SmartLinX module

## Communication Ports

The HydroRanger 200 comes with two communication ports on the base unit.

Port	Connection	Location	Interface
1	RJ-11 connector	inside enclosure on main board	RS-232
2	terminal block	terminal block	RS-485

### RS-232

The RJ-11 jack connects to a laptop computer for the following:

- initial setup
- configuration
- troubleshooting
- periodic maintenance

### RS-485

The RS-485 port on the terminal blocks connects into industrial communications wiring and has the following advantages:

- runs communications cable farther
- allows multiple slave units on the network, addressed by P771 – Network Address

## Modbus

The Modbus protocol is supported in the base unit and can be configured using the Communications parameters P770 to P782.

To set up communications with a Modbus RTU master device on port 2 using RS-485, set the following parameters:

Parameter	Index	Value	Description
P770	2	3	Modbus RTU slave
P771	2	1	Network address, only used for RS-485
P772	2	9.6	Data rate of 9600 baud
P773	2	0	No parity, common setting
P774	2	8	8 data bits, common setting
P775	2	1	1 stop bit, common setting
P778	2	0	No modem connected
P782	2	0	Index parameter values globally

## SmartLinx

Other protocols are available through optional SmartLinx communications modules. Details on how to install and program these modules are contained in the SmartLinx documentation.

## Dolphin Plus

Dolphin Plus software makes it easy to record and compare parameter sets for all the HydroRangers in your company. Dolphin Plus uses a proprietary protocol called *Dolphin* to communicate with Milltronics instruments. This protocol is set when P770 = 1.

By default the settings for port 1 (RJ-11 connection) and Dolphin Plus match. These settings are:

Parameter	Index	Value	Description
P700	1	1	Dolphin
P772	1	115.2	Data rate of 115.2 Kilo baud
P773	1	0	No parity, common setting
P774	1	8	8 data bits, common setting
P775	1	1	1 stop bit, common setting

# Communications Installation

## Wiring Guidelines

- the RJ-11 cable maximum length is 3 meters
- RS-485 maximum length is 1,200 meters (4,000 feet)
- use 24 AWG (minimum)
- use good quality communication grade (shielded twisted pairs) cable that is recommended for RS-485 for port 2 (Belden 9842)
- run the communication cable separately from power and control cables (do not tie wrap your RS-232 or RS-485 cable to the power cable or have them in the same conduit)
- use shielded cable and connect to ground at one end only
- follow proper grounding guidelines for all devices on the bus


**Note:** Improper wiring and incorrect choice of cables are the two most common causes of communication problems.

## Ports 1 and 2

Port	Wall Mount
1	RS-232 port (RJ-11 modular telephone jack) is on the motherboard and is generally used with a laptop computer or modem.
2	Connections for the RS-485 port are on the terminal block.


## Ports 1 and 2: RS-232 RJ-11 Jack and RS-485 Locations

The RJ-11 jack and the RS-485 port are inside the enclosure of the unit.

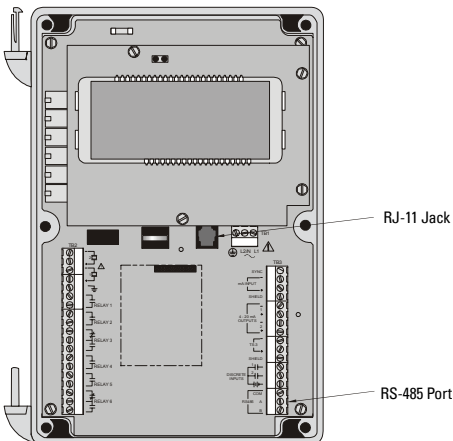


# Port 1: RS-232 RJ-11 Jack

To connect the unit to a PC using an RS-232 jack, use the cable as shown:

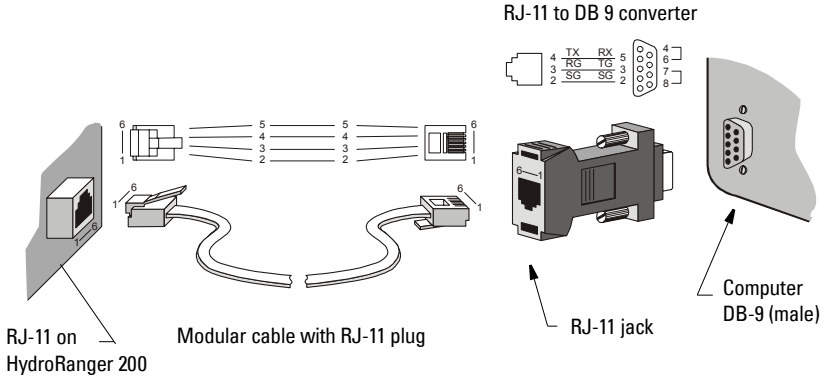


**Note:** Jumper pins 4-6 and 7-8 at the DB-9.


To connect the unit to a modem using an RS-232 jack:

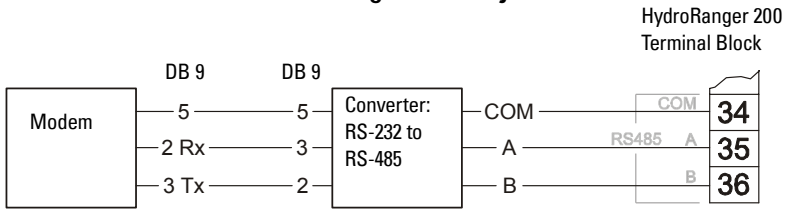

# Port 2: RS-485

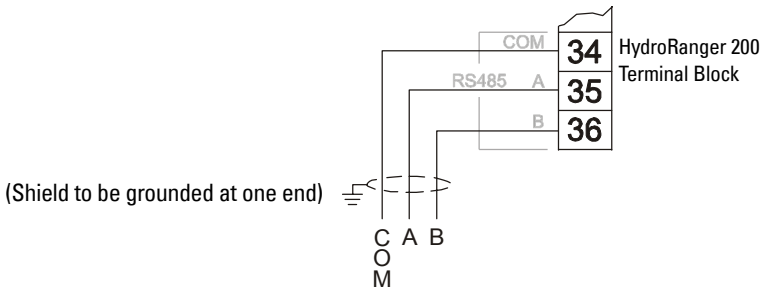

To connect the unit to a modem using an RS-485 port:

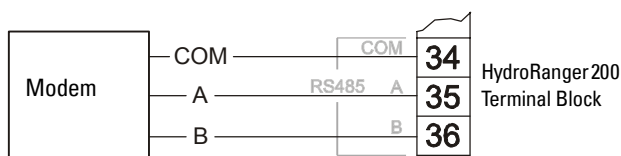

## Configuring Communication Ports (Parameters)

The 11 parameters listed are indexed to the two communication ports, unless otherwise noted: An asterisk (\*) identifies the preset value.

Port	Description
1	RS-232 port (RJ-11 modular telephone)
2	The RS-485 port is on the terminal blocks

### P770 Port Protocol

*The communications protocol used between the HydroRanger 200 and other devices.*

Primary Index	Communications Port	
Values	0	Communications port disabled
	1	* Milltronics Dolphin protocol (preset for port 1)
	2	Modbus ASCII slave serial protocol
	3	* Modbus RTU slave serial protocol (preset for port 2)

The HydroRanger 200 supports the Milltronics Dolphin format (see [www.milltronics.com](http://www.milltronics.com)), and the internationally recognized Modbus standard in both ASCII and RTU formats. Other protocols are available with optional SmartLinx cards.

### P771 Network Address

*The unique identifier of the HydroRanger 200 on the network.*

Primary Index	Communications Port	
Values	Range: 0 to 9999	
	1	* Preset

For devices connected with the Milltronics protocol, this parameter is ignored. For devices connected with a serial Modbus slave protocol, this parameter is a number from 1-247. The network administrator must ensure that all devices on the network have unique addresses. Do not use the value **0** for Modbus communications as this is the broadcast address and is inappropriate for a slave device.

## P772 Baud Rate

*The communication rate with the master device.*

Primary Index	Communications Port		
Values	4.8		4800 baud
	9.6		9600 baud
	19.2	*	19,200 baud (preset for port 2)
	115.2	*	115,200 baud (preset for port 1)

This specifies the rate of communication in Kbaud. Any value may be entered, but the only values supported are those shown above. The baud rate should reflect the speed of the connected hardware and protocol used.

## P773 Parity

*The serial port parity.*

Primary Index	Communications Port		
Values	0	*	No Parity
	1		Odd Parity
	2		Even Parity

Ensure that the communications parameters are identical between the HydroRanger 200 and all connected devices, as many modems default to N-8-1.

## P774 Data Bits

*The number of data bits per character.*

Primary Index	Communications Port		
Values	Range: 5 to 8		
	8	*	Modbus RTU
	7 or 8		Modbus ASCII
	7 or 8		Dolphin Plus

## P775 Stop Bits

*The number of bits between the data bits.*

Primary Index	Communications Port		
Values	Range: 1 or 2		
	1	*	Preset

## P778 Modem Available

*Sets the HydroRanger 200 to use an external modem.*

<b>Primary Index</b>	Communications Port		
<b>Values</b>	0	*	No modem connected
	1		Answer only

## P779 Modem Inactivity Timeout

*Sets the time that the unit will keep the modem connected with no activity.*

<b>Primary Index</b>	Communications Port		
<b>Values</b>	Range: 0-9999 seconds		
	0	*	No timeout

To use this parameter, ensure that P778 (Modem Available) =1. Ensure that the value is low enough to avoid unnecessary delays when an unexpected disconnect occurs but long enough to avoid timeout while you are still legitimately connected. This parameter value is ignored by the Modbus Master Drivers as they automatically disconnect when done communicating.

### Hanging Up

If the line is idle and the P779 Modem Inactivity Timeout expires, then the modem is directed to hang up the line. Ensure that P779 is set longer than the standard polling time of the connected master device. Set P779 to 0 to disable the inactivity timer.

## P782 Parameter Index Location

*Determines where index information is stored for the parameter access area for the Modbus register map.*

<b>Primary Index</b>	Global		
<b>Values</b>	0	*	Global
	1		Parameter-Specific

For more on Parameter Index Location, see *Parameter Access* on page 95.



# Modbus Register Map

Features affecting *volume*, *mA input*, and *Average or Difference* readings apply to the HydroRanger 200 only. They are clearly marked.

The memory map of the HydroRanger 200 occupies the Modbus holding registers (R40,001 and up). This map is used when the protocol is Modbus RTU slave or Modbus ASCII slave.

## Register Map for Most Common Data

Legend	
Type	The type of data held in the group of registers.
Start	The first register to hold the referenced data.
Data Type	The possible values of the data in the register. See <i>Data Types</i> on page 101 for more information.
Description	The type of data held in the individual registers.
#R	The number of registers used for the referenced data.
Read/Write	Indicates whether the register is readable, writeable or both.

Type	Description	Start	#R <sup>1</sup>	Data Type	Read/Write
	Word Order	40,062		0/1	R/W
Map ID	Register Map Type	40,063	1	0/1 = P782	R/W
ID	Milltronics Product Code	40,064	1	4 = Model 200 6 = Model 100	R
Single Parameter Access (SPA)		R40,090	7	see Comms Appendix A on page 108	
Point Data	Reading (3) <sup>2</sup>	41,010	2	-20,000 to 20,000	R
	Volume (2)	41,020	2	-20,000 to 20,000	R

1. Maximum registers shown; fewer may be used depending on options installed.
2. Available as reading 1, reading 2, and Average or Difference. Point 2 and 3 are only available if P001 = Average or Difference.

Type	Description	Start	#R <sup>1</sup>	Data Type	Read/Write
Point Data	Temperature (2)	41,030	2	-50 to 150	R
I/O	Discrete Inputs (2)	41,070	1	Bit Mapped	R
	Relay Outputs (3 or 6)	41,080	1	Bit Mapped	R/W
	mA Input (1)	41,090	1	0000 to 20,000	R
	mA Output (2)	41,110	2	0000 to 20,000	R/W
Pump Control	Pump on Setpoint (3 or 6)	41,420	6	0000 to 10,000	R/W
	Pump off Setpoint (3 or 6)	41,430	6	0000 to 10,000	R/W
	Pumped Volume (2)	41,440	4	UINT32	R
	Pump Hours (3 or 6)	41,450	12	UINT32	R
	Pump Starts (3 or 6)	41,470	6	0000 to 10,000	R
Parameter Access		43,998 to 46999			R/W

1. Maximum registers shown; fewer may be used depending on options installed.

The HydroRanger 200 was designed to make it easy for master devices to get useful information via Modbus. This chart gives an overview of the different sections. A more detailed explanation of each section follows below.

## Word Order (R40,062)

This determines the format of unsigned, double-register integers (UINT32).

0 indicates that the most significant word (MSW) is given first

1 indicates that the least significant word (LSW) is given first

See *Unsigned Double Precision Integer (UINT32)* on page 101 for more information.

**Note:** Additional information is available from our Web site at [www.milltronics.com](http://www.milltronics.com)

## Map ID (R40,063)

This value identifies the register map used by the HydroRanger 200. See *P782 Parameter Index Location* on page 90 and see the *Parameter Reference* section on page 111 for details.

See also *Parameter Access (R43,998 – R46,999)* on page 95 for details.

# Product ID (R40,064)

Identifying Milltronics device type:

Device Type	Value
HydroRanger 200	4

## Point Data (R41,010 – R41,031)

Measurement point data contain the current instrument readings. These are the values shown for the reading measurement for each measurement point. The reading is based on the setting for P001 (operation). P001 can be set to **level**, **distance**, **OCM flow**, or **volume**. See HydroRanger 200 *Parameter Reference* section on page 113 for details.

The measurement registers are 41,010 to 41,012. The HydroRanger 200 uses 41,010 when configured with a single transducer and 41,010 to 41,012 when configured with two transducers (P111=4 or 5 only). Two transducers can create three readings because they can generate an average or differential reading (R41,012) as well as the two level readings (R41,010 and R41,011).

Available Registers:

Data	Registers	Parameter
Reading	41,010 to 41,012	P920
Volume	41,020, 41,021	P924
Temperature	41,030 and 41,031	P912

The reading is expressed as a percentage of full scale, multiplied by 100:

Reading	Value
0	0.00%
5000	50.00%
7564	75.64%
20,000	200.00%

## Input/Output (R41,070 – R41,143)

The HydroRanger 200 has discrete inputs, mA inputs, mA outputs and relay outputs. Details for each I/O type below.

## Discrete Inputs (R41,070)

This table shows the current status of the discrete inputs. Only register 41,070 is used.

Discrete Input	Data Address
1	41,070, bit 1
2	41,070, bit 2

## Relay Outputs (R41,080)

This table shows the current status of the relays. A reading of **0** means that the relay function is not asserted and a **1** means that it is asserted. For example, a **1** for a pump relay means that the pump is running.

Relay	Data Address
1	41,080, bit 1
2	41,080, bit 2
3	41,080, bit 3
4	41,080, bit 4
5	41,080, bit 5
6	41,080, bit 6

Values are written to control a relay only if the Relay Control Function (P111) is set to **communications (65)**. See *Relay Function Codes (P111 Only)* on page 104.

## mA Input (R41,090)

The mA input is scaled from 0 to 2,000 (0 to 20 mA multiplied by 100). P254 displays the value of the input. This parameter is indexed by the input number.

## mA Output (R41,110-41,111)

The mA output is scaled from 0 to 2,000 (0 to 20 mA multiplied by 100). Displayed in P911.

## Pump Control (R41,400 – R41,474)

Only relays set for pump control (P111 = 50 to 52) are available. These registers have no effect on relays programmed for other uses.

## Pump ON Setpoint (R41,420 – R41,425)

The ON setpoint level (P112) for the referenced pump relay.

The setpoint is scaled from 0 to 10,000 (0 to 100% of span multiplied by 100). So 54.02% is shown in the register as 5402.

## Pump OFF Setpoint (R41,430 – R41,435)

The OFF setpoint level (P113) for the referenced pump relay.

The setpoint is scaled from 0 to 10,000 (0 to 100% of span multiplied by 100). So 54.02% is shown in the register as 5402.

## Pumped Volume (R41,440 – R41,443)

The pumped volume registers hold the current total for all of the pumps associated with a level point. These registers are available only if operation is set to **pumped volume** (P001 = 7).

These volumes can become very large. Therefore, two registers are used to hold the value. See *Unsigned Double Precision Integer (UJINT32)* on page 101 for more information.

The value in the registers is given as an integer value but must be interpreted as having the number of decimals set in P633 (LCD Totalized Decimal Position); this number can be **0** to **3**. Ensure that your software accounts for these decimal places before you report the pumped volume totals.

## Pump Hours (R41,450 – R41,461)

The number of running hours for the referenced pump relay. The hours are given to three decimal places, so the integer must be divided by 1000 to get the correct value. For example 12,340 represents 12.34 hours.

This value comes from parameter P310. See page 149 of the *Parameter Reference* section for details.

## Pump Starts (R41,470 – R41,475)

The number of pump starts for the referenced pump relay.

This value comes from parameter P311. See page 149 of the *Parameter Reference* section for details.

## Parameter Access (R43,998 – R46,999)

Parameter values are given as integers in the range of registers from R44,000 to R44,999. The last three numbers of the register correspond to the parameter number.

Parameter Register #	Format Register #	Parameter #
44,000	46,000	P000
44,001	46,001	P001
44,002	46002	P002
...	...	...
44,999	46,999	P999

Usually, the parameters are all **read / write**.

**Note:**

- Parameters P000 and P999 are **read only**. If P000 is set to **lock activated** then all of the parameters are **read only**
- Parameter P999 (Master Reset) cannot be used via Modbus
- See *Data Types* on page 101 for a description of the different types of data associated with different parameters

Each parameter register has a corresponding format register that holds the format information required to interpret the value. See *Format Words (R46,000 to R46,999)* on page 98.

## Parameter Indexing

Many parameters are indexed. There are two possible indexes: a primary index and a secondary index. A secondary index is a sub-address of the primary index. Some indexed parameters affect multiple I/O devices.

The following is an example of a primary index:

P111 is the Relay Control Function. This parameter determines how a relay is controlled by the HydroRanger 200 (used as an alarm, for pump control, etc.). Because there are six relays on the HydroRanger 200, P111 is indexed by six to allow each relay to be programmed independently.

A few parameters also have a secondary index. While a secondary index is important for setting up the HydroRanger 200, it is almost never needed through remote communications.

## Indexing the Parameter Access Area

Each parameter communicates its value to only one register. You must know the index(es) for the parameter in order to interpret the information in the register correctly.

For example, to make use of the value returned in register R44,111 you must know which relay it is referring to. See *Relay Function Codes (P111 Only)* on page 104 for details on P111 values.

To determine the index values, the primary and secondary index must be **read or write**. The two possible methods of handling these index values are described in the following paragraphs: *Global Index Method* and *Parameter Specific Index Method*.

## Reading Parameters

To read parameter values, follow the steps listed in either the Global or the Parameter Specific Index Method that follow. You must be able to program your HMI or SCADA system before completing these methods.

## Global Index Method (P782 = 0)

Global format method sets index values for all parameters simultaneously. Use this method to read multiple values set to the same index values.

1. Write the primary index value into R43,999.

This is a value between **0** and **40** which specifies the input or output indexed by the parameter.

### Examples are:

- Transducer 1 is index 1
  - Discrete input 2 is index 2
  - Relay 5 is index 5
2. Write the secondary index value into R43,998.  
This is a value between **0** and **40** that specifies the secondary index on the parameter. This value is usually **0**.
  3. Write the desired format value into the appropriate format register. Because the primary and secondary indexes are already specified, these portions of the format word are ignored and only the last digit is significant.  
See *Format Registers* on page 109 for details.
  4. Read the value from the appropriate parameter register.

### Types of values are:

- *Numeric Values*, on page 101
- *Bit Values*, on page 101
- *Split Values*, on page 102
- *Text Messages*, on page 103
- *Relay Function Codes (P111 Only)*, on page 104

A value of 22,222 indicates that an error has occurred. Specify a different format type and try again.

## Parameter Specific Index Method (P782 = 1)

The Parameter Specific index method sets the index values for each parameter independently. Use this method to read multiple parameters with different index values.

1. Write the primary index, secondary index, and data format values into the appropriate format register.

For example, to read the following information:

- measured level (P921)
- in units with three decimal places
- from transducer one

Send the integer value 01008 to register 46,921.

2. Read the value from the appropriate parameter register (the example uses 44,921).

Types of values are:

- *Numeric Values* on page 101
- *Bit Values* on page 101
- *Split Values* on page 102
- *Text Messages* on page 103
- *Relay Function Codes (P111 Only)* on page 104

A value of 22,222 indicates that an error occurred. Specify a different format type and try again.

## Writing Parameters

The method of writing parameters is similar to the method of reading them. Become familiar with *Reading Parameters*, page 96, before attempting to write any parameters.

To write parameter values to the HydroRanger 200, follow these steps:

### Global Index Method (P782 = 0)

1. Write the primary index value into R43,999.
2. Write the secondary index value into R43,998.
3. Write the desired format value into the appropriate format register.
4. Write the value to the appropriate parameter register.

### Parameter Specific Index Method (P782 = 1)

1. Write the primary index, secondary index, and data format values into the appropriate format register.
2. Write the value to the appropriate parameter register.

## Format Words (R46,000 to R46,999)

Format words are unsigned integers that contain up to three values (described below). The number of values used in the format words depends on the Parameter Index Location (P782) that is used.

*Parameter P782 Parameter Index Location*, described on page 90, determines which of two methods is used to access the format words: Global Index Method or Parameter Specific Index Method.



# Global Index Method (P782 = 0)

Only the final digit of the format word determines the decimal offset (below).


# Parameter-Specific Index Method (P782 = 1)

All three decimal fields are used to determine the parameter value's primary index, secondary index, and decimal offset.

## Format Registers

Each format register is made up of three decimal fields:

- decimal offset
- secondary index
- primary index

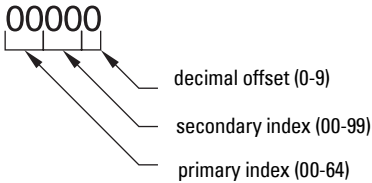

The primary and secondary indices correspond to those that are used by the parameter.

The decimal offset indicates how the remote system must interpret the integer value that is stored in the parameter access register. The following table shows how different parameter values can be shown based on a register value (integer) of **1234**.

Decimal	Offset	Example
0	0	1,234
1	-1	12,340
2	-2	123,400
3	-3	1,234,000
4	-4	12,340,000
5	-5	123,400,000
6	+1	123.4
7	+2	12.34
8	+3	1.234
9	Percent	12.34%

Examples of using the format word for both the index values and the decimal offset value are shown below:

Format	Primary Index	Secondary Index	Decimal
00000	00	00	0
01003	01	00	3 right
02038	02	03	3 left
05159	05	15	percent

To write these values you can use a decimal offset as follows: format word = (primary index x 1000) + (secondary index x 10) + (decimal).

# Data Types

---

The HydroRanger 200 parameters do not always use integers to hold values. For the convenience of the programmer, those values are converted to and from a 16-bit integer number. This section describes the conversion process. The sections that follow describe where those values are in the discrete I/O and block transfer addresses, and how to get the parameters you need.

## Numeric Values

Numeric parameter values are the most common. For example, parameter P920 (Reading) returns a number that represents the current reading (either **level** or **volume**, depending on the HydroRanger 200 configuration).

Numeric values are requested or set in units or percent of span, and may be specified with a number of decimal places.

Numeric values must be in the range  $-20,000$  to  $+20,000$  to be valid. If a parameter is requested and its value is more than  $+20,000$ , the number  $32,767$  is returned; if it is less than  $-20,000$ , the number  $-32,768$  is returned. If this overflow happens, decrease the number of decimal places.

If a parameter cannot be expressed in terms of percent of span, or has no meaningful value, the number  $22,222$  is returned. Try requesting the parameter in units, or refer to P005 in the *Parameter Reference* section on page 115.

## Bit Values

Bits are packed into registers in groups of 16 bits (1 word). In this manual, the bits are numbered from 1 to 16, with bit 1 as the least significant bit (LSB) and bit 16 as the most significant bit (MSB).

16	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01
MSB															LSB

## Unsigned Double Precision Integer (UINT32)

Large numbers are put into unsigned 32 bit integers. By default, they are set up so that the first word (register) is the most significant word (MSW) and the second word (register) is the least significant word (LSW).

For example, if R41,442 is read as a UINT32, the 32 bits would look like this:

R41,442			R41,443		
16	MSW	1	16	LSW	1
32	32-bit integer value (UINT32)				1

The two registers are read as a 32-bit integer.

The most significant word (MSW) and least significant word (LSW) can be reversed to accommodate some Modbus drivers. See *Word Order (R40,062)* on page 92 for details.

The position of the decimal place is dependent on the register. For more details see the description of the register.

## Split Values

Certain parameters are actually a pair of numbers separated by a colon, using this format: **xx:yy**.

**One example is P807, Transducer Noise, where:**

**xx** = the average noise value in dB

**yy** = the peak noise in dB

The number which corresponds to **xx:yy**, either for reading or setting a parameter, is determined by the following formula:

For storing to the Milltronics device:  

$$\text{value} = (\mathbf{xx} + 128) \times 256 + (\mathbf{yy} + 128)$$

For reading from the Milltronics device:  

$$\mathbf{xx} = (\text{value} / 256) - 128$$
  

$$\mathbf{yy} = (\text{value} \% 256) - 128$$

where % is the modulus operator.

The modulus can be computed by following these steps:

$$\text{value}_1 = \text{value} / 256$$

$$\text{value}_2 = \text{remainder of value}_1$$

$$\text{value}_3 = \text{value}_2 \times 256$$

$$\mathbf{yy} = \text{value}_3 - 128$$

It may simplify Parameter to notice:

$$\mathbf{xx} = (\text{most significant byte of value}) - 128$$

$$\mathbf{yy} = (\text{least significant byte of value}) - 128$$

# Text Messages

If a Milltronics device parameter returns a text message, that message is converted to an integer and provided in the register. The numbers are shown in the following table:

Number	Text Message as displayed on LCD
22222	Invalid value
30000	Off
30001	On
30002	≡ ≡ ≡ ≡
30003	☐ ☐ ☐ ☐ (parameter does not exist)
30004	Err
30005	Err1
30006	Open
30007	Short
30008	Pass
30009	Fail
30010	Hold
30011	Lo
30012	Hi
30013	De
30014	En
30015	---- (parameter has not been set)
-32768	Value is less than -20,000
32767	Value is greater than 20,000

# Relay Function Codes (P111 Only)

If a Milltronics device parameter returns a relay function code, that message is converted to a number and is then provided in the register.

The table shows the numbers:

## HydroRanger 200

Relay Function Code	Number	P111
OFF, relay not used	0	0
Undesignated Level Alarm	1	1
Low-Low Level Alarm	2	1 – LL
Low Level Alarm	3	1 – L
High Level Alarm	4	1 – H
High-High Level Alarm	5	1 – HH
In Bounds Alarm	6	2
Out of Bounds Alarm	9	3
Rate of Level Change Alarm	12	4
Temperature Alarm	15	5
Loss of Echo (LOE) Alarm	20	6
Transducer Cable Fault Alarm	16	7
Totalizer	22	40
Flow Sampler	23	41
Fixed Duty Assist	25	50
Fixed Duty Backup	26	51
Alternate Duty Assist	30	52
Alternate Duty Backup	31	53
Service Ratio Duty Assist	35	54
Service Ratio Duty Backup	36	55
First In First Out (FIFO)	40	56
Flush Valve	65	64
Communication	66	65

See P111 on page 127 in the *Parameter Reference* section.

# Error Handling

## Modbus Responses

When polled by a Modbus Master, a slave device will do one of the following:

1. Not reply. This means that something went wrong with the transmission of the message.
2. Echo back the command with the correct response (see the Modbus specification for more details). This is the normal response.
3. Return an Exception Code. This reflects an error in the message.

HydroRanger 200 uses the following exception codes:

Code	Name	Meaning
01	Illegal Function	The function code received in the query is not an allowable action for the slave.
02	Illegal Data Address	The data address received in the query is not an allowable address for the slave.
03	Illegal Data Value	A value contained in the query data field is not an allowable value for the slave.

## Error Handling

Errors can be traced to two general sources:

1. There is an error in transmission.

**OR**

2. The host tries to do something that is not a valid action.

In the first case, the HydroRanger 200 does not respond and the master waits for a **response time out** error, which causes the master to re-send the message.

In the second case, the response depends on what the host tries to do. In general, HydroRanger 200 will not give an error to the host request. Various actions and the expected outcome are as follows:

- If the host reads an invalid register, the host will get an undetermined value back.
- If the host writes an invalid register (a non-existing parameter or a **read only** parameter), the value will be ignored and no error response will be made. However, the current value will not reflect the desired new value.
- If the host writes a **read only** register, then the value will be ignored and no error response will be made. However, the current value will not reflect the desired new value.

- If P000 is activated, then the value will be ignored and no error response will be made. However, the current value will not reflect the desired new value.
- If the host attempts to write one or more registers that are out of range, an exception response code **2** or **3** is generated, depending if the start address is valid.
- If the host used an unsupported function code, an exception response code of **01** should be generated. However, this is not guaranteed and there may be no response.



# Communication Troubleshooting

---

## Generally

1. Check the following:
  - There is power at the unit
  - The LCD is showing the relevant data
  - The device can be programmed using the hand programmer
2. Check the wiring pin outs and verify that the connection is correct.
3. Verify that values in the set-up parameters (P770 to P779) match the settings in the computer used to communicate with the unit.
4. Check that the port on the computer is correct. Sometimes trying a different Modbus driver will solve the problem. An easy stand-alone driver called ModScan32 is available from Win-Tech at [www.win-tech.com](http://www.win-tech.com). This driver is helpful for testing communications.

## Specifically

1. The HydroRanger 200 is set to communicate via a modem but no communication is returning to the master.
  - Check that the parameters are set up correctly and that the correct port is configured
  - Verify the wiring diagram. Note that there is a difference between wiring directly to a computer and wiring to a modem. Verify that the modem is set up correctly. Milltronics has a series of Application Guides that may help. Please contact your local Siemens Milltronics representative for more information on Application Guides.
2. A HydroRanger 200 parameter is set via remote communications, but the parameter remains unchanged.
  - Some parameters can only be changed when the Milltronics device is not scanning. Try putting the Milltronics device in program mode, using the operating mode function.
  - Try setting the parameter from the keypad. If it can not be set using the keypad, check the lock parameter and set it to **1954**.

# Communication Appendix A: Single Parameter Access (SPA)

---

This Appendix is intended to provide someone with advanced communications knowledge the ability to access any parameter value in any available format.

Built into HydroRanger 200 is an advanced handshaking area that can be used to read and write single registers to the HydroRanger 200. This section performs a similar function to the Parameter access section. The differences are:

1. Advanced section is more powerful and harder to program.
2. Advanced section only gives you access to one parameter at a time.

## Mapping

Parameter Read and Write (40,090 – 40,097) is a series of eight registers used for reading and writing parameter values to and from the HydroRanger 200. The first three registers are always unsigned integers representing parameters and index values. The second five registers are the format and value(s) of the parameter.

All parameters normally accessed through the hand-held programmer are available through these registers.

Address	Description
40,090	Parameter (integer)
40,091	Primary Index (integer)
40,092	Secondary Index (integer)
40,093	Format word (bit mapped)
40,094	Read value, word 1
40,095	Read value, word 2
40,096	Write value, word 1
40,097	Write value, word 2

## Reading Parameters

To read parameters through Modbus do the following steps:

1. Send the parameter, its primary index, and its secondary index (usually 0), and format to registers 40,090 to 40,093.
2. Wait until you can read the written values from the registers (40,090 to 40,093) to confirm that the operation is complete.
3. Read the value from registers 40,094 and 40,095.

# Writing Parameters

To set parameters through Modbus do the following steps:

1. Send the parameter, its primary index, and its secondary index (usually **0**) to registers 40,090, 40,091, and 40,092.
2. Write the value to registers 40,096 and 40,097.
3. Write the desired format word to register 40,093 to enable the HydroRanger 200 to interpret the value correctly.

## Format Register

Bits	Values	Description
1-8	0-2	Error Code
9-11	0-7	3-bit number representing decimal offset
12	0/1	direction of offset (0 = right, 1 = left)
13	0/1	Numeric format: Fixed (0) or Float (1)
14	0/1	Read or Write of data, Read (0), Write (1)
15	0/1	Word order: Most Significant Word first (0), Least Significant Word first (1)
16		Reserved

For example, to format the level reading so that it is shown in percent with two decimal places shifted left, the format bits would look like this:

Bit Numbers	16	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01
Bit Values	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0
	reserved	most significant first	read	fixed format	offset direction to right	decimal offset of 2			no error code							

The value sent to the HydroRanger 200 is 0001001000000000 binary or 512 decimal. The value **512** is sent as an integer to register 40,093 to format the output words 40,094 and 40,095 accordingly.

If the numeric data type is set for integer and the value contains decimal places, they are ignored. In this situation, use the decimal offset to ensure that you have an integer value and then write your code to recognize and handle the decimal offset.

# Error Codes

The error codes returned in the format area are 8-bit integers found in the lowest eight bits of the format word. This allows for 256 potential error codes.

Currently the HydroRanger 200 has two error codes available.

Values	Description
0	No error
1	Data not available as percent (available as units)
2-255	Reserved

# Parameter Reference

---

The HydroRanger 200 is configured through its parameters, and the application determines the parameter values which are entered into the unit.




Please check your value entries carefully before operating the HydroRanger 200 to ensure optimum performance.

## Helpful Hints

Please note the following:

- **Default** values are always indicated with an asterix (\*)
- **Global** values are common for all inputs and outputs on the unit
- **Indexed** parameters can apply to more than one input or output
- **Primary index** relates to an input or output
- **Secondary index** allows for multiple values on an indexed point

### Accessing a Secondary Index

1. Press MODE , and then press DISPLAY  to activate secondary index.  
The  icon appears under the index field.
2. Enter the secondary index, and then enter the values to set the secondary index.

# Notes

---

# P000 Lock

*Secures the HydroRanger 200 from changes.*

<b>Primary Index</b>	Global		
<b>Values</b>	1954	*	OFF (programming permitted)
	-1		Simulation Controls (relays energize based on simulated level)
	other		lock activated (programming secured)
<b>Related</b>	• Simulation		

## **WARNING:**

**Use this lock as backup security only. It uses a fixed value which can be discovered by unauthorized personnel.**

Access this parameter directly (type **000**) and enter any value (except 1954) to secure programming lock. To unlock the HydroRanger 200, access this parameter and enter **1954**.

## Quick Start (P001 to P007)

### P001 Operation

*Sets the type of measurement required for the application.*

<b>Primary Index</b>	Global		
<b>Values</b>	0		Out-of-service
	1		Level – how full the vessel is. (Volume – P050)
	2		Space – how empty the vessel is (ullage – P050)
	3	*	Distance – distance from transducer to material
	4		DPD – dual point difference
	5		DPA – dual point average
	6		OCM – flow rate in an open channel
	7		Pump Totalizer – total pumped volume
<b>Alters</b>	• P600 Primary Measuring Device		

### For DPD and DPA Programming

For Dual Point Difference (DPD) or Dual Point Average (DPA), the unit requires either two transducers of the same type, or one transducer and one mA input. If two transducers are used, all transducer parameters become indexed, and a third level point is calculated.

- $DPD \text{ (difference)} = \text{Point 1} - \text{Point 2}$
- $DPA \text{ (average)} = (\text{Point 1} + \text{Point 2}) / 2$ . The calculated DPD or DPA is always based on level measurements of points 1 and 2.

For these operations any of three level points (transducer 1, transducer 2, or the calculated point) can be used to trigger relays (see P110 on page 127).

The points must be globally set to either 4 or 5 (as required). Point 3 becomes the calculated value as shown above. See *Rake Control* example on page 62.

## P002 Material

*Specifies material type.*

<b>Primary Index</b>	Global		
<b>Values</b>	1	*	Liquid or horizontal solid surface
	2		Solid or angled surface
<b>Alters</b>	• P830 TVT Type		

## P003 Maximum Process Speed

*Determines level change reaction.*

<b>Primary Index</b>	Transducer		
<b>Values</b>	1		Slow (0.1 m/min)
	2	*	Medium (1 m/min)
	3		Fast (10 m/min)
<b>Alters</b>	<ul style="list-style-type: none"> <li>• P070 Failsafe Timer</li> <li>• P700 Max Fill Rate</li> <li>• P701 Max Empty Rate</li> <li>• P702 Filling Indicator</li> <li>• P703 Emptying Indicator</li> <li>• P704 Rate Filter</li> <li>• P710 Fuzz Filter</li> <li>• P713 Echo Lock Window</li> <li>• P727 Scan Delay</li> <li>• P841 Long Shot Number</li> </ul>		
<b>Related</b>	<ul style="list-style-type: none"> <li>• Failsafe (P070 to P072)</li> <li>• P121 Pump by Rate</li> <li>• Rate (P700 to P708)</li> <li>• Measurement Verification (P710 to P713)</li> <li>• Transducer Scanning (P726 to P729)</li> <li>• P905 Transmit Pulse</li> </ul>		

Use a setting just fast enough to keep up with your process. Slower settings provide higher accuracy. Faster settings allow for more level fluctuations.



## P004 Transducer

*Specifies the Siemens Milltronics transducer connected to the unit.*

	Global		
Values	0	*	No transducer attached (preset for Dual Point)
	1		ST-25
	2		ST-50
	100		STH
	101		XCT-8
	102	*	XPS-10 (preset for Standard Mode)
	103		XCT-12
	104		XPS-15
	112		XRS-5
	250		mA input
Related			<ul style="list-style-type: none"> <li>• mA Input (P250 to P260)</li> <li>• P842 Short Shot Frequency</li> <li>• P843 Long Shot Frequency</li> <li>• P844 Short Shot Width</li> <li>• P845 Long Shot Width</li> <li>• P852 Short Shot Range</li> </ul>

## P005 Units

*Specifies measurement units used for dimensional values.*

Primary Index	Global		
Values	1	*	Meters
	2		Centimeters
	3		Millimeters
	4		Feet
	5		Inches
Alters			<ul style="list-style-type: none"> <li>• P006 Empty</li> <li>• P007 Span</li> <li>• P060 Decimal Position</li> <li>• P603 Maximum Head</li> <li>• P605 Zero Head</li> <li>• P620 Low Flow Cutoff</li> <li>• P921 Material Measurement</li> <li>• P926 Head Measurement</li> <li>• P927 Distance Measurement</li> </ul>


Changing this value automatically changes the units displayed for many parameters. Existing values are converted and do not have to be re-entered.

## P006 Empty

Enter distance in **units** (P005) from the face of the transducer to the process empty point.

<b>Primary Index</b>	Transducer
<b>Values</b>	Range: 0.000 to 9999
	Preset: 5.000m (or equivalent depending on units)
<b>Alters</b>	<ul style="list-style-type: none"> <li>• P007 Span</li> </ul>
<b>Altered By</b>	<ul style="list-style-type: none"> <li>• P005 Units</li> </ul>
<b>Related</b>	<ul style="list-style-type: none"> <li>• P800 Near Blanking</li> <li>• P921 material Measurement</li> <li>• P927 Distance Measurement</li> </ul>

Setting this value also sets Span (P007) unless Span was already set to another value. For distance operation (P001=3), Span is preset to Empty.

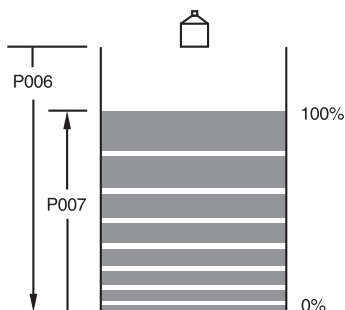

## P007 Span

Sets the range levels to be measured.

<b>Primary Index</b>	Level
<b>Values</b>	Range: 0.000 to 9999
	Preset: based on Empty (P006)
<b>Alters</b>	<ul style="list-style-type: none"> <li>• P605 Zero Head</li> <li>• P112 Relay ON Setpoint</li> <li>• P113 Relay OFF Setpoint</li> </ul>
<b>Altered By</b>	<ul style="list-style-type: none"> <li>• P005 Units</li> <li>• P006 Empty</li> </ul>
<b>Related</b>	<ul style="list-style-type: none"> <li>• Volume (P050 to P055)</li> <li>• P800 Near Blanking</li> <li>• P921 Material Measurement</li> <li>• P922 Space Measurement</li> <li>• P926 Head Measurement</li> </ul>

Span is preset for a value close to the maximum available. Enter a value reflecting maximum application range.

Always prevent the monitored surface from approaching within 0.33m (1 ft) of the transducer face as this is the minimum blanking for most Siemens Milltronics transducers (some require more blanking – see your transducer manual).

Many other parameters are set as a percentage of span (even if they are entered in units). The values of these other parameters may change if the span is altered after installation and the other parameters are measured using a level determined upward from the Empty level toward the transducer face.

Volumes are based on span. Set for the maximum volume point if volume calculations are needed.

## Volume (P050 to P055)

Please note that the volume parameters apply only to the HydroRanger 200.




Use these parameters to configure the HydroRanger 200 to show readings based on vessel or wet well volume (rather than level).




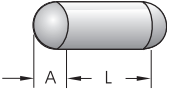
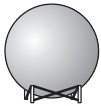
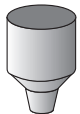

### P050 Tank Shape

*Enter the Tank Shape value matching the monitored vessel or wet well.*

When Operation is **LEVEL** (P001 = 1), liquid (material) volume is calculated.

Alternatively, when Operation is **SPACE** (P001 = 2), remaining vessel capacity is calculated. In RUN mode, readings are displayed in percent of maximum volume. To convert readings to volumetric units, see Maximum Volume (P051)

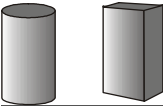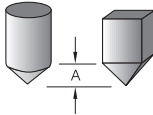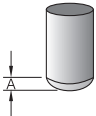Primary Index	Global		
Values	#	Shape	Description
	0	*	volume calculation not required (preset)
	1		Flat Level Bottom
	2		Cone/Pyramid Bottom
	3		Parabola Bottom

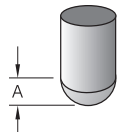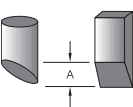Values	4		Half Sphere Bottom
	5		Flat Sloped Bottom
	6		Flat Ends
	7		Parabola Ends
	8		Sphere
	9		Universal Linear
	10		Universal Curved
Alters	<ul style="list-style-type: none"> <li>• P001 Operation</li> <li>• P051 Maximum Volume</li> <li>• Pump Efficiency (P180-P186)</li> <li>• Pumped Volume Totalizer (P622-P623)</li> <li>• P920 Reading Measurement</li> </ul>		

## P051 Maximum Volume

For Readings in volumetric units (rather than percent), enter the vessel volume between Empty (P006) and Span (P007).

Primary Index	Global
Values	Range: 0.000 to 9999
	Preset: 100.0
Alters	P060 Decimal Position
Related	<ul style="list-style-type: none"><li>• P006 Empty</li><li>• P007 Span</li><li>• P924 Volume Measurement</li></ul>

Any volume units can be chosen because volume is calculated from empty to maximum span and is scaled according to the Tank Shape (P050) value.

**Note:** Make sure selected chosen units allow LCD volume display.

### Examples:

- If max. volume = 3650 m<sup>3</sup>, enter 3650
- If max. volume = 267500 gallons, enter 267.5 (thousands of gallons)

## P052 Tank Dimension A

Dimension A as used in P050 Tank Shape.

Primary Index	Global
Values	Range: 0.0 to 9999
	Preset: 0.000
Related	<ul style="list-style-type: none"><li>• P050 Tank Shape</li></ul>

Enter one of the following:

- height of the tank bottom if P050 = 2,3,4, or 5

OR

- length of one end section of the tank if P050 = 7, in Units (P005)

## P053 Tank Dimension L

Dimension L as used in P050 Tank Shape.

Primary Index	Global
Values	Range: 0.0 to 9999
	Preset: 0.000
Related	<ul style="list-style-type: none"><li>• P050 Tank Shape</li></ul>

Enter the following:

- tank length (excluding both end sections) if P050 = 7

# P054 Level Breakpoints (Universal Volume Calculation)

When the tank shape is too complex for any of the preconfigured shapes, you can specify the volume based on segments.

Primary Index	Global
Secondary Index	Breakpoint
Values	Range: 0.0 to 9999
Related	<ul style="list-style-type: none"><li>P055 Volume Breakpoints</li></ul>

Enter the following:

- up to 32 level breakpoints (where volume is known) if P050 = 9 or 10

## Entering a Level Breakpoint

- Go to Parameter P054.
- For each index enter a breakpoint in measurement units.
- Ensure that each breakpoint corresponds to the same index for P055.

 
# P055 Volume Breakpoints and Characterization (Universal Volume Calculation)

Each segment defined by the level breakpoints (P055) requires a volume so that the HydroRanger 200 can make the level-to-volume calculations.

Primary Index	Global
Secondary Index	Breakpoint
Values	Range: 0.0 to 9999
Related	<ul style="list-style-type: none"><li>P054 Breakpoints Levels (Universal Volume Calculation)</li></ul>


## Typical volume calculations

Cone

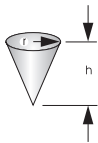

$$V = (1/3)\pi r^2 h$$

 Cylinder

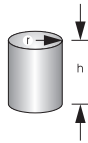

$$V = \pi r^2 h$$

## Entering a Volume Breakpoint

1. Go to Parameter P055.
2. For each index enter a volume.
3. Ensure that each volume corresponds to the same index for P054.

For more on *Volume Characterization*, go to page 44.

## Display and Reading (P060 to P062)

These parameters are used to:

- Change the number of decimal places displayed
- Convert the Reading to alternate units
- Reference measurements to other than Empty (P006) or Span (P007)

### P060 Decimal Position

*Defines the maximum number of decimal places used on the LCD.*

Primary Index	Level	
Values	0	No digits after the decimal point
	1	1 digit after the decimal point
	2	* 2 digits after the decimal point
	3	3 digits after the decimal point (limited by device resolution)
Alters		• P607 Flowrate Decimal
Altered by	• P005 Units • P051 Maximum volume	
Related	• P920 Reading Measurement	

In RUN mode, the decimal position adjusts to prevent the number of digits from exceeding the display capabilities. To keep the decimal place from shifting, reduce the number of decimal places to that shown at 100%.

#### Example:

If 100% is 15m, use two decimal places for sample readings of 15.00 or 12.15.

### P061 Convert Reading

*Multiplies the current value by the specified amount to allow for scaling.*

Primary Index	Level
Values	Range: -999 to 9999
	Preset: 1.000
Related	• P920 Reading Measurement

## Examples:

- If the measured value is in feet, enter **0.3333** to display the number of yards
- For simple linear, volume conversions set P005 to **1** (meters) and then enter the volume measurement per unit to get the correct conversion. For example, if the reservoir contains 100 litres per vertical meter, use **100** to get the reading in litres.

### Notes:

- This method does not calculate volume. It must not be used in place of the volume parameters if any volume dependent features (such as pump efficiency) are used. To calculate true volumes see Volume (P050 to P055).
- Avoid entering a value that, when multiplied by the maximum current Reading, exceeds the display capabilities. If value exceeds four digits, **EEEE** is shown.

## P062 Offset Reading

*Adds the specified value to the level reading, usually to reference the reading to sea level or another datum level.*

Primary Index	Level
Values	Range: -999 to 9999
	Preset: 0.000
Related	<ul style="list-style-type: none"><li>• P920 Reading Measurement</li></ul>

The operation of the device is not affected by the Offset Reading. This value is used for display purposes only. All control measurements are still referenced to Empty.

## Backup Level Override

Use this feature to override the ultrasonic reading by a discrete input such as a contacting point device. The ultrasonic reading will be fixed at the programmed switch level until the discrete input is released.

The ultrasonic device makes decisions based on the override values.

## P064 Reading Override Enable

*Sets the discrete input to act as the source for a level reading override.*

Primary Index	Transducer		
Values	0	*	OFF: No override.
	1-2		ON: Number = discrete input of override signal
Related	<ul style="list-style-type: none"><li>• P065 Reading Override Value</li><li>• P270 Discrete Input Function</li></ul>		



## P065 Reading Override Value

*This value is substituted for the current reading when the selected discrete input is enabled and activated.*

<b>Primary Index</b>	Transducer
<b>Values</b>	Range: 0.0 to 9999
<b>Alters</b>	Current reading
<b>Related</b>	<ul style="list-style-type: none"><li>• P001 Operation</li><li>• P005 Units</li><li>• P006 Empty</li><li>• P007 Span</li><li>• P064 Override Enable</li></ul>

Please note the following:

- enter value in current units (as selected in P005)
- valid for level, space, and distance
- volume is calculated based on the Backup level

### Example:

Transducer One is configured for a level measurement. Digital Input 2 is connected to a Hi Level Backup switch located a level of 4.3m.

Parameter	Index	Value
P064	1	2
P065	1	4.3

When the level rises to 4.3m, and the switch is activated, the reading is forced to 4.3m. The reading stays at 4.3m until the switch is de-activated.

## P066 Override Time Delay

*Defines the time used to calm (debounce) the override condition input. Set in seconds.*

<b>Primary Index</b>	Transducer
<b>Values</b>	Range: 0.0 to 9999 Preset: 5.0
<b>Related</b>	<ul style="list-style-type: none"><li>• P064 Override Enable</li><li>• P065 Reading Override Value</li><li>• P270 Discrete Input Function</li></ul>

**Note:** Activation of the Level Override is subject to the measurement cycle. This can add up to four seconds to the overall response time depending on operating conditions and programming.

# Failsafe (P070 to P072)

## P070 Failsafe Timer

*The time for invalid measurements to elapse before Failsafe State activates.*

Primary Index	Global
Values	Range: 0.0 to 9999
	Preset 10.00 minutes
Altered by	<ul style="list-style-type: none"><li>P003 Maximum Process Speed</li></ul>
Related	<ul style="list-style-type: none"><li>P129 Relay Failsafe</li></ul>

### Once activated, the Failsafe State initiates the following:

- The material level is reported based on P071 Failsafe Material Level.
  - The unit responds to the new level as programmed (control and alarm relays activate as defined by the programming).
  - Individual relays can have independent failsafe responses. See P129 Relay Failsafe.
- The appropriate error is displayed:
  - LOE** for loss of echo from the transducer
  - Short** for a shorted transducer cable
  - Open** for a cut transducer cable
  - Error** for all other problems

When modifying the preset value, set it short enough to protect the process but long enough to avoid false alarms. Only use **No Delay (0.0 Minutes)** for testing.





## P071 Failsafe Material Level

*The material level reported when a Failsafe State is initiated.*

Primary Index	Level Point	
Values	Range: -4999 to 9999	Value in units or % (-50% to 150% of span)
	HI	Level goes to maximum span
	LO	Level goes to 0 span (Empty)
	HOLd *	Level remains at last reading
Related	<ul style="list-style-type: none"><li>P001 Operation</li><li>P006 Empty</li><li>P007 Span</li><li>P111 Relay Control Function</li><li>P112 Relay ON Setpoint</li><li>P113 relay OFF Setpoint</li><li>P129 Relay Failsafe</li></ul>	

Select the Failsafe Material Level based upon the relay operation required during failsafe operation.

## Selecting HI, LO, or HOLD

1. Press FUNCTION  to display the Auxiliary Function symbol.
2. Press ARROWS   to scroll to the desired option.
3. Press ENTER  to set the value.

## Entering a Measurement

To enter a specific Failsafe Material Level within -50 to 150% of Span (P007), in Units (P005).

## Relay reaction

The way in which relay programming reacts to the failsafe level depends on P129 Relay Failsafe (page 132). By default:

- Alarm relays have P129 = OFF and so react to the Failsafe Material Level.
- Control relays have P129 = **dE** and so de-energize the relay when the unit enters Failsafe mode regardless of the Failsafe Material Level.

## P072 Failsafe Level Advance

*Sets the speed the HydroRanger 200 advances to and returns from the Failsafe Material Level.*

Primary Index	Level Point			
Values	1	*	Restricted	Advances to/from Failsafe Material Level as set by P003, P700 and P701.
	2		Immediate	Failsafe Material Level assumed right away
	3		Fast Back	Failsafe Level Advance is restricted, return is immediate
Related	<ul style="list-style-type: none"><li>• P003 Maximum Process Speed</li><li>• P070 Failsafe Timer</li><li>• P071 Failsafe Material Level</li><li>• P700 Max Fill rate</li><li>• P701 Max Empty rate</li></ul>			

# Relays (P100 to P119)

The HydroRanger 200 has six relays (or digital outputs) used to control devices and alarms. While the number of devices is limited by the relays, all control functions are accessible through software and each parameter is indexed to the three or six relays. See the *Relay* section on page 34.

## Preset Applications (P100)

The HydroRanger 200 makes standard applications easier to program by providing an extensive list of presets.

## Control Functions (P111)

Each relay can be configured independently to take advantage of the HydroRanger 200's advanced features and flexibility. Start with a preset application and then change the required parameters to make the task more efficient.

## Setpoints (P112, P113)

Each relay is triggered by one or more setpoints. The setpoints can be based on absolute level (P112, P113) or rate of change (P702, P703). Each control function specifies which setpoints are required.

## P100 Preset Applications

*Six preset applications to configure or bench test the unit.*

Primary Index	Global	
Values	0	* OFF
	1	Wet Well 1
	2	Wet Well 2
	3	Reservoir 1
	4	Reservoir 2
	5	Screen
	6	Alarms
Alters	<ul style="list-style-type: none"><li>• P110 Level Source</li><li>• P111 Relay Control Function</li><li>• P112 Relay On Setpoint</li><li>• P113 Relay OFF Setpoint</li><li>• P121 Pump by Rate</li></ul>	
Related	<ul style="list-style-type: none"><li>• P001 Operation</li></ul>	

Select an application that is similar to yours and change the parameters required. If none suit, then refer to P111 Relay Control Function on page 127.

**Note:** Programming the relays independently is the most common method used.

## P110 Level Source

*Sets the level source on which the indexed relay is assigned to a measurement point.*

<b>Primary Index</b>	Relay		
<b>Values</b>	Range: 1 to 3		
	1	*	Point # 1 = Transducer One
	2		Point # 2 = Transducer Two
	3		Point # 3 = Difference (P001=4) or Average (P001=5)
<b>Altered by:</b>	<ul style="list-style-type: none"> <li>• P003 Maximum Process Speed</li> <li>• P700 Max Fill rate</li> <li>• P701 Max Empty rate</li> <li>• P070 Failsafe Timer</li> <li>• P071 Failsafe Material Level</li> </ul>		

### Standard Single Point Mode:

Points 2 and 3 are available only if Operation is set for **difference** or **average** (P001 = 4 or 5).

## P111 Relay Control Function

*Sets the control algorithm used to trip the relay.*

<b>Primary Index</b>	Relay
<b>Values</b>	See chart below
<b>Altered by</b>	<ul style="list-style-type: none"> <li>• P100 Preset Applications</li> </ul>

Use zero 0 (preset) to disable control of the indexed relay.

**Note:** All relay ON/OFF points must be referenced from Empty (P006), regardless of Operation Mode selection (P001).

		Values For P111	
Control	Type	# <sup>1</sup>	Relay Control
General	Off	0*	Relay set off, no action (preset)
	Level	1	Based on level setpoints ON and OFF
	In Bounds	2	Level enters the range between ON and OFF setpoints
	Out of Bounds	3	Level exits the range between ON and OFF setpoints
	Rate of Change	4	Based on rate setpoints ON and OFF
	Temperature	5	Based on temperature setpoints ON and OFF
	Loss of Echo (LOE)	6	When echo is lost
	Cable Fault	7	When the circuit to a transducer is opened
Flow	Totalizer	40	Every 10 <sup>9</sup> units (P641-P645)
	Flow Sampler	41	Every <b>y x 10<sup>2</sup></b> units (P641-P645) or time duration (P115)

Values For P111			
Control	Type	# <sup>1</sup>	Relay Control
Pump	Fixed Duty Assist	50	At fixed ON and OFF setpoints and allows multiple pumps to run or for rake control
	Fixed Duty Backup	51	At fixed ON and OFF setpoints and allows only one pump to run
	Alternate Duty Assist	52	At rotating ON and OFF setpoints and allows multiple pumps to run
	Alternate Duty Backup	53	At rotating ON and OFF setpoints and allows only one pump to run
	Service Ratio Duty Assist	54	On service ratio at ON and OFF setpoints and allows multiple pumps to run
	Service Ratio Duty Backup	55	On service ratio at ON and OFF setpoints and allows only one pump to run
	First In First Out (FIFO)	56	As Alternate Duty Assist, resets the relay from staggered OFF setpoints.
Control	Flush Valve	64	Used to control a pump flushing device based on Flush Systems (P170 to P173)
	Communication	65	Based on input from external communications. See <i>Communications</i> on page 83 for further reference.

1. When reading and setting this parameter through Modbus or SmartLinx communications the parameter values are mapped to different numbers. See the *HydroRanger Communications* section on page 83 for Modbus information or the relevant SmartLinx<sup>®</sup> manual.

## P112 Relay ON Setpoint

*Sets the process point at which the relay changes from its NORMAL state.*

Primary Index	Relay
Values	Range: -999 TO 9999
	Preset: ----
Altered by	<ul style="list-style-type: none"> <li>• P007 Span</li> </ul>
Related	<ul style="list-style-type: none"> <li>• P100 Preset Applications</li> <li>• P111 Relay Control Function</li> <li>• P113 Relay OFF Setpoint</li> </ul>

For most applications, the relay is tripped at this point. For IN-BOUNDS and OUT-OF-BOUNDS alarms, it is the high point in the specified range. This parameter is set according to Span (P007) even when another reading, such as volume, is shown on the LCD.

## P113 Relay OFF Setpoint

*Sets the process point at which the relay returns to its NORMAL state.*

<b>Primary Index</b>	Relay
<b>Values</b>	Range: -999 TO 9999
	Preset: ----
<b>Altered by</b>	<ul style="list-style-type: none"> <li>• P007 Span</li> </ul>
<b>Related</b>	<ul style="list-style-type: none"> <li>• P100 Preset Applications</li> <li>• P111 Relay Control Function</li> <li>• P112 Relay ON Setpoint</li> </ul>

For most applications, the relay is reset at this point. For IN-BOUNDS and OUT-OF-BOUNDS alarms, it is the low point in the specified range. This parameter is set to Span (P007), even when another reading, such as volume, is shown on the LCD.

## P115 Relay Interval Setpoint

*The length of time in hours between flow samplers (if P111 = 41).*

<b>Primary Index</b>	Relay
<b>Values</b>	Range: -999 TO 9999
	Preset: 0.000
<b>Altered by</b>	<ul style="list-style-type: none"> <li>• P100 Preset Applications</li> </ul>
<b>Related</b>	<ul style="list-style-type: none"> <li>• P111 Relay Control Function</li> </ul>


## P116 Dead Band

*The distance above and below the bound alarm setpoints*

<b>Primary Index</b>	Relay
<b>Values</b>	Range: 0.000 to 9999
	Preset: 2% of span
<b>Related</b>	<ul style="list-style-type: none"> <li>• P111 Relay Control Function</li> <li>• P112 Relay ON Setpoint</li> <li>• P113 Relay OFF Setpoint</li> </ul>

For IN-BOUNDS and OUT-OF-BOUNDS Relay Functions (P111 = 2 and 3 respectively), a dead band prevents relay chatter due to material level fluctuations at both the upper and lower setpoints.

Enter the dead band in either percent of span or units of measure (P005). The dead band value is applied both above and below the upper and lower bound setpoints as shown in the figure.

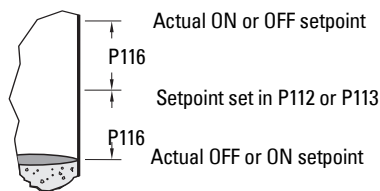

# P118 Relay Output Logic

The logic applied to relays to determine the contact open or closed state.

Primary Index	Relay					
Values	Value	Logic	Alarm Contact	Pump or Control Contact		
	2	*	Positive	Normally Closed	Normally Open	
	3		Negative	Normally Open	Normally Closed	
Related	• P111 Relay Control Function					

The relay contact operation is **NORMALLY CLOSED** for alarms and **NORMALLY OPEN** for controls. See P111 *Relay Control Function* for more information.

## Power Failure

When power is cut to the HydroRanger 200, its relays fail to the following states:

Relay States	
Relay	Fail State
1,2,4,5	Open
3,6	Open or Closed <sup>1</sup>

- Relays 3 and 6 are Form C types, so you can wire it either **NORMALLY OPEN** or **NORMALLY CLOSED**. Check the wiring before programming.

To use relays 3 or 6 as general alarm indicators, set P118 to **3 – negative logic** and wire the alarm for normally open operation. When an alarm event occurs (see below) or when power is cut, the circuit closes and the alarm activates.

## Positive Logic

In software, all relays are programmed the same way, with ON setpoints indicating when to change the relay contact state (open or closed). This parameter allows the reversal of the operation so that relay contacts can be **NORMALLY CLOSED** or **NORMALLY OPEN**. P118 is preset to 2 which is positive logic.

## Negative Logic

When P118 = 3 (negative logic), the operation for the indexed relay is reversed from normal.



# P119 Relay Logic Test

*Forces the relay control logic into an ACTIVATED or DE-ACTIVATED state.*

Primary Index	Relay		
Values	0	*	OFF - Control from HydroRanger 200 algorithms
	1		Activate relay control
	2		De-activate relay control
Related	<ul style="list-style-type: none"><li>• P111 Relay Control Function</li><li>• P910 Toggle Relays</li></ul>		

This parameter tests site wiring and control logic programming. Forcing the relay to an activated or de-activated state is similar to the HydroRanger 200 detecting an event and responding to it. Helpful in testing new installations and diagnosing control problems.

## Pump Setpoint Modifiers (P121 and P122)

These parameters provide alternate ways of starting the pumps in the pump group. See the Pump Control section on page 51 for descriptions of the pump control algorithms.

### P121 Pump by Rate

*Sets the pump relays to accept control by rate of level change once the first ON setpoint is reached.*

Primary Index	Global		
Values	0	*	OFF (pump by level)
	1		ON (pump by rate)
Related	<ul style="list-style-type: none"><li>• P007 Span</li><li>• P111 Relay Control Function</li><li>• P132 Pump Start Delay</li><li>• Rate (P700 to P708)</li></ul>		

Use this function when multiple pumps are to be controlled by rate of level change rather than by setpoints.

The delay between pump starts is set by P132 Pump Start Delay.

This only applies to any relays set to pump control (P111 = 50 to 56).

#### Notes:

- All pump control relay ON and OFF setpoints must be the same value
- If level is within 5% of Span (P007) of the OFF setpoint, the next pump is not started

# P122 Pump Service Ratio

*Selects pump usage based on the RUN time ratio rather than last used.*

Primary Index	Relay
Values	Range: 0.000 to 9999
	Preset: 20.00
Related	<ul style="list-style-type: none"><li>P111 Relay Control Function</li></ul>

This parameter only relates to relays with P111 = 54 or 55.

To make this parameter useful, assign it to all of the pump relays. The number assigned to each pump relay represents the ratio applied to decide the next pump to start or stop.

## Notes:

- The HydroRanger 200 will not sacrifice other pumping strategies to ensure that the ratio is held true
- If the pump relays are set to the same value then the ratio equals 1:1 and all pumps are used equally (preset)

# Independent Relay Failsafe (P129)

## P129 Relay Failsafe

*Sets the failsafe operation per relay to allow for more flexible programming.*





Primary Index	Relay		
Values	OFF	*	Response governed by P071 Failsafe Material Level
	HOLD		For LAST KNOWN relay state retention
	dE		To have the relay de-energize immediately on failsafe
	En		To have the relay energize immediately on failsafe
Altered by	<ul style="list-style-type: none"><li>P071 Failsafe Material Level</li><li>P070 Failsafe Timer</li><li>P111 Relay Control Function</li></ul>		

Use this for operations independent of the Failsafe Material Level (P070).

Relay Failsafe is only available for the following relay functions (P111) and is not used for any other relay control function.

Relay Function (P111)	Preset (P129)
1 – level alarm	OFF
2 – in bounds alarm	
3 – out of bounds alarm	
4 – rate of change alarm	
5 – temperature alarm	
50 to 56 – all pump controls	dE

To select an independent Relay Failsafe value:

1. Press FUNCTION  to display the Auxiliary Function symbol.
2. Press ARROWS   to scroll through the failsafe options.
3. Select option and press ENTER .

## Advanced Pump Control Modifiers (P130 to P137)

These parameters only affect relays set to pump operation (P111 = 50 to 56).

### P130 Pump Run-On Interval

*Sets the number of hours between pump run-on occurrences.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.000 to 1000
	Preset: 0.000
<b>Related</b>	<ul style="list-style-type: none"> <li>Advanced Pump Control Modifiers (P130 to P136)</li> </ul>

 
To clear sediment in a **pump-down** wet well, run the pump after the normal OFF setpoint is reached to force some solid material through. This parameter sets the time between such events. Only the last pump running can run-on.

## P131 Pump Run-On Duration

*Sets the number of seconds that the pump runs on.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.0 to 9999
	Preset: 0.000
<b>Related</b>	<ul style="list-style-type: none"> <li>Advanced Pump Control Modifiers (P130 to P136)</li> </ul>

Your pump capacity determines the amount of material that can be removed. Choose a value long enough to clean out the vessel bottom, yet short enough not to run the pump dry. Also be sure that this value does not overlap with P130 (Interval). The timing should look something like this:

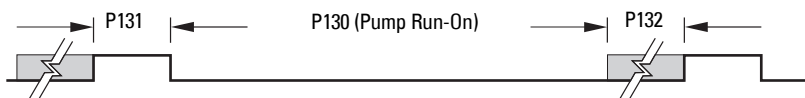

## P132 Pump Start Delay

*Sets the minimum delay (in seconds) between pump starts.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.0 to 9999
	Preset: 10 seconds
	Value is divided by 10 in simulation mode.
<b>Related</b>	<ul style="list-style-type: none"> <li>Advanced Pump Control Modifiers (P130 to P136)</li> <li>P121 Pump by Rate</li> </ul>

Use this feature to reduce a power surge from all pumps starting at the same time. This delay determines when the next pump is permitted to start.

## P133 Pump Power Resumption Delay

*Sets the minimum delay before the first pump restarts after power failure.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.000 to 9999
	Preset: 10 seconds
<b>Related</b>	<ul style="list-style-type: none"><li>Advanced Pump Control Modifiers (P130 to P136)</li><li>P132 Pump Start Delay</li></ul>


This reduces the surge from the first pump starting immediately on power resumption. When this delay expires, other pumps will start as per P132.

## P136 Wall Cling Reduction

*Varies the upper and lower setpoints to reduce material buildup on the walls.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.000 to 9999
	Preset: 0.000

This value is the range in which the setpoints are allowed to deviate in percent or units. The Relay Setpoints ON and OFF values are randomly varied inside the range to ensure that the material level does not consistently stop at the same point

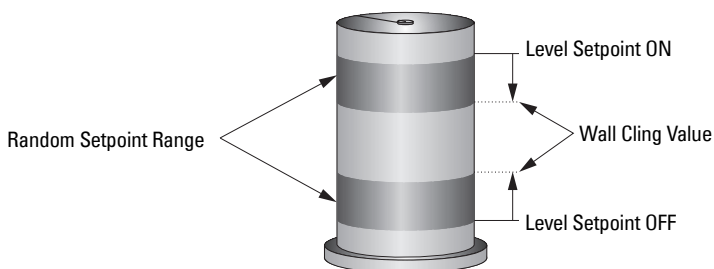

# P137 Pump Group

*Puts pumps into groups for multiple pump rotations on one transducer.*

<b>Primary Index</b>	Relay		
<b>Values</b>	Range: 1 to 2		
	1	*	group 1
	2		group 2
<b>Alters</b>	<ul style="list-style-type: none"><li>• P111 Relay Control Function when P111=52 (Alternate duty assist) or 53 (Alternate duty backup)</li></ul>		

This feature groups pumps (relay points 1 - 6) into groups 1 or 2. It is applied to pump rotation and occurs independently within each group.

## Flush Systems (P170 to P173)

Use this feature to control an electrically operated flush valve on a pump to divert some pump output back into the wet well to stir up sediment.

### Note:

- If any of the following parameters are set to 0, this feature will not work.

### Standard Mode

Enter the relay number of the pump with the flush valve. The activation of this pump relay drives the usage of the flush system. Both P172 Flush Interval and P171 Flush Cycles are based on the operation of this relay and control any relay set to P111 = 64, Flush Valve.

### Example:

If you need to watch pump Relay One to control a flush valve on Relay Two you would set P170[2]=1.

## P170 Flush Pump

*Picks the number of the pump relay which triggers the flushing device.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0 to 6
	Preset: 0
<b>Related</b>	<ul style="list-style-type: none"><li>• P111 = 64, Flush Valve</li></ul>

Enter the relay number of the pump with the flush valve. The activation of this pump relay drives the usage of the flush system. Both P172 Flush Interval and P171 Flush Cycles are based on the operation of this relay and controls any relay set to P111 = 64, Flush Valve.

## P171 Flush Cycles

*Sets the number of pump cycles requiring flush control.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0 to 9999
	Preset: 0
<b>Related</b>	<ul style="list-style-type: none"><li>• P111 = 64, Flush Valve</li></ul>

**If three flush cycles are required after every ten pump cycles then:**

P172 (Flush Interval) = 10

P171 (Flush Cycles) = 3

## P172 Flush Interval

*Sets the number of pump cycles before flush control is enabled*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0 to 9999
	Preset: 0
<b>Related</b>	<ul style="list-style-type: none"><li>• P111 = 64, Flush Valve</li></ul>

To start a new flush cycle every ten times the pumps are run, set this to 10.

## P173 Flush Duration

*The length of time for each flush cycle that the flush control is active.*

Primary Index	Global
Values	Range: 0.000 to 9999 s
	Preset: 0.000
Related	<ul style="list-style-type: none"><li>P111 = 64, Flush Valve</li></ul>

## mA Output (P200 to P219)

### P200 mA Output Range

*Determines the mA output range.*

Primary Index	mA output	
Values	0	off
	1	0 to 20 mA
	2 *	4 to 20 mA
	3	20 to 0 mA
	4	20 to 4 mA
Related	<ul style="list-style-type: none"><li>P911 mA Output Value</li></ul>	

If either **1** or **2** is selected, the mA output is directly proportional to the mA Function. If either **3** or **4** is selected, then the output is inversely proportional.



## P201 mA Output Function

*Alters the mA output/measurement relationship.*

Primary Index	mA output		
Values	value	mA function	Operation (P001)
	0	OFF	
	1	level	level, differential, or average
	2	space	space
	3	distance	distance
	4	volume	level or space
	5	flow	OCM
	6	head	
	7	volume rate	
	8	mA input	
	9	comms input	
Related	<ul style="list-style-type: none"> <li>• P202 mA Output Allocation</li> <li>• P911 mA Output Value</li> </ul>		
Altered By	<ul style="list-style-type: none"> <li>• P001 Operation</li> </ul>		

## P202 mA Output Allocation

*Sets the input source from which the mA output is calculated.*

Primary Index	mA output		
Values	1	*	Point 1
	2		Point 2
	3		Point 3
Related	<ul style="list-style-type: none"> <li>• P201 mA Output Function</li> </ul>		

Enter the Point Number the mA output is based on. This value depends on whether mA function (P201) is set as transducer or mA input.

If P201 uses a transducer, this parameter can only be altered if P001 (Operation) is set for DPD or DPA. The values is 1 for Single Point applications or 1-3 for DPD or DPA configurations.

## P203 mA Output Value / Transducer

*Displays current mA output value for the Point Number.*

Primary Index	Level
Values	Range: 0.000 to 22.00 (view only)

This displays as an Auxiliary Reading when  key is pressed in the RUN mode and does not include adjustments made using Trim features (P214 / P215).

**Note:** This parameter is applicable only if any mA output has the transducer Point Number as its input source (see P201 and P202).

## Independent mA Setpoints (P210 and P211)

Use these features to reference the minimum and/or maximum mA output to any point in the measurement range.

P201—mA Function Settings	Action
Level, Space, or Distance	Enter the material level in Units (P005) or percent of Span (P007) as referenced to Empty (P006).
Volume	Enter the volume in Max Volume (P051) units or as a percent of Max Volume.
Flow	Enter the flowrate in OCM Max Flow (P604) units or as a percent of OCM Max Flow.
Head	Enter the head in level units (P005) or percent of Max Head (P603).
Volume Rate	Enter the volume rate in volume/min. Ensure the % symbol is displayed before attempting to enter a % value.
mA input or Communications Input	Not Applicable

## P210 0/4 mA Output Setpoint

*Sets the process level corresponding to the 0 or 4mA value.*

Primary Index	mA output
Values	Range: -999 to 9999
Related	<ul style="list-style-type: none"><li>P211 20 mA Output Setpoint</li></ul>

Enter the value (in applicable units or %) to correspond to 0 or 4 mA.

## P211 20 mA Output Setpoint

*Sets the process level that corresponds to the 20 mA value.*

Primary Index	mA output
Values	Range: -999 to 9999
Related	<ul style="list-style-type: none"><li>P210 0/4 mA Output Setpoint</li></ul>

Enter the value (in applicable units or %) to correspond to 20 mA.

## mA Output Limits (P212 and P213)

Use these features to adjust the minimum and/or maximum mA output values, which should suit the input limit requirements of the external device.

### P212 mA Output Min Limit

*Sets the minimum mA output value (in mA) to be produced.*

Primary Index	mA output
Values	Range: 0.000 to 22.00
	Preset: 0.0 or 3.8
Related	<ul style="list-style-type: none"><li>P200 mA Output Range</li><li>P213 mA Output Max Limit</li></ul>

Preset is determined by mA Function (P200). If P200 = 1 or 3, then the preset is **0.0**, or if P200 = 2 or 4, then the preset is **3.8**.

## P213 mA Output Max Limit

*Sets the maximum mA output value (in mA) to be produced.*

<b>Primary Index</b>	mA output
<b>Values</b>	Range: 0.000 to 22.00
	Preset: 20.2 mA
<b>Related</b>	<ul style="list-style-type: none"><li>P200 mA Output Range / P212 mA Output Min Limit</li></ul>

## mA Output Trim (P214 to P215)

This does not affect the P203 value shown, and is used when recalibration of an external device is impractical.

### P214 4 mA Output Trim

*Calibrates the 4 mA output.*

<b>Primary Index</b>	mA output
<b>Values</b>	Range: 0 to 9999
<b>Related</b>	<ul style="list-style-type: none"><li>P215 20 mA Output Trim</li></ul>

Adjust this value so the device indicates 4.000 mA when P214 is accessed.

### P215 20 mA Output Trim

*Calibrates the 20 mA output.*

<b>Primary Index</b>	mA output
<b>Values</b>	Range: 0 to 16000
<b>Related</b>	<ul style="list-style-type: none"><li>P214 4mA Output Trim</li></ul>

Adjust this value so the device indicates 20.00 mA when P215 is accessed.

 



# mA Output Failsafe (P219)

## P219 mA Output Failsafe

Use for failsafe operation, independent of the Failsafe Material Level (P071).

Primary Index	mA output		
Values	Range: 0.000 to 22.00		
	OFF	*	mA output responds to Failsafe Material Level (P071).
	HOLd		last <b>known</b> value is held until normal operation resumes
	LO		produce the <b>Empty</b> mA output immediately
	HI		produce the <b>Span</b> mA output immediately
Related	• P201 mA Output Function		

### Selecting an independent mA Failsafe option:

1. Press MODE  to display the Auxiliary Function symbol.
2. Press ARROWS   to scroll access the failsafe options.
3. Press ENTER  when the desired option displayed.

Or, to produce an mA output at a specific value, enter the value required. This is used only if mA output is allocated to a transducer (P201 = 1 to 7).

## mA Input (P250 to P260)

### P250 mA Input Range

Shows the mA input range of the connected mA device.

Primary Index	Global		
Values	1		0 to 20 mA
	2	*	4 to 20 mA

Ensure this range corresponds to the output range of the external device. All level measurements will equate % of Span with the % of the mA range.

## P251 0 or 4 mA Input Level

*Shows the process level corresponding to the 0 or 4 mA value.*

Primary Index	Global
Values	Range: -999 to 9999%
	Preset: 0%
Related	<ul style="list-style-type: none"><li>• P006 Empty</li><li>• P007 Span</li></ul>

When using an external mA signal to determine level, the input range must be scaled to give accurate results.

## P252 20 mA Input Level

*Shows the process level corresponding to the 20 mA value.*

Primary Index	Global
Values	Range: -999 to 9999%
	Preset: 100%
Related	<ul style="list-style-type: none"><li>• P006 Empty</li><li>• P007 Span</li></ul>

Input range is scaled for accuracy if an external mA signal calculates level.

## P253 Input Filter Time Constant

*Shows the time constant used in the mA input filter to dampen signal fluctuations.*

Primary Index	Global
Values	Range: 0 to 9999
	Preset: 1

This number in seconds is used in the damping calculations. Larger values damp more than smaller values and **0** disables the signal filter.

## P254 Scaled mA Input Value

*Shows the resulting level value after scaling.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: -999 to 9999 (view only)
	Preset: calculated from the input mA signal

This parameter is calculated from the input mA signal.

## P260 mA Raw Input

*Shows the raw mA input supplied by the external device.*

<b>Primary Index</b>	mA input
<b>Values</b>	Range: 0.000 to 20.00 (view only)

## Discrete Input Functions (P270 to P275)

Discrete inputs can be used for the following:

- Passing other information to a remote system through communications
- Backup level override

Use the parameters listed above to have discrete inputs modify the unit's operation.

Use the following parameters to configure the discrete input itself.

See the *Pump Control* section on page 51 for a description of the HydroRanger 200's pump control algorithms, including how the discrete inputs alter its operation.

## P270 Discrete Input Function

*Sets how discrete signals are interpreted by the HydroRanger 200.*

<b>Primary Index</b>	Discrete input		
<b>Values</b>	0		Forced <b>OFF</b>
	1		Forced <b>ON</b>
	2	*	Normally Open – 0 (DI open), 1 (DI closed)
	3		Normally Closed – 0 (DI closed), 1 (DI open)
<b>Related</b>	• Pump Control section		

## P275 Scaled Discrete Input Value

*Shows the current value of the discrete input after any scaling is applied.*

<b>Primary Index</b>	Discrete input	
<b>Values</b>	Display: view only	
	Values: dependent on the function of the discrete input	
	<b>Range of Values</b>	<b>Function (P270)</b>
	1	Forced <b>ON</b>
	0	Forced <b>OFF</b>
	0 (DI open), 1 (DI closed)	Normally Open
	0 (DI closed), 1 (DI open)	Normally Closed


Readings are updated continuously even in PROGRAM mode. The value signals a level override event.

## Standard Data Logging (P300 to P321)

All records can be reset by pressing the CLEAR   keys.

## Record Temperatures (P300 to P303)

These features display the high and/or low temperatures in °C.

When a parameter relating to a TS-3 Temperature Sensor is accessed, the Point Type display changes to the TS-3 symbol .

If the unit is powered up without a temperature sensor connected, the value **-50°C** is displayed. This information can help trace problems with both built in and external temperature sensors.



## P300 Temperature, Transducer Maximum

*Shows the highest temperature encountered, as measured by the temperature sensor in the transducer (if applicable).*

Primary Index	Transducer
Values	Range: - 50 to 150°C (view only)
	Preset: - 50°C
Related	<ul style="list-style-type: none"><li>• P301 Temperature, Transducer Min</li></ul>

Press CLEAR   keys to reset the log after a short circuit on the transducer wiring.

## P301 Temperature, Transducer Minimum

*View the lowest temperature encountered, as measured by the temperature sensor in the transducer (if applicable).*

Primary Index	Transducer
Values	Range: - 50 to 150°C (view only)
	Preset: 150°C
Related	<ul style="list-style-type: none"><li>• P300 Temperature, Transducer Max</li></ul>

Press CLEAR   keys to reset the log after an open circuit on the transducer wiring.

## P302 Temperature, Sensor Maximum

*View the highest temperature encountered, as measured by the TS-3 Temperature Sensor (if applicable).*

Primary Index	Global
Values	Range: - 50 to 150°C (view only)
	Preset: - 50°C
Related	<ul style="list-style-type: none"><li>• P303 Temperature, Sensor Min</li></ul>

Press CLEAR   keys to reset the log after a short circuit on the transducer wiring.

## P303 Temperature, Sensor Minimum

*Shows the lowest temperature encountered, as measured by the TS-3 Temperature Sensor (if applicable).*

Primary Index	Global
Values	Range: - 50 to 150°C (view only)
	Preset: 150°C
Related	<ul style="list-style-type: none"><li>• P302 Temperature, Sensor Max</li></ul>

Press CLEAR   keys to reset the log after an open circuit on the transducer wiring.

## Record Readings (P304 and P305)

This identifies the occurrence of the record high and low level readings. Press CLEAR

keys to reset these values once the installation is working correctly.

### P304 Reading Max

*Shows the highest Reading calculated (in normal Reading units or %).*

Primary Index	Level
Values	Range: -999 to 9999 (view only)
Related	<ul style="list-style-type: none"><li>• P305 Reading Min</li></ul>

### P305 Reading Min

*Shows the lowest Reading calculated (in normal Reading units or %).*

Primary Index	Level
Values	Range: -999 to 9999 (view only)
Related	<ul style="list-style-type: none"><li>• P304 Reading Max</li></ul>

# Pump Records (P310 to P312)

These features to identify pump usage and if the associated Relay Function (P111) is set for any **pump control** feature. The value is that of the pump connected to the associated terminals.

Enter a value to set the current record to that value. Use this if a pump is added with a known number of hours logged, or the value can be reset to zero **0** after maintenance.

## P309 Pump RUN Time

*Displays the amount of time in minutes since a relay was last activated.*


Primary Index	Relay
Values	Range: 0 to 9999 minutes
Related	<ul style="list-style-type: none"><li>Relay Function (P111) set for any <b>pump control</b> feature</li></ul>

Parameter measures the length of time since a relay was asserted, most often to determine how long a pump has been running. Alternatively, it can monitor a relay to show how long it has been in a state of alarm. It resets every time the relay is activated.

## P310 Pump Hours

*View or reset the accumulate ON time for the displayed Relay Number.*


Primary Index	Relay
Values	Range: 0.000 to 9999
Related	<ul style="list-style-type: none"><li>Relay Function (P111) set for any <b>pump control</b> feature</li></ul>

Value is displayed with a floating decimal point. (Note: the more figures displayed before the decimal, the fewer displayed after.) It is the value displayed when  key is pressed in the RUN mode.

## P311 Pump Starts

*View or reset the accumulated number of times the Relay Number has been ON.*

Primary Index	Relay
Values	Range: 0 to 9999
Related	<ul style="list-style-type: none"><li>Relay Function (P111) set for any <b>pump control</b> feature</li></ul>

This value is displayed when  key is pressed and held for five seconds in RUN mode.

## P312 Pump Run Ons

View or reset the accumulated number of times the displayed Relay Number has been held ON via Run On Interval (P130).

Primary Index	Relay
Values	Range: 0 to 9999
Related	<ul style="list-style-type: none"><li>Relay Function (P111) set for any <b>pump control</b> feature</li></ul>

## Flow Records (P320 and P321)

These features are enabled if Operation is set for OCM (P001 = 6), or an OCM device is defined (P600 ≠ 0). Use them to identify the occurrence of the record high and low flow rates as displayed in OCM Max Flow (P604) units, or as a percent of OCM Max Flow. Press CLEAR   keys to reset values once the installation is working correctly.

### P320 Flow Max

View the highest flow rate calculated (in units or %).

Primary Index	Global
Values	Range: -999 to 9999 (view only)
Related	<ul style="list-style-type: none"><li>P604 Maximum Flow</li></ul>

### P321 Flow Min

View the lowest flow rate calculated (in units or %).

Primary Index	Global
Values	Range: -999 to 9999 (view only)
Related	<ul style="list-style-type: none"><li>P604 Maximum Flow</li></ul>

# LCD Totalizer (P322 and P323)

Use these features to view, reset, or preset the eight-digit display totalizer when Operation is set for OCM or Pumped Volume (P001 = 6 or 7). The eight-digit totalizer is divided into two groups of four digits. The four least significant totalizer digits are stored in P322, and the four most significant digits are stored in P323. Adjust these values separately to set a new total.

## Example:

**P323** = 0017

**P322** = 6.294

**Totalizer Display** = 00176.294

Totalizer units are dependent upon programming. Enter zero **0** (if required) to reset the totalizer to zero. Alternatively, enter any other (applicable) value, to preset the totalizer to the necessary value.

## P322 LCD Total Low

*View and/or alter the four least significant digits of the totalizer value.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.000 to 9999
<b>Related</b>	<ul style="list-style-type: none"><li>• P630 LCD Totalized Multiplier</li><li>• P633 LCD Totalized Decimal Position</li><li>• P737 Primary Reading</li></ul>

## P323 LCD Total High

*View and/or alter the four most significant digits of the totalizer value.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.000 to 9999
<b>Related</b>	<ul style="list-style-type: none"><li>• P630 LCD Totalized Multiplier</li><li>• P633 LCD Totalized Decimal Position</li><li>• P737 Primary Reading</li></ul>

# Profile Records (P330 to P337)

## WARNING:

These parameters are for authorized service personnel or technicians familiar with Siemens Milltronics echo processing techniques.

These features can record up to ten Echo profiles, initiated manually (P330), or automatically (P331 et al). See *Scope Displays* (P810) for echo profile viewing hardware / software requirements. If ten Profiles are already saved, addresses 1 through 10 are filled, the oldest automatically initiated record is overwritten. Manually initiated records are not automatically overwritten. All records are automatically deleted in the event of a power interruption.

When a record is displayed, results are based on current programming (which may have been altered since the record was saved). This permits the effect on the echo profile to be observed when changing an echo parameter.

## P330 Profile Record




*Records profiles for later viewing.*

Primary Index	Echo profile	
Values	Code	Description
	----	no record
	A1	automatically recorded profile from Transducer One
	A2	automatically recorded profile from Transducer Two
	U1	manually recorded profile from Transducer One
	U2	manually recorded profile from Transducer Two


**In addition to being a profile records library, this provides two functions:**

- manually records and saves echo profiles
- displays an echo profile, recorded manually or automatically (oscilloscope)

### Selecting a record address


1. Enter PROGRAM mode and press DISPLAY  twice to highlight the index field. The field shows two underscores `__`.
2. Type the index number. The profile record information is shown.
3. Use ARROWS   to scroll through the records.

## Recording a profile manually

Press TRANSDUCER  to fire the transducer and record the echo profile into the internal scope buffer for display.


For differential or average operation (P001 = 4 or 5), access scope Displays (P810) parameter to select the transducer number.

## Saving a manual record

 

Press ENTER  to copy the echo profile record in the scope buffer and save it in the selected address in the record library. The parameter value field displays the new record information.

## Displaying a record

Press  key to enter display auxiliary mode and then:

- Press TRANSDUCER  to copy the current echo profile into the scope buffer for display on an oscilloscope or Dolphin Plus

## Deleting a record

Press CLEAR  and then ENTER  to delete the echo profile record in the selected address. The value returns to - - - -.

# P331 Auto Record Enable

*Use to enable/disable the Auto Profile Record function.*

Primary Index	Global		
Values	Range: 0 to 1		
	0	*	Off
	1		On

## P332 Auto Record Transducer

*Specifies the Transducer Point Number for which Auto Profile Records are saved.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0 to 2	
	0	Any transducer
	1	* Transducer One
	2	Transducer Two
<b>Altered By</b>	• P001 Operation = 4 or 5	

This feature is preset to Point Number 1. (Alteration is only required if **differential** or **average** Operation [P001 = 4 or 5] is selected.)

## P333 Auto Record Interval

*Enter the time to elapse after an Auto Profile Record is saved before another Auto Profile Record can be saved (subject to all other restrictions).*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.0 to 9999 (minutes)
	Preset: 120

## Auto Record ON and OFF Setpoints (P334 to P337)

Use Auto Record ON Setpoint (P334) and Auto Record OFF Setpoint (P335) to define the boundaries within which the level must be, for the resultant Echo Profile to be considered for an Auto Profile Record.

If ---- is displayed for either P334 or P335, Auto Profile Records are saved regardless of current level (subject to all other restrictions).

Enter the level value in Units (P005) or percent of Span (P007) as referenced to Empty (P006).



## P334 Auto Record ON Setpoint

Enter the critical level which, in conjunction with Auto Record OFF Setpoint, defines the boundaries for Auto Profile Records to be saved.

<b>Primary Index</b>	Global
<b>Values</b>	Range: -999 to 9999
<b>Related</b>	<ul style="list-style-type: none"> <li>• P335 Auto Record OFF Setpoint</li> <li>• P336 Auto Record Filling / Emptying</li> <li>• P337 Auto Record LOE Time</li> </ul>

## P335 Auto Record OFF Setpoint

Enter the critical level which, in conjunction with Auto Record ON Setpoint, defines the boundaries for Auto Profile Records to be saved.

<b>Primary Index</b>	Global
<b>Values</b>	Range: -999 to 9999
<b>Related</b>	<ul style="list-style-type: none"> <li>• P334 Auto Record <b>ON</b> Setpoint</li> <li>• P336 Auto Record Filling / Emptying</li> <li>• P337 Auto Record LOE Time</li> </ul>

## P336 Auto Record Filling / Emptying

Use this feature to restrict Auto Profile Records from being saved unless the level is rising, falling or either.

<b>Primary Index</b>	Global		
<b>Values</b>	0	*	Auto Profile Record on filling or emptying
	1		Auto Profile Record on filling only
	2		Auto Profile Record on emptying only
<b>Related</b>	<ul style="list-style-type: none"> <li>• P334 Auto Record ON Setpoint</li> <li>• P335 Auto Record OFF Setpoint</li> <li>• P337 Auto Record LOE Time</li> <li>• P702 Filling Indicator</li> <li>• P703 Emptying Indicator</li> </ul>		

If the level changes at a rate in excess of the corresponding Filling / Emptying Indicator (P702 / P703) values, the Echo Profile is saved subject to this and other Auto Profile Record restrictions.

## P337 Auto Record LOE Time

*Limits Auto Profile Records from being saved unless extended LOE occurs.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.0 to 9999 (seconds)
	Preset: 0.0
<b>Related</b>	<ul style="list-style-type: none"><li>• P334 Auto Record ON Setpoint</li><li>• P335 Auto Record OFF Setpoint</li><li>• P336 Auto Record Filling / Emptying</li></ul>

If the LOE condition exceeds the period entered, the Echo Profile is saved. When set for 0 LOE is not required for an Auto Profile Record to be saved.

## Installation Records (P340 to P342)

### P340 Date of Manufacture

*View the date of manufacture of this HydroRanger 200 unit.*

<b>Primary Index</b>	Global
<b>Values</b>	Format: YY:MM:DD (view only)
<b>Related</b>	<ul style="list-style-type: none"><li>• P340 Date of Manufacture</li><li>• P342 Start Ups</li></ul>

### P341 RUN Time

*View the number of days this HydroRanger 200 has been in operation.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.000 to 9999 (view only)
<b>Related</b>	<ul style="list-style-type: none"><li>• P340 Date of Manufacture</li><li>• P342 Start Ups</li></ul>

The RUN Time value is updated once a day, and cannot be reset. However, in the event of a power interruption, the counter won't advance. Therefore, a unit that is powered down on a regular basis will not have an accurate value.

## P342 Start Ups

*The number of times power has been applied since the Date Of Manufacture.*

Primary Index	Global
Values	Range: 1 to 9999 (view only)
Related	<ul style="list-style-type: none"><li>• P340 Date of Manufacture</li><li>• P342 Run Time</li></ul>

## Open Channel Monitoring (P600 to P621)

If the HydroRanger 200 is used to monitor open channel flow, alter the following parameters as required and run a calibration as described in P621.

**Note:** See *Open Channel Monitoring (OCM)* on page 66 for application examples involving common weirs and flumes.

The HydroRanger 200 measures **head** as referenced to Empty (P006) or OCM Zero Offset (P605), when Operation is set for **OCM** (P001 = 6). Flowrate, based on head (at the **point of measure** specified by the Primary Measuring Device fabricator) is also calculated and displayed on the LCD.

Some Primary Measuring Devices require a longer Range Extension (P801) to avoid entering the LOE failure state if the water level falls below the zero point of the Primary Measuring Device. See *P801 Range Extension* on page 188 for more information.

## P600 Primary Measuring Device

*The type of primary measuring device (PMD) used.*

Primary Index	Global	
Values	0	* off (no calculation)
	1	Exponential (see P601)
	2	Palmer-Bowlus Flume (see P602)
	3	H-Flume (see P602)
	4	Universal Linear Flow Calculation (see P610, P611)
	5	Universal Curved Flow Calculation (see P610, P611)
	6	BS-3680/ISO 4359 Rectangular Flume (see P602)
	7	BS-3680/ISO 1438/1 Thin Plate V-Notch Weir (see P602)

<b>Alters</b>	<ul style="list-style-type: none"> <li>• P601 Flow Exponent</li> <li>• P602 Primary Measuring Device Dimensions</li> <li>• P608 Flowrate Units</li> </ul>
<b>Altered By</b>	<ul style="list-style-type: none"> <li>• P001 Operation</li> </ul>
<b>Related</b>	<ul style="list-style-type: none"> <li>• P603 Maximum Head</li> <li>• P604 Maximum Flow</li> <li>• P605 Zero Head</li> <li>• P610 Head Breakpoints</li> <li>• P611 Breakpoint</li> </ul>

If your PMD is not listed, select the appropriate Universal Flow Calculation.

Associated parameters Max Head (P603), Max Flow (P604), and Min Head (P605) may be scroll accessed. If Operation is not set for **OCM** (P001 = 6), this value is preset to **0**. If Operation is set for **OCM**, it is preset to **1**.


## P601 Flow Exponent

*The Exponent for the flow calculation formula.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: -999 to 9999
	Preset: 1.55
<b>Altered By</b>	<ul style="list-style-type: none"> <li>• P600 Primary Measuring Device</li> </ul>
<b>Related</b>	<ul style="list-style-type: none"> <li>• P603 Maximum Head</li> <li>• P604 Maximum Flow</li> <li>• P605 Zero Head</li> </ul>

Use this parameter if the Primary Measuring Device (P600) is set to 1 (exponential). It creates an exponential curve with end points set by Max Head (P603) and Zero Head (P604) and with the curve based on the specified exponent.

If P601 = 1, the flow characteristic is a straight line

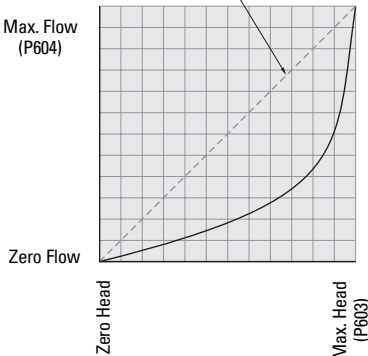

### A Word on Exponents

The exponential equation is  

$$Q = KH^{P601}$$

Where:  
 Q = flow  
 K = internal constant  
 H = head

Use the exponent specified by the PMD manufacturer, or the sample value given below.

## Example Exponents

PMD Type	Exponent (sample only)
Suppressed Rectangular Weir	1.50
Cipolletti Weir	1.50
Venturi Flume	1.50
Parshall Flume	1.22 to 1.607
Leopold Lagco	1.547
V-Notch Weir	2.50

## P602 Primary Measuring Device Dimensions

*The dimensions of the Primary Measuring Device (PMD).*

Primary Index	Dimension
Index Values for Supported PMDs	<b>ISO 1438/1</b>
	1 Notch Angle
	2 Discharge Coefficient
	<b>ISO 4359</b>
	1 Approach width
	2 Throat width
	3 Hump Height
	4 Throat Length
	5 Velocity coefficient
	6 Discharge coefficient
	<b>Palmer Bowlus</b>
	1 Flume width
	<b>H Flume</b>
	1 Flume height
<b>Altered By</b>	<ul style="list-style-type: none"> <li>P600 Primary Measuring Device</li> </ul>

Use this parameter if the Primary Measuring Device is directly supported (P600=2,3,6,7). The dimensions required for each PMD vary.

For more information on PDM, see page 66.

## P603 Maximum Head

*The level value associated with Maximum Flow, in Units (P005).*

<b>Primary Index</b>	Global
<b>Values</b>	Range: -999 to 9999
	Preset: Span (P007) value
<b>Altered By</b>	<ul style="list-style-type: none"><li>• P005 Units</li><li>• P600 Primary Measuring Device (PMD)</li></ul>
<b>Related</b>	<ul style="list-style-type: none"><li>• P604 Maximum Flow</li><li>• P605 Zero Head</li></ul>

Represents the highest head level supported by the PMD and works in conjunction with Maximum Flow (P604) to define the highest point in the exponential curve. Use it when the PMD requires a maximum head and flow reference point. Includes Exponential, Palmer Bowlus Flume, H-Flume, and Universal Breakpoints.

## P604 Maximum Flow

*The maximum flowrate associated with Maximum Head (P603).*

<b>Primary Index</b>	Global
<b>Values</b>	Range: -999 to 9999
	Preset: 1000
<b>Altered By</b>	<ul style="list-style-type: none"><li>• P600 Primary Measuring Device(PMD)</li></ul>
<b>Related</b>	<ul style="list-style-type: none"><li>• P603 Maximum Head</li><li>• P606 Time Units</li><li>• P925 Flow Measurement</li></ul>

Represents the flow at the highest head level supported by the PMD and works in conjunction with Maximum Head (P603) to define the highest point in the exponential curve. Use when the PMD requires a maximum head and flow reference point. Includes Exponential, Palmer Bowlus Flume, H-Flume, and Universal breakpoints.

Also use this parameter with Time Units (P606) to define the flowrate units. The limitation of four digits is for the LCD only, and the flowrate value is available with greater precision through communications.

### Example:


Conditions	Enter
<ul style="list-style-type: none"><li>• Flowrate display: millions of gallons/day</li><li>• Max. flowrate is 376,500,000 gallons/day</li></ul>	<ul style="list-style-type: none"><li>• <b>376.5</b> for Maximum Flow (P604)</li><li>• <b>4</b> for Time Units (P606)</li></ul>

## P605 Zero Head

The distance above Empty (P006) in Units (P005) representing zero head (and zero flow).

<b>Primary Index</b>	Global	
<b>Values</b>	Range: -999 to 9999	
	Preset: 0.000	
<b>Altered By</b>	<ul style="list-style-type: none"> <li>• P005 Units</li> <li>• P007 Span</li> </ul>	
<b>Related</b>	<ul style="list-style-type: none"> <li>• P006 Empty</li> <li>• P801 Range Extension</li> </ul>	<ul style="list-style-type: none"> <li>• P926 Head Measurement</li> </ul>

Use for most weirs and some flumes (e.g. Palmer Bowlus) where the zero reference is at a higher elevation than the channel bottom.

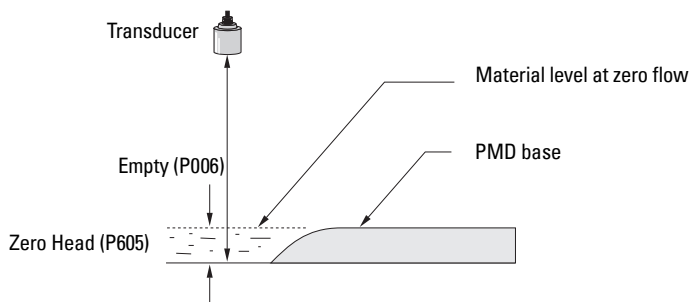

## P606 Time Units

Determines the units used to display current flow and logging flow values.

<b>Primary Index</b>	Global	
<b>Values</b>	1	seconds
	2	minutes
	3	hours
	4 *	days
<b>Altered By</b>	• P608 Flowrate Units	

This is used when the Primary Measuring Device is **Ratiometric** (P608=0).

**Example:**

Conditions	Enter
<ul style="list-style-type: none"> <li>• Flowrate display: millions of gallons/day,</li> <li>• Maximum flowrate is 376,500,000 gallons/day</li> </ul>	<ul style="list-style-type: none"> <li>• <b>376.5</b> for Maximum Flow (P604)</li> <li>• and <b>4</b> for Time Units (P606).</li> </ul>

## P607 Flowrate Decimal

*The maximum number of decimal places to be displayed.*

<b>Primary Index</b>	Global	
<b>Values</b>	0	no digits after the decimal point
	1	1 digit after the decimal point
	2	2 digits after the decimal point
	3	3 digits after the decimal point
<b>Altered By</b>	<ul style="list-style-type: none"> <li>P060 Decimal Position (sets max. number)</li> </ul>	

In RUN mode, the number of decimal places displayed is automatically adjusted (if necessary) to prevent the number of Flowrate digits from exceeding display capabilities.

## P608 Flowrate Units

*The volume units used to display total flow.*

<b>Primary Index</b>	Global	
<b>Values</b>	Ratiometric (P600=all)	
	0	* Ratiometric calculation (units defined by P604)
	Absolute (P600=6,7 only)	
	1	litres / second
	2	cubic metres / hour
	3	cubic metres / day
	4	cubic feet / second
	5	gallons / minute – Imperial
	6	million gallons / day – Imperial
	<b>Values</b>	7
8		million gallons / day – U.S.
<b>Alters</b>	<ul style="list-style-type: none"> <li>P066 Time Units</li> </ul>	
<b>Altered By</b>	<ul style="list-style-type: none"> <li>P600 Primary Measuring Device</li> </ul>	
<b>Related</b>	<ul style="list-style-type: none"> <li>P608 Flowrate Units</li> </ul>	



This parameter is enabled only if the primary measuring device (PMD) supports absolute calculations (P600=6,7). For absolute PMDs (P600=6,7) volume units can be specified using this parameter. If needed, absolute PMDs can still use ratiometric (P608=0) to accommodate other units.

## P610 Head Breakpoints

*The head breakpoints for which flowrate is known.*

<b>Primary Index</b>	Global
<b>Secondary Index</b>	Breakpoint
<b>Values</b>	Range: 0.000 to 9999
<b>Related</b>	<ul style="list-style-type: none"> <li>P611 Breakpoint Flowrates</li> </ul>

The values in the Span for which flowrates are known. See *Universal Calculation Support* on page 76 for how to specify universal flows.


## P611 Breakpoint Flowrates

*The flowrate corresponding to each Head Breakpoint entered.*

<b>Primary Index</b>	Global
<b>Secondary Index</b>	Breakpoint
<b>Values</b>	Range: 0.000 to 9999
<b>Related</b>	<ul style="list-style-type: none"> <li>P610 Head Breakpoints</li> </ul>

These are the flowrates for the related breakpoints. See *Universal Calculation Support* on page 76 for how to specify universal flows.

### Head vs. Flowrate (P610 and P611)

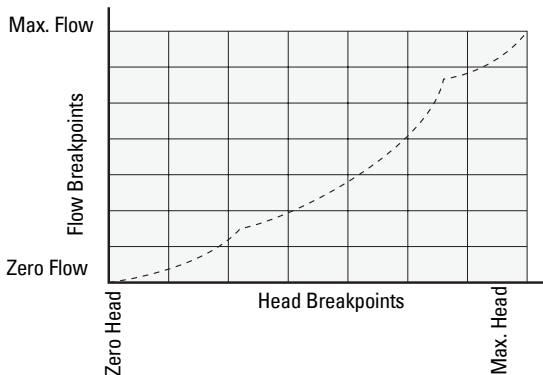

## P620 Low Flow Cutoff

*Eliminates totalizer activity for flows at or below the cutoff value.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.000 to 9999
	Preset = 5.000 %, or equivalent units
<b>Altered By</b>	<ul style="list-style-type: none"><li>• P005 Units</li></ul>
<b>Related</b>	<ul style="list-style-type: none"><li>• P007 Span</li></ul>

Use this to enter the minimum head in units (P005) or as a percent of span.

## P621 Auto Zero Head

*Calibrates Zero Head (P605) based on actual head measurements.*


<b>Primary Index</b>	Global
<b>Values</b>	Range: -999 to 9999
<b>Related</b>	<ul style="list-style-type: none"><li>• P006 Empty</li><li>• P062 Offset Reading</li><li>• P605 Zero Head</li><li>• P664 Temperature</li></ul>

Use this parameter when the reported head is consistently high or low by a fixed amount.

**Before using this feature, verify the following parameters are correct:**

- Empty (P006)
- Temperature (P664)
- Offset Reading (P062=0)
- Zero Head Offset (P605)

### Procedure, with “head” steady

1. Press TRANSDUCER  to display the calculated head.
2. Repeat step ONE at least FIVE times to verify repeatability.
3. Measure the **actual** head (with a tape measure or solid rule).
4. Enter the **actual** head value.

The deviation between the entered Empty (P006) value and the calibrated Empty value is stored in Offset Correction (P652). Alternatively, the Empty parameter (P006) can be corrected directly.

# Pumped Volume Totalizer (P622)

The Pumped Volume Totalizer is a HydroRanger 200 feature only.

If the eight-digit totalizer display or a remote totalizer contact closure are desired, alter the following parameters.

## P622 Inflow / Discharge Adjust

*The method used to calculate the volume pumped, for **pumped total** Operation (P001 = 7).*

Primary Index	Global
Values	1 = inflow * / pump cycle When the pump is off, the HydroRanger 200 estimates the volume of inflow by recording the rate at which the liquid level changes. When the pump is operating, the estimated inflow volume is added to the pumped volume total. When the pump stops, the pumped volume of the previous pump cycle is added to the total volume pumped in the totalizer.
	2 = inflow * ignored Inflow is assumed to be 0 while pumps are running.
	3 = inflow * / rate (preset) Volume pumped is adjusted for inflow. Inflow rate is estimated by assuming that the rate calculated (P708) just prior to the start of the pump cycle remained constant during the pump cycle. Inflow rate is averaged using rate filter (P704), rate update time (P705) and rate update distance (P706) to control how the average rate is calculated.
Related	<ul style="list-style-type: none"> <li>• P001 Operation</li> <li>• P704 Rate Filter</li> <li>• P705 Rate Update Time</li> <li>• P706 Rate Update Distance</li> <li>• P708 Volume Rate Display</li> </ul>

\* or discharge

# Totalizer (P630 to P645)

## P630 LCD Totalized Multiplier

Use this feature if the LCD Total increments by too large (or too small) an amount.

Primary Index	Global	
Values	-3	.001
	-2	.01
	-1	.1
	0	* 1
	1	10
	2	100
	3	1000
Values	4	10,000
	5	100,000
	6	1,000,000
	7	10,000,000
Related	• LCD Totalizer (P322 and P323)	

Enter the factor (powers of 10 only) by which actual volume is divided, prior to display on the LCD. Use a value such that the eight-digit totalizer doesn't roll over between readings.

### Example:

For an LCD Total display in 1000s of volume units, enter **3**.

## P633 LCD Totalized Decimal Position

Enter the maximum number of decimal places to be displayed.

Primary Index	Global	
Values	0	no digits after the decimal point
	1	1 digit after the decimal point
	2	* 2 digits after the decimal point
	3	3 digits after the decimal point
Related	<ul style="list-style-type: none"> <li>LCD Totalizer (P322 and P323)</li> </ul>	

**Note:** Set the decimal position during initial commissioning of the MultiRanger 200. If the position is changed later, the totalizer data in P322 and P323 will be incorrect and must be reset according to the new decimal value.

In RUN mode, the number of decimal places displayed is not automatically adjusted. When LCD Total value exceeds display capabilities, it **rolls over** to **0** and continues incrementing.

## P640 Remote Totalized Multiplier

Use this feature if the remote totalizer (device connected to the relay set for **totalizer operation** [relay Function, P111 = 40]), updates too slowly or rapidly.

Primary Index	Global	
Values	-3	.001
	-2	.01
	-1	.1
	0	* 1
Values	1	10
	2	100
	3	1000
	4	10,000
	5	100,000
	6	1,000,000
	7	10,000,000
Related	<ul style="list-style-type: none"> <li>P001 Operation</li> <li>P111 Relay Control Function</li> <li>P115 Relay <b>Interval</b> Setpoint</li> <li>P645 Relay Duration</li> </ul>	

Parameter is relevant only if Operation is set to OCM or Pumped Volume (P001 = 6 or 7).

HydroRanger 200 relays have a maximum frequency of 2.5 Hz. Enter the factor (powers of 10 only) by which actual volume is divided, prior to Remote Totalizer count increment.

### Example:

For a Remote Totalizer update by 1000s of volume units, enter **3**.

## P641 Flow Sampler Mantissa

Use this feature in conjunction with Flow Sampler Exponent (P642) to establish the number of flow units required to increment the Flow Sampler (device connected to the HydroRanger 200 relay set for the **flow sampler operation**) (Relay Function, P111 = 41).

Primary Index	Global
Values	Range: 0.001 to 9999
	Preset = 1.000
Related	<ul style="list-style-type: none"><li>• P001 Operation</li><li>• P111 Relay Control Function</li><li>• OCM (P600 to P621)</li><li>• P642 Flow Sampler Exponent</li></ul>

This parameter is relevant only if Operation is set to OCM (P001 = 6).

**Enter the mantissa (Y) for the exponent (Z) in the formula:**

Flow Sampler Increment =  $Y \times 10^Z$  Flow units.

**Example:** To count once every 4310 ( $4.31 \times 10^3$ ) flow units:

- set P641 to **4.31** and P642 to **3**

## P642 Flow Sampler Exponent

Use this feature in conjunction with Flow Sampler Mantissa (P641) to establish the number of flow units required to increment the Flow Sampler (device connected to the HydroRanger 200 relay set for the **flow sampler operation** Relay Function, P111 = 41).

Primary Index	Global
Values	Range: -3 to +7 (integers only)
	Preset = 0
Related	<ul style="list-style-type: none"><li>• P001 Operation</li><li>• P111 Relay Control Function</li><li>• OCM (P600 to P621)</li><li>• P641 Flow Sampler Mantissa</li></ul>

This parameter is relevant only if Operation is set to OCM (P001 = 6).

**Enter the exponent (Z) for the mantissa (Y) in the formula:**

Flow Sampler Increment =  $Y \times 10^Z$  Flow units.


## P645 Relay Duration

Use this feature (if desired) to adjust the minimum contact closure duration of a relay set as a totalizer, flow sampler, time [control], or aeration (P111 = 40 or 41)

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.1 to 1024
	Preset = 0.2 (sec)
<b>Related</b>	<ul style="list-style-type: none"> <li>P111 Relay Control Function</li> </ul>

Enter minimum contact closure duration (in seconds) required by the device connected.

For the flow sampler function this value is used for both the ON time of the relay and the OFF time between contacts.

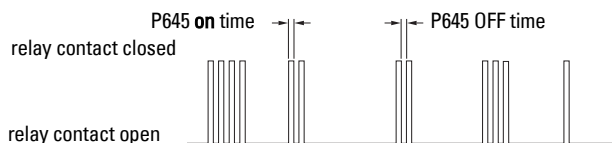

## Range Calibration (P650 to P654)

There are two types of calibration possible:

**Offset:** Adjusts the measurements by a fixed amount.

**Sound Velocity:** Adjusts speed of sound and changes the measurement calculations.

Do Offset calibration at any steady level unless a Sound Velocity calibration is also done. If both calibrations are done then do Offset at a known high level and Sound Velocity at a known low level.

### P650 Offset Calibration

Calibrates Empty (P006) if the reported level is consistently high or low by a fixed amount.


<b>Primary Index</b>	Global
<b>Values</b>	Range: -999 to 9999
<b>Related</b>	<ul style="list-style-type: none"> <li>P006 Empty</li> <li>P062 Offset Reading</li> <li>P605 Zero Head</li> <li>P652 Offset Correction</li> <li>P664 Temperature</li> </ul>

Before using this feature, verify the following parameters are correct:

- Empty (P006)
- Temperature (P664)
- Offset Reading (P062)
- Zero Head Offset (P605), if using OCM

## Offset Calibration

Begin with a steady level.

1. Press TRANSDUCER  to display the calculated reading.
2. Repeat Step One at least five times to verify repeatability.
3. Measure the actual reading (use tape measure).
4. Enter the actual value.

The deviation between the entered Empty (P006) value and the calibrated **Empty** value is stored in Offset Correction (P652).

## P651 Sound Velocity Calibration

*Changes the speed of sound constant.*


Primary Index	Global
Values	Range: -999 to 9999
Related	<ul style="list-style-type: none"><li>• P653 Velocity</li><li>• P654 Velocity at 20°C</li></ul>

### Condition for use of this feature

- The acoustic beam atmosphere is other than air
  - The acoustic beam atmosphere temperature is unknown
  - The Reading accuracy is acceptable at higher material levels only
- For best results do this calibration with the level at a known value near empty.

### Using Sound Velocity Calibration

Ensure a steady level at some low value (P653 and P654 adjusted accordingly)

1. Allow sufficient time for the vapor concentration to stabilize.
2. Press TRANSDUCER  to display the calculated reading.
3. Repeat Step Two at least five times to verify repeatability.
4. Measure the actual reading (e.g. with a tape measure).
5. Enter the actual value.

Repeat this procedure if the atmosphere type, concentration, or temperature conditions are different from when the last sound velocity calibration was performed.

**Note:** In gasses other than air, the temperature variation may not correspond with the speed of sound variation. Turn off temperature sensor and use a fixed temperature.



## P652 Offset Correction

*The value altered when an Offset Calibration is performed.*

Primary Index	Global
Values	Range: -999 to 999.0
Related	<ul style="list-style-type: none"><li>• P650 Offset Calibration</li></ul>

Alternatively, if the amount of Offset Correction required is known, enter the amount to be added to the Reading before display.

## P653 Velocity

*The value adjusted based on the Sound Velocity at 20 °C (P654) vs. Temperature (P664) characteristics of air.*

Primary Index	Global
Values	Range: 50.01 to 2001 m/s (164.1 to 6563 ft/s)
Related	<ul style="list-style-type: none"><li>• P651 Sound Velocity Calibration</li><li>• P654 Velocity at 20°C</li></ul>

Alternatively, enter the current sound velocity (if known), or perform a Sound Velocity Calibration (P651). The units used are m/s if P005 = 1, 2, or 3 (ft/s if P005 = 4 or 5).

## P654 Velocity at 20°C

*This value is used to automatically calculate Sound Velocity (P653).*

Primary Index	Global
Values	Range: 50.01 to 2001 m/s (164.1 to 6563 ft/s)
Related	<ul style="list-style-type: none"><li>• P005 Units</li><li>• P651 Sound Velocity Calibration</li><li>• P653 Velocity</li></ul>

After performing a Sound Velocity Calibration, check this value to verify the acoustic beam atmosphere is **air** (344.1 m/s or 1129 ft/s).

Alternatively, if the acoustic beam atmosphere sound velocity at 20°C (68 °F) is known, and the sound velocity vs. temperature characteristics are similar to that of **air**, enter the sound velocity.

The units used are m/s if P005 = 1, 2, or 3 (or ft/s if P005 = 4 or 5).

# Temperature Compensation (P660 to P664)

## P660 Temp Source

*Source of the temperature reading used to adjust the speed of sound.*

Primary Index	Transducer		
Values	1	*	AUTO
	2		Temp Fixed
	3		Ultrasonic/Temperature Transducer
	4		TS-3 Temperature Sensor
	5		Average (TS-3 and transducer)
Alters	<ul style="list-style-type: none"><li>• P664 Temperature</li></ul>		
Related	<ul style="list-style-type: none"><li>• P651 Sound Velocity</li><li>• P653 Velocity</li><li>• P654 Velocity at 20°C</li><li>• P661 Temp Fixed</li></ul>		

The HydroRanger 200 uses the TS-3 temperature sensor assigned to the transducer unless one is not connected, in which case the ultrasonic/temperature transducer is used. If the transducer does not have an internal temperature sensor, the Temp Fixed (P661) value is used.

If the acoustic beam atmosphere temperature varies with distance from the transducer, connect a TS-3 Temperature Sensor and ultrasonic / temperature transducers, and select **average**.

In gasses other than air, the temperature variation may not correspond with the speed of sound variation. In these cases turn off the temperature sensor and use a fixed temperature.

## P661 Temp Fixed

*Use this feature if a temperature sensing device is not used.*

Primary Index	Transducer
Values	Range: -199 to 199 (preset = 20 °C)
Related	<ul style="list-style-type: none"><li>• P651 Sound Velocity Calibration</li><li>• P653 Velocity</li><li>• P654 Velocity at 20°C</li><li>• P660 Temp Source</li></ul>

Enter the temperature (in °C) of the atmosphere within the transducer acoustic beam. If the temperature varies with distance from the transducer, enter the average temperature.

## P663 Temperature Transducer Allocation

This feature may only be used for **differential** or **average** Operation (P001 = 4 or 5).

<b>Primary Index</b>	Transducer		
<b>Values</b>	1	*	Transducer One
	2		Transducer Two
	1:2		Transducer One and Two average
<b>Related</b>	<ul style="list-style-type: none"> <li>• P651 Sound Velocity Calibration</li> <li>• P653 Velocity</li> <li>• P654 Velocity at 20°C</li> </ul>		

As preset, the temperature measurements of Ultrasonic / Temperature Transducer One and Two are allocated to Points 1 and 2 respectively.


Use this feature if the temperature measurement from both transducers should be identical, but one is located close to a radiant heat source. Allocate the temperature measurement of the other transducer to both transducer Point Numbers.

Enter the number of the Transducer whose temperature measurement will be used for the distance calculation of the Point Number displayed. When both transducers are allocated to a Point Number, the temperature measurements from each are averaged.

## P664 Temperature

View the transducer temperature in °C.

<b>Primary Index</b>	Transducer
<b>Values</b>	Range: -50 to 150 (view only)
<b>Altered By</b>	<ul style="list-style-type: none"> <li>• P660 Temp Source</li> </ul>
<b>Related</b>	<ul style="list-style-type: none"> <li>• P651 Sound Velocity Calibration</li> <li>• P653 Velocity</li> <li>• P654 Velocity at 20°C</li> <li>• P661 Temp Fixed</li> </ul>

Value is displayed when  is pressed in RUN mode (see *Readings in Run Mode* on page 18).

If Temp Source (P660) is set to any value other than Fixed Temp, the value displayed is the temperature measured. If Temp Source is set to Fixed Temp, the P661 value is displayed.

# Rate (P700 to P708)

These parameters determine how material level changes are reported.

## P700 Max Fill Rate

*Adjusts the HydroRanger 200 response to increases in the actual material level (or advance to a higher Failsafe Material Level, P071).*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0.000 to 9999	
<b>Altered by</b>	• P003 Maximum Process Speed	
<b>Related</b>	• P005 Units • P007 Span	• P071 Failsafe Material Level

Enter a value slightly greater than the maximum vessel filling rate. This value, in Units (P005) or % of Span (P007) per minute, is automatically altered when Maximum Process Speed (P003) is altered.

P003 Value	Meters/Minute
1	0.1
2	1
3	10

## P701 Max Empty Rate

*Adjusts the HydroRanger 200 response to decreases in the actual material level (or advance to a lower Failsafe Material Level, P071).*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0.000 to 9999	
<b>Altered by</b>	• P003 Maximum Process Speed	
<b>Related</b>	• P005 Units • P007 Span	• P071 Failsafe Material Level

Enter a value slightly greater than the maximum vessel emptying rate. This value, in Units (P005) or % of Span (P007) per minute, is automatically altered when Maximum Process Speed (P003) is altered.

P003 Value	Meters / Minute
1	0.1
2	1
3	10

## P702 Filling Indicator

The fill rate required to activate the LCD Filling indicator (↕).

<b>Primary Index</b>	Global	
<b>Values</b>	Range: -999 to 9999	
<b>Altered by</b>	<ul style="list-style-type: none"> <li>P003 Maximum Process Speed</li> </ul>	
<b>Related</b>	<ul style="list-style-type: none"> <li>P005 Units</li> <li>P007 Span</li> </ul>	<ul style="list-style-type: none"> <li>P700 Max Fill Rate</li> </ul>

This value (in Units (P005) or % of Span (P007) per minute) is automatically set to 1/10 of the Max Fill Rate (P700).

## P703 Emptying Indicator

The empty rate required to activate the LCD Emptying indicator (↕).

<b>Primary Index</b>	Global	
<b>Values</b>	Range: -999 to 9999	
<b>Altered by</b>	<ul style="list-style-type: none"> <li>P003 Maximum Process Speed</li> </ul>	
<b>Related</b>	<ul style="list-style-type: none"> <li>P005 Units</li> <li>P007 Span</li> </ul>	<ul style="list-style-type: none"> <li>P701 Max Empty Rate</li> </ul>

This value (in Units (P005) or % of Span (P007) per minute) is automatically set to 1/10 of the Max Empty Rate (P701).

## P704 Rate Filter

Damps Rate Value (P707) fluctuations.

<b>Primary Index</b>	Global	
<b>Values</b>	0	Rate display not required
	Filtered Output	
	1	Continuously filtered and updated
	Interval Output	
	2	1 minute or 50 mm (2 in)
	3	5 minutes or 100 mm (3.9 in)
	4	10 minutes or 300 mm (11.8 in)
	5	10 minutes or 1000 mm (39.4 in)

<b>Alters</b>	<ul style="list-style-type: none"> <li>• P707 Rate Value</li> </ul>
<b>Altered by</b>	<ul style="list-style-type: none"> <li>• P003 Maximum Process Speed</li> </ul>
<b>Related</b>	<ul style="list-style-type: none"> <li>• P705 Rate Update Time/ P706 Rate Update Distance</li> </ul>

Enter the time or distance interval over which the Rate Value is to be calculated before the display updates.

This is automatically altered along with Maximum Process Speed (P003).

This value automatically alters the Rate Update Time (P705) and / or Rate Update Distance (P706). Alternatively, these parameter values may be altered independently.

## P705 Rate Update Time

*The time period (in seconds) over which the material level rate of change is averaged before Rate Value update.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.000 to 9999
<b>Related</b>	<ul style="list-style-type: none"> <li>• P707 Rate Value</li> </ul>

## P706 Rate Update Distance

*The material level change (in metres) to initiate a Rate Value update.*


<b>Primary Index</b>	Global
<b>Values</b>	Range: 0.000 to 9999
<b>Related</b>	<ul style="list-style-type: none"> <li>• P707 Rate Value</li> </ul>

## P707 Rate Value

*The rate of material level change (in Units (P005) or % of Span (P007) per minute).*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: -999 to 9999 (view only)	
<b>Altered By</b>	<ul style="list-style-type: none"> <li>• P704 Rate Filter</li> </ul>	
<b>Related</b>	<ul style="list-style-type: none"> <li>• P005 Units</li> </ul>	<ul style="list-style-type: none"> <li>• P007 Span</li> </ul>

A negative rate indicates the vessel is emptying.


This is the value displayed when  is pressed in the RUN mode as described in the *Readings in RUN Mode* chart on page 18.

## P708 Volume Rate Display

The rate of change of volume in **percent of maximum volume** per minute.

Primary Index	Global
Values	Range: -999 to 9999 (view only)
Related	<ul style="list-style-type: none"> <li>P622 Inflow / Discharge Adjust</li> </ul>

This value is used internally to calculate inflow in pumped volume applications (P622=3).

Press READING  to toggle between percent and volume.

## Measurement Verification (P710 to P713)

### P710 Fuzz Filter

Use this to stabilize the reported level, due to level fluctuations (such as a rippling or splashing liquid surface) within the Echo Lock Window (P713).

Primary Index	Global	
Values	Range: 0 to 100 (0 = off)	
Altered by	<ul style="list-style-type: none"> <li>P003 Maximum Process Speed</li> </ul>	
Related	<ul style="list-style-type: none"> <li>P007 Span</li> </ul>	<ul style="list-style-type: none"> <li>P713 Echo Lock Window</li> </ul>

This value (in % of Span, P007) is automatically altered when Maximum Process Speed (P003) is altered. The higher the value entered, the greater the fluctuation stabilized.

### P711 Echo Lock

Use this feature to select the measurement verification process.

Primary Index	Global	
Values	0	Off
	1	Maximum verification
	2 *	Material agitator
	3	Total lock
Related	<ul style="list-style-type: none"> <li>P700 Max Fill Rate</li> <li>P701 Max Empty Rate</li> <li>P712 Echo Lock Sampling</li> </ul>	<ul style="list-style-type: none"> <li>P713 Echo Lock Window</li> <li>P820 Algorithm</li> </ul>

If a material agitator (mixer) is used in the vessel monitored, set Echo Lock for **maximum verification** or **material agitator** to avoid agitator blade detection. Ensure the agitator is always on while the HydroRanger 200 is monitoring the vessel to avoid stationary blade detection.

When set for **max verification** or **material agitator**, a new measurement outside of the Echo Lock Window (P713) must meet the sampling criterion (P712).

For **total lock**, Echo Lock Window (P713) is preset to zero **0**. The HydroRanger 200 continuously searches for the best echo according to the algorithm chosen (P820). If the selected echo is within the window, the window is then centered about the echo. If not, the window widens with each successive shot until the selected echo is within the window. The window then returns to its normal width.

When Echo Lock is off, the HydroRanger 200 responds immediately to a new measurement as restricted by the Max Fill / Empty Rate (P700 / P701); however, measurement reliability is affected.

## P712 Echo Lock Sampling

*The sampling criterion sets the number of consecutive echoes appearing above or below the echo currently locked onto, that must occur before the measurements are validated as the new reading (for Echo Lock P711 values: 1 or 2).*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 1:1 to 99:99
	Format: x:y
	x = the number of <b>above</b> echoes
	y = the number of <b>below</b> echoes
<b>Related</b>	<ul style="list-style-type: none"> <li>P711 Echo Lock</li> </ul>

P711 value	P712 preset value
1, max verification	5:5
2, material agitator	5:2

**Example:**

### Setting

- P711 = 2, material agitator
- P712 = 5:2

### Result

- a new reading will not be validated unless five consecutive measurements higher or two consecutive measurements lower than the current reading occur
- Resetting P711 returns P712 to the respective preset values



# P713 Echo Lock Window

*Adjusts the size of the Echo Lock Window.*

Primary Index	Global	
Values	Range: 0.000 to 9999	
	Preset: 0.000	
Altered by	• P003 Maximum Process Speed	
Related	• P005 Units	• P711 Echo Lock

The Echo Lock Window is a **distance window** (units P005) centred on the echo and used to derive the Reading. A new measurement in the window re-centers the echo and the new Reading calculated. Otherwise, the new measurement is verified by Echo Lock (P711) before the reading is updated.

When **0** is entered the window is automatically calculated after each measurement. For slower P003 Maximum Process Speed values the window is narrow; for faster P003 values the window becomes wider.

# Transducer Scanning (P726 to P729)

## P726 Level System Sync

*Enables the System Sync on the terminal block.*

Primary Index	Global		
Values	0		not required
	1	*	synchronize level monitors

Use this if another level measurement system is mounted nearby, and they are wired together on the Sync terminal.

## P727 Scan Delay

*The delay, in seconds, between measurements from transducer points.*

Primary Index	Global	
Values	Range: 0.000 to 9999	
	Preset: 5.0	
Altered by	• P003 Maximum Process Speed	
Related	• P001 Operation	

This feature may only be used to adjust the delay before the next point is scanned. Enter the amount of delay in seconds. This value is automatically altered when Maximum Process Speed (P003) is altered.

## P728 Shot Delay

*The delay, in seconds, between transducer shots.*

Primary Index	Transducer
Values	Range: 0.1 to 4.0
	Preset: 0.5

Use this if transient acoustic noise within the vessel causes measurement difficulties due to echoes from one shot being received on the next. If more than one ultrasonic unit is installed for redundancy, this value should be **0**.

## P729 Scan Time

*View the elapsed time (in seconds) since the point displayed was last scanned.*

Primary Index	Level Point
Values	Range: 0.000 to 9999 (view only)
Related	<ul style="list-style-type: none"> <li>P001 Operation</li> </ul>

This may be viewed as an Auxiliary Reading in the RUN mode.

## Display (P730 to P739)

 



### P730 Auxiliary Reading

*Use this feature to display operator selected Auxiliary Readings temporarily or indefinitely (as desired).*

Primary Index	Global
Values	Range: 000 to 999
	Display: OFF, HOLD

Select **OFF** to display Auxiliary Readings temporarily. Select **HOLD** to display Auxiliary Readings until another Auxiliary Reading is selected or programming mode is entered. See the *Hand Programmer* section on page 22 for RUN mode auxiliary readings.

## Selecting the Auxiliary Reading operation

1. Press READING  to display the Auxiliary Function symbol.
2. Press ARROWS   to access the OFF or HOLd option desired.
3. Press ENTER 

If necessary, enter the Parameter Number to default in the Auxiliary Reading display. That value will show in the auxiliary reading area by default. Other values are available but will reset to the parameter defined here.

## P731 Auxiliary Reading Key

*Enter the Parameter Number whose value is to be displayed in the Auxiliary Reading field*

Primary Index	Global
Values	Range: 000 to 999
	Preset: Material Reading, P921

 is pressed in the RUN mode. See the *Hand Programmer* section on page 22 for RUN mode auxiliary readings.

## P732 Display Delay

*Adjusts the Point Number display scroll speed.*




Primary Index	Global
Values	Range: 0.5 to 10
	Preset: 1.5 seconds
Related	<ul style="list-style-type: none"><li>• P001 Operation</li><li>• P737 Primary Reading</li></ul>

Use this feature to adjust the delay before the display advances to the next Point Number. Display scrolling is independent from transducer scanning.

# P733 Scroll Access

Use this feature to select the parameter scroll access option desired.

Primary Index	Global			
Values	0		Off	Scrolls to all parameters (P001 to P999)
	1	*	Smart	for Quick Start, altered, and tagged parameters
	2		Tagged	Scrolls to operator tagged parameters only

Press READING  and  to tag/untag any accessed parameter.  display indicates the parameter accessed is tagged.

**Note:** Quick Start parameters (P001 – P007) and those changed from factory default settings cannot be untagged.

# P735 Backlight

Controls the LCD backlighting.

Primary Index	Global		
Values	0		Off
	1	*	On
	2		Keypad activated

The backlight can be forced on or off, or be controlled by a programmer, in which case it will turn OFF 30 seconds after the last key is pressed.

# P737 Primary Reading

The reading shown on the primary reading display when in RUN mode.

Primary Index	Global		
Values	Range: 0 to 3		
	1	*	Default reading (P920) based on operation (P001)
	2		LCD totalizer (P322, P323)
	3		Automatically toggle between 1 and 2
Related	<ul style="list-style-type: none"> <li>LCD Totalizer (P322 &amp; P323)</li> <li>P732 Display Delay</li> </ul>	<ul style="list-style-type: none"> <li>P920 Reading Measurement</li> </ul>	

When this value indicates TOGGLE, then both readings (default and totalizer) are shown in the time specified in display delay (P732).

# SmartLinX Reserved (750 to 769)

These parameters are reserved for optional SmartLinX communications cards and vary by card. Refer to the SmartLinX documentation to determine if any of them are used.

## Communications (P770 to P782)

The HydroRanger 200 communication ports are configured by a series of parameters that are indexed by port. See *Communications* on page 83 for a complete description of communications set-up.

Communication parameters are indexed to these communication ports, unless otherwise noted:

Port	Description
1	RS-232 port (RJ-11 modular telephone)
2	RS 485 port on terminal block

### P770 Port Protocol

*The communications protocol used between the HydroRanger 200 and other devices.*

Primary Index	Communications Port		
Values	0		Communications port disabled
	1	*	Milltronics Dolphin protocol (preset for port 1)
	2		Modbus ASCII slave serial protocol
	3	*	Modbus RTU slave serial protocol (preset for port 2)

The HydroRanger 200 supports the internationally recognized Modbus standard in both ASCII and RTU formats. Other protocols are available with optional SmartLinX cards.

### P771 Network Address

*The unique identifier of the HydroRanger 200 on the network.*

Primary Index	Communications Port		
Values	Range: 0 to 9999		
	1	*	Preset:

For devices connected with the Siemens Milltronics protocol this parameter is ignored. For devices connected with a serial Modbus slave protocol, this parameter is a number from 1-247. The network administrator must ensure that all devices on the network have unique addresses. Do not use the value **0** for Modbus communications as this is the broadcast address and is inappropriate for a slave device.

## P772 Baud Rate

*The communication rate with the master device.*

Primary Index	Communications Port		
Values	4.8		4800 baud
	9.6		9600 baud
	19.2	*	19,200 baud (preset for port 2)
	115.2	*	115,200 baud (preset for port 1)

This specifies the rate of communication in Kbaud. Any value may be entered but only the values shown above are supported. The baud rate should reflect the speed of the connected hardware and protocol used.

## P773 Parity

*The serial port parity.*

Primary Index	Communications Port		
Values	0	*	No Parity
	1		Odd Parity
	2		Even Parity

Ensure that the communications parameters are identical between the HydroRanger 200 and all connected devices. For example, many modems default to N-8-1 which is No parity, 8 data bits, and 1 stop bit.

## P774 Data Bits

*The number of data bits per character.*

Primary Index	Communications Port		
Values	Range: 5 to 8		
	8	*	Modbus RTU
	7 or 8		Modbus ASCII
	7 or 8		Dolphin Plus

## P775 Stop Bits

*The number of bits between the data bits.*

Primary Index	Communications Port		
Values	Range: 1 or 2		
	1	*	Preset:

## P778 Modem Available

*Sets the HydroRanger 200 to use an external modem.*

Primary Index	Communications Port		
Values	0	*	No modem connected
	1		Answer only

## P779 Modem Inactivity Timeout

*Sets the time that the unit will keep the modem connected with no activity.*

Primary Index	Communications Port		
Values	Range: 0-9999 seconds		
	0	*	No timeout
Related	<ul style="list-style-type: none"><li>• P778 Modem Available</li><li>• P779 Modem Inactivity Timeout</li></ul>		

To use this parameter, ensure that P778 (Modem Available) = 1. Ensure that the value is low enough to avoid unnecessary delays when an unexpected disconnect occurs but long enough to avoid timeout while unit is legitimately connected. This parameter value is ignored by the Modbus Master Drivers, as they automatically disconnect when done.

### Hanging Up

If the line is idle and the P779 Modem Inactivity Timeout expires, then the modem is directed to hang up the line. Ensure that P779 is set longer than the standard polling time of the connected master device. **0** disables the inactivity timer.

# P782 Parameter Index Location

*Determines where index information is stored for the parameter access area.*

<b>Primary Index</b>	Global		
<b>Values</b>	0	*	Global
	1		Parameter-Specific
<b>Altered By</b>	• P770 Port Protocol		

## Global (0)

The primary and secondary index values are global (they affect all of the parameter access area at once) and stored in:

- primary index – R43,999
- secondary index – R43,998

## Parameter-Specific (1)

The primary and secondary index values are encoded into the format words found between R46,000 and R46,999. Each format work corresponds with the R44,000 series number in the parameter access map. For example, the format register R46,111 corresponds to the parameter P111 and the value is stored in R44,111. If the Modbus protocol (P770 = 2 or 3) is not used this parameter is ignored.

# SmartLinx Hardware Testing

These parameters are used to test and debug a SmartLinx card.

## P790 Hardware Error

*The results of ongoing hardware tests in the communications circuitry.*

<b>Primary Index</b>	Global		
<b>Values</b>	PASS	*	No errors
	FAIL		Faulty SmartLinx module or HydroRanger 200
	ERR1		Unknown protocol, upgrade software
<b>Related</b>	• P791 Bus Error • P792 Bus Error Count		

If a test does not meet PASS requirements, communication halts and tests repeated until PASS requirements are met. Communication then resumes.



## P791 Bus Error

*Indicates if an error condition is occurring on the bus.*

Primary Index	Global	
Values	0	No error
	Y	Error code, refer to the SmartLinx module documentation for explanation of the code
Related	<ul style="list-style-type: none"> <li>P790 Hardware Error</li> </ul>	<ul style="list-style-type: none"> <li>P792 Bus Error Count</li> </ul>

## P792 Bus Error Count

*A count that changes by increments of one each time a bus error (P752) is reported.*

Primary Index	Global	
Values	Range: 0 to 9999	
	Preset: 0	
Related	<ul style="list-style-type: none"> <li>P790 Hardware Error</li> </ul>	<ul style="list-style-type: none"> <li>P791 Bus Error</li> </ul>

## Echo Processing (P800 to P807)

### P800 Near Blanking

*The space near the transducer face which cannot be measured.*

Primary Index	Global	
Values	Range: 0.000 to 9999	
	Preset:	0.300m (Most transducers) 0.450m (XCT-8, XCT-12)
Related	<ul style="list-style-type: none"> <li>P006 Empty</li> <li>P007 Span</li> </ul>	<ul style="list-style-type: none"> <li>P833 TVT Start Min</li> </ul>

Use this feature if the surface is reported to be near the transducer face but is in fact further away. Extend this value when changing transducer location, mounting, or aiming.

Please note that changing the Near Blanking cannot correct measurement problems. Ensure that Span (P007) < Empty (P006) – Near Blanking (P800).

## P801 Range Extension

*Allows the material level to fall below the Empty setting without reporting LOE.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0.000 to 9999	
	Preset: 20% of Span (P007)	
<b>Related</b>	<ul style="list-style-type: none"> <li>• P005 Units</li> <li>• P006 Empty</li> </ul>	<ul style="list-style-type: none"> <li>• P007 Span</li> <li>• P004 Transducer</li> </ul>

This feature is useful in OCM applications where the Empty level is set to the bottom of the weir, and above the bottom of the channel, and should be used if the surface monitored can fall past the Empty (P006) level in normal operation.

The value is added to Empty (P006) and can be greater than the range of the transducer. If the surface monitored can extend beyond Empty (P006), increase Range Extension (in Units (P005) or % of Span) such that Empty plus Range Extension is greater than the transducer face to furthest surface to be monitored distance. This is often the case with OCM when using weirs and some flumes.

## P802 Transducer with Submergence Shield

*Used when the transducer is expected to be submerged on occasion.*

<b>Primary Index</b>	Global		
<b>Values</b>	0	*	Off
	1		Submergence Transducer
<b>Related</b>	<ul style="list-style-type: none"> <li>• P006 Empty</li> <li>• P071 Failsafe Material Level</li> </ul>		<ul style="list-style-type: none"> <li>• Relays</li> </ul>

When a transducer with a submergence shield is submerged, the shield traps an air pocket that creates a special echo. The HydroRanger 200 recognizes the echo and advances the reading to the highest level and operates displays and outputs accordingly. This feature is effective for when power is returned while the transducer is submerged.

## P803 Shot / Pulse Mode

*Determines what type of ultrasonic shots are fired.*

<b>Primary Index</b>	Global		
<b>Values</b>	1		Short
	2	*	Short and long
<b>Related</b>	<ul style="list-style-type: none"><li>• P006 Empty</li><li>• P805 Echo Confidence</li></ul>		<ul style="list-style-type: none"><li>• P804 Confidence Threshold</li><li>• P852 Short Shot Range</li></ul>

Use this feature to increase HydroRanger 200 response when the monitored surface is close to the transducer face. Select **short and long** to have short and long acoustic shots fired for each measurement, regardless of the transducer to surface distance.

Select **short** to have only short shots fired if the Echo Confidence (P805) produced by a short shot exceeds the short Confidence Threshold (P804) and the monitored surface is always within the Short Shot Range (P852).

## P804 Confidence Threshold

*Determines which echoes are evaluated by software.*

<b>Primary Index</b>	Global
<b>Values</b>	Range: 0 to 99:0 to 99
	Preset: 10:5
<b>Related</b>	<ul style="list-style-type: none"><li>• P805 Echo Confidence</li></ul>

Use this feature when an incorrect material level is reported. The short and long shot Confidence Thresholds are preset to 10 and 5 respectively. When Echo Confidence (P805) exceeds the Confidence Threshold, the echo is evaluated by Sonic Intelligence®. Values are entered as two numbers separated by a decimal point. The first number is the short shot confidence and the second number is the long shot confidence.


**Note:** The decimal point is replaced with a colon (:) on the display.

## P805 Echo Confidence

*Displays the echo confidence of the measurement echo from the last shot.*

<b>Primary Index</b>	Transducer	
<b>Values</b>	Format: x:y (view only)	
	x = short (0 to 99)	
	y = long (0 to 99)	
<b>Related</b>	• P804 Confidence Threshold	• P830 TVT Type

Use this feature to monitor the effect of transducer aiming, location, and mechanical transducer / mounting isolation.

Both short and long shot Echo Confidence is displayed. (To display this value in the auxiliary display while the unit is running, press  for 4 seconds.)

Display	Description
<b>X:--</b>	short shot confidence value, (long shot not used).
<b>--:Y</b>	long shot confidence value, (short shot not used).
<b>X:Y</b>	short and long shot confidence values (both used).
<b>E</b>	transducer cable is open or short circuited.
<b>--:--</b>	no shots were processed for Sonic Intelligence <sup>®</sup> evaluation.

## P806 Echo Strength

*Displays the strength (in dB above 1  $\mu$ V RMS) of the selected measurement echo.*

<b>Primary Index</b>	Transducer
<b>Values</b>	Format: 0 to 99 (view only)

## P807 Noise

*Displays the average and peak ambient noise (in dB above 1  $\mu$ V RMS) being processed.*

<b>Primary Index</b>	Transducer	
<b>Values</b>	Format: x:y (view only)	
	x = average (-99 to 99)	
	y = peak (-99 to 99)	


The noise level is a combination of transient acoustic noise and electrical noise (induced into the transducer cable or receiving circuitry). See *Noise Problems* in the *Troubleshooting Section* on page 219.

# Advanced Echo Processing (P810 to P825)

The following parameters are for authorized Siemens Milltronics Service personnel or technicians familiar with Siemens Milltronics echo processing techniques.

## Anatomy of an Echo Profile

The relevant parts of an echo profile are listed here. These are visible in either Dolphin Plus or an oscilloscope.

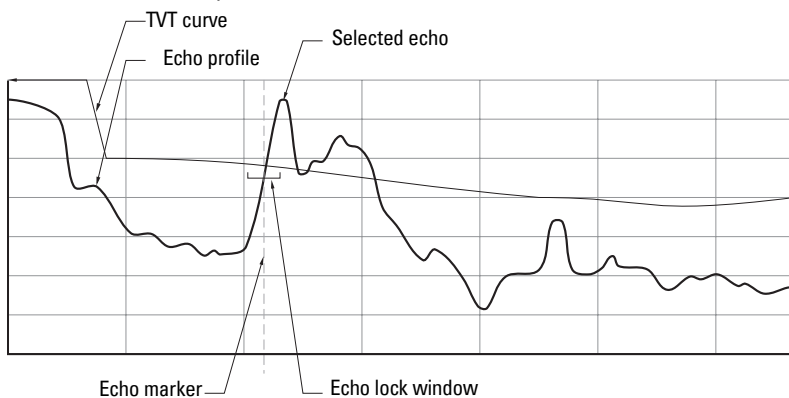

## P810 Scope Displays

*Captures echo profiles for display on an oscilloscope.*

<b>Primary Index</b>	Transducer
<b>Values</b>	Display: P, C, n, u, _
	Preset: _ _ _ _ (display is off)
<b>Related</b>	<ul style="list-style-type: none"> <li>P832 TVT Shaper Adjust</li> </ul>

Use this feature to monitor the effects of Echo Processing changes.

Connect an oscilloscope to Mother Board TP2 (Scope), TP5 (DCOM), and TP6 (Sync).

Sweep = 10 us / div. to 1 ms / div. (x 100 for real time)

Amplitude = 1 V / div.

Trigger = external





**Note:** Use of an analog oscilloscope is preferred over a digital oscilloscope.

Any combination of the following Scope Displays is available.

Display	Symbol			
	P	C	n	u
Echo Profile	▲	▲	▲	▲
TVT Curve	—	—	—	—
Echo Marker	—	—	—	—
Echo Lock Window	—	—	—	—

## Two methods to select Scope Displays:

### Scrolling


1. Press READING  to display the Auxiliary Function symbol.
2. Press ARROWS   to access the desired Reading display symbols.
3. Press ENTER  with the desired display symbols displayed.

### 1/0 Values

Alternatively, a four-digit binary value may be entered, where a **0** turns the associated signal display OFF, and a **1** turns the display ON.

**1110 = PCn\_ :**

- Echo Profile, TVT Curve, and Echo Marker displays ON
- Echo Lock Window display OFF

Use the Scope Displays after pressing TRANSDUCER  to observe the result of parameter alterations. (Take several measurements to verify repeatability and overcome Echo Lock (P711) restrictions.)

## P815 Echo Time Filtered

*The time (in ms) from the transmission of the pulse, to when it is processed.*

Primary Index	Transducer
Values	Range: 0.0 to 9999 (view only)
Related	<ul style="list-style-type: none"> <li>• P816 Echo Time Raw</li> </ul>

## P816 Echo Time Raw

*The time (in ms) from the transmit pulse to the processed echo.*




<b>Primary Index</b>	Transducer
<b>Values</b>	Range: 0.0 to 9999 (view only)
<b>Related</b>	<ul style="list-style-type: none"> <li>P815 Echo Time Filtered</li> </ul>

## Profile Pointer (P817 to P825)

When one of these parameters is accessed, the scope display changes: The Echo Lock Window becomes the Profile Pointer. The Profile Pointer may be moved to any point on the Echo Profile to gain specific information about the profile according to the selected parameter.

To move the Profile Pointer to a specific point, enter the desired value and it will move to the nearest acceptable Echo Profile point.

To scroll the Profile Pointer along the Echo Profile:

1. Press  to display the Auxiliary Function symbol.
2. Press  or  to move the Profile Pointer to the left or right respectively.
3. When the Profile Pointer Parameters are exited, the scope display automatically changes back to include the Echo Lock Window.

## P817 Profile Pointer Time

*The time (in ms) from the transmit pulse to the Profile Pointer.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0.000 to 9999 (view only)	
<b>Related</b>	<ul style="list-style-type: none"> <li>P818 Profile Pointer Distance</li> <li>P819 Profile Pointer Amplitude</li> <li>P820 Algorithm</li> <li>P821 Spike Filter</li> </ul>	<ul style="list-style-type: none"> <li>P822 Narrow Echo Filter</li> <li>P823 Reform Echo</li> <li>P825 Echo Marker Trigger</li> </ul>

## P818 Profile Pointer Distance

*The distance between the transducer face and the Profile Pointer.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0.000 to 9999 (view only)	
<b>Related</b>	<ul style="list-style-type: none"> <li>• P817 Profile Pointer Time</li> <li>• P819 Profile Pointer Amplitude</li> <li>• P820 Algorithm</li> </ul>	<ul style="list-style-type: none"> <li>• P821 Spike Filter</li> <li>• P822 Narrow Echo Filter</li> <li>• P823 Reform Echo</li> <li>• P825 Echo Marker Trigger</li> </ul>

## P819 Profile Pointer Amplitude

*The amplitude (in dB above 1 uV) of the Echo Profile at the Pointer position.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 00 to 99 (view only)	
<b>Related</b>	<ul style="list-style-type: none"> <li>• P817 Profile Pointer Time</li> <li>• P818 Profile Pointer Distance</li> <li>• P820 Algorithm</li> </ul>	<ul style="list-style-type: none"> <li>• P821 Spike Filter</li> <li>• P822 Narrow Echo Filter</li> <li>• P823 Reform Echo</li> <li>• P825 Echo Marker Trigger</li> </ul>

## P820 Algorithm





*Chooses the algorithm to generate the measured value from the profile.*

<b>Primary Index</b>	Global	
<b>Values</b>	1	ALF = flat Area, Largest, and First average
	2	A = flat Area only
	3	L = flat Largest only
	4	F = flat First only
	5	AL = flat Area and Largest average
	6	AF = flat Area and First average
	7	LF = flat Largest and First average
	8	* bLF = smooth Largest or First
	9	bL = smooth Largest only
	10	bF = smooth First only



<b>Related</b>	<ul style="list-style-type: none"> <li>• P805 Echo Confidence</li> <li>• P817 Profile Pointer Time</li> <li>• P818 Profile Pointer Distance</li> <li>• P819 Profile Pointer Amplitude</li> </ul>	<ul style="list-style-type: none"> <li>• P821 Spike Filter</li> <li>• P822 Narrow Echo Filter</li> <li>• P823 Reform Echo</li> <li>• P825 Echo Marker Trigger</li> </ul>
----------------	--	--

Use this to select the algorithm(s) the Sonic Intelligence® echo selection is based on. Use P805 Echo Confidence (page 190) to determine which algorithm gives the highest confidence under all level conditions. If the wrong echo is processed, observe the echo processing displays and select an alternate algorithm, either by entering the numeric value desired, or as below:

1. Press MEASURE  to display the Auxiliary Function symbol.
2. Press ARROWS   to access the desired Reading display symbols.
3. Press ENTER  when the required algorithm is displayed.

## P821 Spike Filter

*Dampens spikes in the echo profile to reduce false readings.*

<b>Primary Index</b>	Global		
<b>Values</b>	0		Off
	1	*	On
<b>Related</b>	<ul style="list-style-type: none"> <li>• P817 Profile Pointer Time</li> <li>• P818 Profile Pointer Distance</li> <li>• P819 Profile Pointer Amplitude</li> </ul>	<ul style="list-style-type: none"> <li>• P820 Algorithm</li> <li>• P822 Narrow Echo Filter</li> <li>• P823 Reform Echo</li> <li>• P825 Echo Marker Trigger</li> </ul>	

Use P821 if interference spikes are on the long shot Echo Profile display.

## P822 Narrow Echo Filter

*Filters out echoes of a specific width.*

<b>Primary Index</b>	Global		
<b>Values</b>	0 = OFF (preset)		
	Greater = wider		
<b>Related</b>	<ul style="list-style-type: none"> <li>• P817 Profile Pointer Time</li> <li>• P818 Profile Pointer Distance</li> <li>• P819 Profile Pointer Amplitude</li> </ul>	<ul style="list-style-type: none"> <li>• P820 Algorithm</li> <li>• P821 Spike Filter</li> <li>• P823 Reform Echo</li> <li>• P825 Echo Marker Trigger</li> </ul>	

Use this for transducer acoustic beam interference (e.g. ladder rungs). Enter the width of false echoes (in ms) to be removed from the long shot Echo Profile. When a value is keyed in, the nearest acceptable value is entered.

## P823 Reform Echo

*Smooths jagged peaks in the echo profile.*

<b>Primary Index</b>	Global	
<b>Values</b>	0 = OFF (preset)	
	Greater = wider	
<b>Related</b>	<ul style="list-style-type: none"> <li>• P002 Material</li> <li>• P817 Profile Pointer Time</li> <li>• P818 Profile Pointer Distance</li> <li>• P819 Profile Pointer Amplitude</li> </ul>	<ul style="list-style-type: none"> <li>• P820 Algorithm</li> <li>• P821 Spike Filter</li> <li>• P822 Narrow Echo Filter</li> <li>• P825 Echo Marker Trigger</li> </ul>

Use this feature, when monitoring solids (P002 = 2), if the reported level fluctuates slightly, though the monitored surface is still. Enter the amount (in ms) of long shot Echo Profile smoothing required. When a value is keyed in, the nearest acceptable value is entered.

## P825 Echo Marker Trigger

*The point on the primary echo on which the measured value is based.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 5 to 95%	
	Preset: 50%	
<b>Related</b>	<ul style="list-style-type: none"> <li>• P817 Profile Pointer Time</li> <li>• P818 Profile Pointer Distance</li> <li>• P819 Profile Pointer Amplitude</li> </ul>	<ul style="list-style-type: none"> <li>• P820 Algorithm</li> <li>• P821 Spike Filter</li> <li>• P822 Narrow Echo Filter</li> <li>• P823 Reform Echo</li> </ul>

Use this feature if the reported material level fluctuates slightly, due to a variable rise in the leading edge of the true echo on the Echo Profile.

Enter the value (in percent of echo height) to ensure the Echo Lock Window intersects the Echo Profile at the sharpest rising portion of the Echo Profile representing the true echo. This value is preset to 50%.

# Advanced TVT Adjustment (P830 to P835)

The following parameters are for authorized Siemens Milltronics Service personnel or technicians familiar with Siemens Milltronics echo processing techniques.

Advanced TVT control applies to long shots only.

## P830 TVT Type

*Selects the TVT Curve used.*

Primary Index	Global		
Values	1		TVT Short Curved
	2		TVT Short Flat
	3		TVT Long Flat
	4		TVT Long Smooth Front
	5		TVT Long Smooth
	6		TVT Slopes
Altered By	<ul style="list-style-type: none"> <li>P002 Material</li> </ul>		
Related	<ul style="list-style-type: none"> <li>P805 Echo Confidence</li> <li>P835 TVT Slope Min</li> </ul>		

Select the TVT type giving the highest confidence (P805) under all level conditions. Use this parameter with caution. Do not use TVT **Slopes** with the **bF** or **bLF** Algorithm (P820).

## P831 TVT Shaper

*Turns the TVT Shaper ON or OFF.*

Primary Index	Global		
Values	0	*	off
	1		on
Related	<ul style="list-style-type: none"> <li>P832 TVT Shaper Adjust</li> </ul>		

Turn the TVT Shaper ON before and after using P832. Turn the TVT Shaper ON and OFF while monitoring the effect to pick up the true echo.

# P832 TVT Shaper Adjust

*Allows manual adjustment of the TVT curve.*






<b>Primary Index</b>	Global
<b>Values</b>	Range: -50 to 50
	Preset: 0
<b>Related</b>	<ul style="list-style-type: none"><li>• P810 Scope Displays</li><li>• P831 TVT Shaper</li></ul>

Use this feature to bias the shape of the TVT curve to avoid selecting false echoes from fixed objects.

Adjustment to this parameter is best done while viewing the echo profile with Dolphin Plus. Refer to the Dolphin Plus online help for details. If Dolphin Plus is not available, then an oscilloscope can be used. When using an oscilloscope, the Echo Lock Window display becomes the TVT Curve Pointer. See *P810 Scope Displays* on page 191 for more information.

The TVT curve is divided into 40 breakpoints, accessible by enabling the point number as the breakpoint index field. Each breakpoint is normalized to a value of **0**, as displayed in the parameter value field. By changing the breakpoint value, up or down, the intensity of the bias applied to that breakpoint of the curve is respectively changed. By changing the value of adjacent breakpoints, the effective bias to the shaper can be broadened to suit the desired correction. In the case of multiple false echoes, shaping can be applied along different points of the curve. Shaping should be applied sparingly in order to avoid missing the true echo.

## Changing a breakpoint:

1. Confirm that P831, TVT shaper, is on.
2. Go to P832.
3. Press PROGRAM  twice to highlight the index value.
4. Press ARROWS   to scroll through the 40 points (or type in the desired point).
5. Enter the value from -50 to 50.
6. Press .
7. Press TRANSDUCER  to update the scope display with the new TVT.

# P833 TVT Start Min

Use this feature to adjust the TVT Curve height to ignore false echoes (or pick up true echoes) near the start of the Echo Profile.

Primary Index	Global	
Values	Range: - 30 to 225	
	Preset: 50	
Related	• P800 Near Blanking	• P834 TVT Start Duration

Enter the minimum TVT Curve start point (in dB above 1 uV RMS).

This feature should only be used if increased Near Blanking (P800) would extend farther than desired into the measurement range.

# P834 TVT Start Duration

Use this feature in conjunction with TVT Start Min (P833) to ignore false echoes (or pick up true echoes) near the start of the Echo Profile.

Primary Index	Global	
Values	Range: 0 to 9999	
	Preset: 30	
Related	• P833 TVT Start Min	• P835 TVT Slope Min

Enter the time (in ms) for the TVT Curve to decrease from the TVT Start Min (P833) point to the TVT Curve baseline.

# P835 TVT Slope Min

Enter the minimum slope (in dB/s) for the middle of the TVT Curve.

Primary Index	Global	
Values	Range: 0 to 9999	
	Preset: 200	
Related	• P830 TVT Type	• P834 TVT Start Duration

Use this feature to adjust the slope declination, and use it in conjunction with TVT Start Duration (when a long flat TVT Type is selected) to ensure the TVT Curve remains above the false echoes in the middle of the Echo Profile. Alternatively, if TVT Type is set for **TVT Slopes** (P830 = 6), preset is 2000.

# Advanced Shot Adjustment (P840 to P852)

These parameters are for Siemens Milltronics service personnel only.

## P840 Short Shot Number

*The number of short shots to be fired (and results averaged) per transmit pulse.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0 to 100	
	Preset: 1	
<b>Related</b>	<ul style="list-style-type: none"><li>• P841 Long Shot Number</li><li>• P842 Short Shot Frequency</li><li>• P844 Short Shot Width</li></ul>	<ul style="list-style-type: none"><li>• P850 Short Shot Bias</li><li>• P851 Short Shot Floor</li><li>• P852 Short Shot Range</li></ul>

## P841 Long Shot Number

*Enter the number of long shots to be fired (and results averaged) per transmit pulse.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0 to 200	
	Preset: 5	
<b>Altered By</b>	<ul style="list-style-type: none"><li>• P003 Maximum Process Speed</li></ul>	
<b>Related</b>	<ul style="list-style-type: none"><li>• P840 Short Shot Number</li><li>• P843 Long Shot Frequency</li></ul>	<ul style="list-style-type: none"><li>• P845 Long Shot Width</li></ul>

This value is automatically altered by Maximum Process Speed (P003).

## P842 Short Shot Frequency

*Adjust the short shot transmit pulse frequency (in kHz).*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 42kHz to 46kHz	
<b>Altered By</b>	<ul style="list-style-type: none"><li>• P004 Transducer</li></ul>	
<b>Related</b>	<ul style="list-style-type: none"><li>• P840 Short Shot Number</li><li>• P844 Short Shot Width</li><li>• P850 Short Shot Bias</li></ul>	<ul style="list-style-type: none"><li>• P851 Short Shot Floor</li><li>• P852 Short Shot Range</li></ul>

This feature is automatically altered when Transducer (P004) is altered.

## P843 Long Shot Frequency

*Adjust the long shot transmit pulse frequency (in kHz).*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 42kHz to 46kHz	
<b>Altered By</b>	• P004 Transducer	
<b>Related</b>	• P841 Long Shot Number • P842 Short Shot Frequency	• P843 Long Shot Frequency • P845 Long Shot Width

This feature is automatically altered when Transducer (P004) is altered.

## P844 Short Shot Width

*Adjust the width (in ms) of the short shot transmit pulse.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0.000 to 5.000	
<b>Altered By</b>	• P004 Transducer	
<b>Related</b>	• P840 Short Shot Number • P842 Short Shot Frequency • P845 Long Shot Width	• P850 Short Shot Bias • P851 Short Shot Floor • P852 Short Shot Range

This feature is automatically altered when Transducer (P004) is altered.

## P845 Long Shot Width

*Adjust the width (in ms) of the long shot transmit pulse.*

<b>Primary Index</b>	Global	
<b>Values</b>	Range: 0.000 to 5.000	
<b>Altered By</b>	• P004 Transducer	
<b>Related</b>	• P841 Long Shot Number • P844 Short Shot Width	• P843 Long Shot Frequency

This feature is automatically altered when Transducer (P004) is altered.

## P850 Short Shot Bias

Use this feature to slant the echo evaluation in favour of the short shot echo when both short and long shots are evaluated (see P803 Shot Mode).

Primary Index	Global	
Values	Range: 0 to 100	
	Preset: 20	
Related	<ul style="list-style-type: none"><li>• P803 Shot / Pulse Mode</li><li>• P840 Short Shot Number</li><li>• P842 Short Shot Frequency</li></ul>	<ul style="list-style-type: none"><li>• P844 Short Shot Width</li><li>• P851 Short Shot Floor</li><li>• P852 Short Shot Range</li></ul>

## P851 Short Shot Floor

Enter the minimum echo strength (in dB above 1  $\mu$ V) derived from a short shot to be considered for evaluation.

Primary Index	Global	
Values	Range: 30 to 100	
	Preset: 50	
Related	<ul style="list-style-type: none"><li>• P840 Short Shot Number</li><li>• P842 Short Shot Frequency</li></ul>	<ul style="list-style-type: none"><li>• P844 Short Shot Width</li><li>• P850 Short Shot Bias</li><li>• P852 Short Shot Range</li></ul>

## P852 Short Shot Range

Enter the maximum distance in Units (P005) to be measured using short shot echoes.

Primary Index	Global	
Values	Range: 0.000 to 9999	
Altered By	<ul style="list-style-type: none"><li>• P004 Transducer</li></ul>	
Related	<ul style="list-style-type: none"><li>• P840 Short Shot Number</li><li>• P842 Short Shot Frequency</li></ul>	<ul style="list-style-type: none"><li>• P844 Short Shot Width</li><li>• P850 Short Shot Bias</li><li>• P851 Short Shot Floor</li></ul>

This feature is automatically altered when Transducer (P004) is altered.



# Test (P900 to P913)

Test Parameters are intended for use by Siemens Milltronics Service personnel.

## P900 Software Revision Number

View the EPROM Rev. #.

Primary Index	Global
Values	Range: 00.00 to 99.99 (view only)

## P901 Memory

Press ENTER  to activate the HydroRanger 200 memory test.

Primary Index	Global	
Values	Display: view only	
	PASS	(memory test successful)
	F1	RAM
	F3	FLASH data
	F4	FLASH code

## P902 Watchdog

Press ENTER  to put the CPU into an infinite loop to test the watchdog timer.


On successful completion (10 seconds) the RUN mode is entered and the HydroRanger 200 is reset. Programming is kept and the unit responds as if there had been a power failure.

## P903 Display

Press ENTER  to activate the display test.

All LCD segments and symbols are temporarily displayed.

## P904 Keypad

Press ENTER , then press each keypad key in the following sequence:




As each key is pressed, the associated keypad number is displayed. On successful test completion, **PASS** is displayed. **FAIL** is displayed if a key is pressed out of sequence or the programmer keypad malfunctions.


## P905 Transmit Pulse

*This feature may be used to monitor the transmit pulse with an oscilloscope connected to the transducer terminals.*

Primary Index	Global
Values	Range: 42kHz to 46kHz (view only)
Altered By	<ul style="list-style-type: none"><li>P004 Transducer</li></ul>

Press ENTER  to supply repeated transmit pulses, at the frequency entered, to the transducer.

## P906 RS-232 Port

Press ENTER  to test the RS-232 port on the RJ-11.

An external device must be connected to the RS-232 port for this test. On successful completion, **PASS** is displayed, otherwise it is **FAIL**.

## P908 Scanner

Press ENTER  to cycle the scanner relay while firing the transmitter.

Use this parameter to ensure that both transducers are being stimulated.

## P910 Toggle Relays

*Used to energize and de-energize relays directly.*

Primary Index	Global
Values	0 to 6
Related	<ul style="list-style-type: none"><li>P119 mA Relay Logic Test</li></ul>

Enter the relay number and then toggle between **energized** and **de-energized**, as required. Enter **0** to toggle all relays at once.

Applies only to relays with P119 = 0 (algorithm control). Use this parameter to confirm that relay contacts are opening and closing.

This feature is helpful when P119 does not give expected results even though programming was verified.

## P911 mA Output Value

*Access this parameter to display the current value of the mA output.*

Primary Index	mA output
Values	Range: 0.00 to 25.00
Related	<ul style="list-style-type: none"><li>P200 mA Output Range</li><li>P201 mA Output Function</li></ul>

Additionally, this feature may be used to enter a value. The mA output immediately assumes the value entered regardless of any restrictions programmed.

## P912 Transducer Temperature

*Use this feature to display the temperature in °C (as monitored by the connected transducer).*

Primary Index	Transducer
Values	Range: -50 to 150

**Err** is displayed if the transducer is not equipped with an internal temperature sensor.

## P913 Sensor Temperature

Access this parameter to display the temperature in °C (as monitored by the TS-3).

Primary Index	Global
Values	Range: -50 to 150

OPEn is displayed if a TS-3 is not connected.

## P914 mA Input

Use this feature to display the mA input value (in mA).


Primary Index	mA input
Values	Range: 0.000 to 24.00

## Measurement (P920 to P927)

All of these parameters are available in RUN mode and used to verify programming.

The range and values shown for each of these parameters depends on the Operation (P001) chosen. The readings for each operation are listed below.

### To Access in RUN Mode

1. Ensure the device is in RUN mode.
2. Press 

The Auxiliary Reading field shows underscores P\_ \_ \_ \_

3. Type the parameter number.

The field changes to the value of the specified parameter

These parameters are also available in simulation mode. See *Testing the Configuration* section page 79 for instructions on how to control the simulation direction and rate.

## P920 Reading Measurement

*Corresponds to the final reading after all programming is applied.*

Primary Index	Level point
Values	Range: -999 to 9999

In general this means that:  $P920 = \text{Reading} \times P060 + P06$ .

## Reading Measurements by Operation

P001	P050 = 0	P050 ≠ 0
0 – OFF	----	----
1 – Level	P921	P924
2 – Space	P922	100% - P924
3 – Distance	P927	P927
4 – Difference	P921 (indexed)	P921 (indexed)
5 – Average	P921 (indexed)	P921 (indexed)
6 – OCM	P925	P925
7 – Pump Totalizer	P925	P925

## P921 Material Measurement

*The distance in Units (P005) or % of Span (P007) between Empty (P006) and the monitored surface.*

Primary Index	Level Point
Values	Range: -999 to 9999
Related	<ul style="list-style-type: none"> <li>• P005 Units</li> <li>• P006 Empty</li> <li>• P007 Span</li> </ul>

## P922 Space Measurement

*The distance between the monitored surface and Span (P007).*

Primary Index	Transducer
Values	Range: 0.000 to 9999
Related	<ul style="list-style-type: none"> <li>• P007 Span</li> </ul>

## P923 Distance Measurement

*The distance between the monitored surface and the transducer face.*

Primary Index	Transducer
Values	Range: 0.000 to 9999

## P924 Volume Measurement

*The calculated vessel capacity in Max Volume (P051) or % of Max Volume.*

Primary Index	Global
Values	Range: 0.000 to 9999
Related	<ul style="list-style-type: none"><li>P051 Maximum Volume</li></ul>

## P925 Flow Measurement

*The calculated flowrate in Max Flow (P604) units or % of Max Flow.*

Primary Index	Global
Values	Range: 0.000 to 9999
Related	<ul style="list-style-type: none"><li>P604 Maximum Flow</li></ul>

## P926 Head Measurement

*Corresponds to Head (the distance from Zero Head (P605) to the monitored surface) in Units (P005) or % of Span (P007).*

Primary Index	Global
Values	Range: -999 to 9999
Related	<ul style="list-style-type: none"><li>P005 Units</li><li>P007 Span</li><li>P605 Zero Head</li></ul>

## P927 Distance Measurement

*The distance between the surface and the transducer face.*

Primary Index	Transducer
Values	Range: 0.000 to 9999
Related	<ul style="list-style-type: none"><li>P005 Units</li><li>P006 Empty</li></ul>

Use P923 unless the distance information is required in percent.

# Master Reset (P999)

*This feature resets all parameters to original values.*

Primary Index	Global
Values	Range: 0.000 to 9999

Use this feature prior to initial programming if arbitrary Parameter Values were used during a **bench test**, or after upgrading the software. Following a Master Reset, complete reprogramming is required.

## Performing a Master Reset

1. Access P999 and press CLEAR keys  .
2. **C.ALL** displays until the reset is complete.

**CAUTION:** be careful when using this feature. All data for all points will be reset. For convenience, be sure to record the values you want to re-enter.

# Notes

---



# General Appendix A: Index types

## Index types

Name	Description	# of indexes
Global	This parameter applies to the entire unit	n/a
View only	This parameter can not be set, only viewed	n/a
Breakpoint	Indexed by breakpoint	Parameter dependent
Dimension	Indexed by PMD dimension	up to 7
Discrete Input	Indexed by discrete input	2
Echo Profile	Indexed by stored echo profile	10
Level Point <sup>1</sup>	Indexed by level point	1, 2 or 3
mA input <sup>1</sup>	Indexed by mA input	1
mA output <sup>1</sup>	Indexed by mA output	0 or 2
Comm. Port	Indexed by communications port	2
Relay	Indexed by relay	3 or 6
Transducer <sup>2</sup>	Indexed by transducer	1 or 2

1. The three level points are: Transducer One, Transducer Two, and the calculated point which can be difference (P001=4) or average (P001=5). Level point typically has one index in Standard Mode. A third index is available in both modes when Operation (P001) is set for DPD (P001=4) or DPA (P001=5).
2. The number of indexes available in Standard Mode is typically one, but can be expanded to two if Operation (P001) is set for DPD (P001=4) or DPA (P001=5).

# General Appendix B: Technical Reference

## Transmit Pulse

The transmit pulse consists of one or more electrical “shot” pulses, which are supplied to the transducer connected to the HydroRanger 200 terminals. The transducer fires an acoustic “shot” for each electrical pulse supplied. After each shot is fired, sufficient time is provided for echo (shot reflection) reception before the next (if applicable) shot is fired. After all shots of the transmit pulse are fired, the resultant echoes are processed. The transmit pulse shot number, frequency, duration, delay, and associated measurement range are defined by parameters P803, and P840 to P852.

## Echo Processing


Echo processing consists of echo enhancement, true echo selection, and selected echo verification.

Echo Enhancement is achieved by filtering (P821 and P822) and reforming (P823) the echo profile (P810). The true echo (echo reflected by the intended target) is selected when that portion of the echo profile meets the evaluation criteria of Sonic Intelligence®.


Insignificant portions of the echo profile outside of the measurement range (Span P006 + Range Extension P801), below the TVT Curve (P830, and P832 to P835), and less than the Confidence Threshold (P804) and Short Shot Floor (P851) are automatically disregarded. The remaining portions of the Echo Profile are evaluated using the Algorithm (P820) and Short Shot Bias (P850). The Echo Profile portion providing the best Echo Confidence (P805) is selected.

True echo verification is automatic. The position (relation in time after transmit) of the new echo is compared to that of the previously accepted echo. When the new echo is within the Echo Lock Window (P713), it is accepted and displays, outputs, and relays are updated per the Fuzz Filter (P710) and Rate Parameters (P700 to P703). If the new echo is outside of the Window, it is not accepted until Echo Lock (P711) requirements are satisfied.

### Scope Display (P810)

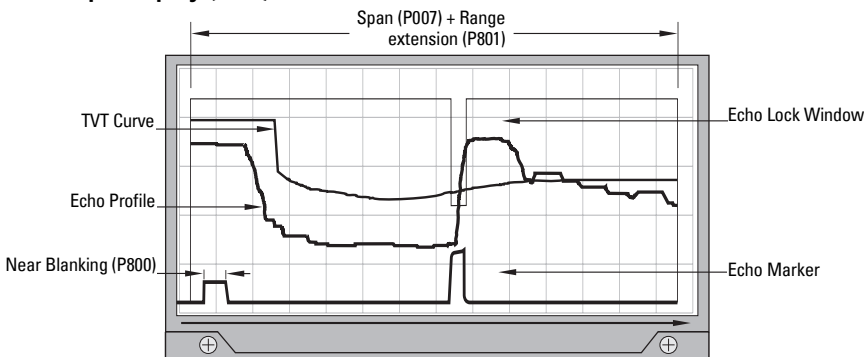

## Dolphin Plus Display

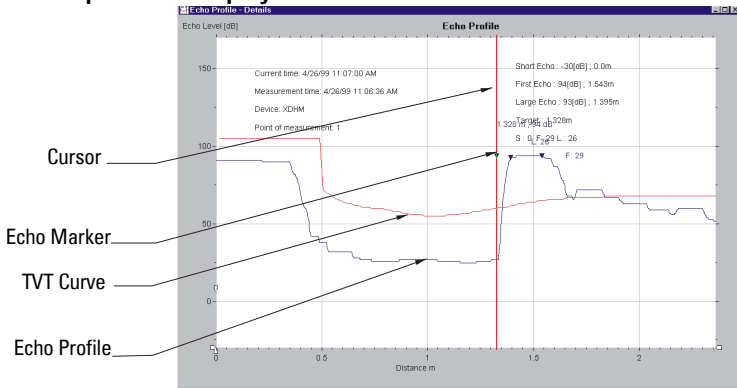

## Distance Calculation

To calculate the transducer to material level (object) distance, the transmission medium (atmosphere) sound velocity (P653) is multiplied by the acoustic transmission to reception time period. This result is divided by 2 to calculate the one way distance.

$$\text{Distance} = \text{Sound Velocity} \times \text{Time} / 2$$

The Reading displayed is the result of performing any additional modification to the calculated distance (as determined by Operation P001, Units P005, Volume Conversion, P050 to P054, Reading, P060 to P063, OCM, P600 to P611, and/or Totalizer P622 to P633 parameters).

## Sound Velocity

The sound velocity of the transmission medium is affected by the type, temperature, and vapor pressure of the gas or vapor present. As preset, the HydroRanger 200 assumes the vessel atmosphere is air at 20°C (68°F). Unless altered, the sound velocity used for the distance calculation is 344.1 m / s (1129 ft / s).

Variable air temperature is automatically compensated when a Siemens Milltronics ultrasonic / temperature transducer is used. If the transducer is exposed to direct sunlight, use a sunshield or a separate TS-3 temperature sensor.

Also, if the temperature varies between the transducer face and the liquid monitored, use a TS-3 temperature sensor (submerged in the liquid) in combination with an ultrasonic / temperature transducer. Set Temp Source (P660) for **both**, to average the transducer and TS-3 measurements.

Atmosphere composition other than air can pose a challenge for ultrasonic level measurement. However, excellent results may be obtained by performing a Sound Velocity Calibration (P651) if the atmosphere is homogeneous (well mixed), at a fixed temperature, and under consistent vapor pressure.

The HydroRanger 200 automatic temperature compensation is based on the sound velocity / temperature characteristics of "air" and may not be suitable for the atmosphere present. If the atmosphere temperature is variable, perform frequent Sound Velocity Calibrations to optimize measurement accuracy.

Sound Velocity calibration frequency may be determined with experience. If the sound velocity in two or more vessels is always similar, future calibrations may be performed on one vessel and the resultant Velocity (P653) entered directly for the other vessel(s).

If the sound velocity of a vessel atmosphere is found to be repeatable at specific temperatures, a chart or curve may be developed. Then, rather than performing a Sound Velocity Calibration each time the vessel temperature changes significantly, the anticipated Velocity (P653) may be entered directly.

## Scanning

When echo processing is complete, (if more than 1 vessel is monitored) the scanning relay changes state to supply the transmit pulse to the other transducer after the Scan Delay (P727).

Scan Delay is automatically set by Maximum Process Speed (P003). When high speed scanning is required (sometimes the case for equipment position monitoring), the Scan Delay may be reduced. Reduce the Scan Delay only as required, otherwise premature scanning relay fatigue could occur.



When a single point HydroRanger 200 is programmed for **differential** or **average** level Operation (P001 = 4 or 5), two transducers of the same type must be used.

## Volume Calculation

The unit provides a variety of volume calculation features (P050 to P055).

If the vessel does not match any of the eight preset Tank Shape calculations, a Universal Volume calculation may be used. Use the level/volume graph or chart provided by the vessel fabricator (or create one based on the vessel dimensions). Based on the graph, choose the Universal Volume calculation, and select the level vs. volume breakpoints to be entered (32 max). Generally, the more breakpoints entered, the greater the accuracy.

### Universal, Linear (P050 = 9)

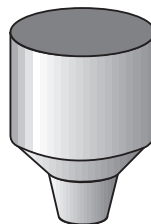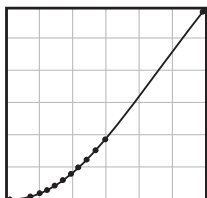

This volume calculation creates a piece-wise linear approximation of the level/volume curve. This option provides best results if the curve has sharp angles joining relatively linear sections.



Enter a Level Breakpoint at each point where the level/volume curve bends sharply (2 minimum).

For combination curves (mostly linear but include 1 or more arcs), enter numerous breakpoints along the arc, for best volume calculation accuracy.

## Universal, Curved

Set P050 = 10

This calculation creates a cubic spline approximation of the level/volume curve, providing best results if the curve is non-linear, and there are no sharp angles.

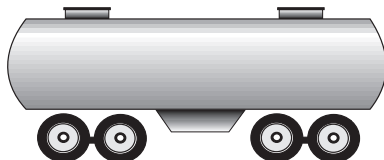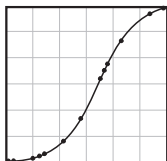

Select at least enough breakpoints from the curve to satisfy the following:

- 2 breakpoints very near the minimum level
- 1 breakpoint at the tangent points of each arc
- 1 breakpoint at each arc apex
- 2 breakpoints very near the maximum level

For combination curves, enter at least two breakpoints immediately before and after any sharp angle (as well as one breakpoint exactly at the angle) on the curve.

## Flow Calculation

The HydroRanger 200 provides numerous OCM flow calculation features (P600 to P611).


If the PMD (primary measuring device) does not match any of the eight preset PMD calculations, or if a PMD is not used, select a Universal Volume calculation. Use the head/flow graph or chart provided by the PMD fabricator (or create one based on the PMD or channel dimensions).

Based on the graph, choose the Universal Flow calculation, and select the head versus flow breakpoints to be entered (32 max). Generally, the more breakpoints entered, the greater the flow calculation accuracy.

## Universal, Linear

Set P600 = 4.


This flow calculation creates a piece-wise linear approximation of the head/flow curve. This option provides best results if the curve has sharp angles joining relatively linear sections.

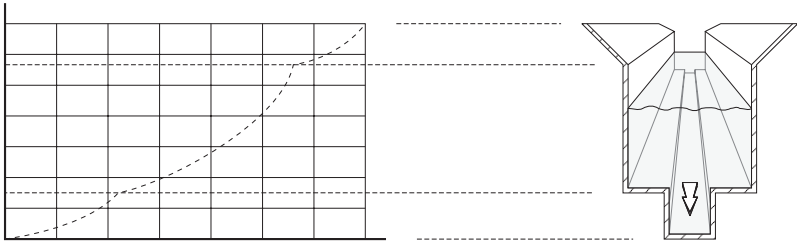

Enter a Head Breakpoint at each point where the head/flow curve bends sharply (2 minimum). For combination curves (mostly linear but include 1 or more arcs), enter numerous breakpoints along the arc, for best flow calculation accuracy.

## Universal, Curved

This calculation creates a cubic spline approximation of the head/flow curve, providing best results if the curve is non-linear, and there are no sharp angles.

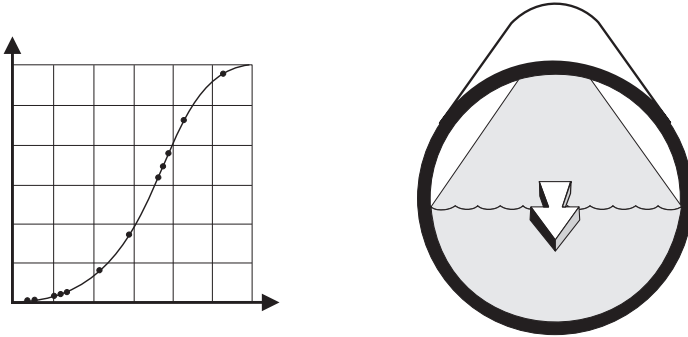

Select at least enough breakpoints from the curve to satisfy the following:

- 2 breakpoints very near the minimum head
- 1 breakpoint at the tangent points of each arc
- 1 breakpoint at each arc apex
- 2 breakpoints very near the maximum head

For combination curves, enter at least two breakpoints immediately before and after any sharp angle (as well as one breakpoint exactly at the angle) on the curve. For more information, go to *Typical Flow Characterization* on page 76.

# Maximum Process Speed

The HydroRanger 200's ability to respond to material level changes is designed to exceed even the most demanding installation requirements.

The Maximum Process Speed setting automatically presets various parameters affecting the HydroRanger 200 response to material level changes as follows:

Parameter (units)	Values Dependent on Maximum Process Speed (P003)		
	1 (slow)	2 (medium)	3 (fast)
P070 Failsafe Timer (min)	100	10	1
P700 Max Fill Rate (m/min)	0.1	1	10
P701 Max Empty Rate (m/min)	0.1	1	10
P702 Filling Indicator (m/min)	0.01	0.1	1
P703 Emptying Indicator (m/min)	0.01	0.1	1
P704 Rate Filter (option)	4	2	2
P710 Fuzz Filter (% of Span)	100	50	10
P713 Echo Lock Window	(per P701 / P702 and time since last valid measurement).		
P727 Scan Delay (seconds)	5	5	3
P841 Long Shot Number	10	5	2

If any of these parameters are independently altered, a Maximum Process Speed (P003) parameter alteration automatically resets the independently altered value.

Slower Maximum Process Speed (P003) provides greater measurement reliability. Faster independently set Max Fill (P700) and Max Empty (P701) Rates may be impeded by Echo Lock (P711), Scan Delay (P727), and Shot Delay (P728) values.

# General Appendix C: Troubleshooting

**Note:** Many of the parameters and techniques described here require extensive knowledge of ultrasonic technologies and Milltronics echo processing software. Use this information with caution.

If the setup becomes too confusing use P999 to reset and start again.

## Common Problems Chart

Symptom	Cause	Action
Display blank, transducer not pulsing.	No power.	Check power supply, wiring, or power fuse.
No response to programmer.	Obstructed infrared interface, defective programmer	Check programmer usage: 15 cm (6") from faceplate pointed at upper target.
Displays <b>Short</b> and <b>tb:(#)</b> .	Short circuited transducer cable, or defective transducer at indicated terminal block number.	Repair or replace as necessary.
Displays <b>Open</b> and <b>tb:(#)</b> .	Transducer not connected or connection reversed.	Check connection to displayed terminal blocks.
	Open circuited transducer cable, or defective transducer at indicated terminal block number.	Repair or replace as necessary.
Displays <b>LOE</b> .	Weak or non-existent echo.	Relocate and/or re-aim transducer at material.
		Proceed to Measurement Difficulties.
Displays <b>Error</b> and <b>tb:(#)</b> .	Wrong transducer selected (P004).	Verify transducer type and re-enter value.
	Transducer connected in "two wire" method.	Do not tie white and shield together. Use all three terminal blocks.
	Transducer connected backwards.	Reverse black and white wires on terminal block.
Displays <b>EEEE</b>	Value too large to display in 4 or 5 characters.	Select larger Units (P005), or lower Convert Reading (P061).



Reading fluctuates while material level is still (or vice versa).	Incorrect measurement stabilization.	Alter Maximum Process Speed (P003) or damping (P704) accordingly. See Maximum Process Speed.
Reading is fixed, regardless of the actual material level.	Transducer acoustic beam obstructed, standpipe too narrow, or transducer ringing (reads over 100%).	Relocate and / or re-aim transducer at material level or object.
		Proceed to Measurement Difficulties below.
		See also: Transducer Ringing.
Material level reported is always incorrect by the same amount.	Incorrect Empty (zero) reference for level operation (P001 = 1).	See Empty (P006), Reading Offset (P063), Offset Calibration (P650), & Offset Correction (P652).
Measurement accuracy improves as level nears transducer.	Incorrect Sound Velocity used for distance calculation.	Use a transducer with a built-in temperature sensor or a TS-3 temperature sensor.
		See Sound Velocity.
Reading is erratic, with little or no relation to material level.	True echo too weak or wrong echo being processed.	Relocate and / or re-aim transducer at material.
		Check noise parameters. See Noise Problems.

## Noise Problems

Incorrect readings can be the result of noise problems, either acoustic or electrical, in the application.

The noise present at the input to the ultrasonic receiver can be determined by viewing parameter P807. The display reads ##.##, where the first number is the average noise and the second is the peak noise. In general, the most useful value is the average noise.

With no transducer attached the noise is under 5 dB. This is often called the noise floor. If the value with a transducer attached is greater than 5 dB, then signal processing problems can occur. High noise decreases the maximum distance that can be measured. The exact relationship between noise and maximum distance is dependent on the transducer type and the material being measured. Any average noise level greater than 20 dB is probably cause for concern unless the distance is much shorter than the maximum for the transducer.

## Determine the Noise Source

Disconnect the transducer from the HydroRanger 200. If the measured noise is below 5 dB, then continue here. If the measured noise is above 5 dB go to Non-Transducer Noise Sources below.

1. Connect only the shield wire of the transducer to the HydroRanger 200. If the measured noise is below 5 dB, continue with the next step. If the noise is above 5 dB, go to Common Wiring Problems.
2. Connect the white and black transducer wires to the HydroRanger 200. Record the average noise.
3. Remove the positive wire of the transducer. Record the average noise.
4. Re-connect the positive wire and remove the negative wire. Record the average noise.

Using the table below, determine the appropriate next step. The terms higher, lower and unchanged refer to the noise recorded in the previous steps.

These are guidelines only. If the suggested solution does not solve the problem, try the other options also.

	- removed	+ removed	Go to:
noise	higher	higher	Reducing Electrical Noise
		unchanged	Common Wiring Problems
		lower	Reducing Acoustical Noise
	unchanged	higher	Reducing Electrical Noise
		unchanged	Contact Siemens Miltronics
		lower	Reducing Acoustical Noise
lower	higher	Common Wiring Problems	
	lower	Reducing Acoustical Noise	

### Acoustical Noise

To confirm that the problem is acoustical, place several layers of cardboard over the face of the transducer. If the noise is reduced, the noise is definitely acoustical.

## Non-Transducer Noise Sources

Remove all input and output cables from the HydroRanger 200 individually while monitoring the noise. If removing a cable reduces the noise, that cable may be picking up noise from adjacent electrical equipment. Check that low voltage cables are not being run adjacent to high voltage cables or near to electrical noise generators such as variable speed drives.

Filtering cables is an option but is not recommended unless all other options have been exhausted.

The HydroRanger 200 is designed to work near heavy industrial equipment such as variable speed drives. Even so, it should not be located near high voltage wires or switch gear.

Try moving the electronics to a different location. Often moving the electronics a few meters farther from the source of noise will fix the problem. Shielding the electronics is also an option, but it should be a last resort. Proper shielding is expensive and is difficult to install properly—the shielding box must enclose the HydroRanger 200 electronics completely, and all wires must be brought to the box through grounded metal conduit.

## Common Wiring Problems

- Make sure that the transducer shield wire is connected at the electronics end only. Do not ground it at any other location.
- Do not connect the transducer shield wire to the white wire.
- The exposed transducer shield wire must be as short as possible.
- Connections between the wire supplied with the transducer, and any customer installed extension wire should be done in grounded metal junction boxes.

On Siemens Milltronics transducers the white wire is negative and the black wire is positive. If the extension wire is colored differently, make sure that it is wired consistently.

Extension wire must be shielded twisted pair. Older HydroRanger 200 products may have included recommendations to use co-axial cable for noise reduction purposes. This is no longer the case. Use shielded twisted pair. See the installation section for specifications.

## Reducing Electrical Noise

- Ensure that the transducer cable does not run parallel to other cables carrying high voltage or current.
- Move the transducer cable away from noise generators such as variable speed drives.
- Put the transducer cable in grounded metal conduit.
- Filter the noise source.

## Reducing Acoustical Noise

- Move the transducer away from the noise source.
- Use a stilling well.
- Install a rubber or foam bushing or gasket between the transducer and the mounting surface.
- Relocate or insulate the noise source.
- Change the frequency of the noise. The HydroRanger 200 is only sensitive to noise between 25 KHz and 65 KHz.

# Measurement Difficulties

If the Failsafe Timer (P070) expires due to a measurement difficulty, LOE flashes alternately with the last known Reading. In rare cases, the HydroRanger 200 may lock on to a false echo and report a fixed or wrong reading.

## Flashing LOE Display

The loss of echo (LOE) display appears when the echo confidence is below the threshold value set in P805 Echo Confidence.

### LOE occurs when:

- The echo is lost and no echo is shown above the ambient noise. See low echo confidence (P805) and low echo strength (P806).
- Two echoes are too similar to differentiate. See low echo confidence (P805) and low echo strength (P806).

### If LOE is displayed, check the following:


- Surface monitored is within the transducer maximum range
- Transducer model (P004) matches the transducer used
- Transducer is located and aimed properly
- Transducer is not submerged without a submergence shield

## Adjust Transducer Aiming

See the Transducer manual for range, mounting, and aiming details. For optimum performance, adjust transducer aiming to provide the best Echo Confidence (P805) and Echo Strength (P806) for all material levels within the measurement range.


The most efficient method of checking echoes is with Siemens Milltronics Dolphin Plus software.

### Displaying Echoes

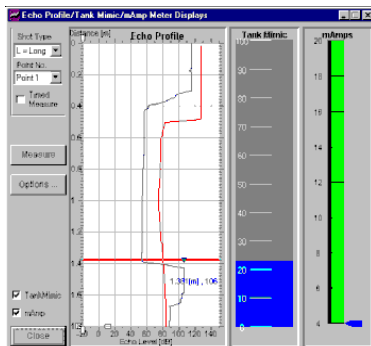

Use Dolphin Plus to graphically display the echo profile at the installation. Interpret the echo profile and change relevant parameters.

### Editing Parameters

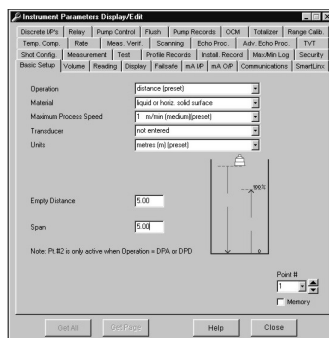


Edit the parameter values. Use F1 to get online help at any time.

## Displaying Echo Confidence in the RUN mode

Press  and hold for four seconds (Failsafe Time Left changes to the Short:Long Confidence display).

To display Echo Confidence in the program mode, access the Echo Confidence (P805) parameter.

To update the value displayed after each aiming adjustment..

Press  (five times or more to verify stability and overcome any echo lock P711).

## Increase Failsafe Timer Value

Increase the Failsafe Timer (P070) value, if failsafe operation will not be compromised by the larger value.

Try this only if LOE shows for short periods of time.

## Install a Transducer with a Narrower Beam

Sometimes the interference echoes from the sides of a vessel can cause the HydroRanger 200 to lock onto a consistent, incorrect level. Try installing a longer range (narrower beam) transducer, enter the new transducer model (P004), and (if necessary) optimize aiming and frequency again.

Always contact your Siemens Milltronics service personnel before selecting a transducer to solve this type of problem.

## Use Dolphin Plus to Debug Echo

If a narrower beam transducer is not available, use Dolphin Plus to view live sonic profiles and make adjustments to the Advanced Echo Processing parameters.

If you do not own Dolphin Plus, connect an oscilloscope and use the hand programmer to adjust the same parameters. (See P810: Scope Displays.)

## Fixed Reading

If the Reading is a fixed value, regardless of the transducer to material surface distance, ensure the:

1. Transducer acoustic beam is free from obstruction.
2. Transducer is properly aimed
3. Transducer is not in contact with any metal object.
4. Material mixer (if used) is operating while the HydroRanger 200 is operating. If it is stopped, ensure that the mixer blade is not stopped under the transducer.

## Obstructions in the Sound Beam

Check for (and remove if present) any acoustic beam obstruction, or relocate the transducer.

If an obstruction cannot be removed or avoided, adjust the Time Varying Threshold (TVT) Curve to reduce the Echo Confidence derived from the sound reflected by the obstruction. Use Dolphin Plus to adjust the TVT curve or use an oscilloscope and a hand programmer to adjust the required parameters. (See Scope Displays, P810 and TVT Shaper, P832.)

## Nozzle Mountings

If the transducer is mounted on or in a nozzle, grind smooth any burrs or welds on the inside or open end (the end that opens into the vessel). If the problem persists, install a larger diameter or shorter length nozzle, bevel the inside of the bottom end, or cut the open end of the nozzle at a 45° angle.

See the transducer manual for complete mounting instructions.

For ST-series and XPS-10 transducers use the plastic conduit / flange adapter supplied with the unit.

If the mounting hardware is over tightened, loosen it. Over tightening changes the resonance characteristics of the transducer and can cause problems.

## Set the HydroRanger 200 to Ignore the Bad Echo

If the preceding remedies have not fixed the problem, the false echo has to be ignored.

### If the Echo is Close to the Transducer

If there is a static, incorrect, high level reading from the HydroRanger 200 there is probably something reflecting a strong echo back to the transducer. If the material level never reaches that point extend the Near Blanking (P800) to a distance to just past the obstruction.

### Adjust the TVT to Ignore the Echo

If increasing Near Blanking is unacceptable then the TVT Curve must be raised in the area of the false echo to ignore the false echo.

Use Dolphin Plus to view live sonic profiles and make adjustments to the TVT curve.

If you do not own Dolphin Plus, connect an oscilloscope and use the hand programmer to adjust the same parameters.

Continue making minor TVT Curve adjustments and taking new measurements while observing the Echo Marker position until the Echo Lock Window repeatedly locks onto the true echo. Verify the false echo is still ignored, regardless of the vessel material level, or empty / fill activity. Finally, ensure that the true material level can still be measured in the area where the TVT was adjusted.

# Wrong Reading

If the Reading is erratic, or jumps to some incorrect value periodically, ensure the:

1. Surface monitored is not beyond the HydroRanger 200's programmed range or the transducer's maximum range.
2. Material is not falling into the transducer's acoustic beam.
3. Material is not inside the blanking distance of the transducer.

## Types of Wrong Readings

If a periodic wrong Reading is always the same value, see Fixed Reading.

If the wrong Reading is random, ensure the material surface to transducer distance is less than the Empty value entered plus 20%. If the material/object monitored is outside this distance, increase Range Extension (P801) as required. This error is most common in OCM applications using weirs.

## Liquid Splashing

If the material monitored is a liquid, check for splashing in the vessel. Enter a lower Maximum Process Speed (P003) value to stabilize the Reading, or install a stilling well. (Contact Siemens Milltronics or your local distributor.)

## Adjust the Echo Algorithm

Use Dolphin Plus to view live sonic profiles and make adjustments to the P820 Algorithm parameter. See the Parameter Reference for details.

If you do not own Dolphin Plus, connect an oscilloscope and use the hand programmer to adjust the same parameter.

If the "Area" algorithm is used and narrow noise spikes are evident on the (long shot) Echo Profile, turn the Spike Filter (P821) on and/or widen the Narrow Echo Filter (P822). Also, if the true echo has jagged peaks, use Reform Echo (P823).

If multiple echoes appear on the Echo Profile, typical of a flat material profile (especially if the vessel top is domed), use the "first" Algorithm.


If the Echo Profile repeatedly switches from short to long, adjust the Short Shot Range (P852) to stabilize the "shot" mode used for the echo evaluation. Also, adjust the Short Shot Bias to increase (or decrease the amount of preference given to short shot echoes over long shot echoes.

Should a stable measurement still not be attainable, contact Milltronics or your local distributor.


## Transducer Ringing

If the transducer is mounted too tightly, or if it is mounted so that its side touches something, its resonance characteristics change and this can cause problems.

### Normal Ring Down

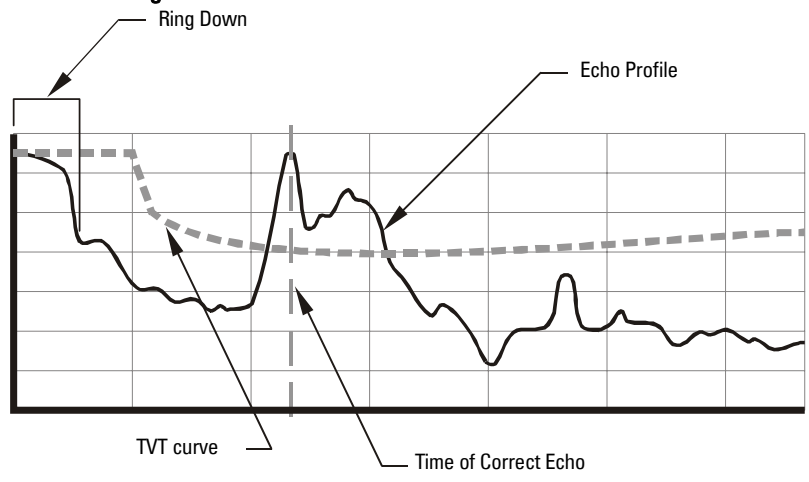

### Poor Ring Down

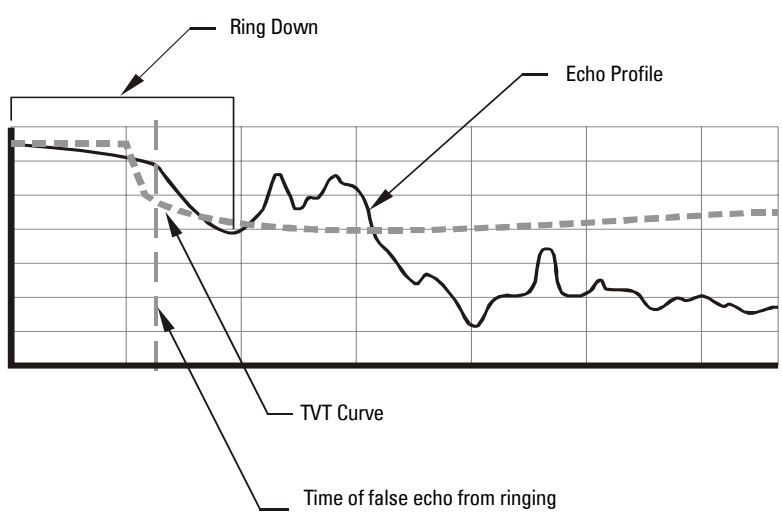

Ring down times that extend past the near blanking area can be interpreted by the HydroRanger 200 as the material level and are characterized by a steady high level being reported.



# General Appendix D: Pump Control Reference

---

The HydroRanger 200 has the pump control strategies to solve nearly any water / wastewater application. This section details these strategies for engineers requiring in-depth knowledge of the system and how it operates.

## Pump Control Options

The various methods of pump control are made up of a combination of two control variables:

### Pump Duty

The pump duty indicates in what sequence pumps are started.

### Pump Start Method

The start method indicates whether new pumps start and run with any currently running pumps (most common) or whether new pumps start and shut off currently running pumps.

## Pump Groups

The HydroRanger 200 groups pumps that use identical pumping strategies based on the value of Relay Control Function (P111). Generally, one group of pumps corresponds to one wet well or reservoir.

## Pump by Rate

To trigger pump starts by the rate of change in material level use P121–Pump by Rate (P121). New pumps are started, one at a time, until the rate setpoint (Filling Indicator (P702), or Emptying Indicator(P703)) is reached.

## Pump Control Algorithms

All of these algorithms can be used to start multiple pumps (assist) or one pump at a time (backup).

**The HydroRanger 200 has three main methods of pump control:**

### Fixed

Starts pumps based on individual setpoints and always starts the same pumps in the same sequence.

## Alternate

Starts pumps based on the duty schedule and always leads with a new pump.

## Service Ratio

Starts pumps based on user-defined ratio of running time.

## Fixed Duty Assist (P111 = 50)

*Ties the indexed pump relay directly to the indexed setpoint.*

### Relay Operation (for P118 = 2)

The relay contact closes at the ON setpoint and opens at the OFF setpoint. Multiple relay contacts in the pump group can be closed at the same time.

### Relay Table

The following table shows relay status when each setpoint is reached.

		Relays		
		1	2	3
Setpoints	Index			
	On 3	On	On	On
	On 2	On	On	Off
	On 1	On	Off	Off
Off 0	Off	Off	Off	

## Fixed Duty Backup (P111 = 51)

*Ties the indexed pump relay directly to the indexed setpoint.*

### Relay Operation (for P118 = 2)

The relay contact closes at the ON setpoint and opens at the OFF setpoint. When a new relay trips the previously closed relay contact opens to shut down the running pump.

Only one relay contact in the pump group can be closed at any one time.

## Relay Table

The following table shows relay status when each setpoint is reached.

		Relays		
		Index	1	2
Setpoints	On 3	Off	Off	On
	On 2	Off	On	Off
	On 1	On	Off	Off
	Off 0	Off	Off	Off

## Alternate Duty Assist (P111 = 52)

*Alternates the lead pump each time the material level cycles and runs all pumps together.*

### Relay Operation (for P118 = 2)

The setpoints associated with the relays are grouped so that they can be rotated.

Setpoint one does not relate directly to relay one. The pumping algorithm manages the mapping of setpoints to relays.

When pumps are run, they RUN in parallel.

## Relay Table

		Cycle 1 Relays		
		1	2	3
Setpoints	On 3	On	On	On
	On 2	On	On	Off
	On 1	On	Off	Off
	Off 0	Off	Off	Off
		Cycle 2 Relays		
		1	2	3
Setpoints	On 3	On	On	On
	On 2	Off	On	On
	On 1	Off	On	Off
	Off 0	Off	Off	Off

Cycle 3		Relays		
		1	2	3
Setpoints	On 3	On	On	On
	On 2	On	Off	On
	On 1	Off	Off	On
	Off 0	Off	Off	Off

## Alternate Duty Backup (P111 = 53)

*Alternates the lead pump each time the material level cycles.*

### Relay Operation (for P118 = 2)

The setpoints associated with the relays are grouped so that they can be rotated. Setpoint one does not relate directly to relay one. The pumping algorithm manages the mapping of setpoints to relays. When pumps are run, they can RUN only one at a time.

### Relay Table

Cycle 1		Relays		
		1	2	3
Setpoints	On 3	Off	Off	On
	On 2	Off	On	Off
	On 1	On	Off	Off
	Off 0	Off	Off	Off

Cycle 2		Relays		
		1	2	3
Setpoints	On 3	On	Off	Off
	On 2	Off	Off	On
	On 1	Off	On	Off
	Off 0	Off	Off	Off

Cycle 3		Relays		
		1	2	3
Setpoints	On 3	Off	On	Off
	On 2	On	Off	Off
	On 1	Off	Off	On
	Off 0	Off	Off	Off

## Service Ratio Duty Assist (P111 = 54)

*Selects the lead pump based on number of hours each pump has run and the specified ratios that each pump requires. Multiple pumps can run at one time.*

### Relay Operation (for P118 = 2)

The setpoints associated with the relays are grouped so they can be redistributed based on pump RUN time ratios. The next pump to start or stop is the one with the required time to actual time ratio.

Over time the number of hours demanded of each pump will conform to the ratios specified. Usually, the ratios are specified in percent values.

To create a grouping of pumps where two pumps make up 50% of the run time and the third pump makes up the other 50%.

P122 is set to these values:

P122 Index	Value
1	25
2	25
3	50

## Service Ratio Duty Backup (P111 = 55)

*Selects the lead pump based on number of hours each pump has RUN and the specified ratios that each pump requires. Only one pump can RUN at a time.*

This algorithm is the same as Service Ratio Duty Assist except that it will only RUN one pump at a time. When the next pump in the sequence starts, the previous pump stops.

## First In First Out (FIFO) (P111 = 56)

*Selects the lead pump based on the **Alternate** duty but uses staggered off setpoints and shuts down pumps based on the **first in, first out** rule.*

This algorithm starts pumps in the same way as Alternate Duty Assist but uses staggered OFF setpoints to shut the pumps down. When the first OFF setpoint is reached the FIFO rule shuts down the first pump started. If the pumps started in sequence 2,3,1 then they would be shut down in sequence 2,3,1.

## Pump by Rate (P121)

*Starts pumps until the level is changing at the rate specified in P702 or P703.*

Pumping costs can be less because only the highest ON setpoint needs to be programmed and this results in a lower difference in head to the next wet well which, in turn, results in less energy being used to pump out the well.

## Other Pump Controls

There are a number of other controls available to modify pump behaviour.

### Pump Run-On (P130, P131)

Extends the RUN period for a pump based on the number of pump starts. This allows for the wet well to be pumped lower than usual and reduces sludge build-up on the well bottom.

### Pump Exercising (P134)

Runs idle pumps and reduce the chance of seizing.

### Wall Cling Reduction (P136)

Varies the ON and OFF setpoints to keep a fat ring from forming around the walls of the wet well.

### Pump Group (P137)

Allows for two different Alternate Duty Assist or Alternate Duty Backup pump groups in the same application.

### Flush Device (P170 to P173)

Operates a flush valve or special flush device based on the number of pump starts, usually to aerate wet well wastewater.

# General Appendix E: Updating Software

---

## Updating Software

To update the software in the HydroRanger 200, please contact your Siemens Milltronics representative to obtain the software. For a complete list of representatives, go to [www.milltronics.com](http://www.milltronics.com).

**WARNING: All parameter values will be lost during software upgrade. Record current parameter values manually or using Dolphin Plus before the upgrade.**

To install the software, please complete the following:

1. Connect your PC or laptop to the HydroRanger 200 RJ-11 RS-232 port.
2. Run the .exe Downloader program in the software. Use this to set the RS-232 settings to match your HydroRanger 200. Please note that the software default settings will already match the default settings of the unit. Changes are only necessary if the RS-232 settings in the unit have been changed.
3. Complete the Downloader program steps.
4. Verify that Downloader confirms a successful upgrade before exiting.

# General Appendix F: Upgrading

The following procedure will assist you if you are upgrading from a HydroRanger to a HydroRanger 200.

If the application is unchanged, copy down the parameters in the HydroRanger before de-commissioning the unit.

## Mounting a HydroRanger 200

Please read the HydroRanger 200 *Installation* section on page 7 before mounting the new HydroRanger 200 enclosure.

Make sure the power is OFF to the unit before following these steps:

1. Remove the old HydroRanger.
2. Mount the new HydroRanger 200 using the same mounting holes.

## Connecting the Transducer


**Important:** Unlike the HydroRanger, coaxial cable is not recommended for use with the HydroRanger 200 for transducer cable extensions. The HydroRanger 200 circuit is designed to use shielded twisted pair cable. Ideally, the coaxial cable should be replaced with twisted pair.

If this is not practical, please refer to the *Coaxial Transducer Extension* section below.

### Coaxial Transducer Extension

The HydroRanger 200 uses a new differential input receiver that works either directly connected to the transducer lead or with a screened twisted pair extension cable via a field junction box. This arrangement, using two conductors and a screen, gives considerably better electrical noise immunity than the previous coaxial arrangement (up to 20dB) and will give reliable operation in applications where the proximity of power cables, variable speed drives etc. would have caused problems.

If you are installing a new HydroRanger 200 system we strongly recommend that you use a good quality screened, twisted pair cable if an extension is required. If the integral transducer cable is used you need only connect to the HydroRanger 200 and benefit from the superior performance.

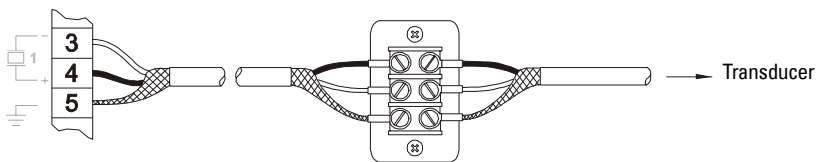




# Connecting a transducer with RG62 coaxial extension cable

If you are replacing an older Milltronics Ultrasonic Level Controller with a new HydroRanger 200 where an RG-62 coaxial extension is fitted and you are unable to replace the extension with a new cable, please refer to connection diagram below. Please note that the noise immunity performance will be similar to our older model ultrasonic level controllers if you use coaxial cable.


## Existing installation

RG62 coaxial cable has been used to make the extension. The level controller might be a HydroRanger 200, HydroRanger, HydroRanger Plus or one of our other level controllers.

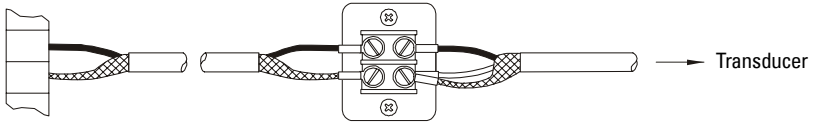

## HydroRanger 200 Installation (for retrofitting HydroRanger Installations)

Connect with a  $0.1\mu\text{F}$  (100v or greater) capacitor (supplied with the HydroRanger 200) between the shield and negative terminals. Connect centre core of the coaxial to the positive terminal and the screen to the negative terminal.

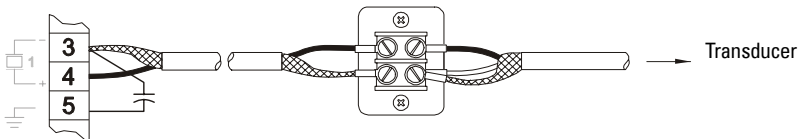

# HydroRanger to HydroRanger 200 Parameters

The HydroRanger 200 uses the current Milltronics standard parameter set which is different than the parameter numbers used in the HydroRanger.

The HydroRanger parameters numbers are sequential (P-0 to P-99). The HydroRanger 200 parameters number are also sequential; however, some of the parameters are indexed.

Parameters are indexed when they apply to more than one input or output. The index value defines the input/output for that parameter. Indexed parameters contain a value for each index, even if that index is not used.

## Example

In the HydroRanger each relay had a dedicated parameter number for its function, ON and OFF points.

### HydroRanger Relay One

- P-8: Function
- P-9 : ON setpoint
- P-10: OFF setpoint

HydroRanger 200 uses P111 for all relays and indexes these parameters.

- P-111: Function
- P-112: ON
- P-113: OFF

The following tables show the differences between the HydroRanger and the HydroRanger 200. They each show one relay programmed as a high alarm, and two relays programmed for pump control with alternating pump starts:

### HydroRanger

Relay	Parameter	Value
1	P-8 (relay function)	1 (alarm)
1	P-9 (ON setpoint)	4 m
1	P10 (OFF setpoint)	3.5 m
2	P-11 (relay function)	9
2	P-12 (ON setpoint)	3.2 m
2	P-13 (OFF setpoint)	0.5 m
3	P-14 (relay function)	9
3	P-15 (ON setpoint)	3.4 m
3	P-16 (OFF setpoint)	0.6 m

### HydroRanger 200

Relay	Parameter	Value
1	P111 [1] (relay function)	1
1	P112 [1] (ON setpoint)	4 m
1	P113[1] (OFF setpoint)	3.5 m
2	P111[2] (relay function)	52
2	P112[2] (ON setpoint)	3.2 m
2	P113[2] (OFF setpoint)	0.5 m
3	P111[3] (relay function)	52
3	P112[3] (ON setpoint)	3.4 m
3	P113[3] (OFF setpoint)	0.6 m

## A

- accuracy 4
- adding new functions 233
- alarm 47
  - bounded 49
  - cable fault 49
  - common parameters 47
  - emptying rate 48
  - filling rate 48
  - level 47
  - loss of echo 50
  - rate 48
  - temperature 49
- alternate duty assist 229
- alternate duty backup 52, 53, 54, 230
- alternate duty service 55
- application
  - test 81
- applications
  - preset 38
  - testing 79
- approvals 6
- auxiliary reading 20

## B

- backup level override 40
- battery 10
- bit values 101
- blinking
  - troubleshooting 224
  - with Span 117

board 9

## C

- cable 12
  - routing 8
- cablings guidelines 86
- calibration
  - mA output 42
- characterization chart 45
- communication ports
  - configuring 88
- communications 83
- communications installation 86
- configuration 2
- control
  - rake 62
- controlling the display 19

## D

- data types 101
  - bit values 101
- default auxiliary reading 20
- dimensions 8, 33
- discrete inputs 41, 94
  - indexing 29
  - logic 41
  - wiring 41
- display 4
  - auxiliary 20
  - controlling 19
  - distance 18
  - echo confidence 18
  - failsafe time left 18
  - head (OCM) 18
  - multiple readings 21
  - pump hours 18
  - rate of change 18
  - temperature 18
- display readout 28
- distance calculation 213
- Dolphin Plus 24, 29, 83
  - changing parameters 29
  - communication settings 85
  - updating software 233

## E

- echo confidence, run mode 18
- echo processing 212
- echo profile example 191
- enabling new functions 233
- enclosure 6
- error codes 28, 110
- error handling 105
- exponential flow 72
- external totalizers 64

## F

- failsafe 33
  - by relay 38
- fat ring 59
- first in first out (FIFO) 55, 232
- fixed duty assist 54
- flash update 233
- flow calculation 215
- flow sampler 65
- flume

- cut throat 75
- H flume 71
- Leopold Lagco 74
- Palmer Bowlus 70
- Parshall 73, 77
- rectangular 69
- universal trapezoidal 77
- flush valve 60
- format words 98
- Frequency Input 145
- G**
- global index method 97
- group pumps 60
- H**
- H flume 157
- hand programmer 22
- head measurement 18
- head vs. flowrate breakpoints 163
- I**
- in bounds 49
- independent failsafe 58
- index method
  - global 97
  - parameter specific 97
- index types 211
- indexed parameters 31
- indexing
  - parameters 29
  - points 29
- input / output 93
- inputs 5
- installation 7
- L**
- LCD controlling 19
- level alarms 47
- LOE 50
- loss of echo (LOE) 33
  - alarm 50
- M**
- mA
  - calibrating 42
  - input 42
  - loops 42
  - output 42, 43
- map ID 92
- maximum process speed 217
- maximum separation 86
- measurement
  - difficulties 222
  - set up 32
- setting up 32
- single point 32
- starting 32
- Modbus 84
  - register map 91
  - responses 105
- mode
  - program 21
  - run 17
- mounting
  - instructions 8
  - location 7
  - wall mount 8
- multiple readings 21
- N**
- near blanking
  - troubleshooting 224
  - with span 117
- noise problems 219
- noise sources 220
- O**
- OCM (open channel monitoring) 66
  - common parameters 66
  - cut throat 75
  - flow characterization chart 76
  - flow exponent support 72
  - H flume 71
  - Leopold Lagco flume 74
  - Palmer Bowlus flume 70
  - Parshall flume 73
  - rectangular flume 69
  - testing flow values 80
  - totalized volume 68
  - universal calculation 76
  - universal Parshall flume 77
  - universal trapezoidal flume 77
  - V notch weir 68
  - weirs 72
  - zero head 67
- operation
  - single point 32
- options, adding 233
- out of bounds 49
- outputs 5
- P**
- parameter
  - relays 36
- parameter access
  - data types 101
  - format words 98

- overview 95
- reading 96
- writing 98
- parameter indexing 29, 96
- parameters
  - advanced echo processing 191
  - advanced shot adjustment 200
  - advanced TVT adjustment 197
  - auto record setpoints 154
  - backup level override 122
  - calibration 169
  - communications 183
  - data logging 146
  - discrete input functions 145
  - display 180
  - display and reading 121
  - echo processing 187
  - failsafe 124
  - flow records 150
  - flush systems 136
  - global 27
  - independent mA setpoints 140
  - independent relay failsafe 132
  - installation records 156
  - LCD totalizer 151
  - mA input 143
  - mA output 138
  - mA output failsafe 143
  - mA output limits 141
  - mA output trim 142
  - master reset 209
  - measurement 206
  - measurement verification 177
  - open channel monitoring (OCM) 157
  - profile pointer 193
  - profile records 152
  - pump control modifiers 133
  - pump records 149
  - pump setpoint modifiers 131
  - pumped volume totalizer 165
  - quick start 113
  - rate 174
  - record readings 148
  - record temperatures 146
  - relays 126
  - scrolling 26
  - SmartLinx hardware testing 186
  - SmartLinx reserved 183
  - special 27
  - status 19
  - temperature compensation 172
  - test 203
  - totalizer 166
  - transducer scanning 179
  - view only 27
  - volume 117
  - volume measurement 208
- points
  - indexing 29
- ports, communication 84
- power 15
- preprogrammed applications 38
- program mode 21
- programming 4
  - alarms 47
  - by hand 22
  - relays 34
- pump
  - alternate duty backup 52, 53
  - by rate 56
  - hours 18
  - off setpoint 52, 53, 54
  - on setpoints 52, 53, 54
  - other controls 54
  - pump down 51
  - pump up 52
  - reservoir 52
  - run-on 59
  - service ratio 57
  - start delay 59
  - start method 227
  - totalizing volume 58
  - usage 61
  - wet well 51
- pump by rate 232
- pump control 94
  - algorithms 51, 227
  - options 227
  - other 232
  - reference 227
- pump flush valve 60
- pump hours 95
- pump starts 95
- Q**
- quick start 32
- R**
- rake control 62
- randomize setpoints 59
- range 4
- reading
  - volume 44

- recording profiles 153
- register map 91
  - discrete inputs 94
  - input/output 93
  - mA output 94
  - map ID 92
  - parameter access 95
  - parameter format words 98
  - point data 93
  - product ID 93
  - pump control 94
  - pump hours 95
  - pump setpoint 94, 95
  - pump starts 95
  - pumped volume 95
  - relay outputs 94
  - UINT32 Order 92
- relay 13
  - activation 37
  - failsafe 38
  - flow sampler 65
  - function codes 104
  - indexing 29
  - modifiers 36
  - modify logic 38
  - outputs 94
  - parameters 36
  - programming 34
  - totalizer 64
  - wiring test 37
- resolution 4
- response rate 33
- RS-232 16
- RS-485 16
- run mode 17
- run-on 59
- S**
- samplers 64
- SCADA 83
- scrolling parameters 26
- scum ring See wall cling 59
- security 26
- service ratio
  - applications 57
  - duty assist 231
  - duty backup 231
- simulation 79
  - level cycle 79
  - OCM flow characterization 80
  - single measurement 79
  - volume characterization 80
- single parameter access 108
- single point 32
- SmartLinux 85
  - installation 10
  - Installation in Wall mount 10
- software update 233
- sound velocity 213
- special parameters 27
- specific auxiliary reading 21
- specifications 3
- standard applications 38
- start delay 59
- starting measurement 32
- status parameters 19
- synchronization 15
- T**
- tank shape 44
- temperature
  - alarm 49
  - compensation 4
  - error 4
  - run mode 18
  - sensor 14
- terminal board 12
- testing
  - application 81
  - configuration 79
- text messages 103
- totalizer 64
- transducers 6, 13
  - indexing 29
- transmit pulse 212
- troubleshooting
  - common problems 218
  - communication 107
  - noise problems 219
- TS-3 14
- U**
- UINT32 101
- units or percent 27
- universal
  - example 45
  - volume 45
- unsigned double precision integer 101
- updating software 233
- V**
- verify
  - mA output 43
  - volume 44

- calculation 214
- characterization chart 45
- dimensions 33
- readings 44
- tank shape 44
- universal example 45

## W

- wall cling 59
- weight 6
- weir
  - Cipolletti 159
  - standard 72
  - V notch 68
- wet well 51
- wiring 11
  - communication 86
  - problems 221
  - test 37
- writing parameters 98
- wrong reading 225

www.milltronics.com

**MILLTRONICS**

Siemens Milltronics Process Instruments Inc.  
1954 Technology Drive, P.O. Box 4225  
Peterborough, ON, Canada K9J 7B1  
Tel: (705) 745-2431 Fax: (705) 741-0466  
www.milltronics.com

© Siemens Milltronics Process Instruments Inc. 2002  
Subject to change without prior notice



Printed in Canada

**Rev. 1.2**