

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	G059	exhaust boot, plastisol	1
2	H217	clamp, hose, 2-1/4 DIA	4
3	P750	manifold, dual vac, parallel	1
4	H401	plate, manifold, parallel	1
5	PH428-19	vac hose, 2", wire reinforced	1
6	G004	gasket, vacuum motor	2
7	H500	vac support, 2 stage, 3-1/8"	6
8	C310	vac motor, 2 stage HP, 115v, tangential	2
9	PH628-23	vac hose, 2", wire reinforced	1
10	PH633-3	pipe, pvc, 1-1/2"	1
11	H244	adapter, pvc, 1-1/2" fms x fmpst	1
12	E573	Thermostat, 200°, Auto, 1/4"	2
13	H274	screw, #6 x 3/16, phil pan head, self-tapping	10
14	E574	Thermostat, 310°F ± 10°F, Manual, 1/4"	2
15	E519	heating rod, 1000W, 115v	2
16	H528	bracket, heater mounting, dual	1
17	H903A	heater, aluminum cast, single w/wrap & drilled holes	2
18	B207	elbow, brass, 90 deg, 1/4" fpt x 1/4" fpt	2
19	AH1085	sol hose, 1/4" x 24 1/2", (OAL), 1 x fsw, 3000psi	2
20	B103	elbow, brass, 90 deg, 1/4" mpt x 1/4" fpt	7
21	B113	tee, brass, 1/4" fpt	3
22	B108	valve, brass, 1/4" check	1
23	AH103	hose, 3/8" x 10", (OAL), 1 x fsw, surge, 1600psi	1
24	H3068	regulator, 1200 psi	1
25	H902	valve, prime, high pressure	1
26	B107	nipple, brass, 1/4" m, hex	3
27	B652	elbow, brass, 90 deg, 3/8" mpt x 1/4" mpt	1
28	B105	bushing, brass, 3/8" mpt x 1/4"	5
29	B235	adapter, brass, 3/8" barb x 1/4" fsw	1
30	B135	tee, brass, 1/4" mpt	2
31	H296	guard, cooling fan, wire	3
32	C317	fan, cooling, 115v	1
33	H668	caster, 4"	2
34	B160	adapter, brass, 1/2" barb x 3/8" fsw, ball end	1
35	PH615-3	sol hose, 1/2" kuri 100psi	1
36	B175	filter, cup, in-line	1
37	PH615-21	sol hose, 1/2" kuri 100psi	1
38	B644	adapter, brass, 1/2" barb x 1/4" mpt	4
39	PH715-20	sol hose, kuriyama, 3/8"	1
40	C322A	regulator, 200 psi	1
41	B136	elbow, brass, 90 deg, 1/4" mpt x 1/4" mpt	1
42	B107	plug, brass, 1/4" mpt, hex	3
43	C322	pump, 200psi, bypass, 115v	1
44	B106	nipple, brass, 1/4" x close	2
45	C381	pump out, 115v	1
46	B186	elbow, brass, 90 deg, 3/8" mpt x 3/8" fmpst	3
47	B172	elbow, brass, 90 deg, 1/2" barb x 3/8" mpt	1
48	PH615-10	sol hose, 1/2" kuri 100psi	6
49	B210	bushing, brass, 1/2" mpt x 3/8" fpt, hex	1
50	H299	washer, 11/16" d x 1-1/2" od x .075, s/s	10
51	H219	cap, axle, 1/2"	2
52	H251	wheel, 12"	2
53	H252	axle, 1/2" x 21", Breeze-M series	1
54	H254	washer, axle, cut 1/2" id	5
55	B196	fitting, brass, 3/4" mgh x 1/2" fpt	1
56	B120	cap, brass, 3/4", garden hose	1
57	B221	plug, brass, 3/4", garden hose	1
58	B642	swivel, brass, 3/4" tgh x 1/2" fpt	1
59	H229	fitting, inlet, pvc, 1-1/2", gray	1
60	G001	gasket, inlet, 1.80" id	1
61	G131	connector, cord lock	2
62	E550	power cord, pigtail, 30', 12/3, yel	2
63	H220	fitting, strain relief, cord	2
64	H221	nut, lock, 1/2" steel	2
65	PH615-38	sol hose, 1/2" kuri 100psi	1
66	P707	base, m series	1
67	H347	clamp, hose, 5/16-29/32	14

ITEM NO.	PART NO.	DESCRIPTION	QTY.
68	C359A	pump, 1200 psi	1
69	AH104	sol hose, 3/8" x 10", (OAL), 1/4" msw x 1/4", 3000psi	2
70	B246	plug, brass, 3/8" mpt, hex	1
71	PH415-12	sol hose, 1/2" kuri 100psi	1
72	AH202	hose, pulse, 3/8" x 34", (OAL), 3/8" fsw x 3/8" m fittings, 1600psi	1
73	H541	valve, float, autofill	1
74	P678	1/2" elbow 90, street mpt x s	1
75	P677-7	Pipe, PVC, 1/2"	1
76	P679	1/2" adapter fpt x s	1
77	H485	handle, breeze	1
78	H378	bracket, front hinge, sp/fb	1
79	B216	nipple, brass, 3/8" x close	3
80	B236	elbow, brass, 90 deg, 1/2" barb x 3/8" fpt	2
81	H212	washer, 9/16" d x 1" od, flat, s/s	4
82	B119A	filter, strainer, 1/2"	1
83	AH195	sol hose, 57 x 1/4", (OAL), m x msw, 3000psi	1
84	H486	latch, front breeze	2
85	P708	sol tank, m series	1
86	H484	plate, mounting, QD	1
87	B111	adapter, brass, extender, 1/4" mpt x 1/4" fpt, hex	2
88	B102	qd, brass, 1/4" f	1
89	H490	float, 2", ball style	1
90	P726	elbow, 2" float	1
91	P682	pipe, pvc, 2"	1
92	P684	adaptor, pvc 2, fmsl x fmsl	1
93	G002	gasket, 2" inlet polyethylene, 3" OD 2.35" ID	1
94	P681	bushing, pvc 1/2" fmsl x 2" fms	1
95	P709	vac tank, m series	1
96	G090	lid, vac tank, black, 7"	1
97	G091	gasket, 7", vac lid	1
98	E5128	light, indicator, 125v (amber)	3
99	H337	plate, switch, sp, 4 hole w/gauge	1
100	E511	light, red, 250v	2
101	E515	switch, rocker, 2 position	3
102	E516	switch, rocker, 3 position	1
103	H308D	gauge, pressure, 2000 PSI	1
104	AH203	hose, pulse, 3/8" x 34", (OAL), 1/4" fsw x 3/8" m fittings, 1600psi	1
105	P685	inlet, 2"	2
106	H544	cuff, 2"	1
107	H390A	Bracket, L 070-036	1
108	H479	cuff, 2 x 1.5" crushproof	2
109	G083	gasket, 2" inlet	1
110	A926	elbow, inlet assembly 2"	1
111	H225	valve, drain, 1-1/2"	1
112	AH120	sol hose, 28" x 1/4", 1/4 fpt solid x 1/4 fpt swivel, neptune	1
113	PH615-35	sol hose, 1/2" kuri 100psi	1

*All fastening hardware not shown

Items not shown:

PART NO.	DESCRIPTION	QTY.
B640	filter, 60 mesh, garden hose	1
E628	controller, water level	1
E530	power cord, ext, 50', 12/3 yel	2
E584	controller, circuit light	1
G010	filter, bag, vac tank	1
G085	gasket, strip, 3/4" x 36"	1
H375	hanger, wire formed, hose	1
H547	hanger, wire for injection bottle	1

UNPACKING THE MACHINE

Before unpacking the machine, inspect all boxes and pallets for signs of shipping damage. Please be aware that all packages leave Mytee Products in perfect condition. Any equipment or carton damage caused during shipping is the responsibility of the freight company, and should be handled by filing a claim with the carrier.



H375 - Hose Hanger



H226 - 450 Drain Elbow



E530 - (2) 12/3 50' Yellow Safety Cord

M-Series Extractor



SAFETY LABELS

The safety labels appear on the machine in the locations indicated. Replace labels if they become damaged or cannot be read.



WARNING: Flammable materials can cause an explosion or fire. Do not use flammable materials in tank(s). Flammable materials or reactive metals can cause explosion or fire.
WARNING LABEL- Located on back. Label warns operator of safe practices of equipment.

SETUP

1. Open lid of solution tank. Fill solution tank with water or approved cleaning agent.

WARNING: Flammable materials can cause an explosion or fire. Do not use flammable solutions or materials in tank(s).

FOR SAFETY: When using machine, follow mixing and handling instructions on chemical containers.

ATTENTION: If using powdered cleaning chemicals, mix prior to adding.

2. Attach solution hose. (Located front of machine.) NOTE: Make sure the quick disconnects snap together firmly. As you do this, always inspect hoses for cracks or fraying. Do not use if hoses are damaged.

3. Attach other end of solution hose to wand.

4. Attach vacuum hose to recovery tank.

5. Plug machine's cord into a grounded wall outlet. FOR SAFETY: Do not operate machine unless cord is properly grounded.

FOR SAFETY: Do not operate machine with the use of an extension cord.

WARRANTY

Mytee Products, Inc. endeavors to provide high quality products and product support to its customers and therefore backs up all of its new products purchased from Mytee Products Inc. ("Mytee") or any authorized Mytee distributor/service center with this limited warranty. This limited warranty begins on the date of the customer's purchase and is valid and available to the original purchaser only. Mytee's products are for commercial use only and are not intended for personal, family or household uses.

HOWEVER, OTHER THAN SET FORTH HEREIN, MYTEE GIVES NO WARRANTY, EXPRESS OR IMPLIED, AS TO DESCRIPTION, QUALITY, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, PRODUCTIVENESS, INFRINGEMENT, OR OTHER MATTER, OF ANY GOODS WHICH MYTEE SHALL SUPPLY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. MYTEE SHALL IN NO WAY BE RESPONSIBLE FOR THE PROPER USE AND APPLICATION OF THE GOODS. MYTEE NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR MYTEE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF MYTEE'S GOODS. THIS LIMITED WARRANTY POLICY MAY BE CHANGED OR WITHDRAWN BY MYTEE AT ANY TIME WITHOUT NOTICE

WEAR PARTS 90-DAY LIMITED WARRANTY: Mytee will replace all wear parts for 90 days from the date of original purchase. "Wear parts" are items which wear out as a result of usage or the passage of time and are consumed despite attempts to maintain them, such as gaskets, wheels, brass, cords, wires, electrical terminals, hoses, switches, thermostats, plastisol parts, filters, bearings, brushes, solenoids, o-rings, bulbs, heating elements, castors, or other parts deemed wear items in Mytee's sole discretion. This warranty covers the cost of replacement only and does not cover shipping or labor costs.

PUMP, VACUUM MOTOR AND HEATER 1-YEAR LIMITED WARRANTY: Mytee warrants that pumps, vacuum and floor machine motors, and heaters will be free from manufacturing defects, defects in workmanship, and defects in material for one (1) year from the date of original purchase. This warranty does not apply and is void if the pump, vacuum motor, or heater has worn brush motors, water damage, chemical build-up, chemical damage, or evidence of abuse, neglect or tampering. This warranty covers the cost of replacement or repair only and does not cover shipping or labor costs.

HOUSING 5-YEAR LIMITED WARRANTY: For five (5) years from the date of purchase, Mytee warrants a percentage of the cost of replacement of rotationally-molded housings pro-rated as follows: Mytee will pay 100% of replacement cost in the first year from the date of purchase, 75% of replacement cost in the second year from the date of purchase, 50% in the third year, 25% in the fourth year, and 12% in the fifth year. Replacement cost does not include the cost of shipping or labor.

LIMITATION OF DAMAGES: THE REMEDY OF REPLACEMENT OR REPAIR OF ANY DEFECTIVE GOODS SHALL BE THE EXCLUSIVE REMEDY UNDER ANY WARRANTY MADE BY MYTEE, WHETHER EXPRESS OR IMPLIED. IN NO EVENT SHALL MYTEE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, PROPERTY DAMAGES, OR PERSONAL INJURIES.

All limited warranties are void for, and Mytee does not warrant in any way, any product that evidences misapplication, improper installation, abuse, lack of maintenance, negligence in use or care, abnormal use, alteration of design, use of incompatible or corrosive chemicals, use in a rental service, and/or servicing, installation of parts, or repairs by anyone other than Mytee or a Mytee authorized distributor or service center.

Mytee may make changes in products it manufactures and markets at any time; these changes are made without obligation to change, retrofit, or upgrade any product previously sold or manufactured. Mytee has no obligation to honor the limited warranties set forth herein unless the original purchaser, promptly upon discovering the warranty claim and prior to continuing to use the product, contacts Mytee or a Mytee authorized distributor or service center to describe the claim and to receive and follow instructions for documenting and resolving the claim. In addition, the purchaser must provide the product to which the claim applies to Mytee or a Mytee authorized distributor or service center for a thorough inspection.

If any provision or portion of this limited warranty policy is found to be unenforceable, then the remaining provisions and portions shall remain valid and enforceable. If any provision or portion of this limited warranty policy is found to be limited by law, then that provision or portion shall be construed to make it effective within the bounds of law. For example, if there are legal limitations on the duration of warranties, the warranties made herein shall be construed to have the minimum duration required by law, or, if there are legal limitations of exclusion of remedies, the exclusions made herein shall be construed to apply to the fullest extent possible without violating the law.

The validity, construction and performance of this warranty policy shall be governed by the laws of the State of California, without respect to conflicts of laws principles. The exclusive jurisdiction of any legal action arising from or related to this warranty policy shall be in the State of California and no legal action shall be commenced elsewhere.

CARPET CLEANING

7. Turning machine on.

- Turn pump switch on.
- Pull up on power prime lever for 30 seconds. This will prime the pump.
- Pull up on wand lever to release air in the line. Hold lever until you have a steady flow of water coming out of the wand.
- Once pump is primed and you have pressure in the solution line, turn on heater switch(s) (if model is equipped with heater) and wait a few minutes for water to heat up.
- Once water is heated, turn on vacuum motors and begin cleaning.

NOTE: When cleaning upholstery, always check manufacturer's cleaning instructions.

TILE CLEANING

- Work away from outlet and power cord to prevent cord damage.
- Use a recommended foam control solution in the recovery tank to prevent vacuum motor damage. Periodically check for excessive foam buildup in solution tank, and recovery tank.
- To clean heavily soiled areas, repeat cleaning path from different direction.
- When ball float shuts off vacuum, it is time to empty the dirty water from the recovery tank, and refill solution tank.
- After cleaning, relieve water pressure from tool before disconnecting hose. Squeeze trigger for five seconds after turning main power switch off.

MAINTENANCE

FOR SAFETY: When servicing machine, unplug cord from wall outlet.

- Turn machine off and unplug power cord.
- Remove solution & vacuum hose.
- Attach 45°-drain elbow to dump valve and lift up drain valve lever to empty recovery tank.

DRAINING RECOVERY TANK

MACHINE MAINTENANCE

To keep machine in good working condition, simply follow machine's daily and weekly maintenance procedures. Check valves and relief valves should be replaced annually.

FOR SAFETY: When servicing machine, unplug cord from wall outlet.

DAILY MAINTENANCE

- Empty and rinse out solution tank thoroughly.
- Wipe off power cord and check for damage, replace if necessary. Coil cord neatly after use.
- Clean machine with an all purpose cleaner and damp cloth.

WEEKLY MAINTENANCE
(EVERY 20 HOURS OF OPERATION)

- Flush solution system with Mytee system maintainer to dissolve normal chemical buildup.
 - Pour 7.5L (2 gal) of hot water 60°C (140°F) into solution tank. Add Mytee system maintainer according to mixing instructions on bottle

FOR SAFETY: When using machine, follow mixing and handling instructions on chemical containers.

- Operate machine for one minute.
- Shut off machine and allow remaining solution to break down chemical buildup overnight.
- Next day, spray out remaining solution and flush system with 11L (3gal) of clean water.

2. Inspect vacuum hoses for holes and loose cuffs. Drain and dry the vacuum hose as well.

3. Inspect spray pattern for clogging. If clogged, remove spray tips and soak them in a recommended liquid neutralizer for up to six hours. To remove spray tip, twist spray tip body counter-clockwise.

4. Lubricate wheels with water resistant oil.

5. Inspect machine for water leaks and loose hardware.

6. Remove float shut-off screen from recovery tank and clean.

NOTE: The float shut off screen is not glued on. Simply pull it off.

STORING MACHINE

1. Before storing machine, be certain to completely drain and rinse tanks of all water and solution.

2. Drain and dry the vacuum hose as well, using the drain hose provided

3. Store machine in a dry area in the upright position.

4. Open recovery tank cover to promote air circulation

ATTENTION: Do not expose to rain. Store indoors.

ATTENTION: If storing machine in freezing temperatures, be sure that machine and solution system are completely drained and dry.

WWW.MYTEE.COM

PHONE: 858-679-1191 | FAX: 858-679-7814
MYTEE PRODUCTS, INC. | 13655 STOWE DRIVE | POWAY, CA 92064



M-SERIES™

M-12



Instruction Manual & Safety Guide



STEP 1

FILL
SOLUTION
TANK.




STEP 2

ATTACH HOSES.

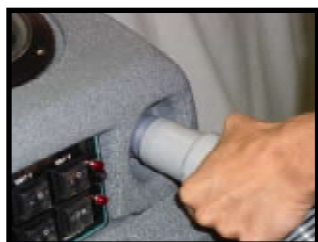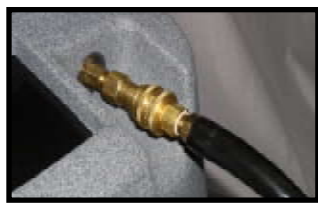

STEP 3


CARPET:
ATTACH
HOSES TO
WAND.

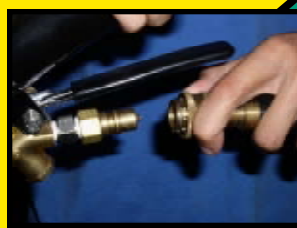

TILE:
ATTACH HOSES
TO SPINNER.

STEP 4

PLUG UNIT
INTO (2) 20 AMP
GROUNDED
OUTLETS.

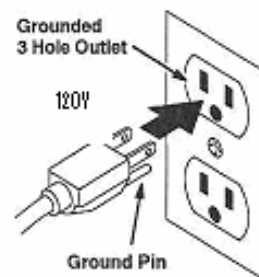


STEP 5

ENSURE
DUAL
CIRCUIT
FINDER IS
LIT.



STEP 6

CARPET:
TURN ON
PUMP/HEAT
SWITCH.
PRIME PUMP
FOR 30
SECONDS.

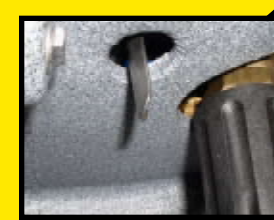

TILE:
TURN ON HIGH
PRESSURE
SWITCH. PRIME
PUMP FOR 30
SECONDS.

STEP 7

CARPET:
KEY WAND
UNTIL YOU
HAVE A
STEADY
FLOW.



TILE:
KEY TRIGGER ON
SPINNER UNTIL
YOU HAVE A
STEADY FLOW.

STEP 8

CARPET:
WAIT 8 - 10
MINUTES
FOR UNIT TO
PRE-HEAT.



TILE:
PRE-TREAT
TILE AND
GROUT WITH
CHEMICAL.

STEP 9

CARPET ONLY:
RE-KEY WAND
UNTIL HOT
WATER BEGINS
FLOWING.



TILE:
HOOK UP
PUMP-OUT
AND FILL
HOSES. TURN
ON PUMP-OUT.

STEP 10

TURN ON THE
VACUUM MOTORS.



STEP 11


CARPET:
BEGIN CLEANING.
MAKE TWO DRY
PASSES TO EVERY
WET PASS.



TILE:
BEGIN
CLEANING.
MAKE TWO
DRY PASSES
TO EVERY
WET PASS.

STEP 12

FOR UPHOLSTERY
CLEANING, UNPLUG
WAND AND ATTACH
UPHOLSTERY
TOOL.

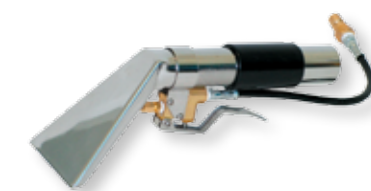

STEP 13

WORK AWAY
FROM CORDS
TO AVOID
DAMAGE.




STEP 14

USE A
DEFOAMER
IN YOUR
RECOVERY
TANK.



STEP 15

TO CLEAN HEAVILY
SOILED AREAS,
REPEAT CLEANING
FROM DIFFERENT
DIRECTION.

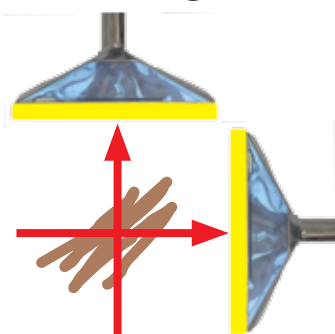


STEP 16

WHEN FLOAT
SHUTS OFF
VACUUM, EMPTY
TANKS.



STEP 17

WHEN WORK
IS COMPLETE,
UNPLUG CORDS
AND HOSES.

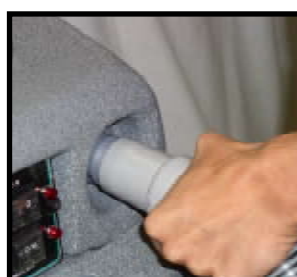

STEP 18

WRAP AND CLEAN
HOSES. CLEAN
ALL TANKS.



FAQ'S FOR M-SERIES — M-12

Q: How much does the M-12 weigh and what are the shipping dimensions?
A: 192 Pounds - Box dimensions are 20"x37"x50". Must ship motor freight.

Q: What comes standard with the M-12?
A: The M-12 comes with one hose hanger (H375), one drain spout (H226), and two extension cords (E530). Please see owner's manual for breakdown.

Q: Does Mytee recommend a tool for the machine?
A: A variety of tools can be used with the unit, including our 8300 wand, 8400 upholstery tool, and spinner hard surface tools.

Q: Where do I plug the machine in?
A: The M-12 requires two separate 20A grounded circuits. Please note: GFI outlets may trip before the breaker setting.

Q: How will I know when I find two separate circuits?
A: The amber indicator light on the switch plate will illuminate when the power cords are plugged into two separate circuits.

Q: What is the proper pre heat cycle for the M-12?
A: Turn pump switch to the pump/heat position and prime pump through the solution hose and the tool. Then turn the heater switch to the on position. Let the machine sit idle for 8-10 minutes. Spray tool until you feel the hot water from the jet. Let machine sit idle for 3-5 minutes. This will insure the water in the heater and hoses will be at the hottest point to start cleaning.

Q: How do I prime the pump for M-12?
A: Hook up hoses and tool to the machine. Turn then press the prime lever to release the air from the pump head.

Q: Are the pumps re-buildable for the M-12?
A: Yes, both the seals and the pistons have repair kits available. Please see the pump manual that shipped with your machine for the maintenance schedule.

Q: Is there anything I can do to increase the expected life of my machine?
A: Running the vacuum motors with the tank empty and lid off will allow excess moisture in the vacs to dry off. You should also run a System Maintainer through the system to keep the hoses, pump, and heater clean and free of debris.

SAFETY PRECAUTIONS

This machine is intended for commercial use. It is designed to clean carpet and upholstery in an indoor environment and is not constructed for any other use. Use only recommended cleaning solutions and accessory tools.

All operators must read, understand and practice the following safety precautions.

The following safety alerts symbols are used throughout this manual as indicated in their description:

⚠ WARNING: To warn of hazards or unsafe practices which could result in severe personal injury or death.


FOR SAFETY: To identify actions which must be followed for safe operation of equipment.

The following information signal potentially dangerous conditions to the operator or equipment:

FOR SAFETY:

- Do not operate machine:
 - Unless trained and authorized.
 - Unless operator manual has been read and understood.
 - In flammable or explosive areas.
 - Unless cord is properly grounded.
 - With damaged cord or plug.
 - If not in proper operating condition.
 - In outdoor areas.
 - In standing water.
- Before operating machine:
 - Make sure all safety devices are in place and operate properly.
- When using machine:
 - Do not run machine over cord.
 - Do not pull machine by plug or cord.
 - Do not pull cord around sharp edges or corners
 - Do not unplug by pulling on cord.
 - Do not stretch cord.
 - Do not handle plug with wet hands.
 - Keep cord away from heated surfaces.
 - Report machine damage or faulty operation immediately to your distributor.
 - Follow mixing and handling instructions on chemical containers.
- Before leaving or servicing machine:
 - Turn off machine.
 - Unplug cord from wall outlet.
- When servicing machine:
 - Unplug cord from wall outlet.
 - Avoid moving parts.
 - Do not wear loose jackets, shirts, or sleeves.
 - Use manufacturer supplied or approved replacement parts.

Machine must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed in accordance with all local code and ordinances. Do not remove ground pin; if missing, replace plug before use.

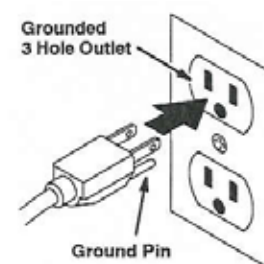

⚠ WARNING: Hazardous Voltage. Shock or electrocution can result. Always unplug machine before servicing.

⚠ WARNING: Flammable materials can cause an explosion or fire. Do not use flammable materials in tank(s).

⚠ WARNING: Flammable materials or reactive metals can cause an explosion or fire.

TROUBLESHOOTING

- UNIT WILL NOT TURN ON:**
PROBLEM: Not plugged in.
SOLUTION: Plug machine in proper outlet.
PROBLEM: Circuit breaker has popped.
SOLUTION: Reset circuit breaker. Make sure no other items are running on the same circuit as machine. Outlet must be a 20-amp circuit.
- PUMP IS NOT RUNNING PROPERLY:**
PROBLEM: Quick disconnects are not completely locked together.
SOLUTION: Snap quick disconnects firmly together.
PROBLEM: The solution tank is empty.
SOLUTION: Fill the solution tank up with a premixed liquid detergent.
PROBLEM: Jet on upholstery tool is clogged.
SOLUTION: Clean jet with soft wire brush or remove jet and flush clean.
PROBLEM: Filters are clogged.
SOLUTION: Remove filters and rinse clean with water.
PROBLEM: Heater is blocked with hard water deposits.
SOLUTION: Flush out heaters with Mytee Products, Inc. system maintainer solution.
PROBLEM: Brass check valve is stuck.
SOLUTION: Replace with new check valve.
PROBLEM: Pump wire has become disconnected.
SOLUTION: Reconnect wire.
PROBLEM: Switch on switch plate is bad.
SOLUTION: Replace switch.
PROBLEM: Pump motor brushes are worn out.
SOLUTION: Replace pump.
PROBLEM: Prime Valve is open.
SOLUTION: Check to make sure valve is not touching opening.
- HEATER IS NOT WORKING PROPERLY:**
PROBLEM: The back up sensor, mounted on the heater has popped.
SOLUTION: Reset sensor by pushing in button.
PROBLEM: Heating element is bad.
SOLUTION: Replace element.
- VACUUM MOTOR IS NOT WORKING PROPERLY:**
PROBLEM: Hose not connected tightly to upholstery tool or machine.
SOLUTION: Connect hose tightly.
PROBLEM: Drain valve is not shut completely.
SOLUTION: Close drain valve completely.
PROBLEM: Vacuum tank lid is not on tightly.
SOLUTION: Secure the vacuum tank tightly.
PROBLEM: Ball float is shut off.
SOLUTION: Empty the vacuum tank of all wastewater.
PROBLEM: Water is coming out of vacuum motor.
SOLUTION: Use a low foaming detergent.
PROBLEM: Upholstery tool or wand clogged with hair, carpet fibers or debris.
SOLUTION: Clean upholstery tool or floor wand jets.
PROBLEM: Ball float is not installed correctly.
SOLUTION: Make sure that ball float is firmly installed on the elbow.

OPTIONAL ACCESSORIES

The following accessories and tools are available for this unit, and can be purchased separately at your local Mytee dealer. You can find more information on any of them at www.mytee.com

