Product Manual

QMOD-HDMI 2

QMOD™ HD Modulator-IPTV Encoder

September 25, 2014 Preliminary



Table of Contents

Table of Contents	
Overview	
Installation - Settings	
Front Panel Menus	
Quick Setup Menus	
Program A and Program B	
Common	6
Web pages	7
Web Pages via USB	8
Firmware Update	9
Installation - Sources	10
Process	10
Video/CC	10
Audio Inputs	10
Ethernet	
EAS	10
Multicast	
HDMI Connectivity	11
Windows 7/8 Digital Signage Players	
Apple Digital Signage Players	
Linux Signage Players	
Satellite/Cable Boxes	
Blu-Ray Players	
Other Open HDMI Sources	
Rack Mounting	
Specifications	
Safety Instructions	
Limited Warranty and Disclaimer	



DIGITAL CREATOR

Manufactured under license from Dolby Laboratories. Dolby and the Double-D symbol are registered trademarks of Dolby Laboratories.

2

Overview



Employing a totally new HD encoding technology, the dual-channel QMOD-HDMI 2 continues the QMOD track record for quality and innovation, setting a new benchmark for features and performance. Designed for digital signage and HD media applications, the QMOD-HDMI 2 can accept PC 1080p/720p 60/24Hz video, as well as standard 59.94/29.97 refresh rates.

Sources

- Two HDMI inputs (non-HDCP), 1080p 60/24 and 1080i/720p 59.94/60 Hz HDMI, also accepts embedded Dolby Digital AC-3 and PCM audio
- Two Composite video inputs for encoding, captioning, or EAS use
- Stereo and coax SPDIF audio inputs

Encoding

- Creates a high-definition 720p/1080i MPEG-2 transport stream for broadcast that includes two HD programs
- Converts stereo and PCM to stereo Dolby Digital, can create dual-language SAP audio for each program
- Includes captioning from Line 21 data on composite video inputs
- New! Full scaling now standard, allows precise formatting of digital signage, accepts 1080p video, compensates for 60/30 Hz consumer source, and scales all video to a set resolution
- QSDI-Dual 2-channel upgrade key allows selection of inputs to create 2 HD channels

Output

- Delivers a fully agile QAM 64/256 digital cable channel 2-135
- Up to 270 HD Programs/Channels per system
- Streams IPTV from GigE Ethernet port
- Distributes channel over an on-site broadband cable system with adjustable output level to 29 dBmV, compatible with all cable format broadband systems

Operation

- Sets up with front-panel buttons and easy to use menus, including inputs, encoding, channel, and RF options.
- Onboard Web page for setup and monitoring, also accessible from front-panel USB port
- Control with IP Telnet commands
- Saves power and rack space using efficient design
- Includes compact switching power supply
- Mounts in optional 1RU single (RK1) or dual (RK2EZ) 19" rack kits
- Meets RoHS safety and California energy standards

Installation - Settings

There are 3 ways you can change the settings:

- **Front Panel.** Press the SETUP button use the Up/Down buttons to move through menus, Left/Right to change settings, then press SELECT to store the changes at each step.
 - Select a menu group (Quick, A, B, QMOD), then SELECT to view that group's menus
 - o Press SETUP to move back to other menu groups
 - o Pressing the left and right buttons together will reboot the unit
- **Ethernet**. Access the onboard Web pages. Helpful for remote access when system is fully integrated with site Ethernet.
- **USB-Web.** Access Web pages from front-panel USB port, simplest solution for full setup, requires no IP setup or connection, connect from the front of the equipment rack

Front Panel Menus

There are four groups of menus you can choose from:

- **Quick Setup** supplies just the few steps needed to output the source as a channel.
- **Program A** goes deeper in to all the options for the first source
- **Program B** does the same for the second source, if that option is enabled
- **Common** menus set the core values for the entire channel, such as IP address, level, cable plan, and other options

Quick Setup Menus

This series is designed for a quick setup for testing and integration.

Channel	Sets the physical channel, 2-135
RF Level	Sets the RF level for the channel
	29 25 21 17 13 9
Video A Input	Selects the video input for Program A
	HDMI 1 HDMI 2 Video 1 Video 2
Audio A Input	Selects the audio input for Program A
	None HDMI 1 HDMI 2 SPDIF 1 SPDIF 2 Analog 1 Analog 2
Video B Input	Selects the video input for Program B
	None HDMI 1 HDMI 2 Video 1 Video 2
Audio B Input	Selects the audio input for Program B
	None HDMI 1 HDMI 2 SPDIF 1 SPDIF 2 Analog 1 Analog 2

At this point, you should be able to view the QMOD channels on a test TV. Note that setting Video B input to **None** will automatically put the encoder in to single-channel mode, and revert to 2-channel mode when inputs are selected for Program A and B.

A QMOD Channel, or any QAM Channel, can include two video streams, called Programs. It's really one stream that contains both videos. The TV figures out which to play using the channel ID, typically something like channel IDs 2.1 and 2.2, 3.1 and 3.2 and so on. For marketing purposes we use the popular term "2-Channel" the general public understands, for integrators we use the more correct term "2 Programs".

Program A and Program B

This series of menus lets you drill down to all the possible options for either Program.

Audio 1 Input	Sets audio for the currently selected source. If you plan on switching sources in your application, select each video input, then select the associated audio. The audio will then automatically follow the selected video input. None HDMI 1 HDMI 2 SPDIF 1 SPDIF 2 Analog 1 Analog 2
Audio 1 Format	Selects audio format for stereo PCM or analog audio. Incoming Dolby Digital AC3 audio encoding will be passed through. AC3 MP12
Audio 1 Lang	Displays metatext for SAP audio channel language. English Spanish Portuguese French German
Audio 2 Input	Sets the source for the second SAP audio track for the selected video input. Audio will be in MPEG 1 Layer 2 format None HDMI 1 HDMI 2 SPDIF 1 SPDIF 2 Analog 1 Analog 2
Audio 2 Lang	Displays metatext for SAP audio channel language. English Spanish Portuguese French German
Video Input	Select the video input None HDMI 1 HDMI 2 SPDIF 1 SPDIF 2 Analog 1 Analog 2
Auto Out Res	When set to On , the QMOD will automatically output the program as the same resolution as the source. On Off
Resolution	When the scaling option is active, you can specify the output resolution. When it's not, the output will be set by the input. 1080i 720p 480p 480i
Bitrate (Mbps)	Bitrate is adjustable in half steps from 10-25. Default rate will be 18 Mbps, set to 18 or below for dual-channel operation.
IP Bit Rate	Only visible when QMOD outputs on Ethernet only. Selects Constant or Variable rate
Chan Major ID	Major virtual channel ID for program. Default is 000, will automatically insert the physical channel number as the Major ID.
Chan Minor ID	Minor virtual channel ID. Default is 1, if set to 000, channel ID will only use the Major channel ID
Chan Name	Enters channel short name, up to 7 characters. QMOD A or QMOD B is default text. Press right or left arrow to start editing, use Up and Down arrows to select character.
No Vid Color	Sets background color displayed when no video is present Orange Purple (default) Green
Major ID	Major virtual channel ID for program. Default is 000, will automatically insert the physical channel number as the Major ID.
Minor ID	Minor virtual channel ID. Default is 1, if set to 000, channel ID will only use the Major channel ID
Name	Enters channel short name, up to 7 characters. "QMOD" is default text. Press right or left arrow to start editing, use Up and Down arrows to select character.
Sync Trig Level	May help how fine details are displayed 1-4
CC Source	Selects source for captioning. Video 1 and 2 provide Line 21 captioning data None Video 1 Video 2
Horiz Freq	Shows horizontal frequency of source
Vertical Freq	Shows vertical frequency of source
Lines	Shows number of lines in source video


Common

This series of menus sets global values for QMOD operation


Channel	Sets the physical channel, 2-135
QAM	Selects QAM 64 or QAM 256 (default). Fixed at 256 when 2-channel mode is enabled.
	Continuous Wave is often used to test the channel with a meter.
	256 64 CW
Cable format	Standard cable frequencies (default)
	HRC – same as Standard, channels 5 and 6 slightly different
	IRC – All channel frequencies are different than the standard cable setting
RF Level	Sets the RF level of the channel.
	29 25 21 17 13 9
IP Mode	Selects Static (default) or DHCP IP modes
	 DHCP will select new address, will switch to static if network not present
	IP Address will show change when you select DHCP
	 If you go back to Static, the address you defined in that mode will be set
IP Address	192.168.1.231
	Left/Right steps through each group, click Up or Down arrow to step one at a time, hold
	down to move faster. Address also appears on LCD when QMOD restarts.
Gateway	255.255.255.000
,	Quad address – Left/Right steps through each group, click Up or Down arrow to step one
	at a time, hold down to move faster.
Subnet Mask	255.255.255.0
	Subnet has a limited range of combinations, so this function is simplified
	Left/Right steps through each group, click Up or Down arrow for options
Telnet Port	2728 (default)
	IP port for Telnet communication – Click or hold Up or Down to set.
Output Stream	Select outputs for stream, IP menus only appear when selected.
	RF IP RF+IP
QMOD IP Port	Enter IP address for IPTV
UDP Mode	Selects UDP mode, sub menus change depending on mode
	Unicast Multicast
DstMultiAddr	Enter IP address for multicast
Dest IP Addr	Enter destination IP address for unicast
Dest IP Port	Enter UDP port for unicast or multicast
MAC/SN	Shows network MAC address
,	Ex: 00:04:9F:14:30:40 (last 2 bytes is the serial number)
LCD Contrast	Contrast 1-15
LCD Bright	Display brightness 1-16
Temperature	Internal temperature
Fan Speed	Set fan speed in percent
Backlight	Display brightness 1-10
CVCT	Activates inclusion of virtual channel ID and short Name in the video stream.
	On (default) Off
FW version	Firmware version
1 44 46131011	· ····································

Web pages

The Web pages provide the same settings as the front-panel menus in simple Web forms (QMOD-HDMI1.5 pages shown as an example).

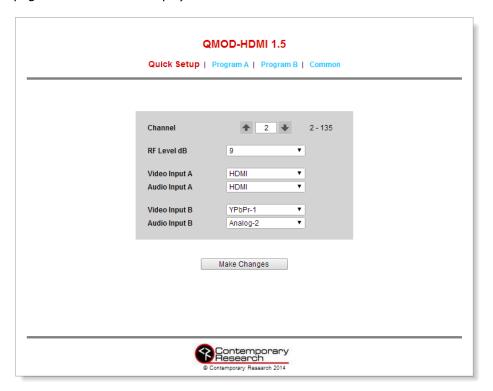


Quick Setup shows the basic setup options.

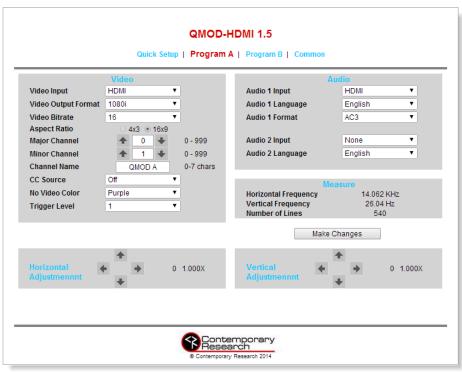

The **Program A** and **Program B** pages offer a full range of setup features for each program.

7

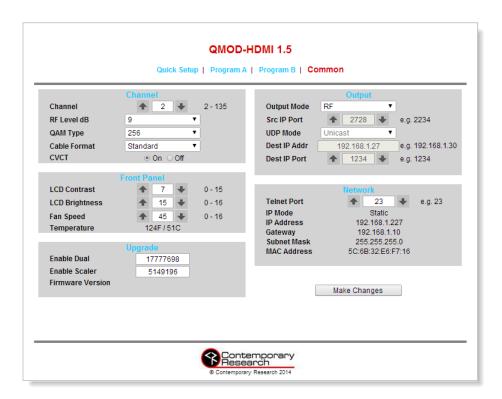

The **Common** pages change global values for the QMOD.


Web Pages via USB

When you don't have an Ethernet connection, you can view the pages through the front USB port.

- Connect a USB cable from the QMOD to your Windows PC, unit will auto-install
- Go to Control Panel Network and Internet Change Adapter Settings
- Right-click the **USB Ethernet/RNDIS Gadget**
- Select **Internet Protocol Version 4**, select **Properties** and enter this info:
 - IP Address: 192.168.277.228Subnet Mask: 225.225.225.0
 - All else blank
- Enter 192.168.227.227 in your browser to see the QMOD Web pages


Firmware Update

There's a whole new firmware process for the new series of QMODs. The installer you download from our website will create a standard Windows application.

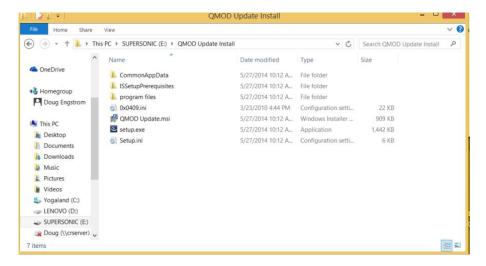

When you open the folder, run the Setup.exe file, as you would for any new software app.

After you run the installer, look in All Programs, find the Contemporary Research folder, then open the QMOD Updater folder. Click on the file with product and version you want to install to run the app:

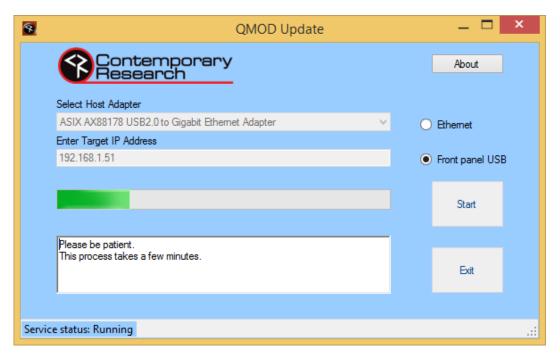

You have two options for firmware updating, Ethernet or Front panel USB. Ethernet is always the quickest, USB is handy when you don't have an IP connection. The update process via USB will usually take longer than IP.

Installation - Sources



Process

- Connect source(s) to appropriate inputs
- Perform **Quick Setup** from front panel to test operation and channel
- Use USB Web pages or front panel menus to compete the setup
- The front panel LEDs will light if 2-channel or scaling options are enabled

HDMI

- Source can be 1080p 60/59.94/24 Hz, 1080i 60/59.94 Hz, 720p 60/59.94 Hz, or 480i 29.97 Hz
- HDMI sources with HDCP will not pass through, use Kramer PT-1C if needed

Video/CC

• The Video/CC input can be used to create an SD digital channel, or to feed Line 21 captioning data

Audio Inputs

- The Coax and analog Stereo inputs can be assigned to any input
- Dolby Dolby Digital will be passed through, stereo is converted to Dolby Digital stereo
- When using 2 language tracks, the first will be Dolby Digital, the second MPEG1 Layer 2 stereo

Ethernet

- The IP and Telnet ports are assigned via front panel or Web menus
- Streaming options can be set locally or remotely

EAS

- EAS (Emergency Alert System) operation is triggered by a latching input on the SW and Ground pins, a 5-12 VDC level on the V+ and Ground pins
- The assigned EAS inputs, usually Video and Stereo, will broadcast on both programs when active

Multicast

Multicasting streams require a router with Multicast capability – the router creates the copies needed for user requests. Use IP addresses 224.0.0.1 through 239.255.255.255, which are set aside for multicast streams.

HDMI Connectivity

Because HD Modulators cannot use video from HDCP sources, the ability to broadcast HDMI video depends on the nature of the video source, PC operating system, and interfaces used to make the connection.

Windows 7/8 Digital Signage Players

You can feed you Win 7/8 PC or player's HDMI directly to our HDMI inputs. Windows (unlike Apple) does not turn on HDCP when showing non-proprietary content. By the way, 1080p looks scary good on new-gen QMODs, partly because of the direct-digital connection and our advances encoder. The QMOD does supply EDID so you can select the right resolution. Generally, the advanced scaling option isn't needed if you supply content at 720p or 1080p, and you have about 10% safe area on the edges. If you need edge-to-edge presentation or the content is more 16:10 VGA, you'll need scaling to nail down the image.

Apple Digital Signage Players

The Apple OS keeps HDCP on, regardless of the type of content. We recommend using the **Kramer PT-1C** for use with Apple HDMI. Generally, the first three switches on the interface would be off, the fourth (Disable HDCP) needs to be on.

Linux Signage Players

Linux-based players such as **Brightsign** do not employ HDCP. We're researching if that's also true with Key West, SpinetiX, AMX, and others.

Satellite/Cable Boxes

Historically, DirecTV does not turn on HDCP for commercial and residential applications; there may be exceptions for video on demand content.

Cable receivers definitely turn on HDCP, and likely Dish Network as well (that fact has not been confirmed). Plan on using the Component outputs to feed other QMODs with those input options. We have not confirmed if the Kramer PT-1C will pass HDMI for those sources. Also, interfaces such as the Kanex ATV Pro can convert HDMI to RGBHV. As the content provider's public viewing contract with the site allows re-broadcast of specific channels, this is not a usage issue.

Blu-Ray Players

While HDMI applications are OK for digital signage and public viewing of cable/satellite channels, use of Blue-Ray content is murky. The HDMI's HDCP is always locked, even for content you've created. The Kramer PT-1C will no pass through Blu-Ray content if the HDCP switch is on[while interfaces similar to the Kanex that convert HDMI to RGBHV will work. We leave those issues up to the end user.

Other Open HDMI Sources

Other sources that do not have HDCP on the HDMI output are:

- Contemporary Research 232-ATSC+1 HDTV tuners
- SDI to HDMI adapters

Rack Mounting


Three options are available for rack-mounting QMOD modulators



RK2EZ Dual Rack Kit with Tie Bar Mounting

QMOD enclosures have a slot in the bottom middle of the case. This will accept a tie bar that will lock the two enclosures together without taking the cases apart. Do not mount the QCA9-33 or QDA4-45 units next to QMODs, as the units will block flow-through fan ventilation.

- 1. Check that your enclosures have the tie bar slot.
- 2. Slide the included tie bar into the side of one unit and attach with the included screws.
- 3. Slide the other unit into the tie bar, and attach the screws
- 4. Add the rack mounts to the sides.

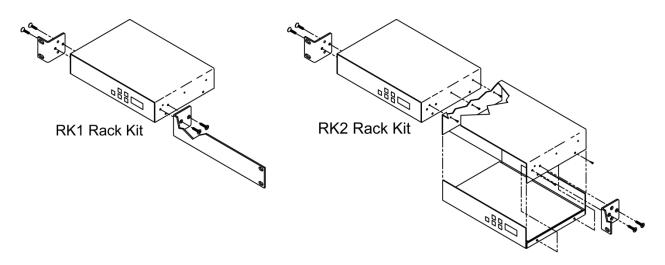

RK1 Single Unit Rack Mount

Attach the long and short rack ears to the side and towards the front of the unit with the four (4) supplied 8-32 by 1/4" (black) countersunk screws.

RK2 style – Locking Cases together

- 1. Remove top cover of the first unit by removing the ten (10) black screws.
- 2. Attach cover of first unit to the side of the second with three (3) supplied 4-40 by 1/4" (silver colored) panhead screws and split lock washers. Note that only one side of the second unit has the (3) built in nuts to accept the screws above.
- 3. Reinstall the bottom/chassis of the first unit underneath its cover and attach with just eight (8) of the screws removed in step 1.
- 4. Attach short rack ears to the side and towards the front of each unit with the four (4) supplied 8-32 by 1/4" (black) countersunk screws.

Specifications

Physical 8.5" [216mm] wide x 1.73" [62mm] height (1RU) x 6.0" [153mm] deep

1.5 lbs [0.68kg]

+32° to 122° F operating temperature, convection cooled

Rack mounting for one or two units side-by-side optional (RK1, RK2EZ)

Front Panel Select and directional buttons for menu setup

Menu LCD, Blue with 2 lines of 20 white characters each

Encoding MPEG2 Profile:MP@HL for HD, MP@ML for SD

1080i, 720p, 480p, and 480i resolution

Up to 2 programs in MPEG2 transport stream for QAM and IPTV

Video Encoding bitrate 10-25 Mbps in half-step settings

Dolby Digital stereo or MPEG1, Layer 2 audio

MTS Dual-language capability, 2nd language will be MPEG1

Full scaling for video conversion and formatting Dual-channel operation with optional upgrade key

Modulation Switchable 64/256 QAM, J83 Annex B, Interleaving Modes (128,1)

MER 38 dB typical

Compliance FCC Class B, ROHS, meets California standards

Power 2.1mm coaxial jack (inside center conductor positive)

1.1A maximum, 11.5 to 13.5 VDC, 12 VDC typical

Rear Panel

EAS 3 GPI Pins for latching control, SW for closure, V+ 5-12 VDC, Ground

Video Inputs **Two HDMI** (non-HDCP), up to 1080p, 59.94 or 60 Hz

Two Composite Video/CC: RCA female (480i), 29.97 Hz, also used for Line 21 captioning data

Two Digital SPDIF: Coax and TOSlink optical output, PCM 48K sample rate

Audio Inputs Two Analog L and R: 2 stereo RCA female jacks

Inputs assignable to follow video inputs

'F', female, 75 ohm impedance

RF Out Agile, channels 2-135 (48-860 MHz), standard, HRC, or IRC spacing

6 MHz bandwidth fits any open channel without interference to adjacent channels

1 KHz resolution, +/- 30 ppm accuracy, +/- 35 ppm stability 29 dBmV typical output power, attenuated in 5 steps, approx 4 dB

Includes PS12-1 Switching power supply, 1A 12 VDC, fits in typical AC power strips

PS12-4Y 4A power supply with Y cable to drive 2-4 QMODs (free at time of order)

Options RK1 Single Rack Kit, RK2EZ Dual Rack Kit

Safety Instructions

Read before operating equipment.

- 1. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 2. Power Sources Use supplied or equivalent UL/CSA approved low voltage DC plug-in transformer.
- **3.** Outdoor Antenna Grounding If you connect an outside antenna or cable system to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- **4.** Lightning Avoid installation or reconfiguration of wiring during lightning activity.
- **5.** Power Lines Do not locate an outside antenna system near overhead power lines or other electric light or power circuits or where it can fall into such power lines or circuits. When installing an outside antenna system, refrain from touching such power lines or circuits, as contact with them might be fatal.
- **6.** Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- **7.** Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts, resulting in a fire or electric shock. Never spill liquid of any kind on the product.
- **8.** Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- **9.** Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power supply cord or plug is damaged.
 - If liquid spills or objects fall into the product.
 - If the product is exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. An improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - If the video product is dropped or the cabinet is damaged.
 - When the video product exhibits a distinct change in performance, this indicates a need for service.

Limited Warranty and Disclaimer

Contemporary Research Corporation (CR) warrants this product to be free from defects in material and workmanship under normal use for a period of two years from the date of purchase from CR. Should such a defect occur CR will repair or replace, at their option, the defective product at no cost for parts or labor.

This warranty extends to product purchased directly from CR or an Authorized CR Dealer. Consumers should inquire from selling dealer as to the nature and extent of the dealer's warranty, if any.

All warranty claims must be shipped pre-paid to the factory. Call or fax to obtain a Return Material Authorization (RMA) number.

CR is not liable for any damages caused by any of its products or for the failure of any products to perform, including any lost profits, lost savings, incidental damages, or consequential damages. CR is not responsible for any claim made by a third party or made for you by a third party. This limitation of liability applies whether damages are sought, or a claim is made, under this warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if CR or an authorized representative of CR has been advised of the possibility of any such damages.

Some states do not allow a limitation of how long an implied warranty lasts. Some states do not allow the limitation or exclusion of incidental or consequential damages for consumer products. In such states, the limitation or exclusion of the Limited Warranty may not apply to you. This Limited Warranty gives you specific legal rights. You may also have other rights that may vary from state to state. You are advised to consult applicable state laws for a full determination of your rights.

Except as expressly set forth in this Limited Warranty, CR makes no other warranties, expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. CR expressly disclaims all warranties not stated in this Limited Warranty. Any implied warranties that may be imposed by law are limited to the terms of this Limited Warranty.