

Wireless 802.11g & USB 2.0 Print Server

User's Manual

Rev. 01 (Nov, 2005)

Made In Taiwan

TABLE OF CONTENTS

ABOUT THIS GUIDE	4
INTRODUCTION	5
PACKAGE CONTENTS	6
SYSTEM REQUIREMENTS	6
GENERAL FEATURES	7
PRODUCT VIEW	8
HARDWARE INSTALLATION	10
NETWORKING APPLICATION	10
INSTALLING THE PRINT SERVER	11
USING THE UTILITIES	12
AUTO-RUN INSTALLATION	12
PS-UTILITY	13
<i>Installing PS-Utility</i>	13
<i>Using PS-Utility</i>	14
PS WIZARD	17
PSM SETUP UTILITY INSTALLATION GUIDE	19
INSTALLATION PROCESS OF HP LASERJET 1000	25
<i>Installation Process of HP LaserJet 1000 in Win 2000</i>	25
<i>Installation Process of HP LaserJet 1000 in Win 98</i>	33
<i>Installation Process of HP LaserJet 1000 in Win XP</i>	39
PRINTING IN MAC OS	48
RENDEZVOUS USES IN MAC OS 10.2	48
SETTING UP APPLE TALK/LPR PRINTING	51
<i>For MAC OS X User</i>	51
<i>For MAC OS 9 User</i>	53
<i>For MAC OS 9 User</i>	54

WEB CONFIGURATION.....	57
WEB CONFIGURATION UTILITY	57
MANAGEMENT	58
<i>Management</i> → <i>System</i>	59
<i>Management</i> → <i>Wireless</i>	60
<i>Management</i> → <i>Network</i>	61
<i>Management</i> → <i>User</i>	63
CONFIGURATION.....	64
<i>Configuration</i> → <i>System</i>	64
<i>Configuration</i> → <i>Wireless</i>	66
<i>Configuration</i> → <i>Network</i>	68
<i>Configuration</i> → <i>User</i>	70
<i>Configuration</i> → <i>E-mail</i>	71
<i>Configuration</i> → <i>SNMP</i>	73
TOOLS.....	74
<i>Tool</i> → <i>Print Test</i>	74
<i>Tool</i> → <i>E-mail</i>	75
<i>Tool</i> → <i>Reset</i>	76
<i>Tool</i> → <i>Factory Reset</i>	77
<i>Tool</i> → <i>Firmware Upgrade</i>	78
<i>Tool</i> → <i>Backup</i>	79
HELP.....	80
PRODUCT SPECIFICATIONS.....	81
<i>Printer Connection</i>	81
<i>Network Connection</i>	81
<i>Network Protocol Support</i>	82
<i>Hardware</i>	82
<i>Operating System Support</i>	82
<i>Management</i>	82
<i>LEDs</i>	83
<i>Environmental and Physical</i>	83
<i>EMI Compliance</i>	83

ABOUT THIS GUIDE

This manual provides instructions and illustrations on how to use your Wireless USB Print Server, including:

- Chapter 1, **Introduction**, provides the general information on the product.
- Chapter 2, **Hardware Installation**, describes the hardware installation procedure for the product.
- Chapter 3, **Using the Utilities**, helps you to install and use the software.
- Chapter 4, **Printing in MAC OS**, lets you complete printing task through your print server in MAC OS environment.
- Chapter 5, **Web Configuration**, completes the configuration using the web browser.
- Chapter 6, **Product Specification**.

Please note that the illustrations or setting values in this manual are **FOR YOUR REFERENCE ONLY**. The actual settings and values depend on your system and network. If you are not sure about the respective information, please ask your network administrator or MIS staff for help.

INTRODUCTION

Congratulations on purchasing your Wireless USB Print Server, the easiest and fastest way to deploy printers on your network.

This compact print server can connect your network through an Access Point under the infrastructure mode, or can be used in ad-hoc mode for direct communication between PC/Notebook and print server anywhere you wish to locate wireless printer services. It manages the flow of print files from your workstation or file server to its connected printers, delivering print jobs to high-performance printers much faster than a file server or a PC acting as a print server can.

The Wireless USB Print Server features a Web-based Configuration Utility, which allows you to set up the print server through the web browser easily and quickly. It also includes a powerful software utility **PS-Utility**, a user-friendly program that allows you to complete further settings for the print server.

Package Contents

Unpack the package and check all the items carefully, and be certain that you have:

- ◆ One Wireless USB Print Server.
- ◆ One AC Power Adapter suitable for your country's electric power service.
- ◆ One Quick Installation Guide.
- ◆ One Installation CD-ROM containing the PS-Utility program and the User's Guide.

If any item contained is damaged or missing, please contact your local dealer immediately. Also, keep the box and packing materials in case you need to ship the unit in the future.

System Requirements

- ◆ Operating System:
 - Microsoft Windows 95/98/ME/NT/2000/XP/2003.
 - Apple Mac OS (with Apple Talk support).
- ◆ For Web Configuration:
 - Java-enabled web browser, such as Microsoft® Internet Explorer 5.0 and Netscape Navigator 6.0.


General Features

- ◆ Compact pocket size.
- ◆ Compliant with USB 2.0 high-speed printing.
- ◆ Fast 54Mbps WLAN connectivity based on IEEE 802.11g wireless high-speed standard.
- ◆ Multi protocol support is ideal for shared printing in mixed-LAN environments.
- ◆ Windows-based administrative program makes it possible to set up in a few steps.
- ◆ Latest MIB-II (RFC 1213) for SNMP standard management.
- ◆ Offer LPR program for TCP/IP printing in Windows 95/98/ME.
- ◆ IP assignment support for DHCP, BOOTP and RARP.
- ◆ Support Web configuration.
- ◆ Provide Flash memory for easy firmware upgrade.
- ◆ Auto fallback data rate under noisy environment or longer range distance.
- ◆ Printing Access control and display.
- ◆ E-mail notification for printer error messages; Support E-Mail printing and FTP printing.
- ◆ Ability to save print server configuration into hard drive for easy access and backup without the hassle to reconfigure if setting is altered.
- ◆ Support IPP printing for Windows 2000/XP.
- ◆ Support second http port for remote web configuration and IPP printing.
- ◆ Support UPnP (Universal Plug and Play) for Windows XP/2003.
- ◆ Support Mac OS 10.2 “Rendezvous” – Zero-configuration feature.


Product View

This section describes the externally visible features of the print server.

Front View

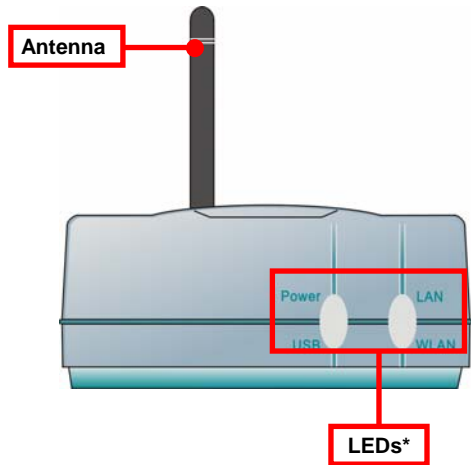

Rear View

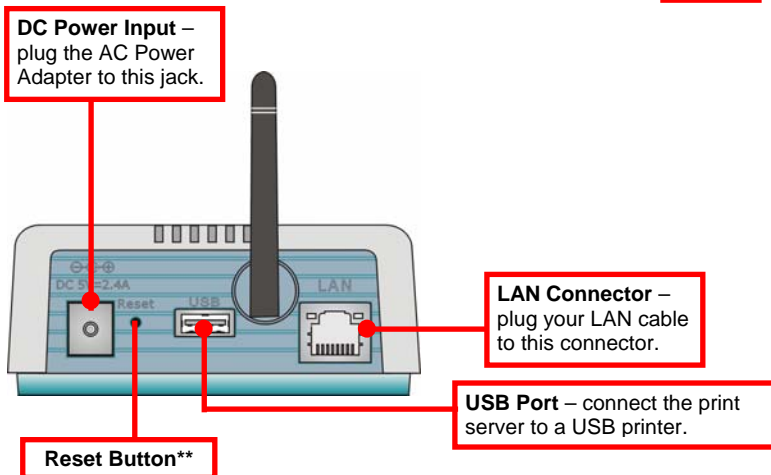

* There are four green LED indicators on the front panel:


LEDs	Description
Power	Steady light confirms that the Print Server is powered on.
USB	When it blinks, the printer connected is printing.
LAN	Steady light confirms that the print server has a good connection to your network. When it blinks (briefly dark), the print server is receiving/ transmitting data from/to the network.
WLAN	Steady light confirms that the print server has a good connection to your wireless network. When it blinks (briefly dark), the print server is receiving/ transmitting data from/to the wireless network.

** 1) Press and release this button to reset the print server; or 2) Press and hold this button for three seconds (the USB LED on the front panel lights up) and then release it, the print server will resume the factory default settings.

HARDWARE INSTALLATION

Networking Application

The following diagram explains the application of your print server.

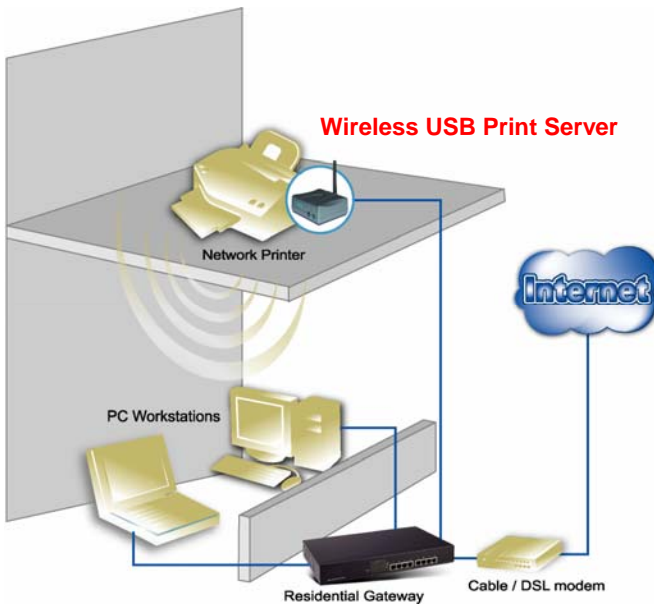

Installing the Print Server

Follow these steps for a trouble-free start of print server operations with your Wireless USB Print Server.

1. Confirm proper operation of the printer to be connected to the print server.
2. When you have confirmed proper operation of the printer, turn off the power.
3. Confirm that your network is operating normally.
4. Connect the print server to the network (through the RJ-45 connector of the print server).
5. While the printer is powered off, connect the print server to the printer's USB port.
6. Turn on the printer's power.
7. Connect the DC end of the AC Power adapter to the DC power input socket of the print server and the AC end to the wall outlet. This will supply power to the print server immediately.

NOTE: *This print server is built with a default IP Address. To prevent from any conflict in your network, it is recommended to use the PS-Utility program to change the IP setting when there is some other device's IP Address is the same as the print server's default IP Address.*

USING THE UTILITIES

This chapter describes the software utilities for the print server, including how to set up your print server with these utility. The **PS-Utility** and **PS Wizard** are designed with a user-friendly interface that allows you to set up and administer the print server easily.

Auto-Run Installation

Insert the Installation CD-ROM into your computer's CD-ROM drive to initiate the Auto-Run program.


- **User's Guide** – click to preview the *User's Guide* in PDF format for detailed information of the Wireless Print Server.
- **Install Utility** – click to install PS-Utility. Please refer to the next section for detailed information on installing the utility.
- **PS Wizard** – click to launch the Printer Wizard program, which is helpful to set up the printer configuration easily and quickly.
- **PS Monitor** – click to install PS Monitor program into your system.
- **Browse CD** – if you want to browse the contents of the Installation CD-ROM, click this button and the contents of the CD will be available for preview.
- **Exit** – click to close the Auto-Run program.

PS-Utility


To avoid the conflict in your network, you can use PS-Utility to change the related settings of your print server (such as the IP address) after finishing the installation.

Installing PS-Utility


1. Click **Install Utility** from the Auto-Run menu screen. Once executed, the Setup program will extract files to launch the InstallShield Wizard; then, click **Next >** in the welcome screen of InstallShield Wizard.

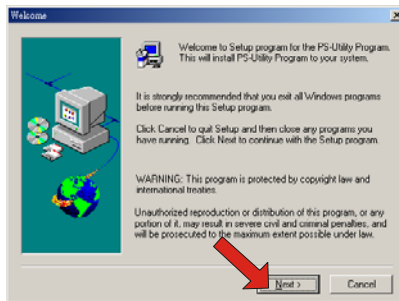

2. Choose the destination location. If no specific requirement, leave the default setting and click **Next >**.

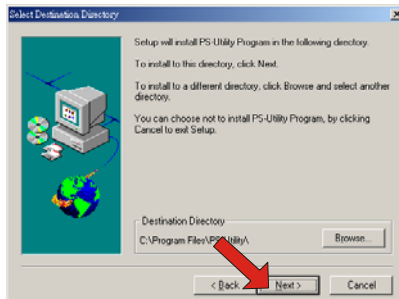

3. The InstallShield Wizard starts to install the software, and the Progress bar indicates the installation is proceeding.
4. When completed, click **Finish**.

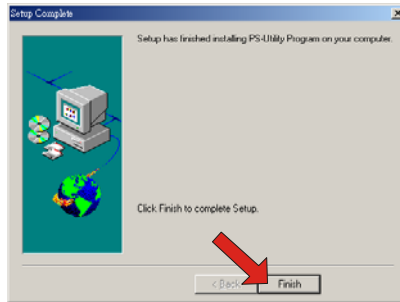


After installing the utility, the application program for the print server is automatically installed to your computer, and creates a folder in **Start\Programs\PS-Utility**.


Using PS-Utility

This section describes the operation of PS-Utility. To launch PS-Utility:

1. Click **Start** -> **Programs** -> **PS-Utility**, and then click the **PS-Utility v2.00** item.

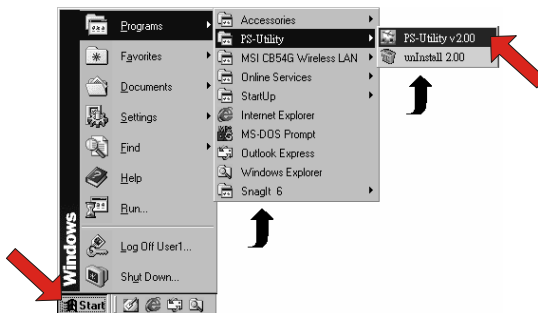

- The main screen will appear as below, and it starts to search the connected print server within the network.

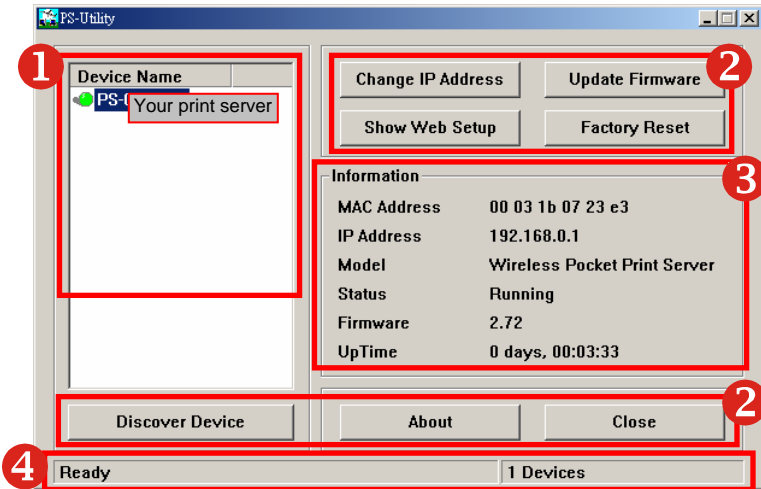


Component Features:

- Device List:** Display the connected print server within the network.

- Control Buttons**

- **Change IP Address:**
Click this button to bring up the following dialog box, allowing you to change the IP Address. In this dialog box, you can select either *Manually Assign* or *DHCP Assign Automatically*. When completed, click **OK**.

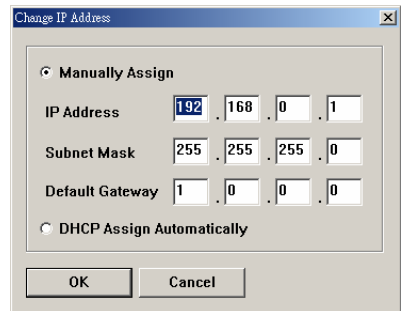

- **Update Firmware:** Click this button to update the firmware of the selected print server.
- **Show Web Setup:** Click this button to open your web browser and launch the Configuration Utility. Alternately, you can double-click the print server in the Device List to launch the Configuration Utility.
- **Factory Reset:** Click this button to reload the factory settings of the print server.
- **Discover Device:** Click this button to search the connected print server again.
- **About:** Click this button to bring up a window containing the basic information of PS-Utility.
- **Close:** Click this button to exit PS-Utility.

3 Information Field: Display the basic information of the selected print server in the Device List.

4 Status Bar: Display the system status.

PS Wizard

PS Wizard is a convenient utility that allows you to set up the print server's port connection.


To launch PS Wizard:

1. Insert the Installation CD-ROM into your computer's CD-ROM drive, and click **PS Wizard** from the Auto-Run menu screen. The welcome screen appears as below. Click **Next >**.




NOTE: For some specific printers, you may need to connect the printer to the computer and install the driver. In this case, connect it to the computer and install the driver first, and then connect it to the print server.


2. In the following window, select one printer in the Printer List to set up port connection, and then click **Next >**.

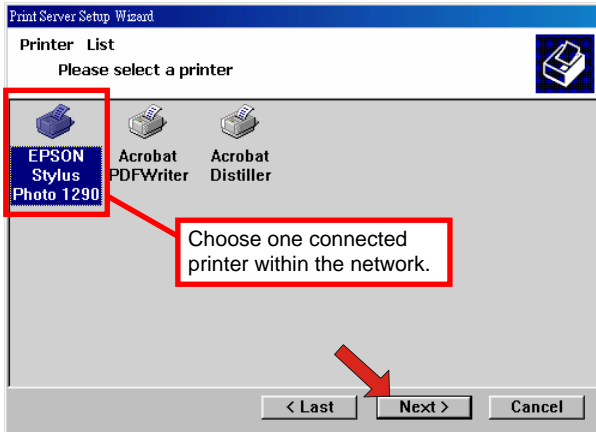

3. Select one printer port in the Print Server List, and click **Next >**.

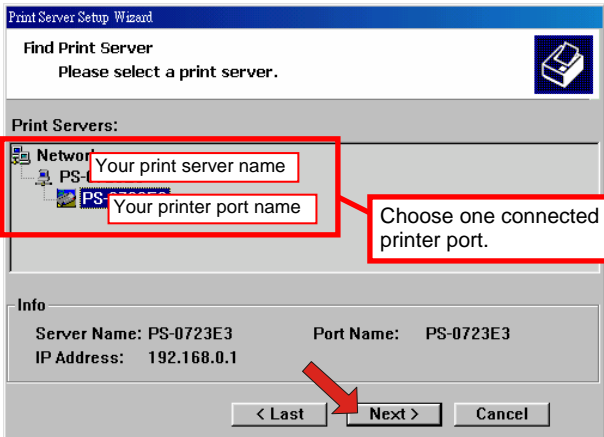

4. The configuration is completed, click **Reboot** and then **Yes** to restart the system.

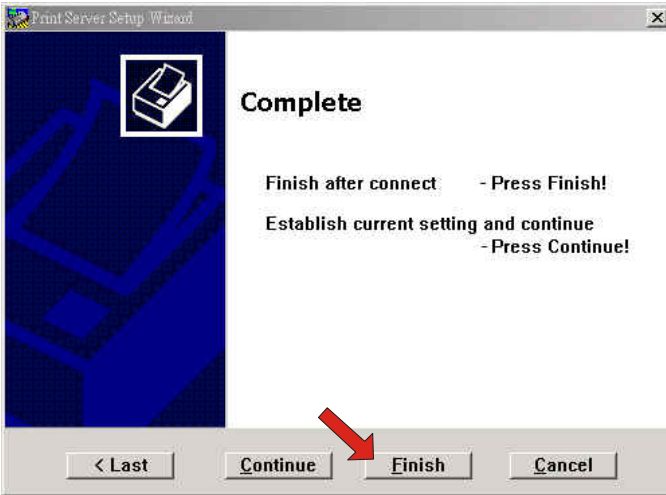


After rebooting, PS Wizard will help you to complete the port connection automatically. You can start your printing task without any complex configuration.

TIP: If you use Windows 2000/XP, the system will not restart to complete the installation.


PSM Setup Utility Installation Guide

PS Monitor will lend the print server to support HP GDI printers.


1. Run the "PSMSetup" program from the shipped accessory CD-ROM. This program will lead you to finish the installation process of the PS Monitor step by step.

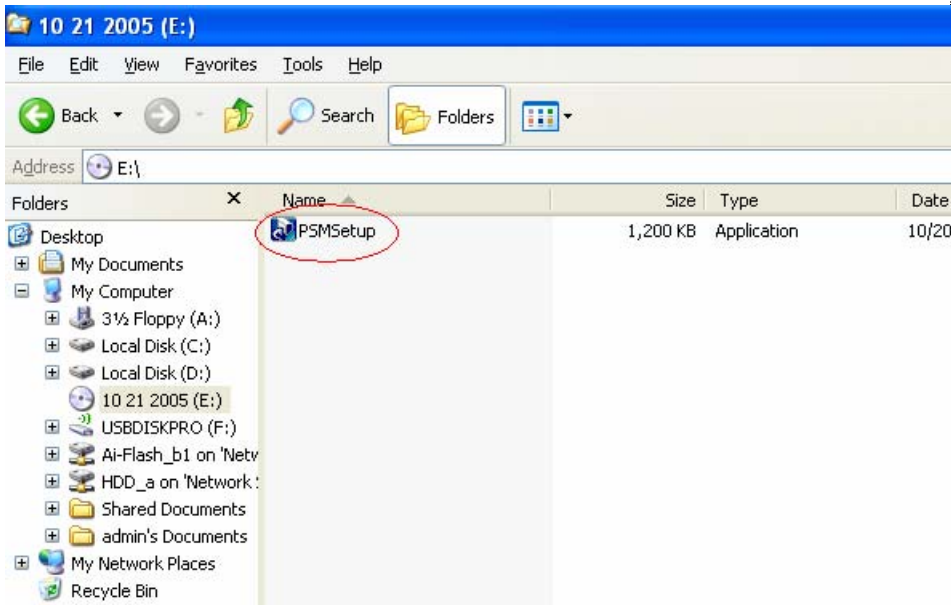


2. Choose the Language of your Windows system and click the “OK” button to the next step.

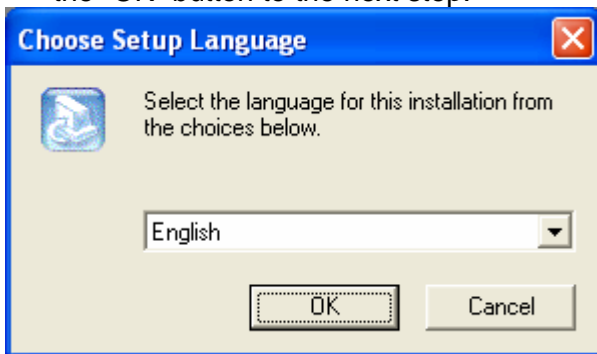


3. Click the “Next” button and start to install the PS Monitor.

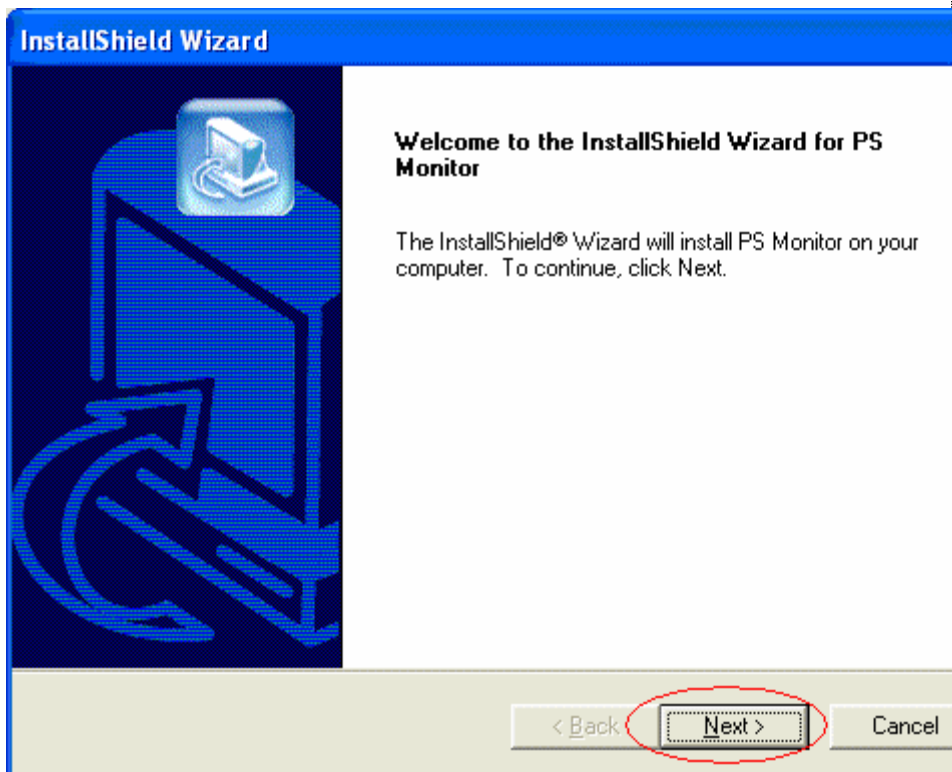


4. Specified the directory for of the PS Monitor to be installed inside and then click the “Next” button.

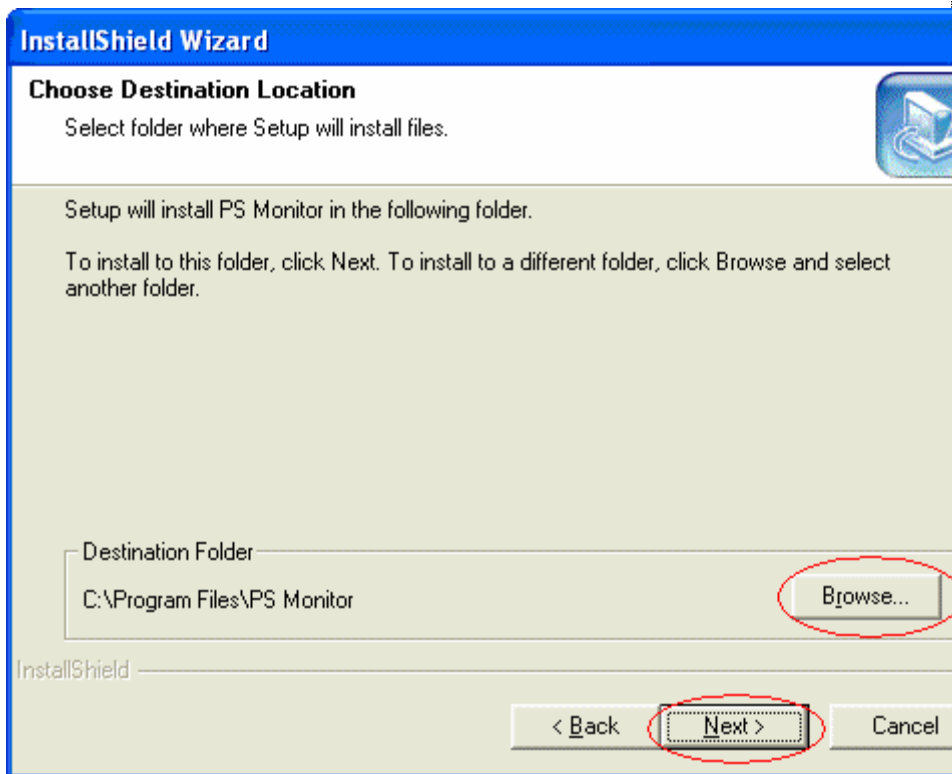

5. Click the “Finish” button to complete the installation.

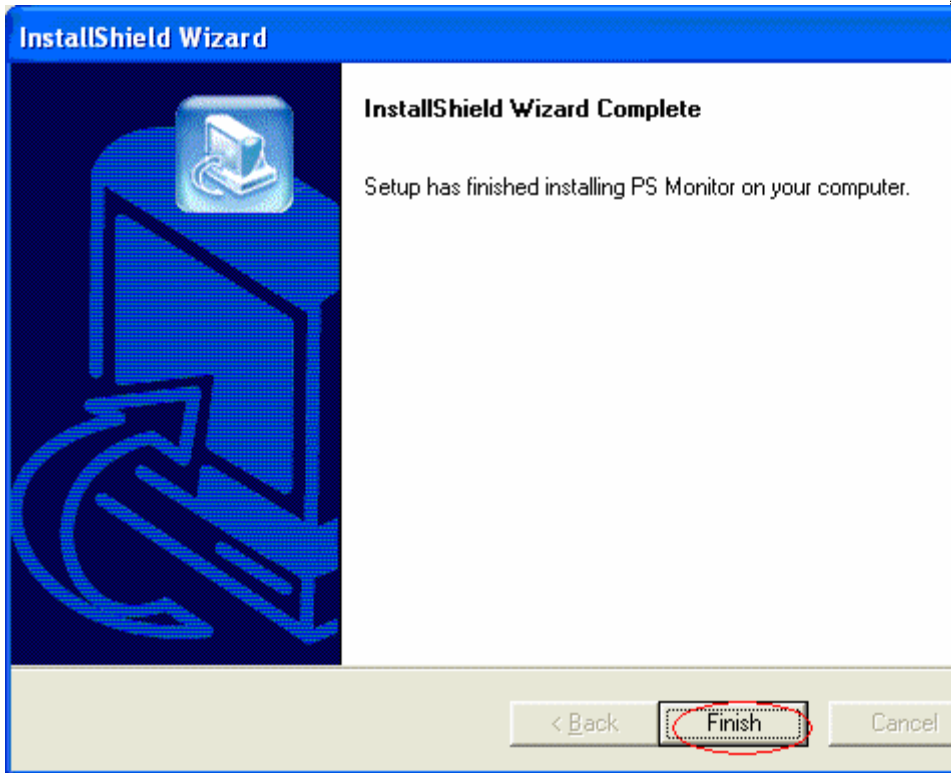

6. The installation is completed. Click the "Start"->"Program"->"PS Monitor"->"PS Monitor 1.30" to launch the PS Monitor.

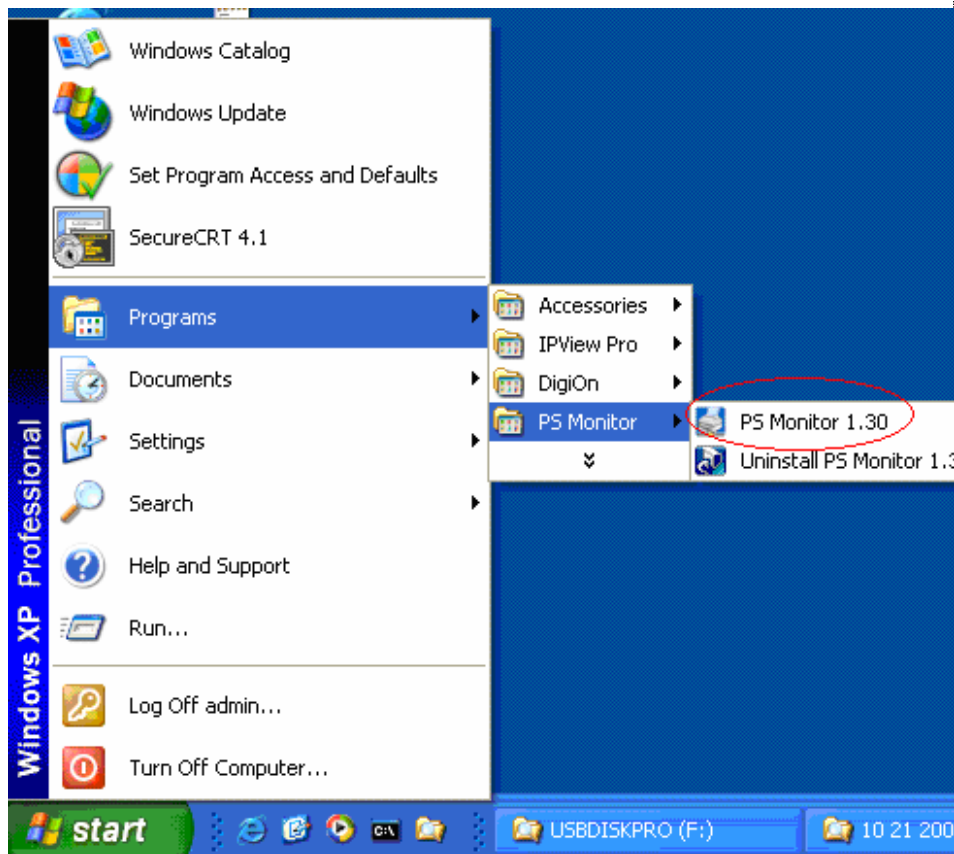


7. To verify if the PS Monitor is executed successfully, please check that the icon of PS Monitor is shown in the taskbar under your Windows system.



Installation Process of HP LaserJet 1000

Installation Process of HP LaserJet 1000 in Win 2000

1. Open the "Printers" window of your Windows 2000 system and click the "Add Printer" function. The following window will be popped up. Click the "Next" button to the next step.

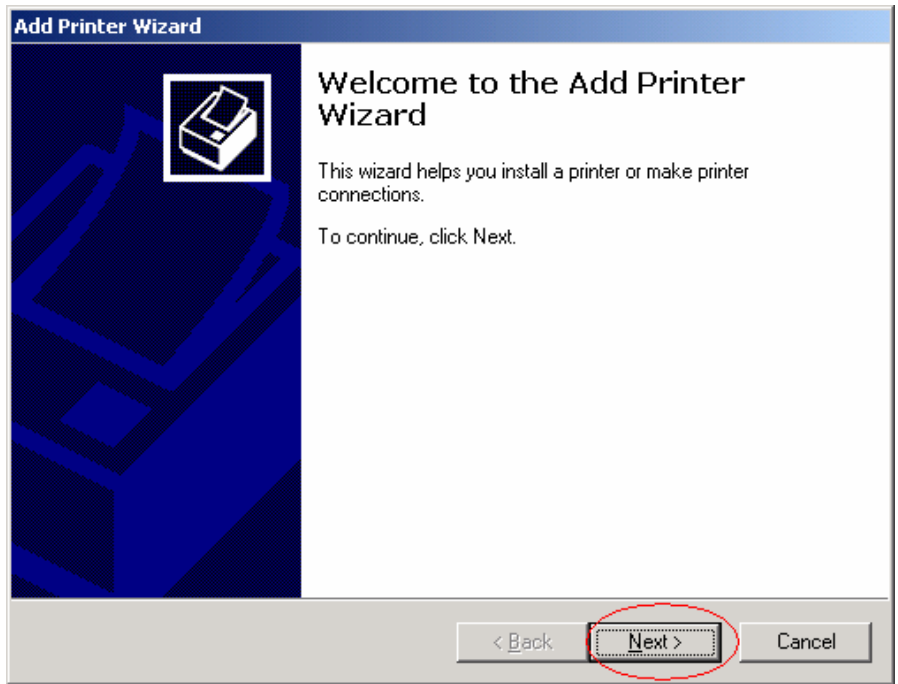

2. Select the "Local printer" and uncheck the "Automatically detect and install my Plug and Play printer". Click "Next" button to the next step.

Add Printer Wizard

Local or Network Printer

Is the printer attached to your computer?



If the printer is directly attached to your computer, click Local printer. If it is attached to another computer, or directly to the network, click Network printer.

Local printer

Automatically detect and install my Plug and Play printer

Network printer

< Back

Next >

Cancel

3. Select the "Create a new port" and specify the type of port as "Local Port".
Click the "Next" button to the next step.

Add Printer Wizard

Select the Printer Port

Computers communicate with printers through ports.



Select the port you want your printer to use. If the port is not listed, you can create a new port.

Use the following port:

Port	Description	Printer
LPT1:	Printer Port	
LPT2:	Printer Port	
LPT3:	Printer Port	
COM1:	Serial Port	
COM2:	Serial Port	
COM3:	Serial Port	

Note: Most computers use the LPT1: port to communicate with a local printer.

Create a new port:

Type:

Local Port

Fax Lexmark 7100 Series Port

Local Port

Standard TCP/IP Port

< Back

Next >

Cancel

- The following window will be popped up for you to specify the port name of the printer server. The syntax is "**\\Printer Server name\Printer port name of the printer server**" as the following show. Click the "OK" button to the next step.

Port Name [?] [X]


Enter a port name:

\\PS-593852\PS-593852-U1

OK

Cancel

- Please specify the location of the driver of your HP LaserJet 1000 according to your condition. Click the "Next" button to the next step.

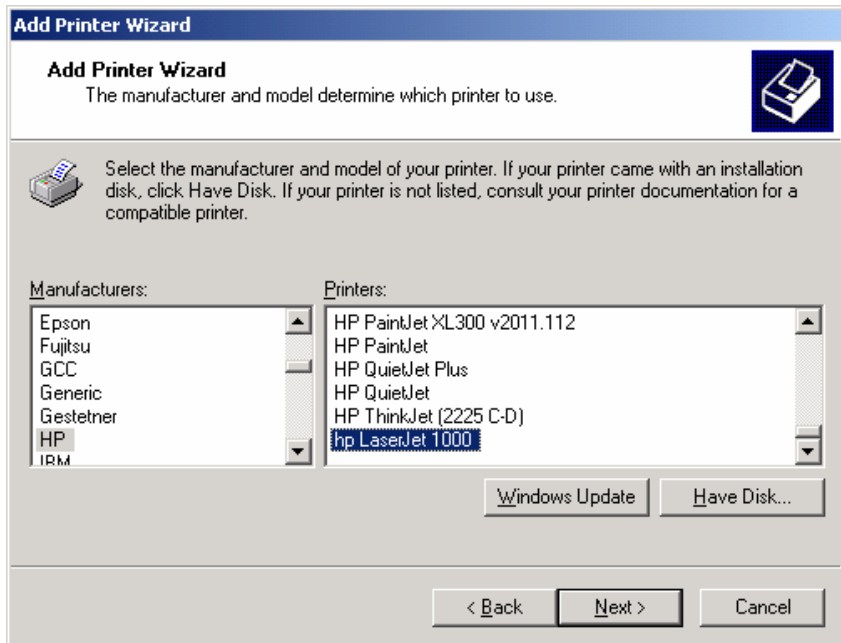

6. Name your printer if necessary. Click the "Next" button to the next step.

Add Printer Wizard

Name Your Printer

You must assign a name for this printer.



Supply a name for this printer. Some programs do not support server and printer name combinations of more than 31 characters.

Printer name:

Do you want your Windows-based programs to use this printer as the default printer?

Yes

No

< Back

Next >

Cancel

7. Select "Do not share this printer". Click the "Next" button to the next step.

Add Printer Wizard

Printer Sharing

You can share this printer with other network users.



Indicate whether you want this printer to be available to other users. If you share this printer, you must provide a share name.

Do not share this printer

Share as:

< Back

Next >

Cancel

8. Select "No" for printer test. Click the "Next" button to the next step.

Add Printer Wizard

Print Test Page

To confirm that the printer is installed properly, you can print a test page.



Do you want to print a test page?

Yes


No

< Back


Next >

Cancel

- The installation is completed by clicking the "Finish" button.

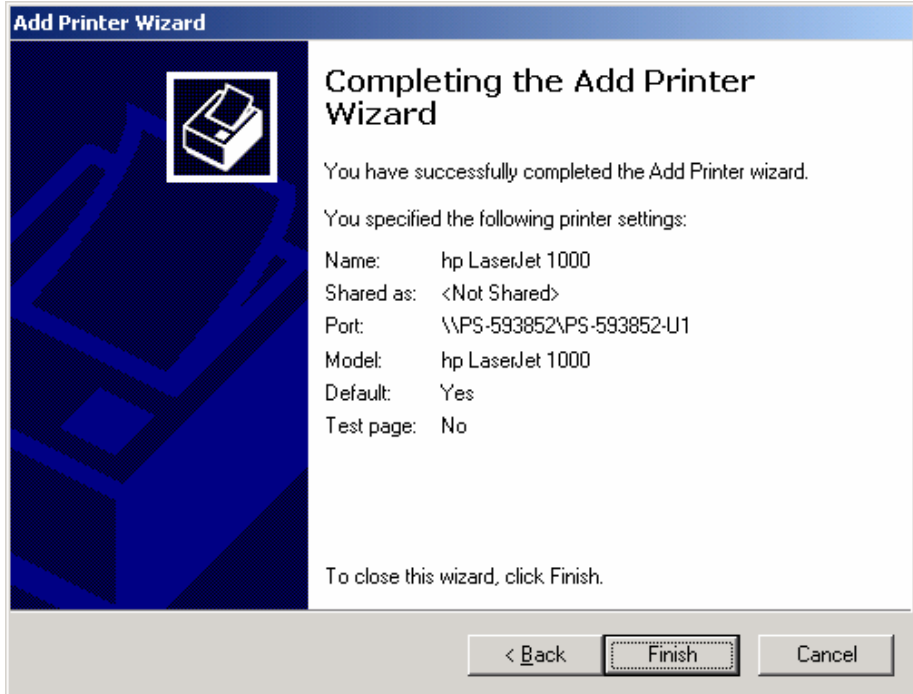

10. Select the HP Laser Jet 1000 just been added and open the "Property" of it. Click the "Ports" menu and uncheck the "Enable bidirectional support" to make the printing successful.

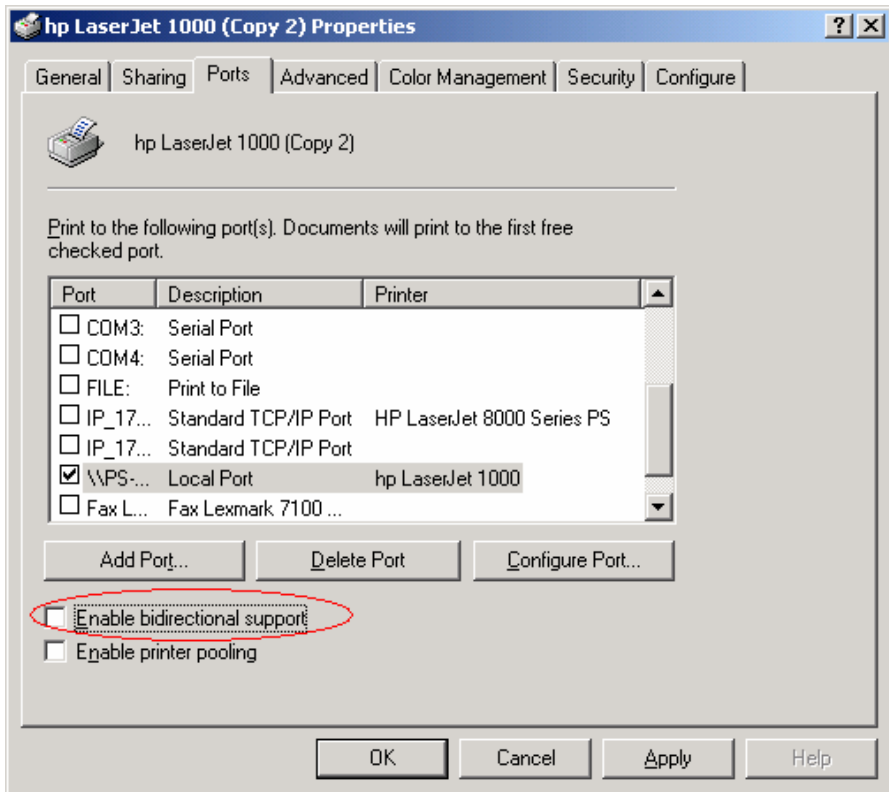

Installation Process of HP LaserJet 1000 in Win 98

11. Open the "Printers" window of your Windows 98 system and click the "Add Printer" function. The following window will be popped up. Click the "Next" button to the next step.

Add Printer Wizard



This wizard will help you to install your printer quickly and easily.

To begin installing your printer, click Next.

< Back

Next >

Cancel

12. Select the "Network Printer". Click "Next" button to the next step.

Add Printer Wizard



How is this printer attached to your computer?

If it is directly attached to your computer, click Local Printer. If it is attached to another computer, click Network Printer.

- Local printer
- Network printer

< Back

Next >

Cancel

13. Specify the port name of the printer server. The syntax is "**\\Printer Server namePrinter port name of the printer server**" as the following show. Click the "Next" button to the next step.

Add Printer Wizard



Type the network path or the queue name of your printer. If you don't know its name, click Browse to view available network printers.

Network path or queue name:

\\PS-593852\PS-593852-U1

Browse...

Do you print from MS-DOS-based programs?

Yes

No

< Back

Next >

Cancel

14. Please specify the location of the driver of your HP LaserJet 1000 according to your condition. Click the "Next" button to the next step.

Add Printer Wizard



Click the manufacturer and model of your printer. If your printer came with an installation disk, click Have Disk. If your printer is not listed, consult your printer documentation for a compatible printer.

Manufacturers:

- Hermes
- Hewlett-Packard
- HP**
- IBM
- Kodak
- Kyocera
- LaserMaster

Printers:

- hp LaserJet 1010
- hp LaserJet 1012
- hp LaserJet 1015
- hp LaserJet 1160
- HP Color LaserJet 2600n
- hp LaserJet 1000**

Have Disk...

< Back

Next >

Cancel

Add Printer Wizard

Name Your Printer

You must assign a name for this printer.



Supply a name for this printer. Some programs do not support server and printer name combinations of more than 31 characters.

Printer name:

Do you want your Windows-based programs to use this printer as the default printer?

Yes

No

< Back

Next >

Cancel

15. If necessary, you could modify the name for the printer added. The installation is completed by clicking the "Finish" button.

Add Printer Wizard



You can type a name for this printer, or you can use the name supplied below. When you are ready, click Finish to install the printer and add it to the Printers folder.

Printer name:

Do you want your Windows-based programs to use this printer as the default printer?

Yes

No

< Back

Finish


Cancel

Installation Process of HP LaserJet 1000 in Win XP


16. Open the "Printers and Fax" window of your Windows System and click the "Add Printer" function. The following window will be popped up. Click the "Next" button to the next step.




17. Select the "Local printer attached to this computer" and uncheck the "Automatically detect and install my Plug and Play printer". Click "Next" button to the next step.

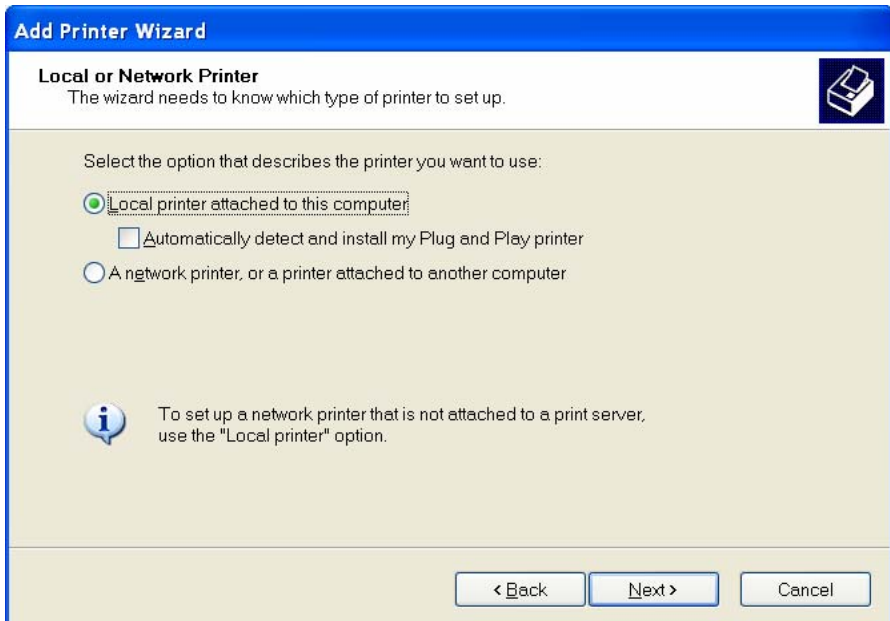


18. Select the "Create a new port and specify the type of port as "Local Port".
Click the "Next" button to the next step.

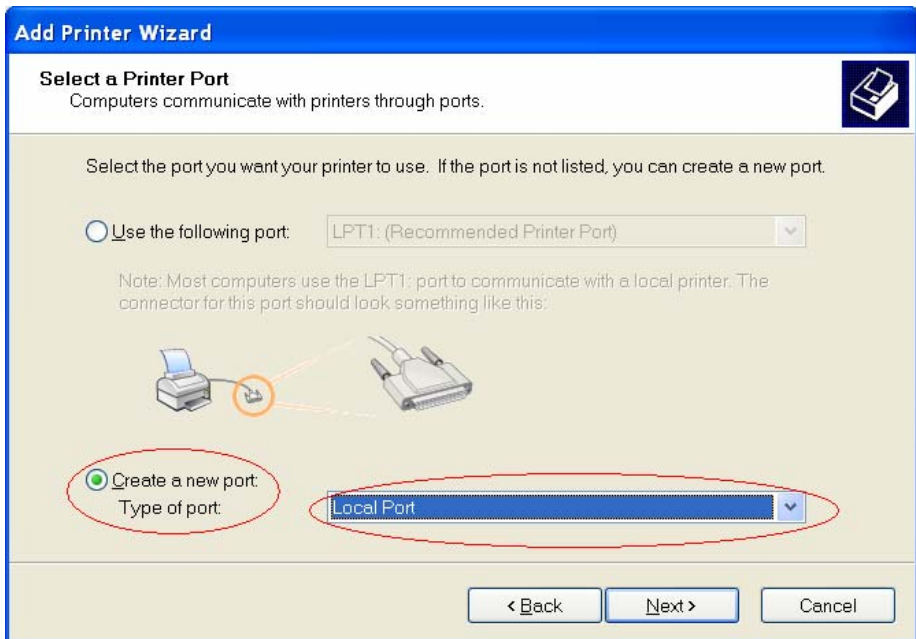

19. The following window will be popped up for you to specify the port name of the printer server. The syntax is "***\\Printer Server name\Printer port name of the printer server***" as the following show. Click the "OK" button to the next step.

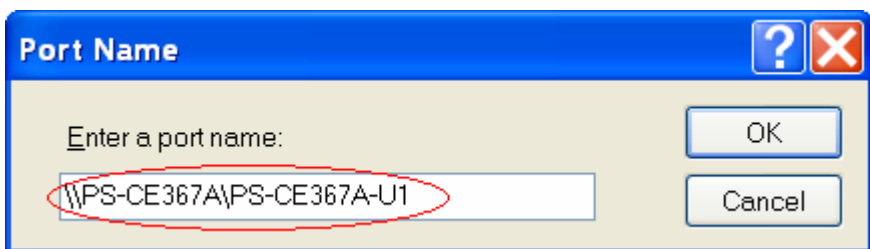

20. Please specify the location of the driver of your HP LaserJet 1000 according to your condition. Click the "Next" button to the next step.

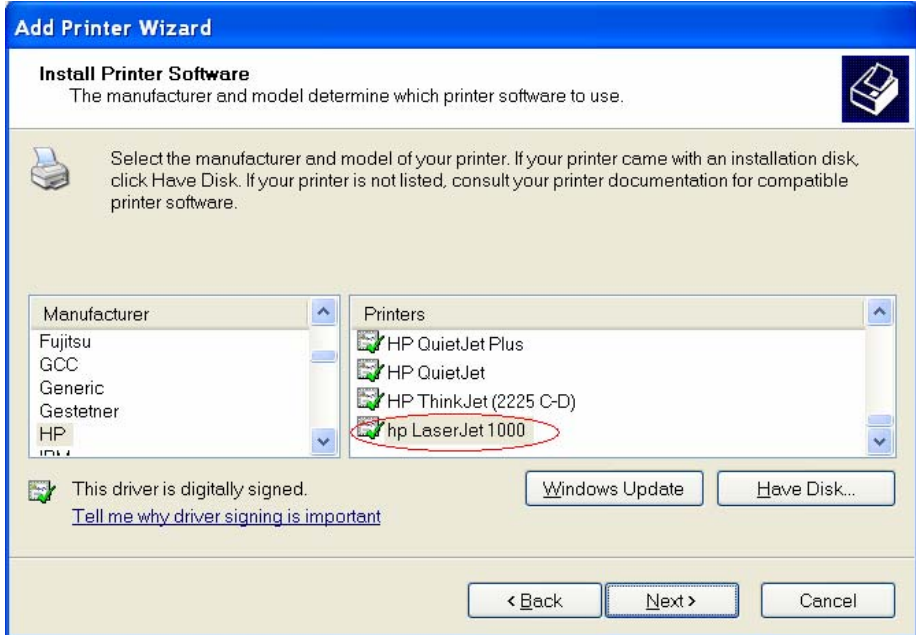

21. Name your printer if necessary. Click the "Next" button to the next step.

Add Printer Wizard

Name Your Printer

You must assign a name to this printer.



Type a name for this printer. Because some programs do not support printer and server name combinations of more than 31 characters, it is best to keep the name as short as possible.

Printer name:

Do you want to use this printer as the default printer?

Yes

No

< Back

Next >

Cancel

22. Select "No" for printer test. Click the "Next" button to the next step.

Add Printer Wizard

Print Test Page

To confirm that the printer is installed properly, you can print a test page.



Do you want to print a test page?

Yes


No

< Back


Next >

Cancel

23. The installation is completed by clicking the "Finish" button.

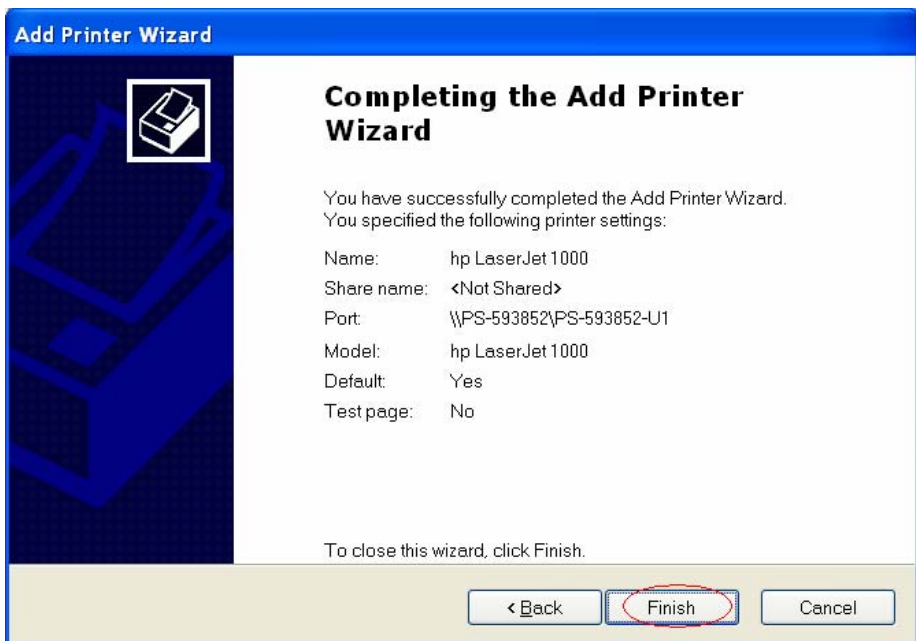

24. Select the HP LaserJet 1000 just been added and open the "Property" of it. Click the "Ports" menu and uncheck the "Enable bidirectional support" to make the printing successful.

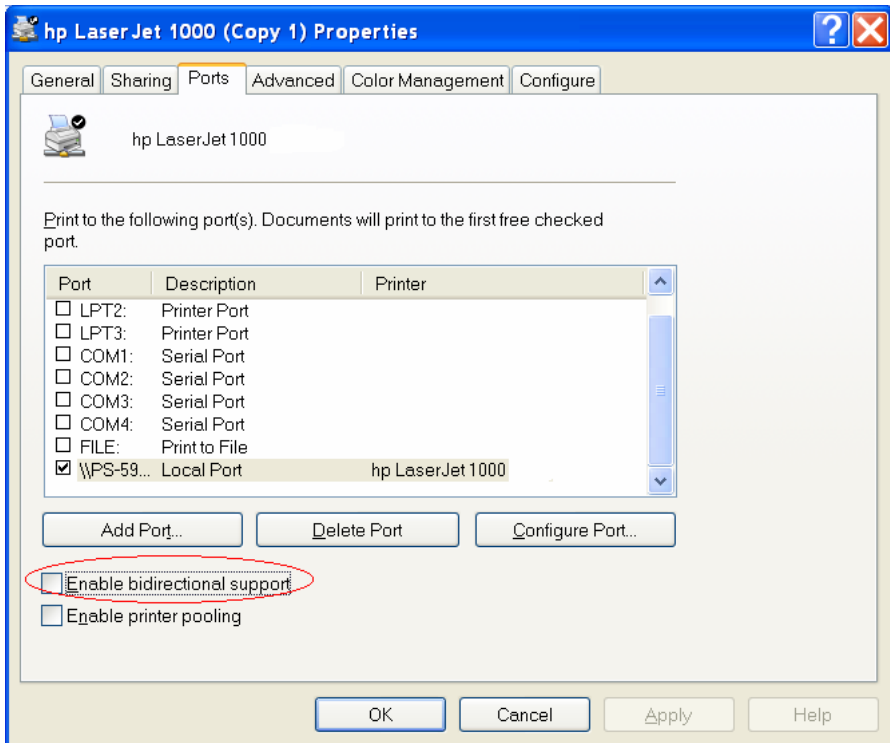

PRINTING IN MAC OS


Rendezvous Uses in MAC OS 10.2

The latest version of MAC OS provides a new feature that is called **Rendezvous**. Rendezvous is a revolutionary networking technology standard that lets you create an instant network of computers and devices, which can be used throughout Mac OS 10.2 to provide innovative ways to share files and printers and even contact other people on the network.


For the printer connection, the Mac OS 10.2 Print Center application uses Rendezvous to discover Rendezvous-enabled printers on the network. When you add your computer to a network, Print Center automatically discovers the available printers. All you have to do is selecting the one you want to use and then start printing. You can add a new printer to the network and all the users on the network will see the new printer automatically appear in their Print Center, without any configuration.

The following instructions provide a common procedure of installing the printer:


1. Launch Print Center. Press and hold the Option key, click the **Add** button.

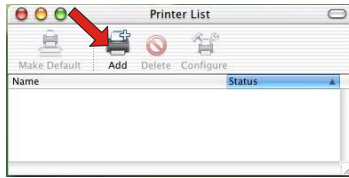


2. Select **Rendezvous** from the pop-up menu.

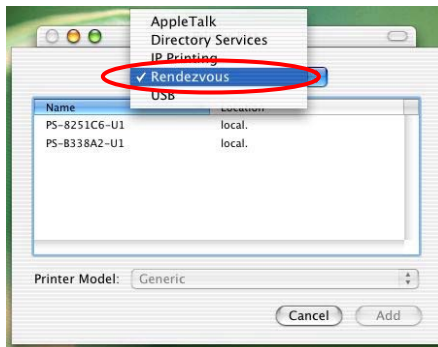


3. When clicking the **Rendezvous** item, the following window appears to display the connected Rendezvous-enabled printers.

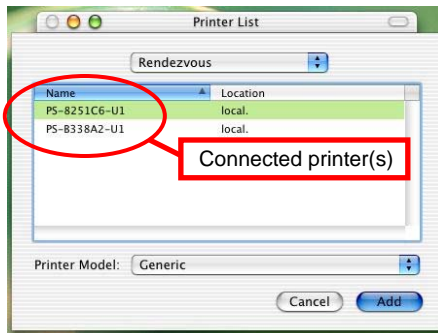

4. Select the desired printer, and the following pop-up menu displays the printer's manufacturer. Select **Generic**.

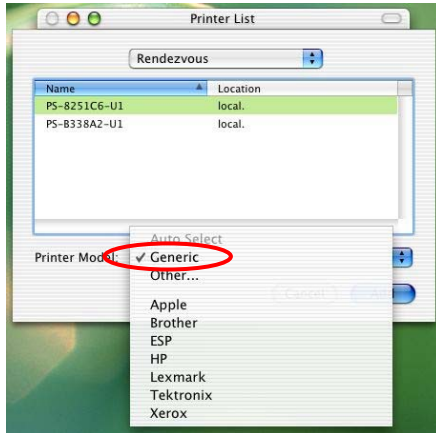

5. The printer is installed into the system successfully.

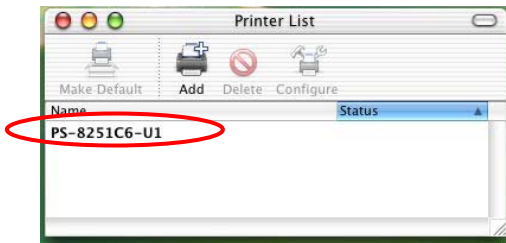


Setting Up Apple Talk/LPR Printing


For MAC OS X User

With MAC OS X, you can use AppleTalk or LPR printers to print through the print server. Follow the instructions below for setting up the print server:


1. After attaching the print server to your network, change the IP Address of your Macintosh computer to access the print server's web configuration. The default IP Address of the print server is **192.168.0.1**. Change your IP Address to **102.168.0.x**, where **x** is any number between 2 and 254.
2. Open the **System Preference** window and click **Network**. In the Network window, select the **AppleTalk** tab and check the **Make AppleTalk Active** option.

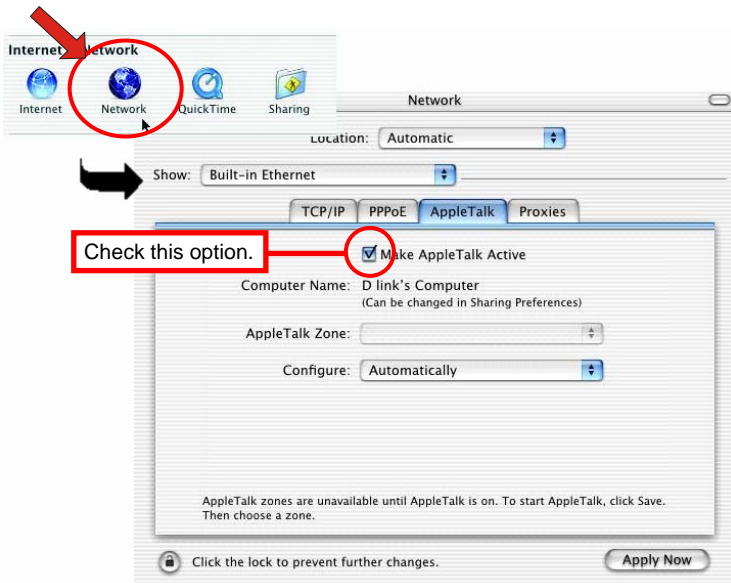


3. To print, open a document and select **File > Print** from the menu.

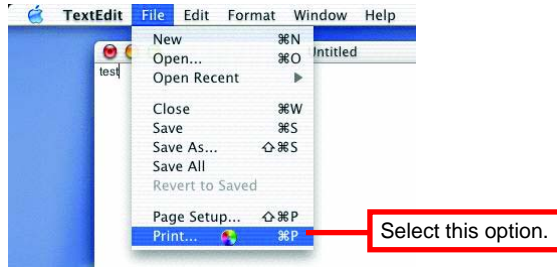

4. Select **Edit Printer List** from the **Printer** dialog box.

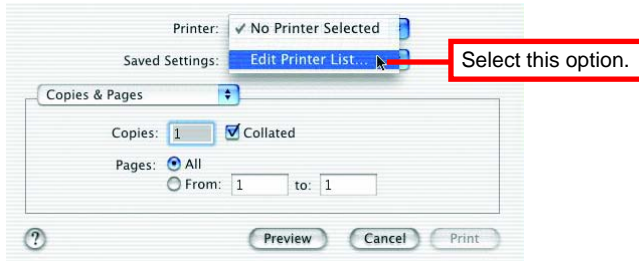

5. Click **Add Printer**. Then, select the desired printing protocol (*AppleTalk* or *LPR Printers using IP*).

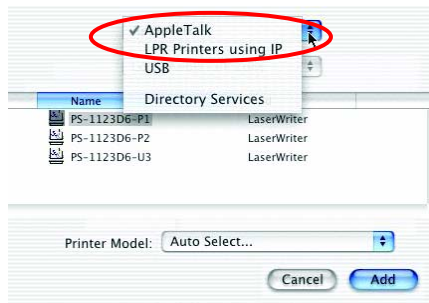

- **AppleTalk:** After selecting **AppleTalk**, the Port Name of the print server will be displayed. Select the Port to which the post-script printer is connected. Then, select the printer model from the dialog box. Click **Add Printer** to complete the Printer Port configuration. Select the Printer Port just configured in the Print window. Click **Print** to print your document.
- **LPR Printers using IP:** When you select **LPR Printers using IP Protocol**, type the IP Address of the print server into the **LPR Printer's Address** field of the following window. In the **Queue Name** field, type in the Port Name of the post-script printer that is connected to the Print Server. Select the printer model from the dialog box, and select the printer model from the pull-down menu. Click **Add** to complete the process. Close all Print Center windows and select the Printer Port that was just selected. Then, click **Print** to print the document.

The screenshot shows a dialog box titled "LPR Printers using IP". The title bar is circled in red. Below the title bar, there is a text input field labeled "LPR Printer's Address:" with the value "192.168.0.1" and the subtitle "Internet address or DNS name". Below this is a checkbox labeled "Use Default Queue on Server" which is unchecked. Underneath is a text input field labeled "Queue Name:" with the value "Port Name of the connected printer." and a red box around it. Below that is a dropdown menu labeled "Printer Model:" with "Generic" selected. At the bottom right, there are two buttons: "Cancel" and "Add". A red arrow points to the "Add" button.

For MAC OS 9 User

If you use MAC OS 9, you can use the AppleTalk network protocol for network communications over standard Ethernet or Fast Ethernet using the EtherTalk transport, or over a proprietary low-speed LocalTalk transport. Your print server can be used for network printing to PostScript printers. You can print from any MAC OS computer connected to your Ethernet network, either directly using an EtherTalk connection or indirectly through a LocalTalk-to-EtherTalk router.


To set up the print server to be used for AppleTalk printing:

1. Please confirm that the AppleTalk protocol is enabled in your Macintosh computer.
2. Change the IP Address on one of the computers within your network to **192.168.0.x** (where **x** is any number between 2-254).
3. Type **192.168.0.1** (the default IP Address) into the address field of your browser.
4. Select the **Network** tab and scroll to the AppleTalk protocol section.
5. If your AppleTalk network is divided into AppleTalk zones, you have to specify which zone the Print Server should be in. You should locate the print server in the same zone as most of the users who will be using it. If your network is not divided into zones, it should contain a single asterisk “*”.

To print from MAC OS Client Workstations:


The actual settings of selecting a PostScript printer connected to your print server may be different from the instructions provided in this section, depending on the devices and the software you are using.

1. To choose a printer connected to your print server as your MAC OS workstation's default printer, select **Chooser** from the Apple menu.
2. In the left column of **Chooser** window, select the desired item. Please confirm that AppleTalk is set to **Active**. A list of all networked PostScript printers will be displayed within the right column.

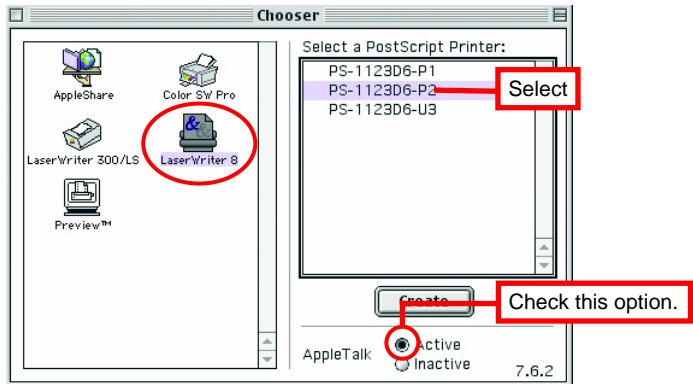


3. Double-click the name of the **Printer Port** you wish to use. The **Printer Ports** shown are examples only.

4. If you have not previously set this printer as the default, your computer will prompt you for a PostScript Printer Description file. Choose **Select PPD**.

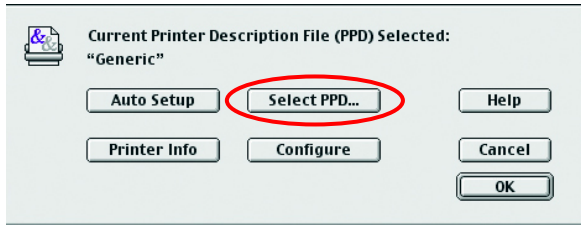

5. Select the appropriate printer description file for your printer. Click **Open**. (If your printer is not listed, click **Generic** to use a generic printer description.)

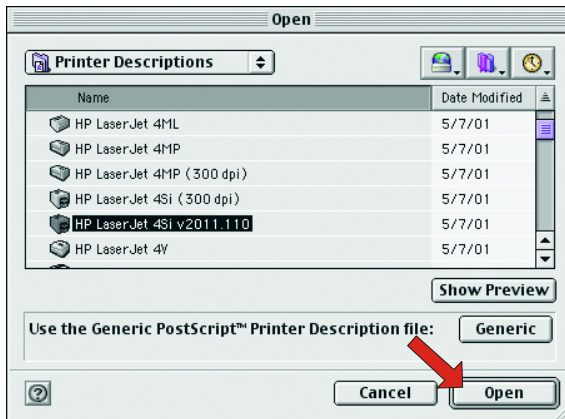

The selected printer will become your computer's default printer. You may need to choose **Page Setup** in any applications you have open.

WEB CONFIGURATION

You can access and manage the Wireless Print Server through: 1) the enclosed software PS-Utility, and 2) a web browser. This chapter describes the second method – the Web Configuration Utility, and explains how to set up your print server with the web browser.

Web Configuration Utility

First, launch your web browser (such as the Internet Explorer 6.0 used in this manual). Then, type ***http://192.168.0.1*** (the default IP address) in the Address bar and press [Enter] to enter the Management screen of the Configuration Utility.

TIP: *The computer's IP address must correspond with the print server's IP address in the same segment for the two devices to communicate. Extensive knowledge of LAN will be helpful in configuring the print server.*

Management

CAS-C350W013828 - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Address http://192.168.0.1/

Management Configuration Tools Help

Management

- System
- Wireless
- Network
- User

Device Status

Server Name	:	PS-AF6465
Model	:	Wireless USB Print Server
Firmware Version	:	3.00f (2004-01-07)
MAC Address	:	00 FF 39 AF 64 65
IP Address	:	192.168.0.1 (Manual)
Up Time	:	0 days, 00:02:07

Printer Status

USB	:	Printer Name	:	PS-AF6465-U1
		Printer Speed	:	Full Speed (12M bps)
		Printer Status	:	Off line
		Total Print Jobs	:	0
		Total Print Size	:	0 KBytes
		Printing Status	:	Idle
		Name	:	
		MAC	:	
		IP	:	
		Protocol	:	
		Spooling Size	:	0 Bytes
		Printing Size	:	0 Bytes

Ethernet Status

Link	:	Yes
Speed	:	100M bps
Duplex	:	Yes
Tx Packets	:	46
Tx Errors	:	0
Rx Packets	:	43
Rx Errors	:	0

Refresh

The Management Screen of the Configuration Utility

The Management screen displays the basic information of the print server, including the following four categories:

- **System**
- **Wireless**
- **Network**
- **User**

Management → System

As shown above, the **System** displays the status of your print server, printer, and network. Clicking **Refresh** will update the information.

Device Status

The information about the print server, including the firmware version, MAC/IP address, and up time, can be found in this field.

Printer Status

The items in this field display the information of the printer, such as the given name for the printer, speed, printer status, and status of your printing tasks, etc.

Ethernet Status

You can monitor the networking status in this field, including the network connection, speed, and the packets status.

Management → Wireless

Click the **Wireless** item in the left column to display the information of the wireless LAN. Clicking **Refresh** will update the information.

Management	Configuration	Tools	Help
Management	Wireless Status		
System	Connection Mode : Infrastructure		
Wireless	Link : No		
Network	SSID : (MAC : 00 00 00 00 00 00)		
User	Channel : 0		
	Transmission Rate : 0M bps		
	WEP Encryption : Disable		
	Tx Packets : 0		
	Tx Errors : 0		
	Rx Packets : 0		
	Rx Errors : 0		
	<input type="button" value="Refresh"/>		

Wireless Status

The items in this field display the information of the wireless LAN, such as the connection mode (Infrastructure or Ad-Hoc), SSID, channel, data transfer rate, WEP encryption, and the packets status.

Management → Network

Click the **Network** item to display the information of the LAN. Clicking **Refresh** will update the information.

Management	Auto IP
System	DHCP/BOOTP : Disable (IP : 0.0.0.0)
Wireless	UPnP : Enable (IP : 169.254.100.101)
Network	MAC Rendezvous : Enable (IP : 169.254.100.101)
User	
	TCP/IP Printing
	LPR Printing : Status : Running Total Print Jobs : 0 Total Print Size : 0 KBytes
	Port (9100) Printing : Status : Running Total Print Jobs : 0 Total Print Size : 0 KBytes
	IPP Printing : Status : Running Total Print Jobs : 0 Total Print Size : 0 KBytes
	FTP Printing : Status : Running Total Print Jobs : 0 Total Print Size : 0 KBytes
	E-mail Printing : Status : Running Total Print Jobs : 0 Total Print Size : 0 KBytes
	Microsoft Network Printing
	SMB (Over NetBEUI) Printing : Status : Running Total Print Jobs : 0 Total Print Size : 0 KBytes
	SMB (Over NBT) Printing : Status : Running Total Print Jobs : 0 Total Print Size : 0 KBytes
	MAC AppleTalk Printing
	AppleTalk Printing : Status : Running Total Print Jobs : 0 Total Print Size : 0 KBytes
	<input type="button" value="Refresh"/>

Auto IP

This field contains the current settings of TCP/IP, including DHCP/BOOTP, UPnP, and MAC Rendezvous. The items in this field are configured in **Configuration > Network > TCP/IP**.

TCP/IP Printing

In this field, you can monitor the status of your printing tasks through TCP/IP.

Microsoft Network Printing

In this field, you can monitor the status of your printing tasks through Microsoft Network.

MAC AppleTalk Printing

In this field, you can monitor the status of your printing tasks through MAC AppleTalk.

Management → User

Click the **User** item in the left column to display the user(s) information.

The screenshot shows a web interface with a top navigation bar containing 'Management', 'Configuration', 'Tools', and 'Help'. On the left, a sidebar menu lists 'Management', 'System', 'Wireless', 'Network', and 'User' (which is highlighted). The main content area is titled 'Users Printing Log' and contains a table with the following columns: MAC, IP, Name, Jobs, and Size(KBytes). Below the table is a 'Refresh' button.

Users Printing Log

The items in this field display the user(s) information, which include the user(s) MAC address, IP address, name, and status of printing tasks.

Configuration

Configuration → System

Management	Configuration	Tools	Help
Configuration	System Device		
System	Server Name : PS-AF6465		
Wireless	Location : <input type="text"/>		
Network	Admin Contact : <input type="text"/>		
User	Password : New Password : <input type="text"/>		
E-mail	Confirm Again : <input type="text"/>		
SNMP			
	Port Setting		
	USB : Port Name : PS-AF6465-U1		
	Description : <input type="text"/>		
	P.J.L Printer : No		
	<input type="button" value="Save"/> <input type="button" value="Cancel"/>		

System Device

In this field, you can configure the basic information of your print server.

- **Server Name:** Assign a name to the print server.
- **Location** (optional): Assign a location for the print server
- **Admin Contact** (optional): Assign the Admin Contact's name for the print server.
- **Password:** Enter the Administrator password (3-8 characters). To set up the password, please enter the password in the *New Password* box, and then enter the same one again in the *Confirm Again* box.

Port Settings

In this field, you can assign the ***Port Name*** for the print server, and the description for the USB port. It also allows you to select the **PJL Printer** setting (*Yes* or *No*).

NOTE: *PJL (Print Job Language) has certain job requirements that must be met to work correctly. For more information, please refer to your printer's manual.*

Configuration → Wireless

Management	Configuration	Tools	Help
Configuration	Wireless Interface		
System	Connection Mode : <input checked="" type="radio"/> Infrastructure		
Wireless	<input type="radio"/> Ad-Hoc		
Network	SSID : default (Manually Input or Select from List)		
User	<input type="text" value="default"/> <input type="button" value="Site Survey"/>		
E-mail	Wireless Channel : 12		
SNMP	Transmission Rate : Fully Automatic		
	Encryption		
	<input checked="" type="radio"/> Disable		
	<input type="radio"/> WEP Encryption		
	Length : <input checked="" type="radio"/> 64bits <input type="radio"/> 128bits		
	Format : <input type="radio"/> ASCII <input checked="" type="radio"/> HEX		
	Key 1 : <input type="text"/>		
	Key 2 : <input type="text"/>		
	Key 3 : <input type="text"/>		
	Key 4 : <input type="text"/>		
	Encrypt Data Transmissions Using : <input type="text" value="Key 1"/>		
	Authentication Type : <input checked="" type="radio"/> Open System <input type="radio"/> Shared Key <input type="radio"/> Both		
	<input type="radio"/> WPA-PSK		
	Preshared Key: <input type="text" value="PSK12345"/> (8-63 ASCII or 64 HEX characters)		
	Advanced Setting		
	Beacon Interval : <input type="text" value="100"/> (ms)		
	Preamble : <input checked="" type="radio"/> Long <input type="radio"/> Short		
	<input type="button" value="Save"/> <input type="button" value="Cancel"/>		

Wireless Interface

- **Connection Mode:** Select one of the three connection modes.
 - **Infrastructure** (default) - Connects to compatibly configured wireless AP or router in a WLAN.
 - **Ad-Hoc** - Connect to compatibly configured wireless clients in the peer-to-peer mode.

- **SSID:** Assign the SSID in this box. You can manually input the name or select one from the pull-down menu. To search the available wireless AP within the network, click the **Site Survey** button.
- **Wireless Channel:** Select the channel from the pull-down menu. The default setting is *11*.
- **Transmission Rate:** Select the data transmit rate from the pull-down menu. The default setting is *Fully Automatic*.

WEP Encryption

This field allows you to configure the settings of data encryption. Please remember that the WEP key must be set before the data encryption is enforced.

- **WEP Encryption:** This option allows you to select *Disable*, *64 bits*, and *128 bits* for the encryption setting.
- **WEP Key Format:** You can decide the network key to be encoded by *ASCII* (ASCII characters) or *HEX* (hexadecimal digitals).
- **Authentication Type:** You can set the authentication type by selecting the settings: *Open System*, *Shared Key*, and *Both*.

Then, enter the key(s) for the network in the **Key** box (1~4).

WPA-PSK

Wi-Fi Protected Access is systems to secure wireless (Wi-Fi) networks.

- **Preshared Key:** key in the preshared number (8-63 ASCII or 64 HEX characters)

Advanced Setting

This field allows you to configure more settings, including:

- **Beacon Interval:** Enter the number of beacon interval time in millisecond.
- **Preamble:** This option allows you to set the length of preamble. Setting options are: *Long* - it is set to 144 bits; *Short* - it is set to 72 bits.

*TIP: Once you have changed the settings in each option, click **Save** to store the settings, or **Cancel** to abandon.*

Configuration → Network

Management	Configuration	Tools	Help
------------	---------------	-------	------

Configuration

[System](#)

[Wireless](#)

Network

[User](#)

[E-mail](#)

[SNMP](#)

TCP/IP

IP Address : Manually Assign

IP Address : 192.168.0.1

Subnet Mask : 255.255.255.0

Default Gateway : 0.0.0.0

Automatically Assign

DNS Server Address : 1. 0.0.0.0

2. 0.0.0.0

UPnP : Enable Disable

MAC Rendezvous : Enable Disable

Second HTTP Port : Enable Disable

Port Number : 0

(For Remote Web Configuration and IPP Printing)

Microsoft Network

Workgroup : WORKGROUP

AppleTalk

AppleTalk Zone : *

USB : Chooser Name : PS-AF6465-U1

Printer Type : LaserWriter

PostScript Level : Level 2

Font Group : Standard 35

Save Cancel

TCP/IP

This field contains three options that allow you to configure the TCP/IP setting: **IP Address**, **UPnP**, and **MAC Rendezvous**.

- **IP Address:** This option allows you to set the IP address manually or automatically. When you choose *Manually Assign*, you should enter the related information in the following boxes, including *IP Address*, *Subnet Mask*, and *Default Gateway*.
- **UPnP:** This option allows you to enable or disable UPnP mode.
- **MAC Rendezvous:** This option allows you to enable or disable MAC Rendezvous mode.

Microsoft Network

Enter the name of the Workgroup that you want the print server associated with in this field.

AppleTalk

Enter the AppleTalk Zone name in the box. In the following options, enter the related configuration, such as the printer type.

- **USB**
 - **Chooser Name:** Display the print server's Port name.
 - **Printer Type:** Enter the printer's type in this box.
 - **PostScript Level:** Select from the pull-down menu (*Level 1* or *Level 2*).
 - **Font Group:** Select from the pull-down menu.

TIP: Once you have changed the settings in each option, click **Save** to store the settings, or **Cancel** to abandon.

Configuration → User

Management	Configuration	Tools	Help			
Configuration	Printing Control					
System	Enable User Printing Control : <input type="radio"/> Yes <input checked="" type="radio"/> No					
Wireless	Allow Undefined Users Printing : <input type="radio"/> Yes <input checked="" type="radio"/> No					
Network	<input type="button" value="Save"/> <input type="button" value="Cancel"/>					
User	Define Users					
E-mail	Add User : User Name : <input type="text"/> <input type="button" value="Add"/>					
SNMP	MAC Address : <input type="text"/>					
	Printing Access : <input checked="" type="radio"/> Yes <input type="radio"/> No					
	Delete User : <input type="text"/> <input type="button" value="Delete"/>					
	User List : <table border="1"><thead><tr><th>Name</th><th>MAC</th><th>Printing Access</th></tr></thead><tbody></tbody></table>	Name	MAC	Printing Access		
Name	MAC	Printing Access				

Printing Control

By configuring the **Enable User Printing Control** option (*Yes* or *No*), the user in the User List is permitted to access the print server or not. For the user(s) who is not in the User List, you can also limit the access right by setting the **Allow Undefined Users Printing** option to *Yes* or *No*.

Define Users

You can add/delete the user(s) to/from the User List. The User List at the bottom of the screen displays the current defined user and related information for the print server.

TIP: Once you have changed the settings in each option, click **Save** to store the settings, or **Cancel** to abandon.

Configuration → E-mail

Management	Configuration	Tools	Help
Configuration	E-mail Account		
System	Print Server E-mail Address : <input type="text"/>		
Wireless	Incoming E-mail (POP3) Server Address : <input type="text"/>		
Network	Outgoing E-mail (SMTP) Server Address : <input type="text"/>		
User	Account Name : <input type="text"/>		
E-mail	Password : <input type="password"/>		
SNMP			
	E-mail Notification		
	Enable e-mail notification for printer status changing : <input type="radio"/> Yes <input checked="" type="radio"/> No		
	Notification e-mail will be sent to Admin's e-mail address.		
	Admin E-mail Address : <input type="text"/>		
	(Use ";" to separate multiple e-mail address)		
	E-mail Printing		
	E-mail Printing (ASCII Text Only) : <input checked="" type="radio"/> Enable <input type="radio"/> Disable		
	Receive E-mail Interval : <input type="text" value="15"/> (minutes)		
	<input type="button" value="Save"/> <input type="button" value="Cancel"/>		

E-mail Account

You can assign an E-mail address to the print server, so that your mail of the account can be printed out directly through the printer (ASCII text only). To enable this function, enter the E-mail account in the **Print Server E-mail Address** box.

- **Incoming E-mail (POP3) Server Address:** Enter the server address that is used to receive your E-mail in this box.
- **Outgoing E-mail (SMTP) Server Address:** Enter the server address that is used to send your E-mail in this box.

If your mail server needs to verify the user when sending E-mail, you have to input the **Account Name** and **Password**.

E-mail Notification

You can set the print server to send an alter message when the printer status changes through E-mail. To enable this function, set the **Enable e-mail notification for printer status changing** option to *Yes*. Then, input the administrator's E-mail address in the **Admin E-mail Address** box.

E-mail Printing

- **E-mail Printing (ASCII Text Only):** Select *Enable* to enable the E-mail printing function.
- **Receive E-mail Interval:** Enter the number in this box to set up the time (in minute) to check/receive E-mail regularly.

TIP: Once you have changed the settings in each option, click **Save** to store the settings, or **Cancel** to abandon.

Configuration → SNMP

Management	Configuration	Tools	Help
Configuration			
System			
Wireless			
Network			
User			
E-mail			
SNMP			

SNMP Management	
Community 1	Name : public
	Access Right : Read/Write
Community 2	Name :
	Access Right : Read Only
Community 3	Name :
	Access Right : Read Only

Save Cancel

SNMP Management

SNMP (Simple Network Management Protocol) is a set of protocols for managing complex networks

- **Community 1/2/3:** Enter a name in the **Name** box, and configure the **Access Right** by selecting **Read Only** or **Read/Write** from the pull-down menu.

TIP: Once you have changed the settings in each option, click **Save** to store the settings, or **Cancel** to abandon.

Tools

Tool → Print Test

Management	Configuration	Tools	Help
Tools			
Print Test			
Port Selection			
<input checked="" type="radio"/> USB			
USB port print test requires Native DOS mode support on your printer.			
<input type="button" value="Test"/>			

Print Test

Click **Test** to print a test page.

Tool → E-mail

Management	Configuration	Tools	Help
Tools			
Print Test			
E-mail			
Reset			
Factory Reset			
Firmware Upgrade			
Backup			
Test E-mail Account			
E-mail test will send an e-mail to Admin's e-mail address. Do you want to test e-mail account?			
<input type="button" value="Test"/>			
Receive E-mail			
Do you want to receive e-mail and print out?			
<input type="button" value="Yes"/>			

Test E-mail Account

Click **Test** to send a test E-mail to the given administrator's E-mail address.

Receive E-mail

Click **Yes** to immediately check and receive E-mail, and then print out the mail when available.

Tool → Reset

The screenshot shows a web interface with a top navigation bar containing 'Management', 'Configuration', 'Tools', and 'Help'. On the left, a sidebar titled 'Tools' lists several options: 'Print Test', 'E-mail', 'Reset', 'Factory Reset', 'Firmware Upgrade', and 'Backup'. The 'Reset' option is highlighted. The main content area is titled 'Reset' and contains the text 'Do you want to reset this device?' followed by a 'Yes' button.

Reset

Click **Yes** to immediately reset the print server.


Tool → Factory Reset

The screenshot shows a web interface with a top navigation bar containing 'Management', 'Configuration', 'Tools', and 'Help'. On the left, a 'Tools' sidebar lists 'Print Test', 'E-mail', 'Reset', 'Factory Reset' (highlighted), 'Firmware Upgrade', and 'Backup'. The main content area is titled 'Factory Reset' and contains the question 'Do you want to restore this device to factory default setting?' with a 'Yes' button.

Factory Reset

Click **Yes** to reload the factory settings of the print server.


Tool → Firmware Upgrade

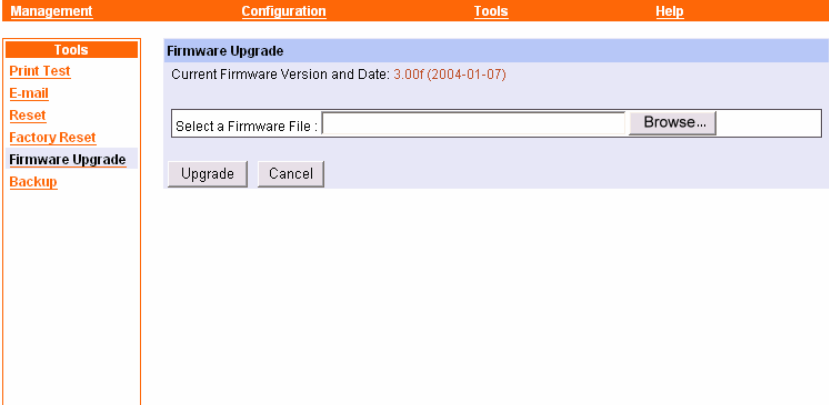

Firmware Upgrade

When a new version of firmware is available (e.g. downloading from the manufacturer's website), you can upgrade the firmware of your print server. Click **Browse** to point to the firmware file, and then click **Upgrade**.

Tool → Backup

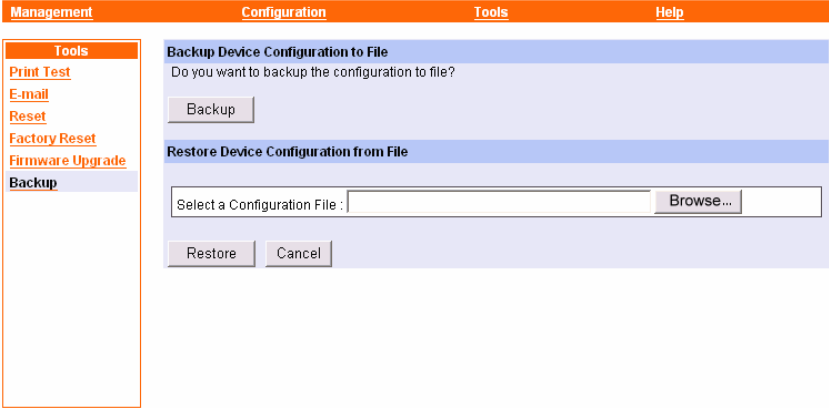

Backup Device Configuration to File

Click **Backup** to backup your current configuration of the print server to file and then save in the computer.

Restore Device Configuration from File

You can reload a configuration that you saved before. Click **Browse** to point to the backup file, and then click **Restore**.

Help

Management	Configuration	Tools	Help
Help	About		
About	Print Server v3.00f		

This screen displays the information of the print server.

PRODUCT SPECIFICATIONS

Printer Connection

Printer Interface: One USB port, compliant with USB 2.0 Hi-speed standard.

Network Connection

Wireless Networking

Network Standards: Wireless LAN standard IEEE802.11g.

Network Data Transfer Rate: 54Mbps with fallback to 48, 36, 24, 18, 12, 11, 9, 6, 5.5, 2, and 1Mbps.

Network Mode: Support both Infrastructure and Ad-hoc mode.

Wired Networking

Network Interface: One 10/100 Fast Ethernet port (RJ-45 connector).

Network Data Transfer Rate: 100Mbps.

Network Protocol Support

Transport Protocols: TCP/IP, SMB, NetBEUI, and AppleTalk.

TCP/IP Protocols Support: BOOTP, SNMP, Telnet, FTP, LPD, DHCP, and IPP.

Hardware

SDRAM: 8MB.

Flash ROM: 2MB.

Operating System Support

- Windows 95/98/ME, Windows NT, Windows 2000/XP/2003;
- NetWare 5.x (NDPS LPR remote printing);
- HP-UX Unix, Sun O.S, Solaris, SCO Unix, AIX;
- Unixware and Linux;
- Mac OS, AppleTalk.

Management

Standard: SNMP

MIBs: MIB-II (RFC 1213).

Utilities: PS-Utility, PS Wizard.

LEDs

Power, USB, LAN, WLAN.

Environmental and Physical

Power Supply: 5VDC.

Operating Temperature: 0°C to 50°C.

Storage Temperature: -25°C to 55°C.

Humidity: 5% to 95%, non-condensing at 30°C.

EMI Compliance

FCC Class B, CE Class B, VCCI Class B