

MOOG

VIDEOLARM

© 2013, Moog Videolarm, Inc. All Rights Reserved



FCH360

Fusion Camera Housing with Panomorph Lens Options

www.moogvideolarm.com

Installation and Operation Instructions for the following models:

FCH360CW	Environmental housing with feed-thru wall/pole mount with 360 viewing window
FCH360C2W	Environmental housing with feed-thru wall/pole mount, 24Vac or 12Vdc input, 360 viewing window, heater & blower
FCH360C2WY	Environmental housing with feed-thru wall/pole mount, 24Vac or 12Vdc input, heater & blower, 360 viewing window, adjustable sunshield
FCH360C8WY	Environmental housing with feed-thru wall/pole mount, dynamic power allocation PoE input, 30 watt midspan included, heater & blower, supports .at PoE cameras, 360 viewing window, adjustable sunshield

Before attempting to connect or operate this product, please read these instructions completely.

81-IN5507
01-18-2013

IMPORTANT SAFEGUARDS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with damp cloth.
- 7 Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
- 8 Cable Runs- All cable runs must be within permissible distance.
- 9 Mounting - This unit must be properly and securely mounted to a supporting structure capable of sustaining the weight of the unit.

Accordingly:

- a. This installation should be made by a qualified service person and should conform to all local codes.
 - b. Care should be exercised to select suitable hardware to install the unit, taking into account both the composition of the mounting surface and the weight of the unit.
- 10 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - 11 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - 12 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 13 Only use attachment/ accessories specified by the manufacturer.
 - 14 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
 - 15 Unplug this apparatus during lighting storms or when unused for long periods of time.
 - 16 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled of objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Be sure to periodically examine the unit and the supporting structure to make sure that the integrity of the installation is intact. Failure to comply with the foregoing could result in the unit separating from the support structure and falling, with resultant damages or injury to anyone or anything struck by the falling unit.

UNPACKING

Unpack carefully. Electronic components can be damaged if improperly handled or dropped. If an item appears to have been damaged in shipment, replace it properly in its carton and notify the shipper.

Be sure to save:


- 1 The shipping carton and packaging material.
They are the safest material in which to make future shipments of the equipment.
- 2 These Installation and Operating Instructions.

SERVICE

If technical support or service is needed, contact us at the following number:

TECHNICAL SUPPORT
AVAILABLE 24 HOURS
1 - 800 - 554 -1124

SAFETY PRECAUTIONS

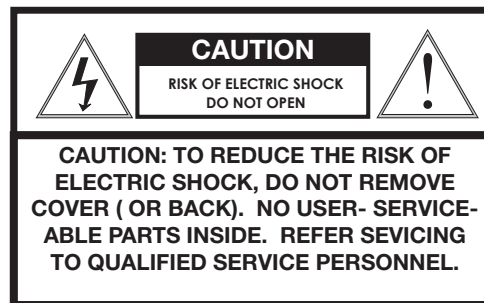

The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk to persons.

Este símbolo se piensa para alertar al usuario a la presencia del "voltaje peligroso no-aislado" dentro del recinto de los productos que puede ser un riesgo de choque eléctrico.

Ce symbole est prévu pour alerter l'utilisateur à la présence "de la tension dangereuse" non-isolée dans la clôture de produits qui peut être un risque de choc électrique.

Dieses Symbol soll den Benutzer zum Vorhandensein der nicht-Isolier "Gefährdungsspannung" innerhalb der Produkteinschließung alarmieren die eine Gefahr des elektrischen Schlages sein kann.

Este símbolo é pretendido alertar o usuário à presença "di tensão perigosa non-isolada" dentro do cerco dos produtos que pode ser um risco de choque elétrico.

Questo simbolo è inteso per avvertire l'utente alla presenza "di tensione pericolosa" non-isolata all'interno della recinzione dei prodotti che può essere un rischio di scossa elettrica.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Este símbolo del punto del exclamation se piensa para alertar al usuario a la presencia de instrucciones importantes en la literatura que acompaña la aplicación.

Ce symbole de point d'exclamation est prévu pour alerter l'utilisateur à la présence des instructions importantes dans la littérature accompagnant l'appareil.

Dieses Ausruf Punktsymbol soll den Benutzer zum Vorhandensein de wichtigen Anweisungen in der Literatur alarmieren, die das Gerät begleitet.

Este símbolo do ponto do exclamation é pretendido alertar o usuário à presença de instruções importantes na literatura que acompanha o dispositivo.

Questo simbolo del punto del exclamation è inteso per avvertire l'utente alla presenza delle istruzioni importanti nella letteratura che accompagna l'apparecchio.



Limited Warranty for Moog Videolarm Products

Moog Videolarm warrants these products to be free from defects in material or workmanship as follows:

PRODUCT CATEGORY	PARTS \ LABOR
All Enclosures and Electronics*	Five (5) Years
Poles/PolEvators™/CamEvator	Three (3) Years
Warrior Series™/Q-View™/IR Illuminators	Five (5) Years
SView Series™	Five (5) Years **6 months if used in auto scan/tour operation
Controllers	Five (5) Years
Power Supplies	Five (5) Years
EcoKit	Three (3) Years
Accessory Brackets	Five (5) Years
Liberty Dome	Three (3) Years
*DeputyDome™, NiteTrac™, Igloo Dome, PurgeDome™	Three (3) Years **6 months if used in auto scan/tour operation

During the labor warranty period, to repair the Product, Purchaser will either return the defective product, freight prepaid, or deliver it to Moog Videolarm Inc. Decatur GA. The Product to be repaired is to be returned in either its original carton or a similar package affording an equal degree of protection with a RMA # (Return Materials Authorization number) displayed on the outer box or packing slip. To obtain a RMA# you must contact our Technical Support Team at 800.554.1124, extension 101. Moog Videolarm will return the repaired Product freight prepaid to Purchaser. Moog Videolarm is not obligated to provide Purchaser with a substitute unit during the warranty period or at any time. After the applicable warranty period, Purchaser must pay all labor and/or parts charges.

The limited warranty stated in these product instructions is subject to all of the following terms and conditions.

TERMS AND CONDITIONS

1. NOTIFICATION OF CLAIMS: WARRANTY SERVICE: If Purchaser believes that the Product is defective in material or workmanship, then written notice with an explanation of the claim shall be given promptly by Purchaser to Moog Videolarm. All claims for warranty service must be made within the warranty period. If after investigation Moog Videolarm determines the reported problem was not covered by the warranty, Purchaser shall pay Moog Videolarm for the cost of investigating the problem at its then prevailing per incident billable rate. No repair or replacement of any Product or part thereof shall extend the warranty period of the entire Product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the Product parts warranty, whichever is greater.

2. EXCLUSIVE REMEDY: ACCEPTANCE: Purchaser's exclusive remedy and Moog Videolarm's sole obligation is to supply (or pay for) all labor necessary to repair any Product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts.

3. EXCEPTIONS TO LIMITED WARRANTY: Moog Videolarm shall have no liability or obligation to Purchaser with respect to any Product requiring service during the warranty period which is subjected to any of the following: abuse, improper use, negligence, accident, lightning damage or other acts of God (i.e., hurricanes, earthquakes), modification, failure of the end-user to follow the directions outlined in the product instructions, failure of the end-user to follow the maintenance procedures recommended by the International Security Industry Organization, written in product instructions, or recommended in the service manual for the Product. Furthermore, Moog Videolarm shall have no liability where a schedule is specified for regular replacement or maintenance or cleaning of certain parts (based on usage) and the end-user has failed to follow such schedule; attempted repair by non-qualified personnel; operation of the Product outside of the published environmental and electrical parameters, or if such Product's original identification (trademark, serial number) markings have been defaced, altered, or removed. Moog Videolarm excludes from warranty coverage Products sold AS IS and/or WITH ALL FAULTS and excludes used Products which have not been sold by Moog Videolarm to the Purchaser. All software and accompanying documentation furnished with, or as part of the Product is furnished "AS IS" (i.e., without any warranty of any kind), except where expressly provided otherwise in any documentation or license agreement furnished with the Product. Any cost associated with removal of defective product and installation of replacement product is not included in this warranty.

4. PROOF OF PURCHASE: The Purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.

DISCLAIMER OF WARRANTY

EXCEPT FOR THE FOREGOING WARRANTIES, Moog Videolarm HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY AND/OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE AND/OR IN ANY OTHER COMPARABLE STATE STATUTE. Moog Videolarm HEREBY DISCLAIMS ANY REPRESENTATIONS OR WARRANTY THAT THE PRODUCT IS COMPATIBLE WITH ANY COMBINATION OF NON-Moog Videolarm PRODUCTS OR NON-Moog Videolarm RECOMMENDED PRODUCTS PURCHASER MAY CHOOSE TO CONNECT TO THE PRODUCT.

LIMITATION OF LIABILITY

THE LIABILITY OF Moog Videolarm, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL Moog Videolarm BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION, REIMBURSEMENT OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR FOR ANY OTHER REASON WHATSOEVER.



Electrical Specifications

Power 24Vac / 12Vdc
Class 2 Only

FCH360 Series

OUTDOOR and PoE MODELS:

FCH360C2W / FCH360C2WY / FCH360C8WY



English

24Vac: 17 watts
12Vdc: 7 watts
PoE:
Camera Power:
Tools Required:

Heater (16 watts), Blower (1 watt)
Heater (6 watts), Blower (1 watt)
IEEE802.at

.100" Flat head screwdriver
Phillips head screwdriver



Español

24Vac: 17 vatios
12Vdc: 7 vatios
PoE:
Energía de la cámara:

Calentador (16 vatios), soplador (1 vatio)
Calentador (6 vatios), soplador (1 vatio)
IEEE802.at

Herramientas requeridas: .100" destornillador principal plano
Destornillador principal Phillips



Français

24Vac: 17 watts
12Vdc: 7 watts
PoE :

Réchauffeur (16 watts), ventilateur (1 watt)
Réchauffeur (6 watts), ventilateur (1 watt)
IEEE802.at

Puissance d'appareil-photo:

Outils requis : .100 » tournevis principal plat Tournevis phillips



Deutsch

24Vac: 17 Watt
12Vdc: 7 Watt
PoE:

Heizung (16 Watt), Gebläse (1 Watt)
Heizung (6 Watt), Gebläse (1 Watt)
IEEE802.at

Kamera-Energie:

Werkzeuge erfordert: .100" flacher Hauptschraubenzieher
Kreuzkopfschraubenzieher



Portuguese

24Vac: 17 watts
12Vdc: 7 watts
Ponto de entrada:

Calefator (16 watts), ventilador (1 watt)
Calefator (6 watts), ventilador (1 watt)
IEEE802.at

Ferramentas exigidas: .100" chave de fenda principal lisa Chave de fenda principal de Phillips



Italiano

24Vac: 17 watt
12Vdc: 7 watt
PoE:

Riscaldatore (16 watt), ventilatore (1 watt)
Riscaldatore (6 watt), ventilatore (1 watt)
IEEE802.at

Potere della macchina fotografica:

Gli attrezzi hanno richiesto: .100,, cacciaviti capi piani Cacciavite phillips

Indoor Model:

FCH360CW



No Electronics



Ninguna electrónica



Aucune électronique



Keine Elektronik




Nenhuma eletrônica




Nessun'electronica

Contents of Box

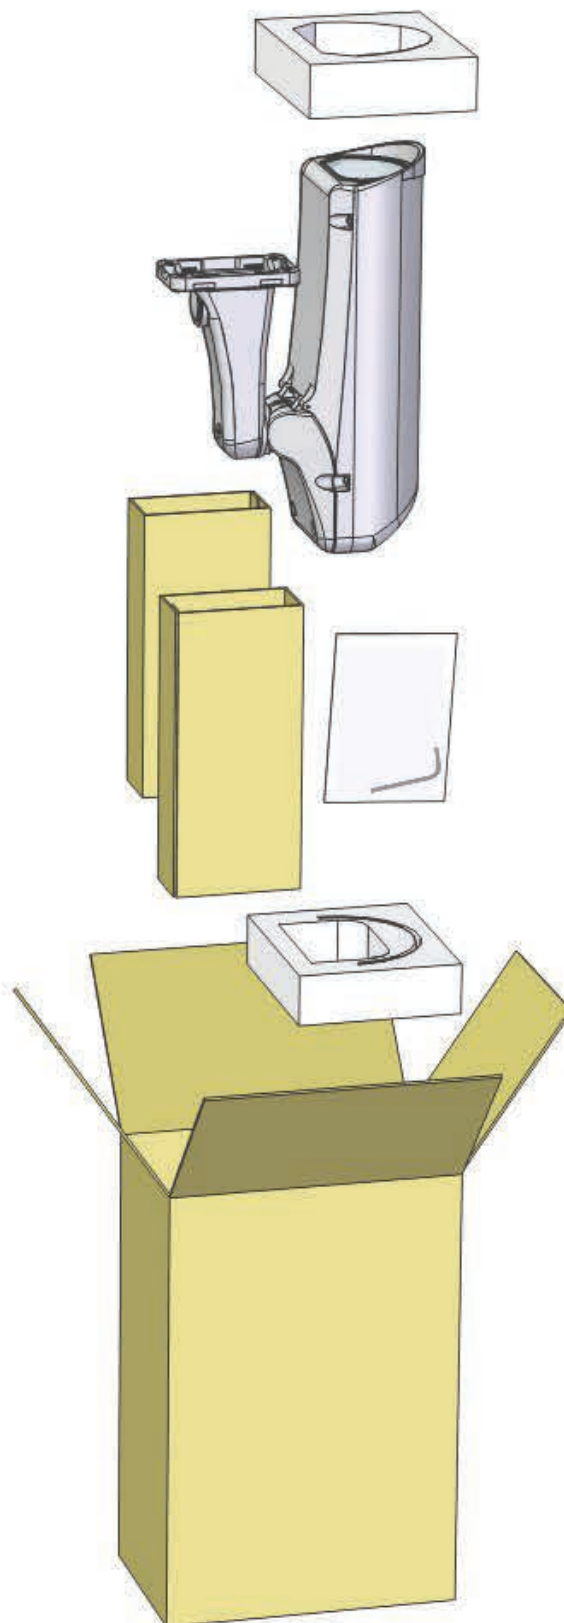

NOTE: THE FOLLOWING INSTRUCTIONS MAINLY SHOW THE FCH360CW, BUT THESE INSTRUCTIONS ARE APPLICABLE TO ALL FCH360 MODELS.


1

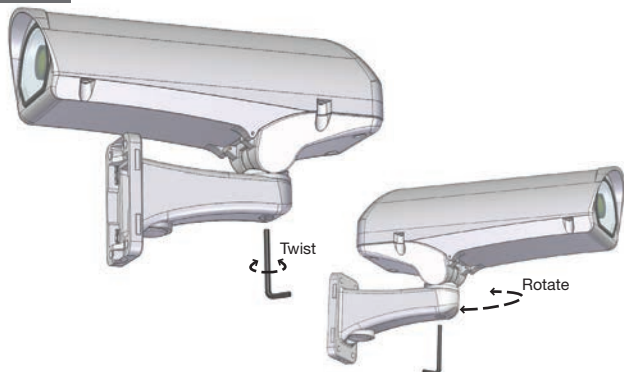

Loosen and then rotate the wall mount to achieve the proper orientation.

- Afloje y gire el soporte de pared para conseguir la orientación adecuada.
- Desserrer et puis tourner le support mural pour atteindre le bon sens.
- Lösen und drehen Sie dann die Wandhalterung, um die richtige Ausrichtung zu erreichen.
- Solte e, em seguida, gire o suporte de parede para alcançar a orientação adequada.
- Allentare e quindi ruotare il supporto a parete per raggiungere il corretto orientamento.

2

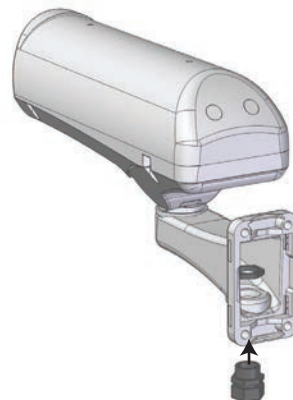


If you are running a conduit to the housing, first install the appropriate fitting to the wall mount.

- Si usted está funcionando con un conducto a la cubierta, primero instale la guarnición apropiada al montaje de la pared.
- Si vous courez un conduit au logement, installez d'abord l'ajustage de précision approprié sur le bâti de mur.
- Wenn Sie ein Rohr zum Gehäuse laufen lassen, bringen Sie zuerst die passende Befestigung zur Wandbefestigung an.
- Se você está funcionando uma canalização à carcaça, instale primeiramente o encaixe apropriado à montagem da parede.
- Se stiate facendo funzionare un condotto all'alloggiamento, in primo luogo installi il montaggio adatto al supporto della parete.

WALL MOUNTING

3

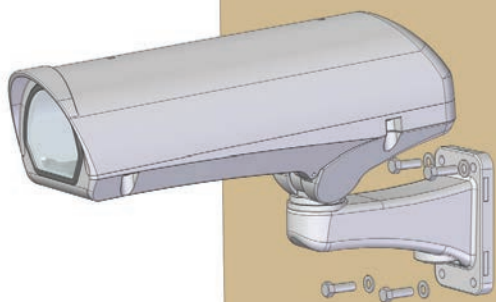


Attach mount to wall with suitable hardware (not provided).

- Ate el montaje a la pared con el hardware conveniente (no proporcionado).
- Attachez le bâti au mur avec le matériel approprié (non fourni).
- Bringen Sie Einfassung zur Wand mit der verwendbaren Hardware an (nicht bereitgestellt).
- Una a montagem à parede com a ferragem apropriada (não fornecida).
- Attacchi il supporto alla parete con fissaggi adatti (non forniti).

POLE MOUNTING

4

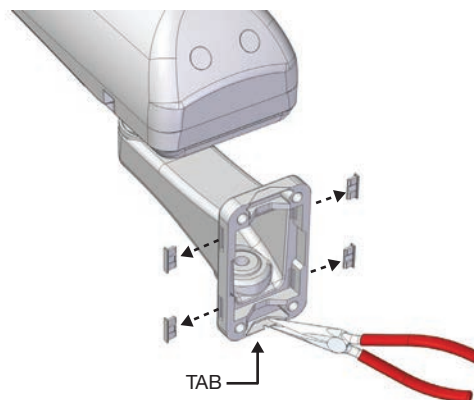


If attaching to pole, first break away tabs with pliers and remove (4) strap plugs.

- Si atan al poste, el primeros rompen lejos lengüetas con los alicates y quitan (4) los enchufes de la correa.
- Si attachant au poteau, les premiers cassent loin des étiquettes avec des pinces et enlèvent (4) des prises de courroie.
- Bei der Befestigung zum Pfosten, brechen erste weg Vorsprünge mit Zangen und entfernen (4) Bügelstecker.
- Se unindo ao pólo, o primeiros quebram afastado abas com alicates e removem (4) plugues da cinta.
- Se attaccando al palo, i primi rompono via le linguette con le pinze e rimuovono (4) la cinghia tappa.

Recommended Hardware for the Mounting Holes: • 5/16" - 18 (or M8 for metric) x minimum 1 1/4" Hex Head Bolt • 5/16" Flat Washer
• 5/16" Lock Washer

5

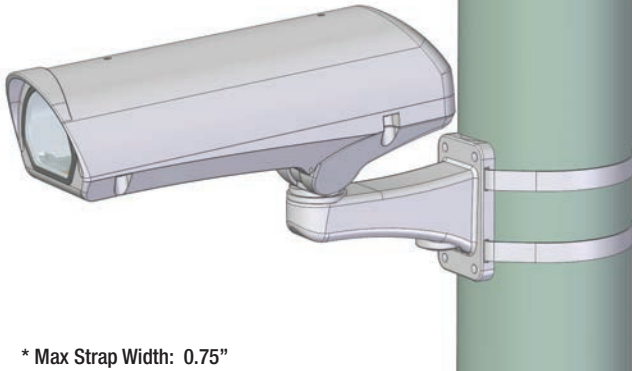


* Max Strap Width: 0.75"

Attach mount to pole with suitable hardware (not provided).

- Ate el montaje al poste con el hardware conveniente (no proporcionado).
- Attachez le bâti au poteau avec le matériel approprié (non fourni).
- Bringen Sie Einfassung zum Pfosten mit der verwendbaren Hardware an (nicht bereitgestellt).
- Una a montagem ao pólo com a ferragem apropriada (não fornecida).
- Attacchi il supporto al palo con fissaggi adatti (non forniti).



6

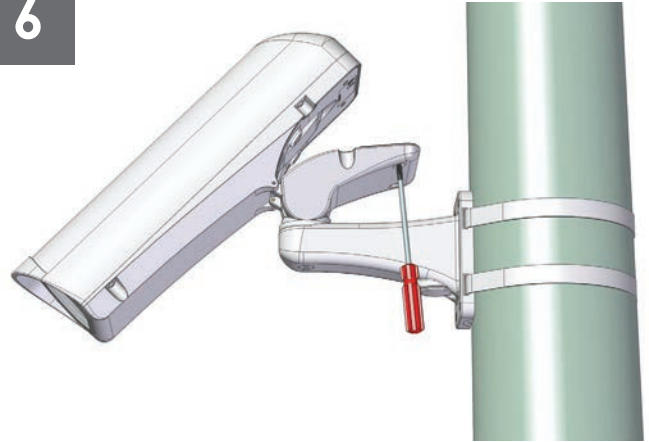

Hinge housing away from mount by loosening (2) rear screws.

- Abisagre la cubierta lejos del montaje aflojando (2) los tornillos posteriores.
- Articulez le logement à partir du bâti en desserrant (2) les vis arrière.
- Lagern Sie Gehäuse weg von Einfassung schwenkbar, indem Sie (2) hintere Schrauben lösen.
- Articule a carcaça longe da montagem afrouxando (2) os parafusos traseiros.
- Alloggiamento della cerniera a partire dal supporto allentando (2) viti posteriori.


7

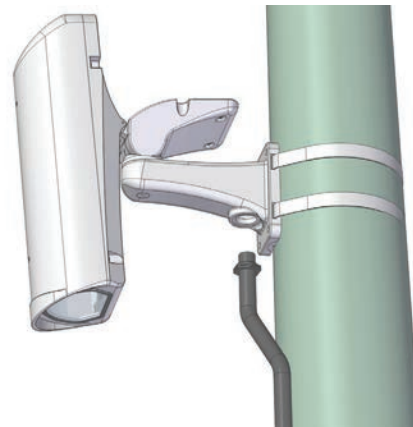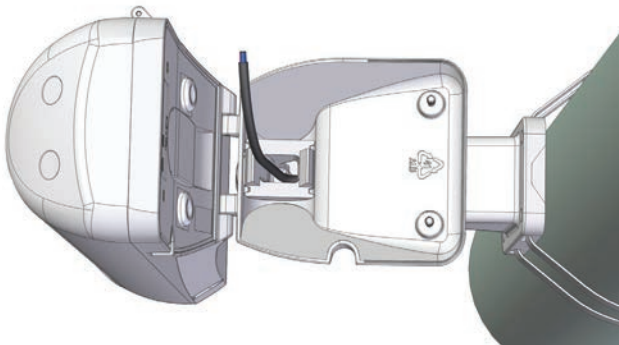

Run cables through mount either by conduit input or through the back of the mount.

- Funcione con los cables montan a través por el conducto entrado o a través de la parte posterior del montaje.
- Courez les câbles montent à travers par le conduit entré ou par le dos du bâti.
- Laufen lassen Sie Kabel anbringen durch entweder durch das eingegebene Rohr oder durch die Rückseite der Einfassung.
- Funcione cabos montam completamente pela canalização entrada ou através da parte traseira da montagem.
- Faccia funzionare i cavi attraverso montano dal condotto immesso o tramite la parte posteriore del supporto.


8

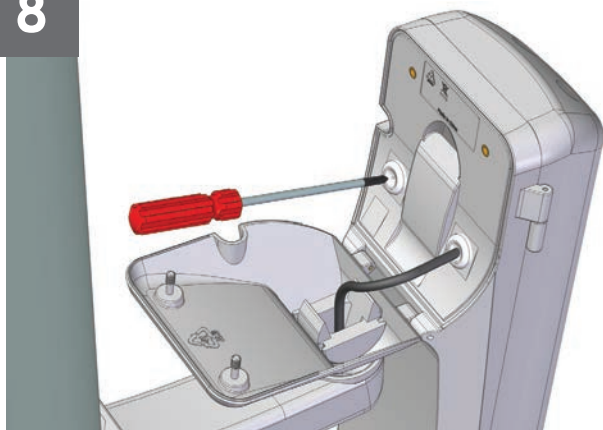

Pass cables through wiring membranes (use screwdriver to pierce).

- Pase los cables a través de las membranas del cableado (el destornillador del uso a perforar) .
- Passez les câbles par des membranes de câblage (le tournevis d'utilisation à percer).
- Führen Sie Kabel durch Verdrahtungsmembranen (zu durchbohren der Gebrauchsschraubenzieher) .
- Passe cabos através das membranas da fiação (a chave de fenda do uso a perfurar).
- Passi i cavi tramite le membrane dei collegamenti (cacciavite di uso da perforare).


9

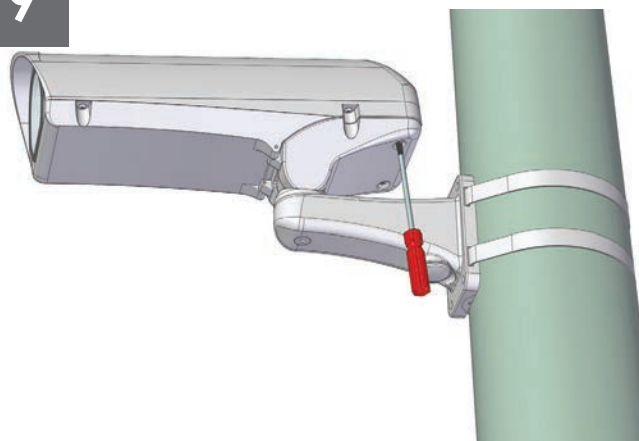

Hinge the housing closed and tighten (2) rear screws.

- Abisagre la cubierta cerrada y apriete (2) los tornillos posteriores.
- Articulez le logement fermé et serrez (2) les vis arrière.
- Lagern Sie das geschlossene Gehäuse schwenkbar und ziehen Sie (2) hintere Schrauben fest.
- Articule a carcaça fechado e aperte (2) os parafusos traseiros.
- Munisca l'alloggiamento di cardini chiuso e stringa (2) viti posteriori.


10

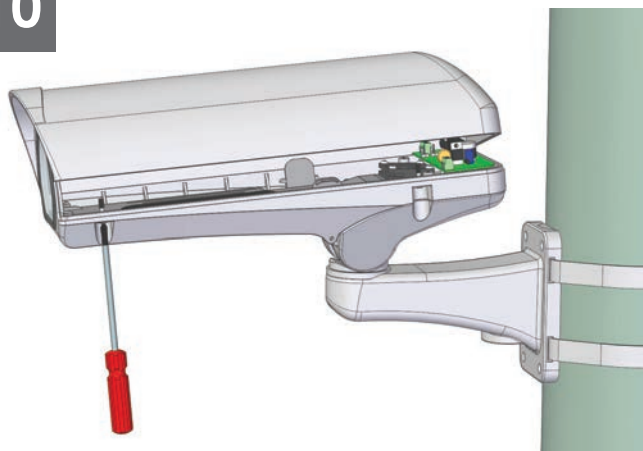

Open housing lid.


- Abra la tapa de la cubierta.
- Ouvrez le couvercle de logement.
- Öffnen Sie Gehäusekappe.
- Abra a tampa da carcaça.
- Apra il coperchio dell'alloggiamento.

11

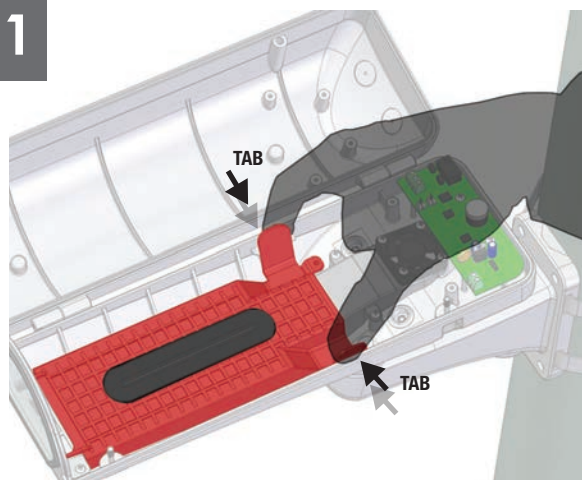

Remove camera tray by squeezing tabs together.

- Quite la bandeja de la cámara exprimiendo lengüetas juntas.
- Enlevez le plateau d'appareil-photo en serrant des étiquettes ensemble.
- Entfernen Sie Kamerabehälter, indem Sie zusammen Vorsprünge zusammendrücken.
- Remova a bandeja da câmera espremendo abas junto.
- Rimuova insieme il vassoio della macchina fotografica comprimendo le linguette.

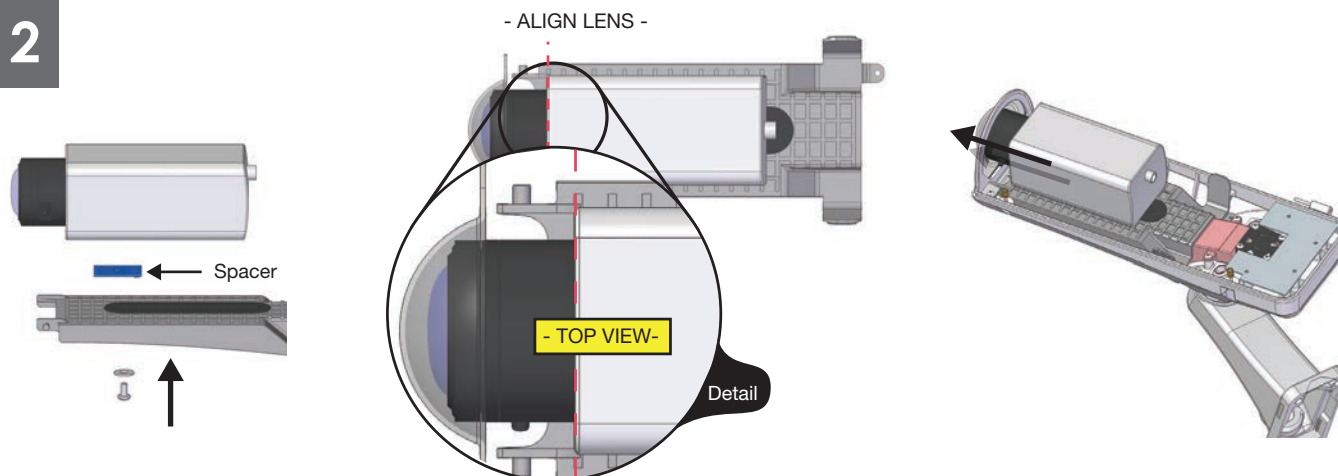


Mount camera with ¼-20 hardware. Position the lens as shown and center with the spacers as needed, confirm tabs are securely snapped into place. NOTE: Take care not to scratch dome with lens case.

- Monte la cámara con ¼ -20 hardware. Coloque el lente como se muestra y centro con los espaciadores según sea necesario, confirmar pestañas estén bien encajados. NOTA: Tenga cuidado de no rayar cúpula con estuche.
- Montage de la caméra avec ¼ -20 matériel. Positionnez l'objectif dans le centre et avec les entretoises au besoin, confirmer onglets sont correctement enclenché. REMARQUE: Veillez à ne pas rayer dôme avec étui à lentilles.
- Mount Kamera mit ¼ -20 Hardware. Positionieren Sie das Objektiv wie abgebildet und in der Mitte mit den Abstandshaltern wie nötig, werden sicher einrastet bestätigen Registerkarten. HINWEIS: Achten Sie darauf, Kuppel mit Linsenbehälter kratzen.
- Suporte de câmera com ¼ de hardware -20. Posicione a lente como mostrado e centro com os espaçadores, conforme necessário, confirme guias são bem encaixada no lugar. NOTA: Tome cuidado para não arranhar cúpula com lente caso.
- Montare con fotocamera ¼ -20 hardware. Posizionare la lente come mostrato e centro con i distanziali, se necessario, verificare le schede siano correttamente scattati in posizione. NOTA: Fare attenzione a non graffiare cupola con portalenti.

INPUT POWER	CAMERA POWER	GO TO
⇒ 24Vac	⇒ 24Vac	⇒ SECTION A
⇒ 12Vdc	⇒ 12Vdc	⇒ SECTION B
⇒ 24Vac	⇒ 12Vdc	⇒ SECTION C
⇒ PoE (30W)	⇒ PoE (30W)	⇒ SECTION D

SECTION A: 24Vac Input for 24Vac Camera

A

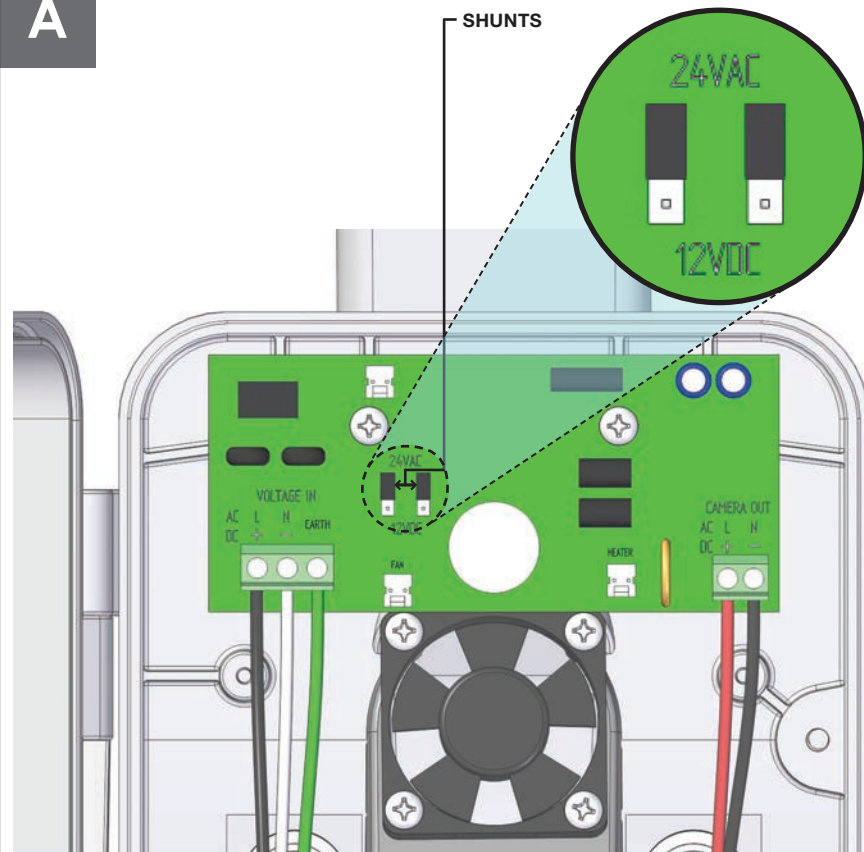

- Terminate power and data lines.
- Install shunts on "24Vac" jumpers as shown.
- Power output to camera will be 24Vac.

- Termine las líneas de la energía y de datos.
- Instale la desviación en el puente "24Vac" como se muestra.
- La salida de energía a la cámara será 24Vac.

- Terminez les lignes de puissance et de données.
- Installez le shunt sur le pullover « 24Vac » comme montré.
- Le rendement de puissance à l'appareil-photo sera 24Vac.


- Beenden Sie Energie und Datenleitungen.
- Bringen Sie Shunt auf Überbrücke „24Vac“ wie gezeigt an.
- Abgabeleistung zur Kamera ist 24Vac.

- Termine linhas do poder e de dados.
- Instale a derivação na ligação em ponte "24Vac" como mostrada.
- A saída de poder à câmera será 24Vac.

- Termini le linee di dati e di potere.
- Installi lo shunt sul ponticello "24Vac," come indicato.
- L'output di forza motrice alla macchina fotografica sarà 24Vac.

SECTION B: 12Vdc Input for 12Vdc Camera

B

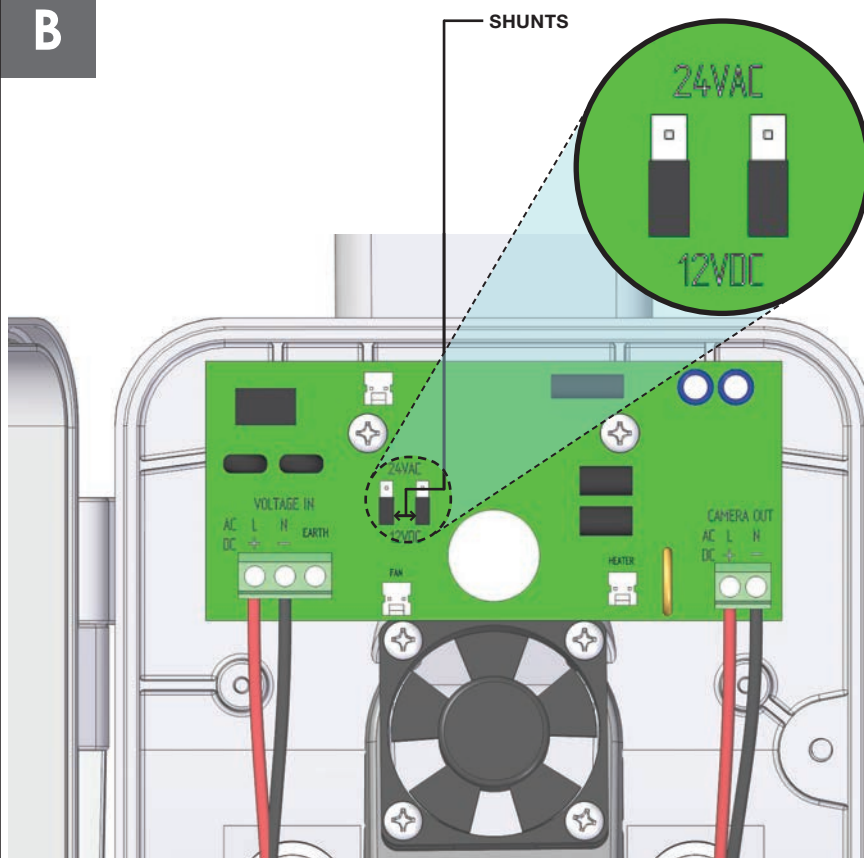

- Terminate incoming voltage as shown.
- Install shunts on "12Vdc" jumpers as shown.
- Power output to camera will be 12Vdc.

- Termine el voltaje entrante como se muestra.
- Instale la desviación en el puente "12Vdc" como se muestra.
- La salida de energía a la cámara será 12Vdc.


- Terminez la tension entrante comme montrée.
- Installez le shunt sur le pullover « 12Vdc » comme montré.
- Le rendement de puissance à l'appareil-photo sera 12Vdc.

- Beenden Sie ankommende Spannung wie gezeigt.
- Bringen Sie Shunt auf Überbrücke „12Vdc“ wie gezeigt an.
- Abgabeleistung zur Kamera ist 12Vdc.

- Termine a tensão entrante como mostrada.
- Instale a derivação na ligação em ponte "12Vdc" como mostrada.
- A saída de poder à câmera será 12Vdc.

- Termini la tensione ricevuta come indicata.
- Installi lo shunt sul ponticello "12Vdc," come indicato.
- L'output di forza motrice alla macchina fotografica sarà 12Vdc.

SECTION C: 12Vac Input for 12Vdc Camera

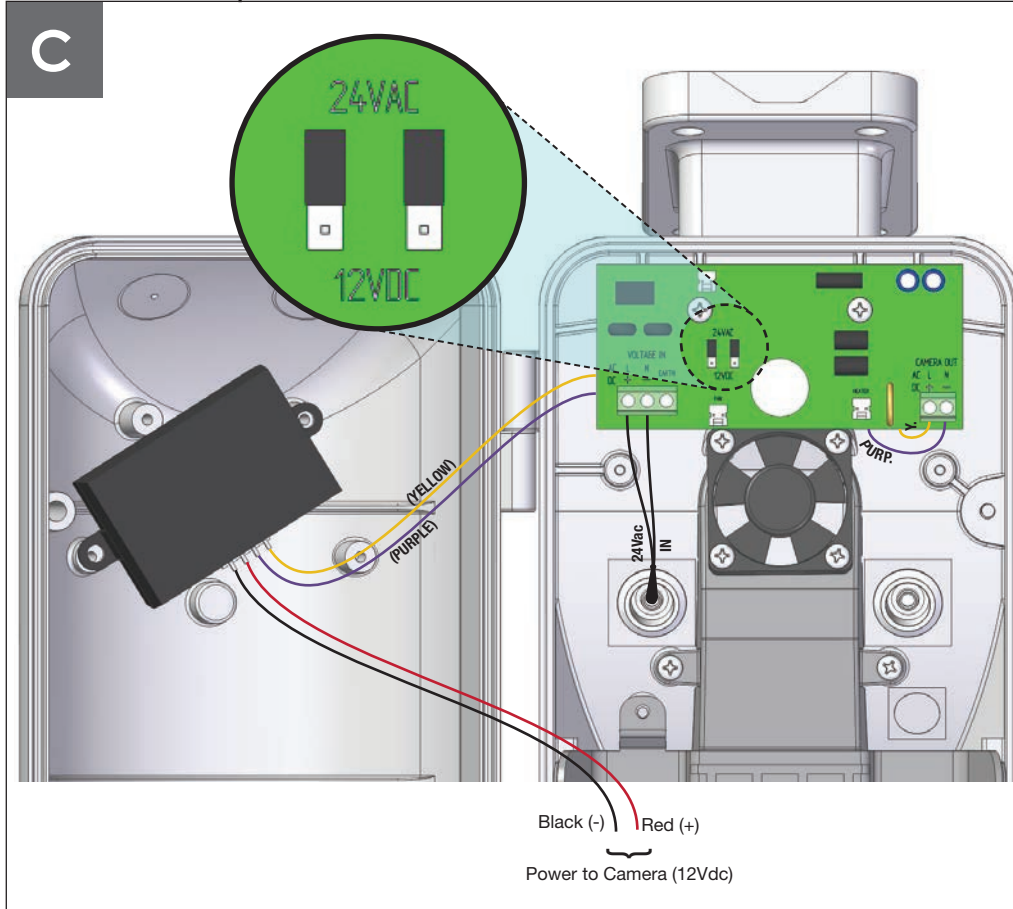

- Terminate incoming 24Vac on board.
- Shunts should be installed on 24Vac jumpers.
- Terminate the 12Vdc leads (coming from power supply mounted on husing lid) into corresponding terminals on camera.

- Terminar 24Vac entrantes a bordo.
- Las derivaciones se deben instalar en los puentes de 24 VAC.
- Terminar los conductores de 12 VCC (procedente de la fuente de alimentación montada en la tapa Husing) en los terminales correspondientes de la cámara.
- Mettre fin à 24Vac entrants à bord.
- Shunts doivent être installés sur les cavaliers 24Vac.
- Terminer les fils 12Vdc (en provenance de l'alimentation montée sur Husing couvercle) dans les terminaux correspondants sur l'appareil photo.
- Beenden Sie eingehende 24Vac an Bord.
- Shunts sollte auf 24Vac Jumper installiert werden.
- Beenden Sie die Leads 12Vdc (kommend von der Stromversorgung auf Husing Deckel montiert) in entsprechende Endgeräte vor der Kamera.
- Encerra 24Vac entrada a bordo.
- Shunts deve ser instalado em jumpers 24VAC.
- Terminar as ligações 12VDC (proveniente de fonte de alimentação montada no Husing tampa) em terminais correspondentes na câmara.
- Termina 24Vac in arrivo a bordo.
- Shunt deve essere installato su ponticelli 24Vac.
- Terminare i cavi 12Vdc (provenienti dalla rete di alimentazione montato su husing copercchio) nei terminali corrispondenti sulla macchina fotografica.

SECTION D: PoE 30W Input for 30W Camera

NOTE:

To maximize power for the camera and heater option, the unit requires that you calibrate the enclosure. During calibration, the onboard processor intelligently determines the maximum safe power output of the midspan, and ensures that the enclosure does not exceed that limit. Once calibration is complete the required values are stored in permanent memory, with no additional calibration required.


- Para maximizar la potencia de la opción de cámara y la calefacción, la unidad requiere que calibre la caja. Durante la calibración, el procesador de a bordo determina de forma inteligente la potencia máxima seguridad del centro de la luz, y asegura que el recinto no exceda de ese límite. Una vez que la calibración se ha completado los valores requeridos se almacenan en la memoria permanente, sin calibración adicional.
- Pour maximiser la puissance de l'option appareil photo et le chauffage, l'unité exige que vous calibrer l'enceinte. Lors de l'étalonnage, le processeur embarqué détermine intelligemment la puissance de sortie maximale de sécurité de l'injecteur, et veille à ce que l'enceinte ne dépasse pas cette limite. Une fois l'étalonnage est terminé, les valeurs requises sont stockées dans la mémoire permanente, sans étalonnage supplémentaire n'est nécessaire.
- Um Strom für die Kamera und Heizung Option zu maximieren, setzt das Gerät, dass Sie das Gehäuse zu kalibrieren. Während der Kalibrierung der Onboard-Prozessor ermittelt intelligent die maximale sichere Leistung der Feldmitte, und sorgt dafür, dass das Gehäuse nicht überschreitet diese Grenze. Sobald die Kalibrierung abgeschlossen ist die geforderten Werte im permanenten Speicher abgelegt werden, ohne zusätzliche Kalibrierung erforderlich.
- Para maximizar a potência para a opção câmera e aquecedor, a unidade exige que você calibrar o gabinete. Durante a calibragem, o processador de bordo inteligentemente determina a potência de saída máxima de segurança do midspan, e assegura que o invólucro não exceder o limite. Uma vez que a calibração é completar os valores necessários são armazenados na memória permanente, sem calibração adicional necessário.
- Per massimizzare la potenza per l'opzione della fotocamera e il riscaldatore, l'unità richiede la calibrazione del contenitore. Durante la calibrazione, il processore a bordo determina in modo intelligente la potenza massima sicurezza del midspan, e assicura che la custodia non superi tale limite. Una volta calibrazione è completa dei necessari valori memorizzati nella memoria permanente, senza calibrazione aggiuntiva richiesta.

WARNING!

- The heater and blower will not start for 60 seconds after power is applied to the product.
- Wait for the camera to completely boot up before pressing the calibration button. This will allow for the most accurate calibration.

- The heater and blower will not start for 60 seconds after power is applied to the product.
- Wait for the camera to completely boot up before pressing the calibration button. This will allow for the most accurate calibration.
- Le chauffage et de ventilation ne démarre pas pendant 60 secondes après mise sous tension est appliquée au produit.
- Attendez que l'appareil photo à démarrer complètement avant appuyant sur le bouton d'étalonnage. Cela permettra pour le calibrage le plus précis.
- Die Heizung und das Gebläse wird nicht für 60 Sekunden nach dem Einschalten starten, um das Produkt angewendet wird.
- Warten Sie, bis sich die Kamera komplett hochfahren, bevor Sie die Kalibrierung Taste. Dies wird für die genaue Kalibrierung ermöglichen.
- Aquecedor e soprador A não será iniciado durante 60 segundos após a energia é aplicada ao produto.
- Aguarde até que a câmera completamente arrancar antes de premir o botão de calibração. Isto irá permitir a calibração mais precisas.
- Il riscaldamento e soffiante non inizierà per 60 secondi dopo l'alimentazione è applicata al prodotto.
- Attendere che la macchina fotografica per avviare completamente a prima di premere il pulsante di calibrazione. Questo permetterà la taratura più accurata.

D

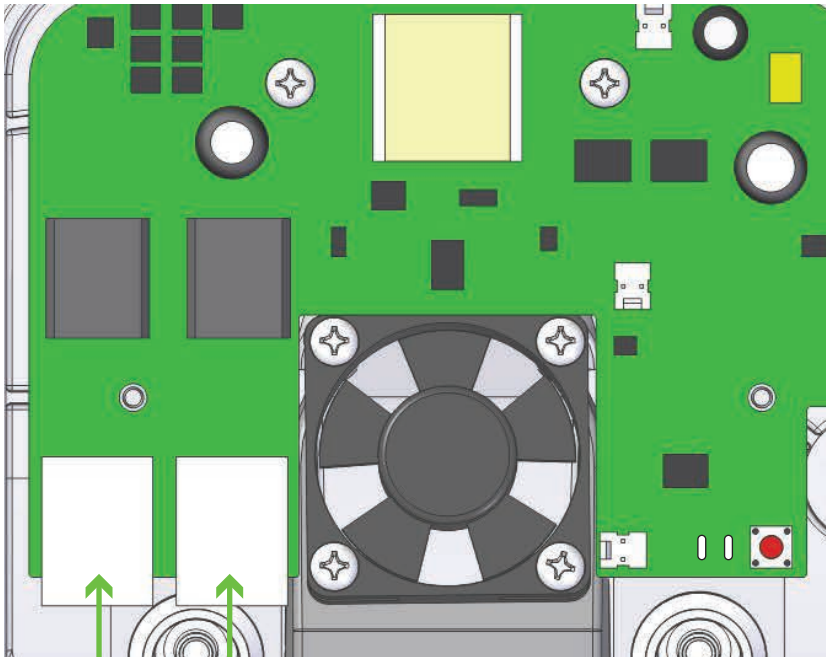


To Network To Camera

Connect the network cable from the midspan to the connector that is labeled "To Network" connect the camera to the connector labeled "To Camera". When power is applied the "Heat" LED will turn ON for 5 seconds. 60 seconds the blower will start.

- Conecte el cable de red del centro de la luz en el conector que tiene la etiqueta "Para Red", conecte la cámara al conector con la etiqueta "Para la cámara". Cuando la energía se aplica el "calor" LED se encenderá durante 5 segundos. 60 segundos, el ventilador se enciende.
- Branchez le câble réseau de la mi-portée sur le connecteur qui est étiqueté «Pour Réseau» connecter l'appareil photo au connecteur marqué "à la caméra". Lorsqu'une tension est appliquée la "chaleur" LED s'allume pendant 5 secondes. 60 secondes le ventilateur démarre.
- Schließen Sie das Netzkabel aus dem Midspan an den Anschluss, die den Namen "Zum Network" schließen Sie die Kamera an den Anschluss mit der Aufschrift "Zur Kamera". Wenn die Macht der "Heat" wird angewendet LED für 5 Sekunden einzuschalten. 60 Sekunden das Gebläse startet.
- Conecte o cabo de rede do midspan ao conector que é rotulado de "rede" conectar a câmera ao conector identificado como "Para Camera". Quando a energia é aplicada a "Heat" LED irá acender por 5 segundos. 60 segundos, o ventilador começará.
- Collegare il cavo di rete dal midspan al connettore che viene etichettato come "alla rete" collegare la fotocamera al connettore etichettato "Per Camera". Quando il potere è applicato il "Heat" LED si accende per 5 secondi. 60 secondi il ventilatore si avvia.

D

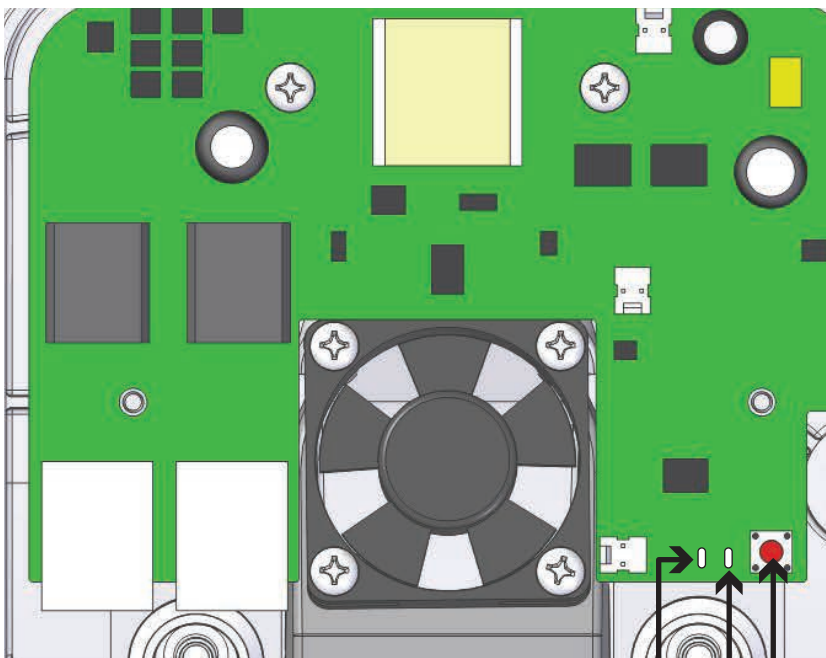


Test LED
Heat LED
Calibration Button

Press the Calibration button for one second. Both the Test and Heat LED will turn ON. Once the unit has been successfully calibrated, the Test and Heat LED will turn OFF. Once this is complete the Heat LED will turn ON only if the heater is ON.

- Pulse el botón de calibración durante un segundo. Tanto la prueba y el calor se encenderá. Una vez que la unidad ha sido calibrado correctamente, la prueba y el calor del LED se apagará. Una vez que se trata de completar el calor se encenderá sólo si el calentador está encendido.
- Appuyez sur le bouton d'étalonnage pour une seconde. Tant le test et la chaleur LED s'allume. Une fois l'appareil a été étalonné avec succès, le test et la chaleur LED s'éteindra. Une fois cette opération terminée, la chaleur LED s'allume que si le chauffage est allumé.
- Drücken Sie die Taste Kalibrierung für eine Sekunde. Sowohl der Test- und Wärme-LED leuchtet auf. Sobald das Gerät erfolgreich kalibriert wurde, wird die Test- und Wärme-LED auszuschalten. Sobald dies abgeschlossen ist die Wärme-LED leuchtet auf, wenn die Heizung an ist.
- Pressione o botão de calibração para um segundo. Tanto o teste como calor LED acenderá. Uma vez que o aparelho foi calibrado com sucesso, o teste e calor LED apaga-se. Uma vez que este é completar o calor LED acenderá se o aquecedor está ligado.
- Premere il pulsante di calibrazione per un secondo. Sia il test e di calore LED si accende. Una volta che l'unità è stata correttamente calibrata, il collaudo e calore LED si spegne. Una volta che questo è completare il calore LED si accende solo se il riscaldatore è ON.


13

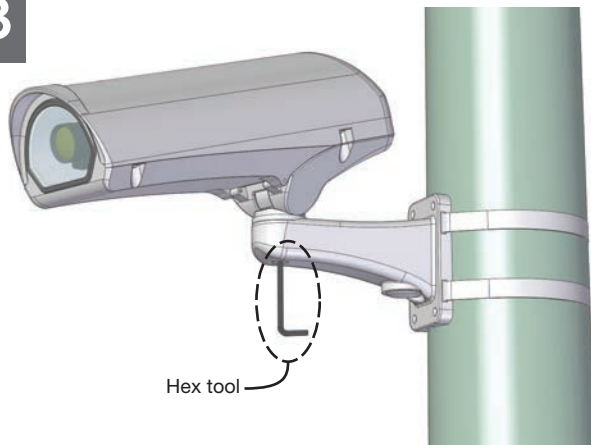

Adjust the aim of the housing by loosening the screw on the mount arm.

- Ajuste la puntería de la cubierta aflojando el tornillo en el brazo del montaje.
- Ajustez le but du logement en desserrant la vis sur le bras de bâti.
- Justieren Sie das Ziel des Gehäuses, indem Sie die Schraube am Einfassungsarm lösen.
- Ajuste o alvo da carcaça afrouxando o parafuso no braço da montagem.
- Registri lo scopo dell'alloggiamento allentando la vite sul braccio del supporto.


14

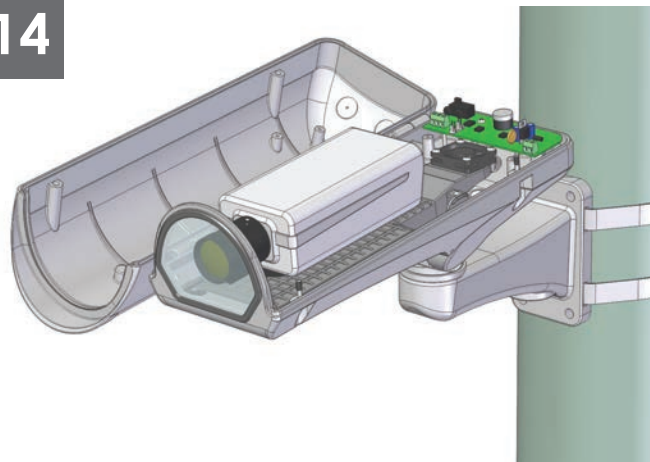

After powering your system up, make necessary focus and camera adjustments.

- Después de accionar su sistema para arriba, haga los ajustes necesarios del foco y de la cámara.
- Après avoir mis votre système, faites les ajustements nécessaires de foyer et d'appareil-photo.
- Nachdem Sie oben Ihr System angetrieben haben, nehmen Sie notwendige Fokus- und Kamerajustagen vor.
- Após ter psto seu sistema acima, faça ajustes necessários do foco e da câmera.
- Dopo la potenza del vostro sistema in su, procedi alle registrazioni necessarie della macchina fotografica e del fuoco.


15

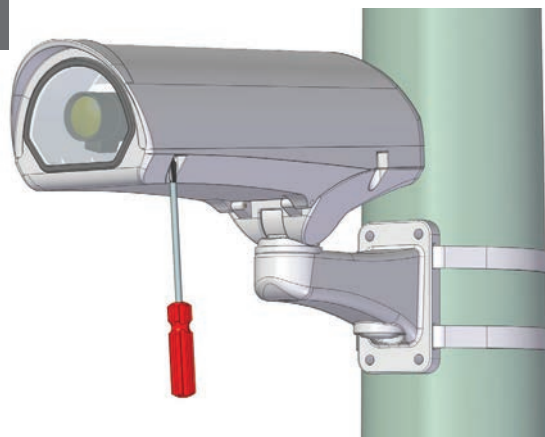

Close the housing lid and securely tighten the (2) lid screws.

- Cierre la tapa de la cubierta y apriete con seguridad (2) los tornillos de la tapa.
- Fermez le couvercle de logement et serrez solidement (2) les vis de couvercle.
- Schließen Sie die Gehäusekappe und ziehen Sie sicher die (2) Kappenschrauben fest.
- Feche a tampa da carcaça e aperte firmemente (2) os parafusos da tampa.
- Chiuda il coperchio dell'alloggiamento e saldamente stringa (2) il coperchio avvita.


16

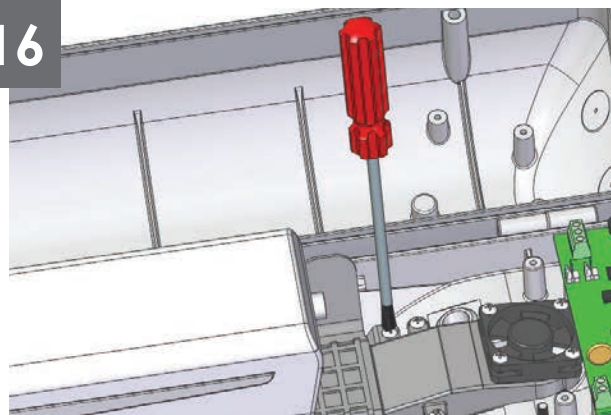

The camera tray can be securely locked into place with the provided 3.5 x 7mm screw. Tighten it through the rear tray tab.

- La bandeja de la cámara se puede trabar con seguridad en lugar con el tornillo proporcionado de 3.5 x de 7m m. Apriétela a través de la lengüeta posterior de la bandeja.
- Le plateau d'appareil-photo peut être solidement fermé à clef sur l'endroit avec la vis fournie de 3.5 x de 7mm. Serrez-le par l'étiquette arrière de plateau.
- Der Kamerabehälter kann in Platz mit der zur Verfügung gestellten 3.5 x 7mm Schraube sicher verriegelt werden. Ziehen Sie ihn durch den hinteren Behältervorsprung fest.
- A bandeja da câmera pode ser firmemente fechado no lugar com o parafuso fornecido de 3.5 x de 7mm. Aperte-a através da aba traseira da bandeja.
- Il vassoio della macchina fotografica può essere saldamente bloccato nel posto con la vite fornita di 7mm x di 3.5. Stringalo attraverso la linguetta posteriore del vassoio.

17

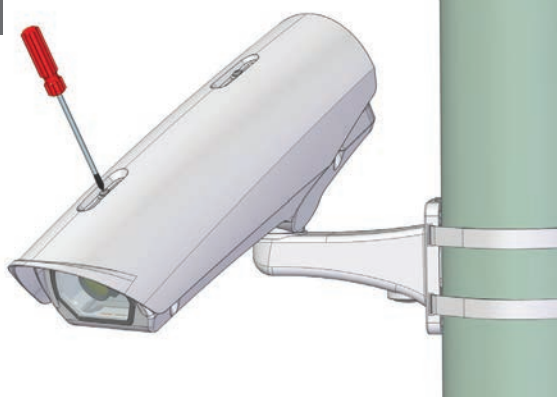

If your housing has a sunshield, adjust it for your particular lighting conditions by loosening (2) screws.

- Si su cubierta tiene un sunshield, ajústelo para que haya sus condiciones de iluminación particulares aflojando (2) los tornillos.
- Si votre logement a un sunshield, ajustez-le à vos états d'éclairage particuliers en desserrant (2) des vis.
- Wenn Ihr Gehäuse ein sunshield hat, stellen Sie es auf Ihre bestimmten Beleuchtungszustände ein, indem Sie (2) Schrauben lösen.
- Se sua carcaça tem um sunshield, ajuste-o para suas condições de iluminação particulares afrouxando (2) os parafusos.
- Se il vostro alloggiamento ha un sunshield, registrilo per ottenere le vostre condizioni di luce particolari allentando (2) avvit.

18


Total vA consumed	Wire Gauge							
	⁵ / ₂₂	⁷ / ₂₀	¹ / ₁₈	¹ / ₁₆	² / ₁₄	⁴ / ₁₂	⁶ / ₁₀	MM ² AWG
5.5	ft	400	600	960	-	-	-	
10	m	120	180	292	800	1300	-	
20		36.5	54.9	91.4	146	243	396	
30		86	141	225	358	571	905	1440
40		27.1	43.0	68.6	109	174	275	438
50		65	90	130	225	350	525	830
60		19.8	27.4	39.6	68.6	106	160	252
70		44	70	112	179	285	452	720
80		13.4	21.3	34.1	54.6	86.9	138	219
		35	56	90	143	228	362	576
		10.6	17.1	27.4	43.6	69.5	110	175
		29	47	75	119	190	301	480
		9.4	14.3	22.9	36.2	57.9	91.7	146
		25	40	64	102	163	258	411
		8.8	12.2	19.5	31.1	49.7	78.6	125
		31	34	55	85	140	215	340
		7.6	10.3	16.8	25.9	42.7	65.5	103

These are recommended maximum distances for 24VAC with a 10% voltage drop.


- Éstos se recomiendan las distancias máximas para 24VAC con una caída de voltaje del 10%.
- Ceux-ci sont recommandés des distances maximum pour 24VAC avec une chute de tension de 10%.
- Diese werden maximale Abstände für 24VAC mit einem 10% Spannungsabfall empfohlen.
- Estes são recomendados distâncias máximas para 24VAC com uma queda de tensão de 10%.
- Questi sono suggeriti distanze massime per 24VAC con una differenza di potenziale di 10%.



SPECIAL NOTE FOR 360 VIEWING APPLICATIONS

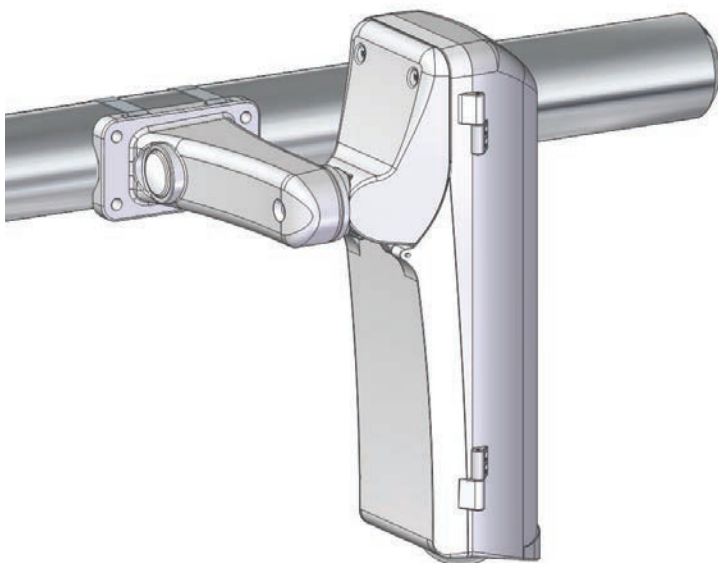


A. Horizontal mast mount 360 viewing

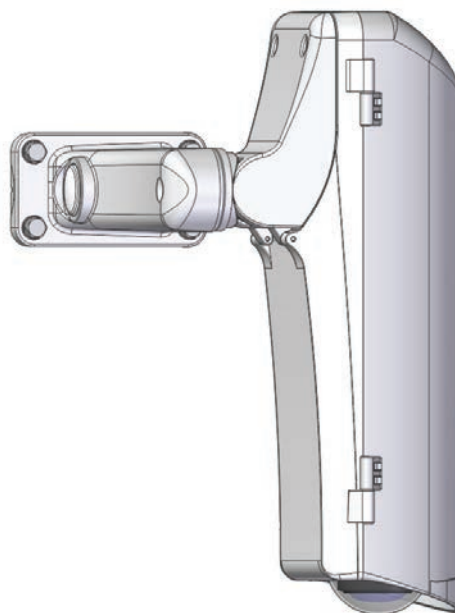


B. Wall mount 360 viewing

Replacement Parts

FCH11

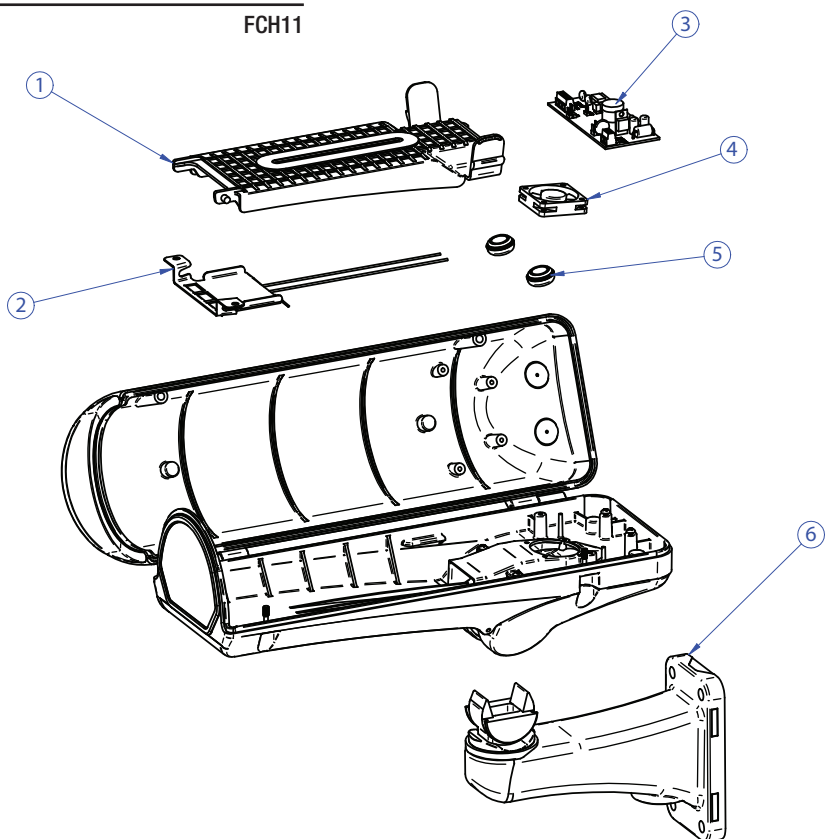

#	Part Number	Description
1	RPVL3948	FCH Camera Tray
2	RPVL3950	FCH Heater + Bracket
3	RP76VL2016	FCH 12VDC/24VAC PCB
4	RPFD080	12VDC 40mm Fan
5	RPVL3953	Cable Membrane (0.60" hole)
6	RPFTM2425G	FCH Wall Mount Assembly
7	RPFCH11HP	FCH Hardware Packet
8	RP71VLBL09	Outdoor Rated Fan (Thermiq only)
N/S	RP76VL2018	FCHQ 12VDC/24VAC PCB
N/S	RP76VL2023	FCHQ PoE PCB

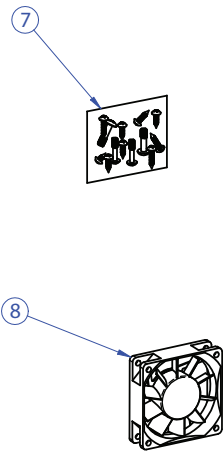

Product Registration/Warranty

Thank you for choosing Moog Videolarm. We value your patronage and are solely committed to providing you with the highest quality products available and superior customer service.

Should a problem arise, rest assured that Moog Videolarm stands behind its products by offering impressive 3 Year and 5 Year warranties, depending on the product purchased. See full warranty details at www.moogvideolarm.com/technical-support/warranty-plan/



Register Your Products Online

Please take a few moments to register your purchase via the Online Product Registration Form at:

www.moogvideolarm.com/technical-support/product-registration

Register your recent Moog Videolarm purchase and benefit from the following:

- Simple and Trouble-Free RMA process
- Receive product updates, and special promotion
- Eliminate the need to archive original purchase documents:
Receipts, Purchase Orders, etc...