

## Introduction


VistaPix is a binocular integrated with a digital camera that is great for sporting events, concerts and wildlife activities such as hunting or bird-watching. VistaPix lets you record memories and sights at the touch of a button. Use the full-featured binocular for closer views and capture images to take home with you at the same time.

VistaPix makes it possible to share your fun with others by downloading images from the camera right to your computer or e-mail to your friends and family.

### Main Features:

- Use as a fully functional binocular.
- Take up to two minutes of continuous video.
- Save single image as a JPG file and video captures as AVI file.
- With included Photo Manager software, you can transfer images or video onto your computer for viewing, editing and printing.
- Capture images at the same magnification as seen through binoculars.
- An LCD screen that displays the mode and numbers of photographs.
- Automatic White Balance for color correction in different lighting conditions.
- Automatic ( 90 seconds ) shut off mode to extend the battery life.

## Features

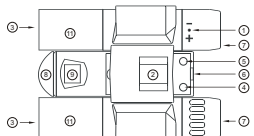

1. Diopter Knob(on underside)
2. Center Focus Knob
3. Objective Lens
4. Mode/Power Button(M)
5. Shutter/Set Button(S)
6. USB Port
7. Eyepiece
8. Camera Lens
9. LCD Display
10. Battery Compartment Lid
11. Objective Barrel

## How To Use Your Binocular

### How to use your binocular



### Adjustment of eye-relief for eyeglass wearers

Fold down the rubber eyecups and place them against your glasses to get the best viewing result.

### Adjusting the eyepieces

The distance between your eyes is called interpupillary distance. The interpupillary distance is different from one person to another. It is important to adjust to your interpupillary distance before using your VistaPix.  
- Hold the VistaPix firmly in the normal viewing position.  
- Adjust the barrels by pushing together or pulling apart until you see a single circle field with both of your eyes.

### Focusing the Binocular

1. Set the Diopter Knob on underside of VistaPix at its center point between + and -.
2. Choose an object that is at least 10 meters (30 ft) away.
3. Looking with just your left eye, rotate the Center Focus Knob until the object you are viewing is in best focus.
4. Looking with just your right eye, rotate the Diopter Knob until the object you are viewing is in best focus.
5. Viewing your object with both eyes, turn the Center Focus Knob to bring it in best focus.

## How To Use Your Camera



### Inserting Batteries

Lift the battery compartment lid (10) and insert two AAA size alkaline batteries.

### Download method Instruction

1. Please use USB Cable to connect with VistaPix.
2. Stored images can be viewed and saved from the "Removable disk" drive form the "My Computer" icon, or downloaded using Photo Manager.

### Maintenance

Operating Environment: 41° to 104° F (5° to 40° C). 20%-85% relative humidity, non-condensing

### Care of your VistaPix

1. Never immerse VistaPix into any fluid or liquid.  
Remove dust or stains with a soft cloth dampened with water or neutral detergent. Keep in a dry and cool dust-free environment or a container when it is not used.
2. Take the batteries out when VistaPix is not to be used over a long period.
3. Avoid dropping the VistaPix. Do not disassemble VistaPix.
4. Before removing the batteries download pictures to your PC.

## Taking Pictures

Press PowerMode button(4) for 3 seconds to turn on, the LCD screen appears for 2 seconds and then appears .

**The initial setting.** (This mode is the default setting. If you don't choose another setting, this default setting is high resolution.)

### LCD Display modes and operation instruction

1. Photograph taking mode. This shows the number of images taken. Press the Shutter/Set button(5) to take an image.
2. Power Off Mode.  
Press the Shutter/Set (5) button to turn off the VistaPix Manually.
3. Continuous picture taking mode (Video Capture mode).  
Press the Mode button (4) to select "CF" mode.  
Press the Shutter/Set Button (5) to activate the operations. (During the operation, the LCD appears blank. You can take up to 2 minutes of continuous video, depending on the amount of images stored.)  
Press the Shutter/Set button again to finish the operation.
4. 10 second delay self-timer.  
Press the Mode button (4) to select "SR" Mode.  
Press the Shutter/Set (5) and image will be taken after 10 seconds.
5. 1. Delete the last photograph.  
2. Press the Mode button (4) to select "CL" Mode.  
3. Press the Shutter/Set Button (5). The "CL" screen will blink.  
4. To delete the last image, press the Shutter button again while the display is blinking.  
5. If you don't want to delete the image, press the Mode button to cancel.

1. Delete all photographs.  
2. Press the Mode button (4) to select "CA" Mode.  
3. Press the Shutter/Set Button (5). The "CA" screen will blink.  
4. To delete all images, press the Shutter button again while the display is blinking.  
5. If you don't want to delete the images, press the Mode button to cancel.

## Taking Pictures

**Hi R**  
1. To switch to high resolution mode (840 x 480).  
2. Press the Mode button (4) to display the current mode ("Lr").  
3. Press the Shutter/Set Button (5). The display will blink "Hi-R".  
4. Press the Shutter/Set Button again to switch to hi res mode.  
5. If you don't want to change, press the Mode button to return to the image taking mode.

**Lr**  
1. To switch to low resolution mode (320 x 240).  
2. Press the Mode button (4) to display the current mode ("Hi-R").  
3. Press the Shutter/Set Button (5). The display will blink "Lr".  
4. Press the Shutter/Set Button again to switch to low res mode.  
5. If you don't want to change, press the Mode button to return to the image taking mode.

**PC**  
VistaPix is a Mass Storage Device. This means that while connected to a PC through the USB port, Windows will add a "Removable Disk" hard drive under the "My Computer" icon. Simply access the removable disk to retrieve, view and save images to a permanent location.  
When connected to a PC, the LCD screen will display the "PC" screen.

When no action is performed on each chosen mode, it will return to the photograph taking mode automatically after 10 seconds.

**NOTE:**  
When the VistaPix memory is full, the LCD displays "Fu". In this case, you need to download pictures or erase pictures before taking any more pictures.

### Image Taking System Requirement

1. Window 98/SE/2000 Me/2000 XP
2. 233MHz (or equivalent) processor for minimum
3. 128 MB SDRAM
4. Video(VGA) card with 2MB of RAM or former 16-bit(High Color) display.
5. CD-ROM
6. USB port
7. 500 MB of free hard disk space.
8. If you have any problem with system specifications, please contact your computer manufacturer.

### Installing the Driver Software

Since VistaPix is a Mass Storage Device you can access captured images just as if it were a hard drive, therefore no software driver is needed (See PC Mode above).  
If using VistaPix with an older version of Windows (98 or earlier) it may be necessary to install the software driver.

## Steps to install VistaPix driver software

1. On the installation screen, select "Installation driver".
2. Perform "Installation Wizard" automatically.
3. After confirming, please press "Next" button.
4. After confirming, please press "Next" button.
5. Start installation.
6. Installation finished. Please press "Finish" button.

If you have windows 2000 XP Operation system installed on your computer, it should not be necessary to install the driver. See PC mode on other side.

## Steps to install Photo Manager

1. Insert the CD  
2. Select "Install Photo Manager"
3. Choose the language and press confirm button
4. Enter installing screen
5. After confirming, please press "Next" button
6. After confirming, please press "Yes"
7. The serial number is located on the front of the CD. Press "Next" when entered.

## Steps to install Photo Manager

8. Choose "Typical" or "Custom" form for installation
9. Confirm the file location
10. Begin installing software
11. Software installation finished, please press "Finish" for confirmation

After installing VistaPix software, please restart your computer.

**Un-installing the Software**  
To un-install the software, simply insert the CD and re-install the program. The screen will ask if you would like to remove the program and all of its components.

## Downloading Images with Photo Manager

1. Open Photo Manager. Select "Removable Device" as indicated.
2. Enter "Removable Disk" from the "Look In" box. Double-click on the "Data" folder.
3. Double-click on the "100MEDIA" folder.
4. In "100MEDIA" folder, choose the pictures you want or choose all images.
5. Images download finished.

**How to use Photo Manager**  
Select the buttons as indicated. "Help" will give you detailed information on Photo Manager's many features.

## Description of product specifications

### 72200

Digital Camera Specifications	
Resolution	640x480/320x240/160x120
Photograph memory	128MB/256KB/512KB/1024KB
Photo format	JPG
Photo range	10m-100m (infinity)
Exposure	Auto
White balance	Auto
Memory system	RAM 256KB/512KB
Microprocessor	ARM 7TDMI/ARM920T
Binocular Specifications	7x35
Angular field of view	17.5° (Hi Res) 21.5° (Lo Res)
Eye Relief	15.5mm
Eye Size	13.5mm

Package Contents	
Camera	Single Lens Fully coated
Close-focusing distance	3.3m (10.8ft)
Package Contents	
USB Cable	1P
CD-ROM	1P
Power/Mode Button	1P
Shutter/Set Button	1P
Binocular Specifications	7x35 (Hi Res) 7x35 (Lo Res)
Angular field of view	17.5° (Hi Res) 21.5° (Lo Res)
Eye Relief	15.5mm
Eye Size	13.5mm

### 72201

Digital Camera Specifications	
Resolution	640x480/320x240/160x120
Photograph memory	128MB/256KB/512KB/1024KB
Photo format	JPG
Photo range	10m-100m (infinity)
Exposure	Auto
White balance	Auto
Memory system	RAM 256KB/512KB
Microprocessor	ARM 7TDMI/ARM920T
Binocular Specifications	7x35
Angular field of view	17.5° (Hi Res) 21.5° (Lo Res)
Eye Relief	15.5mm
Eye Size	13.5mm

Package Contents	
Camera	Single Lens Fully coated
Close-focusing distance	3.3m (10.8ft)
Package Contents	
USB Cable	1P
CD-ROM	1P
Power/Mode Button	1P
Shutter/Set Button	1P
Binocular Specifications	7x35 (Hi Res) 7x35 (Lo Res)
Angular field of view	17.5° (Hi Res) 21.5° (Lo Res)
Eye Relief	15.5mm
Eye Size	13.5mm

