



THE 'THURCROFT' MOBILE GAS STOVE

MODEL NUMBER: THURCROFT

USE ONLY IN A WELL VENTILATED AREA

INSTALLATION, USER AND SERVICING INSTRUCTIONS

THESE INSTRUCTIONS MUST REMAIN WITH THE USER

THIS APPLIANCE HAS BEEN FITTED WITH A SUITABLE REGULATOR AND HOSE. THE
REGULATOR WILL FIT A CYLINDER WITH A 21mm VALVE.
THIS APPLIANCE REQUIRES A 7 kg. CYLINDER OF BUTANE GAS.

This appliance must not be used in high rise apartments, basements, bathrooms
or bedrooms.

While you first light your stove you may detect a slight odour. This will disappear after a few
hours use.



THIS APPLIANCE MEETS THE REQUIREMENTS OF THE EUROPEAN
GAS DIRECTIVE

Contents

	Page No.
List of components	3
Appliance Data	3
GENERAL REQUIREMENTS	3
Ventilation	4
Preparing the appliance for use	4
USERS GUIDE	6
Lighting the stove	6
Moving your stove	7
Cleaning and storage	7
SERVICING & MAINTENANCE	7
Installation & Service Record	10
Guarantee	11

Important Note

The Installation Instructions must be adhered to without exception.

COMPONENTS LIST

Before connecting the gas cylinder ensure that all the components listed below are included in the packaging;

Mobile Gas Stove

Ceramic Coal Matrix

APPLIANCE DATA

MODEL No.	THURCROFT
GAS TYPE	Butane
JET SIZE	0.75mm
HEAT INPUT (Net)	2.42 kW gross
REGULATOR OUTLET PRESSURE	28mbar
CYLINDER SIZE	7 kg.
DIMENSIONS	H.700mm W.400mm D.450mm

GENERAL REQUIREMENTS

- 1 This appliance must not be used in high rise apartments, basements, bathrooms or bedrooms.
- 2 This appliance is designed to operate from a 7 kg. cylinder of Butane Gas. It has been factory fitted with a regulator suitable for a 21mm cylinder valve.
- 3 Do not place clothes or other materials on the stove.
- 4 Do not operate the stove close to chairs and fabrics.
- 5 Do not move the stove when lit.
- 6 Do not position the stove alongside a wall or near curtains etc.
- 7 Always face the stove towards the centre of the room.
- 8 **Leakage of Gas:** Should a gas leak be suspected, turn off the gas at the cylinder and extinguish all naked lights. Contact your dealer.
- 9 The glass door on this appliance forms a guard to prevent risk of fire or injury from burns and it should not be permanently removed.
IT DOES NOT GIVE FULL PROTECTION FOR YOUNG CHILDREN OR THE INFIRM.
- 10 For their protection we recommend that a fireguard, conforming to BS 6539 or BS 6778, be fitted.
- 11 The glass door, the front casting and the front of the top casting all become hot in use.
- 12 This appliance has been designed to give a realistic coal fire effect. Because of this soot may form on the underside of the ceramic coal matrix. This is normal but, if small nodules of soot are observed in the flame holes of the matrix, the matrix must be removed from the appliance when it is cool and gently brushed clean. This type of soot formation only occurs after a long period of burning at low fire.

Ventilation

Use only in a well ventilated room.

- 1 The room in which the heater is to be used must be provided with adequate ventilation at all times to ensure the proper removal of products of combustion and to reduce the possibility of condensation. The smallest sized room in which the appliance should be operated is 48m³ for a living room and 24m³ for other rooms except for basements, bathrooms and bedrooms where the appliance should not be used. A permanent vent with an effective area of 62cm² is required together with a window that can be opened.

Preparing the appliance for use

1 **Fitting the Ceramic Coal Matrix**

Loosen the slotted headed screw from beneath the glass door. Lift the door upwards and remove. (The top of the door is located with a hidden screw in a keyhole and the door may have to be moved around to free it from the front casting).

Warning: The Ceramic Coal Matrix is very fragile.



Front view of the stove showing the glass door and the ceramic coal matrix

Gas Connection



- 2 Carefully remove the packaging from above the ceramic. The front of the ceramic coal matrix is lower than the back. Place the ceramic on its mounting ledges above the burner. Refit the glass door and tighten the securing screw.

3 **Fitting the Gas Cylinder**

Warning: Gas cylinders must not be fitted or changed in the presence of naked flames.

- 4 Remove the plastic safety cap by rotating it until the arrow points out through the gap in the cylinder shroud, pull on the plastic strap and then lift off the safety cap.
- 5 Remove the rear access door and place the cylinder close behind the stove. Rotate the cylinder so that the gap in the shroud points in the direction of the stove. Make sure the regulator switch is in the 'OFF' position before trying to mount the regulator on to the cylinder. Taking care not to twist the hose, mount the regulator onto the cylinder valve and push down until there is an audible click. Lift and rotate the cylinder and place it inside the stove.
- 6 To remove the regulator from the cylinder first turn the stove off by turning the switch downwards and then press the switch inwards towards the body of the regulator. Lift to release from the cylinder
Note: The regulator supplied with your stove may have been exchanged for the factory fitted item and may mount in a different manner to the above. Refer to the regulator instructions supplied with your appliance.
- 7 Replace the rear access door and secure with its latch.
- 8 Examine the flexible tubing between the regulator and the gas control regularly and if worn or perished get your dealer to fit a new piece.
- 9 New hose must be to B.S.3212 Type 2 fitted with suitable hose clips, length 330mm.
- 10 Any replacement regulator must be to B.S.3096 set at 28mbar (11.2 in w.g.).




Rear view of stove showing the gas cylinder, the rear door and the top cover



The Thucroft stove ready for use

Please read the note at the end of the 'Lighting the Stove' section about lighting the stove for the first time after changing the gas cylinder.

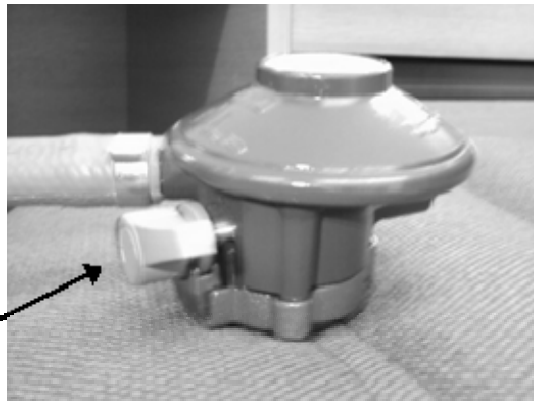


VERTICAL / ON
HORIZONTAL / OFF

Regulator

USERS GUIDE

Lighting the stove

- 1 Reach through the aperture in the rear access door and turn on the gas by turning the switch on the regulator upwards.
- 2 Depress the control knob and turn it fully clockwise. Keep the control knob fully depressed and rotate it fully anticlockwise. This will operate the spark generator (you will hear a 'click') and allow gas to flow to the burners. The pilot burner and the main burner should light. If they do not ignite repeat the operation. Check that the pilot burner has lit (it can be viewed, or its reflection can, by looking at the lower right hand side of the glass door.) If the stove is new or has not been used for some time the main burner will light before the pilot burner. In this case the pilot burner may not light from the main burner and the knob will have to be released and the burners relit.
- 3 Once the burners are both alight hold the control knob down for a further 15 seconds and then release. The burners should stay alight. If they do not, repeat the lighting procedure only holding the knob down for longer.
- 4 Once the burner is alight the control knob can be turned further anticlockwise to go to the high fire setting and clockwise to low fire. If the stove does not light on the second try, wait three minutes before attempting to light the appliance again. This is to allow any gas vented in the first two attempts time to disperse.

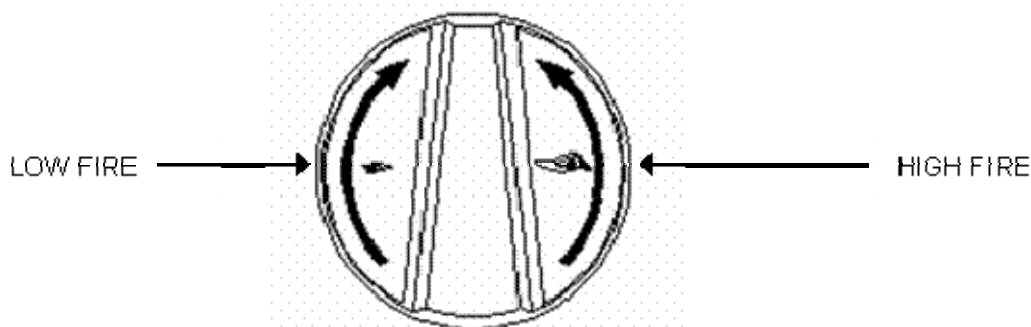

The Control Knob

- 5 To turn the appliance OFF, reach through the aperture in the rear access door and turn off the gas at the bottle by turning the switch on the regulator downwards to a horizontal position.

Note; After changing the cylinder more than one attempt may be needed to light the appliance as air may have entered the pilot gas supply and this will take a few attempts to pass through. This may also happen if the stove has not been used for some time and may also cause the pilot to burn with a roaring noise. The pilot should burn quietly after a few minutes. Sometimes the stove may not light at all after being fitted with a new gas cylinder. This is caused by the remaining residue of the incombustible gas used to purge the cylinder during the re-filling process. In this case the control knob may have to be held down for several minutes to allow this gas to pass out of the cylinder. Whilst holding the knob down make frequent attempts to light the stove to avoid a flare up when the burner does light.

Moving your stove

Warning: Do not attempt to move the stove while it is burning or even while it is still hot.

- 1 Wait until the stove is cold before moving. It is easier to move with rear door and gas cylinder removed. If the stove is to be transported by motor vehicle the gas cylinder should be removed as should the Ceramic Coal Matrix which should be carefully packed to avoid breakage.

Cleaning and storage

- 1 Do not attempt to clean the stove unless it is cold. It should only require occasional dusting or a wipe with a damp cloth. If the stove is not to be used for some time, cover and store in a dust free place.

Servicing

This appliance **MUST** be serviced by a CORGI registered engineer annually.

AFTER REPLACING ANY GAS FITTING, CHECK FOR GAS SOUNDNESS.

WARNING



This product may use fuel effect pieces containing Refractory Ceramic Fibre (RCF). This material contains man-made vitreous silicate fibres along with fibrous glass and mineral wool. Excessive exposure to these materials may cause temporary irritation to eyes, skin and respiratory tract; consequently, it makes sense to take care when handling these articles to ensure that the release of dust is kept to a minimum.

The appliance should be serviced at least once a year by a CORGI registered engineer. This is the basic procedure.

Basic Service (See Figures 1 and 2, p.8)

- 1 Remove the glass door panel and the ceramic coal matrix as previously described.
- 2 Clean any debris and soot from the burner top. This can be done by using a soft brush or a vacuum cleaner. The burner mesh should be thoroughly cleaned.
- 3 The ceramic coal matrix can be cleaned by gently brushing with a soft brush in a direction away from the person and any persons nearby. This operation should be performed outside facing downwind. A vacuum cleaner **must** not be used for this purpose.
- 4 Check that there is no impairment to the electrode spark or pilot burner.
- 5 Check that the pilot flame is satisfactory. If this is not the case remove and clean (see instructions below). If the flame is still unsatisfactory replace the pilot burner.
- 6 Replace the burner ceramic and glass door panel and secure with the fixing screw.

To Remove the Burner/ Control Assembly (See Figures 1 – 6, p.8)

- 1 Remove the rear access door and the cylinder.
- 2 Remove the glass door panel and the ceramic coal matrix.
- 3 Pull off the control knob. Unscrew the control lock nut (use 17mm box spanner).
- 4 Undo and remove the two screws inside the cylinder space. These two screws are situated either side of the appliance between the bolts securing the front casting.
- 5 Gently pull the control valve clear of the top casting and the lift the whole assembly clear.
- 6 To replace, follow the reverse of the above locating the control valve in the top casting first. Check for gas leaks. Make sure that the spark lead is secured so that it cannot trail under the gas cylinder.

To Remove the Pilot Burner

- 1 Remove the Burner/ Control assembly as described above.
- 2 Unscrew the thermocouple nut from below the control valve.
- 3 Unscrew the pilot supply tube from the pilot burner.
- 4 Gently pull the spark lead from the electrode.
- 5 Remove the two screws holding the pilot burner to its bracket.

Note; Apart from cleaning the pilot burner cannot be serviced and must be replaced as a complete unit if faulty. When replacing, carefully coil the excess length of the thermocouple just under the control valve and push out of the way of the cylinder when the burner/ control assembly is re-installed into the stove body. Make sure that the spark lead is secured so that it cannot trail under the gas cylinder.

To Remove the Injector

- 1 Remove the Burner/ Control assembly as described above.
- 2 Unscrew the tube nut securing the gas supply pipe to the injector elbow.
- 3 Unscrew the injector elbow from its carriage.
- 4 The injector can now be removed from the elbow.

To Remove the Control Valve

- 1 Remove the Burner/ Control assembly as described above.
- 2 Gently pull the spark lead from the electrode on the pilot burner.
- 3 Unscrew the thermocouple, the two 8mm supply tubes and the 4mm pilot supply tube.
- 4 Remove the control valve.



FIGURE 1

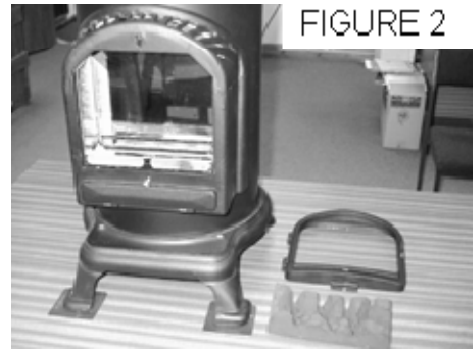


FIGURE 2



FIGURE 3

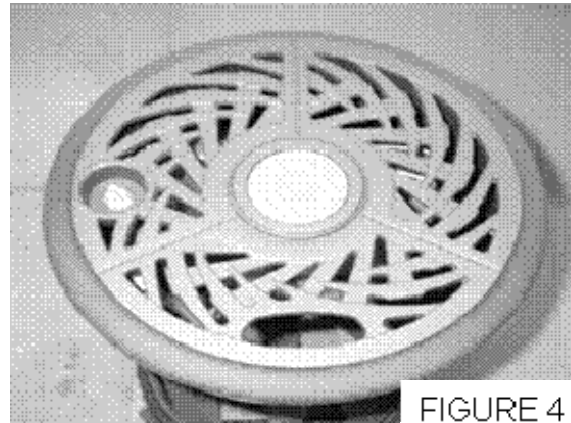


FIGURE 4



FIGURE 5

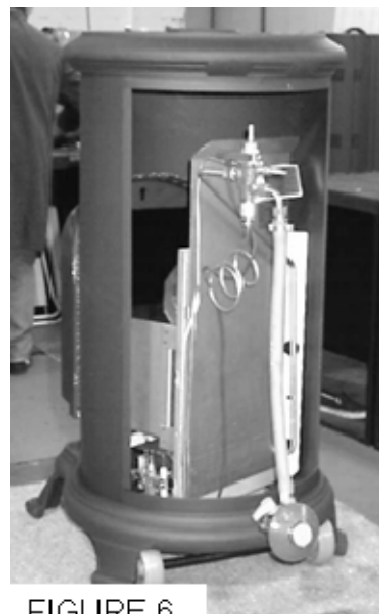


FIGURE 6

Installation & Service Record

Please ensure that installer completes the installation record below

INSTALLATION RECORD
Appliance Supplied by:
Installation Date: Serial No.:
Installed By: CORGI No.:
Signed by Installer:

<p>RECORD OF 1st SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>	<p>RECORD OF 2nd SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>
<p>RECORD OF 3rd SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>	<p>RECORD OF 4th SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>
<p>RECORD OF 5th SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>	<p>RECORD OF 6th SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>
<p>RECORD OF 7th SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>	<p>RECORD OF 8th SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>
<p>RECORD OF 9th SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>	<p>RECORD OF 10th SERVICE</p> <p>Serviced by: CORGI No.:</p> <p>Service Date: Signed:</p> <p>Comments:</p> <p>.....</p> <p>.....</p>

GUARANTEE.

1. The appliance is guaranteed for one year from the date of purchase.
2. This guarantee is given subject to the following provisions:-
 - a) That the fireplace conforms to the requirements given in the Installation Instructions for this appliance.
 - b) That our instructions covering cleaning and handling are adhered to. This guarantee does not cover mishandling.
 - c) That the guarantee card supplied with every purchase is returned to us for registration within four weeks of the date of purchase with the details correctly filled in.
 - d) That any part or parts on which a claim is made are returned to us postage paid for inspection.
 - e) That our liability is limited to free replacement of the parts affected.
 - f) The guarantee does not cover (1) Normal wear and tear. (2) Possible discolouration of polished parts. (3) Replacement of batteries.