



User's Manual

AVerMedia Driver and TV Tuner Setup under Windows Media Center

DISCLAIMER

All the screen shots in this documentation are only example images. The images may vary depending on the product and software version. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

COPYRIGHT

© 2009 by AVerMedia TECHNOLOGIES, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of AVerMedia TECHNOLOGIES, Inc.

USA Office

Address	1001 Yosemite Dr. Milpitas, CA 95035 USA
Website	www.avermedia-usa.com/avertv
Telephone	(408)263-3828

TABLE OF CONTENTS

Installing Drivers	3
Important Notes	3
TV tuner setup in Vista Windows Media Center (including TV Pack 2008 (Fiji))	4
A. Run Windows Vista Media Center	4
B. Run Setup Wizard.....	4
C. TV Tuner Setup in Vista Windows Media Center	4
D. TV Tuner Setup in Vista Windows Media Center TV Pack 2008 (Fiji)	8
TV tuner setup in XP Windows Media Center 2005 (MCE 2005)	10
A. Run Windows XP Media Center Edition 2005.....	10
B. Run Setup Wizard.....	10
C. TV Tuner Setup	11
Remote Control (optional, Sold Separately).....	14
A. Installation.....	14
B. Using the Remote Control	14

Installing Drivers

Please Install driver first before you plug the device.


After turning on your desktop PC, insert your installation CD to the CD-ROM.

When the "AutoPlay" dialog box appears, select **Run Autorun.exe**.

The installation main screen will appear, and click the **Install driver** item.



During driver installation, a window will appear indicating the installation process. When the window disappears, the installation is complete.

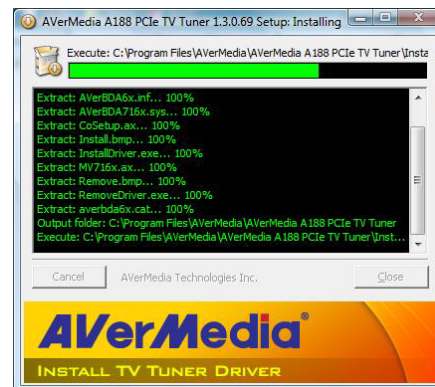

Important Notes


1. Digital TV for Windows XP Media Center Edition 2005 is available in the United States only. The following are the software and hardware requirements as well as other hardware recommendations that may improve your Digital TV visual and audio experience.
 - 1.1. Update 1 for Windows XP Media Center Edition 2005 with HDTV and Update Rollup 2.
 - 1.2. Internal or external hardware that supports standard TV (NTSC) signal. To set up Digital TV in Media Center, the standard TV tuner must first be detected and configured.
 - 1.3. A Media Center Certified MPEG-2 Decoder Software (also called a DVD decoder).
 - 1.3.1. Use this tool to check if your MPEG-2 Decoder will work with Microsoft Media Center 2005
[Windows XP Video Decoder Checkup Utility](#)
2. ClearQAM (unencrypted Digital Cable) is supported only in Vista Media Center TV Pack 2008 (Fiji).
3. An AVerMedia ClearQAM Utility is available for Windows XP MCE 2005 and Vista Media Center user to configure Windows Media Center to work with ClearQAM channels.
 - 3.1. Visit [AVerMedia Website](#) for more ClearQAM Utility information
4. An optional Media Center Remote Control Kit can be purchase thru AVerMedia eStore
 - 4.1. [Media Center Remote Control Kit \(White Box\) information](#)
 - 4.2. [AVerMedia online eStore](#) SKU # MPDMCEUKW.

TV tuner setup in Vista Windows Media Center (including TV Pack 2008 (Fiji))

A. Run Windows Vista Media Center

To launch the Windows Media Center application, click the **Start button** on the bottom left side of your desktop, and then go to **Windows Media Center** or **Programs, Windows Media Center**.

Or pressing the green **Start button** on the MediaCenter remote control.

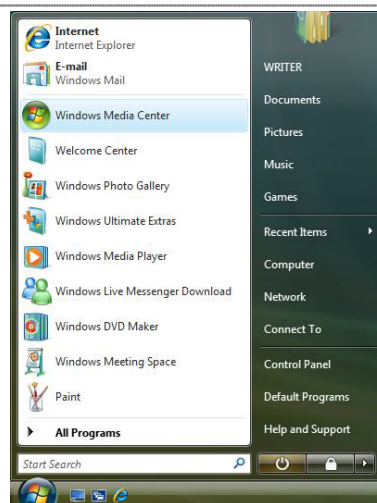

B. Run Setup Wizard


For first-time Windows Media Center users, you may need to go through a setup process.

If you are asked to choose on of the setup options, "**Express setup**" is recommended for basic users, or you can choose the others as your preference.




C. TV Tuner Setup in Vista Windows Media Center

When Setup Wizard is done, then start to set up the TV tuner. Select to **Tasks** then select **Settings**.

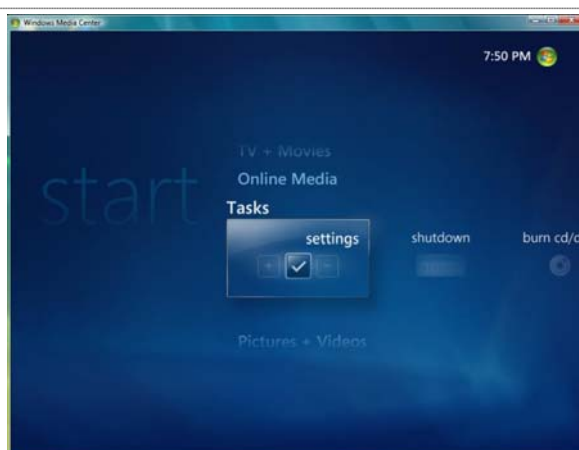

Click on **TV**, and then click **Set up TV signal**.

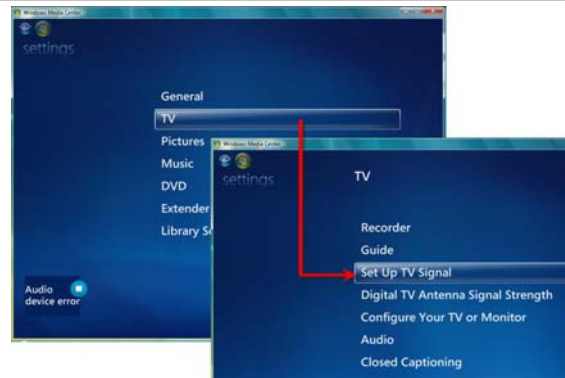

Start to **Set Up Your TV Signal**. Click **Next**.




If **Set Up Your Internet Connection** page appears, start to **Set Up Your Internet Connection**. Click **Next**.

To check if your Internet connection is “always on,” click **Yes**. Then click **Next**.

To test your Internet connection, click **Test**. Click **Next**.



In **Region** step, make sure your region is correct. Click **Yes**, *use this region to configure TV services* to accept the option. Then click **Next**.

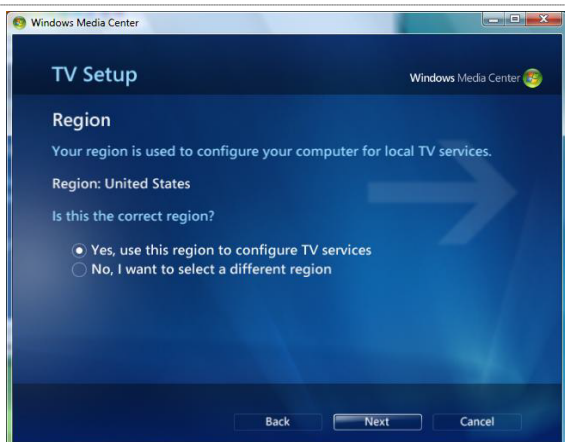


Under **Automatic TV Signal Setup**:

Please select "Configure my TV Signal automatically (Recommended)"



In **Examining TV Signal** step, Windows Media Center is determining the available TV signals connection you have.

When the **TV Signal Configuration Result** page appears, then click **Next**.

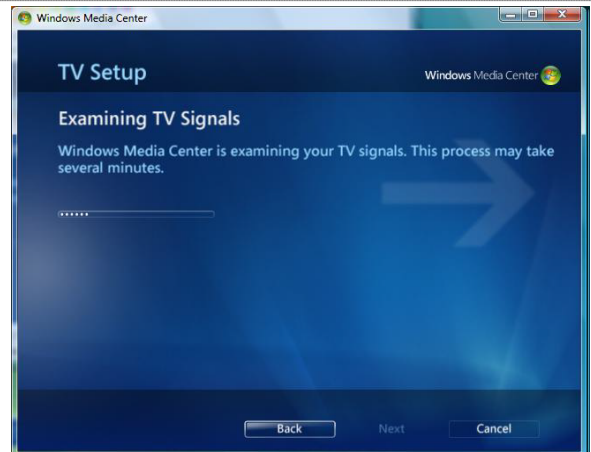

Under **TV Setup** Page, please review your **TV Signal Configuration Result**, if it's correct, and then click **Next**.



When **You are Done!** page appears, you have finished the setup.

Now you can continue to set up the Electronic Program Guide by selecting **Set Up Guide listings** and click **Next**. The Set Up Wizard will help you go through the completion of the Program Guide setup. Or click **Return to TV Settings** to finish it.




Under **TV Setup** page, to download TV Guide listings, please enter your zip code. Then click **Next**.


Click **I agree** to agree Terms of Service and begin to download TV setup data.



Please follow the instructions on screen to complete downloading TV Guide

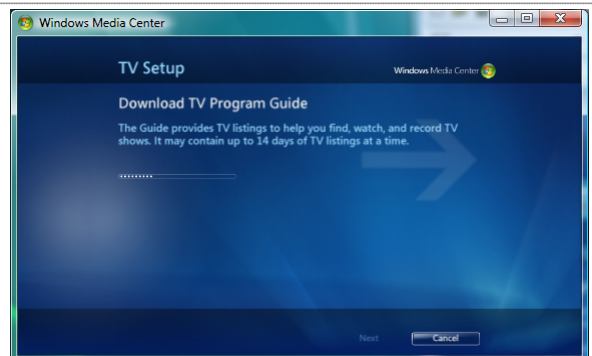


Please continue to **Signal Strength** setup

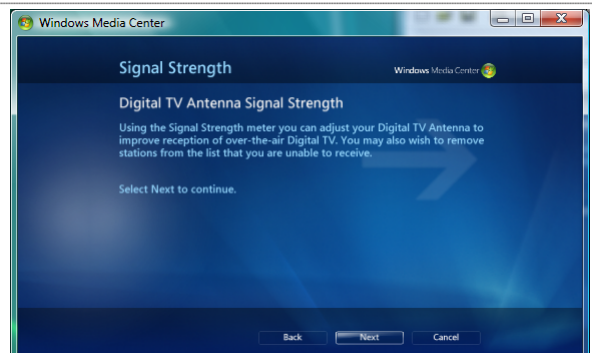

Under **Signal Strength** setup, we recommend unchecking TV Channel with low Signal Strength or other channels that you may wish to remove it.


Please complete this setup.

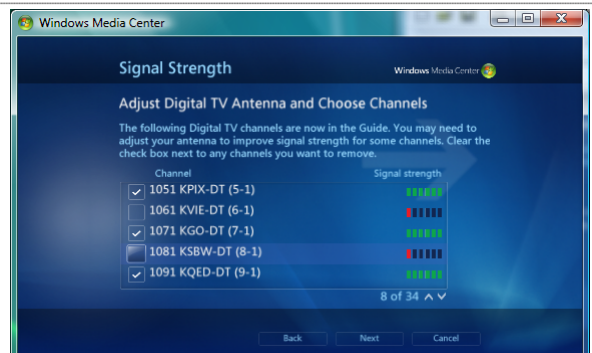


D. TV Tuner Setup in Vista Windows Media Center TV Pack 2008 (Fiji)

Please follow steps A,B and C.

Under TV Setup Page, please review your TV Signal Configuration Result, if it's correct, and then click **Next**.

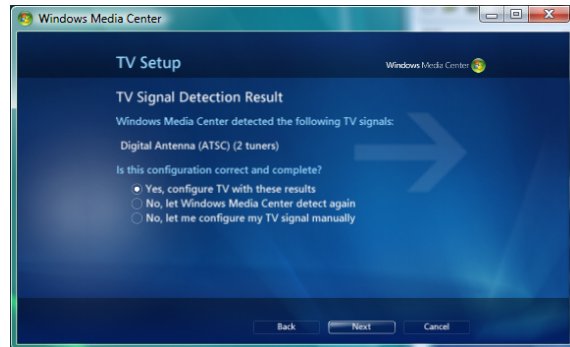

Click **Next** to finish.

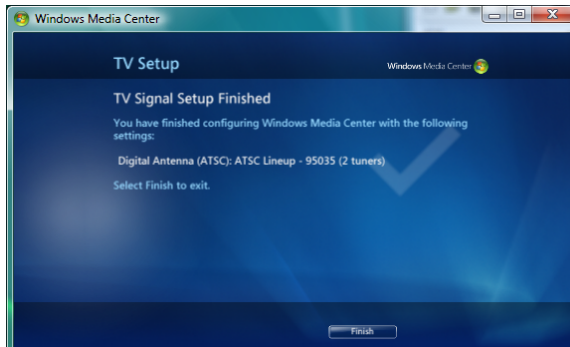


After that come back to **TV Signal** and select **Scan for More Channels** and then click **Next**.



Vista Media Center with TV Pack 2008 will scan for all channels. After scan complete, click **Next** to finish setup.

For first-time Windows Media Center users, you may need to go through a setup process.

If you are asked to choose on of the setup options, "**Express setup**" is recommended for basic users, or you can choose the others as your preference.

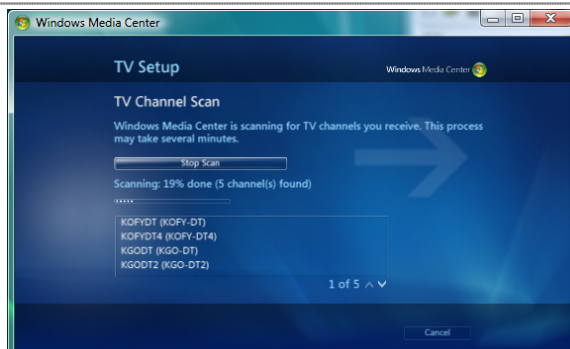

When you are finished with the Program Guide Setup, click the **TV** button on your Windows Media Center remote control to start watching TV.

For additional information about all functions with Windows Media Center, visit www.WindowsMediaCenter.com.




TV tuner setup in XP Windows Media Center 2005 (MCE 2005)

A. Run Windows XP Media Center Edition 2005

Please Note that Windows Media Center Edition 2005 requires Analog TV tuner installed first. And Windows XP Media Center 2005 requires having a Media Center Certified MPEG-2 Decoder Software (also called a DVD decoder). You can find more info on the link: [Windows XP Video Decoder Checkup Utility](#)

To launch the Windows Media Center application, click the **Start button** on the bottom left side of your desktop, and then go to **Programs, Windows Media Center**.

Or pressing the green **Start button** on the MediaCenter remote control.

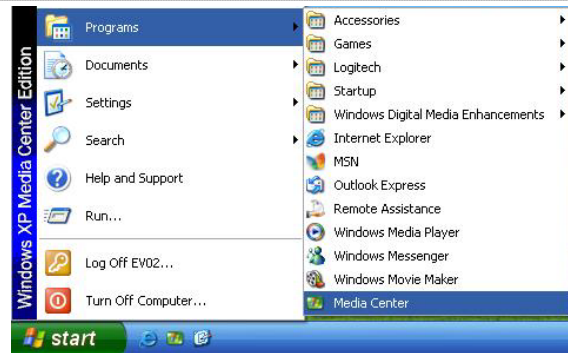


B. Run Setup Wizard

For first-time Windows Media Center user, you may need to go through a setup wizard process. Click **Next** to begin.



When wizard is done, you can start to set up the TV tuner.

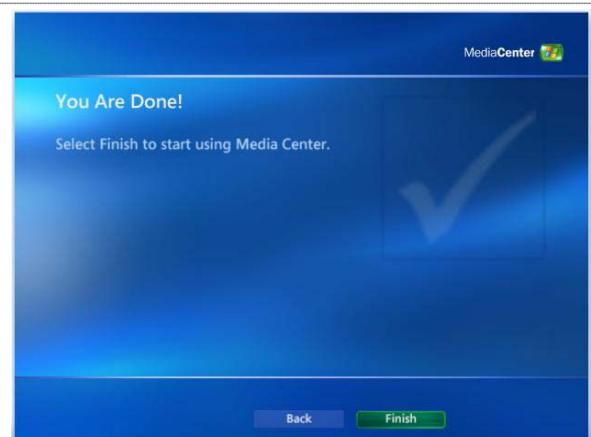

C. TV Tuner Setup

Go into **Settings**.



Select **TV**, and then click **Set up TV signal**. Click **Next** to continue.






Confirm your region in **Confirm Your Region** page. Click **Yes, use this region to configure TV services** to accept the option. Then click **Next**.



Select **Automatic TV Signal Setup** step, Then click **Next**.

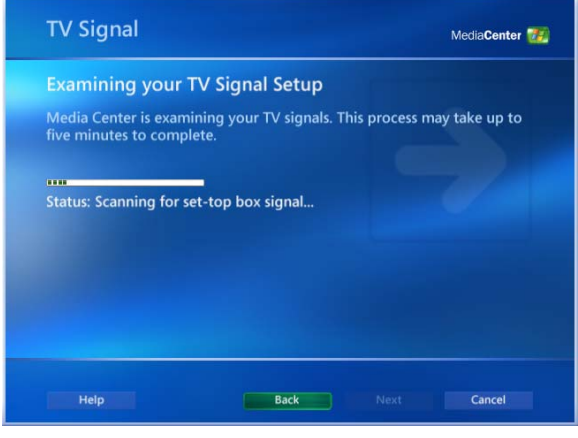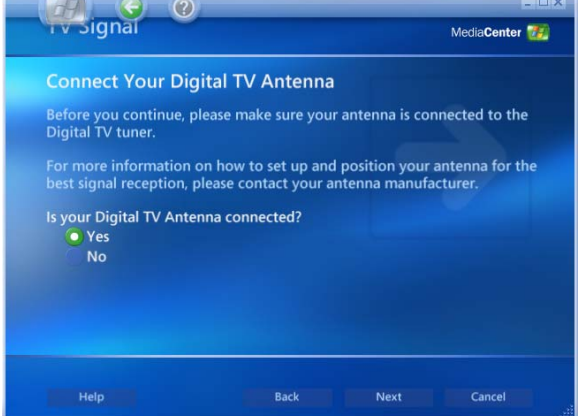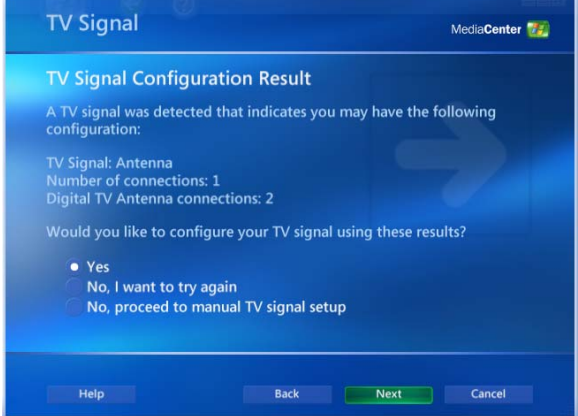


Media Center will scan for your TV Signal. At this point Media Center will scan for your TV Signal. Note: 1. Windows XP Media Center 2005 requires Analog TV tuner installed first. 2. Windows XP Media Center 2005 requires having a Media Center Certified MPEG-2 Decoder Software (also called a DVD decoder). You can find more info on the link: Windows XP Video Decoder Checkup Utility	
Choose the input source (Cable/Satellite/Antenna) for your analog tuner. Then configure the digital tuner.	
Under TV Setup Page, please review TV Signal Configuration Result, if it's correct, and then click Next.	
When You are Done! page appears, you have finished the setup. Now you can continue to set up the Electronic Program Guide by selecting Set Up Guide listings and click Next. The Set Up Wizard will help you go through the completion of the Program Guide set up. When you are finished with the Program Guide Setup, click the TV button on your Windows Media Center remote control to start watching TV.	

Please continue to **Signal Strength** setup



Under **Signal Strength** setup, we recommend unchecking TV Channel with low Signal Strength or other channels that you wish to remove it.

Please complete this setup.

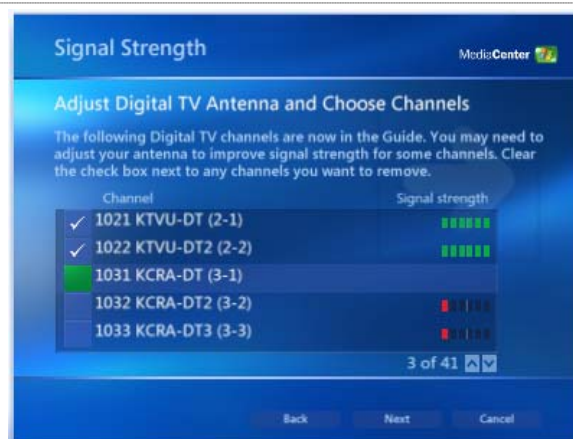

Please finish Setup by clicking on **Finish**

For additional information about all functions with Windows Media Center, visit www.WindowsMediaCenter.com.



Remote Control (optional, Sold Separately)

Note: An optional Media Center Remote Control Kit can be purchased through AVerMedia eStore:

[Media Center Remote Control Kit \(White Box\) information AVerMedia online eStore](#) SKU # MPDMCEUKW.

A. Installation

Step 1. Insert the Battery


Use the two AA batteries, which are included in the package and insert it at the back of the remote control battery compartment.

Step 2. Connect the Receiver

Turn on the computer and plug the USB connector of the receiver into the PC's USB port.

B. Using the Remote Control

The remote control supports with most of the features in Media Center. No software or setup is needed. To use, just point the remote control at the receiver, and press the button.

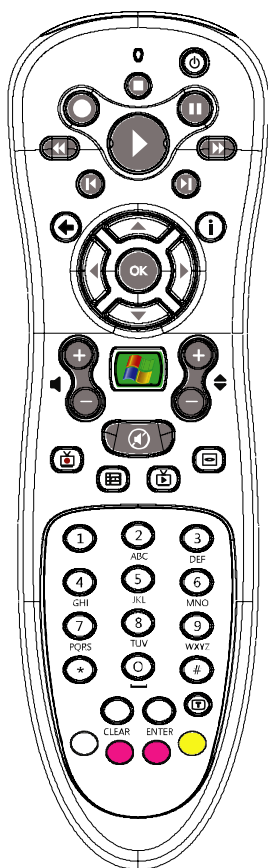

Navigation Buttons

Task	Control	Task	Control
Start Media Center, or go to Start menu.		Move the item to the right or enter submenu.	
Move the item up.		Activate the command.	
Move the item down.		Go to previous screen.	 (BACK)
Move the item to the left or exit submenu.		Display info of the selected item.	 (MORE)

Playback Buttons

Task	Control	Task	Control
For Playlist, play the selected item.		For Live TV, save the current show and press twice to record series. For Electronic Programming Guide, Record TV show or TV series	 (RECORD)
For Playlist, skip to the next item. For Recorded TV, skip ahead of 29 sec.	 (SKIP)	Rewind currently playing media; if pressed repeatedly, it cycles to 3 rewind speeds from slowest to fastest	 (REW)
For TV, go back 5 seconds.	 (REPLAY)	Speed up currently playing media; if pressed repeatedly, it cycles to 3 fast forward speeds from slowest to fastest	 (FWD)
Stop currently playing media.	 (STOP)	Turn off/on the sound.	 (MUTE)
Briefly stop the playing media and press again to resume	 (PAUSE)	Adjust the volume	 (VOL)

AV and Power Buttons

Task	Control	Task	Control
Adjust the volume	 (VOL)	Go to the Recorded TV page	 (RECORDED TV)
Change the channel	 (CH/PG)	Go to Electronic Programming Guide.	 (GUIDE)
Turn off/on the sound.	 (MUTE)	Switch to live TV if TV is off. If TV is paused, resume to real time TV programming.	 (LIVE TV)
Command assigned to it. This button can "learn" to turn on the TV.	 (TV)	If the computer is on, put the computer in standby mode. Press the PC button again to bring the computer out of standby and return to the desktop	 (PC)

Numeric Keypad

The numeric keypad consists of numbers from 0 through 9 and two other keys: ENTER and CLEAR. You can use the numeric keypad to enter TV channels.

Teletext Buttons (option)

To display Page 100 (Teletext home page):

Press the TELETEXT button. Page 100 will appear in a few seconds and completely replace the TV picture, but it will not affect the TV sound.

To access Teletext pages:

Enter the 3-digit number of the page you want to display by using the numeric keypad. For example, enter 300 to access the A-Z Teletext Index.

To navigate between Teletext pages:

Press the UP and DOWN buttons on your remote control to navigate between Next and Previous pages.

To use the Fasttext buttons:

The red, green, yellow, and blue buttons on your remote control correspond to the same colored buttons on your TV.

Press a colored button on your remote control to go to a preset page.