

# **FREESTANDING DUAL FUEL COOKERS**

**DOMESTIC USE ONLY**

## **OPERATING AND INSTALLATION INSTRUCTIONS**

**Note to installer: please leave this manual/owners guide with  
the appliance**

# Index    Technical data and specifications

Technical data and specifications .....	2
Installation .....	3 - 4
Assembly .....	3
Positioning .....	3
Electrical connection.....	4
For the user .....	4 - 6
Using the electric hot-plates .....	4
Using the electric fan oven 4 .....	4
Using the electric grill .....	5
Oven accessories .....	5
Removing the oven door .....	5
Advice and precautions .....	5
Figures.....	7

Nominal external dimensions	Cookers 54x60
Height at hob	cm 85,0
Depth with door closed	cm 63,5
Depth with door open	cm 106,0
Width	cm 54,0

Usable dimensions	Fan oven
Width	cm 39,5
Depth	cm 60,0
Height	cm 31,5
Volume	l. 50,0

- Thank you for choosing one of our quality products, capable of giving you the very best service. To make full use of its performance features, read the parts of this manual which refer to your appliance carefully. The Manufacturer declines all responsibility for injury or damage caused by poor installation or improper use of the appliance.
- To ensure its appliances are always at the state of the art, and/or to allow constant improvement in quality, the manufacturer reserves the right to make modifications without notice, although without creating difficulties for users.
- When ordering spare parts, inform your dealer of the model number and serial number punched on your appliance's nameplate, visible inside the warming compartment or on the back of the cooker.

## FOREWORD

- Refer only to the headings and sections covering accessories actually installed on your cooker.

## ELECTRIC HOTPLATES

ø 145	1,0 kW - Normal hotplate
ø 180	1,5 kW - Normal hotplate
	2,0 kW - Rapid hotplate

## HEATING ELEMENT POWERS

oven circular element	2,0 kW
fan	2,5 kW
grill	2,0 kW
oven light	15 W

## EQUIPMENT

Depending on the models, cooker may also have:

- Electric oven lighting
- One or more electric hotplates

For the ELECTRIC WIRING DIAGRAM see figure 2 at the back of this manual.

The electrical power is stated on the nameplate visible inside the warming compartment (if present) or on the back of the cooker.

A copy of the A copy of the data label is glued to the cover of this manual (for gas or gas-electric products only) is glued to the cover of this manual (for gas or gas-electric products only).

## Important Warnings

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to make sure that they do not play with the appliance.
- Means of disconnection shall be provided in the fixed wiring in accordance with the Australian wiring rules.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- **WARNING:** Accessible parts will become hot when in use. To avoid burns and scalds children should be kept away.
- A steam cleaner is not to be used for cleaning this appliance.
- Before replacing the lamp bulb, ensure that the appliance is switched off.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the glass surface, which may result in shattering of the glass.

## INSTALLATION

This appliance shall be installed only by authorised personnel and in accordance with the manufacturer's installation instructions, local electrical wiring regulations. When connection to electrical supply is completed and oven is located in its final position, the oven must be stabilized by using the two chains located at the rear of the oven. (see fig. 4)

Each chain must be firmly attached to the rear vertical wall behind the oven. The anchor used to attach the chains to the rear wall must be of a type suitable for the purpose.

If the appliance is installed between two cupboards, drill a hole on each side of the cupboards, pass the chains through the holes and anchor the chains within each cupboard.

**MAKE SURE THE ANTI-TILTING CHAINS ARE TAUGHT WHEN ANCHORED TO PREVENT THE APPLIANCE TILTING.**

If the oven is to be moved for servicing - **THE CHAINS MUST BE RE-ATTACHED .**

## ASSEMBLY

The splash back must be fitted to the cooker. Read the assembly instructions packed with the splash back to ensure correct fitment.

## FITTING SHELVES

Clip wire racks to sides of oven walls (Fig. 6 a).

Slide shelves and trays on the guides as shown (Fig. 6 b)

## POSITIONING

Remove the packaging accessories, including the films covering the chrome-plated and stainless steel parts, from the cooker.

Position the cooker in a dry, convenient and draft-free place. Any adjoining wall surface situated within 200mm from the edge of any hob burner must be a suitable non-combustible material for a height of 150mm for the entire length of the hob. Any combustible construction above the hotplate must be at least 600mm above the top of the pan supports no construction shall be within 450mm

# Installation

above the top of the pan supports.

The cooker may be free-standing or between two units the sides of which must withstand a temperature of 100°C.

If a combustible bench-top is situated within 200mm from the edge of any burner, it should be 10mm or more below the cooker hob.

## CONNECTING TO THE ELECTRICAL MAINS

Before making the connection, check that:

- the mains voltage is as indicated on the nameplate;
- the earth connection is in good working order.

For direct connection to a power mains, a device that ensures disconnection from the mains must be installed, with a opening distance for the contacts that allows for a complete disconnection under conditions of category III electrical overload, in conformity with the installation instructions.

If the appliance power lead is not fitted with a plug, this cooking range must be connected to the supply by a supply cord fitted with an appropriately rated plug that is compatible with the socket outlet fitted to the final sub-circuit in the fixed wiring that is intended to supply to supply this cooking range.

- the green-yellow wire must be used for the earth connection;
- the blue wire is the neutral;
- the brown wire is live;
- the lead must never touch hot surfaces over about 75 degrees C;
- replacement leads must be of type H05RR-F or H05V2V2-F of suitable size (see diagrams in fig. 2).
- if the appliance is supplied without lead, using type H05RR-F or H05V2V2-F cable of suitable size (see diagrams in fig. 2).

**N.B.:** the manufacturer declines all liability for damage due to failure to comply with the regulations and standards in force. Check that the appliance is correctly connected to the earth (see diagrams in fig. 2 at the back of the manual).

# For the user

## HOW TO USE THE COOKER

### FOR COOKERS EQUIPPED WITH ELECTRIC HOTPLATES

The different heat settings are obtained as follows:

- 1 = minimum setting for all hotplates;
- 6 = maximum setting for normal and rapid hotplates (with red disc);
- 0 = off.





Pans must never be smaller in diameter than the hotplates and their bottoms must be as flat as possible (see fig. 3).

### IMPORTANT:

- Never leave hotplates on without pans, except when first used; leave for about 10 minutes to dry oil or moisture residues;
- if the hotplate is to be out of use for a long time, apply a little grease to its painted surface;
- do not allow spills to burn onto the hotplate, requiring the use of abrasive cleaners.

### ELECTRIC FAN OVEN WITH 4 COOKING PROGRAMS

With different heating elements controlled using a selector switch and regulated by a thermostat, starting from the 0 (off) position, the knob can be turned clockwise to the following settings:

- symbol : oven lamp on (it will remain on even if the knob pointer is turned to the other settings).
- symbol : operation of fan.
- symbol : cooking with fan oven, on one or two levels, the oven temperature is controlled using the thermostat knob.
- symbol : grill on.

**N.B.** - The yellow light switches on and off as the thermostat is tripped.

Before placing food for cooking inside, allow the oven to heat up for at least 10 minutes.

# For the user

## HOW TO USE THE ELECTRIC GRILL WITH ELECTRIC OVEN

**For models with “ Electric Oven” only, controlled by two knobs separately (selector-thermostat), grilling is permitted with the door closed, without using the front side. Temperatures above 200°C. must not be used when grilling with the door closed.**

- ignite the grill heating element;
- place the foods on the chrome-plated shelf;
- insert on the highest runner;
- insert the drip tray on the bottom runner;
- gently close the oven door;
- after a few minutes, turn the food to expose the other side to the infrared radiation (the cooking time depends on the type of food and personal taste).

The grill must only be used at its full rated heat.

The grill element in the top of the oven is switched on by turning the thermostat knob clockwise to the grill symbol on the control panel. The red light will come on to show the element is in operation.

To see table "Food to be grilled"

Food to be grilled	Time            minutes	
	1st side	2nd side
Thin pieces of meat	6	4
Fairly thick pieces of meat	8	5
Thin fish or fish without scale	10	8
Fairly thick fish	15	12
Sausages	12	10
Toasted sandwiches	5	2
Small poultry	20	15

**IMPORTANT:** accessible parts may be hot when the grill is in use! Keep children well away.

## HOW TO USE OVEN ACCESSORIES

- The oven shelf is designed to take normal oven dishes for cooking sweets or roasts, or is used without a pan for cooking foods under the grill.
- The drip pan under the grill is used to collect juices, which drip from the food that is cooked directly on the grill. The drip pan can also be used for cooking.
- Remember that cooking times may vary if food is cooked on two shelves at the same time.

## REMOVING THE OVEN DOOR

The door can be removed for easier oven cleaning, proceeding as follows:

- fully open the door.
- insert two small coins (e.g. washers with the following dimensions: 20mm diameter x 1.9mm thickness) into the two slots in the hinges.
- close the door until the coins start to prevent it closing further (fig. 5).
- close the door some more and lift it off, holding it at the sides and moving it slightly forward; this is the point at which the door can be removed easily.
- to put the door back in place, return the hinges to their positions, checking that they have fitted into their seats.
- lower the door completely and remove the coins inserted earlier.
- fully close the door.
- always inspect the oven door gasket and if worn have it replaced at once by the after-sales service.

## GENERAL PRECAUTIONS

- Always disconnect the power supply before any work inside the oven or where live parts may be accessed.
- Never use the warming compartment for storing flammable liquids or items which do not withstand heat, such as wood, paper, aerosol cans, matches, etc.
- Wash enamelled or chrome-plated parts with soapy lukewarm water or non-abrasive

# For the user

detergents.

- Never use abrasives to clean enamelled or chrome-plated parts.
- Do not use too much water when washing the hob.
- Never close glass lids until the hob burners or hotplates have cooled completely; it might shatter or crack.
- Never lift the cooker by taking hold of the oven door handle..
- Do not use vapor jets to clean the appliance.
- The cooker does not have an installation stand.

## **Warning:**

Servicing should be carried out only by authorised personnel.

- Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

**Do not spray aerosols in the vicinity of this appliance while it is in operation.**

**Do not use or store flammable materials in the appliance storage drawer or near this appliance.**

**Where this appliance is installed in marine craft or in caravans, it shall not be used as a space heater.**

**This appliance is not suitable for use in marine craft, caravans or mobile homes, unless each burner is fitted with a flame safeguard.**


**DO NOT modify this appliance.**

## **MAINTENANCE SCHEDULE**

We recommend that you clean your appliance as soon as any spillovers occur and that you keep your appliance clean & free from any accumulated grease/dirt, particularly around the electric plates. To keep your appliance operating at peak performance, please have it serviced every 2 years by an authorised person.

**For Service and Spare Parts, Please see attached warranty card for contact details.**


# Figures

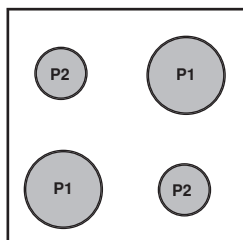

**P1** = HOTPLATE     $\varnothing$  180  
**P2** = HOTPLATE     $\varnothing$  145

1

To remove the door, use two washers with the following dimensions:  
 20mm diameter x 1.9mm thickness.

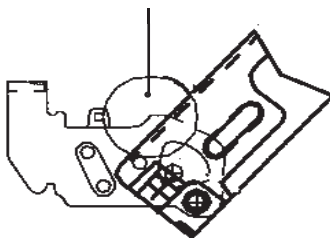

5

## CONNECTION DIAGRAM


230 V TWO-PHASE

Wire gauge:




> 3,5 kW	3x2,5 mm <sup>2</sup>
2,2 - 3,5 kW	3x1,5 mm <sup>2</sup>
0 - 2,2 kW	3x1 mm <sup>2</sup>


2

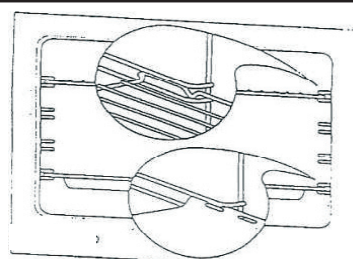


6b

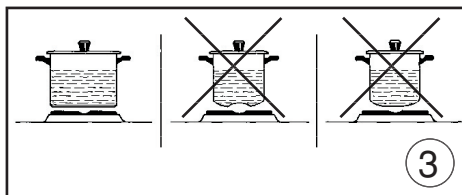

3

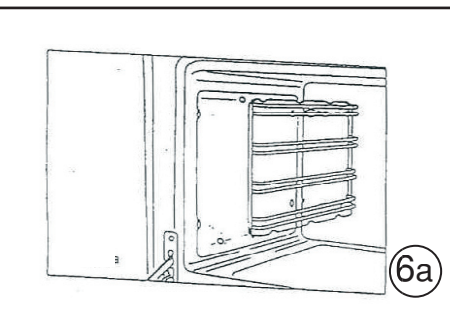

6a

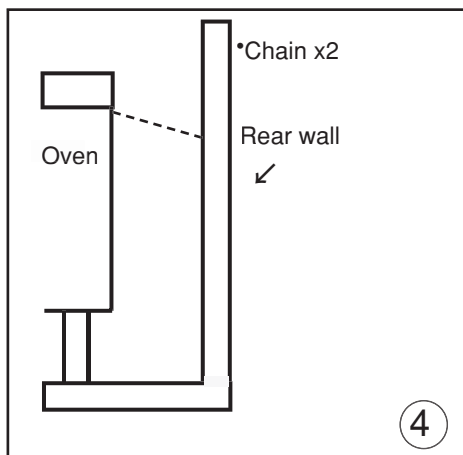

4

