

# Contents at a Glance

## Getting Started 5

- Preparing Your Phone for Use **6**
- Turning Your Phone On and Off **11**
- Display Information and Key Functions **13**
- Making and Receiving Calls **15**
- During a Call **18**

## Functions and Settings 21

- R320 Features **23**
- Using the Menus **24**
- Your Personal Phone Book **30**
- Using the Call List **39**
- Your Voice Mail Service **41**
- Personalizing Your Phone **43**
- Sending and Receiving Text Messages (SMS) **52**
- Communicating via the Built-in Modem **62**
- Sending and Receiving Fax, Data and E-mail **67**
- Business Card Exchange **70**
- Diverting Incoming Calls **73**
- Security for Your Phone and Subscription **75**
- Handling More than One Call Simultaneously **83**
- Setting Network Preferences **88**
- Knowing the Call Time and Call Cost **91**
- Using Two Voice Lines **94**
- Using the WAP™ Browser **95**
- Calendar **104**
- Voice Memo **109**
- Voice Control **112**
- Code Memo **115**
- Calling Card Calls **118**
- Extras **121**
- The Profile Concept **125**
- Accessories **128**
- Online Services **135**

Ericsson R320s

Second edition, December 1999

This User's Guide is published by  
**Ericsson Mobile Communications AB**,  
without any warranty. Improvements and  
changes to this User's Guide necessitated  
by typographical errors, inaccuracies of  
current information, or improvements to  
programs and/or equipment, may be made  
by **Ericsson Mobile Communications AB**  
at any time and without notice. Such  
changes will, however, be incorporated into  
new editions of this  
User's Guide.

All rights reserved.

©Ericsson Mobile Communications AB,  
1999

Publication number: EN/LZT 108 2754 R2A  
INNOVATRON PATENTS

## **Additional Information 139**

Quick Keys **140**

Troubleshooting **142**

Ericsson Mobile Internet **144**

The Online Version of this User's Guide **145**

Technical Data **146**

Glossary **147**

Guidelines for Safe and Efficient Use **152**

Warranty **158**

Declaration of Conformity **160**

Index **161**

Not for Commercial Use  
Ericsson Mobile Communications AB

Please note!

Some of the services in this manual are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

**Note!** You should read the *Guidelines for Safe and Efficient Use* and the *Warranty* chapters before using your mobile phone.

WAP™, W@P™ and WAP Forum™ are registered trademarks of the WAP Forum, LTD., a registered company in the United Kingdom.

The **CE** symbol on our products signifies that they have been certified according to the EMC directive 89/336/EEC, the Telecommunications directive 91/263/EEC, and the Low Voltage directive 73/23/EEC when applicable. The products fulfil the requirements according to the following standards:

Cellular Phones and Accessories in Combination:

*ETS 300 342-1 EMC for European digital cellular telecommunications.*

Accessories Without Direct Connection to a Cellular Phone:

*EN 50081 Electromagnetic compatibility, Generic Emission Standard, and EN 50082 Electromagnetic compatibility, Generic Immunity Standard.*




## Getting Started

<b>Preparing Your Phone for Use</b>	6
<b>Turning Your Phone On and Off</b>	11
<b>Display Information and Key Functions</b>	13
<b>Making and Receiving Calls</b>	15
<b>During a Call</b>	18


# Preparing Your Phone for Use

## Overview

### Front

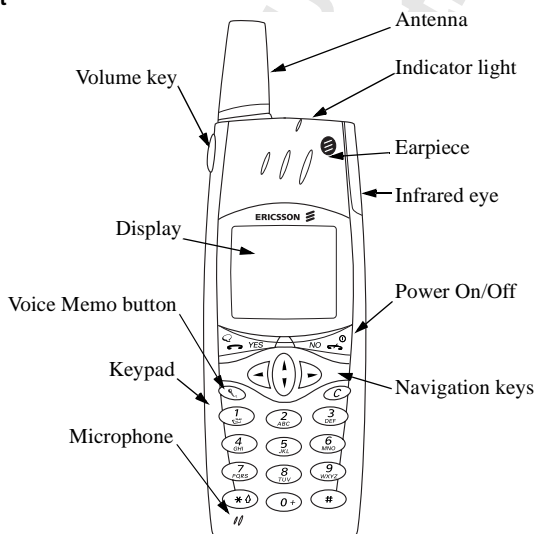

### Back

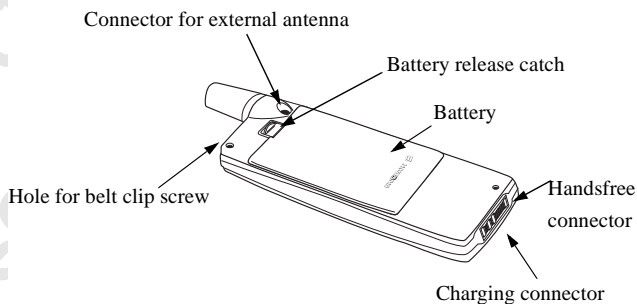

## Assembly

You need to do the following to use your phone:


- insert the SIM card
- attach the battery to the phone
- charge the battery

## The SIM Card

When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card. The SIM card contains a computer chip that keeps track of your phone number, the services included in your subscription, and your Phone Book information, among other things.

SIM cards come in two sizes. One is the size of a credit card and the other is smaller. Your phone uses the smaller card. Many credit card-sized SIM cards have a perforated smaller card that you can take out easily. Before you can use your phone, you must insert the SIM card as shown below.

### Inserting and Removing the SIM Card

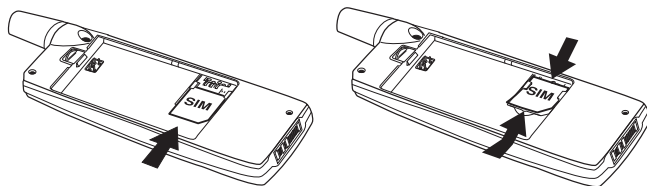


1. Remove the battery if attached. Slide the SIM card into the slot, under the silvery holders, with the golden connectors facing down and the cut corner to the right.
2. Raise the edge of the SIM card and slide it out.

### The PIN

 Most SIM cards are supplied with a security code, also known as PIN (Personal Identity Number), which you need to access the network. Every time you turn on your phone, you are asked to enter your PIN. You will find your PIN in the information from your operator.

Some operators may have services that require a second PIN, your PIN2.

You should be careful with your PIN, since it is your protection against unauthorized use of your subscription.




If your PIN is entered incorrectly three times in a row, the SIM card is blocked. If this happens, you can unlock it by using your PUK (Personal Unblocking Key code), which you also get from your operator.

## The Battery

Your phone comes with a lithium battery. The battery is not charged when you buy your phone, but there may be enough power to switch the phone on.

**Note!** *We recommend that you charge the battery for up to three hours before you use the phone for the first time.*

### Attaching the Battery to your Phone

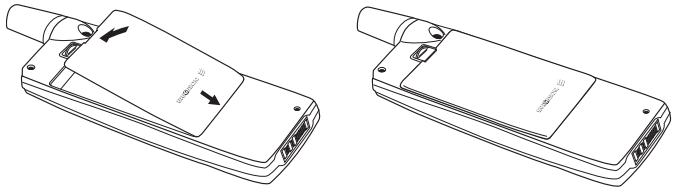

- Place the battery on the back of the phone and push until you hear a click

### When to Charge the Battery

The battery that comes with your phone can be charged whenever you wish without affecting its performance. You can also charge the battery when the phone is off.

To remind you that you will soon need to charge the battery or replace it with a charged one:

- an alarm signal (a short beep) sounds and the message **Attention! Battery low** appears in the display.
- the indicator light on top of the phone starts flashing red.


If you have an Ericsson-approved battery, you can check the remaining talk and standby times in the **Status** menu by sliding the volume key upwards or downwards in standby mode. The total remaining standby and talk time depends on the type of battery you use and your position in the network. Please note that these times are approximate and you may have 20% less time than is shown in the display.

**Note!** *The phone turns itself off when the battery can no longer power it satisfactorily.*

<b>Status</b>
Date: 990906
Profile:



## Charging the Battery

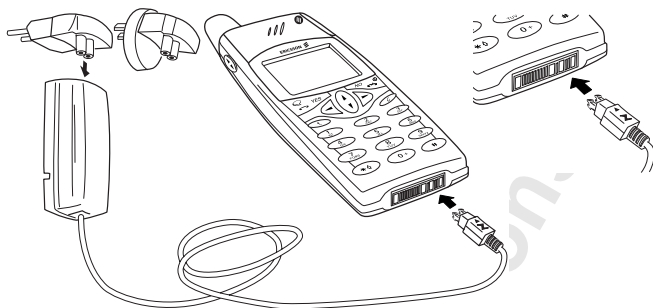

1. Make sure that the battery is attached to the phone.
2. Connect the charger to the mains.
3. Connect the charger to the phone as shown in the picture. The flash symbol on the plug must face upwards.

**Note!** *The mains plug may look different depending on the mains socket in your country. Do not connect it to any other item than your Ericsson Travel Charger CTR-10. It must not be separated from the charger when plugged into the mains socket.*

To indicate charging:

- the battery meter in the display pulses continuously
- the indicator on top of the phone shows a steady red light (or green, if the phone is switched on)
- the message **Optimized Charging** is shown briefly in the display (with an Ericsson-approved battery)

**Note!** *If you charge a new battery that is empty, or a battery that has not been used for a long time, it may take several minutes until you get an indication of charging in the display. Only then can you switch on and use your phone.*

When the battery is fully charged, the battery meter in the display is full and the indicator on top of the phone shows a steady green light.


**Tip!** *You can use the phone while the battery is being charged. However, this lengthens the charging time.*

An Ericsson-approved battery is indicated by **Optimized Charging** each time you start charging the battery. For the best charging, talk and standby times in the long run, we recommend that you use only Ericsson-approved batteries with your phone.



**Note!** Batteries that are not Ericsson-approved are charged slowly for safety reasons. These are indicated by the message 'Alien battery - Slow charging' in the display during the charging process.

### Disconnecting the Charger

 - Move the plug connected to the phone upwards to remove it, as shown in the picture.



### Removing the Battery

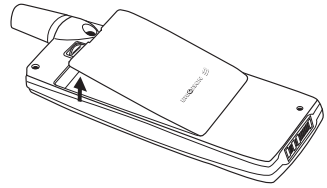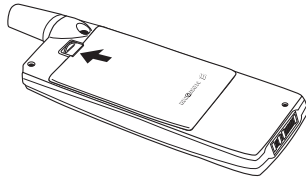

1. Slide the release catch upwards.
2. Lift the battery away from the phone.

# Turning Your Phone On and Off

## Turning Your Phone On

- Press and hold the **NO** key until you hear a tone.

### If “PIN:” Appears in the Display

Some SIM cards are protected with a PIN code. If **PIN:** appears in the display after you have turned on the phone:

1. Enter your PIN. If you make a mistake while entering your PIN, erase the wrong number by pressing the **C** key.
2. Press **YES**.

**Note!** *If your PIN is entered incorrectly three times in a row, the SIM card is blocked. You can unblock it by using your PUK. See “The SIM Card Lock” on page 75.*

*If “Phone locked” appears in the display, enter your phone lock code. See “The Phone Lock” on page 76.*

### Network Search

After you have turned on the phone (and entered your PIN), the phone searches for a network.

When a network is found, the phone beeps three times. The indicator light on top of the phone flashes green once every second and your network operator’s name (in most cases abbreviated) appears in the display.

This is called **standby mode**. You can now make and receive calls.

**Note!** *See “Error Messages” on page 142, if you do not reach standby.*

## Initial Settings

The first time you turn on your phone, you may want to choose the ring signal type and set the clock and date. For more information about these and other settings, see “Personalizing Your Phone” on page 43.



## Display Language

Most modern SIM cards automatically set the display language to the language of the country where you bought your SIM card, (**Automatic**). If this is not the case, the preset language is **English**. To change the display language, see “Display Language and Input Method” on page 48.

If your phone shows a language that you do not understand, you can change it to **Automatic**, or **English**, in the following ways:

### *To change the display language to Automatic*

1. If not in standby mode, press and hold the **NO** key to go to standby.
2. Press  $\leftarrow$ .
3. Enter **8888**.
4. Press  $\rightarrow$ .

### *To change the display language to English*

1. If not in standby mode, press and hold the **NO** key to go to standby.
2. Press  $\leftarrow$ .
3. Enter **0000**.
4. Press  $\rightarrow$ .

## Turning Your Phone Off

- In standby mode, press and hold the **NO** key until you hear a tone.














# Display Information and Key Functions

In standby mode, the display shows the name of your operator, the time, the signal strength and the battery power.

Other icons appear if you receive any messages, divert all your incoming calls, set the alarm clock and so on. In this chapter, you will also learn about the key functions.

## Display Information

The table below shows and explains each icon which may appear in standby.

Icon	Name	Explanation
	Signal strength meter	Tells you the strength of the network signal.
	Battery meter	Tells you the status of the battery.
	Missed call indicator	You have missed an incoming call.
	Divert indicator	All incoming calls will be diverted to a defined number.
	Accept Some/None indicator	No calls or only certain calls from numbers in a list are received.
	Ring signal off indicator	No sound can be heard when you receive a call.
	Alarm indicator	The alarm clock has been set and is on.
	Silent indicator	All audible signals are turned off, except the alarm and timer.
	SMS indicator	You have received a text message.
	Voice mail indicator	You have received a voice message, depending on your subscription.
	Line 1 indicator	Line 1 is in use for outgoing calls - if you subscribe to the Two Line Service
	Line 2 indicator	Line 2 is in use - if you subscribe to the Two Line Service.
	Infrared modem	The built-in infrared modem is activated.



Ciphering indicator    Ciphering is currently not being provided by the network.




Keylock indicator    Indicates that the keypad is locked.

**Note!** *Each menu has got its own symbol. See “Menu Graphics” on page 24.*

## Key Functions

The table below explains the key functions.

Key	Use
YES	To make calls and answer calls. To voice dial, press and hold the key. To enter the Call List from standby. To choose a menu, sub-menu or setting.
NO	To turn the phone on or off, press and hold the key from standby. To end a call. To reject a call. To go back one level in the menus, to exit a setting or to leave a setting unchanged. To get back to standby mode, press and hold the key.
	To enter the menu system. To move (scroll) through menus, lists and text.
C (Clear)	To erase numbers and letters from the display. To mute the microphone during a call, press and hold down the key. To set the phone silent, press and hold the key from standby. To delete an item from a list.
Number keys	To enter the digits 0-9. The 0 key enters the international prefix (+) if held down. To call your Voice Mail, press and hold the 1 key. To enter the phone book, press and hold any of the numbers 2-9. To move through menus using shortcuts. To enter letters, for example when writing an SMS.
*	To enter *. To shift between capital and lower-case letters.
# (Hash)	To enter #.
Volume key upwards and downwards	To increase or decrease the volume of the earpiece or handsfree loudspeaker during a call. To reject an incoming call, slide the key twice. To voice dial, slide and hold the key. To move through the menus. To enter the Status menu.


**Note!** *For information about the menus, see “Moving through the Menus” on page 26.*

# Making and Receiving Calls

In this chapter, we assume that you have turned on your phone and that you are within range of a network. If you are abroad, you may use other networks, provided your home network has an agreement that allows you to do this. See “Setting Network Preferences” on page 88.

## Making a Call

1. Enter the area code and phone number.
2. Press **YES**.

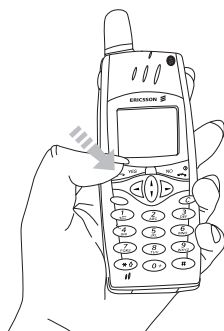

**Note!** *Some countries may not use area codes.*

While a call is in progress, a time counter automatically starts and you can see how long you have been on the phone. If your network and subscription supports it, you see the price of the call in the display. See “Knowing the Call Time and Call Cost” on page 91.


## Ending a Call

- Press **NO** to end the call.

## Re-dialling a Previously Called Number

In the **Call List** you find numbers that you have dialled, answered or missed.

*To re-dial a previously called number*

1. Press **YES** to enter the **Call List**.
2. Scroll through the list with  and select the number you want to call.
3. Press **YES** to make the call.

01206500857

02:33pm

Call List  
1 → 01206500857  
2 → +4499023723

For more information, see “Using the Call List” on page 39.

### Automatic Re-Dialling

If the connection failed when you first called, the display shows **Retry?**. You can now re-dial the number by pressing **YES**. Your phone automatically re-dials (up to 10 times)

- until the call is answered. When the call is successfully connected, you hear a ring signal.
- until you press a key or receive a call.

**Note!** *Automatic re-dialling is not available for fax and data calls.*

### Making International Calls

1. Press and hold the **0** key until a **+** sign appears.  
The **+** replaces the international prefix number of the country from which you are calling.
2. Enter the country code, area code (without the leading zero) and phone number.
3. Press **YES**.

### Making Emergency Calls

1. Enter **112** (the international emergency number).
2. Press **YES**.

The international emergency number **112** can normally be used in any country, with or without a SIM card inserted, if a GSM network is within range.

**Note!** *Some network operators may require that a SIM card is inserted, and in some cases that the PIN code has been entered as well.*

*Some networks may not use the international emergency number **112**.*

### Receiving a Call

When you receive a call, the phone rings and the display shows **Answer?**

If your subscription includes the Calling Line Identification (CLI) service and the caller's network sends the number, you see the caller's number in the display. If the caller's number and name are stored in the phone book, the caller's name is displayed instead.

If the incoming call is a restricted number, the display shows **Private**.

User busy  
Retry?

+461310960


... 10:08am

Answer?



## Answering a Call

- Press **YES** to answer the call.

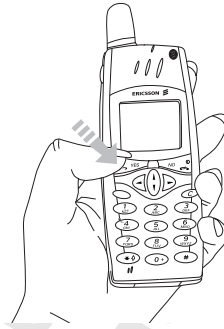

## Rejecting a Call

- Slide the volume key on the side of the phone twice.  
The display shows **Busy tone**. The caller hears a busy tone if this is supported by the caller's subscription. If **Divert Calls When Busy** is on, the call is diverted to the number you have specified. See "Diverting Incoming Calls" on page 73.

Busy tone

## Ciphering

Ciphering is a built-in feature that scrambles your calls and messages to provide additional privacy.

An exclamation mark is shown in the display during a call, to indicate that ciphering is currently *not* being provided by the network.



# During a Call

Your phone has several functions, which you might find helpful while a call is in progress.

## Changing the Listening Volume

You can easily change the listening volume during a call by sliding the volume key on the side of the phone.

*To change the listening volume during a call*

- Slide upwards to increase the volume.
- Slide downwards to decrease the volume.

## Muting the Microphone

If you wish, you may turn the microphone off during a call.

*To turn the microphone off temporarily during a call*

1. Press and hold down the **C** key.  
**Muted** appears in the display.
2. To continue your conversation, release the **C** key.

**Tip!** *Instead of pressing and holding the **C** key, you can put the call on hold.*

*To put a call on hold*

1. Press **YES**.  
**Call held** appears in the display.
2. To continue your conversation, press **YES** again.

## Sending Tone Signals

To use telephone banking services or to control an answering machine, you need to use codes. These codes are sent as tone signals (also known as DTMF tones or touch tones). With your mobile phone, you may use these codes during a call. If you press **0-9**, **\*** and **#** during a call, these numbers and characters are sent as tone signals.

**Tip!** *You can also save codes only or codes together with a phone number in your Phone Book. See "Telephone Banking Services" on page 36. However, it may be a risk to save your codes in the phone in case it is stolen. In order to safely store your codes in the phone, see "Code Memo" on page 115.*



Muted



Call held

## The Notepad

If you want to make a note of a phone number during a call, you can use your phone display as a notepad.

**Note!** *You can also record either yourself or the person you talk to during a call. See “Voice Memo” on page 109.*

*To use the notepad during a call*

- Use the number keys to enter the number.

When you end the call, the number remains in the display or, if **Ask to Save** is **On**, you will be asked to save the number in your phone book. You can also find the number in **Add Number** in the **Phone Book** menu. See “Your Personal Phone Book” on page 30.

When you enter the number, the person you are talking to will hear the tones. If you wish, you may turn the tones off during a call. See “Turn Off Tones” on page 48.

## Checking the Duration or Cost of the Call

During a call, the display normally shows the duration in minutes and seconds. Depending on your subscription, you may see the call cost displayed instead.

**Note!** *This depends on your network and SIM subscription. See “Knowing the Call Time and Call Cost” on page 91.*

## Minute Minder

If you turn on the minute minder, you hear a beep once every minute during a call as a reminder of the duration of the ongoing call. See “Minute Minder” on page 47.

## More than One Call Simultaneously

Your phone is capable of handling more than one call simultaneously. You can put the current call on hold and then make or answer a second call. You can also set up a conference call with up to five people. See “Handling More than One Call Simultaneously” on page 83.

*Not for Commercial Use  
Ericsson Mobile Communications AB*

# Functions and Settings

<b>R320 Features</b>	23
<b>Using the Menus</b>	24
<b>Your Personal Phone Book</b>	30
<b>Using the Call List</b>	39
<b>Your Voice Mail Service</b>	41
<b>Personalizing Your Phone</b>	43
<b>Sending and Receiving     Text Messages (SMS)</b>	52
<b>Communicating via the Built-in Modem</b>	62
<b>Sending and Receiving Fax,     Data and E-mail</b>	67
<b>Business Card Exchange</b>	70
<b>Diverting Incoming Calls</b>	73
<b>Security for Your Phone and Subscription</b>	75
<b>Handling More than One Call     Simultaneously</b>	83
<b>Setting Network Preferences</b>	88
<b>Knowing the Call Time and Call Cost</b>	91
<b>Using Two Voice Lines</b>	94

<b>Using the WAP™ Browser</b>	95
<b>Calendar</b>	104
<b>Voice Memo</b>	109
<b>Voice Control</b>	112
<b>Code Memo</b>	115
<b>Calling Card Calls</b>	118
<b>Extras</b>	121
<b>The Profile Concept</b>	125
<b>Accessories</b>	128
<b>Online Services</b>	135

Not for Commercial Use  
Ericsson Mobile Communications AB

## R320 Features

Your R320 is a new generation phone: a Dual Band phone with a lithium battery; a phone of modern design and advanced technology. It contains a whole new set of functionality helping you to be more efficient and productive, no matter where you are.

Use the **WAP** micro-browser the same way you use an ordinary Internet browser; to access a whole world of useful information services. Let the **Calendar** keep track of all your meetings and remind you in advance. Relieve your memory by using the **Voice Memo** to record yourself or another person, and store your credit card codes, your PC-password and more in the **Code Memo**.

Or why not use the **Voice Control** and say 'Answer' to answer a call or 'Busy' if you wish to reject the call. You can also call a person by simply saying the name.

The R320 has a **Profile** feature which makes it possible for you to change a few settings by just choosing a certain profile, since each profile includes a group of settings preset to suit a certain environment. For example, when you go to a meeting, you can just choose the 'Meeting' profile and a number of settings that suit a meeting are then set.

The profiles are also related to intelligent accessories such as a desktop charger, a portable or vehicle handsfree. For example, you may place the R320 in a vehicle handsfree kit and the 'In Car' profile is chosen automatically.

In the display of the R320 you can see a mixture of text and symbols, which makes it easier for you to move through the menus when you want to change a certain setting, turn on the **Vibrating Alert**, send a message, save a number and so on.

An extra feature is the numbered shortcuts, which takes you to a certain setting quickly and easily. You may also create your own favourite menu, **My Shortcuts**, by including the settings you use most often. If you should need help using the menus, the R320 is equipped with help text to guide you.

# Using the Menus




 







You can find all your phone functions in the menus. You use the menus every time you want to change a setting in your phone, such as the ring signal. You also use the menus to get the most out of your phone: to set the alarm clock, send text messages, save important phone numbers, etc.

The menus are arranged in a loop, which you enter and move (scroll) through with the  $\langle$  and  $\rangle$  keys or by using shortcuts. Each menu contains a list of options. Some menus have sub-menus with additional options.

















## Menu Graphics

You enter the menus by pressing  $\langle$  or  $\rangle$ . At the top of the display there are icons symbolizing each menu. Besides these, there are symbols within the sub-menu indicating missed calls, help texts, voice labels etc.

The table below illustrates and explains each menu icon and symbol.



 
Symbol	Name	Description
	Phone Book menu	Your personal phone book
	Messages menu	Handling of text and voice messages.
	Ongoing Call menu/ Call Info menu	Handling of ongoing calls, call time and call cost information.
	Settings menu	Personal settings and profiles.
	Extras menu	Calendar, voice memo, games, alarm clock and other extras.
	WAP Services menu	Gives you access to Internet.
	My Shortcuts menu	A selection of your most frequently used functions.
	Ongoing call indicator	You have an ongoing call.
	Missed calls indicator	Indicates a missed call in the call list.
	Answered call indicator	Indicates an answered call in the call list.
	Dialled number indicator	Indicates a dialled number in the call list.






	Phone memory indicator	Indicates that a phone book entry is saved in the phone memory.
	Group indicator	Indicates that a phone book entry is a group.
	Unread SMS indicator	Indicates that a text message has not been read.
	Unchecked voice Mail	Indicates that a voice message has not been checked.
	Phone book look up indicator	Indicates that you can enter the phone book by pressing  .
	SIM card memory indicator	Indicates that an SMS is saved in the SIM card memory.
	Voice label in phone indicator	Indicates that a voice label has been recorded for an entry in the phone only.
	Voice label in car indicator	Indicates that a voice label has been recorded for an entry in the car handsfree kit.
	Voice label in phone and in car indicator	Indicates that a voice label has been recorded for an entry in the phone and in the car handsfree kit.
	Preferred network indicator	Indicates that a network is preferred and can be used.
	Forbidden network indicator	Indicates that a network is forbidden and cannot be used.
	Home network indicator	Indicates that your network is within range and can be used.
	Help text indicator	Indicates a help text.
	Lock indicator	Indicates that the card lock or phone lock is on.
	Key Lock indicator	Indicates that the keypad is locked

## Moving through the Menus



There are two ways of moving through the menus:

 - scrolling by using ,  and .
- using shortcuts


 
### Scrolling by Using , and



Press...	to...
	scroll up or down through menus or functions.
 or 	switch between menus or functions.
<b>YES</b>	select a menu, sub-menu or setting.
<b>NO</b>	go back one level in the menu system, exit a setting or leave a setting unchanged. go back to standby mode by pressing and holding the key.
<b>C</b>	delete an item from a list.

**Note!** For information about how to enter letters, see “Entering Letters” on page 31.

**Tip!** Once in the menu system, you can press and hold the  key or slide and hold the volume key until you reach the sub-menu that you want instead of pressing the  key repeatedly.




### Using Shortcuts

A quicker way to move through the menus is to use the shortcuts. You simply enter the number of the menu or submenu to which you want to go, but you first need to enter the menus by pressing  or . To get back to standby, you press and hold **NO** as normal.

**Tip!** A quicker way to enter the ‘Find and Call’ menu is to press and hold . A quicker way to enter the first sub-menu in the ‘My Shortcuts’ menu is to press and hold .

**Note!** Your phone may not have all the menu alternatives described in this manual since many of them are network- and subscription dependent. Because of this, the shortcut numbers may vary between phones.

## How to Interpret the Instructions

In the instructions in this manual we use the scrolling keys ,   to describe the functions and settings, since the shortcut numbers may vary between phones due to your subscription and network.

In this instruction we are going to set the key sound to 'Tone'.

#### To set the key sound

1. Scroll to **Settings**, **YES**, **Sounds & Alerts**, **YES**, **Key Sound**, **YES**.
2. Select **Tone**.

Interpret the instruction as follows:

1. From the standby mode, use  $\leftarrow$  or  $\rightarrow$  to scroll to the **Settings** menu.
2. Press **YES** to select the menu.

Now you are in the **Settings** menu.

The name of the menu that you have chosen is shown at the top of the display (**Settings**).

3. Press **YES** to select the **Sounds & Alerts** sub-menu.  
(You do not need to scroll with the arrow keys since this is the first sub-menu in the main menu **Settings**).
4. Use  $\uparrow$  to scroll to the **Key Sound** sub-menu.  
Press **YES** to select the sub-menu.
5. Use  $\uparrow$  to scroll to **Tone**.

Press **YES** to select the **Tone** alternative.

Now you have set the key sound to 'Tone'.

To go back to standby mode, press and hold the **NO** key.

This is how to interpret the same instruction as above when using shortcuts:

#### To set the key sound

1. Press  $\leftarrow$  or  $\rightarrow$  to enter the menu system.
2. Press **4** to select the **Settings** menu.
3. Press **1** to select the **Sounds & Alerts** sub-menu.
4. Press **8** to select the **Key Sound** sub-menu.
5. Select **Tone**.

### Display Text

When you move through the menu system, the display changes. The following hints can help you:

- Black text within a frame at the top indicates the menu you have chosen.
- Inverted text on a black layer indicates your position in the menu system. If you press **YES** you enter this menu or select this setting.
- Grey text indicates a function that is temporarily unavailable, for example due to your subscription or due to a certain setting which is not set to on.
- Text marked with a tick indicates the current setting or settings selected.
- Text marked with a filled button indicates the current setting selected.



## My Shortcuts

You can place your favourite settings in the menu **My Shortcuts**. In this way, you can reach the settings you use most, quickly and easily.

When you buy your phone, **My Shortcuts** contains a few settings which you can remove if you wish. You can also add a setting from another menu to **My Shortcuts**.


*To add a setting to My Shortcuts*

1. Scroll to **My Shortcuts**, **YES**, **Edit Shortcuts**, **YES**.
2. Select a setting from the list by pressing **\***.
3. Enter the position number you want for your setting in this menu.
4. Press **YES**.

If you want to add another setting, repeat steps 2 and 3.

To remove a setting from **My Shortcuts**, repeat steps 1 and 2.

5. Press **YES** to exit the list.

**Tip!** A quicker way to enter the first sub-menu in the 'My Shortcuts' menu is to press and hold .

## The Dynamic Call Info/Ongoing Call Menu

Depending on whether a call is ongoing or not, the menus **Call Info** and **Ongoing Call** will replace each other:

- **During an ongoing call:** The menu **Ongoing Call** is active with its sub-menu options, e.g. Hold Call, Switch Calls.
- **During standby mode:** The menu **Call Info** is active with its sub-menu options, e.g. Last Call, Total Time.

When the **Ongoing Call** menu is active, you can find the **Call Info** menu at the bottom of the **Ongoing Call** menu.

 
## Help Texts


To help you use the functions and settings of the menus, your phone includes pop-up help texts that explain the sub-menus.

These help texts are set to **On** when you buy your phone, but you may turn them off at any time.

*To turn the help texts on or off*

1. Scroll to **Settings**, **YES**, **Display**, **YES**, **Menu Help**.
2. Select **On** or **Off**.



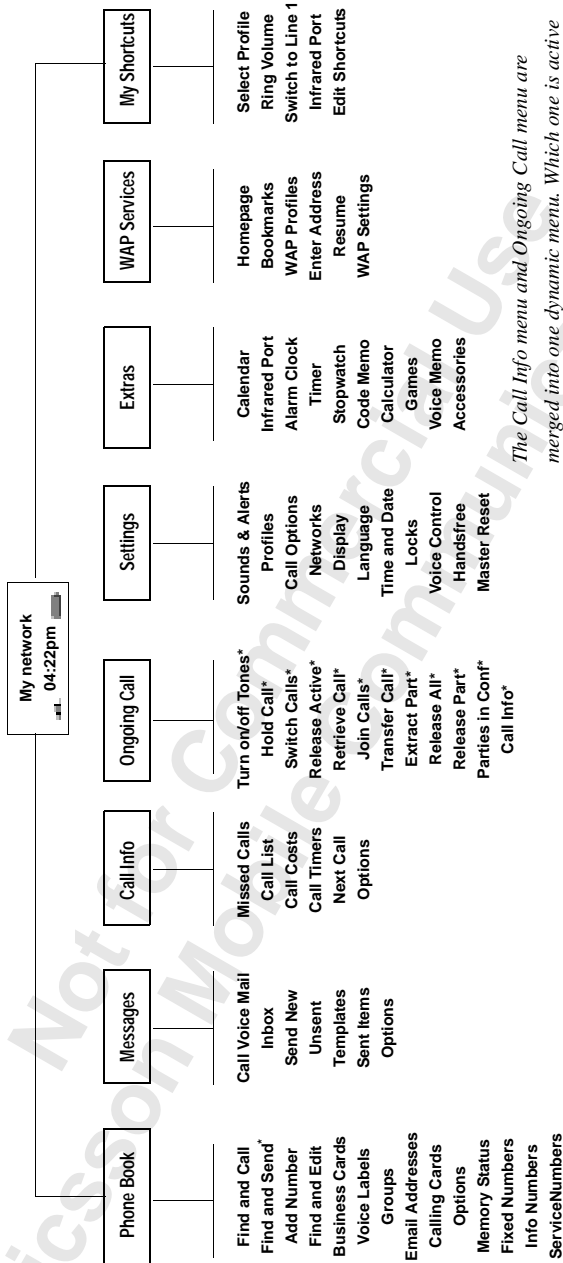

The Call Info menu and Ongoing Call menu are

merged into one dynamic menu. Which one is active depends on whether a call is ongoing or not.

Please note that this image displays all the possible menu alternatives in your phone. Many of the alternatives are network and subscription dependent.

\* Only available during a call

# Your Personal Phone Book

You can create a personal phone book by saving phone numbers and accompanying names (an entry). An easy way to make calls is by recalling the phone numbers or names saved in your phone book.

## Creating a Personal Phone Book

Before you start creating your personal phone book, there are a few things you need to know. You need to learn about the memories, how to save the numbers with the international (+) sign and how to enter letters.

### Phone Book Memories

You can save phone numbers and names in:

- the card memory on the SIM card
- the phone memory

Your entries are first saved in the positions on your SIM card. The actual number of memory positions available depends on your SIM card.

Saving your numbers in the card memory allows you to use the numbers saved on the SIM card even when you change phones, i.e. when you insert your SIM card into another phone.

By saving your numbers in the phone memory, they are always available to you in your phone, even if you change SIM cards. The phone memory holds 99 positions in which your entries are saved when all SIM positions are occupied.

### International Numbers

If you intend to use your phone both at home and abroad, it is a good idea to save all phone numbers as international phone numbers, i.e. with the (+) sign, (which automatically replaces the international dialling prefix for the country you are calling from) followed by the country code, the area code and the phone number.

*To enter an international phone number*

- Press and hold **0** to enter the + sign.  
Exclude the leading zero in the area code.

Add new?  
Number: +44 1206  
5008571

## Entering Letters

You can enter letters when you are using the phone book and when you are composing a short message (SMS). See “Sending and Receiving Text Messages (SMS)” on page 52.

Press the appropriate key, **1–9, 0** or **#**, repeatedly until the character you want appears in the display.

Press...	to get...
1	Space - ? ! , . : ; ' " < = > ( ) _ 1
2	A B C Å Ä Æ à Ç 2 Γ
3	D E F è É 3 Δ Φ
4	G H I i 4
5	J K L 5 Λ
6	M N O Ñ Ö Ø ò 6
7	P Q R S β 7 Π Σ
8	T U V Ü ü 8
9	W X Y Z 9
0	+ & @ / □ % \$ £ ¥ § ζ   0 Θ Ξ Ψ Ω
#	# * ␣

### Example:

- To enter an ‘A’, press **2** once.
- To enter a ‘B’, press **2** twice quickly.
- To enter lower-case letters, enter the letter, for example an ‘A’ and then press \*. An ‘a’ appears. Lower-case letters now appear until you press \* again.
- To enter numbers, press and hold any numeric key.
- To delete letters and numbers, press the **C** key.

You may also use the volume key as a shortcut to certain letters:

- To enter a ‘B’, slide the volume key upwards and press **2**.
- To enter a ‘C’, slide the volume key downwards and press **2**.

If you use the input method called **WAP Address**, the table above changes slightly. Then the ~ sign is added to the number 1 key. Also, the signs . \_ : are moved to the left in the row. See “Display Language and Input Method” on page 48.

**Tip!** *You can choose another alphabet by pressing and holding #. You can also decide what alphabets you want to choose from, see “Display Language and Input Method” on page 48.*

## Saving a Number Together with a Name

Every phone number that you save includes a position number. You can save the phone numbers together with a name to make it easier for you to keep track of your phone numbers.

*To save a number together with a name*

1. Scroll to **Phone Book**, **YES**, **Add Number**, **YES**.

A list of numbers used but not saved may appear.

2. Select **Add new?** or any of the numbers from the list by pressing **YES**.
3. Enter a phone number that you wish to save (including the **+** sign and the country code).
4. Enter a name that you want to associate with the phone number and press **YES**.
5. You now have three options:
  - To save the number in the suggested first empty position, press **YES**.
  - To save the number in another position, press the **C** key to erase the position number, enter a new position number and press **YES**.
  - To save the number in the phone memory, you need to know how many positions you have got on your SIM card. You can check this in **Memory Status** in the **Phone Book** menu. If you, for example, have 200 positions on your SIM, you can enter position number 201 to save a number in the phone memory.

If you have turned the Voice Dialling on, you are asked if you want to add a voice label to your phone book entry. See “Voice Control” on page 112.

### Ask to Save

If you wish to be asked to save any dialled or answered number that is not already saved in your phone book, you can turn on the **Ask to Save** option.

*To turn Ask to Save function on or off*

1. Scroll to **Phone Book**, **YES**, **Options**, **YES**, **Ask to Save**.
2. Select **Off**. Press **YES**.

**Note!** *Your subscription must support the Calling Line Identification service.*

## Calling a Number Saved In the Phone Book

You can either call a number by using the name saved with it or you can call the number by using the memory position that it was saved in.

 
The order of searching for names and numbers depends on the sort order you have chosen, i.e. by name or by position.

Add new? Number:+441206 500857
--------------------------------------

Add new? Name:PATRIK BERGMAN
------------------------------------

Add new? Position:5
------------------------






#### To choose a sort order

1. Scroll to **Phone Book**, **YES**, **Options**, **YES**, **Sort Order**, **YES**.
2. Select a sort order.

#### To call a number saved in the phone book

1. Scroll to **Phone Book**, **YES**, **Find and Call**, **YES**.
2. Enter the position number or the name (or the first few letters of the name) associated with the number that you want to call.
3. Press **YES**.  
If the name displayed is not the one you want, press  until you find the correct name and number.
4. Press **YES** to make the call.


**Tip!** A quicker way to enter the 'Find and Call' menu is to press and hold 

### Shortcuts to Phone Book Entries

When in standby, you can find an entry by:

- entering the position number followed by #.
- pressing and holding one of the keys **2-9** to find an entry beginning with a specific letter.

For example, pressing and holding **2** takes you to the first entry beginning with the letter **A** (or closest following).

Once you are in the list of phone book entries you can use  to scroll through the positions, or enter a position number or a letter to go to a certain entry.

### Speed Dialling

You can call the phone numbers that you have saved in positions 1–9 in the memory by entering the position number and then pressing **YES**.

#### Example:

1. Enter the number **3**.
2. Press **YES** to make the call.

### Keeping the Phone Book Up to Date

You may need to change the names and numbers in the phone book from time to time. You may also want to change the position number for the entry.

### Editing a Phone Number In the Phone Book

You need to find the phone book entry that you wish to edit. You can use either the stored position or the name. See "Calling a Number Saved In the Phone Book" on page 32.



### To edit an entry

1. Scroll to **Phone book**, **YES**, **Find and Edit**, **YES**.
2. Enter the position number or the name for the entry that you wish to edit. Press **YES**.  
If the name displayed is not the one you want, press  $\uparrow$  until you find the correct name and number.
3. Press **YES** to select the entry.
4. Select **Edit**.
5. Edit the number and press **YES**.  
Use  $\leftarrow$  and  $\rightarrow$  to move the cursor. Use the **C** key to delete.
6. Edit the name and press **YES**.
7. Edit the position number and press **YES**.

### Copying From One SIM Card to Another

If you want to change SIM cards, you do not need to save all the entries in your phone book once again. Instead, you can copy the entries from one SIM card to another, via the phone's memory.

**Note!** *To make sure you do not erase entries that you want to keep, it is important that you check your phone memory and your two SIM card memories before you start copying, see "Checking the Status of the Memory" on page 38.*

If your Phone Memory contains phone book entries that you wish to copy to the new SIM card, you first need to copy these entries from the phone memory to the new SIM card. Otherwise, you can start copying from your old SIM card to your new SIM card straight away. See "To copy from one SIM card to another" on page 35.

### To copy from the phone memory to the new SIM card

1. Insert the new SIM card.
2. Scroll to **Phone Book**, **YES**, **Options**, **YES**, **Copy**, **YES**, **Copy to Card**, **YES**.
3. Enter the position number of the SIM card where you want to start saving your phone memory entries. Press **YES**.  
For example, if the SIM card you want to copy to contains 10 entries that you wish to keep, you should select position number 11.
4. Press **YES** again to start copying.
5. Wait until the display shows **Phone book entries copied** together with the number of copied entries.
6. Continue under the heading "To copy phone book entries from one SIM card to another" below.

### *To copy from one SIM card to another*

1. Make sure your old SIM card is inserted into your phone.
2. Scroll to **Phone Book, YES, Options, YES, Copy, YES, Copy from card, YES.**
3. Enter the position number from which you want to start copying and press **YES.**
4. Press **YES** again to start copying.
5. Wait until the display shows **Phone book entries copied** together with the number of copied entries.
6. Switch off your phone, enter the new SIM card and switch on the phone.
7. Scroll to **Phone Book, YES, Options, YES, Copy, YES, Copy to card, YES.**
8. Enter the position number on the new SIM card to which you want to start saving and press **YES.**
9. Press **YES** again to start copying.
10. Wait until the display shows **Phone book entries copied** together with the number of copied entries.

**Note!** *The phone can only copy 99 entries at a time. If your SIM card contains more than 99 entries, you need to start copying from position 100 the next time you start copying, and so on.*

### **Overwrite Protection**

If you try to save a phone number in a position which already contains a phone number, the message **Overwrite?** appears together with the name saved in that position. You now have two options:

#### *To save the number in the selected position*

- Press **YES** to replace the number with the new one.

#### *To save the number in a different position*

1. Press **NO.**
2. Enter the new position number.
3. Press **YES** to save the number in the new position.

### **When the Card Memory Is Full**

When all SIM card positions are full, an icon appears next to the position number, see margin. From now on your entries are stored in the phone memory.

If all positions, including the phone memory are full, you have to delete an old number by entering a position that is already occupied and press **YES.**

Find and Edit  
PATRIKBERGMAN

PATRIKBERGMAN  
1 Edit  
2 Delete  
3 Call  
4 Add Voice

PATRIKBERGMAN  
1 Edit  
2 Delete  
3 Call  
4 Add Voice

Delete all in  
phone memory?

### To delete an entry from the memory

1. Scroll to Phone Book, **YES**, Find and Edit, **YES**.
2. Enter the position number or the name of the number that you want to delete and press **YES**. (This depends on the sort order, i.e. by name or by position.)
3. Press **YES**.
4. Select Delete.
5. Press **YES** to confirm your choice.

### To delete all entries from the phone memory

1. Scroll to Phone Book, **YES**, Delete All, **YES**.
2. The question Delete all in phone memory? appears.  
Press **YES**.
3. Enter the phone lock code (0000 or another one that you have chosen yourself).  
All entries in the phone memory are deleted.

## Telephone Banking Services

If you use telephone banking services, you can save the phone number of your bank together with your personal codes and account numbers. You only need to add pauses between the phone number, account number and security code. You insert a pause by pressing and holding the \* key. Talk to your bank about the correct flow of the phone number, codes and the number of pauses that are required.

**Note!** *However, it may be a risk to save your codes in the phone in case it is stolen. In order to safely store your codes in the phone, see "Code Memo" on page 115.*

### To save a phone number with an account number and security code

1. Scroll to Phone Book, **YES**, Add Number, **YES**.
2. After entering the phone number, press and hold the \* key until the pause character **p** appears in the display.
3. Enter the code, if needed enter another pause, another code and so on.
4. Enter the name that you want to associate with the phone number and code and press **YES**.
5. Press **YES** to save.

If you want to save the number in a different position than the one suggested. See "Saving a Number Together with a Name" on page 32.

To make a call with tone signal codes, proceed as described in "Calling a Number Saved In the Phone Book" on page 32. When you make the call, the

phone dials the number, waits until the call is answered and then sends the code. If you insert another pause and another code, it pauses again, sends the next code and so on.

## Groups

The phone also allows you to create groups of phone book entries. In this way you can send a text message to several recipients at the same time.

See “Sending and Receiving Text Messages (SMS)” on page 52.

### *To create a new group*

1. Scroll to **Phone Book**, **YES**, **Groups**, **YES**, **Add group?**, **YES**.
2. Enter a name for the group and press **YES**.
3. Scroll to **Add member?**, **YES**.
4. Select an entry in your phone book.
5. To add the next member, press **YES** at **Add member?**.

### *To add a new member to an existing group*

1. Scroll to **Phone Book**, **YES**, **Groups**, **YES**.
2. Select the group that you want to edit.
3. Scroll to **Edit**, **YES**, **Add member?**, **YES**.
4. Select an entry in your phone book.

### *To delete a member from a group*

1. Scroll to **Phone Book**, **YES**, **Groups**, **YES**.
2. Select the group that you want to edit.
3. Select **Edit**.
4. Scroll to the member that you want to delete and press **C**.
5. Press **YES** to confirm your choice.

### *To delete a group*

1. Scroll to **Phone Book**, **YES**, **Groups**, **YES**.
2. Select the group that you want to delete.
3. Select **Delete**.
4. Press **YES** to confirm your choice.

## E-mail Addresses

You can save e-mail addresses to be used when you want to send a text message as an e-mail. You can save 10 e-mail addresses consisting of 60 characters each.

See “Sending and Receiving Text Messages (SMS)” on page 52.



<b>E-mail</b>
Address:

#### *To save an e-mail address*

1. Scroll to **Phone Book, YES, Email Addresses, YES, Add new?, YES.**
2. Enter an e-mail address and press **YES.**
3. Enter a name and press **YES.**

**Tip!** *The @ sign is accessed by pressing the 0 key three times.*

#### *To edit an e-mail address*

1. Scroll to **Phone Book, YES, Email Addresses, YES.**
2. Select the entry that you want to edit.
3. Select **Edit.**
4. Edit the e-mail address and press **YES.**
5. Edit the name and press **YES.**

#### *To delete an e-mail address*

1. Scroll to **Phone Book, YES, Email Addresses, YES.**
2. Select the entry that you want to delete.
3. Select **Delete.**
4. Press **YES** to confirm your choice.

### Checking the Status of the Memory

The **Memory Status** function in your phone book lets you check how many memory positions you have left in your memories.

#### *To check the status of your different phone book memories*

- Scroll to **Phone Book, YES, Options, YES, Memory Status, YES.**

<b>Status</b>
Card Memory 2(100)
Phone Memory 0(99)
E-mail 0(10)

# Using the Call List




The **Call List** is a phone number log that saves information (time, date, phone number and name) about the last 30 incoming and outgoing calls. Once your list exceeds 30 calls, the oldest one is deleted.

**Note!** *Depending on whether a call is ongoing or not, the menus 'Call Info' and 'Ongoing Call' will replace each other. See "The Dynamic Call Info/Ongoing Call Menu" on page 28 for more information.*

## What Calls Are Saved?

The numbers that you have dialled are always saved. If your subscription includes the Calling Line Identification (CLI) service and the caller's network sends the number, you will also find the numbers (together with a name if saved in your phone book) of answered and missed calls in the **Call List**. If the incoming call is a restricted number, the display shows **Private**. You can call any of the numbers in the **Call List**.

### The Call List saves:

- 
-  Dialled numbers
  -  Answered calls
  -  Missed calls

All the calls are saved together in chronological order. The last call you have made is saved in the first position. If the same number is called more than once, the latest call replaces earlier ones. If you check a call within 24 hours, the time of the call is displayed. Otherwise, the time is replaced by the date.

**Note!** *If you change SIM cards or turn the Call List off, the list is cleared. Called numbers may remain in the SIM card memory though.*

*To call a number from the call list*

1. Scroll to **Call Info**, **YES**, **Call List**, **YES**.
2. Scroll to the number that you want to call and press **YES**.

**Tip!** *Press YES when the phone is in standby mode to go directly to the call list.*



#### To delete a number from the call list

1. Scroll to **Call Info, YES, Call List, YES.**
2. Scroll to the number you want to delete and press **C.**  
The question **Delete?** appears in the display.
3. Press **YES** to delete the number.

#### To clear the call list

1. Scroll to **Call Info, YES, Options, YES, Clear Call List, YES.**  
The question **Call List Clear?** appears in the display.
2. Press **YES** to clear the call list.

#### To turn the call list on or off

1. Scroll to **Call Info, YES, Options, YES, Set Call List, YES.**
2. Select **On** or **Off.**  
If you select **Off** the question **Call List Clear?** appears in the display.
3. Press **YES** to clear the call list.

### Missed Calls

If you have missed a call, the message **Missed Calls: 1** appears in standby mode, where the number **1** indicates the number of missed calls.

1. Press **YES** to display the missed calls.
2. If you wish to call a number from the list of missed calls, press **YES** at the number you want to call.

**Note!** *You can also see the Missed Calls List in the 'Call Info' menu. Missed calls are also saved in the Call List.*

## Showing And Hiding Your Number

 
 
 
 
 
Some operators offer subscriptions where your phone number is normally hidden. You can choose to show or hide your number for a particular call, if Calling Line Identification Restriction service (CLIR) is supported by your subscription.

#### To hide your phone number for a particular call

1. Enter the phone number you wish to call.
2. Scroll to **Call Info, YES, Next Call, YES, Hide My Number, YES.**
3. Press **YES** to make the call.

#### To show your phone number for a particular call

1. Enter the phone number you wish to call.
2. Scroll to **Call Info, YES, Next Call, YES, Show MyNumber, YES.**
3. Press **YES** to make the call.





# Your Voice Mail Service

This service depends on your subscription and operator.

The answering service of your network allows callers to leave a voice message when you cannot answer your calls. Depending on your network operator, you will be informed that you have received a voice message in different ways.

Some operators inform you by sending a specific **Voice Mail** indication. If this is the case, the voice mail icon appears in the display.

Most operators, however, inform you by sending a text message, (i.e. an SMS), for example asking you to call your **Voice Mail Service**.

**Note!** *For more information about your Voice Mail Service, please refer to the information provided by your network operator.*

## Communicating With Your Voice Mail Service

If you want your phone to easily interact with your **Voice Mail Service**, you can store the number to your **Voice Mail Service**. You will get the number in the information provided by your network operator.

*To store your Voice Mail number*

1. Scroll to Messages, **YES**, Options, **YES**, Voice Mail No., **YES**.
2. Enter your Voice Mail number and press **YES**.

**Note!** *The number to your Voice Mail Service may be different if you are calling from a network that is not your home network.*

## Calling Your Voice Mail

When you receive a voice mail, an alert signal sounds and the message **New voicemail** appears in the display (only if you receive the specific voice mail indication). If you want to check your voice mail now, press **YES** to call your **Voice Mail Service**.

If you press **NO**, you can call your **Voice Mail Service** at a later time to listen to your recorded messages.



Voice Mail No. Number:
---------------------------



### *To call your Voice Mail Service*

- Scroll to Messages, **YES**, Call Voicemail, **YES**.

**Tip!** *You can also call your Voice Mail Service by pressing and holding 1 from standby.*

## Changing Number and Signal

### *To change your Voice Mail number*

 
1. Scroll to Messages, **YES**, Options, **YES**, Voice Mail No., **YES**.
2. Press and hold **C** to delete the existing number.
3. Enter your new Voice Mail number and press **YES**.

### *To change the message alert signal*

1. Scroll to Messages, **YES**, Options, **YES**, Message Alert, **YES**.
2. Select the signal you want.

**Tip!** *If you subscribe to the Two Line Service, you may have different Voice Mail numbers for your two lines. You may also set different options for the two lines. For example, you can set all incoming calls on Line 1 to be diverted to your Voice Mail and let all incoming calls on Line 2 be connected.*

Further information about your **Voice Mail Service** can be found in the operating instructions supplied by your network operator.



# Personalizing Your Phone

## Silent

You can choose to set your phone completely silent so that all signals except the alarm and timer signals are turned off.

*To set the phone silent*

1. From standby, press and hold **C**.
2. Select **Turn on Silent**.

An icon appears in standby.

To cancel, repeat step 1 and press **YES** at **Turn off Silent**.

## Ring Signal Volume

You can set the volume in six steps. The first step means that two clicks are heard when you receive a call. You can also turn the ring signal off (0). An icon then appears in standby.

*To set the ring signal volume*

1. Scroll to **Settings, YES, Sounds & Alerts, YES, Ring Volume, YES**.

The level of the ring volume appears in the display.

2. Use  $\uparrow$  to increase or decrease the volume.

The phone rings once with the actual setting as you increase the volume.

3. Press **YES** to save the setting.

**Tip!** Use the volume key on the side of the phone to change the volume.

## Increasing Ring

 
 
You can choose a ring signal that rises in steps from the softest volume to the loudest, **Increasing Ring**.

*To set the ring signal to Increasing Ring*

1. Scroll to **Settings, YES, Sounds & Alerts, YES, Increasing Ring, YES**.
2. Select **On**.

The **Increasing Ring** must be **Off** for the ring signal volume to apply.


**Note!** If the phone is set to silent, the increasing ring signal is not heard.



## Ring Signal Type

You can choose a ring signal from a list of different sounds and melodies. You can also compose up to four melodies of your own by entering notes with the keypad. See “Composing and Editing Your Own Ring Signals” on page 45.

*To choose one of the existing ring signals*

1. Scroll to **Settings, YES, Sounds & Alerts, YES, Ring Signals, YES, Voice Calls, YES.**
2. With , select the ring signal type that you want and press **YES**. When scrolling through the list, the melody currently stored in the highlighted position is played.

**Tip!** *If you do not wish to disturb other people, use the volume key on the side of the phone to scroll silently.*

### Different Ring Signals for Line 1 and Line 2

If you subscribe to the Two Line Service, you can set different ring signals for the two lines. **Line 1** and **Line 2** are displayed instead of **Voice**.

### Different Ring Signals for Voice, Data and Fax Calls

Provided your SIM subscription supports Fax and Data calls, you can set different ring signals for voice, fax and data calls respectively.

 
### Specific Ring Signals for Personal Calls



If your subscription includes the Calling Line Identification (CLI) service, you can assign a personal ring signal to up to ten callers. You can, for example, have one ring signal for your friend and another one for your colleague.

If the last seven digits of a caller's number correspond to a number you have specified, then that caller's ring signal is used.

You can include **question marks (?)** in a phone number. For example, 012345??? means that calls from phone numbers between 012345000 and 012345999 will have the same personal ring signal. You get a question mark by pressing and holding **#**.

*To specify a caller's number and the accompanying ring signal*

  1. Scroll to **Settings, YES, Sounds & Alerts, YES, Ring Signals, YES, Personal Rings, YES, Add new?, YES.**
2. Enter the caller's number and press **YES**.  
You can also recall it from the Phone Book by pressing .
3. Select the ring signal type you want and press **YES**.



### To delete a caller's number

1. Scroll to **Settings, YES, Sounds & Alerts, YES, Ring Signals, YES, Personal Rings, YES.**
2. Scroll to the number you wish to delete and press **YES.**
3. Select **Delete** and press **YES.**

## Composing and Editing Your Own Ring Signals

You can compose four different ring signals.

### To compose a ring signal

1. Scroll to **Settings, YES, Sounds & Alerts, YES, My Melodies, YES.**
2. Select **My Melody 1, My Melody 2, My Melody 3 or My Melody 4.**
3. Press **C** to clear the display.
4. The keypad now works as a keyboard (see figure in margin above).

Use the keypad to enter notes:

- Press and hold a key to enter a long note.
- Press **0** to raise the note one octave.
- Press **#** once to raise the note one semitone.
- Press **#** twice to lower the note one semitone.

5. To listen to your melody, press **YES.**
6. Press **YES** again to save it or press **NO** to continue editing.

### To edit a ring signal

1. Scroll to **Settings, YES, Sounds & Alerts, YES, My Melodies, YES.**
2. Scroll to either **My Melody 1, My Melody 2, My Melody 3 or My Melody 4** and press **YES.**
3. Select **Edit.**

The notes are displayed and you can edit the melody notes with the keys.

Press **YES** to play it.


**Note!** You can also compose your own and download existing ring melodies from the *Ericsson Mobile Internet*:

<http://mobileinternet.ericsson.com>

## Sending and Receiving Ring Melodies

You can use the built-in modem in your phone to send your ring melodies to and another similar phone or a handheld PC/PDA. You can receive melodies from another similar phone, a handheld PC/PDA or a PC.

In order to send ring melodies, your phone uses a standard called 'IrDA-Ultra' and to receive, it can use both 'IrDA-Ultra' and 'Standard IR'.

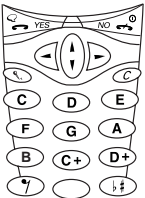


**Note!** It is only possible to *send* a melody to another similar phone or a handheld PC/PDA, and you can *receive* melodies from another similar phone and certain PCs and handheld PCs/PDAs. Also, the minimum distance between your phone and another phone, a PC or a handheld PC/PDA can vary. If you do not know whether your PC or handheld PC/PDA supports the transfer of calendar appointments, or how far away you can place the phone from it, please consult the User's Guide of your PC or handheld PC/PDA or contact the local retailer.

#### To send a melody

1. Scroll to **Settings, YES, Sounds & Alerts, YES, My Melodies, YES.**
2. Scroll to the melody that you want to send. Press **YES.**
3. Position the infrared eye next to the infrared eye on the phone or handheld PC/PDA to which you want to send the melody. Be sure to remain connected during the whole transfer.
4. Select **Beam** and press **YES.**

When the transmission has succeeded, the display shows **Melody beamed.**

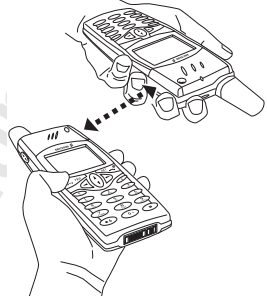

#### To receive a melody

1. Activate the phone's infrared eye by scrolling to **Extras, YES, Infrared Port, YES, 10 minutes, YES.** Also, make sure that the infrared eye on the sender's mobile phone is facing the infrared eye on your phone.
2. When your phone has received the melody, you hear a short tone and see the text **New melody received.**
3. If you want to hear the melody before you store it, press **YES** to answer the question **Play?** Otherwise press **NO.**
4. Press **YES** when you see the text **Save melody?**
5. Select in which position in the melody list you want to store the new melody. The old melody stored in that position will be erased. When scrolling through the list, the melody currently stored in the highlighted position is played.
6. Press **YES** to store the melody.

**Note!** You cannot select 'Infrared Port' from the Extras menu if you are using the WAP browser, or if you use a cable for the communication between your phone and the computer.

My Melodies	
1	My Melody 1
2	My Melody 2
3	My Melody 3
4	My Melody 4

## Vibrating Alert

You can choose to be notified of an incoming call by the buzzing of the **Vibrating Alert**. You can set the phone's **Vibrating Alert** to one of the following:

- **On** (all the time)
- **On If Silent** (on when the ring volume is turned off or when you have set the phone to silent)
- **Off** (all the time)

**Note!** *When your phone is placed in a desktop charger or a handsfree car kit, the Vibrating Alert is turned off automatically.*

*To set the Vibrating Alert*

1. Scroll to **Settings, YES, Sounds & Alerts, YES, Vibrating Alert, YES.**
2. Select the setting you want. Press **YES.**

## Message Signal

You can choose whether to hear clicks, tones or nothing (silent) when you receive a voice or text message (SMS).

*To set the message signal*

1. Scroll to **Settings, YES, Sounds & Alerts, YES, Message Alert, YES.**
2. Select the signal you want. Press **YES.**

You can also find the **Message Alert** in **Options** in the **Messages** menu.

## Alarm Signal

*To change the alarm signal for the alarm clock*

1. Scroll to **Settings, YES, Sounds & Alerts, YES, Alarm Signal, YES.**
2. Select the signal you want. Press **YES.**

## Key Sound

 
 
You can choose whether to hear clicks, tones or nothing (silent) when you press the keys.

*To set the key sound*

1. Scroll to **Settings, YES, Sounds & Alerts, YES, Key Sound, YES.**
2. Select the key sound you want. Press **YES.**

## Minute Minder

If you turn on the minute minder, you hear a beep once every minute during a call.





*To turn the minute minder on or off*

1. Scroll to Call Info, YES, Call Timers, YES, Minute Minder, YES.
2. Select On or Off. Press YES.

## Turn Off Tones

If you make a note of a number during a call, you use the display as a notepad, see “The Notepad” on page 19. The person you are talking to will hear the tone signals as you press the keys. If you wish to, you may turn the tone signals off.

 
**Note!** *You can only turn the tones on or off during a call.*

*To turn the tone signals off during a call*

1. Scroll to Ongoing Call, YES.
2. Select Turn off Tones. Press YES.

*To turn the tone signals on during a call*

1. Scroll to Ongoing Call, YES.
2. Select Turn on Tones. Press YES.




## Display Light

You can set the display light to automatic, off or on. In automatic mode, the display light is turned off automatically a few seconds after you have pressed the last key. It comes on again when you press a key or when you receive a call or message.

*To set the display light*

 1. Scroll to Settings, YES, Display, YES, Light, YES.
2. Select the display light setting you want. Press YES.



## Display Language and Input Method

Most modern SIM cards automatically set the display language to the language of the country where you bought your SIM card, **Automatic**. If this is not the case, the preset language is English.

You can also select which input methods for text you can choose from when using the phone book and when writing text messages.

*To change the display language*

1. Scroll to Settings, YES, Language, YES, Menus, YES.
2. Select the language you want. Press YES.

**Tip!** *You can always choose English by pressing <Left>, 0000, >Right> in standby. You can always choose Automatic by pressing <Left>, 8888, >Right> in standby.*





*To select input methods to choose from*

1. Scroll to **Settings**, **YES**, **Language**, **YES**, **Input**, **YES**.
2. Use \* to select or deselect the input methods you want to choose from when using the phone book and when writing text messages.

The input method called **WAP Address** is used for entering addresses to WAP pages. Besides the ordinary characters found in the input method **abc...**, the ~ sign is added to the number 1 key. Also, the signs **. \_ :** are moved to the left in the row. See “Entering Letters” on page 31.

When you enter or edit a phone book entry or compose a message, you can alter between these input methods by pressing and holding **#**.

## Greeting Text

When you turn on your phone, **ERICSSON** appears in the display. Instead of this, you can write your own greeting.

*To write a new greeting*

1. Scroll to **Settings**, **YES**, **Display**, **YES**, **User Greeting**, **YES**.
2. Select **Custom**. Press **YES**.
3. Write your new greeting, using the number keys. For information on how to enter letters, see “Entering Letters” on page 31.

You may also edit your existing greeting.

4. Press **YES** to confirm your setting.

*To set the standard greeting*

1. Scroll to **Settings**, **YES**, **Display**, **YES**, **User Greeting**, **YES**.
2. Select **Standard**. Press **YES**.

*To turn the greeting off*

1. Scroll to **Settings**, **YES**, **Display**, **YES**, **User Greeting**, **YES**.
2. Select **Off**. Press **YES**.

 
## Phone Number Display

**My Numbers** allows you to check your phone number(s). If your phone number cannot be retrieved from your SIM card, you can enter it yourself.

*To enter your phone number*

1. Scroll to **Settings**, **YES**, **Display**, **YES**, **My Numbers**, **YES**, **Voice**, **YES**.
2. Enter the number and then press **YES**.

**Tip!** *You can also enter your fax and/or data number and your different numbers for Line 1 and Line 2, if these are supported by your subscription.*



## Time

The time is always displayed when the phone is in standby mode.

### *To set the time format*

1. Scroll to **Settings**, **YES**, **Time and Date**, **YES**, **Time Format**, **YES**.
2. Select the 24-hour or 12-hour (am/pm) clock. Press **YES**.

### *To set the clock*

1. Scroll to **Settings**, **YES**, **Time and Date**, **YES**, **Set Time**, **YES**.
2. Enter the time in hours and minutes, and press **YES**.  
Move from number to number by pressing  $\leftarrow$  or  $\rightarrow$ .  
If you select the 12-hour clock, you can alternate between am and pm by pressing **#**.

## Automatic Time Zone

With the **Automatic Time Zone** function, you will be asked whether to update the clock when you enter a new time zone. You can choose to turn the function off, if you like.

### *To turn the Automatic Time Zone off*

1. Scroll to **Settings**, **YES**, **Time and Date**, **YES**, **Auto Time Zone**, **YES**.
2. Select **Off**. Press **YES**.

**Note!** *This service depends on the network.*

## Date

When the phone is in standby mode, you can slide the volume key upwards or downwards to see today's date in the **Status** menu.

### *To set the date format*

 
 
 
 
1. Scroll to **Settings**, **YES**, **Time and Date**, **YES**, **Date Format**, **YES**.
2. Select the date format you want. Press **YES**.

### *To set the date*

1. Scroll to **Settings**, **YES**, **Time and Date**, **YES**, **Set Date**, **YES**.
2. Enter the year (two digits), month and day and then press **YES**.  
If you have chosen another date format you must enter the date differently.

## Master Reset

You can reset the phone's settings to the way they were when you bought your phone.



Master Reset  
Phone lock code:

*To reset the phone*

1. Scroll to **Settings**, **YES**, **Master Reset**, **YES**.
2. Enter the phone lock code (0000) and press **YES**.

The phone lock code may be another one, in case you have changed it.

Not for Commercial Use  
Ericsson Mobile Communications AB

# Sending and Receiving Text Messages (SMS)

The Short Message Service (SMS) allows you to send and receive text messages consisting of up to 160 characters.

A useful feature in your phone is that you can send text messages to a group which you have defined in your phone book. See “Groups” on page 37. Instead of calling or sending a text message to the members of that group one at a time, you can simply send a single group SMS.

If your SIM card does not contain the phone number to your network service centre, you must specify the number yourself. Otherwise you cannot reply to received messages or send your own messages. See “Enable the Phone to Send SMS” below.

**Note!** *The Short Message Service may not be available on all networks. Some network operators may only allow SMS to be sent within their own network.*

## Enable the Phone to Send SMS

If you want to send or reply to a message, you need to make sure that your network operator’s Service centre number is set. Most modern SIM cards already contain this information at the time of purchase. You can obtain the service centre number from your network operator.

 
*To activate a service centre number found in the list*

1. Scroll to Messages, YES, Options, YES, Service Centres, YES.
2. Scroll to the number you want and press YES.
3. Select Activate.

If no number is found in the list, you have to set the number yourself.

*To enter the phone number to your service centre*

1. Scroll to Messages, YES, Options, YES, Service Centres, YES, Add new?, YES.
2. Enter the number, including the international (+) sign and country code and press YES.



## Composing a Text Message

For more information on how to enter text and the letters, see “Entering Letters” on page 31.


### Example:

- To enter an ‘A’, press **2** once.
- To enter a ‘B’, press **2** twice quickly.
- To enter lower-case letters, enter the letter, for example an ‘A’ and then press \*. An ‘a’ appears. Lower-case letters now appear until you press \* again.
- To enter numbers, press and hold the numeric keys.
- To delete letters, press the **C** key.

You may also use the volume key as a shortcut to certain letters:

- To enter a ‘B’, slide the volume key upwards and press **2**.
- To enter a ‘C’, slide the volume key downwards and press **2**.

## Sending a New Text Message

1. Scroll to **Messages**, **YES**, **Send New**, **YES**.
2. Enter your message and press **YES**.
3. Enter the recipient’s phone number or recall it from the phone book by pressing .
4. Press **YES** to send the message.
5. **Sending message** appears in the display followed by **Message has been sent**.

**Note!** *If you have turned on any of the “Set On Send” options (Message Type, Validity Period, Reply Request), you need to make these choices before entering the phone number. See “Customizing Your Text Messages” on page 54.*

### Storing the Message for Later Use

 
 
If you do not want to send the message now, you can save it in the phone memory and send it later:

- Press **NO** when you are asked to enter a phone number. The message can now be recalled from the **Unsent** list in the **Messages** menu.

#### *To send the message later*

1. Scroll to **Messages**, **YES**, **Unsent**, **YES**
2. Select the message you want to send.  
The message appears in the display.
3. Press **YES**.
4. Select **Send**.

If you wish, you may now edit your message.



5. Press **YES** and proceed from step 3 as described in “Sending a New Text Message” above.

**Note!** *The same procedure is used with all types of messages, for example e-mail, fax messages etc. Check with your network operator to find out which message types you can use.*

## Sending Text Messages to a Group

With your phone you can send text messages to a pre-defined group. You need to specify a group and save it in your phone book before you can send text messages to a group. For more information on how to create groups, see “Groups” on page 37.

*To send a text message to a group*

1. Scroll to **Messages**, **YES**, **Send New**, **YES**.
2. Enter your message and press **YES**.
3. Press  $\leftarrow$  to enter the **Phone Book** menu.
4. Scroll to **Groups** and press **YES**.
5. Select the group you want and press **YES** to send the message.

**Note!** *When you send text messages to a group, you will be charged for each member included in that group.*

## Customizing Your Text Messages

Before you send your message, you can set the type of message, the validity period and if you want the recipient of your message to reply to your message.

### Message Type

 
 
Your phone can send different types of messages. Your network operator’s service centre may offer the facility of converting a text message into a format (e-mail, fax, etc.) that suits the equipment that is going to receive the message. Please contact your network operator to find out which message types you can use and how.

 
You can set a standard message type that you want to use or you can turn on a **Set on Send** option, which means that you are asked to select which message type you want to send, before sending it.

*To set a standard message type*

1. Scroll to **Messages**, **YES**, **Options**, **YES**, **Message Type**, **YES**, **Set Default**, **YES**.
2. Select the message type you want.

The selected message type is now standard until you change it.





#### *To turn the Set on Send function on or off*

1. Scroll to Messages, YES, Options, YES, Message Type, YES, Set on Send, YES.
2. Select On or Off.

#### **Validity Period**

 
If your message cannot be delivered because the recipient has turned off the phone, your service centre can save the message to send it later. If the service centre has not been able to reach the recipient within a certain time, the message will be deleted.

You can set a validity period as your standard or you can turn on a **Set on Send** option, which means that you are asked to set the validity period before sending the message.

#### *To set a validity period as your standard*

1. Scroll to Messages, YES, Options, YES, Validity Period, YES, Set Default, YES.
2. Select the validity period you want.

The selected validity period is now your standard until you change it.



#### *To turn the Set on Send function on or off*

1. Scroll to Messages, YES, Options YES, Validity Period, YES, Set on Send, YES.
2. Select On or Off.

 


#### **Reply to Messages**

If you want the recipient of your message to reply, you can turn on the **Request Reply** option. When this function is on, you are asked to choose if you want the recipient to reply or not before your message is sent. If you want the recipient to reply, select On and press YES.

#### *To turn the Request Reply function on or off*


1. Scroll to Messages, YES, Options, YES, Reply Request, YES.
2. Select On or Off.



**Note!** *Not all network operators support these functions.*

### **Templates**

 If you have one or more standard messages that you use often, you can save these as templates to be reused whenever you want. You can save up to 5 templates which can consist of 30 characters each. Your templates are saved in the phone memory.



### *To save a template*

1. Scroll to **Messages**, **YES**, **Templates**, **YES**, **Add new?**, **YES**.
2. Enter the message and press **YES**.  
For more information on how to enter text, See “Composing a Text Message” on page 53.
3. If you want to send the message now, press **YES** when **Send message now?** appears in the display, and proceed as described in “Sending a New Text Message” on page 53. The message is saved in the list of templates.
4. If you do not want to send the message now, press **NO**. The message is saved as a template for later use.

### *To send a template*

1. Scroll to **Messages**, **YES**, **Templates**, **YES**.
2. Select the template you want to send.  
You may edit the message before sending it. See “Sending a New Text Message” on page 53.
3. When you have completed the message, press **YES**.
4. Enter the recipient’s phone number.
5. Press **YES** to send the template.

### *To delete a template*

1. Scroll to **Messages**, **YES**, **Templates**, **YES**.
2. Select the message you want to delete and then press **C**.  
The message **Delete?** appears in the display.
3. Press **YES** to delete the message.

## Receiving a Message

When you receive a message, you hear a sound, the indicator light on the top of the phone rapidly flashes green and the message **New message Read now?** appears in the display.

### *To read the message now*

1. Press **YES** when you see the question **New message Read now?**.  
The display shows when the message was received and from what number it was sent, if your network supports the Calling Line Identification service (CLI). If you have saved the number together with a name in the phone book, the name is shown instead.
2. Scroll through the message using the arrow keys.  $\triangleright$  takes you forward and  $\triangleleft$  takes you backwards through the message. An arrow at the bottom right corner of the display indicates that there is more text in the message.
3. At the end of the message, when the arrow in the display disappears, press **YES**. A new menu with different options appears:



- **Delete**
- **Reply**
- **Forward**
- **Save**
- **Call**
- **Read Next**

The options are described on the following pages.

**Note!** *If the sender of the message wants you to reply, the message 'Reply requested Reply?' appears in the display when you press YES, if this function is supported by your network operator. If you do not want to reply, press NO.*

*To read the message later*

- Press **NO** when you see the question **New message Read now?**. The message is now saved in the phone memory and an envelope icon appears at the top of the display. The envelope icon disappears as soon as you have read the message. If you want to read the message later you can retrieve it from the **Inbox** menu (see below).

### **Calling a Phone Number Found in a Message**

1. Select the phone number, e.g. Call 0990237237.
2. Press **YES** when the number is highlighted.

### **Calling the Sender of the Message**

 
1. When you have read the message, press **YES**.
2. Select **Call** in the option list.

If you have saved the number together with a name in the phone book, the name of the person who sent the message appears together with **Call**.

### **Replying to a Message**

1. When you have read the message, press **YES**.
2. Select **Reply** in the option list.  
Your display now looks like the picture in the margin.
3. Select what message you want to send as a reply (send a new message or include this message when sending a message in return).
4. Enter your message and press **YES** to send the message.

**Note!** *If the sender of the message wants you to reply, the message 'Reply requested Reply?' appears in the display, if this function is supported by your network operator, when you press YES at the end of the message. Press YES again to reply. If you do not want to reply, press NO.*



### Forwarding a Message

1. When you have read the message, press **YES**.
2. Select **Forward** in the option list.  
You may edit your message before sending it.
3. When you have completed your message, press **YES**.
4. Enter the recipient's phone number.
5. Press **YES** to send the message.

### Deleting a Message

1. When you have read the message, press **YES**.
2. Select **Delete** in the option list.

**Tip!** *You can also delete a message by pressing **C** while reading it. The message **Delete?** appears in the display. Press **YES** to delete the message.*

You can delete a message from the list of messages in the **Inbox** menu without having to open it.

*To delete a message from the list in the Inbox menu*

1. Scroll to **Messages**, **YES**, **Inbox**, **YES**.
2. Select the message you want to delete and press **C**.  
The message **Delete?** appears in the display.
3. Press **YES** to delete the message.

### Saving Incoming Messages

If you do not want to read an incoming message at once, it is automatically saved in the phone memory. This allows you to read it later. If there are any unread messages in this memory, the envelope icon appears at the top of the standby display.

The phone memory can hold up to 15 messages. When all memory positions are full, the oldest read message is overwritten when a new message is received.

If the phone memory becomes full of unread messages, new messages are automatically saved on the SIM card.

Messages remain in the phone memory until you delete them, until you insert a different SIM card or until the phone needs the memory space to save new messages.

### The SIM Card Memory

You can save important messages on your SIM card. Messages that are saved on the SIM card remain there until you delete them, i.e. they will not be

overwritten if you receive any new messages. The maximum number of messages that you can save depends on your SIM card.



*To save a received message in the SIM card memory*

1. When you have read the message, press **YES**.
2. Select **Save** in the option list.

The message automatically moves from the phone memory to the SIM card memory. The display shows the position of the message and the number of saved messages, for example the third message of fifteen that can be saved on the SIM card.

**Note!** *If you save your messages on the SIM card, you can reach them if you should use your SIM card with another phone.*

### Reading a Saved Message

1. Scroll to **Messages, YES, Inbox, YES**.
  -  means an unread message.
  -  means that the message is saved on the SIM card.
2. Select the message you want to read.
3. Read the message as described in "Receiving a Message" on page 56.
4. If you want to read the next message, press **YES** at the end of the message.
5. Select **Read Next** in the option list.

### Area Information

The ordinary Short Message Service is a personal service that carries your private messages. The Area Information is another type of text message which is sent to all subscribers in a certain network area.

The information may be a local road report or a phone number to a local taxi.

**Note!** *This feature may not be available on all networks.*

 
 
*To turn Area Information on or off*

1. Scroll to **Messages, YES, Options, YES, Area Info, YES, Reception**.
2. Select **On** or **Off**.

### Area Information Message Types

Each type of Area Information message is identified by a three-digit code. The list below shows examples of the Area information codes that exist today.

Code:	AI Message Type:
000	Index
010	Newsflashes



Code:	AI Message Type:
020	Hospitals
022	Doctors
024	Pharmacies
030	Long-distance road reports
032	Local road reports
034	Taxis
040	Weather
050	District cell information
052	Network information
054	Operator services
056	Directory enquiries (national)
057	Directory enquiries (international)
058	Customer care (national)
059	Customer care (international)

**Note!** *These codes are operator dependent. For information about the area information services that you can use, please refer to the information supplied by your network operator.*

### Area Information Message List

You can decide which types of area information messages you wish to receive. The number of Area Info codes that can be saved depends on your SIM card.

#### *To insert an Area Information code*

1. Scroll to **Messages**, **YES**, **Options**, **YES**, **Area Info**, **YES**, **Edit List**, **YES**, **Add new?**, **YES**.
2. Enter the new code and press **YES**.

#### *To delete the code*

1. Scroll to **Messages**, **YES**, **Options**, **YES**, **Area Info**, **YES**, **Edit List**, **YES**.
2. Scroll to the code you want to delete and press **C**.  
The message **Erase?** appears in the display.
3. Press **YES** to delete the code.

### Receiving an Area Message

When you receive an Area Information message, the message automatically appears in the display. You read the message in the same way as you read an ordinary text message, see “Receiving a Message” on page 56. When you have read the message, press **YES**. The message is deleted.



 
## Cell Information

The **Cell information channel** (see “Area Information Message List” on page 60) is used by network operators for sending messages to their subscribers within a certain network area. For example, the operator may inform you that you are within your home network area and that you can now make calls at a lower rate.

**Note!** *This feature may not be supported by your network operator.*

*To turn Cell Information on or off*

1. Scroll to Messages, YES, Options, YES, Cell Information, YES,
2. Select On or Off.



# Communicating via the Built-in Modem

A very convenient feature of your mobile phone is the built-in modem (which equates to a PC Card modem). With the modem, you can connect your mobile phone to another similar mobile phone, a handheld PC/PDA or a PC. By doing this you can send and receive business cards, calendar appointments and ring melodies.

In order to use the modem with a handheld PC or PDA (EPOC, Windows CE or Palm OS), please go to <http://mobileinternet.ericsson.com> for the latest information and software.

Also, after having installed the modem on a PC or handheld PC/PDA, you can send and receive fax and e-mail messages, browse the Internet and much more. See "Using the Modem with a PC" on page 63.

**Note!** *In order for you to use various communications services, you need the appropriate software, for example a fax program, an e-mail program or an Internet browser. In order to use the modem together with the WAP browser in your mobile phone, you also need a mobile phone subscription that supports this. See "Using the WAP™ Browser" on page 95.*

## Activating and Deactivating the Infrared Modem

You can choose to activate the built-in infrared modem either automatically or manually.

The built-in modem has three settings:

- **On.** The modem will continue searching for other infrared devices until you turn the modem **Off**.
- **Off.** The modem is inactive.
- **10 minutes.** The modem will automatically disconnect itself 10 minutes after the latest connection was ended. This in order to save battery power.

When the infrared modem has been activated, an icon appears in the display.

Your selected setting remains until you select another setting, even if you turn your phone off.

#### *To set the modem to On*

- Scroll to **Extras, YES, Infrared Port, YES, On, YES.**

#### *To set the modem to Off*

- Scroll to **Extras, YES, Infrared Port, YES, Off, YES.**

#### *To set the modem to 10 minutes of activity*

- Scroll to **Extras, YES, Infrared Port, YES, 10 minutes, YES**

**Note!** *The 'Infrared Port' function can also be found in My Shortcuts. See "My Shortcuts" on page 28.*

### Using the Modem with a PC

In order to use the built-in modem together with a PC, you have to install the modem on the PC.

The following requirements has to be fulfilled in order for you to use the built-in modem with a PC:

- IR-equipped computer with Windows® 95/98/NT 4.0, which is configured for infrared communication (unless you are using a cable). The computer also needs a Pentium® processor, 30 MB of free hard drive space and a CD-ROM drive.


#### *To install the built-in modem on the PC*

1. Insert the CD in your CD drive. The CD should start automatically, but if it does not, you can start it manually by choosing **Run** from the **Start** menu, and typing `d:\start.exe` (change the D drive if your CD drive is named differently). You can also find the files necessary for installing the built-in modem on: <http://mobileinternet.ericsson.com>
2. From the main menu, click **Select language** and then click **OK**.
3. Click **Software installation** and then click **Install now!**
4. Follow the Installation Wizard. Place your mobile phone next to the infrared eye on the computer (or connect it to the cable) when the Wizard instructs you to.

**Note!** *Do NOT connect your mobile phone to the computer until the installation program tells you to. This way the installation will run more smoothly.*

### Connecting to the PC Using the Built-in Infrared Eye

1. Place your mobile phone according to the picture below. The infrared eye on the phone should face the infrared eye on the computer. Make sure the phone is switched on and that the built-in infrared eye is activated, see "Activating and Deactivating the Infrared Modem" on page 62.
2. Your PC now establishes contact with your mobile phone.

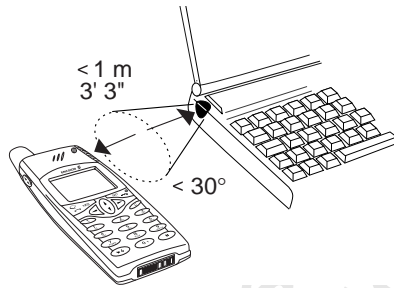


### Connecting to a PC Using a Cable

To establish communication between your computer and your phone, you can also use an RS232 cable.

**Note!** *The RS232 cable is an accessory and is **not** included in the mobile phone kit. If you want to use a cable, be sure to ask for an Ericsson RS232 cable that can be used with your phone.*

*To connect using a cable*

1. Make sure you have installed the modem as described in "To install the built-in modem on the PC" on page 63.
2. Connect the cable according to the picture below. When you connect the cable to your mobile phone, you may have to press hard to attach it properly.

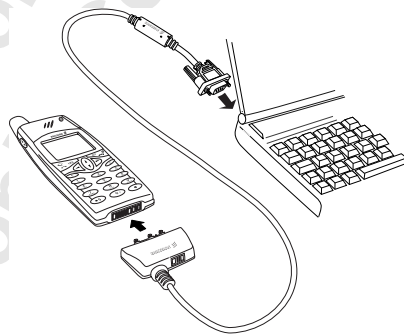

3. Your PC will now establish contact with your phone.

**Note!** *The Ericsson RS232 cable supports the following five signals in the RS232 standard: Tx, Rx, CTS, RTS, GND. If you experience any problem with your connection, please go to Ericsson Mobile Internet on <http://mobileinternet.ericsson.com> for further information and support.*



## Switching Between Infrared Communication and Cable Communication

You can alternate between using infrared communication or an external RS232 cable when communicating with your PC. Every time you want to change between infrared and cable communication, you need to start the Setup Assistant.

### *To switch communication mode*

1. Make sure you have gone through all the steps in “To install the built-in modem on the PC” on page 63.
2. Double-click the file **Troubleshooter for R320.bat**, which you can find on your computer under C:/Program files/Ericsson/Communications Suite.
3. When the Setup Assistant is started, it asks you to select a connection type: **Infrared** or **Cable**. Choose the one you want to change to.
4. The Setup Assistant then helps you make the correct settings (and helps you install any missing components if necessary).

## Solving Connection Problems After the Installation

If you have connection problems between your mobile phone and your computer despite proper installation, you can start the **Setup Assistant**. This is the program that analyzes your computer, and helps you install any missing components.

### *To start the Setup Assistant*

Double-click the file **Troubleshooter for R320.bat**, which you can find on your computer under:

C:/Program files/Ericsson/Communications Suite/Troubleshooter for R320.bat

## Tips on Using the Built-in Modem

To make sure you get the most out of your built-in modem, follow these guidelines:

- You can break infrared communication between your mobile phone and computer for a short while (approximately 15-20 seconds) without interrupting the connection. You can configure your computer to make a warning sound when the mobile phone is removed from its reach. Make sure you place your mobile phone back in position within the time limit in order to remain connected.
- Strong sunlight can interfere with the infrared light. To ensure a stable connection, keep the connecting devices away from sunlight.

## The Content of the CD

Among other things, the CD that comes with your mobile phone contains this User's Guide in .pdf format, various useful information and software.

## Trademark Information

Microsoft, Windows, Windows CE and Windows NT are registered trademarks or trademarks of Microsoft Corporation.

Pentium is a registered trademark or trademark of Intel.

Psion, EPOC, EPOC32, Series 5 and other names of Psion products or products of Psion Group companies referenced herein are trademarks or registered trademarks of Psion plc or the Psion Group.

3Com, Palm, PalmPilot and Palm OS are trademarks or registered trademarks of 3Com Corporation or its subsidiaries.

# Sending and Receiving Fax, Data and E-mail

To be able to use different communications services you need the appropriate software such as a fax program, an e-mail program or an Internet browser. You also need a phone subscription that supports fax and/or data transmission. This is **not** included in the phone kit. For detailed information, please consult the User's Guides or your network operator.

## Sending Fax and Data Calls

All fax and data calls are initiated from the appropriate computer software. To send fax and data calls you need to connect your phone to a computer via an infrared communication link or a cable and then start the appropriate program.

## Receiving Fax and Data Calls

The procedure for receiving fax and data calls depends on your network and subscription. If you have different numbers for voice, fax and data calls, this is referred to as **multi numbering**. This means that you can have up to three numbers in your subscription. If you only have one number for all call types, this is referred to as **single numbering**.

### Receiving Fax and Data Calls – Multi Numbering

If your network and subscription support multi numbering, the display shows what kind of a call you are receiving. There are two possible calls apart from voice calls:

- Fax calls
- Data calls

*To receive a fax or data call*

1. Connect your computer to the phone.
2. Answer the call from within the program (if it is not answered automatically).

**Note!** *You cannot answer an incoming fax or data call by pressing the YES key on the phone, but you can reject the call by pressing NO.*

## Receiving Fax and Data Calls – Single Numbering

If you have a SIM card that does not support separate fax and data numbers, the phone does not recognize what kind of a call you are receiving.

 
### Next Incoming Call Type

If you want to receive a fax or data call you have to set the phone to one of these options in the **Next Incoming** sub-menu. You only see this menu if your phone detects that you do not have separate numbers for data, fax and voice. Once you have set your phone for a specific incoming call, it stays like this until you change it. The normal setting is **Voice**.

**Note!** *Depending on whether a call is ongoing or not, the menus 'Call Info' and 'Ongoing Call' replace each other. See "The Dynamic Call Info/Ongoing Call Menu" on page 28 for more information.*

*To set the next incoming call type*

1. Scroll to **Call Info**, **YES**, **Next Call**, **YES**, **Next Incoming**, **YES**.
2. Select the call type you want (**Voice**, **Data** or **Fax**).
3. Press **YES** to confirm your choice.



## Changing the fax class

If you use fax class 1 and have problems faxing from one mobile phone to another, it is probably due to long delays over the GSM network.

*To change the fax class if you are using Microsoft® fax on Windows 95*

1. Click **Start** and point to **Settings**. A sub-menu appears.
2. Click **Control Panel**.
3. Double-click the **Mail and Fax** icon (it may be called **Mail**).
4. In the dialog box that appears, select **Microsoft fax**. Click **Properties**.
5. Select the **Modem** tab.
6. Select **Ericsson R320**. Click **Properties**.
7. In the dialog box that appears, click **Advanced**.
8. Select the box **Use class 2 if available**.
9. Click **OK**.
10. Restart Microsoft fax for the changes to take effect.

If you want to use other fax programs or operating systems, please consult your User's Guides.

## Sending and Receiving E-mail

You can use the phone's built-in modem and a computer to send or receive e-mail.

### *To send an e-mail*

1. In the Dial-Up Networking service on your computer, choose the Ericsson R320 as the modem you wish to use.
2. Place your mobile phone next to your computer and make sure it is connected properly, i.e. within 1 metre and 30 degrees of the other infrared eye.
3. Start your e-mail program and write a message.
4. Send your e-mail message.

### *Receiving an e-mail*

1. In the Dial-Up Networking service on your computer, choose the Ericsson R320 as the modem you wish to use.
2. Place your mobile phone next to your computer and make sure it is connected properly.
3. Start your e-mail program and open your inbox to read your new e-mail messages.

**Note!** *The steps above are only shown as examples. For detailed information on how to use your e-mail program, fax program and Internet browser as well as how to set up the programs properly, please consult the appropriate User's Guides or your service provider.*

# Business Card Exchange


An electronic business card consists of a name and a phone number and your phone allows you to send and receive the people in your phone book as business cards. You can also create, edit and send your own business card.

The business cards can be sent from your mobile phone to another similar phone and certain handheld PCs/PDAs. The phone can receive business cards from another similar phone, a handheld PC/PDA or a PC.

In order to send business cards, your phone uses a standard called 'IrDA-Ultra' and to receive, it can use both 'IrDA-Ultra' and 'Standard IR'. If you encounter problems, this can be due to the fact that your PC, handheld PC/PDA cannot handle these standards.

**Note!** *If you do not know whether your PC, handheld PC/PDA can handle the transfer of electronic business cards, please consult its User's Guide or contact either the manufacturer or the local retailer of the PC, handheld PC/PDA.*

Before you start sending and receiving with the built-in modem, make sure that the infrared eye on the mobile phone, handheld PC/PDA or PC is no more than a metre away and at an angle of 30 degrees or less from your phone.

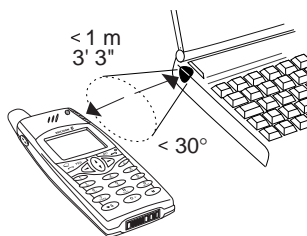

## Sending Business Cards

*To send your own business card*

1. Scroll to **Phone Book, YES, Business Card, YES**.
2. Position the phone's infrared eye next to the infrared eye of the phone, computer or handheld PC/PDA to which you want to send the business card.
3. Select **Beam My Card**.

If you have not created your personal business card yet, you are asked if

you want to create one

Wait until the display shows **Business card beamed**.

#### *To send someone else's business card*

1. Scroll to **Phone Book, YES, Business Card, YES, Find & Beam, YES**.
2. Start a search in your mobile phone's phone book by entering the first letter of the person whose business card you want to send.

If you have chosen to sort the names in your phone book by position, you start a search in the phone book by entering a position number instead of a name. See "To choose a sort order" on page 33.

3. Position your phone's infrared eye next to the infrared eye on the phone to which you want to send the business card.
4. Press **YES**.

Wait until the display shows **Business card beamed**.

### Editing Your Own Business Card


1. Scroll to **Phone Book, YES, Business Card, YES, Edit My Card, YES**.
2. Edit your own phone number, press **YES**, edit your name and press **YES** again.

### Receiving a Business Card

The infrared eye on your phone has to be activated if you want to receive business cards.

1. Activate the infrared eye by scrolling to **Extras, YES, Infrared Port, YES, 10 minutes, YES**. You can also reach this function by placing it in My Shortcuts, see "My Shortcuts" on page 28.
2. Position the infrared eye on your phone next to the infrared eye on the phone, handheld PC/PDA or computer from which you want to receive the business card.
3. When your phone has received the business card, you will hear a short tone and see the incoming business card together with the text **Save received business card?** in the display.
4. Press **YES** to store the new business card in your phone and wait until the display shows **Saved**.

If you see the message **Phonebook memory full** in the display, you are asked if you want to overwrite a position in the phone book.

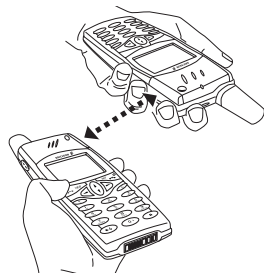

**Note!** *You cannot select 'Infrared Port' from the Extras menu if you are using the WAP browser or if you use a cable for the communication between your phone and the computer.*

### Trademark Information

The IrDA Feature Trademark is owned by the Infrared Data Association and is used under license there from.



# Diverting Incoming Calls

If you want to make certain that your incoming calls are correctly handled when you are unable to answer them, you can use the **Divert Calls** service to divert them to another phone number.

**Note!** *The Divert Calls service may not be available on all networks.*

The **Divert Calls** service lets you divert your voice, fax and data calls respectively - provided your subscription supports fax and data calls.

For voice calls, you may choose between the following divert alternatives:

- **All Voice Calls** - divert all voice calls.
- **When Busy** - divert calls if you are already on the phone
- **No Reply** - divert calls that you do not answer within a specified time limit (operator dependent)
- **Not Reachable** - divert calls if your phone is turned off or if you are unreachable.

**Note!** *These alternatives are only valid for voice calls.*

If you subscribe to the Two Line Service, you may set different **Divert Calls** for your two voice lines, i.e. Line 1 and Line 2. You will then have an additional divert alternative, i.e. **All Line 2 Calls**.


**Tip!** *If you place your phone in a specific Ericsson Desktop Charger, your calls may be diverted automatically. See "Desktop Charger" on page 128.*

 
When you are making a phone call and the phone call is diverted to another number, this is indicated in your display, if supported by your subscription. Similarly, when receiving an incoming phone call which has been diverted from another number, this is indicated in your display, if supported by your subscription.

## Activating Divert Calls


*To turn on the Divert Calls function*

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Divert Calls**, **YES**.
2. Scroll to the divert you want to turn on (**All Voice Calls**, **When Busy**, **No Reply**, **Not Reachable**, **Fax Calls** or **Data Calls**) and press **YES**.
3. Select **Activate**.

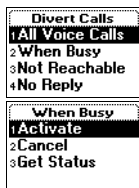



4. A phone number recently used for the divert function or a number recently present in the display will be suggested as a divert number. Enter the phone number, including the area code, to which you want your calls to be diverted and then press **YES**. If you need to delete numbers, press **C**.

**Tip!** *If the phone number is stored in the phone book, you do not need to enter it. Press  and then recall the number.*

When you turn on the **All Voice Calls** divert, an icon is shown in standby.

**Note!** *When the Restricted Calls function is on, some Divert Calls options cannot be activated. See "Security for Your Phone and Subscription" on page 75.*

### Cancelling Divert Calls

*To cancel a certain Divert Calls*

1. Scroll to **Settings, YES, Call Options, YES, Divert Calls, YES**.
2. Scroll to the divert you want to cancel and press **YES**.
3. Select **Cancel**.

The message **Please wait** appears, followed by a message which informs you that the **Divert Calls** has been cancelled.

### Checking the Divert Status

 
*To check the status of a certain Divert Calls*

1. Scroll to **Settings, YES, Call Options, YES, Divert Calls, YES**.
2. Scroll to the divert you want to check and press **YES**.
3. Select **Get Status**.

The message **Please wait** appears, followed by a message which informs you whether the **Divert Calls** is on or not.

*To check the status of all Divert Calls*

- Scroll to **Settings, YES, Call Options, YES, Divert Calls, YES, Check All, YES**.



# Security for Your Phone and Subscription

There are several ways to protect your phone and subscription from unauthorized use. Anything from a SIM card lock to full phone number control.

## The SIM Card Lock

The SIM card lock only protects your subscription and not your phone itself from unauthorized use. If you change SIM cards, the phone still works with the new SIM card.

Most SIM cards are locked at the time of purchase. If the SIM card lock is on, you have to enter the PIN (Personal Identity Number) every time you turn on your phone. If you enter your PIN incorrectly three times in a row, the SIM card is blocked. This is indicated by the message **PIN blocked**. If this happens you need to unblock it to access your subscription.

### *To unblock your SIM card*


1. **PIN blocked** appears.
2. Enter your PUK (or PUK2) which you will find in the information supplied by your network operator.
3. Press **YES**.
4. Enter a new four- to eight-digit PIN (or PIN2).
5. Press **YES**.
6. Re-enter the new PIN (or PIN2) to confirm.
7. Press **YES**.

**Note!** *If you enter the wrong PUK ten times in a row, your card is permanently blocked. If this happens, you should contact your network operator.*

### *To change your PIN code*

1. Scroll to **Settings, YES, Locks, YES, Card Lock, YES, Change PIN, YES**.
2. Enter your old (current) PIN and press **YES**.
3. Enter your new PIN and press **YES**.

The phone asks you to repeat the PIN.

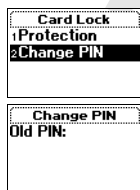

4. Enter your new PIN a second time and press **YES**.

The PIN has now been changed.

**Note!** *If the message 'Codes do not match' appears, this means you entered the new PIN incorrectly. If the message 'Wrong PIN' appears, followed by 'Old PIN:', you entered your old PIN incorrectly.*

*To change your PIN 2*

1. Scroll to **Settings, YES, Locks, YES, Card Lock, YES, Change PIN2, YES**.
2. Follow the same procedure as described in 'To change your PIN code' above.

*To turn off the SIM card lock*

1. Scroll to **Settings, YES, Locks, YES, Card Lock, YES, Protection, YES, Off, YES**.
2. Enter your PIN and press **YES**.

The message **Unlocked** confirms that the card lock has now been turned off.

**Note!** *This only works if your SIM card allows you to cancel the card lock.*

*To turn on the SIM card lock*

1. Scroll to **Settings, YES, Locks, YES, Card Lock, YES, Protection, YES, On, YES**.
2. Enter your PIN and press **YES**.

The message **Locked** confirms that the card lock is now on.

## The Phone Lock

The phone lock protects the phone against unauthorized use if it is stolen and the SIM card is exchanged. It is not on when you buy the phone. You can change the phone lock code (**0000**) to any four- to eight-digit personal code.

 
The phone lock can be **On, Automatic** or **Off**.

### Phone Lock On


If the phone lock is **On**, the message **Phone locked Phone lock code:** appears each time you turn on the phone. You have to enter your code followed by **YES** to use your phone.

### Automatic

If the phone lock is set to **Automatic**, you do not need to enter your phone lock code until a different SIM card is inserted in the phone. After the phone lock code has been entered correctly, the phone can be used with the new SIM card. You are not asked to enter the phone lock code again until the original SIM card or a different SIM card is inserted.



Cancel  
PIN:

 

Activate  
PIN:

### *Changing the phone lock code*

1. Scroll to **Settings**, **YES**, **Locks**, **YES**, **Phone Lock**, **YES**, **Change Code**, **YES**.
2. Follow the steps described in “To change your PIN code” on page 75.


**Note!** *It is important that you remember your new code. If you should forget it, you have to hand in your phone to your local Ericsson retailer.*

### *To set the phone lock to on, automatic or off*

1. Scroll to **Settings**, **YES**, **Locks**, **YES**, **Phone Lock**, **YES**, **Protection**, **YES**.
2. Select **On**, **Automatic** or **Off**. The current selected setting is not available in the list.
3. Enter the phone lock code and press **YES**.  
The new lock status is shown.

## The Keypad Lock

The keypad lock feature helps you to avoid accidental dialling, which can happen if you keep your phone in your pocket. You can choose between manual and automatic keylock.

An icon in the shape of a key  in the display informs you that the keypad is locked.

**Note!** *Calls to the international emergency number 112 can be made when the keypad is locked. If the phone alarm rings, you can turn it off by pressing any key.*

The keypad remains locked until you:

- answer an incoming call,
- replace the battery,
- unlock the keypad.

### The Manual Keylock

#### *To lock the keypad manually*

- Press **C** until the **Standby** menu appears and then press **\***, or scroll to **Keylock on** and press **YES**.

#### *To unlock the keypad*

- Press **C** and then press **\*** or **YES** to answer the question **Turn off Keylock?**

### The Automatic Keylock

Automatic keylock means that if no keys are pressed in 25 seconds, the keypad will be locked.

To set the automatic keylock

1. Scroll to **Settings**, **YES**, **Locks**, **YES**, **Auto Keylock**, **YES**.
2. Select **On** and press **YES**.

**Note!** *The keypad lock is always disabled if the phone is connected to vehicle handsfree equipment.*

## Restrict Calls

The **Restrict Calls** service allows you to restrict certain types of calls to be made and received.

**Note!** *This service may not be available on all networks or may require a separate subscription.*

The following calls can be restricted:

- all outgoing calls, **All Outgoing**
- all outgoing international calls, **Outgoing Intl**
- all outgoing international calls except to your home country, **Outg Intl Roam**
- all incoming calls, **All Incoming**
- all incoming calls when you are abroad (when roaming), **Inc when Roam**

To make sure that a call restriction is not changed by someone else, you need a password, which comes with your subscription, to turn on or cancel a call restriction. You can change the password as often as you like.

To turn a call restriction on or off

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Restrict Calls**, **YES**.
2. Scroll to the option you want and press **YES**.
3. Select **Activate** or **Cancel**.
4. Enter your password and press **YES**.

 
 
The message **Please wait** appears, followed by a message which informs you whether the call restriction is on or not.

 
**Note!** *If you divert incoming calls you cannot activate some Restrict Calls options. Likewise, if you restrict calls, you cannot activate some Divert Calls options. See "Diverting Incoming Calls" on page 73.*

To cancel all restricted calls

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Restrict Calls**, **YES**, **Cancel All**, **YES**.
2. Enter your password and press **YES**.

The message **Please wait** appears, followed by a message confirming that all call restrictions have been cancelled.





#### *To check the status of a call restriction*

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Restrict Calls**, **YES**.
2. Scroll to the option you want and press **YES**.
3. Select **Get Status**.

The message **Please wait** appears, followed by a message which informs you whether the call restriction is on or not.

#### *To change the password*

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Restrict Calls**, **YES**, **Change Passwd**, **YES**.
2. Enter the old (current) password and press **YES**.
3. Enter the new password and press **YES**.
4. Enter the new password a second time and press **YES**.

The message **Please wait** appears, followed by a message confirming that the password has been changed.



## Fixed Dialling

**Fixed Dialling** is a way of restricting outgoing calls. It requires a SIM card that allows fixed numbers to be saved. The fixed numbers are normally protected by your PIN2. How many fixed numbers you can save depends on your SIM card.

The **Fixed Dialling** function allows calls to be made only to certain numbers saved on the SIM card. If an attempt is made to call other numbers, the message **Number not permitted** appears in the display.

It is possible to save partial numbers, for example an area code, or an area code followed by the first digits common to several numbers. Storing 0123456 allows calls to be made to all numbers starting with 0123456.

 
Numbers beginning with the international (+) sign and country code can also be saved, allowing you to make calls abroad.

 
Numbers which include question marks can be saved. A question mark should be read as a wild card, i.e. it can represent any number (0-9). To enter a question mark press and hold **#**.

**Note!** *The Fixed Dialling service does not prohibit calls to the international emergency number 112.*

#### *To turn the Fixed Dialling service on or off*

1. Scroll to **Phone Book**, **YES**, **Options**, **YES**, **Fixed Dialling**, **YES**.
2. Enter your PIN2 and press **YES**.
3. Select **On** or **Off**.





#### *To save fixed numbers*

1. Scroll to **Phone Book**, **YES**, **Fixed Numbers**, **YES**, **Add new?**, **YES**.
2. Enter your PIN2 and press **YES**.
3. Enter the fixed number and press **YES**.
4. Enter the name you want to associate with the number and press **YES**.

#### *To edit a saved fixed number*

1. Scroll to **Phone Book**, **YES**, **Fixed Numbers**, **YES**, **Edit**, **YES**.
2. Scroll to the fixed number that you want to edit and press **YES**.
3. Select **Edit**.
4. Enter your PIN2 and press **YES**.
5. Edit the fixed number and press **YES**.
6. Edit the name and press **YES**.
7. Enter the position number and press **YES**.

#### *To delete a fixed number*

1. Scroll to **Phone Book**, **YES**, **Fixed Numbers**, **YES**.
2. Scroll to the fixed number that you want to delete and press **YES**.
3. Select **Delete**.
4. Enter your PIN2 and press **YES**.

The fixed number is deleted.

### **Closed User Groups**

The **Closed User Group** (CUG) function is another way of lowering call costs. It depends entirely on your operator and subscription. Not all networks support this function.

Your network operator can place certain numbers in groups. On some networks it is cheaper to make calls within a call group. You can have a maximum of 10 groups.

 
#### *To add a Closed User Group*

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Closed Groups**, **YES**, **Edit List**, **YES**.
2. Scroll to **Add new?** and press **YES**.
3. Enter the name of the user group and press **YES**.
4. Enter the index number of the group and press **YES**.

**Note!** *The index numbers are provided by your network operator.*

#### *To activate a Closed User Group*

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Closed Groups**, **YES**, **Edit List**, **YES**.
2. Scroll to the group you want and press **YES**.
3. Select **Activate**.





Calls can only be made within the selected user group.

#### *To call outside Closed User Groups*

You can decide whether outgoing calls to a non **Closed User Group** number are allowed.

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Closed Groups**, **YES**, **Open Calls**, **YES**.
2. Select **On**.

#### *To edit a name in the Closed User Group List*

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Closed Groups**, **YES**, **Edit List**, **YES**.
2. Scroll to the group that you want to edit and press **YES**.
3. Select **Edit**.
4. Enter a new name and press **YES**.

#### *To delete a group from the Closed User Group List*

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Closed Groups**, **YES**, **Edit List**, **YES**.
2. Scroll to the group that you want to delete and press **YES**.
3. Select **Delete**.

### Accept Calls

With the **Accept Calls** service, you can choose to receive calls only from certain numbers. Other calls are automatically rejected by a busy tone. You have to store the numbers that you want to receive in an **Accepted List**. The rejected calls are saved in the **Call List** in the **Call Info** menu. When you buy your phone, the setting for the **Accept Calls** service is set to **From All**, i.e. you receive calls as normal.

 
#### *To add numbers to the Accepted Callers List*

 
 
 
1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Accept Calls**, **YES**, **Accepted List**, **YES**.
2. Scroll to **Add new?**, **YES**. This takes you to your phone book.
3. Select a number.

To add more participants in the **Accepted Callers List**, repeat steps 2 to 3 above. It is possible to choose a number within a group in your phone book.

#### *To delete numbers from the Accepted Callers List*

1. Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Accept Calls**, **YES**, **Accepted List**, **YES**.
2. Scroll to the number you want to delete and press **C**.
3. Press **YES** to confirm your choice.





### *To check the Accepted Callers List*

1. Scroll to Settings, YES, Call Options, YES, Accept Calls, YES, Accepted List, YES.

### *To turn on the From List function*

1. Scroll to Settings, YES, Call Options, YES, Accept Calls, YES, Accept Options, YES.
2. Select From List.

Now you will only receive calls from the participants in the **Accepted Callers List**. An icon is shown in standby.

### *To turn on the From No One function*

1. Scroll to Settings, YES, Call Options, YES, Accept Calls, YES, Accept Options, YES.
2. Select From No One.

All incoming calls will now be rejected. The caller hears a busy tone and you get no indication of incoming calls. An icon is shown in standby.

### *To turn on the From All function*

1. Scroll to Settings, YES, Call Options, YES, Accept Calls, YES, Accept Options, YES.
2. Select From All.

You will now receive all calls as normal.

### *To check the Accepted Calls function*

- Scroll to Settings, YES, Call Options, YES, Accept Calls, YES, Accept Options, YES.  
The **Accepted Calls** alternative that is on is marked with a filled button.

# Handling More than One Call Simultaneously

Your phone allows you to handle more than one call simultaneously. This means that you can put a call that is in progress on hold, while you make or answer a second call, and then switch between the two calls.

You may also set up a **Conference Call** to have a joint conversation with up to five people. You may put an individual or a group of conference members on hold while you add other people to the conference call. You may also put conference members on hold while you talk to someone privately. See “Conference Calls” on page 85.

**Note!** *Depending on whether a call is ongoing or not, the menus ‘Call Info’ and ‘Ongoing Call’ will replace each other. See “The Dynamic Call Info/Ongoing Call Menu” on page 28 for more information.*

## The Call Waiting Service

If you wish to be able to receive a second call, while another call is in progress, you must turn on the **Call Waiting** service.

**Note!** *The Call Waiting service may not be available on all networks. If you are engaged in a fax or a data call, you will not hear any incoming calls. Incoming calls are rejected.*

### *To turn on the Call Waiting service*

 
- Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Call Waiting**, **YES**, **Activate**, **YES**. There may be a short delay before the network responds. In the meantime, the message **Please wait** is displayed. This is followed by the message **Call Waiting Activated**.

### *To cancel the Call Waiting service*

- Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Call Waiting**, **YES**, **Cancel**, **YES**.


### *To check whether the Call Waiting service is on or not*

- Scroll to **Settings**, **YES**, **Call Options**, **YES**, **Call Waiting**, **YES**, **Get Status**, **YES**.



Call held

## Making a Second Call

1. Put the current call on hold by pressing **YES**.
2. Enter the number you wish to call and press **YES**.  
You may also retrieve the number from your phone book by pressing and holding .

**Note!** *You can only put one call on hold.*

## Receiving a Second Call

If the **Call Waiting** service is on, you hear a tone in the earpiece if you receive a second call. The number or name of the caller is normally shown at the top of the display together with a list of the alternatives **Answer**, **Busy** and **Release&Answer**. If the incoming call is a restricted number, the display shows **Private**.

You can do one of the following:

*Put the current call on hold and answer the waiting call*

- Press **YES** to answer the waiting call.  
The current call is now put on hold.  
Your held call is marked in grey in the display and the active call is marked in black.

*Continue the current call and reject the waiting call*

- Select **Busy**.  
The waiting call is rejected. If the caller's network supports it, the caller hears a busy tone.

**Note!** *If 'Divert When Busy' is on, the waiting call is diverted to the number you have specified.*

*End the current call and answer the waiting call*

- Select **Release&Answer**.

## One Active Call and One Call On Hold

When you have one active call and one call on hold, you can do one of the following:

 
*Switch between the two calls*

- Press **YES**.

*End the active call and return to the call on hold*

1. Press **NO**. The question **Retrieve call?** appears.
2. Press **YES**.

If you press **NO**, also the call on hold will be ended.



#### *End both calls*

- Scroll to **Ongoing Call, YES, Release All, YES**.

#### *Connect the two calls (Call Transfer)*

- Scroll to **Ongoing Call, YES, Transfer Call, YES**.

The two calls are now connected to each other, and you are disconnected from both calls.

**Note!** *The Call Transfer service may not be available on all networks.*

#### *Join the two calls into a Conference Call*

- Scroll to **Ongoing Call, YES, Join Calls, YES**.

See 'Conference Calls' below.

### Receiving a Third Call

If the **Call Waiting** service is on, you may receive a third call when you have one active call and a second call on hold. From now on, you cannot answer any more calls without disconnecting one, if you do not want to create a conference call. You hear a tone in the earpiece and **Busy** and **Release&Answer** appear in the display.

You can do one of the following:

#### *End the current call and accept the waiting call*

- Select **Release&Answer**.  
The waiting call becomes active and the call on hold remains on hold.

#### *Reject the waiting call*

- Select **Busy**.  
The third call is rejected. Provided the caller's network supports this function, the caller hears a busy tone.

#### *Create a conference call*

- See below

### Conference Calls

A conference call is a call with more than two participants. As in an ordinary conference, all participants can hear each other at the same time. You may include up to five participants in a conference call.

**Note!** *The Conference Call service may not be available on all networks.*

#### **Creating a Conference Call**

To create a conference call, you must have one active call and one call on hold.

7 Release Active  
8 Join Calls  
9 Transfer Call

5 Switch calls  
6 Join calls  
5 Release held

Release Part  
Parties in Conf

5 Transfer Call  
6 Extract Part  
Release All

Release All  
Release Part  
Parties in Conf

9 Transfer Call  
0 Release All

### *To join the two calls into a conference call*

- Scroll to **Ongoing Call, YES, Join Calls, YES**.  
You have now created a conference call (with yourself, the former active and held calls as participants).

## **Adding New Participants to the Conference Group**

You may put the conference group on hold and then add new participants.

### *To add a new participant*

1. Press **YES** to put the conference group on hold.
2. Call the next person you wish to include in the conference group.
3. Scroll to **Ongoing Call, YES, Join Calls, YES**.  
You can include up to five participants in the conference group by repeating steps 1 to 3 above.

### *To check the participants in the conference group*

1. Scroll to **Ongoing Call, YES, Parties in Conf, YES**.  
The first participant's phone number is displayed, if available. If the participant's number and name are stored in your phone book, the name is displayed instead. Otherwise the display shows part 1, 2 etc.
2. Scroll with  $\uparrow$  to check the other participants.

## **Having a Private Conversation with One of the Participants**

If you wish to have a private conversation with one of the participants, you may extract that participant from the conference and put the other participants on hold.

### *To extract a participant*

1. Scroll to **Ongoing Call, YES, Extract Part, YES**.
2. Select the participant that you want to extract. Press **YES**.

### *To rejoin the participant to the conference group*

- Scroll to **Ongoing Call, YES, Join Calls, YES**.

## **Releasing Participants from the Conference Group**

You can release participants from the conference group one by one or all at once.

### *To release a certain participant*

1. Scroll to **Ongoing Call, YES, Release Part, YES**.
2. Select the participant that you want to release. Press **YES**.

### *To release all participants*

- Scroll to **Ongoing Call, YES, Release All, YES**.

## **Making a Call while a Conference Call Is in Progress**

You can put the conference group on hold and make another call. You can then switch between the new call and the conference call.

*To put the conference group on hold and make a new call*

1. Press **YES**.
2. Enter the number you wish to call and press **YES**.

*To switch between the new call and the conference group*

- Press **YES**.

*To end the new call and return to the conference group*

- Press **NO** and then **YES**.

## **Ending the Conference Call**

- Press **NO**.

# Setting Network Preferences

## Searching for Networks

When you turn on the phone, it searches for the last accessed network. If this is not within range, you may use another network, provided your home network has an agreement that allows you to do so. This is called roaming.

The order of preference in which the phone chooses a network is determined by a list of preferred networks on your SIM card. Your phone includes a number of functions that let you determine how it searches for a network. You may also choose a network yourself from those within range.

### To select a network

1. Scroll to **Settings**, **YES**, **Networks**, **YES**, **Select Network**, **YES**.
2. If there is more than one network within range, scroll to the network you want and press **YES** to select it.




### To start an automatic network search

 
 
- Scroll to **Settings**, **YES**, **Networks**, **YES**, **New Search**, **YES**.

The phone automatically starts searching for a network according to the list of preferred networks stored on your SIM card.

## Display Information

The currently used network is marked with a filled button. Together with the network name, you also get the following information in the display:

The display shows...	meaning...
	Your home network is within range. You can use it.
	The name of the network is included in a list of preferred networks on your SIM card. You can use this network.
	The name of the network is included in a list of forbidden networks on your SIM card. You may not be allowed to use this network, except for emergency calls.





All other networks without any icons are available, i.e. they are not included in the preferred or forbidden list on your SIM card but they may be used.

### Forbidden Networks

The names of the forbidden networks are stored on your SIM card. If such a forbidden network is within range, it is left out when the phone searches for a network (automatic search mode).

If your home network and a forbidden network come to an agreement that allows you to use the forbidden network, you can select this network even though the message **Forbidden** is displayed.

### List of Preferred Networks

You can create and edit a list that defines in which order your phone will select a network during automatic network selection, when your home network is not within range.


The number of networks that can be stored in the list depends on your SIM card.

You can review the network list and rearrange the order of the networks. You can also add new networks to the list and delete networks from it.

#### *To review the list of networks*

1. Scroll to **Settings, YES, Networks, YES, Preferred Nets, YES.**

The name of the first network is displayed.

Use  to scroll through the networks in the list.

#### *To see a network's full name*

1. Scroll to **Settings, YES, Networks, YES, Preferred Nets, YES.**
2. Scroll to a network and press **YES.**
3. Select **Full Name.**

 
 
#### *To add a network to the list*

 
1. Scroll to **Settings, YES, Networks, YES, Preferred Nets, YES, Add new?, YES.**
2. Scroll to the network that you want to add and press **YES.**

If the network you want does not appear in the list, scroll to **Other** and press **YES.** Enter the three-digit country number and the two-digit network number and press **YES.**

3. Enter a position number and press **YES.**

**Note!** *All lower prioritized networks will be shifted one step down in the list.*





#### *To delete a network from the list*

1. Scroll to **Settings, YES, Networks, YES, Preferred Nets, YES.**
2. Scroll to the network that you want to delete and press **YES.**
3. Select **Delete.**

#### *To rearrange the list*

1. Scroll to **Settings, YES, Networks, YES, Preferred Nets, YES.**
2. Scroll to the network that you want to move and press **YES.**
3. Select **Change Priority.**
4. Enter the new position within the list and press **YES.**

### **Search Modes**

When you turn on your phone, it searches for a network. This can be done in two different ways, depending on the search mode that is on. When you buy your phone it is set to automatic search mode.

**Automatic search mode** means that your phone searches for the last accessed network first. If this is not available, it automatically searches for another available network within range.

 
**Manual search mode** means that your phone searches for the last accessed network first. If this is not available, the question **Select net?** appears. You then need to choose a network as described in "Searching for Networks" on page 88.

#### *To turn on the automatic search mode*

- Scroll to **Settings, YES, Networks, YES, Search Mode, YES, Automatic, YES.**

#### *To turn on the manual search mode*

- Scroll to **Settings, YES, Networks, YES, Search Mode, YES, Manual, YES.**



# Knowing the Call Time and Call Cost

During a call, the duration of the call is shown in the display. When you end the call, the call duration information is shown for another three seconds. If you subscribe to cost information, the call cost (or the number of call units) is displayed instead of the call duration.

**Note!** Depending on whether a call is ongoing or not, the menus 'Call Info' and 'Ongoing Call' will replace each other. See "The Dynamic Call Info/Ongoing Call Menu" on page 28 for more information.

## Total Call Time or Call Cost

The **Call Info** menu allows you to check the total time or cost of your calls.

*To check the duration of the last call*

- Scroll to **Call Info, YES, Call Timers, YES, Last Call, YES**.  
Now you can check the duration of the last call.

*To check the cost of the last call*

- Scroll to **Call Info, YES, Call Costs, YES, Last Call, YES**.  
Now you can check the cost (if you subscribe to cost information) of the last call.

*To check the time of your outgoing calls*

- Scroll to **Call Info, YES, Call Timers, YES, Outgoing Time, YES**.

*To check the total call time*

- Scroll to **Call Info, YES, Call Timers, YES, Total Time, YES**.

*To check the total call cost*

- Scroll to **Call Info, YES, Call Costs, YES, Total Cost, YES**.

*To reset the total call time*

1. Scroll to **Call Info, YES, Call Timers, YES, Clear Timers, YES**.
2. Select **Total Time** or **Outgoing time**.
3. Press **YES** to confirm your choice.

Total Time Reset?
----------------------

*To reset the total call cost*

1. Scroll to **Call Info**, **YES**, **Call Costs**, **YES**, **Clear Total Cost**, **YES**.
2. Press **YES** to confirm your choice.

**Note!** *If you subscribe to cost information, you must enter your PIN2 to clear the cost or time counter.*

### Determining the Call Cost

The **Tariff** function lets you enter and specify the price per call unit. The price entered is stored on your SIM card.

**Note!** *This service must be supported by your subscription and your network. If you do not specify a price per call unit, the number of call units is displayed during a call, and in 'Last call' and 'Total cost' in the 'Call Info' menu.*

*To enter the price per call unit*

1. Scroll to **Call Info**, **YES** **Call Costs**, **YES**, **Set Tariff**, **YES**.
2. Enter your PIN2 and press **YES**.
3. Select **Change Tariff**.
4. Enter the code for the currency you want, for example **GBP** for Pound Sterling, and then press **YES**.
5. Enter the price per call unit, for example **0.75**, and press **YES**. To enter the decimal point, press **#**.

*To revert to call units*

1. Scroll to **Call Info**, **YES** **Call Costs**, **YES**, **Set Tariff**, **YES**.
2. Enter your PIN2 and press **YES**.
3. Select **Units**.

### Credit Limit for Calls

If both your network and SIM card support this feature, you can enter a total amount of money that can be used for making calls. This could be useful when you lend your phone to someone and do not want their call costs to exceed a certain amount which you can decide. After a call is made, the cost is deducted from this amount. When the amount reaches zero, no more calls can be made.

**Note!** *As the price of a call may vary due to where you are calling from, at what time of the day you are calling and so on, the credit limit is only an estimated value.*

*To set a specific credit limit*

1. Scroll to **Call Info**, **YES**, **Call Costs**, **YES**, **Set Credit**, **YES**.
2. Enter your PIN2 and press **YES**.
3. Select **Change Credit**.
4. Enter the amount, for example 30 pounds, and then press **YES**.

*To set unlimited credit*

1. Scroll to **Call Info**, **YES**, **Call Costs**, **YES**, **Set Credit**, **YES**.
2. Enter your PIN2 and press **YES**.
3. Select **Unlimited**.

**Note!** *If you set the credit to Unlimited, the cost counter starts from zero and increases.*

# Using Two Voice Lines

If your subscription supports the **Two Line Service**, your phone will have two voice lines with different phone numbers, separate bills and perhaps different subscription services. This is useful for example if you want to keep business calls and private calls on separate lines.

When you buy your phone, the names of the lines are normally Line 1 and Line 2, but you can change their names. You can only send text messages (SMS) on Line 1. An icon indicates the line currently chosen for outgoing calls.

*To change the name of a line*

1. Scroll to **Settings**, **YES**, **Display**, **YES**, **Edit Line Tags**, **YES**.
2. Select a line.
3. Enter a new name and press **YES**.

## Changing Phone Lines

When you want to make a call, you need to choose which line to use.

**Note!** *Incoming calls can be received on both lines, irrespective of the line currently chosen.*

*To change phone lines*

1. Scroll to **Call Info**, **YES**, **Next Call**, **YES**.
2. Select **Switch to Line 1** or **Switch to Line 2**.

From now on, all outgoing calls are made on this line.

**Note!** *Depending on whether a call is ongoing or not, the menus 'Call Info' and 'Ongoing Call' will replace each other. See "The Dynamic Call Info/Ongoing Call Menu" on page 28 for more information.*

## Different Settings for Each Line

You may have different settings for each line, for example the ring signal or divert calls.

**Tip!** *You may also have separate Voice Mail numbers for each phone line, if supported by your subscription.*

*Some operators may show the call time or call cost for each line respectively.*

# Using the WAP™ Browser

During the last couple of years we have grown accustomed to browsing the Internet via our computers. This has proven to be a simple and effective way to find all kinds of information.

Thanks to a new technology called WAP (Wireless Application Protocol), a new dimension of mobility has been added to the Internet. Now you can find a lot of useful information by using the micro browser in your mobile phone, instead of using your computer. WAP is a standard specifically created for mobile communications devices and gives fast and easy access to Internet information and services.

Examples of WAP services you will be able to find are:

- Ericsson Mobile Internet, a portal offering you online access to customer services, user guides and useful information when you are travelling.
- Reservation services.
- News, sports and weather.
- Restaurants, cinemas, games etc.
- Banking and stock exchange quotations.
- Voice mail, e-mail and fax mail.

You can reach the Ericsson Mobile Internet at:  
[mobileinternet.ericsson.com](http://mobileinternet.ericsson.com)

## Using WAP Profiles to Simplify your Browsing

In order to simplify your browsing, the browser in your mobile phone can contain up to five different WAP profiles. A WAP profile consists of a group of network settings, which you only need to enter once into your phone. After having entered them, you simply switch between the different WAP profiles, without having to re-enter the settings every time you want to change your network connection.

For instance, one profile can be connected to your network operator, another can be connected to your bank and a third one can be connected to your company's intranet etc.

**Note!** *Make sure that the WAP settings in your phone are correctly set. Please contact your network operator to make sure your WAP settings are correct*

and that your subscription supports WAP browsing. See “Changing the WAP Profile Settings” on page 100.

Whenever you work with your WAP profiles, you need to remember two things:

- **You can use up to five different homepages.** Each of your WAP profiles can have its own homepage. This way you can use up to five different homepages. For instance: You have entered a network operator WAP profile and an intranet WAP profile. Whenever you switch between these WAP profiles, the homepage in your browser can change to different WAP addresses chosen by you. See “Opening and Changing A Home Page” on page 96.
- **A saved bookmark might not work with all your WAP profiles.** Whenever you bookmark a WAP page, that bookmark might get tied to the network settings you have stored in the WAP profile you are using just then. Consequently, if you can not access a bookmark, you might solve the problem by switching to another WAP profile and then accessing the bookmark again. See “Working with Bookmarks” on page 97.

*To switch between WAP profiles*

1. Scroll to **WAP Services, YES, WAP Profiles, YES.**
2. Scroll to the WAP profile you want to use and press **YES.**

This WAP profile will be used until you switch to another profile.

### Viewing a WAP Page

Below is described the three different ways in which you can go to a WAP page:

- **By opening a home page**
- **By going to a stored bookmark**
- **By going to a WAP page by entering its address**

### Opening and Changing A Home Page

Each of your WAP profiles can store its own homepage. Therefore, whenever you switch from one WAP profile to another, you can also change your homepage automatically. See “Using WAP Profiles to Simplify your Browsing” on page 95.

When you buy your mobile phone, Ericsson Mobile Internet is set to be your home page in all your five WAP profiles. When you go to a homepage, you might be asked to select an access type. See “Choosing Which Access Type to Use When Browsing” on page 102.



#### *To go to a homepage*

1. Scroll to **WAP Services**, **YES**.
2. Select the top menu item and press **YES**.

The name of this menu item depends on what you have chosen to call it. See “Editing the Homepage of a WAP profile” on page 101. The default names for your five homepages are Home 1, Home 2, Home 3, etc.

#### *To edit your home page*

1. Scroll to **WAP Services**, **YES**, **WAP Settings**, **YES**.
2. Scroll to the WAP profile whose homepage you wish to edit. Press **YES**.
3. Select **Edit Homepage** and enter the address of the WAP page that you want to use as your home page for this WAP profile, for instance: **mobileinternet.ericsson.com**.
4. Press **YES**.

#### *To turn the WAP page you are browsing into a homepage*

1. Start the browser in one of the ways described in this chapter.
2. Go to the WAP page that you want to use as the homepage for the WAP profile you are currently using.
3. When the WAP page is displayed in the browser, press and hold **YES** until the **Options** menu appears.
4. Select **New homepage** and press **YES**.
5. The question **Change Homepage?** appears. Press **YES** to confirm your choice.

### **Working with Bookmarks**

You use WAP bookmarks in your mobile phone just as you do in an ordinary Internet browser. They provide you with a way back to a certain WAP page that is important to you or that you expect to visit often. You can store a maximum of 25 bookmarks.

#### **The Importance of WAP Profiles When Accessing Bookmarks**

When you bookmark a WAP page, that bookmark might get tied to the network settings in the WAP profile you are using just then. This means that a saved bookmark might not work with all your WAP profiles.

For instance, you browse your corporate intranet and bookmark a page there. The next time you enter the browser, you switch to the WAP profile that is tied to your network operator. In this case you might not reach the intranet bookmark, because the settings in the network operator’s WAP profile are different from the setting in the intranet WAP profile.

In order to reach the intranet bookmark again, you therefore need to switch to the intranet WAP profile and then access the bookmark once gain. See “Using WAP Profiles to Simplify your Browsing” on page 95.

#### *To add a bookmark*

1. Scroll to **WAP Services, YES**.
2. Start your browsing, either by selecting **Bookmarks** or **Enter Address** from the menu or by going to a homepage.  
Read more about how to use these menus in the rest of this chapter.
3. When you have found the WAP page that you want to bookmark, press and hold **YES** until the **Options** menu appears.
4. Scroll to the sub-menu **Add bookmark** and press **YES**.  
If your bookmark list is full, you have to delete another bookmark before you can save the new one.
5. Your new bookmark has been saved when you see the text **Bookmark stored**.

#### *To go to a bookmark*

1. Scroll to **WAP Services, YES, Bookmarks, YES**.
2. Scroll to the bookmark you want to go to and press **YES**.
3. Scroll to **Go to** and press **YES**.

#### *To delete a bookmark*

1. Scroll to **WAP Services, YES, Bookmarks, YES**.
2. Select the bookmark you wish to delete and press **C**.
3. Press **YES** again when the display shows **Delete?**

#### *To edit a bookmark*


1. Scroll to **WAP Services, YES, Bookmarks, YES**.
2. Scroll to the bookmark you wish to edit and press **YES**.
3. Scroll to **Edit** and press **YES**.
4. Enter the name of the bookmark and then press **YES**.
5. Enter the WAP address and then press **YES**.

#### *To reach your bookmarks when you are browsing*

1. When you are browsing, press and hold **YES** until the **Options** menu appears.
2. Select **Suspend**.
3. In the **WAP Services** menu, scroll to **Bookmarks** and press **YES**.
4. Scroll to the bookmark that you wish to go to and press **YES**.
5. Select **Go to**.

#### *To send a bookmark to another person via SMS*

1. Scroll to **WAP Services, YES, Bookmarks, YES**.
2. Scroll to the bookmark you wish to send and press **YES**.

3. Select **Send as link**.
4. Enter your message and press **YES**.  
Enter the recipient's phone number or retrieve it from the phone book by pressing .
5. Press **YES** to send the message.

**Tip!** *To send the bookmark you are currently visiting in the browser: open the Options menu by pressing and holding **YES** and then select 'Send as link'.*

### Going to a WAP Page by Entering its Address

1. Scroll to **WAP Services**, **YES**, **Enter Address**, **YES**.
2. Enter the address of the WAP page you want to go to, for instance:  
**mobileinternet.ericsson.com**
3. Press **YES**.

If you are already browsing, the browser goes directly to your chosen address. Otherwise, you may have to choose which access type to use in order to access WAP pages. See "Choosing Which Access Type to Use When Browsing" on page 102.

**Note!** *When you enter a WAP address, you do not need to enter the prefix <http://>. You only need to enter a prefix if you want to use another protocol than [http](http://), such as [ftp](ftp://). In that case you use the prefix <ftp://>.*

### Your Options While Browsing

You can only reach the **Options menu** when you are browsing, and it may look a bit different depending on which page you are looking at. For example, it can contain special features. It always, however, contains the options below:

- **Suspend**. Go back to the WAP Services menu where you can access your bookmarks among other things.
- **Reload**. Get the latest version of the WAP page by refreshing its content.
- **Add bookmark**. Add the page you are currently browsing to your list of bookmarks.
- **Send as link**. Send the current page as a bookmark to another phone via SMS.
- **New homepage**. Set the current WAP page as your homepage.
- **Exit** the browser.

*To reach the Options menu*

- No matter where you are browsing, press and hold **YES** until the **Options menu** appears.

## Returning to the Browser after Accessing the Menus

If you have selected **Suspend** from the **Options** menu, in order to go to the WAP Services menu, you can easily return to the WAP page that you visited when you left the browser. You might, however, not enter the WAP page exactly where you left it.

*To return to the browser*

- Scroll to **WAP Services**, **YES**, **Resume**, **YES**.

## Changing the WAP Profile Settings

Before you start using the WAP browser, it is important that you make sure the WAP profile settings in your phone are correctly set. For each WAP profile, you need to fill in your user ID, gateway address and access type, among other things.

There are three ways in which WAP profile settings can be entered into your phone:

- **When you buy the phone together with a WAP subscription.** In this case the network operator has already entered the settings you need.
- **Over the air via an SMS.** In this case your network operator sends you an SMS which contains all the necessary WAP settings for a WAP profile. When this happens, you will be asked if you want to install the settings, and to select in which WAP profile you want to enter the received settings.

**Note!** *Before you accept to install the new settings, it is very important that you are sure who the sender of the settings is. If you are unsure, answer **NO** to the question and call your network operator. If it was they who sent the WAP settings, ask them to send the SMS again.*

- **Manually by yourself.** In this case your network operator, the company you work for, your bank, etc. provide you with the correct WAP settings. You then enter the settings yourself manually into the WAP profile you wish to use.

## Changing the WAP Profile Settings Manually

All the WAP settings in your phone are connected to WAP profiles. Each time you enter a WAP setting, you therefore need to specify in which WAP profile you want to enter the setting. See “Using WAP Profiles to Simplify your Browsing” on page 95.

**Note!** *Please contact your network operator before you start changing the settings manually. This way you can be sure the entered settings are correct.*

## Renaming a WAP profile

Instead of the default names Profile 1, Profile 2 etc., you can rename the profiles so that you can separate them easily. For instance you can use the name of your network operator for WAP profile, the name of your bank for another WAP profile and the name of your company for a third WAP profile.

### *To rename a WAP profile*

1. Scroll to **WAP Services**, **YES**, **WAP Settings**, **YES**.
2. Scroll to the WAP profile you wish to rename and press **YES**.
3. Select **Rename**, enter a new name and press **YES**.

## Editing the Homepage of a WAP profile

Your homepage in the browser is connected to the WAP profile you are using. In order for you to know which WAP profile is active, we advice you to enter guiding names for your homepages.

### *To edit the homepage of a WAP profile*

1. Scroll to **WAP Services**, **YES**, **WAP Settings**, **YES**.
2. Scroll to the WAP profile whose homepage you want to edit and press **YES**.
3. Select **Edit Homepage**, enter the WAP address you want to use as the homepage connected to this WAP profile and press **YES**.

## Showing Images

You can choose whether you want to see images or not when you are browsing. The images take extra time to download, but the WAP pages look better with them. When you buy the phone, the Show Images setting is set to **On**.

### *To turn the image load on or off*

1. Scroll to **WAP Services**, **YES**, **WAP Settings**, **YES**.
2. Scroll to the WAP profile whose image settings you want to edit and press **YES**.
3. Scroll to **Show Images**, select **On** or **Off** and press **YES**.

**Note!** *If you have turned the Show Images function Off, the images are displayed as icons in the display. If an image contains a link, you can access this link by highlighting the image and pressing YES.*

## Download Timeout

When you try to access some WAP pages, you may have to wait for a long time while your phone tries to download the page. You can set the time that shall pass before the download attempt is stopped.

#### *To set the download timeout*

1. Scroll to **WAP Services**, **YES**, **WAP Settings**, **YES**.
2. Scroll to the WAP profile whose download timeout you want to edit and press **YES**.
3. Select **Response Timer**, enter how many seconds you want the download to continue before it stops and press **YES**.

### **Choosing Which Access Type to Use When Browsing**

When you choose which access type to use when you are browsing, you tell your phone and a WAP gateway how they should connect to each other.

There are two ways in which this connection can be established: either via a GSM Data connection or via SMS (Short Message Service). The speed and cost of the WAP service depends on which access type you use. For more details regarding price and accessibility, please contact your local service provider or telecommunications operator.

Some network subscriptions allow you to use both a GSM Data connection and SMS when browsing. In this case you can choose to be asked which access type you want to use, each time you start the browser. If you can use only one access type, we recommend that you set this as your preferred access type.

#### *To set a preferred access type for a WAP profile*

1. Scroll to **WAP Services**, **YES**, **WAP Settings**, **YES**.
2. Scroll to the WAP profile whose access type you want to edit. Press **YES**.
3. Scroll to **Access Type**, **YES**, **Always ask**, **YES**.

If you want to be asked which access type to use each time you start the browser, select **On**. Otherwise select **Off**.

4. Press **YES**.
5. Select either **GSM Data** or **SMS** to be the access type you want to use with this WAP profile.

### **Setting up a GSM Data Connection**

1. Scroll to **WAP Services**, **YES**, **WAP Settings**, **YES**.
2. Scroll to the WAP profile for which you want to use a GSM Data Connection and press **YES**.
3. Scroll to **Gateway**, **YES**, **User ID**, **YES**
4. Enter the User ID to your gateway and press **YES**.
5. Scroll to **Password** and press **YES**.
6. Enter the Password to your gateway and press **YES**.
7. Scroll to **GSM Data addr.** and press **YES**.

8. Enter the IP address to your gateway and press **YES**.  
An IP address looks something like this: 123.4.67.901.

**Note!** *An IP address consists of four groups of digits, with a maximum of three in each group. If one of your digit groups consists of only one or two digits, you have to enter a zero (0) in front of the original digit for each digit that is missing. Example: If you were to enter the IP number above, 123.4.67.901, you would need to write 123.004.067.901.*

9. After you have entered the IP address, press **NO** in order to jump up one level in the menu system. You should now stand directly under the WAP profile you are editing.
10. Scroll to **GSM Data** and press **YES**.
11. Scroll to **Phone Number** and press **YES**.
12. Enter the phone number you should use with your GSM Data connection and press **YES**.
13. Scroll to **User ID** and press **YES**.
14. Enter the user ID to your GSM Data connection and press **YES**.
15. Scroll to **Password** and press **YES**.
16. Enter the password to your GSM Data connection and press **YES**.
17. Scroll to **Dialtype** and press **YES**.
18. Select whether you want to use **Analogue** or **ISDN** connection.
19. Scroll to **InactiveTimeout** and enter how many seconds the browser should remain idle while connected before it asks you to remain either connected or if it should disconnect. Press **YES**.

### **Setting up an SMS Connection**

1. Scroll to **WAP Services**, **YES**, **WAP Settings**, **YES**.
2. Scroll to the WAP profile for which you want to use an SMS Connection and press **YES**.
3. Scroll to **Gateway**, **YES**, **User ID**, **YES**
4. Enter the user ID to your gateway and press **YES**.
5. Scroll to **Password** and press **YES**.
6. Enter the password to your gateway and press **YES**.
7. Scroll to **SMS address** and press **YES**.
8. Enter the phone number to your gateway and press **YES**.
9. After you have entered the SMS address phone number, press **NO** in order to jump up one level in the menu system. You should now stand directly under the WAP profile you are editing.
10. Scroll to **SMS** and press **YES**.
11. Select **Service Centre** and enter the phone number to your SMS Service Centre.

# Calendar

The **Calendar** makes it possible for you to keep track of important phone calls that you need to make or meetings that you need to attend. You can also have the phone remind you before an appointment. In this way, you can be sure that you don't miss anything important, no matter where you are.

You can store three different appointments in your **Calendar**:

- **Meetings**, including date and time, duration, subject, location and a reminder.
- **Phone calls**, including date and time, duration, what phone number to call, subject and a reminder.
- **General reminders** including date, time and subject.

## Adding a Meeting or Phone Call

*To add a meeting or phone call*

1. Scroll to **Extras, YES, Calendar, YES, Add new, YES**.
2. Select either **Meeting** or **Phone call** and press **YES**.
3. Enter the **Start date**: and press **YES**.
4. Enter the **Start time**: and press **YES**.
5. Use  $\uparrow$  to select the **Duration** time for the meeting. Press **YES**.

You can also select **Other** and enter the end date and time.

If you are adding a phone call reminder, enter the **Number** you should call or recall a number from the phone book by pressing  $\leftarrow$ . Press **YES**.

6. Enter the **Subject**: and press **YES**.  
If it is a meeting, enter the **Location**.
7. Use  $\uparrow$  to select when to get a **Reminder** about the meeting. Press **YES**.

When the reminder has been stored, the display shows **New entry added**.

## Adding a General Reminder

*To add a new general reminder*

1. Scroll to **Extras, YES, Calendar, YES, Add new, YES**.
2. Select **Reminder** and then press **YES**.
3. Enter the **Start date**: and press **YES**.
4. Enter the **Start time**: and press **YES**.
5. Enter the **Subject**: and press **YES**.

When the reminder has been stored, the display shows **New entry added**.





## Deleting an Appointment

*To delete single appointments*

1. Scroll to **Extras, YES, Calendar, YES**.
2. Go to the day of the appointment you wish to delete by selecting either **View today, Week view** or **Month view**.
3. In **View today**: Scroll to the appointment you wish to delete and press **C**.  
In **Week view** and **Month view**: First select the day of the appointment and then scroll to the appointment you wish to delete and press **C**.
4. The question **Delete?** appears. Press **YES** to confirm your choice.

*To delete all appointments or appointments older than a day or a week*

1. Scroll to **Extras, YES, Calendar, YES, Delete, YES**.
2. Scroll to the items you want to delete and press **YES**. You can delete items older than one week (1 week old), older than one day (1 day old) or all appointments in the **Calendar** (**Delete all**).
3. The question **Delete?** appears. Press **YES** to confirm your choice.

## Editing a Calendar Appointment

1. Scroll to **Extras, YES, Calendar, YES**.
2. Go to the day of the appointment you wish to edit by selecting either **View today, Week view** or **Month view**.
3. Scroll to the appointment you wish to edit and press **YES**. Press **YES** again.
4. Select **Edit**.
5. Enter the correct date, time etc. and press **YES** after each one.  
If you do not want to change a part of an entry, e.g. the date, press **YES** and it remains the same.
6. The entry has been successfully changed when you see the text **Saved** in the display.

## Calling a Phone Number Stored in an Appointment

1. Scroll to **Extras, YES, Calendar, YES**.
2. Go to the day of the appointment in which the phone number is stored, by selecting either **View today, Week view** or **Month view**.
3. Scroll to the appointment and press **YES** and then **YES** again.
4. Select **Call** from the list.



## Viewing Today's Appointments

1. Scroll to **Extras, YES, Calendar, YES, View today, YES**.
2. Navigate through the appointments using  $\uparrow$ , or select **Add new** to add a new appointment for today.

## Weekly Overview

The weekly overview displays all your appointments during a certain week. All your appointments are displayed as boxes, and the number of the week is displayed in the top right-hand corner.

*To see a weekly overview*

1. Scroll to **Extras, YES, Calendar, YES, Week view, YES**.
2. Use the key pad in the following ways:
  - Use  $\leftarrow$  and  $\rightarrow$  to jump from one day to another.
  - Press **1** and **3** to jump a *week* backwards or forward.
  - Press **4** and **6** to jump a *month* backwards or forward.
  - Press **7** and **9** to jump a *year* backwards or forward.
  - Use  $\uparrow$  to move backwards and forwards within one day.

You can always jump to a day by pressing **YES** when you have scrolled to it. You can then view all the appointments for that day, or add a new appointment by selecting **Add new**.

## Monthly Overview

You can view a whole month including the number of the week, which is displayed in the top right-hand corner. Days which include an appointment are marked in bold.

*To see a monthly overview*

1. Scroll to **Extras, YES, Calendar, YES, Month view, YES**.
2. Use the key pad in the following ways:
  - Use  $\leftarrow$  and  $\rightarrow$  to jump from one day to another.
  - Press **1** and **3** or  $\uparrow$  to jump a *week* backwards or forward.
  - Press **4** and **6** to jump a *month* backwards or forward.
  - Press **7** and **9** to jump a *year* backwards or forward.
  - Press **C** to return to today's date. The day of today is always displayed within a square.
  - Press and hold **YES** for a short moment to jump to the weekly overview.

You can always go to a day and then press **YES** to view all the appointments for that day, or add a new appointment by selecting **Add new**.

7 Jan 2000						
M T W T S S						
8AM						
10AM						
12PM						
2PM						
4PM						

Fr	Jan 2000						
				1	2		
3	4	5	6	7	8	9	
10	11	12	13	14	15	16	
17	18	19	20	21	22	23	

## Sending and Receiving Calendar Appointments

Whenever you and your business colleagues, friends or spouse need to synchronize your calendars, you can use the **Beaming** function. In this way you can send and receive appointments instead of having to enter them by hand into the phone.


Before you start sending or receiving calendar appointments, you need to make sure that:

- The RS232 cable is *not* attached to your phone. If it is, just disconnect the cable before the transfer of the appointment.
- The built-in modem is *not* occupied by some other infrared transfer, for example, if you are sending or receiving a fax or e-mail. End this transfer before you start the transfer of appointments.

**Note!** *It is only possible to send an appointment to another similar phone or handheld PC/PDA. You can receive appointments from another similar phone and certain PCs and handheld PCs/PDAs. Also, the minimum distance between your phone and another phone, a PC or a handheld PC/PDA can vary. If you do not know whether your PC or handheld PC/PDA supports the transfer of calendar appointments, or how far away you can place the phone from it, please consult the User's Guide of your PC or handheld PC/PDA or contact the local retailer.*

### To send a Calendar appointment

1. Scroll to **Extras**, **YES**, **Calendar**, **YES**.
2. Go to the day of the appointment you wish to send by selecting either **View today**, **Week view** or **Month view**.
3. Select the appointment you want to send and press **YES**. Press **YES** again.
4. Position your mobile phone next to the other person's phone. Make sure the infrared eyes are facing each other and that they are within a meter and 30 degrees of each other.
5. Scroll to **Beam** and then press **YES**.
6. The calendar appointment has been sent when you see **Beamed** in the display.

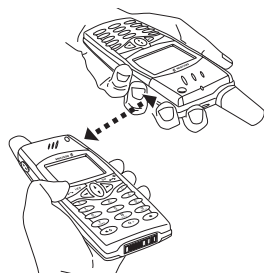


### To receive a Calendar appointment

The infrared eye on your phone has to be activated if you want to receive calendar appointments.

1. Scroll to **Extras**, **YES**, **Infrared Port**, **YES**, **10 minutes**, **YES**.

 You can also reach this function by placing it in My Shortcuts, see "My



Shortcuts” on page 28.

2. Position your mobile phone next to the other person’s phone or PDA. Make sure the infrared eyes are facing each other and that they are within a meter and 30 degrees of each other.
3. Ask the other person to send the appointment.
4. If you want to view the received calendar entry before storing it, then press **YES** when you see the text **New entry received, view?**.  
If you want to store the calendar entry without viewing it, press **NO**.
5. Press **YES** to answer the question **Accept entry?**.


The received appointment is then stored automatically in the correct day.

**Note!** *You cannot select ‘Infrared Port’ from the ‘Extras’ menu if you are using the WAP browser or if you use a cable for communication between your phone and the computer.*

### Viewing the Storage Status

 
*To view the storage status of all Calendar appointments*

- Scroll to Extras, **YES**, Calendar, **YES**, Status, **YES**.  
Here you can see how many percent of the storage entries that are free or used, and the interval between your first and last appointment.



# Voice Memo

The voice memo function allows you to record up to one and a half minutes of your own messages or parts of one or several calls. This is useful when you want to remember what you or someone else has said, but you do not have pen and paper available.

You can make a voice memo recording at any time, including during a call, simply by pressing and holding the voice memo button  located just below the **YES** button on your mobile phone.


The voice memos are stored in your mobile phone and can be accessed even if you change your SIM card.

## Recording a Voice Memo


Normally when you record a voice memo, your own voice is recorded. If, on the other hand, a call is in progress and you start recording a voice memo, your phone starts recording the other person by default. To change which part gets recorded, see “Setting the Channel for Recording During Calls” on page 111.

Two seconds before the voice memory is full, you hear a tone. Recordings shorter than 0.25 seconds are not saved.

### *To record a voice memo*

- Press the voice memo button  until you hear a tone and then release it. When recording starts, the display shows the message **Recording** together with the remaining recording time.

### *To end the recording*

- Press the voice memo button . The display reads **Voice memo saved**.

When a call is not in progress, a recording is automatically ended when you receive an incoming call. When you are recording during a call, the recording is automatically ended when you or the other person ends the call.





The voice memo is saved with the default name ‘Memo’, together with the labels you have chosen, see “Changing Your Voice Memo Labels” on page 111.

If you have recorded during a call, the other person's phone number is shown instead of 'Memo'. If this number is stored in your mobile phones' phone book, the name of the person you were talking to is shown instead.

### Viewing and Playing Voice Memos



You can view and play your voice memos at any time, except during a call.

#### *To view and play your stored voice memos*

1. Briefly press the voice memo button .
2. Use  to scroll to the voice memo you wish to hear.
3. Press the voice memo button  to listen to your voice memo. Listen to the next voice memo in the list by pressing the voice memo button  again.
4. Wait until the voice memo has ended or press **NO** to stop playback.

### Erasing And Renaming Voice Memos

#### *To erase or rename a voice memo*


1. Briefly press the voice memo button .
2. Use  to scroll to the voice memo you wish to erase or rename.
3. Press **C** when the voice memo you want is highlighted. The Options menu is displayed.
  - **To erase:** Select **Erase** and press **YES**. Press **YES** again if you are sure you want to erase it.
  - **To rename:** Select **Rename** and press **YES**. You can then enter a new name for the current voice memo and save it by pressing **YES**.

#### *To erase all voice memos*

1. Scroll to **Extras, YES, Voice Memo, YES, Erase all, YES**.
2. If you are sure you wish to erase all your stored voice memos, press **YES** again.

### Viewing the Storage Capability

You can easily see how many seconds you have left for remaining recordings.

1. Briefly press the voice memo button .
2. Scroll to the memory indicator bar at the top and press **YES**. In the display you can see how many seconds of free memory are left for voice memos.

### Setting the Recording Quality

In standby mode, you can record your voice memo in two different modes, depending on what sound quality and recording time you require.

You can choose either to record at High quality with 36 seconds of high sound quality, or to record at Normal quality with 92 seconds of normal sound quality.

*To set the recording quality*

1. Scroll to **Extras, YES, Voice Memo, YES, Set Quality, YES**.
2. Select whether you wish to use **92 sec Normal** or **36 sec High** and then press **YES** to confirm your choice.

The default is Normal quality, but recordings during a call are made with the sound quality of the network you are using.

### Setting the Channel for Recording During Calls

You can set the recording channel in your phone to either **Record Myself**, which means that your own voice will be recorded or **Record Other**, which means the person you are talking to will be recorded.

When you buy the phone, **Record Other** is the default setting for all recordings during ongoing calls.

*To set the recording channel*

1. Scroll to **Extras, YES, Voice Memo, YES, During Calls, YES**.
2. Select **Record Myself** if you want to record your own voice when recording voice memos, or select **Record Other** if you want to record the other person.
3. Press **YES** to confirm your selection.

### Changing Your Voice Memo Labels

Whenever you record a voice memo, you can choose what kind of information you want to see displayed along with your voice memos. You can choose to display the date, time or length of the voice memo.

*To change your voice memo labels*

1. Scroll to **Extras, YES, Voice Memo, YES, Set View, YES**.
2. Scroll to **DateRecorded, TimeRecorded** or **Length** and press **#** or **\*** to display it or not.
3. Press **YES** when you have finished.

# Voice Control

Your phone allows you to:

- voice dial - call someone by simply saying the name
- answer and reject calls using your voice when connected to a handsfree kit

To call someone, you only need to press **YES** until you hear a tone, say the name (voice label) associated with that person and your phone automatically dials the number. To answer or reject calls, say **Answer** or **Busy**.

## Preparing Your Phone for Voice Dialling

When you buy your phone, voice dialling is set to on. If, for some reason, it has been turned off, you will need to turn it on again before you can start using it.

### *To turn Voice Dialling on*

1. Scroll to **Settings**, **YES**, **Voice Control**, **YES**, **Voice Dialling**, **YES**.
2. Select **On**.

Your phone is now ready to record voice labels.

**Note!** *Once you have turned voice dialling on, you are asked if you want to record a voice label every time you save a new number in your phone book. See "Saving a Number Together with a Name" on page 32.*

Before you can use voice dialling, you need to record voice labels for your phone book entries. To get a good result when recording voice labels, make sure you are in a quiet environment.

 
 
 
### *To record voice labels for existing phone book entries*

1. Scroll to **Phone Book**, **YES**, **Voice Labels**, **YES**, **Add voice?**, **YES**.
2. Select a phone book entry to which you want to add a voice label.
3. Wait for the tone and say the name (voice label) that you want to save.  
The voice label is played back to you.
4. Press **YES** to save the voice label you have recorded.

If you do not find the recording OK, repeat step 3.

An icon appears next to those phone book entries for which you have saved a voice label.

You can also record voice labels in **Find and Edit** in the **Phone Book** menu.





**Note!** *To use voice dialling with a vehicle handsfree unit, you need to record your voice labels in the car, when connected to a vehicle handsfree. Voice labels for phone book entries recorded in the phone will not be available in the car, and vice versa. For more information about the Vehicle Handsfree unit, see "Vehicle Handsfree" on page 131.*

### **Recording Problems**

If your phone cannot detect any speech, one of the following might have happened:

- you spoke too softly - try speaking louder
- the voice label was too short - it should be around one second long
- you spoke too late or too soon - speak after the tone

Go back to step 1 of 'To record voice labels for phone book entries'.

### **Listening to and Editing Voice Labels**

Your phone allows you to listen to and edit a list of the phone book entries that have voice labels.

*To listen to and/or edit the voice labels saved in your phone book*

1. Scroll to **Phone Book, YES, Find and Edit, YES**.
2. Scroll to the entry that you want to edit.  
The voice label is played back to you.
3. Press **YES**.
4. Select **Replace Voice** if you want to re-record the voice label or select **Erase Voice** if you want to erase the recorded voice label.
5. Continue according to the instructions for editing text or recording voice labels, respectively.

You can also listen to and/or edit your voice labels in **Find and Edit** in the **Phone Book** menu.

### **Voice Label Playback**

If you have recorded a voice label for an entry in your phone book, the voice label is played back to you in the following cases:

- when you move through the phone book or voice label list and reach this entry
- when you receive a call from the number corresponding to this entry
- when you voice dial this entry (before the call is connected)

### **Making Calls Using Your Voice**

*To make a call*

1. Press and hold **YES** until you hear a tone.
2. Release **YES** and say a name that you have recorded earlier.

The name (voice label) is played back to you, and the call is connected.

Instead of pressing and holding **YES**, as in step 1 above, you can slide and hold the volume key.

## Voice Answering

When connected to a portable or vehicle handsfree unit, you can answer or reject incoming calls by using your voice.

Before you can use voice answering, you need to turn on the voice answering function and record your voice commands.

### *To turn on Voice Answering*

1. Scroll to **Settings**, **YES**, **Handsfree**, **YES**, **VoiceAnswering**, **YES**.
2. Select **On**.

You now have to train your phone to recognize your voice answering commands.

3. Press **YES** to continue.
4. Follow the instructions in the phone display, i.e. say the word **Answer** and press **YES** to save your recording. (Use the microphone of the Handsfree unit). If the recording was not OK, repeat step 3.
5. Say the word **Busy** and press **YES** to save your recordings.

**Note!** *If you prefer, you can use other words instead of 'Answer' and 'Busy'.*

### *To answer an incoming call using your voice*

- When the phone rings, say the word **Answer**.

 
The word **Answer** is played back to you and the call will be connected.

### *To reject an incoming call*

- When the phone rings, say the word **Busy**.

The word **Busy** is played back to you, and the call is rejected, i.e. the caller hears a busy tone.

**Note!** *For more information about handsfree units, see "Portable Handsfree" on page 130 and "Vehicle Handsfree" on page 131.*



# Code Memo

Today there is an ever-increasing number of security codes connected to our credit cards, our home, our work etc. Usually, they all have different security codes. The more cards you have, the harder it is to remember all the codes. This problem has been eliminated thanks to the code memo function in your phone.

The big advantage with the code memo is that, instead of remembering all your different codes, you only have to remember the password that you use to open the code memo. When you have entered the correct password, all your codes are then displayed in your phone.

## Checkword and Security

### Using the Check Word Function

In order for you to know you have entered the correct password in the code memo, you can also store a checkword. This checkword serves as a confirmation that the password is correct. When you open the code memo and enter your password, the checkword is displayed for a short time.

If the password is correct, then the displayed codes are correct. If not, the wrong checkword is displayed followed by the wrong codes. This is to prevent unauthorized people from accessing your codes.

We recommend that you use a checkword that is only meaningful to you.

**Note!** *Be sure to remember the entered password and checkword. Ericsson cannot read your encrypted codes, so if you forget your password you need to type any password at all (which will not display the right codes), open the code memo and delete all the existing codes. Then you have to enter your codes again.*

### Factors Strengthening Code Memo Security

- You get no feedback telling you whether the password is right or wrong, except for the checkword - but only you know what that word is.
- All codes are encrypted in the mobile phone.
- When you have accessed your codes, they are displayed for only a limited time. This way another person can not see your codes if you leave the phone behind or if someone steals your phone.

**Note!** Normally, when you enter a password or an SMS, letters are displayed when you press the keys on your mobile phone. By pressing and holding # you can easily change between alphabetic abc... and numeric 123... input.

## Opening the Code Memo

*To open the Code Memo for the first time*

1. Scroll to **Extras, YES, Code Memo, YES**.  
The following message appears: **Enter a password consisting of 4 digits. Use this password to access the Code Memo next time.**
2. Press **YES** and enter a 4 digit password to start the code memo (be sure to remember the new password.) Press **YES**.
3. Confirm the new password by entering it again.
4. Enter a checkword so that later on you know you have entered the correct password. The checkword can consist of both letters and digits.
5. Press **YES**.

*To open the Code Memo after the first time*

1. Scroll to **Extras, YES, Code Memo, YES**.
2. Enter your password and press **YES**.  
Your stored checkword appears. When the decrypting process has finished, codes are displayed based on the entered password.

## Adding, Deleting and Changing Codes

### Adding a New Code

1. Scroll to **Extras, YES, Code Memo, YES**.
2. Enter your password to open the code memo.
3. Select **Add new code?, YES**.
4. Enter a name associated with the code, for example the name of the credit card company, and press **YES**.
5. Enter the code which you want to add to the code memo and press **YES**.  
The display reads **New code added**.

### Deleting a Single Code

1. Open the code memo as described above.
2. Scroll to the code you want to delete and press **C**.
3. The question **Delete?** appears. Press **YES** to confirm your choice.  
When the code has been deleted, the display reads **Deleted**.

### Changing a Code

1. Scroll to **Extras, YES, Code Memo, YES**.
2. Enter your password to open the code memo.
3. Scroll to the code you want to change and press **YES**. Press **YES** again.
4. Select **Edit**.
5. Enter the name and press **YES**, enter the code and press **YES**.

**Code Memo**  
Enter a password  
consisting of 4 digits.  
Use this password to  
access the Code

**Code Memo**  
Enter password:

## Resetting All Codes

**Note!** *This function resets all your codes and your password to open the code memo.*

1. Scroll to **Extras**, **YES**, **Code Memo**, **YES**.
2. Enter your password to open the code memo.
3. Scroll to **Options** and press **YES**.
4. Scroll to **Reset** and press **YES**.
5. The question **Reset Code Memo?** appears. Press **YES** to confirm your choice.

 
 
When the reset has finished, the display reads **Reset of Code Memo ready**.

Whenever you want to start using the code memo again, you need to start at “To open the Code Memo for the first time” on page 116.

## Changing the Code Memo Password

1. Scroll to **Extras**, **YES**, **Code Memo**, **YES**.
2. Enter your password to open the code memo.
3. Scroll to **Options** and press **YES**.
4. Scroll to **Change Passwd** and press **YES**.
5. Enter your new password and press **YES**.
6. Repeat the new password and press **YES**.
7. Enter a checkword and press **YES**.

The message **Password has been changed** appears.



# Calling Card Calls

When making international or long distance calls, you may not want your operator to charge you for these calls on your normal account. If you have a credit card or a calling card, you may want to redirect the charges to one of these accounts instead. The **Calling card** service lets you redirect the charges to either a credit card account or to a calling card account.

You can save two separate card numbers in your phone. These numbers are protected by a four- to eight-digit phone lock code. When you buy your phone the code is set to **0000**. You may change the code to one that you choose yourself. See “The Phone Lock” on page 76.

**Note!** *You cannot use the Calling card service when making a fax or a data call.*

## Activating the Calling Card Service

To be able to make calling card calls, you need to turn on the service.

*To turn on the Calling card service*

1. Scroll to **Phone Book, YES, Options, YES, Set CallingCards, YES**.
2. Enter your phone lock code (0000) and press **YES**.
3. Select **On**.

 
 
The Calling card service is now on and the sub-menu **Calling Cards** is available in the **Phone Book** menu.

## Saving Calling Card Numbers

You can save two calling card numbers in your phone.

*To save a card number*

1. Scroll to **Phone Book, YES, Calling Cards, YES**.
2. Enter your phone lock code and press **YES**.
3. Select **Add new?**.
4. Enter the access number of the calling card server and press **YES**.
5. Enter a name that you want to associate with your calling card server and press **YES**.
6. Enter the verification code of the calling card server and press **YES**.



7. Select whether you want to send the number that you want to call or the verification code first and press **YES** to confirm your choice.

**Note!** *Your service provider will give you the information needed for the verification codes.*

#### *To delete a card number*

1. Scroll to **Phone Book, YES, Calling Cards, YES**.
2. Scroll to the card number that you want to delete and press **YES**.
3. Select **Delete**.  
The question **Delete?** appears in the display.
4. Press **YES**.  
The card number has been deleted.

#### *To edit a card number*

1. Scroll to **Phone Book, YES, Calling Cards, YES**.
2. Scroll to the card number that you want to edit and press **YES**.
3. Select **Edit**.  
You may now edit the card number.
4. Press **YES** to confirm the new number.  
You may now also edit the name and code.

### Choosing a Card

If you have saved two card numbers, you must choose which card you want to use before making a calling card call.

#### *To select a card*

1. Scroll to **Phone Book, YES, Calling Cards, YES**.
2. Enter your phone lock code and press **YES**.
3. Select the card that you want to use.
4. Select **Activate card**.

### Making a Calling Card Call

1. In stand-by mode, enter the phone number of your calling card server or retrieve it from the **Phone Book** by pressing and holding  $\triangleright$ .
2. Press and hold **YES**.  
The access number of the calling card server is called and during the connecting phase, you are asked to send the phone number of the person that you want to call and the verification code, in the order chosen earlier (see above).

3. To send the number and verification code during the connecting phase, press **YES** when the display shows **Send** or wait a few seconds and they are sent automatically. Now you are connected to your personal phone call.



# Extras

## Alarm Clock

The phone has an alarm clock, which you may find useful when travelling. When it is on, an icon is shown in the display.

The alarm rings at the time set and the display flashes, even if the phone is turned off. The volume of the alarm signal is always increasing, provided the battery is attached and charged.

The alarm rings for 60 seconds and is repeated every nine minutes, if you do not turn it off. After 60 minutes, the repeat function is turned off automatically.

### *To set the time of the alarm*

1. Scroll to Extras, **YES**, Alarm Clock, **YES**.
2. Enter the time.
3. Press **YES** to confirm your setting.

The alarm has now been activated.

### *To change the alarm time*

1. Scroll to Extras, **YES**, Alarm Clock, **YES**, Set New Time, **YES**.
2. Enter the time.
3. Press **YES** to confirm your setting.

### *To turn the alarm signal off*

- Press any key to turn the alarm off when it rings. If you do not want the alarm to be repeated, press **YES**.

### *To turn off the alarm function*

 
 
1. Scroll to Extras, **YES**, Alarm Clock, **YES**.
2. Select Cancel.

## Calculator

The phone has a built-in calculator, which can add, subtract, divide and multiply.

- Press **#** to get +, -, x, /.
- Press **C** to erase a figure to the left of the cursor.
- Press **\*** to enter a decimal point.





### To use the calculator

In this example we are going to divide 134 by 32.

1. Scroll to Extras, **YES**, Calculator, **YES**.
2. Enter 134.
3. Press **#** repeatedly until the division sign (*/*) appears.
4. Enter 32.
5. Press **YES** to get the answer.
6. To clear the display, press **C**.

## Stopwatch

The phone has a built-in stopwatch for you to time a certain activity.

### To run the stopwatch

1. Scroll to Extras, **YES**, Stopwatch, **YES**.
2. Press **YES** to start the stopwatch. Press **YES** again to stop it.

### To reset the stopwatch

- Press **C** when the stopwatch is not running.

**Tip!** By pressing **#** when the stopwatch is running, you can store up to 9 lap times. Press **<** or **>** to check your stored lap times.

**Note!** If you receive an incoming call or voice or text message while the stopwatch is running, the stopwatch is turned off. If you exit the stop watch menu the stop watch is turned off.

## Timer

The phone has a built-in 24-hour timer. You set the time you want and when that time is out, an alert signal sounds.

### To set the timer

1. Scroll to Extras, **YES**, Timer, **YES**.
2. Enter the hours, minutes and seconds and press **YES**.  
The countdown begins. The timer is shown in standby mode.  
When the alert sounds, press any key to turn it off.

### To set a new time when the timer is running

1. Scroll to Extras, **YES**, Timer, **YES**, Set New Time, **YES**.
2. Enter the time and press **YES**.  
The countdown begins. The timer is shown in standby mode.  
When the alert sounds, press any key to turn it off.

### *To turn off the timer*

1. Scroll to **Extras, YES, Timer, YES**.
2. Select **Cancel**.

**Note!** *The timer does not work when the phone is turned off.*

## Games

Your phone has two different games for your enjoyment. There are help texts available in each game as a guide for you to get started.

### **Tetris®**

The object of **Tetris** is to prevent the blocks from reaching the top. Each time you fill a line, the line disappears.

#### *To start Tetris®*

1. Scroll to **Extras, YES, Games, YES, Tetris, YES**.

**Tetris** appears in the display.

2. To start a game, select **Start**.
3. Select level (1–10) by using  $\triangleleft$  or  $\triangleright$ .
4. Press any key to start.
  - Instead of choosing **Start** you can scroll with  $\triangleleft$  or  $\triangleright$  to select **High-score, Help** or **Quit** (at step 2 above).

#### *To control the game*

- **8** or slide the volume key downwards = move left
- **2** or slide the volume key upwards = move right
- **5** or **9** = rotate
- **3** or **6** = drop faster
- **C** = pause
- **NO** = quit

Tetris®; © Elorg 1987. Classic Tetris™; © Elorg 1998

 
Tetris Logo by Roger Dean, © The Tetris Company 1997

All Rights Reserved

### **Klondike**

The object of **Klondike** is to form four piles of cards, one per suit, running from ace to king. The cards are dealt out into seven columns. The last six columns have one or more cards facing downwards. If the top card in a column is removed, revealing the face-down card, you may turn it face up.

Only kings, or stacks of cards beginning with a king may be moved to an empty column.



Columns of cards are built up in descending order and alternating colour. For example, the eight of hearts may be placed on either the nine of clubs or spades.


The remaining cards in the deck are available for play. You can turn these cards one at a time. The card in the discard pile may be placed on the columns or the ace piles. When you run out of cards in the deck, you can flip it over and continue.

#### *To start Klondike*

 1. Scroll to **Extras, YES, Games, YES, Klondike, YES**.  
Klondike appears in the display.
2. To start a game select **New game** (or **Resume game** if you have played before).
  - Instead of choosing **Start** you can scroll with  $\langle$  or  $\rangle$  to select **Resume game** or **Help** (at step 2 above).

#### *To control the game*

- **1** = Select card/pile, Confirm move, Flip card
- **2** = Turn up new card from game deck
- **3** = Put card on ace pile
- **4** = View a pile (selection and move is possible)



# The Profile Concept

Your phone includes a number of pre-programmed profiles. A profile is a group of settings which are set to suit a certain environment. For example, when you go to a meeting, you can just choose the **Meeting** profile and a number of settings that suit a meeting are set.

Some phone accessories can choose a profile automatically. For example, when you place your phone in a vehicle handsfree unit, the **In Car** profile is chosen. For more information on automatic activation of profiles, see “Accessories” on page 128.

## The Profiles

There are six pre-programmed profiles:

- **Normal**
- **Meeting**
- **In Car**
- **Outdoors**
- **Port H-free**
- **Home**

Your phone is always set to one of the six profiles. When you buy your phone, it is set to the **Normal** profile. You cannot create more profiles, but you can change the name of a profile, change the settings included in a profile or add an accessory to a certain profile.

**Note!** *You cannot change the name of the ‘Normal’ profile and you cannot add an accessory to the ‘Normal’ profile.*

**Tip!** *To find out which profile you are currently in, slide the volume key upwards or downwards in standby mode.*

The table below shows the settings of each profile.

	Normal	Meeting	In Car	Outdoors	Port H-free	Home
Ring Volume	5(6)	0(6)	6(6)	6(6)	6(6)	5(6)
Increasing Ring	Off	Off	Off	Off	Off	Off
Vibrating Alert	On	On if Silent	Off	On	On	Off

	Normal	Meeting	In Car	Outdoors	Port H-free	Home
Accept Calls	From All	From All	From All	From All	From All	From All
Divert Calls	Off	Off	Off	Off	Off	Off
Calling Cards	None	None	None	None	None	None
Light	Auto	Auto	On	Auto	Auto	Auto
Line 1/2	Line 1	Line 1	Line 1	Line 1	Line 1	Line 1
Silent	Off	On	Off	Off	Off	Off
Auto Activation	Off	Off	On	Off	On	Off
Accessories	-	-	Car Hands-free	-	Handsfree	-

## Choosing a Profile Manually

You can always choose to use another profile than the one you currently use.

*To choose a profile manually*

1. Scroll to **Settings, YES, Profiles, YES, Select Profile, YES.**
2. Select the profile you want. Press **YES.**

You can also find **Select Profile** in the **My Shortcuts** menu.

**Note!** *A profile with no accessories associated, such as 'Meeting' or 'Normal', must be chosen manually, even if automatic activation is on. The profiles associated with accessories can be chosen automatically.*

*See "Accessories" on page 128.*

## Changing the Profile Settings

You can re-name the pre-programmed profiles and change the settings according to your wishes.

*To change the name of a profile*

1. Scroll to **Settings, YES, Profiles, YES, Profile Name, YES.**
2. Enter a new name and press **YES.**

*To change a profile setting*

1. Scroll to **Settings, YES, Profiles, YES, Edit Profile, YES.**  
A list of the profile settings appears.
2. Select a setting by pressing **YES.**
3. Change the profile setting according to your wishes.

For information, see relevant chapters: "Personalizing Your Phone" on page 43, "Security for Your Phone and Subscription" on page 75,

"Security for Your Phone and Subscription" on page 75 and "Accessories"



on page 128.

If you change a setting which is included in a certain profile, the profile is updated. With the **Reset Profiles** function, you can change all profile settings back to the way they were set when you bought your phone.

*To reset the profile settings*

1. Scroll to **Settings, YES, Profiles, YES, Reset Profiles, YES**.
2. Answer **YES** if you are sure you want to reset all profiles.

# Accessories

By using your phone together with Ericsson original accessories, you have access to a large range of useful features, in addition to those you have when the phone is used separately.

- Automatic divert of incoming calls when the phone is placed in a desktop charger
- Portable handsfree calling
- Handsfree calling in your car

**Note!** *This is on condition that the specific accessories exist in your market.*

The **Profiles** concept, see “The Profile Concept” on page 125, allows you to instruct your phone to activate a specific profile automatically when used together with a certain accessory. On the following pages you can find information on how different accessories interact with your phone and its different profiles.

Every time you disconnect your phone from the accessory, the profile is changed to the one which was active before, if the current profile was activated automatically.

For the profiles associated with an accessory to change automatically, the automatic activation must be on. When you buy your phone, the automatic activation is set to **On** for the vehicle and portable handsfree units. If you wish, you can turn it off.

*To turn automatic activation on or off*

1. Scroll to **Settings, YES, Profiles, YES, Auto Activation, YES.**
2. Select **On** or **Off.**

## Desktop Charger


If you use your phone with a specific **Ericsson Desktop Charger** you have access to some useful features besides ordinary charging. You can choose to make the phone switch to the **Home** profile automatically and divert all calls to your home number when you place your phone in the charger.

To be able to use these features, you need to make some settings the first time you place your phone in the desktop charger.





## Placing the Phone in the Desktop Charger

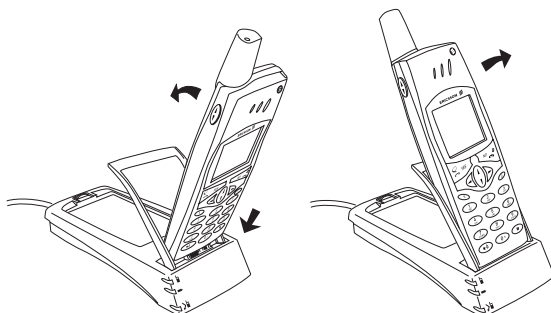

1. Place the phone in the desktop charger as shown in the picture and press downwards to attach the phone.
2. To detach the phone from the charger, pull the phone towards you and upwards.

**Note!** For further instructions on how to connect the desktop charger, please contact your local Ericsson retailer.

### *To associate the desktop charger with a profile and a divert number*

1. Place the phone in the desktop charger. The message **Choose profile?** appears in the display.
2. Press **YES**. (If you press **NO**, the desktop charger will not be associated with any profile).
3. Select a profile that you want to associate with the desktop charger, for example the **Home** profile. Press **YES**.
4. The message **Divert when connected to accessory?** appears. Press **YES**. This means that you want to divert your calls, for example, to your home number, when you place the phone in the desktop charger. (If you press **NO**, your calls will not be diverted).
5. Enter a phone number including the area code (for example your home number) and press **YES**.  
A number you used before may be suggested to you. Press **YES** if you want to choose that number, or enter another number.
6. The message **Automatic activation on?** appears. Press **YES**.  
The message **Profile: Home** appears to confirm your choice.

You can also make these settings later, if you wish. In that case, you need to add the desktop charger to the **Home** profile, or another profile. See "To add an accessory to a profile" on page 134. You may set the divert number in the

**Edit Profile** submenu, where all profile settings are included (**Settings, YES, Profiles, YES, Edit Profile, YES**). See “Changing the Profile Settings” on page 126.

**Note!** *The phone must be switched on and the automatic activation must be on for the phone to switch profile automatically when connected to an accessory.*

**Tip!** *If you have several desktop chargers, each charger can be associated with a specific profile or all chargers can be associated with the same profile.*

## Portable Handsfree

When you connect a specific **Ericsson Portable Handsfree** to your phone, the **Port H-free** profile is set automatically. This means that all profile settings are set to the values specified for the **Port H-free** profile. See “The Profile Concept” on page 125.

**Tip!** *If you do not want your phone to switch profile automatically when you connect it to the Portable Handsfree, you need to turn the Auto activation off. To do this, manually select the ‘Port H-free’ profile, and set the Auto activation to off.*

### Using the Portable Handsfree

*To answer an incoming call*

- When the phone rings, press the button on your **Portable Handsfree** once.

**Tip!** *You can also answer a call by using your voice. See “Voice Answering” on page 114.*

*To end a call*

- Press the button on your **Portable Handsfree** once.

If the **Call Waiting** service is on, see “The Call Waiting Service” on page 83, you can answer a second call by pressing the button on your **Portable Handsfree**.

*To answer a second call*

1. Press the button on your **Portable Handsfree** once to answer the waiting call. The current call is now put on hold.
2. When you press the button on your **Portable Handsfree** again, the second call is disconnected and the first call is retrieved automatically.

*To voice dial using the Portable Handsfree*

1. Press and hold the button on your **Portable Handsfree** until you hear a tone from the phone.
2. Release the button and say a name (voice label) that you have recorded previously.  
The name is played back to you and the call is connected.


**Note!** *Before you can use voice dialling, you need to record voice labels for entries in your phone book. See “Preparing Your Phone for Voice Dialling” on page 112.*

*For best performance when voice dialling and voice answering with a Portable Handsfree unit, we recommend recording your voice labels when connected to a Portable Handsfree unit.*

### Vehicle Handsfree

When you connect an **Ericsson Advanced Vehicle Handsfree** to your phone, the **In Car** profile is set automatically. This means that all profile settings are set to the values specified for the **In Car** profile. See “The Profile Concept” on page 125.

#### Placing the Phone in the Vehicle Handsfree

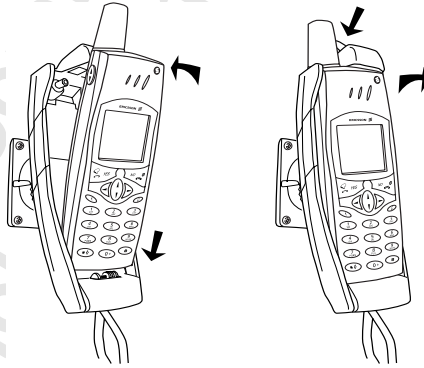

1. Place the phone in the holder as shown in the picture and press
2. backwards to attach it. To release the phone, press the button on top of the holder.

Your **Advanced Vehicle Handsfree** should be installed by professional personnel. For more information, please contact your local Ericsson retailer.

**Tip!** *If you do not want your phone to switch profile automatically when you connect it to the Advanced Vehicle Handsfree, you need to turn the Auto Activation off. To do this, manually select the 'In Car' profile and set the Auto Activation to off.*

### **Voice Control**

The **Advanced Vehicle handsfree** unit is equipped with its own voice control system which allows you to:

- voice dial - call someone by simply saying the name
- answer and reject calls using your voice

Before you can use voice dialling, you need to record voice labels to entries in your phone book and the **Voice Dialling** function needs to be on.

See "Preparing Your Phone for Voice Dialling" on page 112. To use voice dialling with the **Advanced Vehicle handsfree** unit, you need to record the voice labels in the car. Voice labels for phone book entries recorded in the phone will not be available in the car, and vice versa.

The vehicle handsfree can store up to 100 voice labels. The icons for the phone book entries with voice labels saved when connected to a vehicle handsfree kit look slightly different from those that you save in the phone, see margin.

#### *To voice dial using the Vehicle Handsfree*

1. Slide and hold the volume key or press **YES** until you hear a tone.
2. Release and say a name (voice label) that you recorded in the car earlier. (Use the microphone of the vehicle handsfree unit.)

The name is played back to you, and the call is connected.

#### *To answer a call using your voice*

- See "Voice Answering" on page 114.

## **Handsfree Types**

If you use an **Advanced Vehicle Handsfree Unit**, you can choose between two different ways in which your phone can handle the speech. This is done in the **Handsfree** sub-menu.

### **Basic Handsfree**

**Basic Handsfree** means that the phone handles the call in semi-duplex mode.

This means that you cannot speak at the same time as the person at the other end of the line. Use this alternative only if **Full Handsfree** does not work properly.

## Full Handsfree

**Full Handsfree** means that the phone handles the call in full duplex mode. This considerably increases the quality of speech, since you do not have to wait until it is your turn to speak.

For this function to work properly, your phone adapts to the sound environment around the handsfree equipment. This adaptation might take a few calls. During this learning phase, the person you are talking to might hear an echo of his or her own voice (because the sound goes from the speaker into the microphone again). However, this disappears as the other person speaks. If the echo lasts longer than the first few calls, try **Basic Handsfree** instead.

**Tip!** *Set the handsfree type to 'Full Handsfree' first. If speech quality is poor, set the 'Basic Handsfree' type instead.*

*To set the handsfree type*

1. Scroll to **Settings, YES, Handsfree, YES, Handsfree Type, YES**.
2. Select the type you want. Press **YES**.

## Answering Mode

When using a portable or vehicle handsfree unit, you may choose to answer incoming calls in either of two ways: **Any Key** or **Auto**.

- **Any Key:** If this function is turned on, you can answer an incoming call by pressing any key, except the **NO** key.
- **Auto:** If this function is turned on, an incoming call is answered automatically after one ring signal.

*To set an answering mode*

1. Scroll to **Settings, YES, Handsfree, YES, Answering Mode, YES**.
2. Select a mode. Press **YES**.

 
If you choose the **Normal** alternative, you have to answer calls as normal.

**Tip!** *You can also answer calls by using the Voice Answering function. See "Voice Answering" on page 114.*

## Adding Accessories to a Profile

You can add one or many accessories to a profile. For example, if you usually use a portable handsfree together with a specific charger, you may add the charger to the **Port H-free** profile. The phone recognizes the accessory as it is connected and switches profile automatically.

**Note!** *It is the first accessory which is connected to the phone which switches the profile. Only profiles associated with accessories can be activated*



automatically. You must first choose the profile manually to which you want to add an accessory, see “To choose a profile manually” on page 126.

*To add an accessory to a profile*

1. Scroll to **Settings, YES, Profiles, YES, Accessories, YES.**

Now you are in the list of the accessories which are already associated with the profile.

2. Select **Add accessory?**

Now you are in the list of all accessories that can be associated with the profile.

3. Select an accessory.

4. The question **Automatic activation on?** appears, if automatic activation is not on already.

Press **YES** to turn automatic activation on, which means that the profile will be chosen automatically when the accessory is connected.

**Note!** *You can associate 12 accessories with a profile, besides the portable and vehicle handsfree units. Any accessory above this number will work as ordinary non-profile accessories. You cannot have the same accessory associated with several profiles.*

*To remove an accessory from a profile*

1. Scroll to **Settings, YES, Profiles, YES, Accessories, YES.**

2. Scroll to the accessory that you want to remove and press **C.**

3. **Delete?** appears. Press **YES.**

# Online Services

Imagine that you hear about a new service that your network operator is offering. You call your operator, explain that you want to subscribe to the service and suddenly, within seconds, you have a new menu in your phone that instantly lets you use the new service.

You do not need upgraded software for your phone, but you may need to visit your network operator to get a new SIM card. The rest is all taken care of over the air.

This is just one example of the added value services that are made possible through the **Online Services**.

**Note!** *Your phone does not support all services offered by the Online Services.*

## What is Online Services?

The **Online Services** is the network operators' way of offering customized services, independently of mobile phones and mobile phone manufacturers.

### Compatibility

Added value services based on the **Online Services** require two things in order to work:

- a mobile phone that supports the **Online Services**.  
Your Ericsson phone is such a phone.
- a network operator offering the **Online Services**.

**Note!** *The Online Services on the SIM are designed and run by network operators and not by mobile phone manufacturers. If you require further information about the Online Services, please contact your network operator.*

## New Menu

A SIM card which supports the **Online Services** works in the same way as a normal SIM card.

When you have inserted your SIM card and turned on your phone, your network operator may download data to your SIM card. After the first data download and after restarting your phone, the proactive SIM offers a new menu in the phone. The menu offers you new features and services, which can be used instantly.

In your phone, this menu appears under the **Extras** menu. There can only be one new sub-menu entry under the main menu, but there can be several sub-menus under the new sub-menu entry.

*To enter your new menu system*

1. Scroll to **Extras**, **YES**, **Online Services**, **YES**.

If any sub-menus appear, select the one that you want and press **YES**.

2. Press **NO** to go back to the standby menu.

**Note!** *Some operators may not use the name Online Services for this menu. Please consult your network operator for more information.*

### Proactive SIM

The **Online Services** provides a proactive SIM. This means that the SIM can tell the phone to take certain actions. These actions could include:

- showing text from the SIM in the phone's display
- setting up a call to a number on the SIM
- initiating a dialogue with the user

**Note!** *All these actions are taken by the SIM card and, consequently, they have nothing to do with the phone's software.*

### Data Download to the SIM Over the Air

Your network operator may at any time download new data to your SIM card over the air. This new data could consist of new features or a new menu.

### Resetting your SIM Card

When the operator updates your SIM card over the air, the phone notifies you by showing a message in your display. You also hear a beep.

In order for your new SIM settings to take effect, you have to turn off your phone and then turn it on again.

**Note!** *After a data download the phone may not work and you will not be able to use it until you restart it. This feature is operator dependent and will probably not happen very often.*

### SIM Card Initiated Features

The SIM card may prompt you to make a call. This could happen even if you are already engaged in a call.

When this happens, the phone will notify you by producing a sound and showing a message in the display.

- If you are not engaged in a call, a message is shown in the display, asking you whether you want to confirm and make the SIM card initiated call.



- If you want to make the SIM card initiated call, press **YES**.
- If you do not want to make the SIM card initiated call, press **NO**.
- If you are already engaged in a call, you are asked either to put the current call on hold or to end it.  
A message appears in the display, asking you whether you want to confirm and make the SIM card initiated call.
  - If you want to make the SIM card initiated call, press **YES**.
  - If you do not want to make the SIM card initiated call, (you may want to continue with the ongoing call) press **NO**.

### **Send a SIM Card Initiated SMS**

The SIM card may set up an SMS (text message) and ask you to send this message, for example by the question **Send message now?**. Press **YES** if you want to send the SMS.

### **Details of Services Offered**

All services and functions that come with the **Online Services** are network dependent. Please contact your network operator for details of services offered by the **Online Services**.

*Not for Commercial Use  
Ericsson Mobile Communications AB*

## Additional Information

<b>Quick Keys</b>	140
<b>Troubleshooting</b>	142
<b>Ericsson Mobile Internet</b>	144
<b>The Online Version of this User's Guide</b>	145
<b>Technical Data</b>	146
<b>Glossary</b>	147
<b>Guidelines for Safe and Efficient Use</b>	152
<b>Warranty</b>	158
<b>Declaration of Conformity</b>	160
<b>Index</b>	161

# Quick Keys

Several keys on your phone can be used to optimize the phone's functionality and decrease the number of times you need to press a key. Some of the key combinations demand that your phone is in a certain mode and some can be made from the standby mode.

The table describes some of the most useful key combinations.

To...	Do this:	Mode:
enter the <b>Call List</b>	press <b>YES</b>	when in standby
voice dial	press and hold <b>YES</b>	when in standby
voice dial	slide and hold the volume key upwards or downwards	when in standby
call your <b>Voice Mail</b>	press and hold <b>1</b>	when in standby
enter the <b>+</b> sign to make an international phone call	press and hold <b>0</b>	when in standby
set the phone silent	press and hold <b>C</b>	when in standby
mute the microphone	press and hold down <b>C</b>	during a call
reach a phone book entry	press the position number and <b>#</b>	when in standby
reach a phone book entry beginning with a specific letter	press and hold any of the keys <b>2-9</b>	when in standby
speed dial	press any of the number keys <b>1-9</b> and <b>YES</b>	when in standby
enter <b>Find and Call</b>	press and hold <b>▷</b>	when in standby
put a call on hold	press <b>YES</b>	during a call
retrieve a call	press <b>YES</b> again	during a call
reject a call	quickly slide the volume key upwards or downwards twice	when receiving a call
enter the menu system	press <b>◀</b> or <b>▷</b>	when in standby
move through menus or lists	slide (and hold) the volume key upwards or downwards	when in the menus
select a menu or setting	press <b>YES</b>	when in the menus
delete an item	press and hold <b>C</b>	when in lists
go back to standby	press and hold <b>NO</b>	when in the menus

To...	Do this:	Mode:
enter the first sub-menu of the <b>My Shortcuts</b> menu	press and hold <	when in standby
find out which profile you are using	slide the volume key upwards or downwards	when in standby
change the language to <b>Automatic</b>	press < <b>8888</b> >	when in standby
change the language to <b>English</b>	press < <b>0000</b> >	when in standby
reach the second letter or character of a key	slide the volume key upwards and press any of the number keys	when entering letters
reach the third letter or character of a key	slide the volume key downwards and press any of the number keys	when entering letters
change between lower- and upper-case letters	press and hold *	when entering letters
enter numbers	press and hold any of the number keys	when entering letters
enter a space	press <b>1</b> once	when entering letters
enter a question mark	slide the volume key downwards and press <b>1</b>	when entering letters
enter the @-sign	slide the volume key downwards and press <b>0</b>	when entering letters
enter a p (pause)	press and hold *	when saving codes
erase letters and numbers	press <b>C</b>	when entering letters and numbers

A quick way to move through the menus is to use **shortcuts**. You simply enter the number of the menu or sub-menu to which you want to go. See “Using Shortcuts” on page 26 and “To set the key sound” on page 27.

To quickly and easily reach the settings you use most, you can place your favourite settings in the menu **My Shortcuts**. See “My Shortcuts” on page 28.

For more information about **key functions**, see “Key Functions” on page 14, “Moving through the Menus” on page 26 and “Entering Letters” on page 31.

# Troubleshooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of the problems you encounter you can easily correct yourself.

## Error Messages

Insert card

### Insert Card

There is no SIM card in the phone or you may have inserted it incorrectly. Insert a SIM card. See “The SIM Card” on page 7.

Insert correct  
SIM card

### Insert Correct SIM Card

The phone is set to only work with certain SIM cards. Insert the correct SIM card.

SOS calls only

### SOS Calls Only

You are within range of a network but you are not allowed to use it. However, in an emergency, some operators allow you to call the international emergency number 112. See “Making Emergency Calls” on page 16.

No network

### No Network

There is no network within range or the received signal is too weak. You have to move to get a signal that is strong enough.

Wrong PIN

### Wrong PIN, Wrong PIN2

You have entered your PIN or PIN2 incorrectly.

- Enter the correct PIN or PIN2, and press **YES**. See “The SIM Card Lock” on page 75.

Codes do not  
match

### Codes do not match

When you want to change a security code (for example your PIN) you have to confirm the new code by entering it again. The two codes that you have entered do not match. See “The SIM Card Lock” on page 75.

PIN blocked

### PIN/PIN2 Blocked

You have entered your PIN or PIN2 incorrectly three times in a row. To unblock, see “The SIM Card Lock” on page 75.

PUK blocked-  
Contact operator

Phone locked

Phone lock code:

Number not  
permitted

Charging,  
alien battery

### **PUK blocked- Contact operator**

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row. Contact your network provider or service operator.

### **Phone Locked**

The phone is locked. To unlock the phone, see “The Phone Lock” on page 76.

### **Phone lock code:**

Your phone comes with the phone lock code, **0000**. You can change it to any four-to eight-digit code. See “The Phone Lock” on page 76.

### **Number not permitted**

The **Fixed Dialling** function is on and the number you have dialled is not part of your fixed numbers list. See “Fixed Dialling” on page 79.

### **Charging, alien battery**

The battery you are using is not an Ericsson-approved battery and is charging slowly for safety reasons.

### **No Indication of Charging**

When you start charging a battery that is empty or a battery that has not been used for a long time, it may take a while until the indicator on the top of the phone shows a red light and the battery meter appears.

## **The Phone Cannot Be Switched On**

### **Handheld Phone**

- Recharge or replace the battery. See “The Battery” on page 8.

### **Handsfree Phone in Vehicle**

- Make sure that the phone is properly inserted into its holder. See “Vehicle Handsfree” on page 131.

# Ericsson Mobile Internet

When you are on the move and in need of communication and information, the **Mobile Internet** is the answer.

The **Mobile Internet** is a service supplied by Ericsson to make it easier for you to communicate and receive information quickly, wherever you are. It gives you access to various messaging services, on-line customer services, user manuals and other useful information. With the **Mobile Internet** you can also download communications software to ensure you get the best out of your Ericsson products.

The Ericsson Mobile Internet address is:

<http://mobileinternet.ericsson.com>



# The Online Version of this User's Guide

On the CD that comes with your phone, you can find an online version of this User's Guide. This can be handy when you quickly want to look something up and you do not have the paper version of the User's Guide nearby.

When you run the installation program from the CD, as described in "To install the built-in modem on the PC" on page 63, this User's Guide is installed as a file on your computer, in the language you choose during installation. If you cannot find your native language on the CD, you can follow the steps below in order to install the correct version.

## *To change the language of the Online User's Guide*

1. Insert the CD in your CD drive. The CD should start automatically. If it does not, you can start it manually by choosing **Run** from the **Start** menu, and typing `d:\start.exe` (change the D drive if your CD drive is named differently).
2. On the CD-Browser, click the **Help** link.
3. Click **SelectLang.exe** and then select the language you want to use.  
This starts the re-installation of the online version of this User's Guide.

When you have run the installation program from the CD you can usually find the User's Guide on your computer in:

C:/Program Files/Ericsson/Ericsson Communications Suite.

# Technical Data

## General

Product name	R320
System	GSM 900/GSM1800
SIM card	Small plug-in card, 3V or 5V type
Type number	110 1201-BV

## Dimensions

Size	130 x 51 x 15 mm
Weight with Ultra Slim battery	95g
Weight without battery	75g

## Ambient temperatures

Max	+55°C
Min	-10°C

## The built-in modem

Standards for transfer	R320 supports secondary implementation of standard IrDA and IrDA-Ultra.
Data transmission rate	9,600 bps without compression because communication via GSM is limited to 9,600 bps. With V.42bis compression you can reach data transmission rates of up to 38,400 bps.
Fax	* Up to 9,600 bps * Group III, class 1 and 2. Class 2 is recommended.
Power consumption	Using the built-in modem for infrared communication increases battery consumption depending on what sort of communication you have established (fax, e-mail, etc.).
RS232	You can use an RS232 cable for transfer via the built-in modem.



## CLASS 1 LED PRODUCT.

The IrDA Feature Trademark is owned by the Infrared Data Association and is used under license there from.

# Glossary

## **Advice of Charge (AoC)**

enables you to monitor the cost of calls made from your mobile phone. Details of the last call and total calls made are shown in the phone display. To use this service, it must be supported by your network.

## **Area Information (AI)**

is a service that allows you to receive messages about pre-set topics i.e. weather forecasts, road reports, etc. To use this service, it must be supported by your network.

## **Calling Line Identification (CLI)**

shows the number of the person calling you in your mobile phone display. You can then make an informed choice as to whether or not to take the call. Bear in mind that not all numbers can be displayed. To use this service, it must be supported by your network.

## **Divert**

enables you to forward calls to another number, for example your voice mail or home phone.

## **DTMF or Touch Tone**

Dual Tone Multi Frequency signal – codes sent as tone signals. Used for telephone banking, accessing an answering machine, etc.

## **Dual Band GSM 900/1800**

Your phone is a dual band phone, which means that you can use your phone on two different kinds of networks – the GSM 900 and the GSM 1800 (also called PCN or DCS 1800) systems.

A dual band phone that combines the two standards can use both frequencies. This increases capacity in densely populated urban areas, and consequently improves the coverage offered by your network operator. It also offers you enhanced international roaming, thanks to the additional networks now available when you are travelling.

The switching between the two systems is done automatically and seamlessly, which means that you can use your phone without ever having to consider

which system is best at the time. This is taken care of by the networks. However, you should note that the functions offered and the network coverage differ depending on your choice of operator and/or subscription.

**Enter**

is used for keying in letters or numbers from the keypad.

**Fixed Numbers**

enables you to allow only numbers beginning with certain pre-defined figures to be dialled from your mobile phone. The service is protected by your PIN2. To use this service, it must be supported by your network.

**Full Duplex**

in handsfree equipment means that both parties on the phone can talk at the same time. The opposite is simplex mode when one party talks and the other must wait for his/her turn.

**Fax Class**

Standards for fax transmission are set as classes. Class I and II allow data transfer speeds of between 2400 up to 9600 bps.

**GSM 900**

GSM is the world's most widely-used digital network, now operating in over 100 countries around the world, particularly in Europe and Asia-Pacific.

The Global System for Mobile Communications is the most-widely used digital mobile phone system. The GSM systems family also includes GSM 1800 and GSM 1900. There are different phases of roll-out for the GSM system and GSM phones are either phase 1 or phase 2 compliant.

**GSM 1800**

also known as DCS 1800 or PCN, is a digital network working on a frequency of 1800 MHz. It is used in Europe and Asia-Pacific.

**International (+) Sign**

mobile phone (+) sign that automatically adds the correct international code in front of a telephone number when dialling out of a country. You then have to enter the code of the country you are calling.

**International Roaming**

a mobile phone feature that allows you to switch between networks offering coverage abroad. Your mobile phone automatically selects a network or system (your home network), but if it is not in range or unavailable, it selects

another system. International roaming is based on agreements between network operators in different countries.

**Line 1/Line 2**

see *Two Line Service*.

**Menu System**

is where you can access all the phone's functions. The menus can be accessed and viewed by scrolling with the arrow keys.

**Micro browser**

accesses and displays the Internet contents in your mobile phone, just as an ordinary browser does in your computer. The micro browser uses small file sizes and the bandwidth of the wireless-handheld network.

**Network**

a mobile phone network or system consists of a network of cells or areas. A radio base station serves each cell from where calls are forwarded to and received from your mobile phone by wireless radio signals.

**Network Operator**

to be able to use your phone, you need a subscription to a network. You get this subscription from a network operator, together with a SIM card that you need to use with your phone.

**Phone Book**

a memory in your mobile phone or SIM card where phone numbers can be stored and accessed by name or position.

**PC-Card**

also called PCMCIA, the PC-card can act as a modem and connect your mobile phone to a laptop or organizer, enabling data and fax transmission. The thin type II card is the most common size.

**PIN**

Personal Identification Number – a code used for all GSM-based phones to establish authorization for access to certain functions or information. The PIN code comes with your subscription.

**PIN2**

Personal Identification Number 2 – an authorization code which is used only for special services. The PIN2 code comes with your subscription.

**PUK**

Personal Unblocking Key Code – used to unlock a blocked SIM card. This comes with your subscription.

**Restrict Calls**

enables you to restrict or bar certain or all types of calls to and from your mobile phone, i.e. outgoing calls, outgoing international calls, incoming calls. Barring is switched on with a personal code. To use this service, it must be supported by your network.

**Roaming**

within your home network, this means that your mobile phone automatically sets up communication procedures with different radio base stations when on the move.

**Scroll**

move between the menus and functions by pressing ,  or .

**Select**

choose a menu or function by pressing the **YES** key.

**Semi-Duplex**

in handsfree equipment, full duplex means that the connection is open for both parties to talk simultaneously. The opposite, simplex, is when it is open to one at a time. Semi-duplex gives close to, but not complete, duplex functionality.

**Service Provider**

a company that provides services and subscriptions to mobile phone users.

**Short Message Service (SMS)**

allows messages of up to 160 characters to be sent and received via the network operator's message centre to your mobile phone. Messages are stored if the phone is off or out of reach ensuring that they reach you. To use this service, it must be supported by your network.

**SIM card**

Subscriber Identity Module card – a card that must be inserted in any GSM-based mobile phone. It contains subscriber details, security information and memory for a personal directory of numbers. The card can be a small plug-in type or credit card-sized but both types have the same functions. Your phone uses the small plug-in card.

**Subscription**

is the contract that you have with the service/network provider. To use your phone, you need to have a subscription to a network. You get a SIM (Subscriber Identity Module) card with your subscription. The services included in your subscription depend on your choice of operator and/or subscription. So some of the services and functions described in this manual may not be accessible to you. If you want a complete list of the services included in your subscription, please contact your network operator.

**Two Line Service**

enables you to have two lines and two different phone numbers on one subscription for your mobile phone. This makes it possible to have separate numbers for business and personal calls. To use this service, it must be supported by your network.

**WAP™**

The Wireless Application Protocol (WAP) is an open, global specification that makes it possible for mobile users with wireless devices to access and interact with information and services easily.

# Guidelines for Safe and Efficient Use

**Note!** *Read this information before using your mobile phone.*

## Product Care and Maintenance

Your mobile phone is a highly sophisticated electronic device. To get the most out of your mobile phone read this text about product care, safe and efficient use.

## Product Care

- Keep your mobile phone dry.
- Avoid exposing your mobile phone to extreme hot or cold temperatures.
- Avoid placing your mobile phone close to lit candles, cigarettes, naked flames or any heat source.
- As with all sophisticated electronic devices rough treatment could damage your mobile phone.
- Only use a soft damp cloth to clean your mobile phone.
- Do not paint your mobile phone as the paint could obstruct the earphone, microphone or any moveable parts and prevent normal use.
- Do not attempt to disassemble your mobile phone, a broken warranty seal will void the warranty. The phone does not contain consumer serviceable components. Service should only be performed by Certified Service Partners.
- Only use Ericsson original accessories. Failure to do so may result in loss of performance, damage to the phone, fire, electric shock or injury. The warranty does not cover product failures which have been caused by use of non-Ericsson original accessories.
- Treat your mobile phone with care, keep it in a clean and dust free place.

## Antenna Care and Replacement

- To avoid impaired performance please ensure your mobile phone's antenna is not bent or damaged.
- Do not remove the antenna yourself. If your phone's antenna is damaged please take it to a Certified Service Partner.



- Only use an antenna that has been specifically designed for your phone. Unauthorised antennas, modifications, or attachments could damage the phone and may violate the appropriate regulations causing loss of performance and radio frequency (RF) energy above the recommended limits.

### Efficient Phone Operation

To enjoy optimum performance with minimum power consumption please:

- Hold the phone as you would any other telephone. While speaking directly into the mouthpiece, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/retractable, it should be extended during a call.
- Do not hold the antenna when the phone is in use. Holding the antenna affects call quality, may cause the phone to operate at a higher power level than needed and shorten talk and standby times. If your mobile phone is equipped with an infrared eye, never direct the infrared ray at anyone's eye and make sure that it does not disturb any other infrared units.

### Radio Frequency Energy

Your mobile phone is a radio transmitter and receiver. When the phone is turned on, it receives and transmits radio frequency (RF) energy. Depending on the type of mobile phone you possess, it operates on different frequency ranges and employs commonly used modulation techniques. The system that handles your call when you are using your phone controls the power level at which your phone transmits.

### Exposure to Radio Frequency Energy

The International Commission on Non-Ionising Radiation Protection (ICNIRP), supported by the World Health Organisation (WHO), published during 1996 a statement and in 1998 guidelines which set recommended limits for exposure to RF fields from handheld mobile telephones. According to ICNIRP statement, which is based on the available body of research, there is no evidence that mobile terminals meeting the recommended limits can cause any adverse health effects. All Ericsson telephones conform to the ICNIRP guidelines and other international exposure standards, such as:

- CENELEC European Pre-standard ENV50166-2:1995 (Europe)
- ANSI/IEEE C95.1-1992 (USA, Asia-Pacific)
- AS/NZS 2772.1 (Int):1998 (Australia, New Zealand)

## Driving

Check the laws and regulations on the use of mobile phones in the areas where you drive. If you are going to use your phone while driving, please:

- Give full attention to driving.
- Use an Ericsson Vehicle Handsfree Solution, if available. Law in many countries requires vehicle Handsfree Solution. Read the installation instructions carefully before installing a vehicle Handsfree Solution.
- Pull off the road and park before making or answering a call if driving conditions so require.

RF energy may affect some electronic systems in motor vehicles such as car stereo, safety equipment etc. In addition, some vehicle manufacturers do not allow use of mobile phones, unless the installation is supported by a handsfree kit with an external antenna, in their vehicles. Check with your vehicle manufacturer's representative to be sure that your mobile phone will not affect the electronic systems in your vehicle.

## Vehicles Equipped with an Air Bag

An air bag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Electronic Devices

Most modern electronic equipment, for example equipment in hospitals and cars, is shielded from RF energy. However, certain electronic equipment is not, therefore:

- Do not use your mobile phone near medical equipment without requesting permission.

Mobile phones may affect the operation of some implanted cardiac pacemakers and other medically implanted equipment. Pacemaker patients should be aware that the use of a mobile phone very close to a pacemaker might cause the device to malfunction. Avoid placing the phone over the pacemaker, i.e. in your breast pocket. When using the phone, place it at your ear opposite the pacemaker. If a minimum distance of 15 cm is kept between the phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your phone.

Contact your cardiologist for more information.

Some hearing aids might be disturbed by mobile phones. In the event of such disturbance, you may want to consult your service provider, or call the customer services line to discuss alternatives.

### **Aircraft**

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

To prevent interference with communication systems, you must not use your mobile phone while the plane is in the air.

### **Blasting Areas**

Turn off your mobile phone when in a blasting area or in areas posted “turn off two-way radio” to avoid interfering with blasting operations. Construction crews often use remote control RF devices to set off explosives.

### **Potentially Explosive Atmospheres**

Turn off your mobile phone when in any area with a potentially explosive atmosphere. It is rare, but your phone or its accessories could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fuelling areas, such as petrol stations, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

### **Power Supply**

- Connect AC (Power supply) only to designated power sources as marked on the product.
- To reduce risk of damage to the electric cord, remove it from the outlet by holding onto the AC adapter rather than the cord.
- Make sure the cord is positioned so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.
- To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it.
- The charger must not be used outdoors or in damp areas.

## Children

Do not allow children to play with your mobile phone since it contains small parts that could become detached and create a choking hazard.

## Emergency Calls

### **IMPORTANT!**

This phone, like any mobile phone, operates using radio signals, cellular and landline networks as well as user-programmed functions, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (for example medical emergencies).

Remember, in order to make or receive calls the phone must be switched on and in a service area with adequate cellular signal strength. Emergency calls may not be possible on all cellular phone networks or when certain network services and/or phone features are in use. Check with your local service provider.

## Battery Information

### **New Batteries**

The battery delivered with your phone is not fully charged.

### **Battery Use and Care**

A rechargeable battery has a long service life if treated properly. A new battery, or one that has not been used for a long period of time could have reduced capacity the first few times it is being used.

- The talk and standby times depend on the actual transmission conditions when using the phone. If the phone is used nearby a base station less power is required and talk and standby times are prolonged.
- Use only Ericsson original batteries and the AC/DC adapter supplied with your battery charger. Using non original Ericsson accessories could be dangerous and the warranty does not cover product failures which have been caused by use of non-Ericsson original accessories.
- Do not expose your battery to extreme temperatures, never above +60°C (+140°F). For maximum battery capacity use your battery in room temperature. If the battery is used in cold temperatures the battery capacity will be reduced.
- The battery can only be charged when the temperature is between +5°C (+41°F) and +45°C (+113°F).
- Turn off your phone before removing the battery.
- Use only the battery for the intended purpose.

- Do not attempt to take a battery apart.
- Do not let the metal contacts on the battery touch another metal object. This could short-circuit and damage the battery.
- Do not expose a battery to open flames. This could cause the battery to explode.
- Do not expose a battery to liquid.
- Do not allow the battery to be placed into the mouth. Battery electrolytes may be toxic if swallowed.

### Recycling Your Battery

The battery must be disposed of properly and should never be placed in municipal waste. Check local regulations for proper disposal instructions.

# Warranty

Thank you for purchasing this Ericsson Product. To get maximum use of the features of your new product we recommend that you follow a few simple steps:

- Read the Guidelines for safe and efficient use.
- Read all the terms and conditions of your Ericsson Warranty.
- Save your original receipt. You will need it for warranty repair claims.

Should your Ericsson Product need warranty service, you should return it to the dealer from whom it was purchased or contact your local Ericsson helpdesk to get further information.

## Our Warranty

Ericsson warrants this Product to be free from defects in material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year.

All accessories for the Product are covered by a warranty for a period of one (1) year from the date of its original purchase by a consumer.

## What We Will Do

If, during the warranty period, this Product fails to operate under normal use and service, due to improper materials or workmanship, Ericsson subsidiaries, authorised distributors or authorised service partners will, at its option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

## Conditions

1. The warranty is valid only if the original receipt issued to the original purchaser by the dealer, specifying the date of purchase and serial number, is presented with the product to be repaired or replaced. Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the product from the dealer.
2. If Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may be via functionally equivalent reconditioned

units. Replaced faulty parts or components will become the property of Ericsson.

3. This warranty does not cover any failure of the Product due to normal wear and tear, misuse, including but not limited to use in other than the normal and customary manner, in accordance with Ericsson's instructions for use and maintenance of the Product, accident, modification or adjustment, acts of God, improper ventilation and damages resulting from liquid.
4. This warranty does not cover product failures due to repair installations, modifications or improper service performed by a non-Ericsson authorised service workshop or opening of the product by non-Ericsson authorised persons.
5. The warranty does not cover product failures which have been caused by use of non-Ericsson original accessories.
6. Tampering with any of the seals on the products will void the warranty.
7. THERE ARE NO OTHER EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL ERICSSON BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS. TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries do not allow the exclusion or limitation of incidental or consequential damage, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country.

# Declaration of Conformity

We, **Ericsson Mobile Communications AB** of  
**Nya Vattentorget**  
**221 83 Lund, Sweden**

declare under our sole responsibility that our product

**Ericsson type 110 1201-BV**

to which this declaration relates, conforms to the appropriate standards  
TBR 19, TBR 20, TBR31, TBR32, ETS 300 342-1 and EN 60950,  
following the provisions of Teleterminals directive **91/263/EEC**,  
EMC directive **89/336/EEC**, and Low voltage directive **73/23/EEC**.

Stockholm November 12, 1999

*(Place & date of issue)*



Johan Siberg, President



# Index

## A

- Accept calls *81*
- Add accessories to a profile *133*
- Alarm *121*
- Alarm indicator *13*
- Alarm signal *47*
- Answered calls indicator *39*
- Answering calls *17*
- Answering mode *133*
- Answering service. See Voice Mail
- Appointments, storing them in the calendar *104*
- Area information *59*
  - message types *59*
  - receiving area messages *60*
- Assembling the phone *7*

## B

- Banking by phone *36*
- Barring calls. See Restrict calls
- Battery *8*
  - attaching *8*
  - charging *8, 9*
  - detaching *8*
- Bell. See Alarm indicator
- Bookmarks in the WAP browser *97*
- Browser, using the WAP browser *95*
- Built-in modem *62*
- Business Card Exchange *70*

## C

- Cable, connecting using a cable *64*
- Calculator *121*
- Call barring. See Restrict calls
- Call cost *91*
  - setting a credit limit *92*
  - specifying price per unit *92*
- Call divert
  - activating *73*

- Call list
  - calling from call list *39*
  - using the call list *39*
- Call restrictions. See Restrict calls
- Call time *91*
- Call waiting *83*
- Call waiting service
  - activating *83*
  - cancelling *83*
- Calling
  - from call list *39*
- Calling card
  - making a call *119*
  - saving number *118*
- Calling card services
  - activating *118*
- Calling Line Identification (CLI) *39*
- Calls
  - answering *17*
  - making *15*
  - putting on hold *18, 84, 86, 87*
  - receiving *16*
  - redialling *15*
  - rejecting *17*
  - switching between calls *84*
- CB. See Area information
- Cell broadcast. See Area information
- Changing phone lines *94*
- Changing the language of the Online User's Guide *145*
- Charging *8, 9*
  - disconnecting the charger *10*
- Choosing a card *119*
- Clock. See Time
- Closed user groups *80*
- Code Memo *115*
- Communicating *62*

Conference calls 85  
  adding new participants 86  
  creating 85  
  extracting a participant 86  
  releasing a participant 86  
  reviewing participants 86  
Connecting Using Infrared  
Communication 63  
Copying From One SIM Card to  
Another 34  
Credit card  
  making a call 119  
  saving number 118

---

## D

Data, sending and receiving 67  
Date 50  
  format 50  
  setting 50  
Desktop charger 128  
Dialled numbers indicator 39  
Display  
  greeting text 49  
  language 12, 48  
  light 48  
Display information 13  
Divert Calls 73  
  activating 73  
  checking status 74  
  divert indicator 13, 74  
  incoming calls 73  
Divert calls  
  cancelling 74  
Divert indicator 13, 74  
DTMF tones 18  
Dual Band 147

---

## E

Electronic business cards, sending  
and receiving 70  
E-mail, sending and receiving 67  
Emergency calls 16  
Erasing and renaming voice  
memos 110  
Ericsson Mobile Internet 144  
Error messages 142

---

## F

Fax, sending and receiving 67  
Features 23  
Fixed dialling 79  
  activating 79  
Fixed numbers 80  
  editing 80  
  storing 80

---

## G

Games 123  
General reminders, storing them in  
the calendar 104  
Glossary 147  
Greeting text in the display 49

---

## H

Handsfree usage 132

---

## I

Indicators in display 39  
  alarm 13  
  answered calls 39  
  battery meter 13  
  dialled numbers 39  
  divert 13  
  line 13  
  missed calls 13, 39  
  signal strength meter 13  
  silent ring 13  
  SMS 13  
Initial settings 11  
Input Method 48  
International calls 16  
International emergency number 16

---

## K

Key functions 14  
Keypad 6  
Keypad Lock 77

---

## L

Language in the display 12, 48  
Letters, entering 31  
Line  
  choosing a line 94

Line indicator *13*  
Lock - keypad lock *77*

---

## **M**

Making a call *15*  
Meetings, storing them in the calendar *104*  
Menu system *24*  
    display text *27*  
    moving through *26*  
Message signal *47*  
Message types (SMS) *54*  
Microphone  
    muting *18*  
Minute minder *47*  
Missed calls *40*  
Missed calls indicator *13, 39*  
Mobile Internet *144*  
Monthly overview in the calendar *106*  
Muting microphone *18*

---

## **N**

Name label *32*  
Network  
    forbidden networks *89*  
    preferences *88*  
    preferred networks *89*  
    search modes *90*  
    selecting *88*  
Note Pad *19*

---

## **O**

Online services *135*  
Online User's Guide, changing the language of *145*  
Online Version of this User's Guide *145*  
Overview *6*  
Own business card, editing and sending *71*

---

## **P**

Personal ring signal *44*  
Phone book *30*  
    checking status of memory *38*  
    creating *30*  
    edit a phone number *33*  
    e-mail addresses *37*  
    entering letters *31*  
    erasing phone number *36*  
    groups *37*  
    international numbers *30*  
    keeping up to date *33*  
    memory *30*  
    memory full *35*  
    overwrite protection *35*  
    shortcuts *33*  
Phone calls, storing them in the calendar *104*  
Phone lock *76*  
    activating/cancelling *77*  
    auto lock *76*  
    changing the security code *77*  
    full lock *76*  
Phone number  
    displaying own *49*  
Phone number in SMS  
    replying to *57*  
PIN *7, 11*  
    changing *75*  
PIN2 *7*  
    changing *76*  
Playing voice memos *110*  
Plus sign (+) *16*  
Portable handsfree *130*  
Problems, starting the Setup Assistant *65*  
Profile  
    change name of *126*  
Profiles *125, 130*  
    automatic activation *125*  
    change settings *126*  
    selecting *126*  
PUK *8, 75*

---

**Q**

Quick Keys *140*

---

**R**

Receive calls *16*  
Receiving a business card *71*  
Receiving messages (SMS) *56*  
Recording a voice memo *109*  
Redialling numbers *15*  
Rejecting calls *17*  
Request reply (SMS) *55*  
Resetting phone *50*  
Restrict calls *78*  
    cancelling all *78*  
    changing password *79*  
    changing status *78*  
Ring signal  
    choosing *44*  
    composing own *45*  
    personal *44*  
    type *44*  
    volume *43*

---

**S**

Scroll *14*  
Sending and receiving calendar appointments *107*  
Sending business cards *70*  
Sending messages (SMS) *53*  
Settings  
    initial *11*  
Shortcuts *140*  
Silent ring signal *13*  
SIM  
    Application Toolkit *135*  
    data download to *136*  
    proactive *136*  
SIM card *7*  
    features initiated by *136*  
    inserting *7*  
    resetting *136*  
    unblocking *75*  
SIM card lock  
    activating *76*  
    cancelling *76*  
    unlocking *75*

SIM Card, copying from one SIM card to another *34*  
SMS *52*

    composing messages *53*  
    deleting a message *58*  
    editing messages *53*  
    enabling phone for sending *52*  
    forwarding messages *58*  
    message types *54*  
    reading stored messages *59*  
    receiving messages *56*  
    reply requested *55*  
    replying to messages *57*  
    sending messages *53*  
    storing messages *58*  
    templates *55*  
    types *54*

SMS indicator *13*

Speed dialling *33*

Stop watch *122*

Storage status, in the calendar *108*

Stored messages (SMS)  
    reading *59*

Storing appointments in the calendar *104*

Storing codes in your Code Memo *115*

---

**T**

Technical data *146*

Telephone banking *36*

Text messages (SMS) *52*

Time *50*

    format *50*

    setting *50*

Timer *122*

Tone signals *18*

Touch tones *18*

Troubleshooting *142*

Turning your phone off *12*

Turning your phone on *11*

Two Line Service *94*

---

**V**

Vehicle handsfree *131*

Voice control

answering *112, 114*

dialling *112*

labels *112*

making calls *113*

rejecting *112*

Voice label *112*

Voice mail *41*

activating *41*

calling *41*

changing number *42*

changing signal *42*

Voice Mail indicator *13*

Voice memos *109*

Volume

changing *18*

Volume keys *14, 17*

---

**W**

WAP Browser *95*

Weekly overview in the  
calendar *106*