



INSTRUCTION BOOK FOR
Multi-Mask Imager



Important Safety

When using your video equipment, basic safety precautions should always be followed, including the following:

1. Read and understand all instructions before using.
2. Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
3. If an extension cord is necessary, a cord with a current rating at least equal to that of the appliance should be used. Cords rated for less amperage than the appliance may overheat.
4. To reduce the risk of electric shock, do not disassemble this appliance. Contact an authorized service dealer when repair work is required. Incorrect reassembly can cause electric shock when the appliance is used subsequently.
5. The use of an accessory attachment not recommended by the manufacturer may cause a risk of fire, electric shock, or injury to persons.

Save These Instructions

Mounting The Frame

Professional mounting techniques should be adhered to. Da-Lite Screen Company cannot be liable for substandard or faulty installations.

Frame Assembly

Assembly of the screen should be in a clean environment.

1. Connect the four frame pieces by matching the colored tapes on the ends of the frame pieces. See Figure 1.
2. Secure with the supplied 5/16" setscrews.

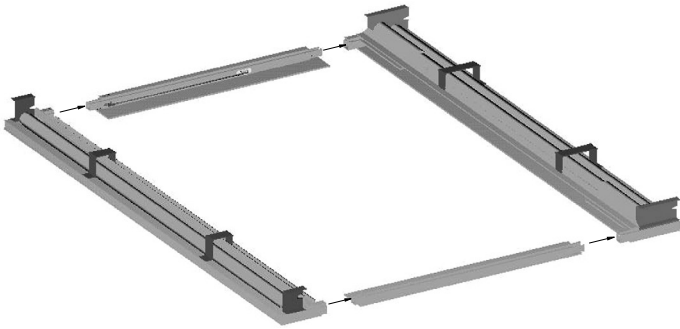


Figure 1

Positioning the Frame on the Wall

1. Without the screen fabric attached, position the frame on the wall at the location you desired.
2. Make sure the unit is level and plumb. (You may need to use shims between the brackets and the wall to achieve vertical plumb.)
3. Mark the position of the bracket holes on the wall. See Figure 2.

⚠ CAUTION: If the screen is not mounted so that it is level and plumb, horizontal masking may jam on retraction.

⚠ ATTENTION: Si l'écran n'est pas installé de sorte qu'il soit droit et plat, le masquage horizontal risque de se coincer lors de l'enroulement.

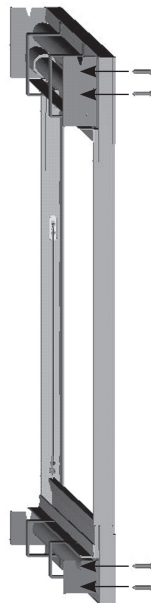


Figure 2

Unpacking and Unrolling the Screen

The viewing side of the screen surface is rolled to the inside. The screen surface is rolled lengthwise.

1. Remove screen from packaging.
2. On a clean floor, unroll the screen surface viewing side up.
3. Allow the paper to unroll between backside of the screen surface and floor. See Figure 3.

⚠ CAUTION:

- Be careful not to touch or scratch the viewing side of the surface with fingernails and any sharp tools.
- Do not use any tools to fasten the screen surface to the frame.
- Do not fold or crease the screen.

⚠ ATTENTION:

- Prenez soin de ne pas toucher ou rayer la face de projection de l'écran avec les ongles ou tout autre objet pointu.
- N'utilisez aucun outil pour attacher la surface de l'écran au cadre.
- Ne pliez pas ou ne froissez pas l'écran

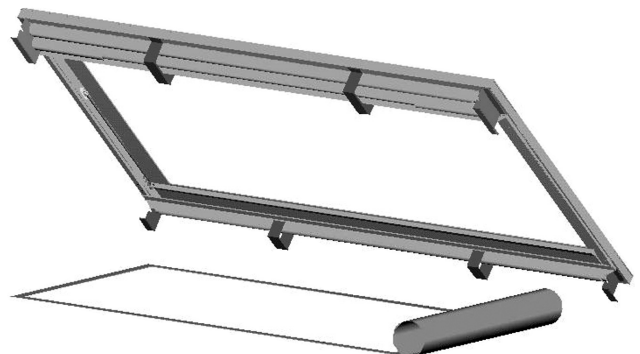


Figure 3

Mounting The Frame

Attaching the Screen Surface to Frame

1. Place the frame over the screen surface.
2. While lifting the frame with one hand, snap the screen surface onto the frame. Gently allow the screen to stretch onto snaps. See Figure 4. Attach the snaps on the top corners and top horizontal first, lift the frame to a vertical position to finish attaching the rest of the snaps.

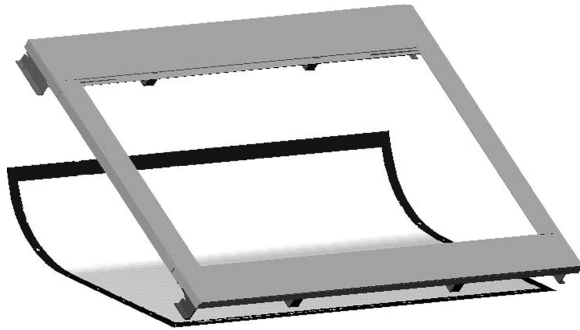


Figure 4

Tensioning the Bottom Masking Panel

1. Carefully remove all tape strips securing surfaces around rollers. Slats should move freely. See Figure 5.
2. Locate the spring tension cables on either side of the unit.
3. Connect the eye snap to the eyelet on the bottom masking panel bar. See Figure 5. You will need to pull the cable slightly.
4. Repeat for the other side.

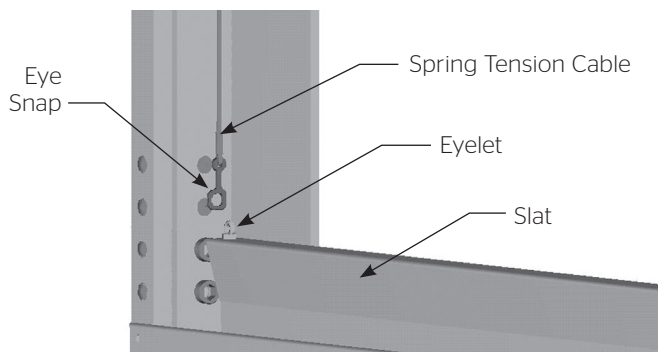
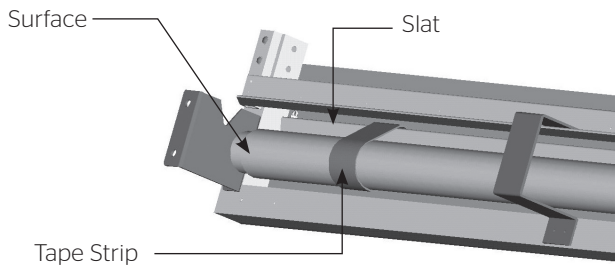


Figure 5

Electrical Wiring

Electrical wiring is required for each mask roller motor. The vertical masking systems have one motor at the frame top. Horizontal masking systems have one motor at the frame top and one at the bottom.

A motor requires standard 120V/220V input. All connections are made to the electrical box on the audience left side of the unit.

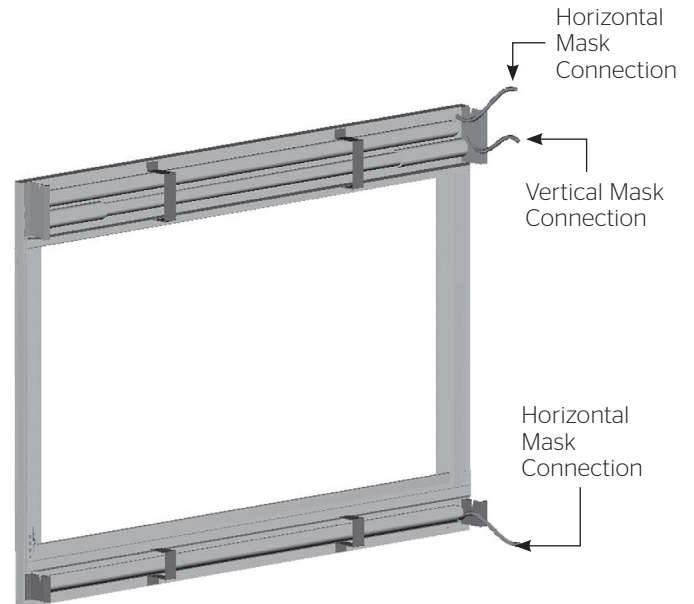



Figure 6

Multi-Mask Imager Installation

Installing the High Voltage Switch Control (Standard)

Three standard 3-position wall switches are supplied. The high-voltage control is connected to the electrical source. It alternates directions of mask motion by means of a hot lead, using the 3-position switches.

120V Wiring Diagram

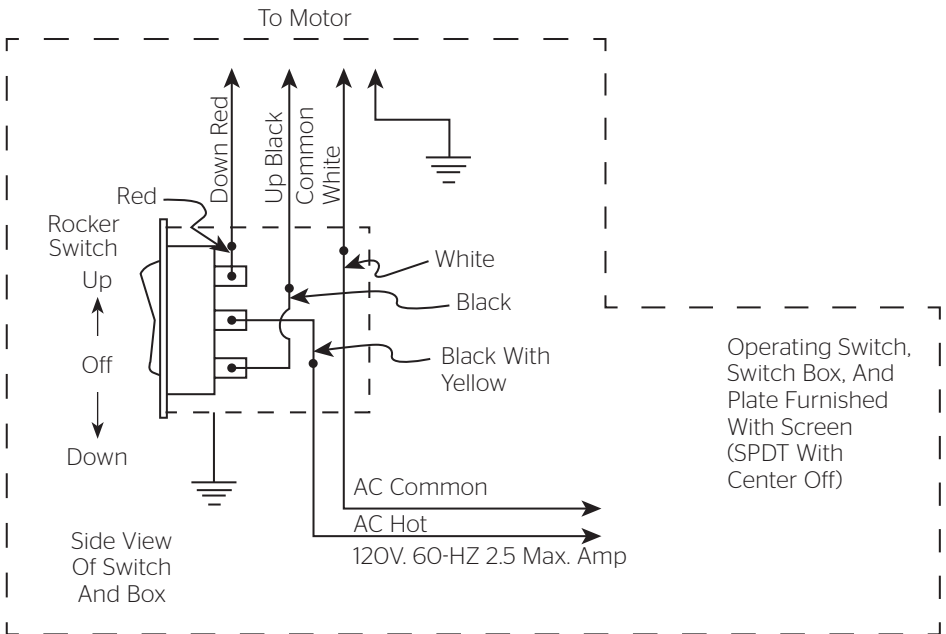


Operating Switch, Switch Box, and Plate Furnished With Screen (SPDT With Center Off)

In Multiple Control Installations This Switch Is Replaced By The Low Voltage Control, Operated From Push Button Stations.

This Switch Cannot Be Used With LVC.

NOTE: A single switch cannot be used to operate more than one screen. Contact the factory for further information.

220 / 240V Wiring Diagram

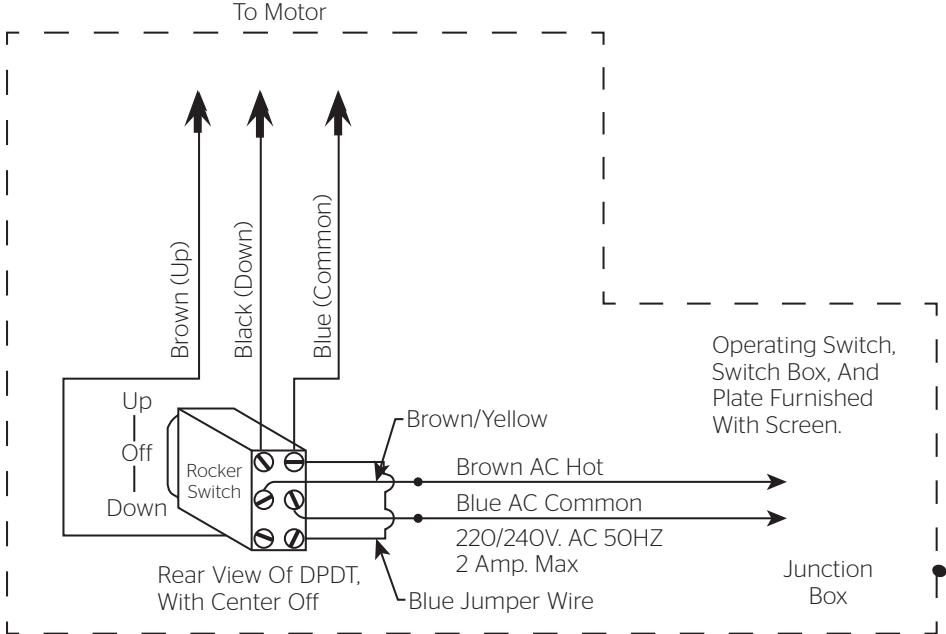

Operating Switch, Switch Box, and Plate Furnished With Screen.


In Multiple Control Installations This Switch Is Replaced By The Low Voltage Control, Operated From Push Button Stations.

NOTE: Must Be Wired To Conform To Local Wiring Code. This Switch Cannot Be Used With L.V.C.

NOTE: A single switch cannot be used to operate more than one screen. Contact the factory for further information.

Hanging The Screen On The Wall

1. Attach the wall brackets to the wall using appropriate fasteners at previously marked locations.

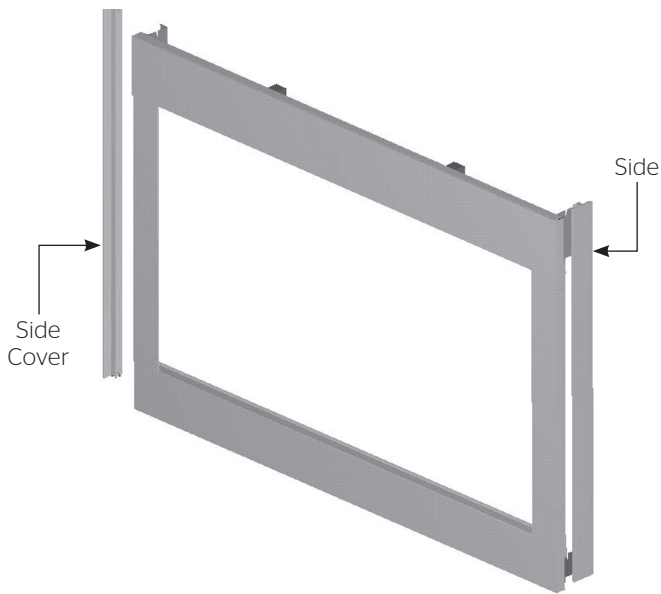

2. Attach the Side Covers to the frame by sliding the Bolts on the Side Cover tube into the openings on the top and bottom brackets. See Figure 7.

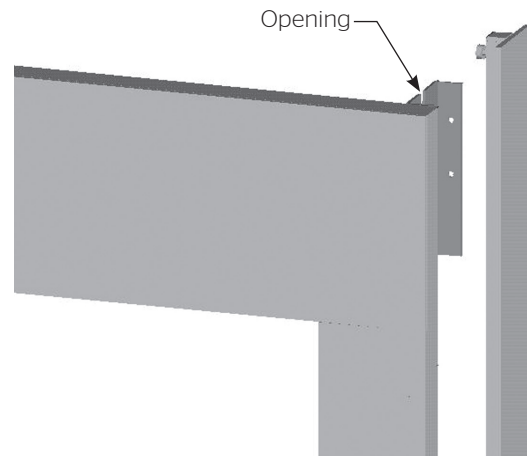


Figure 7

Operating The Mask

When you lower or retract a mask, it will stop at its present limit. If an obstacle (such as a person or furniture) gets in the path of a mask as it is lowered, you should use the switch control to stop the mask's motion; it will not automatically stop if it hits an obstacle.

NOTE: The horizontal masking panels move more slowly than the vertical masking panels. The slower motion allows you to adjust the image area with greater precision.

When a mask is not in use, you should store it in the fully retracted position.

⚠ CAUTION: Do not operate the motor when any of the following occurs:

- The unit emits any smoke, heat, abnormal noise or unusual odor.
- The unit is damaged in some way, such as damage from a water leak.
- If any of these situations occur, call a qualified service person.

⚠ ATTENTION: Ne mettez pas le moteur en marche lorsque :

- L'unité émet de la fumée, un bruit anormal, de la chaleur ou une odeur inhabituelle.
- L'unité est endommagée d'une quelconque façon (ex. dommage dû à une fuite d'eau).
- Si l'une de ces situations se produisait, appelez un technicien qualifié.

Adjusting The Mask Extension

⚠ CAUTION: Improper adjustment of the limit switches can cause irreparable damage to a mask itself, resulting in voiding the factory warranty.

⚠ ATTENTION: Un réglage inapproprié des interrupteurs de fin de course peut endommager de manière irréversible le masque et entraîner l'annulation de la garantie.

The extension and retraction limit switches have been preset at the factory. In general, we advise you to avoid readjusting these switches.

In some cases, to enable proper alignment of the displayed image on the screen, you may need to adjust the extension of a mask. If adjustment to the extension is necessary, carefully follow these instructions.

⚠ WARNING! A mask is fully retracted when the batten is flush with the bottom of the case. Do not attempt adjustments with a retraction (UP) limit switch that will further retract a mask. Incorrect adjustment of that switch will cause severe mask damage. Please consult the factory if you have any questions.

⚠ AVERTISSEMENT! Un masque est complètement rétracté lorsque la latte est alignée avec le bas du caisson. N'essayez pas d'effectuer des réglages avec un interrupteur de fin de course d'enroulement (VERS LE HAUT) qui causera une rétraction additionnelle d'un masque. Un réglage incorrect de cet interrupteur peut endommager sérieusement le masque. Veuillez contacter l'usine si vous avez des questions.

Adjusting The Mask Extension (Continued)

Modifying the Extension of the Mask

1. You can increase the extension of a mask up to 3" past the factory preset stop, or you can decrease the extension by approximately 4-6" from the factory preset stop. Do not attempt to modify a mask extension beyond these recommended amounts.
2. The limit switches are accessed through openings located on the left side of the frame as shown in Figure 8.
3. Horizontal mask units have limit switches at the top and bottom of the screens, a set for each roller tube.

WARNING! The up limit switch(es) retract the batten further into the unit. Adjusting it is not advised. Refer to 1, 3 or 5 as appropriated in Figure 8.

AVERTISSEMENT! Le(s) interrupteur(s) de fin de course supérieur(s) rétracte(nt) la latte à l'intérieur de l'unité. Le réglage n'est pas recommandé. Référez-vous au points 1, 3 ou 5 tel qu'indiqué dans la figure 8.

To Increase a Mask's Fully Extended (Mask Down)

Stop Position:

1. Lower the mask to its current stop position.
2. Locate the down limit switch(es) located on the left side of the frame. Refer to 2, 4 or 6 as appropriate in Figure 8. Use an Allen wrench to turn the switch in a counterclockwise direction. If the power is on, the mask will drop incrementally as the switch is turned. **NOTE:** One complete turn of the switch will make approximately a 1/2" change in the mask's stop position.

To Decrease the Screen Extension:

1. Lower the mask until it is extended about halfway down.
2. Locate the down limit switch(es) located on the left side of the frame. Refer to 2, 4 or 6 as appropriate in Figure 8. Use an Allen wrench to turn the switch in a clockwise direction. **NOTE:** One complete turn of the switch will make approximately a 1/2" change in the mask's stop position.
3. Activate the mask in the down direction until it reaches the newly reduced stop position. Repeat this procedure until the desired stop position is reached.

Once you have made the adjustment, whenever you lower the mask, it will automatically stop at the new position.

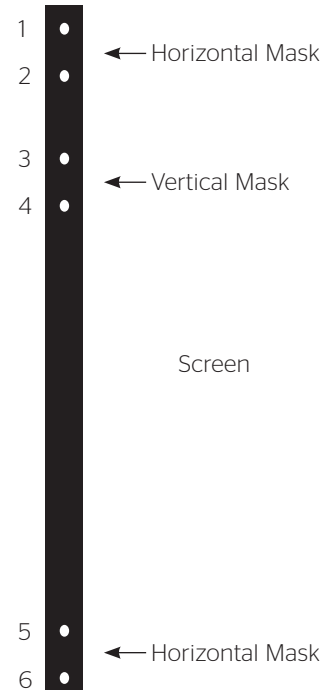


Figure 8

Screen Care And Cleaning

With reasonable care, you expect many years of trouble-free use of your Da-Lite projection screen.

We encourage you to keep your screen clean. Avoid getting any foreign material on the screen. It may not be possible to remove scratches, paint, ink, etc.

General Maintenance

The screen surface on your Multi-Mask Imager is delicate. Special attention to these instructions should be followed when cleaning.

- A draftsman-style brush may be used to lightly whisk away any loose dirt or dust particles. (This type of brush is usually available at office supply stores.)
- For tougher spots, use a mild solution detergent, water and a soft cloth. Rub lightly. Blot with a damp sponge to absorb excess water.

Do not use any other cleaning materials on the screen.

Replacement Parts and Service

No user-serviceable parts are contained within the unit. Contact your dealer or the factory if you require part replacement or service.

Troubleshooting

Refer to the following guidelines if you encounter a difficulty in the operation of your Da-Lite Multi-Mask Imager screen. Problems related to electrical or motor function may require a qualified service person or electrician.

Should you have a problem that is not addressed here, call Da-Lite customer service.

Symptom	Cause	Solution
Mask won't operate.	No 120V/220V power available.	Check to see if the circuit breaker has switched off. Reset if needed.
	Outboard switching problem.	Check outboard switching apparatus. Check voltage availability. Contact and Electrician..
Mask won't roll up or down (even though power is available).	Bad connection at switch.	Have an electrician or qualified service person check the connection as follows: <ul style="list-style-type: none"> • If you have a high voltage control switch, check switch line connections. • If you have a low voltage control unit, check switch line connections.
Mask roller chatters when power is activated.	Can be caused by voltage drop, bad connections or a defective switch.	Have an electrician or qualified service person check all hook-ups including all outboard wiring.
Unit hums in up mode (Mask has already retracted).	The mask batten is retracting too far into the case. Failure to correct can damage motor. Do not use the unit until this problem is resolved.	Have a qualified service person adjust the UP limit switch. Turn the adjusting screw clockwise.
Mask drops when up direction is activated (grinding noise occurs).	Drop in voltage.	Mask motor requires full voltage. Have an electrician or qualified service person check the available voltage.
Mask continues past bottom stop position.	White limit switch is out of adjustment.	Re-adjust the Down limit switch. See pp. 6-7 of this manual.
Batten retracts too far into frame.	Yellow limit switch out of adjustment. Failure to correct can damage motor. Do not use the unit until this problem is resolved.	Have a qualified service person adjust the UP limit switch. See pp. 6-7 of this manual.
Dirt, fingerprints, marks, etc. on screen surface.	Improper handling of screen.	Brush off or use a mild detergent solution with clean rag or cotton swab.
Indentations appear on screen surface.	Debris or particles adhering to screen due to static cling.	Check back of screen: gently brush debris away by hand.
Horizontal mask jams upon retraction.	The unit was not level and plumb when mounted.	Remount the unit making sure that it is level and plumb.

LIMITED ONE YEAR WARRANTY ON DA-LITE PRESENTATION PRODUCTS

Milestone AV Technologies LLC warrants certain Da-Lite branded products to the original purchaser only, to be free from defects in materials and workmanship for a period of one (1) year from the date of purchase by the original purchaser; provided they are properly operated according to Da-Lite's instructions and are not damaged due to improper handling or treatment after shipment from the factory.

This warranty does not apply to equipment showing evidence of misuse, abuse or accidental damage, or which has been tampered with or repaired by a person other than authorized Da-Lite personnel.

Da-Lite's sole obligation under this warranty shall be to repair or to replace (at Da-Lite's option) the defective part of the merchandise. Returns for service should be made to your Da-Lite dealer. If it is necessary for the dealer to return the screen or part to Da-Lite, transportation expenses to and from Da-Lite are payable by the purchaser and Da-Lite is not responsible for damage in shipment. To protect yourself against damage or loss in transit, insure the product and prepay all transportation expenses.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES AS TO FITNESS FOR USE AND MERCHANTABILITY. Any implied warranties of fitness for use, or merchantability, that may be mandated by statute or rule of law are limited to the one (1) year warranty period. This warranty gives you specific legal rights, and you may also have other rights, which vary from state-to-state. **TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, NO LIABILITY IS ASSUMED FOR EXPENSES OR DAMAGES RESULTING FROM INTERRUPTION IN OPERATION OF EQUIPMENT, OR FOR INCIDENTAL, DIRECT, OR CONSEQUENTIAL DAMAGES OF ANY NATURE.**

In the event that there is a defect in materials or workmanship of a Da-Lite product, you may contact our Sales Partners at PO Box 137, Warsaw, IN 46581-0137, (574) 267-8101, (800) 622-3737.

IMPORTANT: THIS WARRANTY SHALL NOT BE VALID AND DA-LITE BRANDED PRODUCTS SHALL NOT BE BOUND BY THIS WARRANTY IF THE PRODUCT IS NOT OPERATED IN ACCORDANCE WITH THE DA-LITE WRITTEN INSTRUCTIONS.

Keep your sales receipt to prove the date of purchase and your original ownership.



A Milestone AV Technologies Brand

3100 North Detroit Street
Warsaw, Indiana 46582
P: 574.267.8101 or 800.622.3737
F: 574.267.7804 or 877.325.4832
E: info@da-lite.com
www.da-lite.com

DL-0287 (Rev. 2) 10.14

© 2014 Milestone AV Technologies LLC. Printed in U.S.A.

94727