

SHARP

PORTABLE CD STEREO COMPONENT SYSTEM

MODEL


GX-CD5100W

OPERATION MANUAL

COMPACT
disc
DIGITAL AUDIO

MP3

Thank you for purchasing this SHARP product.
To obtain the best performance from this product, please read this
manual carefully. It will guide you in operating your SHARP product.

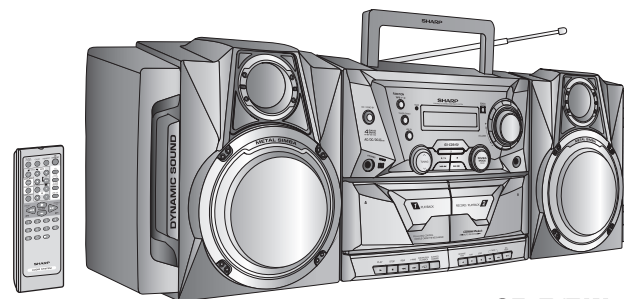

CD-R/RW
Playable 

Special notes

Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), revenue-generating streaming applications (via Internet, intranets and/or other networks), other revenue-generating content distribution systems (pay-audio or audio-on-demand applications and the like) or on revenue-generating physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.
MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

WARNINGS:

- When the ON/STAND-BY button is set at STAND-BY position, mains voltage is still present inside the unit. When the ON/STAND-BY button is set at STAND-BY position, the unit may be brought into operation by the timer mode or remote control.
- This unit contains no user serviceable parts. Never remove covers unless qualified to do so. This unit contains dangerous voltages, always remove mains plug from the socket before any service operation and when not in use for a long period.
- To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

Note for users in Australia:

Copyright may exist in material you wish to record. Copying or broadcasting such material without permission of the relevant licensees or owners of the copyright is prohibited by law. SHARP is not in a position to authorise the copying or broadcasting of copyright materials and nothing in this OPERATION MANUAL should be implied as giving that authority.

For other countries:

Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Please refer to the relevant laws in your country.

CAUTION:

- This product is classified as a CLASS 1 LASER product.
- Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.



Laser Diode Properties

Material: GaAlAs

Wavelength: 780 nm





Emission Duration: continuous

Laser Output: max. 0.6 mW

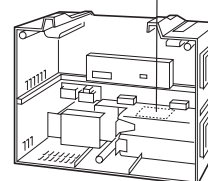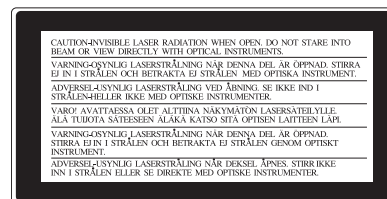

Accessories

Please confirm that the following accessories are included.

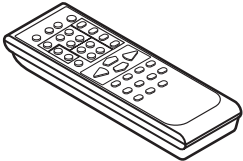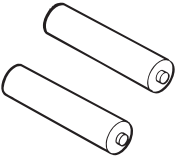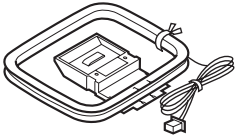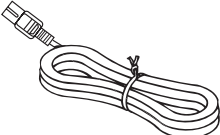 Remote control × 1	 "AA" size battery (UM/SUM-3, R6, HP-7 or similar) × 2
 AM loop aerial × 1	 AC power lead × 1

Note:
Only the above accessories are included.

Contents


GX-CD5100W

	Page
■ General Information	
Precautions	4
Controls and indicators	5 - 7
■ Preparation for Use	
System connections	8 - 10
Remote control	11
■ Basic Operation	
General control	12
Setting the clock (Remote control only)	13
■ CD or MP3 disc playback	
Listening to a CD or MP3 disc	14 - 15
Advanced CD or MP3 disc playback	16 - 17
■ Radio	
Listening to the radio	18 - 19
Setting the FM/MW interval	19
■ Tape Playback	
Listening to a cassette tape (TAPE 1 or TAPE 2)	20 - 21
■ Tape Recording	
Recording to a cassette tape	21 - 23
■ Advanced Features	
Timer and sleep operation (Remote control only)	24 - 26
Enhancing your system	27
■ References	
Troubleshooting chart	28 - 29
Maintenance	29
Specifications	30

Precautions

■ General

- Please ensure that the equipment is positioned in a well ventilated area and ensure that there is at least 10 cm (4") of free space along the sides, top and back of the equipment.
- Use the unit on a firm, level surface free from vibration.
- Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic/electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.
- Do not place anything on top of the unit.
- Do not expose the unit to moisture, to temperatures higher than 60°C (140°F) or to extremely low temperatures.
- If your system does not work properly, disconnect the AC power lead from the wall socket. Plug the AC power lead back in, and then turn on your system.
- In case of an electrical storm, unplug the unit for safety.
- Hold the AC power plug by the head when removing it from the wall socket, as pulling the lead can damage internal wires.
- The AC power lead/ AC power input socket is used as disconnect device and shall always remain readily operable.
- **Do not remove the outer cover, as this may result in electric shock. Refer internal service to your local SHARP service facility.**
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- This unit should only be used within the range of 5°C - 35°C (41°F - 95°F).

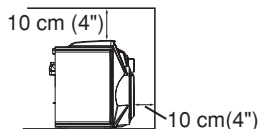

Warning:

The voltage used must be the same as that specified on this unit. Using this product with a higher voltage other than that which is specified is dangerous and may result in a fire or other type of accident causing damage. SHARP will not be held responsible for any damage resulting from use of this unit with a voltage other than that which is specified.


■ Volume control

The sound level at a given volume setting depends on speaker efficiency, location, and various other factors. It is advisable to avoid exposure to high volume levels. Do not turn the volume on to full at switch on and listen to music at moderate levels.

■ Care of compact discs


Compact discs are fairly resistant to damage, however mistracking can occur due to an accumulation of dirt on the disc surface. Follow the guidelines below for maximum enjoyment from your CD collection and player.

- Do not write on either side of the disc, particularly the non-label side from which signals are read. Do not mark this surface.
- Keep your discs away from direct sunlight, heat, and excessive moisture.
- Always hold the CDs by the edges. Fingerprints, dirt, or water on the CDs can cause noise or mistracking. If a CD is dirty or does not play properly, clean it with a soft, dry cloth, wiping straight out from the centre, along the radius.

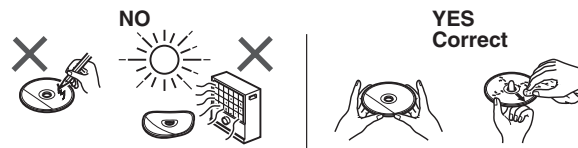

Controls and indicators

GX-CD5100W

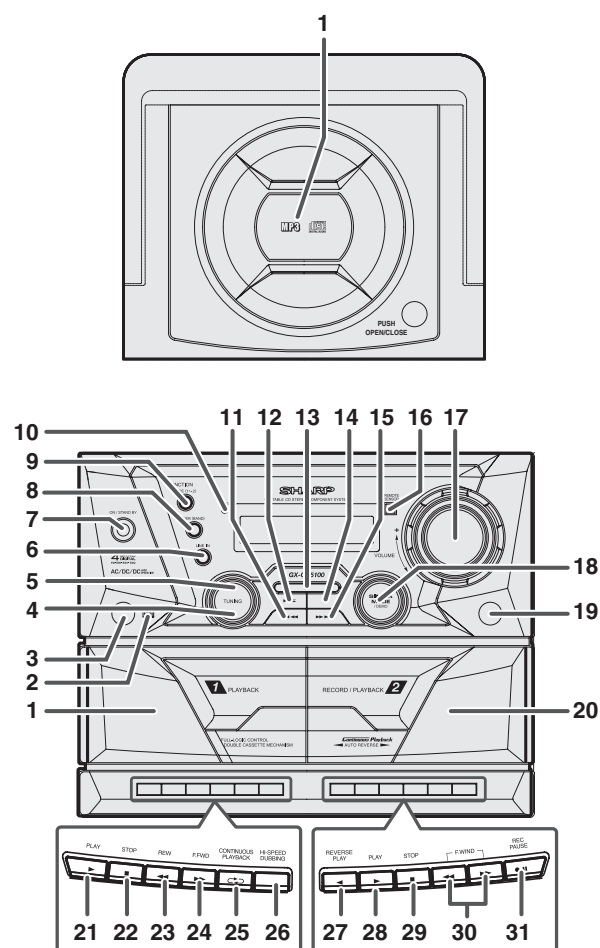

■ Top


- 1. Disc Compartment

■ Front panel

Reference page

1. Tape 1 Cassette Compartment	20
2. Built in Microphone	23
3. Headphone Socket	27
4. Tuning Down Button	18
5. Tuning Up Button	18
6. Line in Button	27
7. On/Stand by Button	12
8. Tuner (Band) Button	18
9. Tape (1 → 2) Button	20
10. Timer Indicator	25
11. CD/MP3 disc Track Down or Fast Reverse Button	15
12. CD/MP3 Disc Play or Repeat Button	14, 15, 16
13. CD/MP3 Button	14
14. CD/MP3 Disc/Stop Button	15
15. CD/MP3 disc Track Up or Fast Forward Button	15
16. Remote Sensor	11
17. Volume Control	12
18. Simba Mode/Demo Button	12
19. Mixing Microphone Socket	23
20. Tape 2 Cassette Compartment	20
21. Tape 1 Play Button	20
22. Tape 1 Stop Button	20
23. Tape 1 Rewind Button	20
24. Tape 1 Fast Forward Button	20
25. Tape Continuous Playback Button	20, 29
26. Tape High Speed Dubbing Button	23
27. Tape 2 Reverse Play Button	22
28. Tape 2 Forward Play Button	22
29. Tape 2 Stop Button	22
30. Tape 2 Fast Wind Buttons	22
31. Tape 2 Record Pause Button	23

Controls and indicators (continued)

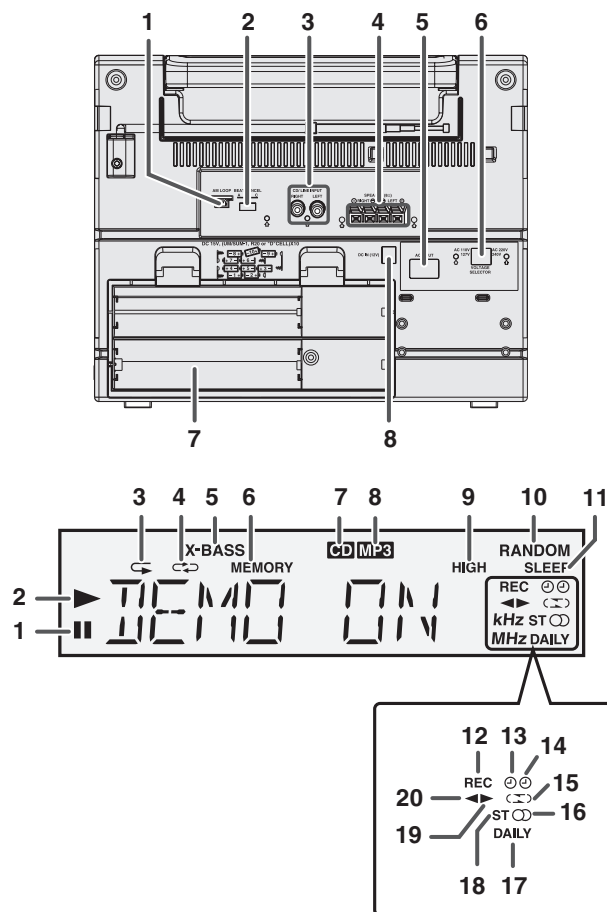


Rear Panel

Reference page

1. AM Loop Aerial Socket	8
2. Beat Cancel	22
3. CD/LINE Input Sockets	27
4. Speaker Terminals	8
5. AC Power Lead	9
6. Voltage Selector	9
7. Battery Compartment	10
8. DC Power Terminal	10

Speaker system


1. Tweeter
2. Bass Reflex Duct
3. Woofer
4. Speaker Wire

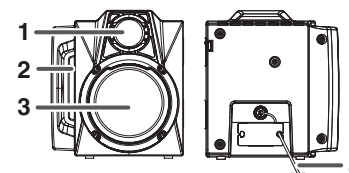

Display

Reference page

1. Disc Pause Indicator	15
2. Disc Play Indicator	15
3. Disc Repeat Play Indicator	16
4. Tape Continuous Playback Indicator	20
5. Extra Bass Indicator	12
6. Memory Indicator	17
7. CD Indicator	16, 17
8. MP3 Indicator	15, 16
9. High Speed Dubbing Indicator	23
10. Random Indicator	16
11. Sleep Indicator	26
12. Tape 2 Record Indicator	22, 23
13. Timer Play Indicator	24
14. Timer Recording Indicator	24
15. Tape 2 Reverse Mode Indicator	23
16. FM Stereo Receiving Indicator	18
17. Daily Timer Indicator	24
18. FM Stereo Mode Indicator	18
19. Tape 1 Play or Tape 2 Forward Play Indicator	20
20. Tape 2 Reverse Play Indicator	20

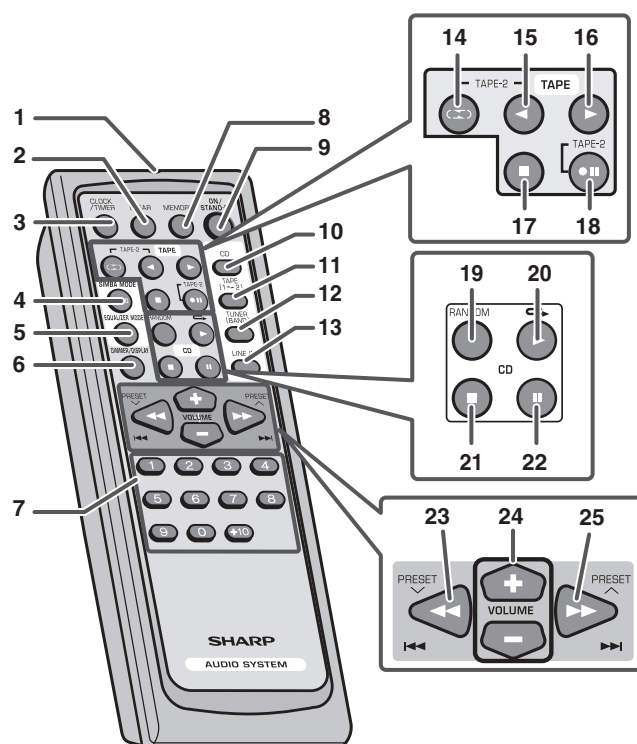


■ Remote control

	Reference page
1. Remote Control Transmitter	11
2. Clear Button	17
3. Clock/Timer Button	13, 24
4. Simba Mode/Demo Button	9, 12
5. Equaliser Mode Button	12
6. Dimmer/Display Button	12, 16
7. Direct Search Buttons	16
8. Memory Button	13, 17, 18, 24
9. On/Stand-by Button	12
10. CD/MP3 Disc Button	14
11. Tape (1 → 2) Button	20
12. Tuner (Band) Button	18
13. Line in Button	27
14. Tape 2 Reverse Mode Button	20
15. Tape 2 Reverse Play Button	20
16. Tape 1 Play or Tape 2 Forward Play Button	20
17. Tape Stop Button	20
18. Tape 2 Record Pause Button	22
19. Disc Random Button	16
20. CD/MP3 Disc Play or Repeat Button	14, 16
21. CD/MP3 Disc Stop Button	15
22. Disc Pause Button	15
23. CD/MP3 Disc Track Down or Fast Reverse, Tape Rewind, Tuner Preset Down, Time Down Button	13, 15, 18, 20, 21, 24
24. Volume Up and Down Buttons	12
25. CD/MP3 Disc Track Up or Fast Forward, Tape Fast Forward, Tuner Preset Up, Time Up Button	13, 15, 18, 20, 21, 24

System connections

■ Detachable speakers

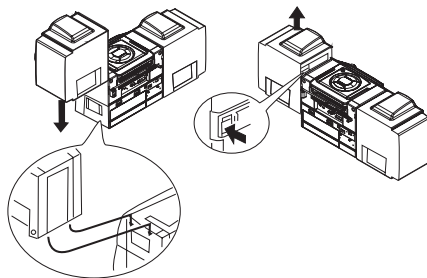

- Set the FUNCTION switch to STAND-BY before connecting or disconnecting the speakers.

■ Mounting the speakers to the main unit


Fit the grooves of the speaker to the guides on the main unit, and then slide the speaker all the way down to lock it in place.

■ Removing the speakers from the main unit

Push the RELEASE lever as shown in the illustration to unlock the speaker, and then lift up the speaker to remove it from the main unit.

■ Speaker connection


Connect each speaker wire to the SPEAKER terminals as shown. Use speakers with an impedance of 8 ohms or more, as lower impedance speakers can damage the unit.

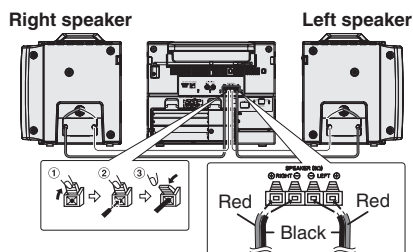

Caution:


- Connect the black wire to the minus (-) terminal, and the red wire to the plus (+) terminal.
- Do not mix the right channel and left channel wiring when connecting the speakers to the unit.
- Do not let the bare speaker wires touch each other as this may damage the amplifier and/or speakers.
- Do not stand or sit on the speakers. If the speakers fall or collapse, you may be injured.

Aerial Adjustment

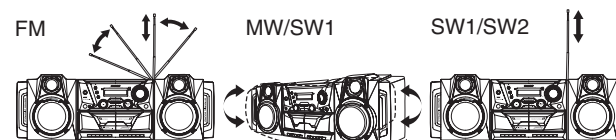


Supplied AM Loop aerial:

Connect the AM loop aerial to the AM LOOP socket. Position the AM loop aerial for optimum reception.

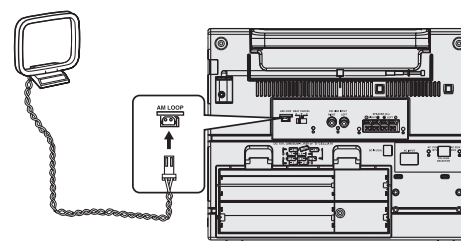

Note:

Placing the aerial on the unit or near the AC power lead may cause noise pickup. Place the aerial away from the unit for better reception.

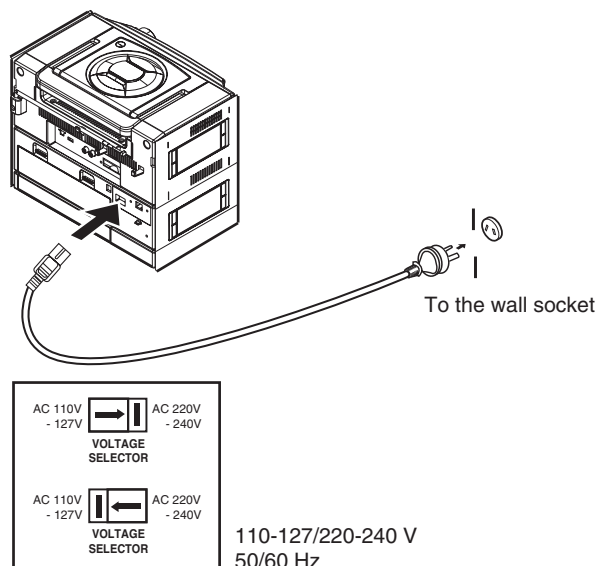

■ Setting the AC voltage selector

Check the setting of the AC voltage selector located on the rear panel before plugging the unit into a wall socket. If necessary, adjust the selector to correspond to the AC power voltage used in your area.

Selector adjustment:

Slide the selector with a screwdriver to the appropriate voltage number (AC 110 - 127 V or AC 220 - 240 V).

■ AC power connection

 
After checking all the connections have been made correctly, plug the AC power lead of this unit into the wall socket. If you plug the unit first, the unit will enter the demonstration mode.

Notes:

- The unit will start the tape initialisation when plugged in to the wall socket. During this process, initialising sound will be heard and the unit cannot be turned on. Wait until the process is finished.
- Unplug the AC power lead from the wall socket if the unit will not be in use for a prolonged period of time.


■ Demonstration mode

The first time the unit is plugged in, the unit will enter the demonstration mode. You will see words scroll.



To cancel the demonstration mode:

When the unit is in the power stand-by mode (demonstration mode), press the SIMBA MODE/ DEMO button. The demonstration mode will be cancelled and the display will disappear.

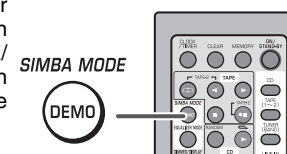

To return to the demonstration mode:


When the unit is in the power stand-by mode, press the SIMBA MODE/ DEMO button again.

Notes:

- When the power is on, the SIMBA MODE/ DEMO button can be used to select the simba mode.
- Demonstration mode will not be displayed when DC adaptor is connected or when battery is in use.

System connections (continued)


■ DC power connection

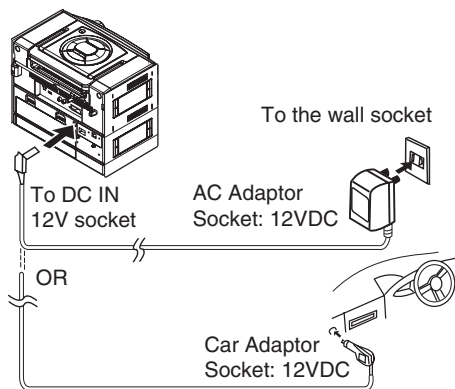

Plug the AC Adaptor/Car Adaptor into the wall socket/car supply socket then insert the plug on the other end into the DC IN 12V socket. Connection of the AC power lead to the unit disconnects the DC power supply.

Caution:

 
- Use only AC Adaptor/Car Adaptor with DC 12V output voltage.
- Insert the plugs firmly.
- When the unit is not in use for an extended period, remove the AC Adaptor/Car Adaptor from the wall socket/car supply socket.



Attention: connection of DC lead and battery terminals.


⊕: Connect the red battery clip to (+) on the battery terminal.

⊖: Connect the black battery clip to (-) on the battery terminal.

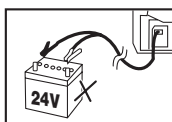

DC power can only be used for a 12V battery.
Do not use any battery besides a 12V.

■ Operation with batteries

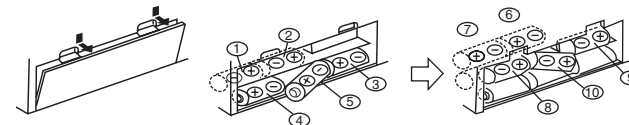

- 1 Disconnect the AC power lead, and remove the battery compartment cover.
 - Connection of the AC or DC power lead to the unit disconnects the batteries.
- 2 Insert 10 "D" size batteries (UM/SUM-1, R20, HP-2 or similar) into the battery compartment.
 - When inserting or removing the batteries ⑤ and ⑩, push them towards the ⊖ battery terminals.
Installing the batteries incorrectly may cause the unit to malfunction.
 - Batteries are not included.
- 3 Replace the battery compartment cover.

Precautions for battery use:

- Insert the batteries according to the direction indicated on the rear panel.
- Remove the batteries if they are weak or if the unit will not be used for long periods of time. This will prevent potential damage due to battery leakage.
- Replace all old batteries with new ones at the same time.
- Do not mix old and new batteries.

Caution:

- Do not use rechargeable batteries (nickel-cadmium battery, etc.).

Battery replacement:


Replace the batteries when they become weak and/or recording or playback is impaired. This may occur even though radio broadcasts are audible.

Remote control

GX-CD5100W

■ Battery installation

- 1 **Open the battery cover.**
- 2 **Insert the supplied batteries according to the direction indicated in the battery compartment (back of the battery cover).**
When inserting or removing the batteries, push them towards the \ominus battery terminals.
- 3 **Close the cover.**

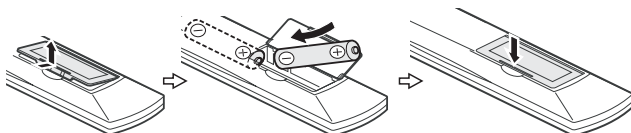

Precautions for battery use:

- Replace all old batteries with new ones at the same time.
- Do not mix old and new batteries.
- Remove the batteries if the unit will not be used for long periods of time. This will prevent potential damage due to battery leakage.

Caution:

- Do not use rechargeable batteries (nickel-cadmium battery, etc.).
- Installing the batteries incorrectly may cause the unit to malfunction.

Battery removal:

Open the battery cover and pull up the battery to take out.

Notes concerning use:


- Replace the batteries if the operating distance is reduced or if the operation becomes erratic. Purchase 2 "AA" size batteries (UM/SUM-3, R6, HP-7 or similar)
- Periodically clean the transmitter on the remote control and the sensor on the unit with a soft cloth.
- Exposing the sensor on the unit to strong light may interfere with operation. Change the lighting or the direction of the unit.
- Keep the remote control away from moisture, heat, shock, and vibrations.

■ Test of the remote control


Check the remote control after checking all the connections (see pages 8 - 10).

Point the remote control directly at the remote sensor on the unit.

The remote control can be used within the range shown below: Press the ON/STAND-BY button. Does the power turn on? Now, you can enjoy music.

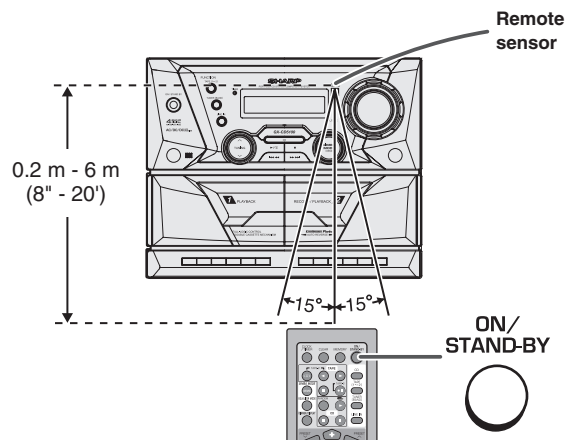

General control

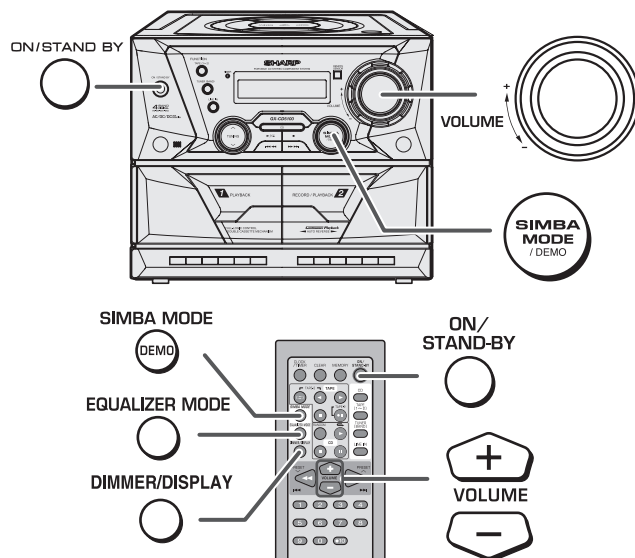

■ To turn the power on

Press the ON/STAND-BY button to turn the power on.

After use:

Press the ON/STAND-BY button to enter the power stand-by mode.

 
■ Illumination light control

When the power is turned on, the content of the display is light up. To dim the light, press and hold the DIMMER/DISPLAY button on the remote control for more than 2 seconds.

■ Volume control

Main unit operation:

When the VOLUME control is turned clockwise, the volume will increase. When it is turned anti-clockwise, the volume will decrease.



Remote control operation:

Press the VOLUME (+ or -) button to increase or decrease the volume.

■ Simba mode

When the power is first turned on, the unit will enter the simba mode which emphasises the bass frequencies, and "SIMBA MODE" will scroll in. To cancel the simba mode, press the SIMBA MODE/DEMO button.




■ Equaliser

When the EQUALIZER MODE button is pressed, the current mode setting will be displayed. To change to a different mode, press the EQUALIZER MODE button repeatedly until the desired sound mode appears.

→ FLAT	No equalisation.
↓	
ROCK	For rock music.
↓	
CLASSIC	For classical music.
↓	
POPS	For pop music.
↓	
VOCAL	Vocals are enhanced.
↓	
JAZZ	For jazz.

Setting the clock (Remote control only)

GX-CD5100W

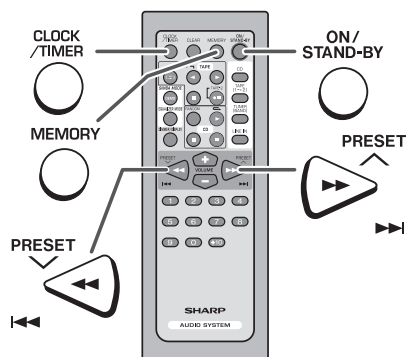

In this example, the clock is set for the 24-hour (0:00) display.

- 1 Press the ON/STAND-BY button to turn the power on.**
- 2 Press the CLOCK/TIMER button.**
- 3 Within 10 seconds, press the ◀ or ▶ button to select "CLOCK", and press the MEMORY button.**
- 4 Press the ◀ or ▶ button to select 24-hour or 12-hour display and then press the MEMORY button.**


"0:00"	→ The 24-hour display will appear. (0:00 - 23:59)
"AM 12:00"	→ The 12-hour display will appear. (AM 12:00 - PM 11:59)
"AM 0:00"	→ The 12-hour display will appear. (AM 0:00 - PM 11:59)

- 5 Press the ◀ or ▶ button to adjust the hour and then press the MEMORY button.**



Press the ◀ or ▶ button once to advance the time by 1 hour.
Hold it down to advance continuously.

 - 6 Press the ◀ or ▶ button to adjust the minutes and then press the MEMORY button.**



Press the ◀ or ▶ button once to advance the time by 1 minute.
Hold it down to change the time in 5-minute intervals.

To confirm the time display:

[When the unit is in the stand-by mode]

Press the CLOCK/TIMER button.

The time display will appear for about 10 seconds.

[When the power is on]

Press the CLOCK/TIMER button.

Within 10 seconds, press the ◀ or ▶ button to display the time.

The time display will appear for about 10 seconds.

Note:

The "CLOCK" will appear or time will flash to confirm the time display when the AC power supply is restored after a power failure or unplugging the unit. If incorrect, readjust the clock as follows.

To readjust the clock:

Perform "Setting the clock" from step 1. If the "CLOCK" is not appear in step 3, step 4 (for selecting the 24-hour or 12-hour display) will be skipped.

To change the 24-hour or 12-hour display:

- 1 Clear all the programmed contents. [Refer to "Clearing all the memory (reset)" on page 29 for details.]
- 2 Perform "Setting the clock" from step 1.

Listening to a CD or MP3 disc

This system can play back a standard CD, CD-R/RW in the CD format and CD-R/RW with MP3 files, but cannot record on them. Some audio CD-R and CD-RW discs may not be playable due to the state of the disc or the device that was used for recording.

MP3 disc:

MP3 is a form of compression. It is an acronym which stands for MPEG Audio Layer 3.

MP3 is a type of audio code which is processed by significant compression from the original audio source with very little loss in sound quality.


- This system supports MPEG 1 Layer 3, MPEG 2 Layer 3, and VBR files.
- During VBR file playback, time counter in the FL display may differ from its actual playback time.
- Bitrate which is supported by MP3 is 32 ~ 320 kbps.

Note:


- "MP3" indicator will light up after the unit reads information on an MP3 disc.

Auto power off function:

In the stop mode of CD or MP3 operation, the main unit enters the stand-by mode after 15 minutes of inactivity.

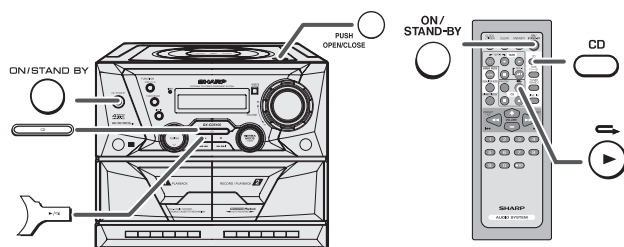

■ Playback

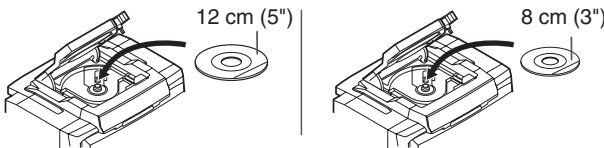- 1 Press the ON/STAND-BY button to turn the power on.**
- 2 Press the CD(CD) button.**
- 3 Open the CD compartment by pushing the area marked "PUSH OPEN/CLOSE".**
- 4 Place a disc on the spindle, label side up.**
Be sure to place 8 cm (3") discs in the middle of the disc trays.

- 5 Close the CD compartment by firmly pushing the right corner of it.**
- 6 Press the ► / ◄ (► / ◄) button to start playback.**

To stop playback:

Press the ■ (■) button.









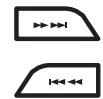

To remove the discs:

In the stop mode, press the PUSH OPEN/CLOSE portion on the CD door.

Caution:

- Do not place two discs in the spindle.
- Do not play discs with special shapes (heart- or octagon-shaped). It may cause malfunctions.
- If TV or radio interference occurs during CD operation, move the unit away from the TV or radio.
- If a disc is damaged, dirty, or loaded upside down, the disc will not play back.

■ Various disc functions

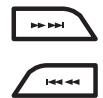Function	Main Unit	Remote Control	Operation
Play			Press in the stop mode.
Stop			Press in the playback mode.
Pause			Press in the playback mode. Press the ► / ◀ (► / ◀) button to resume playback from the paused point.
Track up/ Track down			Press in the playback or stop mode. If you press the button in the stop mode, press the ► / ◀ (► / ◀) button to start the desired track.
Fast forward/ Fast reverse			Press and hold down in the playback mode. Release the button to resume playback.

Notes:


- Track up/track down and fast forward/fast reverse are possible only within individual discs.
- During fast forward/fast reverse, no sound is produced.

■ To change the display (MP3 discs only)


Whilst in the stop mode or playback mode, press the DIMMER/DISPLAY button.

Each time the button is pressed, the display will change as follows.

[When in the stop mode]

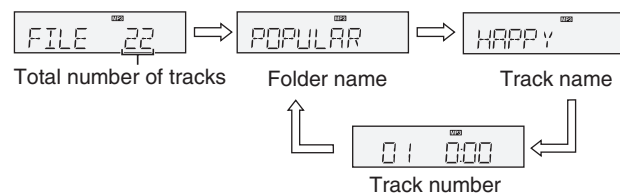

[When in the playback mode]

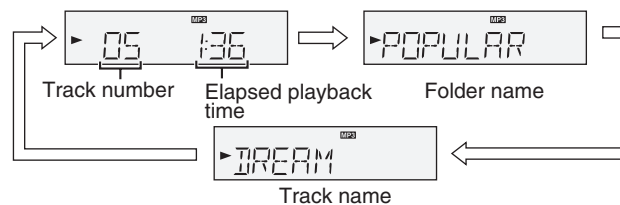

Advanced CD or MP3 disc playback

■ To select the desired folder or track by name (MP3 discs only)

- 1 Whilst in the stop mode, press the DIMMER/DISPLAY button to display the folder name.



 
- 2 Select the desired folder by pressing the ◀ or ▶ button.

- 3 Press the DIMMER/DISPLAY button to display the track name.



- 4 Select the desired track by pressing the ◀ or ▶ button.

- 5 Press the ▶ / ◀ (▶ / ◀) button to begin playback.



■ Direct track search

By using the direct search buttons, the desired tracks on the current disc can be played.

 
Use the direct search buttons on the remote control to select the desired track whilst playing the selected disc.

Selected track number

- The direct search buttons allow you to select up to number 9.
- When selecting number 10 or more, use the "+10" button.

A. For example, to choose 13

- 1 Press the "+10" button once.
- 2 Press the "3" button.



B. For example, to choose 30

- 1 Press the "+10" button three times.
- 2 Press the "0" button.

If the direct search buttons are pressed whilst the disc is stopped, press the ▶ / ◀ (▶ / ◀) button to start the desired track on the current disc.

Notes:

- A track number higher than the number of tracks on the disc cannot be selected.
- During random play, direct search is not possible.

■ Repeat play

All tracks or a programmed sequence can be continuously repeated.

To repeat all tracks:

Press the ▶ / ◀ (▶ / ◀) button twice.



To repeat a desired track:

Perform steps 1 - 6 in the "Programmed play" section on page 17 and then press the ▶ / ◀ (▶ / ◀) button twice.

To cancel repeat play:

Press the ▶ / ◀ (▶ / ◀) button again. "◀" will disappear.

■ Random play

The tracks on the disc can be played in random order automatically.

To random play all tracks :

Press the RANDOM button on the remote control.



To cancel random play:

Press the ▶ / ◀ (▶ / ◀) button. "NORMAL" will appear for 2 seconds.



Notes:



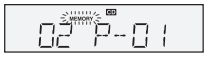

- If you press the ►► button during random play, you can move to the track selected next by the random operation. On the other hand, the ◀◀ button does not allow you to move to the previous track. The beginning of the track being played will be located.
- In random play, the unit will select and play tracks automatically. (You cannot select the order of the tracks.)

Caution:

After performing repeat or random play, be sure to press the ■ (■) button. Otherwise, the disc will play continuously.


■ Programmed play

You can choose up to 32 selections for playback in the order you like.

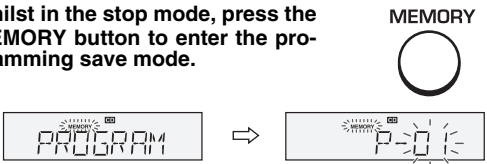1 Whilst in the stop mode, press the MEMORY button to enter the programming save mode.	
2 Press the direct search buttons on the remote control to select the desired track.	 <p>Selected track number</p> <p>You can also select a track by pressing the ◀◀ or ►► button.</p>
3 Press the MEMORY button to save the track number.	
4 Repeat steps 2 - 3 for other tracks. Up to 32 tracks can be programmed. If you make a mistake, the programmed tracks can be cleared by pressing the CLEAR button.	
5 Press the ■ (■) button. The total number of memory will appear.	
6 Press the ► / ◀ (► / ◀) button to start playback.	

To clear the programmed selections:

Press the CLEAR button on the remote control whilst the "MEMORY" indicator is flashing. Each time the button is pressed, one track will be cleared, beginning with the last track programmed.

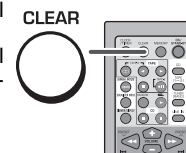**To cancel the programmed play mode:**

Whilst in the stop mode and the "MEMORY" indicator is lit, press the CLEAR button on the remote control. The "MEMORY" indicator will disappear and all the programmed contents will be cleared.

Adding tracks to the programme:

If a programme has been previously stored, the "MEMORY" indicator will be displayed. Then follow steps 1 - 5 to add tracks. The new tracks will be stored after the last track of the original programme.


To check which tracks are programmed:

Whilst the unit is stopped in the programmed play mode, press the ◀◀ or ►► button.

Notes:

- When open the CD compartment, the programme is automatically cancelled.
- Even if you change the function from CD to another, the programmed selections will not be cleared.
- During programme operation, random play is not possible.

Listening to the radio

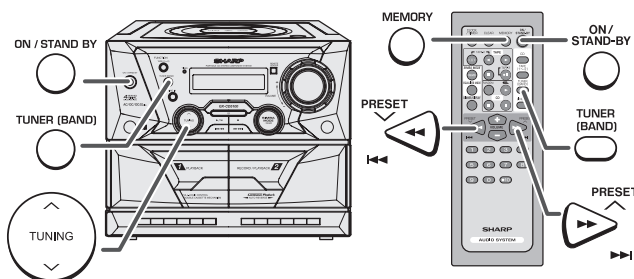

Note:

This product can receive FM stereo/FM monaural and SW1/SW2/MW monaural broadcast. SW1/SW2/MW stereo broadcasts will not be played in stereo.

■ Tuning

- 1 Press the ON/STAND-BY button to turn the power on.**
- 2 Press the TUNER (BAND) button repeatedly to select the desired frequency band (FM, SW-1, SW-2 or MW).**
- 3 Press the TUNING (∨ or ∧) button to tune in to the desired station.**

Manual tuning:
Press the TUNING button as many times as required to tune in to the desired station.

Auto tuning:
When the TUNING button is pressed for more than 0.5 seconds, scanning will start automatically and the tuner will stop at the first receivable broadcast station.

Notes:

 
- When radio interference occurs, auto scan tuning may stop automatically at that point.
- Auto scan tuning will skip weak signal stations.
- To stop the auto tuning, press the TUNING button again.

To receive an FM stereo transmission:

Press the TUNER (BAND) button to display the "ST" indicator.

- "∞" will appear when an FM broadcast is in stereo.
- If the FM reception is weak, press the TUNER (BAND) button to extinguish the "ST" indicator. The reception changes to monaural, and the sound becomes clearer.


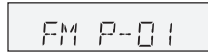
FM stereo mode indicator



FM stereo receiving indicator

■ Memorising a station

You can store 40 (FM, SW-1, SW-2 and MW) stations in memory and recall them at the push of a button. (Preset tuning)

- 1 Perform steps 1 - 3 in "Tuning" on page 18.**
- 2 Press the MEMORY button to enter the preset tuning saving mode.**

- 3 Within 30 seconds, press the PRESET (∨ or ∧) button to select the preset channel number.**
Store the stations in memory, in order, starting with preset channel 1.
- 4 Within 30 seconds, press the MEMORY button to store that station in memory.**


If the "MEMORY" and preset number indicators disappear before the station is memorised, repeat the operation from step 2.
- 5 Repeat steps 1 - 4 to set other stations, or to change a preset station.**
When a new station is stored in memory, the station previously memorised will be erased.

Note:

The backup function protects the memorised stations for a few hours should there be a power failure or the AC power lead disconnection.

■ To recall a memorised station

Press the PRESET (∨ or ∧) button for less than 0.5 seconds to select the desired station.

■ To scan the preset stations

The stations saved in memory can be scanned automatically.
(Preset memory scan)

- 1 Press the PRESET (∨ or ∧) button for more than 0.5 seconds. The preset number will flash and the programmed stations will be tuned in sequentially, for 5 seconds each.
- 2 Press the PRESET (∨ or ∧) button again when the desired station is located.


■ To erase entire preset memory

- 1 Press the ON/STAND-BY button to enter the stand-by mode.
- 2 Whilst pressing down the REC PAUSE ●|| button and the CONTINUOUS PLAYBACK ⇄ button, press the TUNER (BAND) button until "TUNER CL" appears.



Setting the FM/MW interval

GX-CD5100W

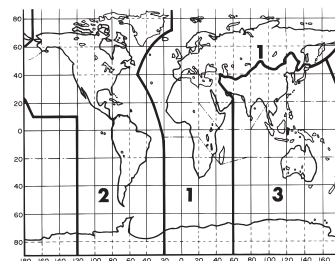


The International Telecommunication Union (ITU) has established that member countries should maintain either a 100 kHz or 50 kHz interval between broadcasting frequencies of FM stations and 10 kHz or 9 kHz for MW stations. The illustration shows the 50/9 kHz zones (regions 1 and 3), and the 100/10 kHz zone (region 2).

This product is not equipped with a span selector. However, it will be adjusted to a 50 kHz FM (9 kHz MW) interval when shipped from the factory.

Before using the unit, be sure to set it to the FM/MW tuning interval (span) used in your area.

To change the FM/MW tuning interval:

 - 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press and hold down the TUNER (BAND) button, for 3 seconds.



- 3 The display will appear for 2 seconds and the new setting is activated.

Caution:

- When the unit is left for a few hours after the span has been switched and the AC power lead disconnected, the FM span will be automatically returned to 50 kHz (MW span to 9 kHz). If this happens, set the span again.
- When the span is switched, all the memorised stations will be cancelled.

Listening to a cassette tape (TAPE 1 or TAPE 2)


Before playback:

- For playback, use normal or low-noise tapes for the best sound. (Metal or CrO₂ tapes are not recommended.)
- Do not use C-120 tapes or poor-quality tapes, as they may cause malfunctions.
- Before loading a tape into the cassette compartment, tighten the slack with a pen or a pencil.




Auto power off function:

In the stop mode of tape operation, the main unit enters the stand-by mode after 15 minutes of inactivity.

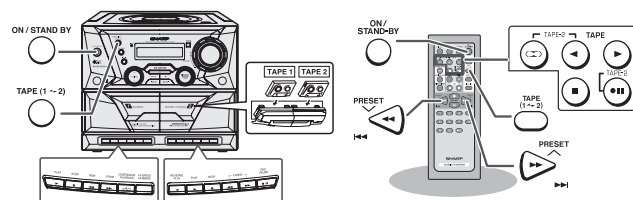

■ Tape 1 playback (one side)

 - 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the TAPE (1 → 2) button to select TAPE 1.
- 3 Open the cassette compartment by pushing the area marked "▲".
- 4 Load a cassette into the TAPE 1 cassette compartment with the side to be played facing towards you.
- 5 Press the ► button to start playback.



Tape play indicator

■ Continuous playback (TAPE 1 to TAPE 2)

- 1 Press the area marked "▲" and load cassettes into the TAPE 1 and TAPE 2 cassette compartments.
 - 2 Press the TAPE (1 → 2) button to select TAPE 1.
 - 3 Press the CONTINUOUS PLAYBACK button.
 - 4 Press the TAPE 1 ► button to start playback.
- Playback begins from side A on TAPE 1, the playback sequence will be as follows:
TAPE 1 side A → TAPE 2 side A → TAPE 2 side B → stop

To stop playback:

Press the ■ button.

To cancel continuous playback:

 
Press the CONTINUOUS PLAYBACK button again and "CP" indicator will disappear.

Note:


This function cannot be operated from TAPE 2.

■ Tape 2 playback (two sides)

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the TAPE (1 → 2) button to select TAPE 2.
- 3 Open the cassette compartment by pushing the area marked "▲".
- 4 Load a cassette into the TAPE 2 cassette compartment with side A facing you.
- 5 Press the button on the remote control to choose one side or both sides.
 - ▷... To listen to both sides.
 - To play both sides (▷), start from side A. When playback starts from side B, side A will not be played.
 - ◁... For endless repeat play of both sides.
 - ≡ ... To listen to one side.
- 6 Press the ► button to listen to side A, or the ◀ button for side B.



Forward play

 




Reverse play

To change the side of tape:

Press the ◀ or ▶ button during playback.

■ To fast wind (TAPE 1 or TAPE 2)

Function	Main unit	Remote control	Operation
Fast forward/rewind		 	Press in the playback or stop mode.

Caution:

- To remove the cassette, press the ■ button, and then open the compartment.
- Before changing from one tape operation to another, press the ■ button.
- If a power failure occurs during tape operation, the tape head will remain engaged with the tape and the cassette door will not open. In this case, wait until the power is restored.

■ Mixing from a microphone and TAPE

To listen to mixed signals from an external microphone and TAPE.

- 1 To protect the speakers from shock noise and to avoid disturbing noises, set the VOLUME control to minimum.**
Be sure that the microphone has a 3.5mm (1/8") diameter plug, and is of 600 ohms impedance: if not, use an appropriate adaptor.
- 2 Connect the microphone plug to the Mixing Mic socket.**
- 3 Press the TAPE (1 → 2) button.**
- 4 Load a cassette into the TAPE 1 or TAPE 2 cassette compartment.**
- 5 Press the ► button of the TAPE 1 or TAPE 2.**
- 6 Adjust the volume of the audio source and the microphone using the VOLUME control.**

Recording to a cassette tape


GX-CD5100W

Before recording:

- When recording important selections, make a preliminary test to ensure that the desired material is properly recorded.
- SHARP is not liable for damage or loss of your recording arising from malfunction of this unit.
- The volume and sound controls can be adjusted with no effect on the recorded signal (Variable Sound Monitor).
- **For recording, use only normal tapes. Do not use metal or CrO₂ tapes.**




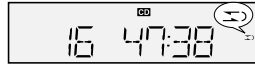

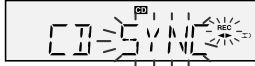


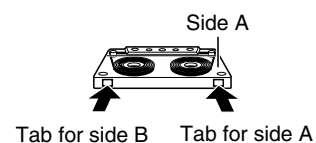Erase-prevention tab of cassette tapes:

- When recording on a cassette tape, make sure that the erase-prevention tabs are not removed. Cassettes have removable tabs that prevent accidental recording or erasing.
- To protect the recorded sound, remove the tab after recording. Cover the tab hole with adhesive tape to record on the tape without the tab.

 
 




Recording to a cassette tape (continued)


■ Recording from a CD

- 1 Press the ON/STAND-BY button to turn the power on.**
- 2 Load a cassette into the TAPE 2 cassette compartment with side A facing you.**
Wind past the leader of the tape, on which recording cannot be performed.
- 3 Press the CD (CD) button and load the desired disc.**
- 4 Press the  button to choose one side or both sides.**
 ... To record on both sides.
 ... To record on only one side.
 
- 5 Press the  button.**
Recording will be paused.
 
- 6 Press the  button to record on side A, or the  button for side B.**
CD playback will start approximately 7 seconds after the tape starts.

To perform programmed recording:

- 1 Programme discs and tracks. (See page 17.)
- 2 Press the  (TAPE-2 ) button.
- 3 Press the  button to record on side A, or the  button for side B.

To stop recording:

Press the  button.
The CD and tape will stop.

Note:

To record on both sides, begin with side A. (If recording is started from side B, the tape will not switch over to side A.)

 







Caution:

Do not open the CD compartment during recording.


Auto restart function:

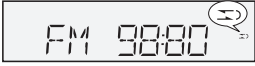If the recording side is switched from side A to B during recording, the system will record the interrupted track on side B from its beginning. The recording will be made without cutting the beginning of the track on side B.


■ Recording from the radio

- 1 Tune in to the desired station. (See page 18.)**
- 2 Load a cassette into the TAPE 2 cassette compartment with the side A facing you.**
Wind past the leader of the tape, on which recording cannot be performed.
- 3 Press the  button to choose one side or both sides.**
 ... To record on both sides.
 ... To record on only one side.
 
- 4 Press the  button.**
Recording will be paused.
 
- 5 Press the  button to record on side A, or the  button on the remote control for side B.**
To record on both sides, begin with side A. (If recording is started from side B, the tape will not switch over to side A.)

To interrupt recording:


Press the  button.
To resume recording, press the same recording button you pressed in step 5. Other buttons do not allow resuming.

To stop recording:


 
 
 
 

Press the  button.

Beat cancel switch:

If a whistling noise occurs when recording from an MW, SW1 or SW2 station, set the BEAT CANCEL switch to A, B or C, whichever gives the best reception.

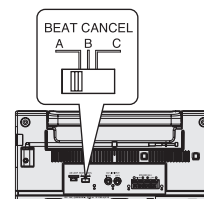

 

■ Recording from the built in microphone

- 1 Press the **TAPE (1 → 2)** button until **TAPE 2** appears on the display.
- 2 Load a cassette into the **TAPE 2** cassette compartment.
- 3 Press the  button to choose one side or both sides.
 ... To record on both sides.
 ... To record on only one side.
- 4 Press the  button.
Recording will be paused.
- 5 Press the  button again to begin recording on side A or  button for side B.



Notes:

- Do not connect anything to the Mixing Mic socket.
- Monitoring of the recording is not possible.
- Recording from the built-in microphone is not in stereo.

■ Mixing recording from microphone and tape

- 1 Connect the microphone plug to the Mixing Mic socket.
- 2 Press the **TAPE 1** function.
- 3 Load a blank tape into the **TAPE 2** cassette compartment. Insert a pre-recorded cassette into the **TAPE 1** cassette compartment.
- 4 Press the  button.
- 5 Press the  button of **TAPE 1**.

 Notes:

 


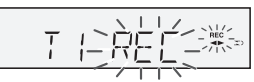
 
- Place the microphone about 10 - 15 cm (4 - 6") away from the source.
- If the howling occurs, lower the volume or move the microphone as far as possible from the speaker.
- To record the microphone signals only, load a cassette into the **TAPE 2** cassette compartment, set the **FUNCTION** to **TAPE 2**. Press the  button and then press the **TAPE 2**  button.

Caution:

When not using the microphone, remove the microphone plug from the Mixing Mic socket.

■ Dubbing from tape to tape

 
You can record from **TAPE 1** to **TAPE 2**.

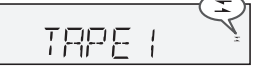- 1 Press the **ON/STAND-BY** button to turn the power on.
- 2 Load a pre-recorded cassette into the **TAPE 1** cassette compartment. Insert a blank tape into the **TAPE 2** cassette compartment.
It is recommended that the recording tape is the same length as the master tape.
- 3 Press the **TAPE (1 → 2)** button until "**TAPE 1**" appears on the display.
The reverse mode will be set to "".

- 4 Press the  button.
Recording will be paused.

- 5 Press the **TAPE 1**  button to start dubbing.

High speed dubbing:




After step 4 of the above operation, press the **HI-SPEED DUBBING** button.

To stop dubbing:

Press the  button.

TAPE 1 and **TAPE 2** will simultaneously stop.

   ■ Erasing recorded tapes

- 1 Load the tape to be erased into the **TAPE 2** cassette compartment with the side to be erased facing towards you.
- 2 Press the **TAPE (1 → 2)** button until "**TAPE 1**" appears on the display.
- 3 Press the  button.
- 4 Press the **TAPE 2**  button to erase side A, or the  button on the main unit to erase side B.

Note:

Make sure that the **TAPE 1** is not in use.

Do not connect anything to the Mixing Mic socket.

Timer and sleep operation (Remote control only)

Timer playback:

The unit turns on and plays the desired source (CD, MP3 disc, tuner, tape) at the preset time.

Timer recording:

The unit turns on and starts recording from the tuner at the preset time.

This unit has 2 types of timer: ONCE TIMER and DAILY TIMER.

Once timer: Once timer play and once timer recording works for one time only at a preset time.

For example, if you are away but want to record a programme on a radio station.


Daily timer: Daily timer play and daily timer recording works at the same preset time everyday.

For example, set the timer as a wake up call every morning.

Using the once timer and daily timer in combination:


For example, use the once timer to record a radio programme, and use the daily timer to wake up.

- 1 Set the daily timer (pages 24 - 25).
- 2 Set the once timer (pages 24 - 25).

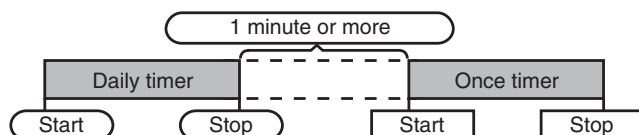

Note:

When the setting times for the daily timer and once timer overlap, the once timer takes priority. Allow an interval of at least 1 minute between operations.

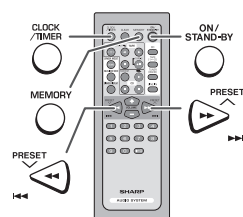

■ Timer playback or timer recording

Before setting timer:

- 1 Check that the clock is set to the correct time (refer to page 13). If it is not set, you cannot use the timer function.
- 2 For timer playback: Load a cassette or disc to be played.
For timer recording: Load a cassette for recording in the cassette compartment.



- 1 Press the ON/STAND-BY button to turn the power on.**
- 2 Press the CLOCK/TIMER button.**
- 3 Within 10 seconds, press the ◀ or ▶ button to select "ONCE" or "DAILY", and press the MEMORY button.**

Set the unit to the correct time if "ONCE" or "DAILY" does not appear.
- 4 Within 10 seconds, press the ◀ or ▶ button to select "ONCE SET" or "DAILY SET", and press the MEMORY button.**
- 5 Press the ◀ or ▶ button to select "PLAY" or "REC", and press the MEMORY button.**

The illustrations show the daily timer setting.
- 6 Press the ◀ or ▶ button to adjust the hour and then press the MEMORY button.**

The illustrations show the timer playback setting in the daily timer mode.
- 7 Press the ◀ or ▶ button to adjust the minutes and then press the MEMORY button.**
- 8 Set the time to finish as in steps 6 and 7 above.**

9 Switch input with the ◀◀ or ▶▶ button, and then press the MEMORY button.

To select the timer playback source: TUNER, TAPE 1, TAPE 2 or LINE IN.

To select the timer recording source: TUNER or LINE IN.

- When you select the tuner, select a station by pressing the ◀◀ or ▶▶ button, and then press the MEMORY button.
- If a station has not been programmed, "NO P.SET" will be displayed and timer setting will be cancelled.

10 Adjust the volume using the VOLUME control, and then press the MEMORY button.

Do not turn the volume up too high.

11 Press the ON/STAND-BY button to enter the power stand-by mode.

The "TIMER" indicator lights up and the unit is ready for timer playback or timer recording.



12 When the preset time is reached, playback or recording will start.

The volume will increase gradually until it reaches the preset volume.

13 When the timer end time is reached, the system will enter the power stand-by mode automatically.

Once timer:

The timer will be cancelled.

Daily timer:

The timer will operate at the same time every day. It will continue until the daily timer setting is cancelled. Cancel the daily timer when it is not used.

Note:

When performing timer playback or recording using another unit connected to the CD/LINE INPUT sockets, select "LINE IN" in step 9. This unit will turn on or enter the power stand-by mode automatically, however, the connected unit will not turn on or off.

Checking the timer setting in the timer stand-by mode:

- 1 Press the CLOCK/TIMER button.
 - 2 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE" or "DAILY", and press the MEMORY button.
 - 3 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE CAL" or "DAILY CAL", and press the MEMORY button.
- The unit returns to the timer stand-by mode after displaying the settings in order.

Cancelling the timer setting in the timer stand-by mode:

- 1 Press the CLOCK/TIMER button.
 - 2 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE" or "DAILY", and press the MEMORY button.
 - 3 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE OFF" or "DAILY OFF", and press the MEMORY button.
- Timer will be cancelled (the setting will not be cancelled).

Reusing the memorised timer setting:



The timer setting will be memorised once it is entered. To reuse the same setting, perform the following operations.

- 1 Turn the power on and press the CLOCK/TIMER button.
- 2 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE" or "DAILY", and press the MEMORY button.
- 3 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE ON" or "DAILY ON", and press the MEMORY button.
- 4 Press the ON/STAND-BY button to enter the power stand-by mode.

Timer and sleep operation (Remote control only) (continued)

■ Sleep operation

The CD, MP3 disc, radio and cassette tape can all be turned off automatically.

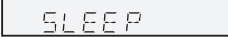- 1 Play back the desired sound source.**
- 2 Press the CLOCK/TIMER button.**
- 3 Within 10 seconds, press the ◀◀ or ▶▶ button to select "SLEEP", and press the MEMORY button.** 
- 4 Press the ◀◀ or ▶▶ button to select the time. (Maximum: 3 hours - Minimum: 1 minute)**
 - 3 hours - 5 minutes → 5-minute intervals
 - 5 minutes - 1 minute → 1-minute intervals
- 5 Press the MEMORY button.** "SLEEP" will appear. 
- 6 The unit will enter the power stand-by mode automatically after the preset time has elapsed.** The volume will be turned down 1 minute before the sleep operation finishes.

To confirm the remaining sleep time:

- 1 Whilst "SLEEP" is indicated, press the CLOCK/TIMER button.
- 2 Within 10 seconds, press the ◀◀ or ▶▶ button to select "SLEEP X : XX".
"X : XX" is sleep remaining time.
- The remaining sleep time is displayed for about 10 seconds.
- You can change the remaining sleep time whilst it is displayed by pressing the MEMORY button (steps 4 - 5).

To cancel the sleep operation:

Press the ON/STAND-BY button whilst "SLEEP" is indicated. To cancel the sleep operation without setting the unit to the stand-by mode, proceed as follows.

- 1 Whilst "SLEEP" is indicated, press the CLOCK/TIMER button.
- 2 Within 10 seconds, press the ◀◀ or ▶▶ button to select "SLEEP OFF", and press the MEMORY button.

■ To use timer and sleep operation together


Sleep and timer playback:

For example, you can fall asleep listening to the radio and wake up to tape in the next morning.

Sleep and timer recording:

For example, you can fall asleep listening to the tape and record radio programmes whilst sleeping.

- 1 Set the sleep time (see left, steps 1 - 5).
- 2 Whilst the sleep timer is set, set the timer playback or recording (steps 2 - 10, pages 24 - 25).

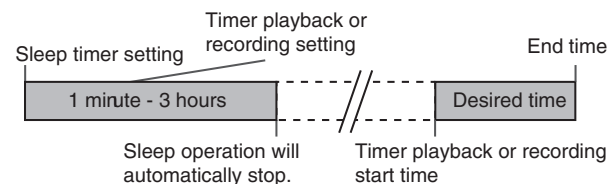


Caution:

When using the cassette deck, be sure the tape length is long enough to perform both functions. If you want to sleep and wake up listening to a tape, and the length of the tape is shorter than the sleep timer setting, timer playback or recording will not be possible.

Enhancing your system

GX-CD5100W

The connection lead is not included. Purchase a commercially available lead as shown below.

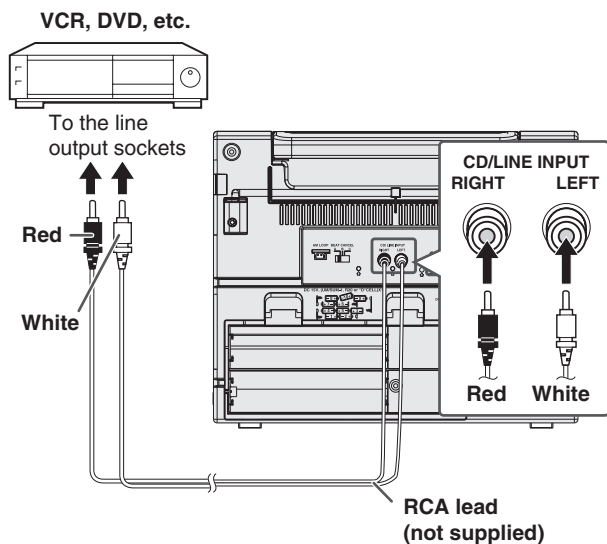

■ Listening to playback sounds of VCR, DVD, etc.

- 1 Connect a VCR, DVD, etc. to the CD/LINE INPUT sockets.
- 2 Press the ON/STAND-BY button to turn the power on.
- 3 Press the LINE IN button.
- 4 Play the connected equipment.


You can enjoy sounds from the supplied speakers.

■ To record on a tape from VCR etc.

- 1 Insert a cassette in the TAPE 2 cassette compartment.
- 2 Press the LINE IN button.
- 3 Press the **II** button.
- 4 Press the **▶** or **◀** button.
- 5 Play the VCR, etc.

■ Headphones

- Before plugging in or unplugging the headphones, reduce the volume.
- Be sure your headphones have a 3.5 mm (1/8") diameter plug and impedance between 16 and 50 ohms. The recommended impedance is 32 ohms.
- Plugging in the headphones disconnects the speakers automatically. Adjust the volume using the VOLUME control.

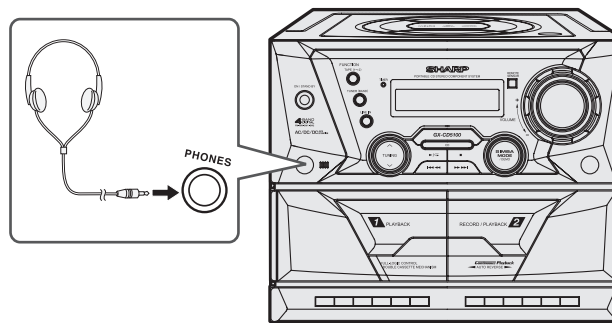

Troubleshooting chart

Many potential problems can be resolved by the owner without calling a service technician.

If something is wrong with this product, check the following before calling your authorised SHARP dealer or service centre.

■ General

Symptom	Possible cause
● The clock is not set to the correct time.	● Did a power failure occur? Reset the clock. (Refer to page 13.)
● When a button is pressed, the unit does not respond.	● Set the unit to the power stand-by mode and then turn it back on. ● If the unit still malfunctions, reset it. (Refer to page 29.)
● No sound is heard.	● Is the volume level set to "0"? ● Are the headphones connected? ● Are the speaker wires disconnected?

■ CD player

Symptom	Possible cause
● Playback does not start. ● Playback stops in the middle or is not performed properly.	● Is the disc loaded upside down? ● Does the disc satisfy the standards? ● Is the disc distorted or scratched?
● Playback sounds are skipped, or stopped in the middle of a track.	● Is the unit located near excessive vibrations? ● Is the disc very dirty? ● Has condensation formed inside the unit?

■ Tuner

Symptom	Possible cause
● The radio makes unusual noises continuously.	● Is the unit placed near the TV or computer? ● Is the FM aerial or AM loop aerial placed properly? Move the aerial away from the AC power lead if it's located nearby.

■ Remote control

Symptom	Possible cause
● The remote control does not operate.	● Is the AC power lead of the unit plugged in? ● Is the battery polarity correct? ● Are the batteries dead? ● Is the distance or angle incorrect? ● Does the remote control sensor receive strong light?

■ Cassette deck

Symptom	Possible cause
● Cannot record.	● Is the erase-prevention tab removed?
● Cannot record tracks with proper sound quality. ● Cannot erase completely.	● Is it a normal tape? (You cannot record on a metal or CrO ₂ tape.)
● Sound skipping. ● Cannot hear treble. ● Sound fluctuation.	● Is there any slack? ● Is the tape stretched? ● Are the capstans, pinch rollers, or heads dirty?
● Cannot remove the tape.	● If a power failure occurs during playback, the heads remain engaged with the tape. Do not open the compartment with great force.

■ If trouble occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.


 
If such a problem occurs, do the following:


- 1 Set the unit to the stand-by mode and turn the power on again.
- 2 If the unit is not restored in the previous operation, unplug and plug in the unit, and then turn the power on.

Note:

If neither operation above restores the unit, clear all the memory by resetting it.

■ Clearing all the memory (reset)

 - 1 Press the ON/STAND-BY button to enter the power stand-by mode.
- 2 Whilst pressing down the REC PAUSE  button and the CONTINUOUS PLAYBACK  button, press the SIMBA MODE/DEMO button until "CLEAR AL" appears.



Caution:

This operation will erase all data stored in memory including clock, timer settings and tuner preset.

■ Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (CD pickup, tape heads, etc.) or on the transmitter on the remote control. Condensation can cause the unit to malfunction. If this happens, leave the power on with no disc (or cassette) in the unit until normal playback is possible (about 1 hour). Wipe off any condensation on the transmitter with a soft cloth before operating the unit.

■ Before transporting the unit


Remove CDs from the unit. Make sure there is no CD in the disc spindle. Then, set the unit to the power stand-by mode. Carrying the unit with discs left inside can damage the unit.

Maintenance

GX-CD5100W

■ Cleaning the tape-handling parts

- Dirty heads, capstans or pinch rollers can cause poor sound and tape jams. Clean these parts with a cotton swab moistened with commercial head/pinch roller cleaner or isopropyl alcohol.
- When cleaning the heads, pinch rollers, etc., unplug the unit which contains high voltages.

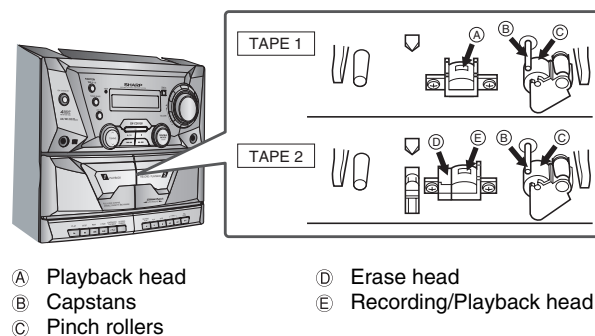

- After long use, the deck's heads and capstans may become magnetised, causing poor sound. Demagnetise these parts once every 30 hours of playing/recording time by using a commercial tape head demagnetiser. Read the demagnetiser's instructions carefully before use.

■ Cleaning the cabinet

Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then with a dry cloth.



Caution:

- Do not use chemicals for cleaning (petrol, paint thinner, etc.). It may damage the cabinet finish.
- Do not apply oil to the inside of the unit. It may cause malfunctions.

Specifications

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

■ General

Power source	AC 110-127/220-240 V, 50/60 Hz DC IN 12V  DC 15 V  , (UM/SUM-1 or R20) x 10
Power consumption	35 W
Output power	PMPO: 400 W (Total) (AC operation) MPO: 36 W (18 W + 18 W) (AC operation, 10% T.H.D) RMS: 25 W (12.5 W + 12.5 W) (AC operation, 10% T.H.D)
Output terminal	Headphones: 16 - 50 ohms (recommended: 32 ohms)
Input terminals	Mixing microphone : 600 ohms Line input: 350 mV/47 kohms
Dimensions	Width: 300 mm (11-4/5") Height: 252 mm (9-9/10") Depth: 260 mm (10-1/4")
Weight	4.12 kg (9.08 lbs.) without batteries

■ Compact disc player

Type	Compact disc
Signal readout	Non-contact, 3-beam semiconductor laser pickup
Audio channels	2
Filter	8-times over sampling digital filter
D/A converter	1-bit D/A converter
Wow and flutter	Unmeasurable (less than 0.001% WRMS)

■ Radio

Frequency range	FM: 88 - 108 MHz SW1: 3.2 - 7.3 MHz SW2: 9.5 - 21.85 MHz MW: 531 - 1,602 kHz
------------------------	---

■ Tape recorder

Frequency response	60 - 8,000 Hz (Normal tape)
Signal/noise ratio	40 dB
Wow and flutter	0.3% (WRMS)
Motor	DC 12 V electric governor
Bias system	AC bias
Erase system	Magnet erase

■ Speaker section

Type	2-way type
Speakers	13 cm (5-1/8") Woofer 5 cm (2") Tweeter
Maximum input power	25 W
Rated input power	12.5 W
Impedance	8 ohms
Dimensions	Width: 232 mm (9-1/8") Height: 262 mm (10-5/16") Depth: 235 mm (9-1/4")
Weight	1.80 kg (3.97 lbs.)/each



SHARP

FOR LOCATION ENQUIRIES WITHIN

AUSTRALIA

REGARDING YOUR LOCAL

SHARP APPROVED SERVICE CENTRE

VISIT OUR WEBSITE AT

www.sharp.net.au

OR CALL SHARP CUSTOMER CARE

1300 135 022

(LOCAL CALL COST APPLY WITHIN AUSTRALIA)

SHARP CORPORATION OF AUSTRALIA PTY LTD

SHARP

FOR LOCATION ENQUIRIES WITHIN

NEW ZEALAND

REGARDING YOUR LOCAL

SHARP APPROVED SERVICE CENTRE

VISIT OUR WEBSITE AT

www.sharp.net.nz

CONTACT YOUR SELLING DEALER/RETAILER

OR CALL

SHARP CUSTOMER SERVICES

TELEPHONE: 09 573 0111

FACSIMILE: 09 573 0113

SHARP CORPORATION OF NEW ZEALAND LIMITED

SPform019(JUNE 2004)



SHARP

WARRANTY

Consumer Electronic Products

Congratulations on Your Purchase!

This Sharp product is warranted against faults in materials and manufacture for a period of twelve(12) months from the date of original purchase.

If service is required during the warranty period, please contact your nearest Sharp Approved Service Centre. These repairs would be carried out at no charge to the owner, subject to the conditions specified herein.

The owner is responsible for any transportation and insurance costs if the product has to be returned for repair.

This warranty does not extend to accessories or defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, accidental damage, improper voltage, liquid spillage, vermin infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim.

This warranty is in addition to and in no way limits, varies or excludes any express and implied rights and remedies under any relevant legislation in the country of sale.

IMPORTANT

DO NOT RETURN THIS DOCUMENT TO SHARP

For your reference, please enter the particulars of your purchase below and retain, with your purchase documentation.

Model No. _____

Date of Purchase _____

Serial No. _____

Retailer _____

SHARP

SHARP CORPORATION OF AUSTRALIA PTY. LIMITED
ABN 40 005 638 405
1 Huntingwood Drive
Huntingwood NSW 2148

SHARP CORPORATION OF NEW ZEALAND LIMITED
531 Hogg Johnson Drive
Penrose, Auckland

SHARP014 (JUNE 2004)

IMPORTANT NOTICE: This warranty applies only to products sold in Australia & New Zealand

SHARP

SHARP CORPORATION

TINSZ A195 AWZZ

06E R MW ①

