



Cat. No. 22-178
OWNER'S MANUAL

Please read before using this equipment.

**Auto-Ranging LCD
Digital Multimeter**



RadioShack™


	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		






This symbol is intended to alert you to the presence of un-insulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

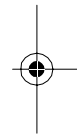

© 1996 Tandy Corporation.
All Rights Reserved.
RadioShack is a trademark used by Tandy Corporation.

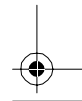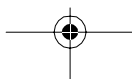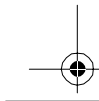

FEATURES

Your RadioShack Auto-Ranging LCD Digital Multimeter is a portable 3³/₄-digit, compact multimeter that is ideal for field, lab, shop, bench, and home applications. Here are some features that make your new digital multimeter a real pro.

Latest IC and Display Technology — ensures reliability, accuracy, stability, and ease of operation.

Auto Power Shut-Off — helps conserve battery power by sounding a beep then turning off if you do not change any settings for 10 minutes.

Auto-Ranging with Manual-Ranging Override — automatically selects a range when you measure voltages, resistance, or current. You can also manually set the range when measuring values you know are within a certain range.

Bar-Graph Display — lets you quickly identify nulls, peaks, and trends.

High-Speed Sampling — updates the bar graph display 12 times each second.

Expanded Current Ranges — allow measurements in microampere ranges.

Data Hold Function — holds the display so you can see the reading even after you disconnect the probes.

Overload and Transient Protection — helps protect the meter from overvoltage in most ranges.

Continuity Buzzer Function — lets you quickly hear if there is continuity in a cable or between two points.

Diode Check Function — lets you safely check semi-conductors for open, shorted, or normal junctions.

Auto-Polarity Operation — protects your meter and gives valid measurements even when you connect the leads in reverse polarity.

Low-Battery Indicator — shows when you need to replace the batteries.

Fold-Out Stand — lets you adjust the meter's position for the best visibility on a flat surface.

Protective Holster — protects the meter from damage and lets you hang the meter on a wall.

Note: Your multimeter requires two AA batteries (not supplied).

CONTENTS

A Word About Safety	6
Specifications	8
Special Panel Markings	12
Preparation	13
Installing Batteries	13
Using Test Leads	14
Using Alligator Clips	15
Using the Stand and Holster	16
Using the Meter	17
Taking Accurate Measurements	18
Automatic Power Off	19
Manually Setting the Range	20
Holding a Measurement	20
Using the Bar Graph	21
Making Measurements	22
Measuring DC/AC Voltage	22
Measuring an AC Voltage Riding on a DC Source Bias	24
Measuring Three-Phase AC Voltage	25
Measuring DC/AC Current	26
Measuring Resistance	28
Checking Continuity	29
Checking Diodes	30
Maintenance	32
Fuse Replacement	33

A WORD ABOUT SAFETY

We have taken every precaution in designing this meter to ensure that it is as safe as we can make it. But, safe operation depends on you, the operator. We recommend that you follow these simple safety rules:

- Never apply voltages to the meter that exceed the limits given in the specifications. Never apply more than 1000V DC or 750V RMS AC between input jacks or ground.
- Use extreme caution when working with voltages above 100V. Always disconnect power from the circuit you are measuring before you connect test leads to high-voltage points.
- Never connect to a source of voltage when you select diode check, resistance measurement, continuity, or one of the current measurement functions.
- Always discharge filter capacitors in the power supply of the circuit under test before you attach test leads.
- Always turn off power and disconnect the test leads before you replace the batteries or fuse.
- Never operate the meter unless the back cover is in place and fully closed.

-
- Because many AC/DC sets have a potentially hot chassis, be sure the top of your workbench and the floor underneath it are made of non-conductive materials.
 - The multimeter is fully calibrated and tested. Under normal use, no further adjustment should be necessary. If the meter requires repair, do not try to adjust it yourself. Take it to your nearest RadioShack store. Service by unauthorized personnel voids the warranty.

WARNING: USE EXTREME CAUTION IN USE OF THIS DEVICE. IMPROPER USE OF THIS DEVICE CAN RESULT IN INJURY OR DEATH. FOLLOW ALL SAFEGUARDS SUGGESTED IN THIS OWNER'S MANUAL IN ADDITION TO NORMAL SAFETY PRECAUTIONS IN DEALING WITH ELECTRICAL CIRCUITS. DO NOT USE THIS DEVICE IF YOU ARE UNFAMILIAR WITH ELECTRICAL CIRCUITS AND TESTING PROCEDURES. NOT FOR COMMERCIAL OR INDUSTRIAL USE.

SPECIFICATIONS

Display LCD 3³/₄-digits maximum,
3200 count resolution

Bar Graph 33 segments
(100 counts of resolution/segment
sampled 12 times/second)

RANGES AND ACCURACY

DC Volts

300 mV–3 V $\pm 0.5\%$ of reading,
 $\pm 0.2\%$ of full scale, ± 1 in last digit

30–300 V $\pm 1.0\%$ of reading,
 $\pm 0.2\%$ of full scale, ± 1 in last digit

1000 V $\pm 1.0\%$ of reading,
 $\pm 0.2\%$ of full scale, ± 1 in last digit
(Maximum Measurement: 1000 Volts)

AC Volts

3–30–300 V $\pm 1.2\%$ of reading,
 $\pm 0.5\%$ of full scale, ± 1 in last digit

750 V $\pm 1.2\%$ of reading,
 $\pm 0.5\%$ of full scale, ± 1 in last digit
(Maximum Measurement: 750 Volts RMS)

DC Current

300 mA/30 mA $\pm 1.0\%$ of reading,
 $\pm 0.2\%$ of full scale, ± 1 in last digit

3000 mA/300 mA $\pm 1.5\%$ of reading,
 $\pm 0.2\%$ of full scale, ± 1 in last digit

20 A $\pm 4.0\%$ of reading,
 $\pm 0.2\%$ of full scale, ± 2 in last digit
(Maximum Measurement: 20 A)

Measurement must be done within 30 seconds after 20 A input.

AC Current

300–3000 mA–30–300 mA $\pm 2.0\%$ of reading,
 $\pm 0.5\%$ of full scale, ± 1 in last digit
(Maximum Measurement: 300 mA)

20 A $\pm 4.0\%$ of reading,
 $\pm 0.5\%$ of full scale, ± 2 in last digit

Measurement must be done within 30 seconds after 20 A input.

Resistance

300 ohms–3–30–300 kohms $\pm 1.0\%$ of reading,
 $\pm 0.2\%$ of full scale, ± 1 in last digit

3 M ohms $\pm 2.0\%$ of reading,
 $\pm 0.2\%$ of full scale, ± 1 in last digit

30 M ohms..... $\pm 3.5\%$ of reading,
 $\pm 0.5\%$ of full scale, ± 1 in last digit

Range Full auto-range or manual-range control for
voltage and resistance measurements. Semi-auto and
manual range for current measurements.

Polarity Automatic, Minus sign for negative
polarity

Input Impedance 10 Megohm (DCV/ACV),
More than 100 Megohm on 300 mV DC

Continuity Function Continuity buzzer sounds
at less than about 20 ohms

Low Battery Indicator appears when
battery voltage drops below operating voltage

Overrange Indication **OL**. (overload) appears on the display to indicate that the measurement exceeds the absolute maximum reading. Use care in DC1000V, AC 750 V, and DC/AC 20 A ranges, as exceeding the maximum limits of these ranges can damage the meter and prevent an overrange indication.

Operating Temperature32 to 122°F
(0 to 50°C)

Storage Temperature-4 to 140°F
(-20 to 60°C)

Power Source Two AA batteries

Power Consumption 5 mW (Typical)



Dimensions (WHD) $3\frac{1}{16} \times 6\frac{1}{2} \times 1\frac{3}{8}$ Inches
(78 × 165 × 35 mm)

Weight 12.3 oz (348 g)

Included Accessories Safety test lead with attachable alligator clip, holster, fuse (0.5A/250V)

SPECIAL PANEL MARKINGS

For your safety, we have added special markings to the panel to remind you of the measurement limitations.

20 A	The maximum current that you can measure at this terminal is 20 amps.
MAX 1KV	To avoid electrical shock or instrument damage, do not connect the common input terminal (COM jack) to any source of more than 1000 Volts with respect to earth/ground.
	Refer to complete operating instructions.
MAX 1000V ~750V	The maximum voltage that this meter can measure is 1000V DC or 750V AC.
	Be extra careful when making high-voltage measurements; DO NOT TOUCH TERMINALS OR PROBE ENDS.

PREPARATION

INSTALLING BATTERIES

Your meter requires two AA batteries for power. We recommend alkaline batteries, such as RadioShack Cat. No. 23-557.

1. Turn off the power and disconnect the test leads.
2. Remove the meter from the holster.

 
(illustration
of removal
from holster)

3. Use a Phillips screwdriver to remove the screw that secures the back cover, then lift off the cover.

(illustration)

4. Install the batteries as indicated by the polarity symbols (+ and -) marked in the battery compartment.
5. Replace the cover and secure it with the screw.

6. Replace the meter in the holster.

When  appears on the right side of the display, replace the batteries.

Warnings:

- To avoid electrical shock, disconnect both test leads from any equipment before you remove the batteries.
- Do not operate the meter until you replace the batteries and close the back cover.

Caution: Never leave weak or dead batteries in the meter. Even leak-proof types can leak and damage the meter.

When you are not going to use the meter for a few weeks, remove the batteries.

USING TEST LEADS

Use only the same type of test leads supplied with the meter. These test leads are rated for 1200 volts. You can order replacement leads from your local RadioShack store.

Caution: Although these test leads are rated for 1200 volts, the maximum rating of this meter is 1000 volts DC/750 volts RMS AC. Do not try to measure any voltage greater than 1000 volts DC/750 volts RMS AC.

USING ALLIGATOR CLIPS

Alligator clips are supplied to allow you to keep your hands free while making measurements. To attach the alligator clips to the test leads, screw the red clip to the red test lead's tip and the black clip to the black test lead's tip.

(illustration)

USING THE STAND AND HOLSTER

The fold-out stand lets you place the meter upright on a flat surface for easier viewing.

(illus of meter
w/stand and
hanging)

The holster lets you hang the meter on a wall, hold the test leads, and protect the meter from damage if you drop it.

USING THE METER

Before you use the meter the first time to make a measurement, follow these steps to confirm correct operation and to familiarize yourself with the meter's operation.

(illus showing
all controls)

1. Press **POWER** to turn on the meter. All the display elements briefly appear.
2. Set the selector to **V**.
3. Press **RANGE** to set the meter to the manual range selection mode. **RH** (Range Hold) appears on the display. Press **RANGE** again. The decimal point shifts each time you press **RANGE**. See "Manually Setting the Range" on Page 20.
4. Use the selector to switch between the meter's functions and familiarize yourself with the displays.

Notes:

- See the unit of measure on the display to distinguish the range. For example, the meter displays **mV** in the 300 mV range and **V** in the 300 V range. Also, note the position of the decimal. For example, if the display shows **.000V**, the meter is set to measure less than 1 volt. If the display shows **000V**, the meter is set to measure up to 1000 volts.
- The display might show a phantom reading in some DC and AC voltage ranges when the test leads are not connected to a circuit. This is normal. The high input sensitivity produces a wandering effect. When you connect the test leads to a circuit, a real measurement appears.

TAKING ACCURATE MEASUREMENTS

For the most accurate reading, the temperature should be between 65°F and 83°F (18°C and 28°C) (80% relative humidity maximum).

Connect the red lead to the **V•W• mA•mA•** terminal and the black lead to the **COM** terminal. All connections except 20 A measurements are made at these terminals.

Caution: When **OL.** (overload) appears on the display, the value you are measuring exceeds the meter's maximum range. This is a normal display when you measure resistance and do not have the leads connected to a component. If you are measuring voltage or current, immediately disconnect the probes from the circuit.

AUTOMATIC POWER OFF

Your meter conserves power by sounding a warning tone and automatically turning off about 10 minutes after the last time you changed settings (even if you are making measurements). To turn the meter back on, press **RANGE** or **DATA-H.**

(illustration)

MANUALLY SETTING THE RANGE

When you measure voltages or resistance, your meter can automatically select a measuring range. When you measure current, the meter automatically selects a range within the limits of the selector's setting. While this feature is convenient, it might be faster to manually set the range when measuring values that you know are within a certain range.

To switch to manual-range control, press **RANGE**. **RH** (Range Hold) appears on the display and the meter holds the range at its current setting. Repeatedly press **RANGE** to change the measuring range.

To set the meter back to auto-range control, press and hold **RANGE** for about 1 second. **RH** disappears from the display and the meter automatically selects the range that gives the best reading.

HOLDING A MEASUREMENT

Press **DATA-H** (data hold) to hold all indications on the display. **DH** appears on the display and the measured value stays on the display even if you remove the probes from the circuit, but the range controls do not work.



To cancel data hold, press **DATA-H** again or move the selector.

USING THE BAR GRAPH

The meter also indicates all the measurements on the bar graph at the bottom of the display. The bar graph's length increases and decreases with the measured value. You can easily observe changes in measurements by watching the bar graph.

Example: If the meter measures 12V in the 300V range, the display shows:

(illustration)

MAKING MEASUREMENTS

MEASURING DC/AC VOLTAGE

Caution: The maximum input limit for voltage measurement is 1000V DC and 750V AC (RMS). If you try to measure a DC voltage above 1000 volts or an AC voltage above 750 volts RMS, you can damage your meter. When you connect the meter to a voltage higher than the maximum rating, all the digits on the display blink. Disconnect the probes immediately.

Follow these steps to measure DC or AC voltage.

1. Set the selector to **V** for DC voltages or **~V** for AC voltages.

When you measure DC voltages, **V** appears on the display. When you measure AC voltages, **~** appears on the display.

2. Plug the red test lead into the **V•W• mA•mA** jack and the black test lead into the **COM** jack.
3. Connect the probes to the circuit you want to test.

When you measure DC voltages, the minus sign appears if you connected the black lead to a point in the circuit that has a higher voltage potential than where you connected the red lead.

Hint: When you use the meter to probe for a voltage in a high-voltage circuit, we recommend you do not try to position both probes at once. Instead, use one of the supplied insulated alligator clips to clamp one lead to the circuit's neutral or ground lead (usually a bare, green, or white lead in AC wiring circuits). Then probe for voltages with the other probe. This helps prevent you from accidentally touching a hot wire, since you need only concentrate on one test probe.

Warning: Never clamp onto a hot wire (usually red, black, or blue in AC wiring circuits). If you do so and then touch the other probe connected to the meter, you could receive an electric shock.



4. The meter automatically moves to the range that gives the best reading. If you selected manual range control, press **RANGE** to change the range.

MEASURING AN AC VOLTAGE RIDING ON A DC SOURCE BIAS

(illustration)

To measure an AC voltage superimposed on a DC voltage source bias, you must first measure the DC and AC voltages separately, then compute the peak voltage using the formula:

$$\text{Peak voltage} = \text{DC voltage} + \frac{\text{AC voltage}}{.707}$$

1. To measure the DC voltage, set the selector to  .
The display shows the DC voltage.
2. To measure the AC voltage, set the selector to  .
The display shows the AC voltage.

Caution: Never try to measure any circuit over 1000 V peak with respect to earth/ground.

Measuring Three-Phase AC Voltage

We designed this meter primarily to measure household AC voltages. It is not intended for commercial or industrial use. Please note the following about 3-phase, line-to-line voltages.

Warnings:

- Because of the dangers inherent in measuring three-phase circuits, do not use this meter for such applications. The actual voltage can be greater than the circuit's rated line-to-ground voltage.
- To determine the line-to-line voltage, multiply the rated line-to-ground voltage by 1.732 (the square root of 3).

For example, if the rated line-to-ground voltage is 640 volts, the line-to-line voltage is $640 \times 1.732 = 1108$ Volts AC.

This voltage exceeds the meter's rating and you should not connect the meter to this circuit.


 
MEASURING DC/AC CURRENT

To measure current, you must break the circuit and connect the leads to two circuit connection points. The connection must be in series with the circuit under test. Use the supplied alligator clips for this connection. The maximum input limit for DC/AC current measurement is 20 A.

Warning: Measuring high current (in the DC/AC 20 A range) can cause the meter's internal components to become dangerously hot. Make measurements within 30 seconds after 20 A input and allow the meter to cool for 15 minutes between such measurements.

1. Set the selector to **320/3200 μ A**, **32/320 mA**, or **20 A**.

Cautions:

- If you do not know the amount of current in the circuit you are measuring, always set the selector to **20 A** and connect the red test lead to the **20 A** jack.
 - **NEVER CONNECT THE TEST LEADS ACROSS A VOLTAGE SOURCE** while the selector is set to a current-measuring position. Doing so blows the fuse in the meter or damages the circuit under test.
2. Press  so ~ appears on the display if you are measuring AC current, or  appears if you are measuring DC current.

3. Plug the black test lead into the **COM** jack and the red test lead into the appropriate jack.
4. Remove power from the circuit under test and discharge all capacitors.
5. Break the circuit at the appropriate point.
6. Connect the probes in series with the circuit.
7. Apply power and read the current.

If the measured current's polarity is negative, a minus sign appears before the value.

If you are using the 20A jack and setting, and the measurement is less than 320 mA, remove power from the circuit, move the red test lead to the **V•W• mA•mA•** jack, set the selector to **32/320 mA**, and apply power to the circuit.

If you are using the 32/320 mA jack and setting, and the measurement is less than 3.2 mA, move the red test lead to the **V•W• mA•mA•** jack, set the selector to **320/3200 mA**, and apply power to the circuit.

Note: If the meter does not show a reading, check the fuses (see "Fuse Replacement" on Page 33).

MEASURING RESISTANCE

The resistance-measuring circuit compares the voltage gained through a known resistance (internal) with the voltage developed across an unknown resistance.

1. Remove all power from the circuit under test and discharge all capacitors.
2. Set the selector to W.

Caution: NEVER CONNECT THE PROBES TO A SOURCE OF VOLTAGE while the selector is set to W.

Note: With no resistance connected across the test leads (resistance infinite), **OL**. (overload) appears on the display when you set the selector to W. This is normal.

3. Plug the red test lead into the **V•W• mA•mA•** jack and the black lead into the **COM** jack.
4. Connect the probes across the circuit or component you want to measure.
5. The meter automatically moves to the proper range. If you select manual range control, press **RANGE** to change the range.

Caution: The meter has a circuit to protect the resistance range from over-voltage (450 volts RMS AC, 1 minute). However, to prevent accidentally exceeding the protection circuit's rating and to ensure a correct measurement, NEVER CONNECT THE PROBES TO A SOURCE OF VOLTAGE when you set the selector to W.

 

Notes:


- When you short the test leads, the meter displays a small value (less than 0.7 ohms). This is due to the meter's and test lead's internal resistance. You might need to take note of this value and subtract it from the measured value when you measure a very small resistance.
- For resistance of about 1 megohm and above, the display might take a few seconds to stabilize. This is normal for high-resistance readings.

CHECKING CONTINUITY

This measurement helps you check electrical circuits, such as house wiring or a speaker cable, for short or open circuits.

1. Set the selector to . The range automatically sets to 320 ohms.


 

2. Press  so  appears on the display.


Caution: NEVER CONNECT THE PROBES TO A SOURCE OF VOLTAGE while the selector is set to  .

3. Plug the red test lead into the **V•W• mA•mA•** jack and the black test lead into the **COM** jack.
4. Connect the probes to the circuit you want to check.
5. If the circuit resistance is less than about 20 ohms, the buzzer sounds, indicating there is a short. The display shows the actual circuit resistance.

CHECKING DIODES

This measurement lets you check diodes, transistors, and other semiconductors for opens, shorts, and normal operation.

1. Set the selector to  .
2. Press  so  appears on the display. The meter automatically sets the range to 3 V.

Caution: NEVER CONNECT THE TEST LEADS TO A SOURCE OF VOLTAGE when you set the selector to  .

3. Plug the red test lead into the **V•W• mA•mA•** jack and the black lead into the **COM** jack.
4. Remove power from the circuit under test and discharge all capacitors.
5. Connect the probes to the semiconductor device you want to check and note the meter reading.
6. Reverse the probes and note the second reading.
7. Judge the semiconductor device as follows:

If one reading shows some value and the other is **OL.**, the device is good.

If both values are **OL.**, the device is open.

If both values are very small or zero, the device is shorted.

Note: The value indicated on the display during the diode check is the forward voltage.

(illustrations)

MAINTENANCE

Your RadioShack Auto-Ranging LCD Digital Multimeter is an example of superior design and craftsmanship. The following suggestions will help you care for the meter so that you can enjoy it for years.

- Keep the meter dry. If it gets wet, wipe it dry immediately. Liquids can contain minerals that can corrode the electronic circuits.
- Use and store the meter only in normal temperature environments. Temperature extremes can shorten the life of electronic devices and distort or melt plastic parts.
- Handle the meter gently and carefully. Dropping it can damage the circuit boards and case and can cause the meter to work improperly.
- Wipe the meter with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the meter.
- Use only fresh batteries of the required size and type. Always remove old or weak batteries. They can leak chemicals that destroy electronic circuits.

Modifying or tampering with your meter's internal components can cause a malfunction and might invalidate the meter's warranty. If your meter is not performing as it should, take it to your local RadioShack store for assistance.

FUSE REPLACEMENT

WARNING: TO AVOID ELECTRIC SHOCK, DISCONNECT THE TEST PROBES BEFORE REMOVING THE BATTERIES OR FUSES. REPLACE ONLY WITH THE SAME TYPE OF BATTERIES OR FUSE. THIS INSTRUMENT CONTAINS NO OTHER USER SERVICEABLE PARTS. SERVICE SHOULD BE PERFORMED ONLY BY QUALIFIED PERSONNEL.

CAUTION: For continued protection against fire, replace the fuse on the **V•W• mA•mA•** terminal with a 0.5 A, 250 V fuse (Cat. No. 270-1047) and replace the fuse on the 20 A terminal with a 20 A, 250 V fuse (Cat. No. 270-1041).


Note: The fuse on your digital multimeter's **V•W• mA•mA•** terminal is a special size and type. We have included one spare fuse in your meter, located in the lower part of the battery/fuse compartment.

Follow these steps to replace any blown fuse.





1. Turn off the power and disconnect the test leads.
2. Remove the screw securing the back case and lift off the back cover.
3. Remove the blown fuse.
4. Replace the fuse with the spare fuse or a new fuse of the same rating.
5. Replace the back cover and secure it with the screw.

WARNING: DO NOT OPERATE YOUR METER UNTIL THE BATTERY/FUSE COVER IS IN PLACE AND FULLY CLOSED.

(illustration)

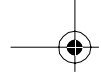

NOTES

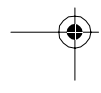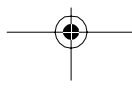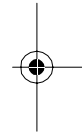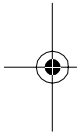

RadioShack Limited Warranty

This product is warranted against defects for 90 days from date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof of purchase date to any RadioShack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

10/95

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

8A6

Printed in Korea