



Transfer Printer BP-PR PLUS series

Operating Instructions

Edition 7/06

Information on the scope of delivery, appearance, performance, dimensions and weight reflect our knowledge at the time of printing. We reserve the right to make modifications.

All rights, including those regarding the translation, are reserved.

Approval

The transfer printers comply with the following safety guidelines:

- CE** EC Low-Voltage Directive (73/23/EEC)
EC Machine Directive (98/37/EC)
EC Electromagnetic Compatibility Directive (89/336/EEC)
- FCC** Conditions from Part 15 of the FCC Regulations for Class A computing devices.
Operation of this device may cause radio or television interference under unfavorable conditions, which would need to be remedied by the operator using countermeasures.



W.H. Brady
Lindestraat 21
Industriepark C3
9240 Zele Belgium
Tel.: +32 52 457 811
e-mail: support@brady.be



Identification Solutions Division
6555 W. Good Hope Road
PO Box 2131
Milwaukee, WI 53201 U.S.A.
Phone: 1-800-537-8791 Fax: 1-800-292-2289

Table of contents

1	Notes on the documentation	5
1.1	Structure of the documentation and navigation	5
1.2	Warnings, notes and other identifying markings	5
1.3	Cross references and references to graphics, tables and documents.	6
2	Safety and the environment	7
2.1	Intended use	7
2.2	Safety notes.	7
2.3	Environmentally-friendly disposal	8
3	Installation	9
3.1	Unpacking the transfer printer	9
3.2	Setting up the transfer printer	9
3.3	Connecting the transfer printer	10
3.4	Switching the transfer printer on and off	10
4	Operating panel	11
4.1	Layout of the operating panel	11
4.2	Functions of the operating panel during printing	12
5	Device types	15
5.1	Standard device.	15
5.2	Peel-off device version	15
6	Loading media	16
6.1	Loading labels from a roll	16
6.2	Removing the wound roll	22
6.3	Loading fanfold labels	22
6.4	Loading transfer ribbon	23
6.5	Setting the feed path of the transfer ribbon	24
6.6	Removing and installing the rewind guide plate, dispense plate or tear-off plate	24
6.7	Removing and installing the locking system	25
7	Printing	26
7.1	Synchronization	26
7.2	Tear-Off mode	26
7.3	Peel-Off mode	26
7.4	Internal rewinding	26
8	Cleaning and basic maintenance	27
8.1	Maintenance plan	27
8.2	Tools and cleaning agents.	27
8.3	General cleaning	28
8.4	Cleaning the print roller	28
8.5	Cleaning the printhead	28
8.6	Cleaning the label sensor	29
8.7	Replacing the printhead	30
8.8	Replacing the print roller and rewind assist roller	32
9	Error treatment	33
9.1	Error types.	33
9.2	Troubleshooting.	34
9.3	Error messages and recovery	35

10	EC Declaration of Conformity.....	38
	Index	39

1 Notes on the documentation

1.1 Structure of the documentation and navigation

The documentation for the transfer printers of the **BP-PR PLUS series** is comprised of the following parts:

- **Operating Instructions**
This is included in printed form in the scope of delivery and is directed toward persons who operate the transfer printer and perform basic maintenance and service work on the printer.
- **Configuration Instructions**
The are directed toward persons who set up, configure and perform more extensive maintenance and service work on the transfer printer.
- **Service Instructions**
These are directed toward trained service personnel who maintain and repair the transfer printer.

Each set of instructions has its own page and chapter enumeration. For improved navigation through the document, the chapter titles are printed in the header.

Additional navigation aids include the table of contents and the index. The PDF version also features bookmarks and hypertext links in the table of contents and the index.

Additional documentation

Spare parts lists	Spare parts
Programming manual	Programming the transfer printer with the printer-specific command set

Tab. 1: Additional documentation

1.2 Warnings, notes and other identifying markings

1.2.1 Warnings

Warnings are presented with three signal words for the different levels of danger.

The signal word DANGER identifies an extraordinarily great and immediate danger which could lead to serious injury or even death.

The signal word WARNING identifies a possible danger would could lead to serious bodily injury or even death if sufficient precautions are not taken.

The signal word CAUTION indicates a potentially dangerous situation which could lead to moderate or light bodily injury or damage to property.

Warnings are always identified with a warning symbol (yellow triangle) and the signal word and specify the source of the danger, possible consequences and measures for avoiding the danger.

Here's an example:



DANGER!

Risk of death via electric shock!

⇒ **Before opening the housing cover, disconnect the device from the mains supply and wait a few minutes until the power supply unit has discharged.**

1.2.2 Notes



Important information is identified with an exclamation mark on the left-hand side of the page.



Information is identified with an "i" on the left-hand side of the page.

1.2.3 Display texts on the printer screen

All texts appearing on the printer screen are identified in a special way e.g.: **Timezone > UTC+1**. This abbreviated statement instructs the user to select the **Timezone** menu and then the **UTC+1** option in this menu.

1.3 Cross references and references to graphics, tables and documents

1.3.1 Item numbers

Item numbers in the text are identified with parentheses, e.g. (9). If no figure number is provided, item numbers in the text always refer to the graphic directly above the text. If a reference is made to another graphic, the figure number is specified, e.g. Fig. 5 (1).

1.3.2 Cross references to chapters and sections

With a cross reference to chapters and sections, the chapter number and page number are specified, e.g. a reference to this section: (see "1.3.2" on page 6).

1.3.3 References to other documents

References to other documents have the following form: See "*Configuration Instructions*". All documents referred to in these instructions are listed in the section entitled "Structure of the documentation and navigation". (see "1.1" on page 5).

2 Safety and the environment

Read these operating instructions carefully before using the transfer printer for the first time. The operating instructions describe all of the functions of the transfer printer during operation. The available functions depend on the version used for a specific job.

- A detailed product description with all the technical data can be found in the “*Configuration Instructions for the BP-PR PLUS series*”.

2.1 Intended use

- The transfer printer is a state-of-the-art device which complies with the recognized safety-related rules and regulations. Despite this, a danger to life and limb of the user or third parties could arise and the transfer printer or other property could be damaged while operating the device.
- The transfer printer may only be used while in proper working order and for the intended purpose. Users must be safe, aware of potential dangers and must comply with the operating instructions! Faults, in particular those which affect safety, must be remedied immediately.
- The transfer printer is solely intended to print suitable media which have been approved by the manufacturer. Any other or additional use is not intended. The manufacturer/supplier is not liable for damage resulting from misuse. Any misuse is at your own risk.
- Intended use includes heeding the operating instructions, including the maintenance recommendations/regulations specified by the manufacturer.

2.2 Safety notes

- The transfer printer is designed for power supply systems from 100 V AC to 240 V AC. Connect the transfer printer only to electrical outlets with a ground contact.
- Couple the transfer printer to devices using extra low voltage only.
- Before making or undoing connections, switch off all devices involved (computer, printer, accessories etc.).
- Operate the transfer printer in a dry environment only and do not get it wet (sprayed water, mist etc.).
- If the transfer printer is operated with the cover open, ensure that clothing, hair, jewelry and similar personal items do not contact the exposed rotating parts.
- The print mechanism can become hot during printing. Do not touch it during operation and allow it to cool down before changing the media or before removal or adjustment.
- Carry out only the actions described in these operating instructions. Other tasks may only be performed by trained personnel or service technicians.



DANGER!

Risk of death via mains voltage!

⇒ **Do not open the housing of the transfer printer.**

2.3 Environmentally-friendly disposal



Used devices contain valuable recyclable materials which should be utilized.

⇒ Dispose of used devices separately from other waste, i.e. via an appropriate collection site.

The modular nature of the transfer printer allows it to easily be disassembled into its component parts so that the parts can be turned in for recycling.

The PCB of the transfer printer has a lithium battery.

⇒ Dispose of this battery in a collection container for old batteries at the store or with the public waste disposal authority.

3 Installation

3.1 Unpacking the transfer printer

- ⇒ Lift the transfer printer out of the box via the straps.
- ⇒ Check transfer printer for damage which may have occurred during transport.
- ⇒ Check delivery for completeness.

Scope of delivery

- Transfer printer
- Empty cardboard core, mounted on ribbon take-up hub
- Tear-off plate (basic devices only)
- Dispense plate (peel-off device version only)
- Power cable
- Documentation



Retain the original packaging for subsequent transport.


3.2 Setting up the transfer printer



CAUTION!

The device and the print media can be damaged by moisture and water.


⇒ The transfer printer may only be set up in a dry place protected from sprayed water.

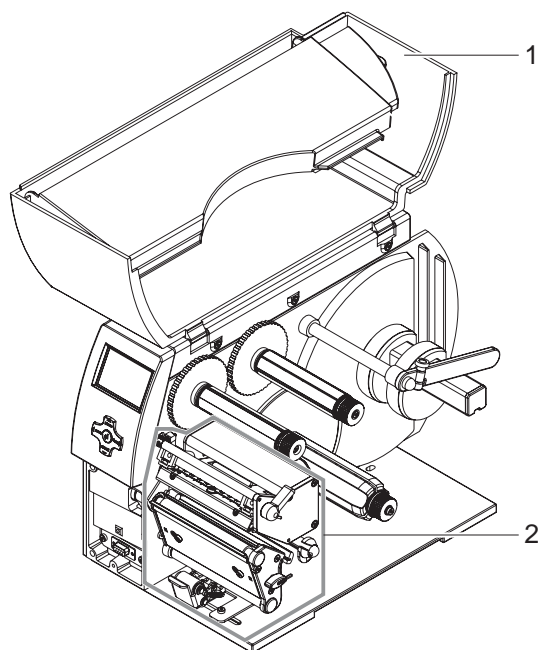

- ⇒ Set up printer on a level surface.
- ⇒ Open cover (1) of the transfer printer.
- ⇒ Remove foam transportation safeguards near the printhead (2).

Fig. 1: Removing the transportation safeguards

3.3 Connecting the transfer printer

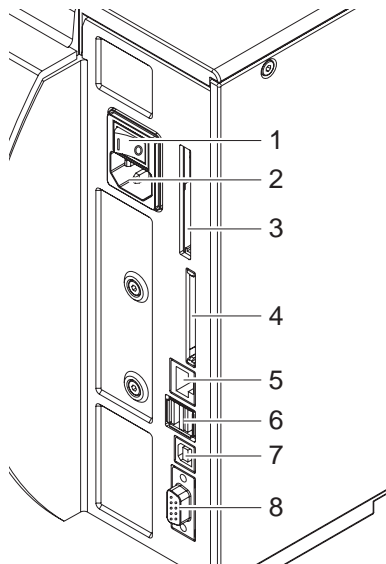

- | | |
|---|---------------------------------------|
| 1 | Power switch |
| 2 | Power connection jack |
| 3 | Slot for Cardbus or a Type II PC card |
| 4 | Slot for a CompactFlash memory card |
| 5 | Ethernet 10/100 Base-T |
| 6 | USB port for a keyboard or scanner |
| 7 | USB high-speed slave port |
| 8 | Serial RS 232 C port |

Fig. 2: Power and computer connections

3.3.1 Connecting to the power supply

The printer is equipped with a versatile power supply unit. The device may be operated with a mains voltage of 230 V AC/ 50 Hz or 115 V AC/60 Hz without any adjustments or modifications.



CAUTION!

The device can be damaged by undefined switch-on currents.

⇒ Set the power switch (1) to "O" before plugging in the device.

1. Insert power cable into power connection jack (2).
2. Insert plug of the power cable into a grounded electrical outlet.

3.3.2 Connecting to a computer or computer network



Insufficient or missing grounding can cause faults during operation.

Ensure that all computers and connection cables connected to the transfer printer are grounded.

⇒ Connect transfer printer to computer or network with a suitable cable.

Details on the configuration of the individual interfaces are found in the "Configuration Instructions".

3.4 Switching the transfer printer on and off

Once all connections have been made:

⇒ Switch printer on via the power switch (1).

The printer runs through a system test and then indicates the system status **Ready** in the display.

If an error has occurred while the system was starting up, the ☠ symbol and the error type are displayed (see "4.2.8" on page 14).

4 Operating panel

The user can control the operation of the printer with the operating panel, for example:

- pause, continue or cancel print jobs
- set printing parameters, e.g. heating energy of the printhead, print speed, configuration of the ports, language and time (see “*Configuration Instructions*”)
- start test functions (see “*Configuration Instructions*”)
- control standalone operation with memory card (see “*Configuration Instructions*”)
- perform a firmware update (see “*Configuration Instructions*”)

Several functions and settings can also be controlled via printer-specific commands with software applications or via direct programming with a computer. Details on this can be found in the “*Configuration Instructions*”.

The settings made at the operating panel are the basic settings of the transfer printer.



It is to your advantage to make adjustments for different print jobs in the software whenever possible.

4.1 Layout of the operating panel

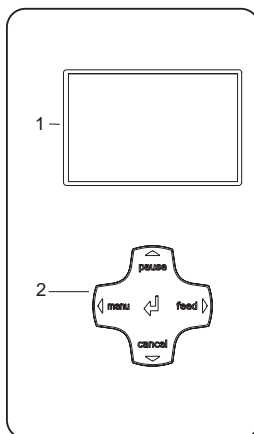


Fig. 3: Operating panel

The operating panel is comprised of the graphical display (1) and the navigator pad (2) with five integrated buttons.

The graphical display informs you of the current status of the printer and the print job, reports errors and shows the printer settings in the menu.

The button functions are dependent on the current printer status:

Active functions are indicated by the illuminated letters and symbols on the buttons of the navigator pad.

While printing, active functions illuminate white (e.g. **menu** or **feed**)

Active functions are illuminated in orange in the offline menu (arrows, ↵ button)

Functions of the buttons

pause, cancel, menu, feed buttons: (see “4.2.3” on page 13)






 




Arrows: Up, down, left and right in the menu tree.

↵ button: Input of a parameter in the menu, calling up of help in case of an error

4.2 Functions of the operating panel during printing


4.2.1 Symbol indicators

The symbol indicators shown in the following table can appear on the status line of the screen, depending on the configuration of the printer. They inform you of the current status of the printer at a glance. For configuration of the status line, see the “*Configuration Instructions*”.

Symbol	Meaning
	Time
	Date
	Ribbon supply status
	WLAN field strength
	Ethernet status
	Printhead temperature
	PPP credit
	User memory
	Input buffer
	Printer receiving data

Tab. 2: Indicator symbols during printing

4.2.2 Power-Save mode



If the printer is not used for some time, it switches to Power-Save mode automatically. The display shows the  graphic and button illumination is switched off.

To exit Power-Save mode:

⇒ Press any button on the navigator pad.

4.2.3 'Ready' mode

The printer is ready and can receive data.

The display shows the text **Ready** and the configured symbol indicators, such as the time  and date .

Button	Label	Function
menu	illuminates	go to offline menu (see "Configuration Instructions")
feed	illuminates	advances an empty label
pause	illuminates once a print job is complete	repeat printing of last label
cancel	illuminates	clear print buffer, repeated printing of the last label is then not possible

Tab. 3: Functions in **Ready** mode

4.2.4 'Printing Label' mode

The printer is carrying out a print job. Data transfer for a new print job is possible in 'Printing' mode. The new print job starts once the preceding job is completed.


The display shows the text **Printing Label** and the number of the printed label within the print job.

Button	Label	Function
pause	illuminates	pause print job, printer switches to Pause mode
cancel	illuminates	press briefly→ cancel current print job press and hold→ cancel current print job and delete all print jobs

Tab. 4: Functions in **Printing Label** mode

4.2.5 'Pause' mode

The print job has been interrupted by the operator.

The display shows the text **Pause** and the symbol .


Button	Label	Function
pause	illuminates	continue print job, printer switches to Printing Label mode
cancel	illuminates	press briefly→ cancel current print job press and hold→ cancel current print job and delete all print jobs

Tab. 5: Functions in **Pause** mode

4.2.6 'Fault - correctable' mode



An error which can be remedied by the operator without canceling the print job has occurred. The print job can be continued once the error is remedied.

The display shows the symbol , the error type and the number of labels still to be printed.

Button	Label	Function
pause	flashes	continue print job after error recovery, printer switches to Printing Label mode
cancel	illuminates	press briefly→ cancel current print job press and hold→ cancel current print job and delete all print jobs
↵ button	illuminates	call up help – brief information on error recovery is displayed

Tab. 6: Functions in 'error which can be remedied' mode

4.2.7 'Fault - irrecoverable' mode



An error which cannot be remedied without canceling the print job has occurred.


The display shows the symbol , the error type and the number of labels still to be printed.

Button	Label	Function
cancel	flashes	press briefly→ cancel current print job press and hold→ cancel current print job and delete all print jobs
↵ button	illuminates	call up help – brief information on error recovery is displayed

Tab. 7: Functions in 'error which cannot be remedied' mode

4.2.8 'System error' mode



If an error has occurred while the system was starting up, the  symbol and the error type are displayed.

⇒ Switch off printer via the power switch and switch it on again.

-or-

⇒ Push the **cancel** button.

⇒ If the error occurs repeatedly, notify the Service Department.

5 Device types

5.1 Standard device

The standard device is used for printing labels or continuous media on rolls or fanfolded media.

In **Tear-Off mode**, labels are removed by hand.

The labels can be cut off automatically with the 'cutter' accessory. For details, see the Operating Instructions for the 'cutter' accessory.

The labels can be wound up with the 'external rewinder' accessory. For details, see the Operating Instructions for the 'external rewinder' accessory.

Because there is no internal rewinder, automatic peeling off of the labels from the carrier medium (Peel-Off mode) and internal rewinding are not possible.

5.2 Peel-off device version

The peel-off device version is capable of Peel-Off mode and thus has an internal rewinder and a pulling system comprised of a rewind assist roller and a locking system. Printing on labels or continuous media from rolls or fanfolded media is possible.

Operation in **Tear-Off mode** and with the 'cutter' or 'external rewinder' accessory is possible by installing the tear-off plate (see "6.6" on page 24), as with the standard device.

In **Peel-Off mode**, the label is peeled off the liner after printing. The label can be removed by hand with the peel-off sensor (accessory). Label removal can also occur automatically via the applicator (accessory). The liner is rolled up via the internal rewinder.

For use in **Internal Rewind mode** remove the locking system (see "6.7" on page 25) and replace the dispense plate with a rewind guide plate (see "6.6" on page 24).

6 Loading media

i For adjustments and simple installation work, use the accompanying **hexagonal wrench** located in the bottom section of the print unit. See Fig. 5, Item 8. No other tools are required for the work described here.

6.1 Loading labels from a roll

6.1.1 Removing and installing the core adapter

A core adapter is mounted for better guidance of the label roll on the roll retainer when using label rolls with a core diameter ≥ 75 mm. Remove core adapter for smaller label rolls as follows.

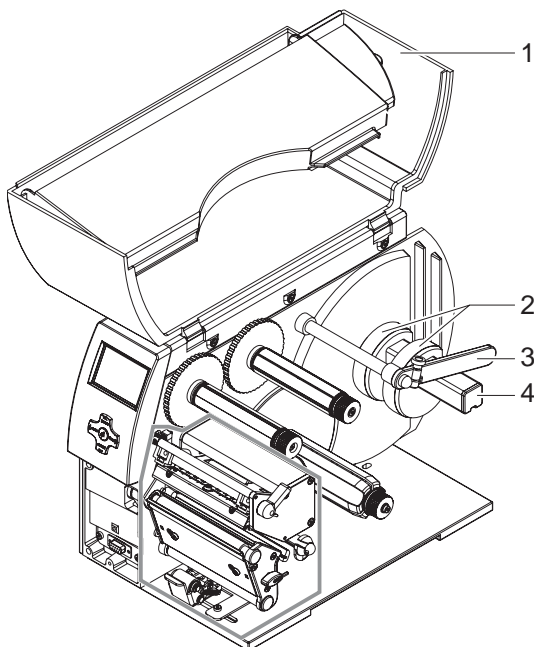


Fig. 4: Installing the core adapter

Removing the core adapter

1. Open cover (1).
2. Loosen retaining screws of core adapter (2) with hexagonal wrench.
3. Remove core adapter from roll retainer (4).

Installing the core adapter

1. Open cover (1).
2. Loosen retaining screws of core adapter (2) with hexagonal wrench.
3. Slide first core adapter onto the roll retainer (4) until it stops at the housing and tighten retaining screw.
4. Slide second core adapter onto the roll retainer (4) based on the roll width and tighten retaining screw.

6.1.2 Positioning the label roll on the roll retainer

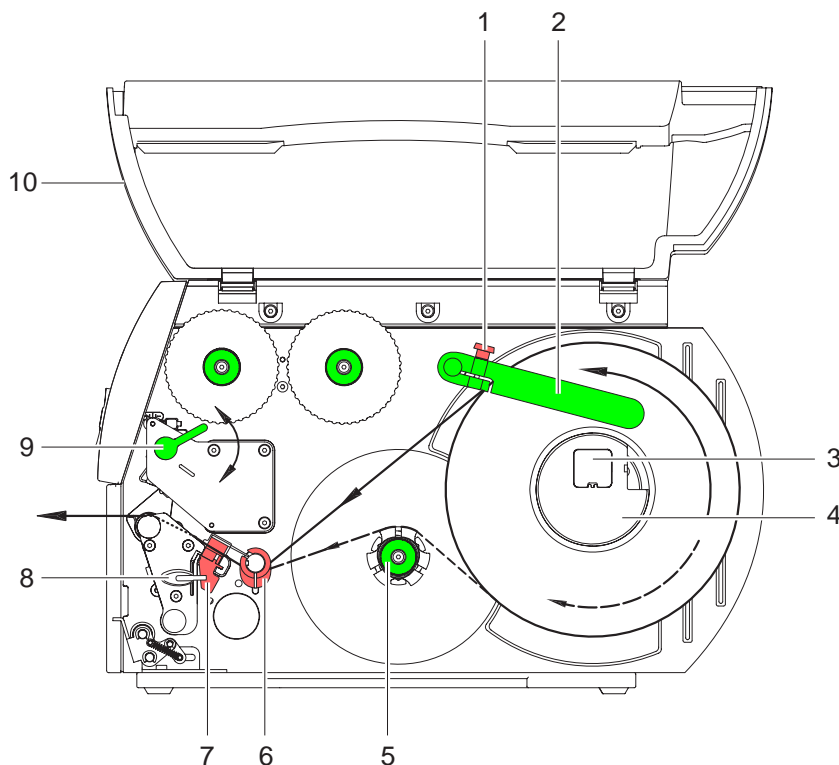


Fig. 5: Loading labels from a roll

1. Open cover (10).
2. Loosen knurled screw (1) and swivel guide (2) upward and push it all the way out.
3. Remove core adapter (4) for label rolls with a core diameter ≤ 75 mm (see "6.1.1" on page 16).
4. Load label roll on the roll retainer in such a way that the labels can be inserted into the printhead in the right position. The printing side of the labels must be visible from above.
5. Supplying longer label strips:
For Peel-Off or Rewind mode: approx. 60 cm
For Tear-Off mode: approx. 40 cm
6. Push label roll until it contacts the housing wall.
7. Swivel guide (2) downward onto the roll retainer (3) and push it against the label roll so that the roll is braked slightly while supplying media.
8. Tighten knurled screw (1).

6.1.3 Inserting a label strip into the printhead

1. Turn lever (9) counterclockwise to lift the printhead.
2. Push guide ring on axis (6) all the way out.
3. Guide label strip to the print unit above the internal rewinder (5).
4. Guide label strips below the axis (6) and through the label sensor (7) in such a way that it exits the print unit between the printhead and the print roller.
5. Push guide ring on axis (6) against the outer edge of the label strip.

6.1.4 Setting the label sensor

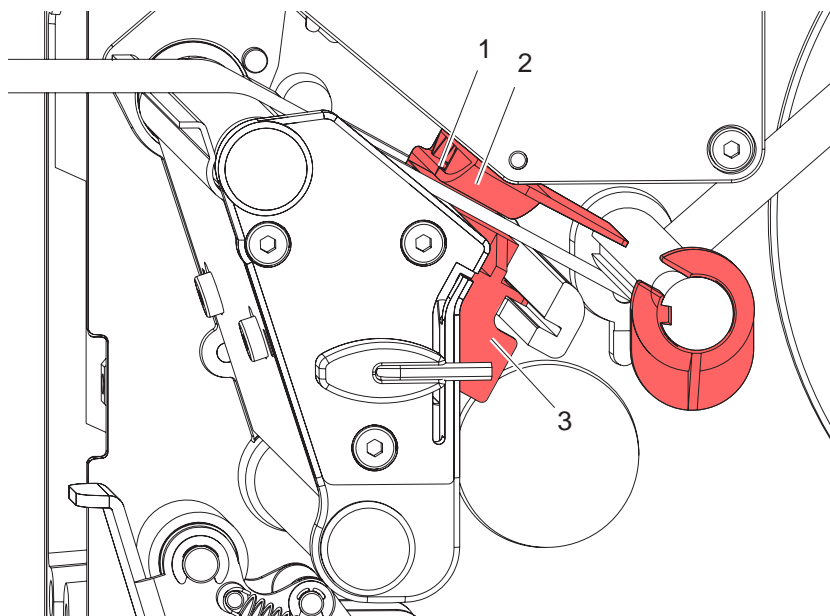


Fig. 6: Setting the label sensor

The label sensor (2) can be shifted perpendicular to the direction of paper flow for adaptation to the label medium. The sensor unit (1) of the label sensor is visible from the front through the print unit and is marked with a indentation in the label sensor retainer.

⇒ Position label sensor with tab (3) in such a way that the sensor (1) can detect the label gap or a reflex or perforation mark.

- or, if the labels deviate from a rectangular shape, -

⇒ Align label sensor using the tab (3) with the front edge of the label in the direction of paper flow.

For use in Tear-Off mode only:

⇒ Turn lever (Fig. 5, Item 9) clockwise to lock the printhead.

The label roll is loaded for **use in Tear-Off mode**.

6.1.5 Winding up the label strip in Rewind mode

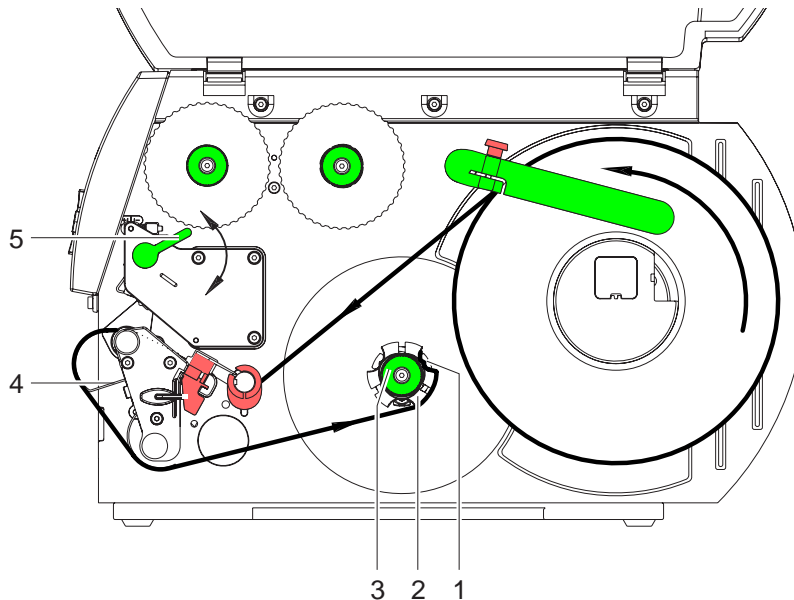


Fig. 7: Guiding the label strip in Rewind mode

In Rewind mode, the labels are wound up internally after printing for later use.

1. Remove the locking system for Rewind mode if necessary (see "6.7" on page 25) and install rewind guide plate (see "6.6" on page 24).
2. Guide label strip around the rewind guide plate (4) to the internal rewinder (2).
3. Hold rewinder (2) firmly and turn knob (3) clockwise until it stops.
4. Push label strip under a bracket (1) of the rewinder and turn knob (3) counterclockwise until it stops. The rewinder is fully spread, thus gripping the label strip firmly.
5. Turn rewinder (2) counterclockwise to tighten the label strip.
6. Turn lever (5) clockwise to lock the printhead.
The label roll is loaded for **use in Rewind mode**.

6.1.6 Winding up the liner in Peel-Off mode

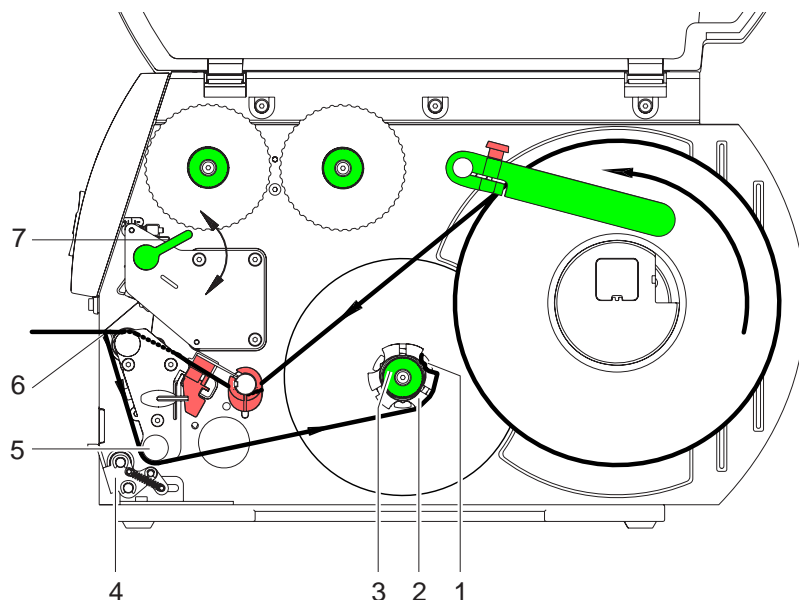


Fig. 8: Guidance of the liner in Peel-Off mode

In Peel-Off mode, the labels are removed after printing, and only the liner is wound up internally.

1. Lift the pinch roller (4) off the rewind assist roller (5).
2. Remove labels from the first 100 mm of the liner.
3. Guide liner to the rewinder (2) around the dispense plate (6) and the rewind assist roller (5).
4. Hold rewinder (2) firmly and turn knob (3) clockwise until it stops.
5. Push liner under a bracket (1) of the rewinder (2) and turn knob (3) counterclockwise until it stops.
The rewinder is fully spread, thus gripping the liner firmly.
6. Turn rewinder (2) counterclockwise to tighten the liner.
7. Slightly loosen top fixing screw at the locking system with hexagonal wrench and position the pinch roller (4) centrally to the liner (see "6.7" on page 25).
8. Close the locking system and tighten top fixing screw at the locking system.
9. Turn lever (7) clockwise to lock the printhead.
The label roll is loaded for **use in Peel-Off mode**.

6.1.7 Setting the head locking system

The printhead is pushed on via two plungers. The location of the outer plunger must be set to the width of the label medium used so as to

- achieve even print quality across the entire label width
- prevent wrinkles in the feed path of the transfer ribbon
- prevent premature wearing of the print roller and printhead.

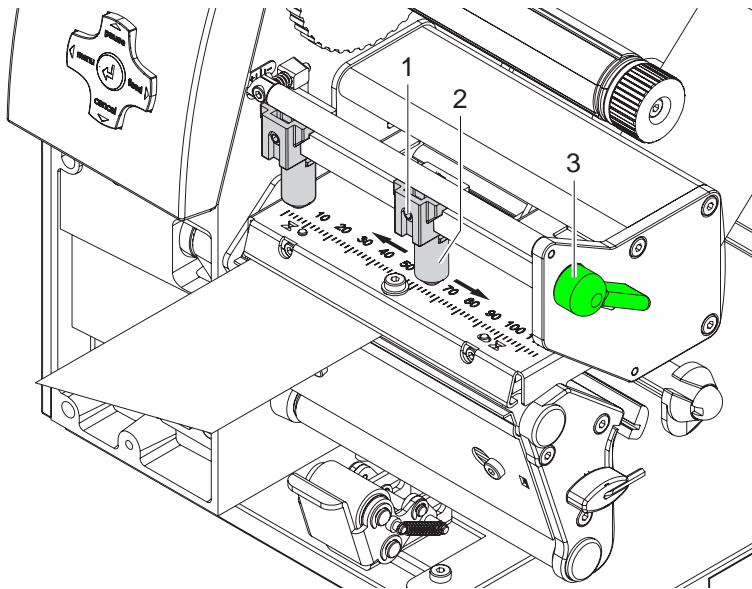


Fig. 9: Setting the head locking system

1. Turn lever (3) clockwise to lock the printhead.
2. Loosen threaded pin (1) at outer plunger (2) with hexagonal wrench.
3. Position outer plunger (2) above the outer label edge and tighten threaded pin (1).

6.2 Removing the wound roll

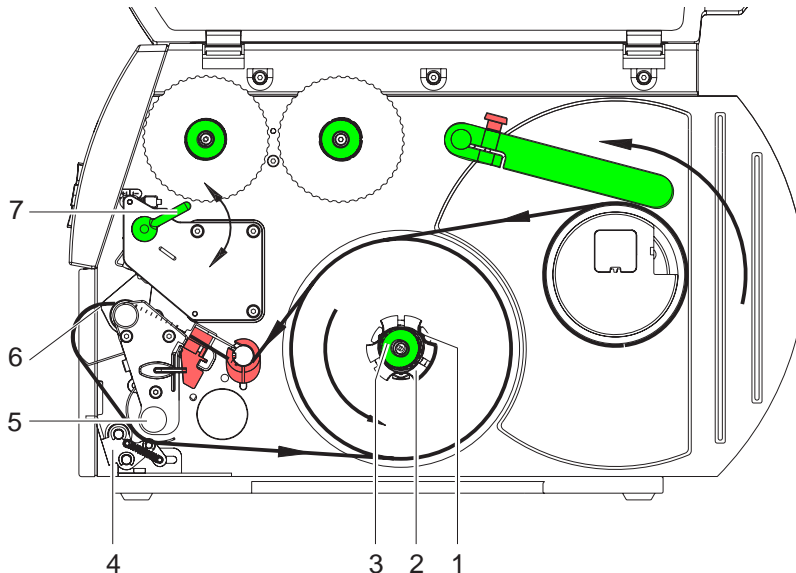


Fig. 10: Removing the wound roll

1. Turn lever (7) counterclockwise to lift the printhead.
2. Cut label strip and wind it fully around the retractor (2).
3. Hold retractor (2) firmly and turn knob (3) clockwise.
The retractor spindle relaxes and the wound roll is released.
4. Remove wound roll from retractor (2).

6.3 Loading fanfold labels

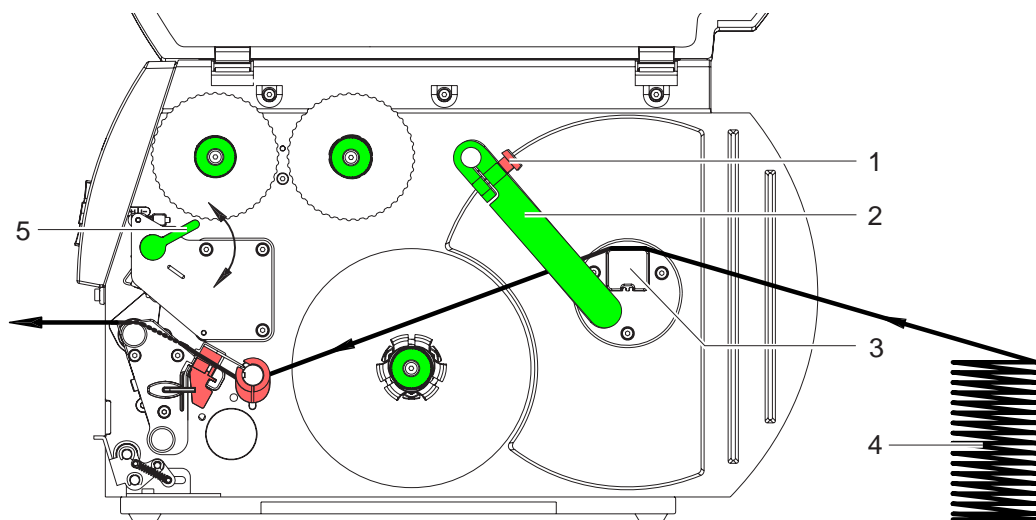


Fig. 11: Feed path of paper with fanfold labels

1. Loosen knurled screw (1) and slide guide (2) outward completely and swivel it downward past the roll retainer (3).
2. If core adapters are mounted on the roll retainer (3), remove core adapters (see "6.1.1" on page 16).
3. Position label stack (4) behind the printer. Ensure that the labels on the strip are visible from above.

Loading media

4. Guide label strip to print unit via the roll retainer (3). See Fig. 11.
5. Push guide (2) against the label strip, swivel it upward against the roll retainer and tighten knurled screw (1).
6. Insert label strip into printhead (see "6.1.3" on page 17).
7. Set label sensor (see "6.1.4" on page 18).
8. Set head locking system (see "6.1.7" on page 21)
9. Turn lever (5) clockwise to lock the printhead.

6.4 Loading transfer ribbon



With direct thermal printing, do not load a transfer ribbon; if one has already been loaded, remove it.

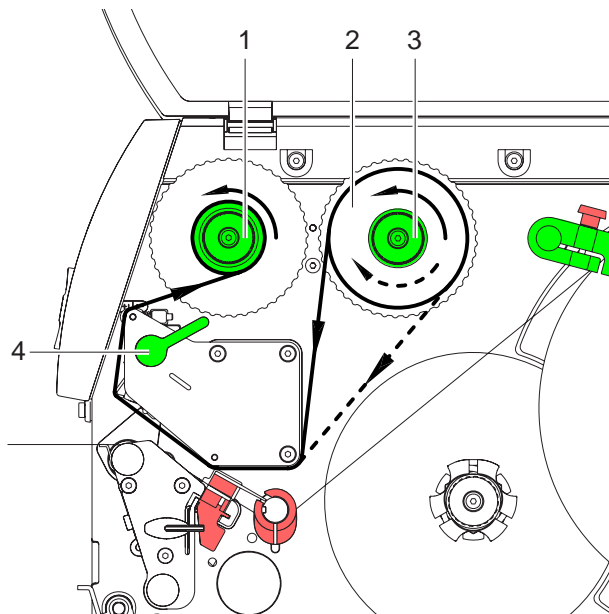


Fig. 12: Feed path of the transfer ribbon

1. Clean printhead before loading the transfer ribbon (see "8.5" on page 28).
2. Turn lever (4) counterclockwise to lift the printhead.
3. Slide transfer ribbon roll (2) onto the ribbon supply hub (3) until it stops and so that the color coating of the ribbon faces downward when being unwound. No rotation direction is specified for the ribbon supply hub (3).
4. Hold transfer ribbon roll (2) firmly and turn knob on ribbon supply hub (3) counterclockwise until the transfer ribbon roll is secured.
5. Slide suitable transfer ribbon core onto the transfer ribbon take-up hub (1) and secure it in the same way.
6. Guide transfer ribbon through the print unit as shown in Fig. 12.
7. Secure starting end of transfer ribbon to the transfer ribbon core (1) with adhesive tape. Ensure counterclockwise rotation direction of the transfer ribbon take-up hub here.
8. Turn transfer ribbon take-up hub (1) counterclockwise to smooth out the feed path of the transfer ribbon.
9. Turn lever (4) clockwise to lock the printhead.

6.5 Setting the feed path of the transfer ribbon

Transfer ribbon wrinkling can lead to print image errors. Transfer ribbon deflection can be adjusted so as to prevent wrinkles. See also "Setting the head locking system" on page 21.

i The adjustment is best carried out during printing.

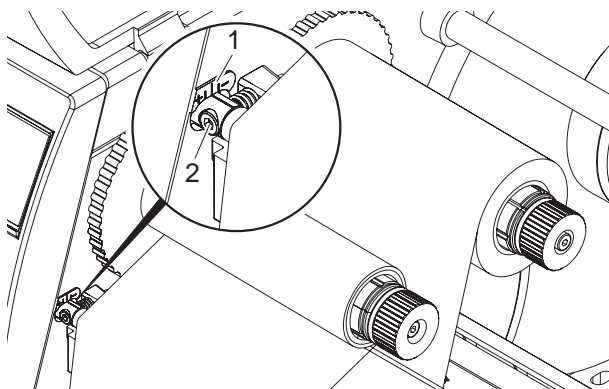


Fig. 13: Setting the feed path of the transfer ribbon

1. Read current setting on the scale (1) and record if necessary.
2. Turn screw (2) with hexagonal wrench and observe the behavior of the ribbon. In the + direction, the inner edge of the transfer ribbon is tightened, and the outer edge is tightened in the - direction.

6.6 Removing and installing the rewind guide plate, dispense plate or tear-off plate

To convert the printer for use in another operating mode, a rewind guide plate, a dispense plate or a tear-off plate may need to be installed.

! For printer versions with a locking system on the rewind assist roller, the locking system on the rewind assist roller must be removed (see "6.7" on page 25) for operation in Rewind mode before installation of the rewind guide plate.

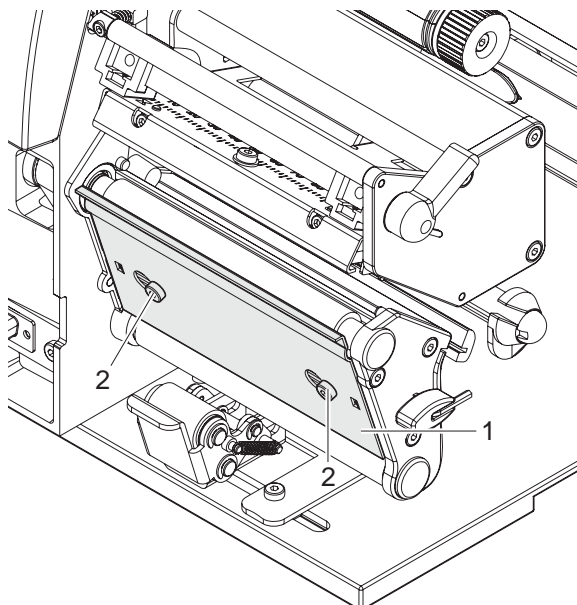


Fig. 14: Removing and installing the rewind guide plate, dispense plate or tear-off plate


Removing a plate

1. Loosen screws (2) several turns.
2. Slide plate (1) to the right and remove it.

Installing a plate

1. Place plate (1) onto the screws (2) and slide to the left completely.
2. Tighten screws (2).

6.7 Removing and installing the locking system

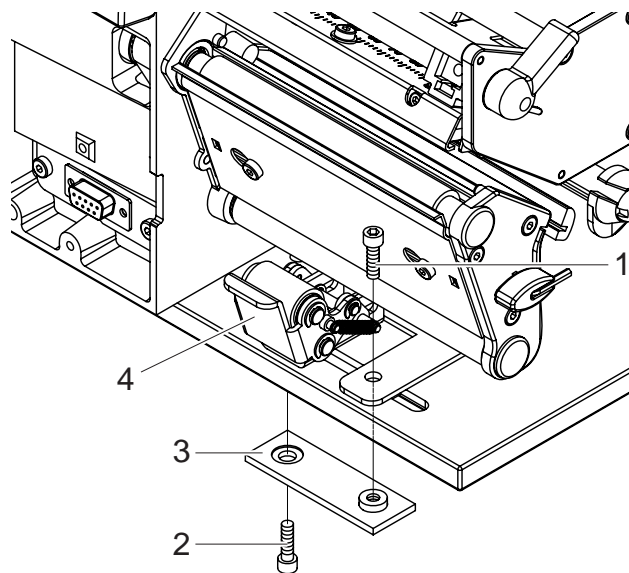

Removing the locking system

1. Position printer at edge of table so that the oblong hole is accessible from below.
2. Screw out screws (1) (2) and remove them.
3. Remove the pinch roller (4) and bottom plate (3).

Installing the locking system

1. Position printer at edge of table so that the oblong hole is accessible from below.
2. Place the pinch roller (4) into oblong hole and lightly tighten screw (1) of bottom plate (3) from above.
3. Lightly tighten screw (2) of bottom plate (3) from below.
4. Align the pinch roller (4) with center of label and tighten screws.

Fig. 15: Removing the locking system

7 Printing



CAUTION!

The printhead can be damaged if handled improperly!

- ⇒ Do not touch the bottom of the printhead with your fingers or sharp objects.
- ⇒ Ensure that the labels are clean.
- ⇒ Ensure smooth label surfaces. Raw labels are like emery and reduce the service life of the printhead.
- ⇒ Print at the lowest possible printhead temperature.

7.1 Synchronization

The printer is ready for operation when all connections have been made, the labels and, if necessary the transfer ribbon, have been loaded and the printhead is locked. For details on printer configuration, see the “*Configuration Instructions*”.

After loading the label medium, synchronization is necessary. During synchronization, the printer automatically determines the length of the loaded labels and sets label advancement accordingly.

1. Press the **feed** button to start synchronization.
2. Remove empty labels after synchronization.

The printer is synchronized with the loaded label medium.



Synchronization is not necessary if the printhead was not opened between different print jobs, even if the printer was switched off.

7.2 Tear-Off mode

In Tear-Off mode, labels or continuous media are printed. After printing, the label strip is separated by hand. The transfer printer is equipped with a tear-off plate for this.

Optionally, the label can be cut off or label strips can be wound up externally.

7.3 Peel-Off mode

In Peel-Off mode, the labels are automatically peeled off the carrier medium after printing and presented for removal. The transfer printer is equipped with a dispense plate and one of the following accessory devices for this: peel-off sensor (PS6 or PS8), peel-off adapter (PS5) or applicator (A1000). The carrier medium is wound up inside the printer.

7.4 Internal rewinding

The labels are wound up internally after printing with the carrier medium for later use. The transfer printer is equipped with a rewind guide plate for this.

8 Cleaning and basic maintenance



DANGER!

Risk of death via electric shock!

⇒ Disconnect the printer from the power supply before performing any maintenance work.

8.1 Maintenance plan

Maintenance task	When
General cleaning (see "8.3" on page 28)	as necessary
Clean print roller (see "8.4" on page 28)	each time the label roll is changed or when the print image and label transport are adversely affected.
Clean printhead (see "8.5" on page 28)	direct thermal printing: each time the label roll is changed thermal transfer printing: each time the transfer ribbon is changed or when the print image is adversely affected
Clean label sensor (see "8.6" on page 29)	when the label roll is changed
Replace printhead (see "8.7" on page 30)	when errors in the print image occur
Replace print roller and rewind assist roller (see "8.8" on page 32)	when print image and label transport are adversely affected

Tab. 8: Maintenance plan

8.2 Tools and cleaning agents

i For adjustments and simple installation work, use the accompanying hexagonal wrench located in the bottom section of the print unit. See Fig. 5, Item 8. No other tools are required for the work described here.

Cleaning agents

- soft brush
- soft cloth
- pure alcohol
- roller cleaner
- cotton swabs
- special cleaning pen

8.3 General cleaning



CAUTION!

Abrasive cleaning agents can damage the printer!

⇒ **Do not use abrasives or solvents to clean the outer surfaces or assemblies.**

⇒ Remove dust and paper fuzz in the printing area with a soft brush or vacuum cleaner.

⇒ Clean outer surfaces with an all-purpose cleaner.

8.4 Cleaning the print roller

1. Turn lever (4, Fig. 12) counterclockwise to lift the printhead.
2. Remove labels and transfer ribbon from the printer.
3. Remove deposits with roller cleaner and a soft cloth.
4. If the roller appears damaged, replace it (see "8.8" on page 32).

8.5 Cleaning the printhead

Substances may accumulate on the printhead during printing and adversely affect printing, e.g. differences in contrast or vertical stripes.



CAUTION!

Printhead can be damaged!

⇒ **Do not use sharp or hard objects to clean the printhead.**

⇒ **Do not touch protective glass layer of the printhead.**

1. Turn lever (4, Fig. 12) counterclockwise to lift the printhead.
2. Remove labels and transfer ribbon from the printer.
3. Clean printhead surface with special cleaning pen or a cotton swab dipped in pure alcohol.
4. Allow printhead to dry for 2–3 minutes before commissioning the printer.

8.6 Cleaning the label sensor




CAUTION!

Label sensor can be damaged!

⇒ **Do not use sharp or hard objects or solvents to clean the label sensor.**

The label sensor can become dirtied with paper dust. This can adversely affect label detection.

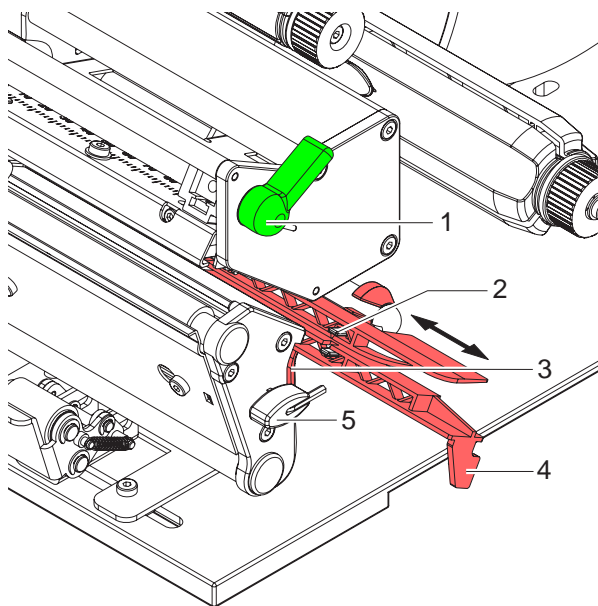

1. Turn lever (1) counterclockwise to lift the printhead.
2. Remove labels and transfer ribbon from the printer.
3. Remove hexagonal wrench (5) from its retainer.
4. Press the latch (3) and slowly pull label sensor outward via the tab (4). Ensure that the label sensor cable is not tensioned by this.
5. Clean label sensor and sensor units (2) with brush or cotton swab soaked in pure alcohol.
6. Push label sensor back via tab (3) and set it (see "6.1.4" on page 18).
7. Push hexagonal wrench (5) into retainer.
8. Reload labels and transfer ribbon (see "6.1" on page 16).

Fig. 16: Cleaning the label sensor

8.7 Replacing the printhead

The printhead of the transfer printer can be replaced without the need for fine adjustment. The printhead must be replaced if worn or when switching to a printhead with higher or lower resolution. For better differentiation, the print heads have a label stating the printer type and resolution.

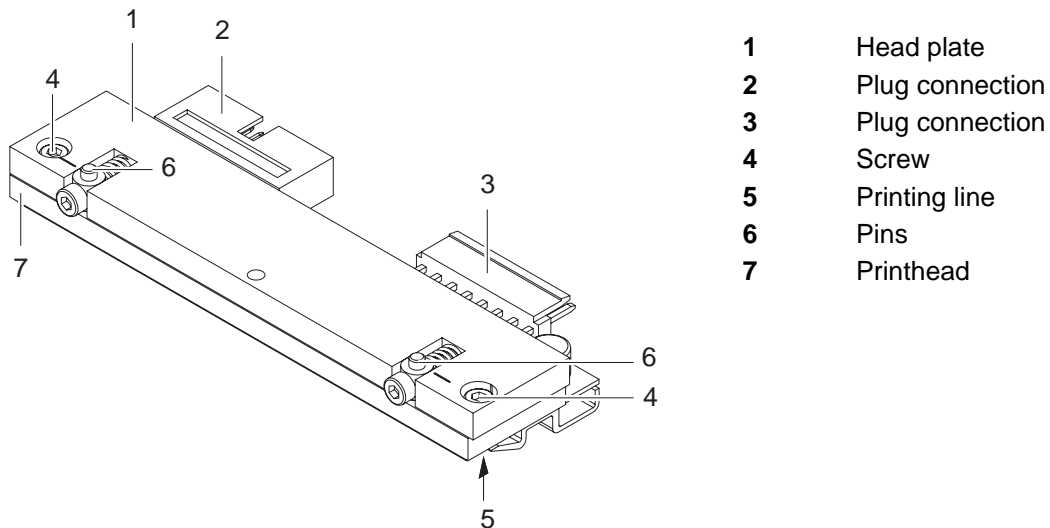


Fig. 17: Structure of the printhead

! The printhead (7) is preinstalled on a head plate (1) and precisely aligned at the factory. Do not loosen the screws (4) under any circumstances.



CAUTION!

The printhead can be damaged by static electricity discharges and impacts!

- ⇒ Set up printer on a grounded, conductive surface.
- ⇒ Ground your body, e.g. by wearing a grounded wristband.
- ⇒ Do not touch contacts on the plug connections (2, 3).
- ⇒ Do not touch printing line (5) with hard objects or your hands.

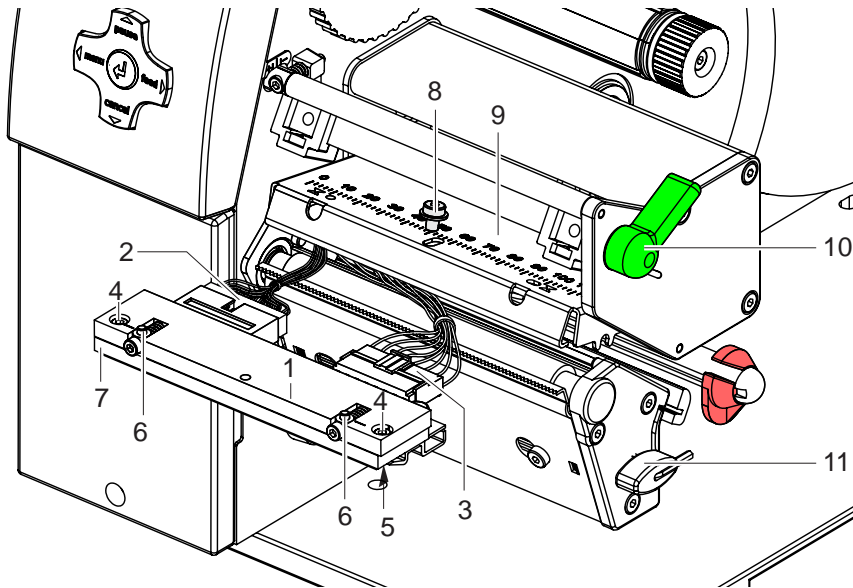


Fig. 18: Removing and installing the printhead

Removing the printhead

1. Turn lever (10) counterclockwise to lift the printhead.
2. Remove labels and transfer ribbon from the printer.
3. Remove hexagonal wrench (9) from its retainer.
4. Lightly keep printhead mounting bracket (9) on the print roller with one finger and screw out screw (8) with the hexagonal wrench and remove it and the washer.
5. Swivel printhead mounting bracket (9) upward.
6. Remove printhead from the printhead mounting bracket (9) if necessary.
7. Loosen both plug connections (2, 3) on the printhead and set printhead down on a clean, soft surface.

Installing the printhead

1. Attach plug connections (2, 3).
2. Position printhead in printhead mounting bracket (9) in such a way that the pins (6) are secured in the corresponding holes in the printhead mounting bracket (9).
3. Lightly keep printhead mounting bracket (9) on the print roller with one finger and check for correct positioning of the printhead mounting bracket (9).
4. Screw in screw (8) with washer with the hexagonal wrench and tighten it.
5. Reload labels and transfer ribbon (see "6.1" on page 16).

8.8 Replacing the print roller and rewind assist roller

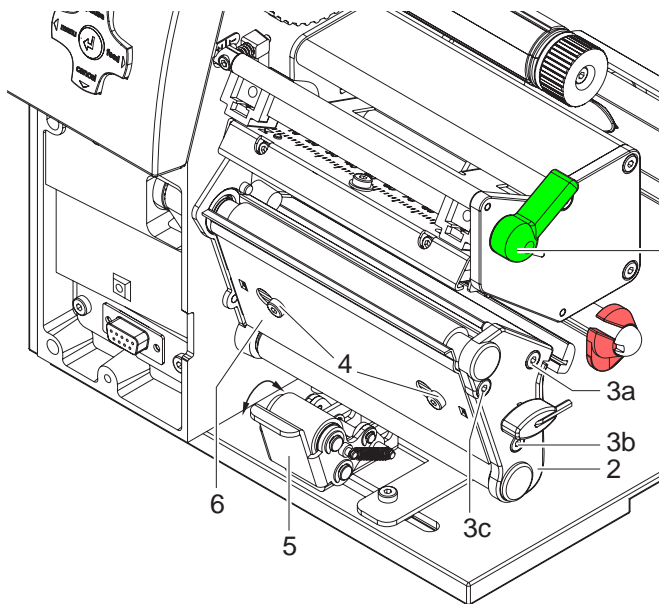


Fig. 19: Removing the side plate

Removing the side plate

1. Turn lever (1) counterclockwise to lift the printhead.
2. Lift the pinch roller (5) off the rewind assist roller.
3. Remove labels and transfer ribbon from the printer.
4. Loosen screws (4) on plate (6) with hexagonal wrench by several turns and remove plate (6).
5. Unscrew screws (3abc) of the side plate (2) with hexagonal wrench.
6. Remove side plate (2).

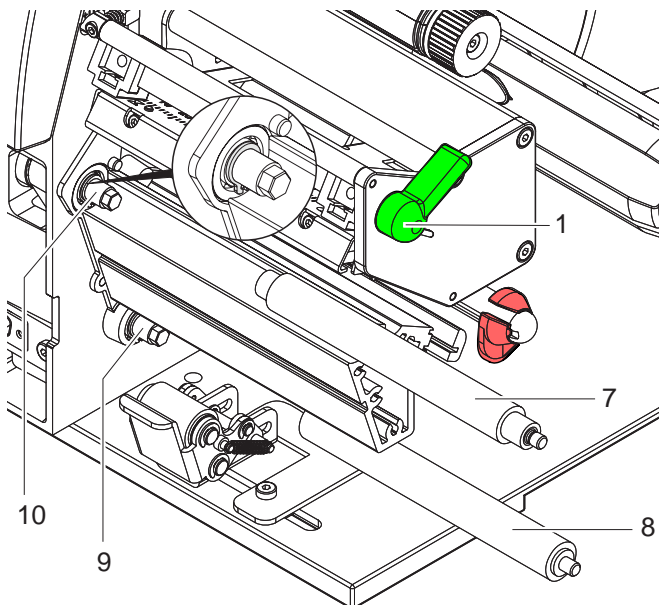


Fig. 20: Removing and installing rollers




Removing and installing rollers

1. Pull print roller (7) and rewind assist roller (8) from the shafts (9, 10) on the housing.
2. Clean shafts (9, 10) of the rollers (see expanded view at shaft (10)).
3. Slide print roller (7) and rewind assist roller (8) onto their respective shafts and turn slightly until the hexagon of the shaft engages in the hexagon socket of the print roller.
4. Set side plate (Item 2, Fig. 19) in place and screw it down with the screws (Items 3abc, Fig. 19) by tightening the screws in order, i.e. a, b then c.
5. Set plate (Item 6, Fig. 19) in place and tighten screws (Item 4, Fig. 19) with hexagonal wrench.

9 Error treatment

9.1 Error types

When an error occurs, the diagnostic system displays the error on the screen and switches the printer into one of the three possible error modes, depending on the error type:

Symbol	Navigator pad	Error type
	pause flashes cancel illuminates	Fault - correctable (see "4.2.6" on page 14)
	cancel flashes	Fault - irrecoverable (see "4.2.7" on page 14)
	—	System error (see "4.2.8" on page 14)

Tab. 9: Error modes

9.2 Troubleshooting

Problem	Cause	Solution
Transfer ribbon wrinkles	Transfer ribbon deflection not adjusted	See "Setting the feed path of the transfer ribbon" on page 24.
	Head locking system not adjusted	See "Setting the head locking system" on page 21.
	Transfer ribbon too wide	Use only transfer ribbons which are just a bit wider than the label.
Print image is blurred or missing in places	Printhead dirty	See "Cleaning the printhead" on page 28.
	Temperature too high	Decrease temperature via software
	Unfavorable combination of labels and transfer ribbon	Use another ribbon type or brand.
Printer does not stop when transfer ribbon is done.	Direct thermal printing is selected in the software	Switch to thermal transfer printing in the software
Printer prints a series of characters instead of the label format	Printer is in Monitor mode	Exit Monitor mode.
Printer transports the label medium, but not the transfer ribbon.	Transfer ribbon loaded incorrectly	Check course of transfer ribbon and orientation of the covered side and correct if necessary.
	Unfavorable combination of labels and transfer ribbon	Use another ribbon type or brand.
Printer prints only every second label	Format setting in software is too large.	Change format setting in the software.
Vertical white lines in print image	Printhead dirty	See "Cleaning the printhead" on page 28.
	Printhead defective (failure of dots)	See "Replacing the printhead" on page 30.
Horizontal white lines in print image	Printer is being operated in Cutting mode or Peel-Off mode with the setting Backfeed > smart	Change setup to Backfeed > always . See "Configuration Instructions"
Printing lighter on one side	Printhead dirty	See "Cleaning the printhead" on page 28.
	Head locking system not adjusted	See "Setting the head locking system" on page 21.

Tab. 10: Troubleshooting

9.3 Error messages and recovery

Error message	Cause	Error recovery
ADC malfunction	Hardware error	Switch printer off and on again. If it occurs again → Service.
Barcode error	Invalid barcode contents, e.g. alphanumeric characters in numerical barcode	Correct barcode contents.
Barcode too big	Barcode is too large for the allotted area of the label	Shrink or shift barcode.
Battery low	Battery of the PC card is dead	Replace battery in PC card.
Buffer overflow	Data input buffer is full, and the computer is attempting to send more data	Use data transfer with protocol (preferably RTS/CTS).
Card full	Memory card cannot accept any more data	Change memory card.
Device not conn.	Programming does not respond to existing device	Connect an optional device or correct programming.
File not found	Calling up of a file from the memory card which does not exist	Check contents of the memory card.
	Error in the selected download font	Cancel print job, change font.
FPGA malfunction	Hardware error	Switch printer off and on again. If it occurs again → Service.
Head error	Hardware error	Switch printer off and on again. If it occurs again → replace printhead (see "8.7" on page 30).
Head open	Printhead not locked	Lock printhead.
Head too hot	Printhead excessively warm	The print job continues automatically after pausing. If this occurs repeatedly, reduce the heat level or print speed in the software.
Invalid setup	Error in configuration memory	Reconfigure printer. If it occurs again → Service.
Memory overflow	Print job too large: e.g. due to loaded fonts, large graphics	Cancel print job. Reduce amount of data to be printed.
Name exists	Field name in direct programming entered twice	Correct programming.
No DHCP server	Printer is configured for DHCP, and there is no DHCP server or the DHCP server is currently unavailable	Deactivate DHCP in the configuration and issue a permanent IP address. Notify the network administrator.

Error treatment

Error message	Cause	Error recovery
No label found	Several labels are missing from the label strip	Press the pause button several times until the next label on the strip is detected by the printer.
	The label format specified in the software does not match the actual format used	Cancel print job. Change label format in the software. Restart print job.
	A continuous medium is located in the printer, but the software is waiting for labels	Cancel print job. Change label format in the software. Restart print job.
No label size	Label size not defined in programming	Check programming.
No Link	There is no network connection	Check network cable and plug. Notify the network administrator.
No record found	Error in the memory card option when accessing the database	Check programming and memory card contents.
No SMTP server	Printer is configured for SMTP, and there is no SMTP server or the SMTP server is currently unavailable	Deactivate SMTP in the configuration. Caution! Warnings via email (EAlert) can then no longer be received! Notify the network administrator.
No Timeserver	Timeserver is selected in the configuration, but there is no timeserver or the timeserver is currently not available.	Deactivate Timesaver in the configuration. Notify the network administrator.
Out of paper	Label roll used up	Load a label roll (see "6.1" on page 16) or Load fanfold labels (see "6.3" on page 22).
	Error in paper course	Check paper course.
Out of ribbon	Transfer ribbon used up	Load new transfer ribbon
	Transfer ribbon melted through during printing	Cancel print job. Change heat level via software. Clean printhead (see "8.5" on page 28). Load transfer ribbon (see "6.4" on page 23). Restart print job.
	Thermal paper labels are to be used, but the software is set to transfer printing	Cancel print job. Switch to direct thermal printing in the software. Restart print job.
	Supply roll of transfer ribbon not secured to ribbon supply hub	Secure transfer ribbon (see "6.4" on page 23).

Error treatment

Error message	Cause	Error recovery
Protocol error	Printer receives an unknown or incorrect command from the computer.	Press the pause button to skip the command or Press the cancel button to cancel the print job.
Read error	Read error when accessing memory card	Check data on memory card. Save data. Reformat card.
Structural err.	Error in directory of the memory card, non-secure data access	Reformat memory card.
Unknown card	Memory card not formatted Memory card type not supported	Format card, use another card type.
USB error Device stalled	USB device is detected, but does not function	Do not use USB device.
USB error Too much current	USB device drawing too much current	Do not use USB device.
USB error Unknown device	USB device not recognized	Do not use USB device.
Voltage error	Hardware error	Switch printer off and on again. If it occurs again → Service. The voltage which has failed is displayed. Please note this.
Write error	Hardware error	Repeat write attempt. Reformat card.
Write protected	Write protection of the PC card is activated.	Deactivate write protection.
Wrong revision	Error when loading a new firmware version. Firmware does not work with hardware version	Load appropriate firmware.

Tab. 11: Error recovery

10 EC Declaration of Conformity



Gesellschaft für Computer-
und Automations-
Bausteine mbH & Co KG
Wilhelm-Schickard-Str. 14
D-76131 Karlsruhe

EU Conformity Declaration

We declare herewith that as a result of the manner in which the machine designated below was designed, the type of construction and the machines which, as a result have been brought on to the general market comply with the relevant fundamental regulations of the EU Rules for Safety and Health. In the event of any alteration which has not been approved by us being made to any machine as designated below, this statement shall thereby be made invalid.

Description :

Type :

Transfer Printer / Thermal Direct Printer

BP-PR PLUS series

Applied EU Regulations and Norms:

- **EC Machinery Regulations**
- Machine Safety

98/37/EU
EN ISO 12100-1:2003
EN ISO 12100-2:2003

- **EC Low Voltage Regulations**
- Data and Office Machine Safety

73/23/EEC
EN 60950-1:2001

- **EC Electromagnetic Compatibility Regulations**
- Threshold values for the Interference of Data Machines
- Limits for harmonic current emission
- Limits of voltage fluctuation and flicker
- Immunity characteristics- Limits and methods of measurement

89/336/EEC
EN 55022:1998 + A1:2000 + A2:2003 - Class A

EN 61000-3-2:2000
EN 61000-3-3:1995+A1:2001
EN 55024:1998 + A1:2001 + A2:2003

Signed for, and on behalf of, the Manufacturer :

cab Produkttechnik Sömmerda
Gesellschaft für Computer-
und Automationsbausteine mbH
99610 Sömmerda

Sömmerda, 10.07.06

Erwin Fascher
Managing Director

Index**Index****C**

Cleaning	27, 28
Label sensor	29
Print roller	28
Printhead	28
Cleaning agents	27
Cleaning the label sensor	29
Computer connection	10
Connections	10

D

Device types	15
Display	11
Disposal	8

E

Environment	8
Error	
Causes	35
Messages	35
Recovery	35
System	14
Treatment	33
Types	33

F

Fault	
correctable	14
irrecoverable	14
Functions of the operating panel	12

H

Hexagonal wrench	16
------------------	----

I

Inserting a label strip into the printhead	17
Installation	9
Installing the printhead	31
Internal rewinding	26

L

Lithium battery	8
Loading	
Fanfold labels	22
Labels	16
Labels from a roll	16
Media	16
Ribbon	23
Transfer ribbon	23

M

Maintenance	27
Maintenance plan	27
Mode	
Fault - correctable	14
Fault - irrecoverable	14

Pause	13
Printing Label	13
Ready	13

N

Navigator pad	11
Network connection	10
Notes on the documentation	5

O

Operating modes	13
Operating panel	11

P

Peel-off device version	15
Peel-Off mode	20, 26
Positioning the label roll	17
Power connection	10
Power-Save mode	12
Printing	26
Internal rewinding	26
Peel-Off mode	26
Tear-Off mode	26

R

Removing	
Printhead	31
Wound roll	22
Removing and installing	
Core adapter	16
Dispense plate	24
Locking system	25
Rewind guide plate	24
Tear-off plate	24
Replacing	
Print roller	32
Printhead	30
Rewind assist roller	32
Rollers	32
Rewind mode	19

S

Safety notes	7
Scope of delivery	9
Screen	11
Setting	
Feed path of the transfer ribbon	24
Head locking system	21
Label sensor	18
Ribbon	24
Setting up the label printer	9
Standard device	15
Switching off	10
Switching on	10
Symbol indicators	12

Index

Synchronization 26
System error 14

T

Tear-Off mode 26
Tools 16, 27
Transportation safeguards 9

U

Unpacking 9

W

Winding up the label strip 19