

MITX-430/MITX-440-DVI-2E

Installation and Use Guide

P/N: 6806800K37B

August 2010

© 2010 Emerson

All rights reserved.

Trademarks

Emerson, Business-Critical Continuity, Emerson Network Power and the Emerson Network Power logo are trademarks and service marks of Emerson Electric Co. © 2010 Emerson Electric Co. All other product or service names are the property of their respective owners.

Intel® is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

Java™ and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Microsoft®, Windows® and Windows Me® are registered trademarks of Microsoft Corporation; and Windows XP™ is a trademark of Microsoft Corporation.

PICMG®, CompactPCI®, AdvancedTCA™ and the PICMG, CompactPCI and AdvancedTCA logos are registered trademarks of the PCI Industrial Computer Manufacturers Group.

UNIX® is a registered trademark of The Open Group in the United States and other countries.

Notice

While reasonable efforts have been made to assure the accuracy of this document, Emerson assumes no liability resulting from any omissions in this document, or from the use of the information obtained therein. Emerson reserves the right to revise this document and to make changes from time to time in the content hereof without obligation of Emerson to notify any person of such revision or changes.

Electronic versions of this material may be read online, downloaded for personal use, or referenced in another document as a URL to a Emerson website. The text itself may not be published commercially in print or electronic form, edited, translated, or otherwise altered without the permission of Emerson,

It is possible that this publication may contain reference to or information about Emerson products (machines and programs), programming, or services that are not available in your country. Such references or information must not be construed to mean that Emerson intends to announce such Emerson products, programming, or services in your country.

Limited and Restricted Rights Legend

If the documentation contained herein is supplied, directly or indirectly, to the U.S. Government, the following notice shall apply unless otherwise agreed to in writing by Emerson.

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data clause at DFARS 252.227-7013 (Nov. 1995) and of the Rights in Noncommercial Computer Software and Documentation clause at DFARS 252.227-7014 (Jun. 1995).

Contact Address

Emerson Network Power - Embedded Computing

Lilienthalstr. 15

85579 Neubiberg/Munich

Germany

Contents

About this Manual	13
1 Introduction	21
1.1 Features	21
1.1.1 MITX-430	21
1.1.2 MITX-440-DVI-2E	23
1.2 Standard Compliances	25
1.3 Mechanical Data	27
1.4 Ordering Information	27
1.4.1 Supported Board Models	27
1.4.2 Board Accessories	27
1.5 Product Identification	28
2 Hardware Preparation and Installation	31
2.1 Environmental and Power Requirements	31
2.1.1 Environmental Requirements	31
2.1.2 Thermal Requirements	32
2.1.3 Power Requirements (Single Core Processor Board)	33
2.1.3.1 Full Loading Running Burn-in Test	33
2.1.3.2 Idle Mode Power Consumption	34
2.1.3.3 Standby Mode Power Consumption	35
2.1.4 Power Requirements (Dual Core Processor Board)	35
2.1.4.1 Full Loading Running Burn-in Test	36
2.1.4.2 Idle Mode Power Consumption	36
2.1.4.3 Standby Mode Power Consumption	37
2.2 Board Thermal Management and Placement	37
2.2.1 Board Thermal Management	37
2.3 Unpacking and Inspecting the Board	39
2.4 Preparing the Installation Environment	40
2.5 Processor Cooler Installation and Removal	41
2.6 Memory Module Installation and Removal	42
3 Controls, LEDs, and Connectors	45
3.1 Board Layout	45

3.2	Connectors	47
3.2.1	Clear CMOS (P3)	47
3.2.2	LVDS Header (J5).....	47
3.2.3	LVDS Backlight Header (P23)	48
3.2.4	LVDS Power	48
3.2.5	MINI IDE Header (J8).....	48
3.2.6	USB Flash Header (P10)	49
3.2.7	USB Header (P12)	50
3.2.8	ELO Touch Screen Header (P6).....	50
3.2.9	GPIO Header (P4)	51
3.2.10	COM Header (P9, P27).....	51
3.2.11	RS-232/422/485 (P18).....	51
3.2.12	Power COM (P8, P26).....	52
3.2.13	TPM Header (P2).....	53
3.2.14	LPT Header (P11).....	54
3.2.15	Front Panel Header (P15).....	54
3.2.16	BIOS Program Header (P16)	55
3.2.17	Fan Header (P1, P13)	55
3.2.18	MINI PCIE LED (P14)	56
3.2.19	Case Open Header (P25)	56
4	Functional Description	57
4.1	Block Diagram	57
4.2	Pineview-D Processor	58
4.3	SMBus Interface and Devices	58
4.4	System Memory	60
4.5	Ethernet Interfaces	60
4.6	PCI-E Port	60
4.7	USB Interface	61
4.8	VGA, LVDS, LPC, and Audio Interface	62
4.9	DVI Interface	63
4.10	BIOS Device	63
4.11	IDE	63
4.12	GPIO Configuration	63
4.12.1	User Defined GPIO	63

4.12.2 ICH8-M GPIO	64
4.13 Chipset	68
4.14 Clock Generator	69
4.15 Video	69
4.16 Storage	69
4.17 Super I/O	70
4.18 HW Monitor	70
4.19 SPI Flash	70
4.20 Watchdog Timer	71
4.21 Debug	71
4.22 Power Management	71
4.23 Manageability	71
4.24 RTC	71
5 Operation	73
5.1 POST	73
5.2 Boot Process	73
5.3 Initiating Setup	73
5.4 Setup Utility	74
5.4.1 Main Menu	74
5.4.2 Advanced Menu	75
5.4.3 Chipset Menu	89
5.4.4 Boot Menu	90
5.4.5 Security Menu	91
5.4.6 Save & Exit Menu	91
5.5 POST Codes	92
5.5.1 Status Code Ranges	92
5.5.2 Standard Status Codes	93
5.5.2.1 SEC Status Codes	93
5.5.2.2 PEI Status Codes	94
5.5.2.3 PEI Beep Codes	97
5.5.2.4 DXE Status Codes	98
5.5.2.5 DXE Beep Codes	101
5.5.2.6 CPU Exception Status Codes	101
5.5.2.7 ASL Status Codes	102

5.5.2.8 OEM-Reserved Status Code Ranges 103

6 Operating System and Driver Support 105

6.1 Supported Operating System 105

6.2 Supported Drivers 105

A Related Documentation 107

A.1 Emerson Embedded Communications Computing Documents 107

A.2 Related Specifications 107

Safety Notes 109

Sicherheitshinweise 133

Index 157

List of Tables

Table 1-1	Single Core Processor Board Features	21
Table 1-2	Dual Core Processor Board Features	23
Table 1-3	Standard Compliances	25
Table 1-4	Mechanical Data	27
Table 1-5	Available Board Variants	27
Table 1-6	Available Board Accessories	27
Table 2-1	Environmental Requirements	31
Table 2-2	Critical Temperature Spots	32
Table 3-1	Clear CMOS	47
Table 3-2	LVDS Header Pin Definition	47
Table 3-3	LVDS Backlight Header Pin Definition	48
Table 3-4	LVDS Power	48
Table 3-5	MINI IDE Header PIN Definition	48
Table 3-6	USB Flash Header Pin Definition	49
Table 3-7	USB Header Pin Definition	50
Table 3-8	ELO Touch Screen Header Pin Definition	50
Table 3-9	GPIO Header Pin Definition	51
Table 3-10	COM3, COM6 Header Pin Definition	51
Table 3-11	RS-232/422/485 Header Pin Definition	51
Table 3-12	RS-232/422/485 Jumper Selection (P28)	52
Table 3-13	COM4, COM5 Header Pin Definition	52
Table 3-14	COM4, COM5 Pin9 Selection	52
Table 3-15	TPM Header Pin Definition	53
Table 3-16	LPT Header Pin Definition	54
Table 3-17	Front Panel Header Pin Definition	54
Table 3-18	BIOS Program Header Pin Definition	55
Table 3-19	Smart Fan Header Pin Definition	55
Table 3-20	MINI PCIE Wireless LAN LED Header Pin Definition	56
Table 3-21	Case Open Header Pin Definition	56
Table 4-1	I2C Device Address	60
Table 4-2	PCI-E Port	60
Table 4-3	ICH8-M GPIO Definition	64
Table 5-1	Setup Utility	74
Table 5-2	Main Menu	74
Table 5-3	Legacy OPROM Support	75
Table 5-4	Advanced Menu	75

Table 5-5	ACPI Settings	76
Table 5-6	Trusted Computing	76
Table 5-7	S5 RTC Wake Setting	77
Table 5-8	CPU Configuration	77
Table 5-9	IDE Configuration	78
Table 5-10	IGD-LCD Control	79
Table 5-11	USB Configuration	80
Table 5-12	EMC2103 H/W Monitor	81
Table 5-13	Super IO Configuration	81
Table 5-14	Serial Port 1 Configuration	82
Table 5-15	Serial Port 2 Configuration	82
Table 5-16	Serial Port 3 Configuration	83
Table 5-17	Serial Port 4 Configuration	83
Table 5-18	Serial Port 5 Configuration	84
Table 5-19	Serial Port 6 Configuration	84
Table 5-20	Parallel Port Configuration	85
Table 5-21	Watchdog Timer Configuration	85
Table 5-22	W83627UHG H/W Monitor	86
Table 5-23	Serial Port Console Redirection	86
Table 5-24	COM1 and COM2 Console Redirection Settings	87
Table 5-25	Chipset Menu	89
Table 5-26	Host Bridge	89
Table 5-27	South Bridge	89
Table 5-28	Boot Menu	90
Table 5-29	Security Menu	91
Table 5-30	Save & Exit Menu	91
Table 5-31	Status Code Ranges	92
Table 5-32	SEC Status Codes	93
Table 5-33	PEI Status Codes	94
Table 5-34	PEI Beep Codes	97
Table 5-35	DXE Status Codes	98
Table 5-36	DXE Beep Codes	101
Table 5-37	CPU Exception Status Codes	101
Table 5-38	ASL Status Codes	102
Table 5-39	OEM-Reserved Status Code Ranges	103
Table 6-1	Supported Drivers	105

Table A-1	Emerson Network Power - Embedded Computing Publications	107
Table A-2	Related Specifications	107

List of Figures

Figure 1-1	Declaration of Conformity	26
Figure 1-2	Single Core Processor Board - Serial Number Location	28
Figure 1-3	Dual Core Processor Board -Serial Number Location	29
Figure 2-1	Board Thermal Management	38
Figure 3-1	Single Core Motherboard Components	45
Figure 3-2	Dual Core Motherboard Components	46
Figure 4-1	Motherboard Block Diagram	57
Figure 4-2	Board I2C Device Connection	59
Figure 4-3	PCI-E Connection	61
Figure 4-4	USB Ports Connection	62

About this Manual

Overview of Contents

This manual is divided into the following chapters and appendix.

- [Chapter 1, Introduction, on page 21](#), describes the features of single core and dual core processors, standard compliances, mechanical data, ordering information, and product identification.
- [Chapter 2, Hardware Preparation and Installation, on page 31](#), describes the environmental and power requirements, installation prerequisites, processor cooler and memory module installation and removal procedures.
- [Chapter 3, Controls, LEDs, and Connectors, on page 45](#), describes the LEDs and connectors used on the motherboard.
- [Chapter 4, Functional Description, on page 57](#), describes the functionalities provided on the motherboard.
- [Chapter 5, Operation, on page 73](#), describes the boot process, setup utility, and POST codes.
- [Chapter 6, Operating System and Driver Support, on page 105](#), describes the supported Operating Systems and Drivers.
- [Appendix A, Related Documentation, on page 107](#), lists the related documents.

Abbreviations

This document uses the following abbreviations:

Abbreviation	Definition
ACPI	Advanced Configuration and Power Interface
AHCI	Advanced Host Controller Interface
AMI	American Megatrends Inc
AMT	Active Management Technology
AP	Application Processor
APIC	Advanced Programmable Interrupt Controller
ASL	ACPI Source Language

Abbreviation	Definition
ATA	Advanced Technology Attachment
ATAPI	AT Attachment Packet Interface
ATX	Advance Technology Extended
BDS	Boot Device Selection
BIOS	Basic Input-Output System
BSP	Boot Strap Processor
CMOS	Complementary Metal Oxide Semiconductor
COM	Communications
CRT	Cathode Ray Tube
CSM	Compatibility Support Module
CTS	Clear To Send
DC	Dual Core/Direct Current
DCD	Data Carrier Detect
DMA	Direct Memory Access
DMI	Direct Media Interface
DSR	Device Status Register
DTR	Data Terminal Ready
DVI	Digital Visual Interface
DVMT	Dynamic Video Memory Technology
DXE	Driver Execution Environment
ECC	Error Checking and Correcting
ECP	Extended Capabilities Parallel Port
EFI	Extensible Firmware Interface
EHCI	Enhanced Host Controller Interface
EMC	Electromagnetic Magnetic Compatibility
EMS	Emergency Management Services
EPP	Enhanced Parallel Port
ESD	Electro-Static Discharge

Abbreviation	Definition
GBE	Gigabit Ethernet
GLCI	Gigabit LAN Connect Interface
GPI	General Purpose Input
GPIO	General Purpose Input Output
GPO	General Purpose Output
GPU	Graphics Processing Unit
IDE	Integrated Device Electronics
IGD	Internal Graphics Device
IPL	Initial Program Loader
LFP	Local Flat Panel
LPC	Low Pin Count
LPT	Line Printer Terminal
LVDS	Low Voltage Differential Signaling
MAC	Medium Access Control
MSR	Mode Specific Register
NMI	Non-Maskable Interrupt
NVRAM	Non-Volatile RAM
OEM	Original Equipment Manufacturer
PATA	Parallel AT Attachment
PCB	Printed Circuit Board
PCI	Peripheral Component Interface
PCIE	Peripheral Component Interface Express
PEG	PCI Express Graphics
PEI	Pre-EFI Initialization
PIC	Programmable Interrupt Controller
PIO	Programmed Input Output
POST	Power on Self Test
PPI	PEIM-to-PEIM Interface

Abbreviation	Definition
PWM	Pulse Width Modulation
PXE	Preboot Execution Environment
RGB	Red,Green,Blue
RTC	Real Time Clock
RTS	Request To Send
RXD	Receive X Data
SATA	Serial AT Attachment
SC	Single Core
SCSI	Small Computer System Interface
SIMD	Single Instruction Multiple Data
SIO	Super Input/Output
SMBus	System Management Bus
SMM	System Management Mode
SPD	Serial Presence Detect
SPI	Serial Peripheral Interface
SPP	Standard Parallel Port
TACH	Tachometer
TDP	Thermal Dissipation Power
TPM	Trusted Platform Module
TXD	Transmit X data
UEFI	Unified Extensible Firmware Interface
UHCI	Universal Host Controller Interface
VBIOS	Video BIOS
VCC	Voltage Current Circuit
VCORE	Core Voltage
VGA	Video Graphics Adapter

Abbreviation	Definition
WDT	Watch Dog Timer
WP	Write Protect
XD	Execute Disable
XDP	Extended Debug Port

Conventions

The following table describes the conventions used throughout this manual.

Notation	Description
0x00000000	Typical notation for hexadecimal numbers (digits are 0 through F), for example used for addresses and offsets
0b0000	Same for binary numbers (digits are 0 and 1)
bold	Used to emphasize a word
Screen	Used for on-screen output and code related elements or commands in body text
Courier + Bold	Used to characterize user input and to separate it from system output
<i>Reference</i>	Used for references and for table and figure descriptions
File > Exit	Notation for selecting a submenu
<text>	Notation for variables and keys
[text]	Notation for software buttons to click on the screen and parameter description
...	Repeated item for example node 1, node 2, ..., node 12
.	Omission of information from example/command that is not necessary at the time being
..	Ranges, for example: 0..4 means one of the integers 0,1,2,3, and 4 (used in registers)

Notation	Description
	Logical OR
WARNING XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Indicates a hazardous situation which, if not avoided, could result in death or serious injury
CAUTION XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury
NOTICE XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Indicates a property damage message
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX 	No danger encountered. Pay attention to important information

Summary of Changes

This is the initial version of the manual.

Part Number	Publication Date	Description
6806800K37A	March 2010	GA version
6806800K37B	August 2010	Updated the manual with new marketing numbers MITX-430/MITX-440-DVI-2E.

Comments and Suggestions

We welcome and appreciate your comments on our documentation. We want to know what you think about our manuals and how we can make them better.

Mail comments to us by filling out the following online form:

<http://www.emersonnetworkpowerembeddedcomputing.com/> > Contact Us > Online Form

In "Area of Interest" select "Technical Documentation". Be sure to include the title, part number, and revision of the manual and tell us how you used it.

Introduction

1.1 Features

The MITX-430 is a Mini-ITX motherboard based on the Intel® Atom™ D410 single-core or D510 dual-core processor that offers improved processing and graphics performance over existing Mini-ITX Intel Atom based products.

It is designed to allow easy, cost-effective replacement of the motherboard in a production environment. There are two versions of MITX-430:

- MITX-430 - Single core processor for low power consumption.
- MITX-440-DVI-2E - Dual core processor with some additional features for higher performance, which still retains the low power consumption.

MITX-430 uses the latest generation Unified Extensible Firmware Interface (UEFI) Basic Input Output System (BIOS) from American Megatrends Inc (AMI). This manages the interaction between the low-level hardware interfaces and the OS level in an efficient manner that provides superior reliability.

The following sections describe some of the key features of MITX-430 single core and MITX-440-DVI-2E dual core processors.

1.1.1 MITX-430

The following table lists the features of the single core processor board:

Table 1-1 Single Core Processor Board Features

Function	Features
CPU (uFCBGA)	● Intel Pineview-D SC Processor (D410) ● Frequency: Pineview-D SC 1.66GHz with TDP less than 10W ● Supports up to 4GB DDR2 SO-DIMM ● Supports 667MHz ● Integrated Graphic Process Unit ● 3rd generation graphics core, 400MHz render clock frequency ● Supports one VGA ● Supports one LVDS
Chipset	Intel ICH8-M

Table 1-1 Single Core Processor Board Features (continued)

Function	Features
System BIOS feature	One piece 4MB SPI boot device
Super I/O	W83627UHG-LF
RTC	Integrated in ICH8-M
Audio	● Audio on board (ALC888-GR-LF) ● Rear: Line-in, Line out, MIC-in
LAN	10/100/1000M Ethernet PHY, Intel WG82567V
USB	Supports 10 USB2.0 high speed ports (four rear, five on header, and one mini PCI-Express)
Expansion slots	● One PCI-E x1 slot ● One Mini-PCIE card slot ● One standard USB flash disk (2x5Pin, 2.54mmPitch)
Rear panel ports	● One 2xUSB2.0 ports stack one LAN (RJ-45) ● One 2xUSB2.0 stack connector ● One vertical triple stack (MIC-in, Line-in, Line-out) ● One stack PS/2 port ● One e-SATA port ● One VGA DSUB-15 ● One stacked dual DSUB-9 serial port
Power connectors	24-pin ATX power connector
Fan	Supports two smart fans (4 Pin), one for CPU and one for System
Serial ATA	supports one e-SATA and two SATA ports
PATA	Supports one Mini-IDE (44Pin)
Hardware monitor	Voltage, temperature, and fan speed control
Watchdog	Supports 1-255s or 1-255m watchdog
Trusted Platform Module	Supports one TPM connector (2x10, 2.54mm Pin header)
Power management	● ACPI1.0b compatible ● Supports ATX power supply
COM Port	Supports 6 COM ports (two to DSUB-9 in rear I/O region, one RS-232/422/485 port, two Power COM, and one to 2x5Pin header)

Table 1-1 Single Core Processor Board Features (continued)

Function	Features
LPT Port	Supports one parallel port (2x13Pin Header)
Front panel	2x5Pin header, supports power button, reset button, power LED, HDD LED, and standby LED
GPIO	Supports 4 GPI and 4 GPO
Board size	● Mini-ITX 170mm x 170mm ● 6 Layers PCB

1.1.2 MITX-440-DVI-2E

The following table lists the features of the dual core processor board:

Table 1-2 Dual Core Processor Board Features

Function	Features
CPU (uFCBGA)	● Intel Pineview-D DC Processor (D510) ● Frequency: Pineview-D DC 1.66GHz with TDP less than 13W ● Supports up to 4GB DDR2 SO-DIMM ● Supports 667MHz ● Integrated Graphic Process Unit ● 3rd generation graphics core, 400MHz render clock frequency ● Supports one VGA ● Supports one LVDS ● Supports one DVI (derived from LVDS)
Chipset	Intel ICH8-M
System BIOS feature	One piece 4MB SPI boot device
Super I/O	W83627UHG-LF
RTC	Integrated in ICH8-M
Audio	● Audio on board (ALC888-GR-LF) ● Rear: Line-in, Line out, MIC-in

Table 1-2 Dual Core Processor Board Features (continued)

Function	Features
LAN	● 10/100/1000M Ethernet PHY, Intel WG82567V ● 10/100/1000M Ethernet Controller, Intel WG82574L
USB	Supports 10 USB2.0 high speed ports (four rear, five on header, and one mini PCI-Express)
Expansion slots	● One PCI-E x1 slot ● One Mini-PCIE card slot ● One standard USB flash disk (2x5Pin, 2.54mmPitch)
Rear panel ports	● Two 2xUSB2.0 ports stack one LAN (RJ-45) ● One vertical triple stack (MIC-in, Line-in, Line-out) ● One stack PS/2 port ● One e-SATA port ● One VGA DSUB-15 stack DVI port ● One stacked dual DSUB-9 serial port
Power connectors	24-pin ATX power connector
Fan	Supports two smart fans (4 Pin), one for CPU and one for the system
Serial ATA	supports one e-SATA and two SATA ports
PATA	Support one Mini-IDE (44Pin)
Hardware monitor	Voltage, temperature, and fan speed control
Watchdog	Supports 1-255s or 1-255m watchdog
Trusted Platform Module	Supports one TPM connector (2x10, 2.54mm Pin header)
Power management	● ACPI1.0b compatible ● Supports ATX power supply
COM Port	Supports 6 COM ports (two to DSUB-9 in rear I/O region, one RS-232/422/485 port, two power COM, and one to 2x5Pin header)
LPT Port	Supports one parallel port (2x13Pin Header)
Front panel	2x5Pin Header, supports power button, reset button, power LED, HDD LED, and standby LED
GPIO	Supports 4 GPI and 4 GPO

Table 1-2 Dual Core Processor Board Features (continued)

Function	Features
Board size	● Mini-ITX 170mm x 170mm ● 6 Layers PCB


1.2 Standard Compliances

MITX-430/MITX-440-DVI-2E meets the following standards.

Table 1-3 Standard Compliances

Standard	Description
IEC 60950-1	General requirements of Safety-Part 1 of Information Technology Equipment.
EN55024 (EU)	Limits and methods of measurements of immunity characteristics of Information Technology Equipment.
FCC 47 CFR Part 15 Subpart B (US), Class B	Federal Communications Commission Radio Frequency Devices class B level requirements.
EN55022 Class B (EU)	Limits and methods of measurements of radio disturbance characteristics of Information Technology Equipment.
AS/NZS CISPR 22 Class B (Australia/New Zealand)	Limits and methods of measurement of radio disturbance characteristics of Information Technology Equipment.
VCCI Class B (Japan)	Voluntary Control Council for Interference by Information Technology Equipment.

 Figure 1-1 Declaration of Conformity

EC Declaration of Conformity According to EN 45014:1998	
Manufacturer's Name:	Emerson Network Power Embedded Computing
Manufacturer's Address:	Emerson Network Power, 2800 South Diablo Way, Suite 190, Tempe, AZ, 85282
Declares that the following product, in accordance with the requirements of 2004/108/EEC, EMC Directive and 1999/5/EC, RTTE Directive and their amending directives,	
Product:	Computer Board
Model Name/Number:	MITX-440-DVI-2E & MITX-430
has been designed and manufactured to the following specifications:	
• IEC/UL 60950-1:2001 Safety of Information Technology Equipment • EN55022:2006 Information Technology Equipment, Radio disturbance characteristics, Limits and methods of measurement • EN55024:1998 Information Technology Equipment, Immunity characteristics, Limits and methods of measurement • EN300386v1.3.3:2005 Electromagnetic compatibility and radio spectrum matters (ERM); Telecommunication network equipment; EMC requirements	
As manufacturer we hereby declare that the product named above has been designed to comply with the relevant sections of the above referenced specifications. This product complies with the essential health and safety requirements of the EMC Directive and RTTE Directive. We have an internal production control system that ensures compliance between the manufactured products and the technical documentation.	
 _____ Erick Zhang Leader, Test Engineering	
Issue date: Mar 2, 2010	 

1.3 Mechanical Data

The following table provides details about the dimensions and weight of the board:

Table 1-4 Mechanical Data

Feature	Value
Dimensions	170mm x 170mm
Weight	Dual core board: 353g Single core board: 325g

1.4 Ordering Information

When ordering board variants or board accessories, use the order numbers given in the following sections.

1.4.1 Supported Board Models

The following board models are supported:

Table 1-5 Available Board Variants

Order Number	Description
MITX-430	Single-core Intel Atom based Mini-ITX board with standard I/O.
MITX-440-DVI-2E	Dual-core Intel Atom based Mini-ITX with standard and optional I/O.

1.4.2 Board Accessories

The following accessories are shipped with the board:

Table 1-6 Available Board Accessories

Order Number	Description
MITX-430	Two COM cables, one SATA power cable, one SATA data cable
MITX-440-DVI-2E	Two COM cables, one SATA power cable, one SATA data cable

Table 1-6 Available Board Accessories (continued)

Order Number	Description
MITX-430	One IO shield
MITX-440-DVI-2E	One IO shield

1.5 Product Identification

The following graphic shows the location of the serial number label on the board.

Figure 1-2 Single Core Processor Board - Serial Number Location


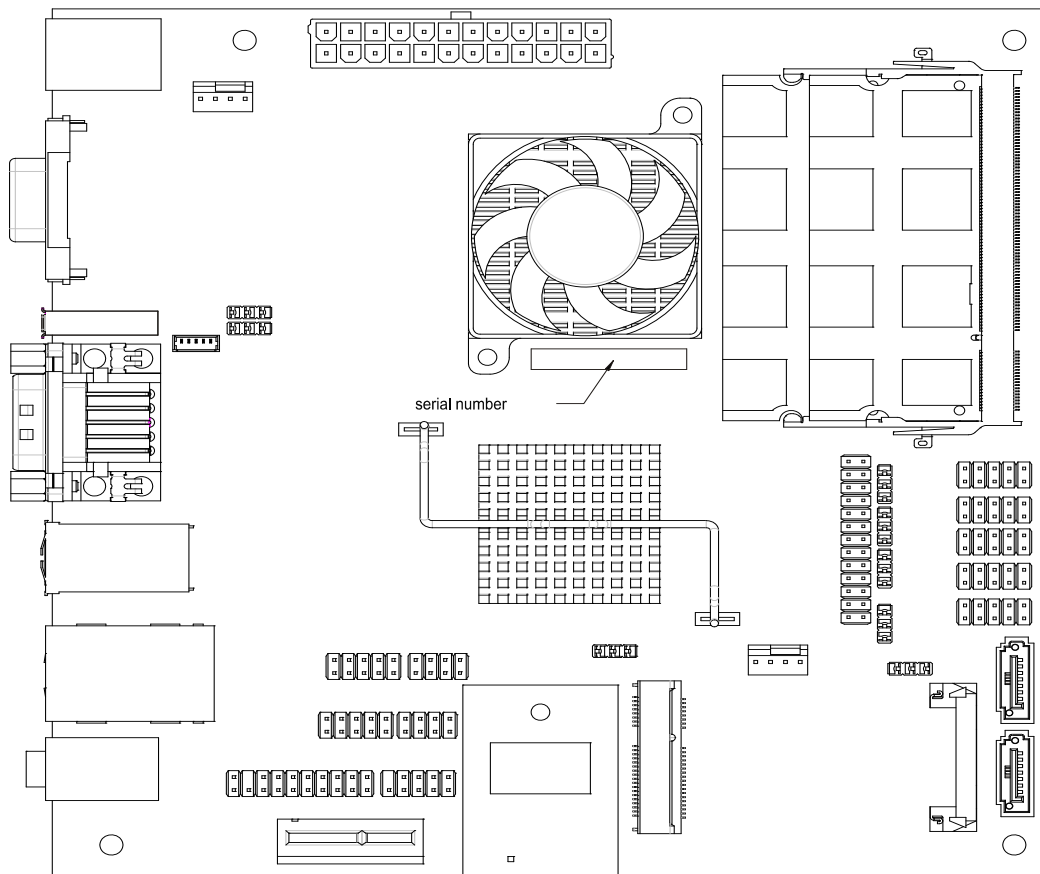


Figure 1-3 Dual Core Processor Board -Serial Number Location

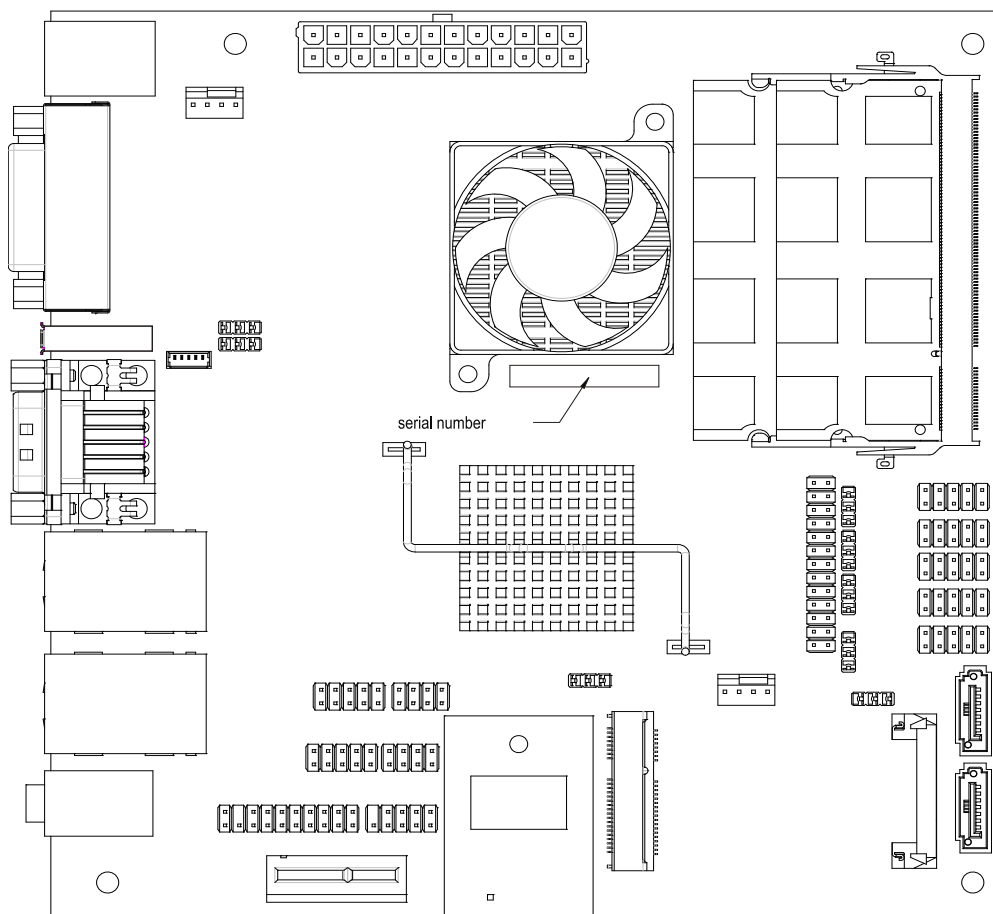

Hardware Preparation and Installation

2.1 Environmental and Power Requirements

The following environmental and power requirements are applicable to the motherboard.

2.1.1 Environmental Requirements

You must make sure that the motherboard, when operated in your particular system configuration, meets the environmental requirements specified below.



Operating temperatures refer to the temperature of the air circulating around the motherboard and not to the component temperature.

NOTICE

Product Damage

High humidity and condensation on surfaces cause short circuits.

Do not operate the product outside the specified environmental limits. Make sure the product is completely dry and there is no moisture on any surface before applying power.

Overheating and Damage of the Product

Operating the product without forced air cooling can lead to overheating and thus damage of the product.

When operating the product, make sure that forced air cooling is available in the shelf.

Table 2-1 Environmental Requirements

Requirement	Operating	Non-operating
Temperature	0°C to 55°C with CPU cooler	-40°C to 85°C
Humidity	10% to 90% non-condensing	5% to 95% non condensing
Vibration	0.01g ² /Hz at 5-500Hz random vibration	

Table 2-1 Environmental Requirements (continued)

Requirement	Operating	Non-operating
Shock		20G peak (half sine) 11ms
Altitude	-60 to 4000 m ASL	

2.1.2 Thermal Requirements

Table 2-2 Critical Temperature Spots

Item	Thermal Dissipation Power (W)	Maximum Allowable Temperature (°C)
CPU	D510 <= 13W D410 <= 10W	100 (Tj)
ICH8-M	3W	92 (Tc)

NOTICE

System Overheating

Cooling Vents

Improper cooling can lead to system damage and can void the manufacturer's warranty. To ensure proper cooling and undisturbed airflow through the system do not obstruct the ventilation openings of the system. Make sure that the fresh air supply is not mixed with hot exhaust from other devices.



CAUTION

Personal Injury

During operation, hot surfaces may be present on the heat sinks and the components of the product. To prevent injury from hot surface do not touch any of the exposed components or heatsinks on the product. Use the handle and face plate, where applicable, or the board edge when removing the product from the enclosure.

2.1.3 Power Requirements (Single Core Processor Board)

The power consumption is tested under the following conditions with:

- 1 * 2G memory
- 1 * 1G memory
- One 2.5" ATA HDD
- One infonion TPM module
- One 3.5" SATA HDD
- One SATA CD-ROM
- One USB keyboard
- One USB mouse
- One PS/2 keyboard
- One PS/2 mouse

2.1.3.1 Full Loading Running Burn-in Test

VGA display only

	12V	5V	3.3V	Total
Current(A)	0.30	1.8	0.3	
Power(W)	3.6	9	0.99	13.59

VGA + LVDS dual display

	12V	5V	3.3V	Total
Current(A)	0.88	1.8	0.67	
Power(W)	10.56	9	2.21	21.77



- Tested with 12.1" LCD Panel (P/N: G121X1-L01). The LCD inverter uses 12V.
- The test devices do not include PCIE x1 add-in card and Mini-PCIE card. The two SATA devices are powered externally. If you use all the devices and power internally, then you must add all the power consumption.
- It is recommended to add more buffer while designing the ATX power supply.

2.1.3.2 Idle Mode Power Consumption

VGA + LVDS dual display

	12V	5V	3.3V	Total
Current(A)	0.78	1.7	0.73	
Power(W)	9.76	8.5	2.4	20.66



- Tested with 12.1" LCD Panel (P/N: G121X1-L01). The LCD inverter uses 12V.
- The test devices do not include PCIE x1 add-in card and Mini-PCIE card. The two SATA devices are powered externally. If you use all the devices and power internally, then you must add all the power consumption.
- It is recommended to add more buffer while designing the ATX power supply.

2.1.3.3 Standby Mode Power Consumption

2.1.3.3.1 S3 Sleep Mode

	5V standby
Current(A)	0.3
Power(W)	1.5

2.1.3.3.2 S5 Sleep mode

	5V standby
Current(A)	0.23
Power(W)	1.15

2.1.4 Power Requirements (Dual Core Processor Board)

The power consumption is tested under the following conditions with:

- 2*2G SO-DIMM
- One 2.5" ATA HDD
- One infonion TPM module
- One USB keyboard
- One USB mouse
- One PS/2 keyboard
- One PS/2 mouse
- One 3.5" SATA HDD
- One 3.5" SATA CD-ROM

2.1.4.1 Full Loading Running Burn-in Test

VGA and LVDS dual display, without DVI display.

	12V	5V	3.3V	Total (W)
Current (A)	1.18	2.25	1	
Power (W)	14.16	11.25	3.3	28.71
Source	ATX	ATX	ATX	



- Tested with 12.1" LCD Panel (P/N: G121X1-L01). The LCD inverter uses 12V.
- The test devices do not include PCIE x1 add-in card and Mini-PCIE card. The two SATA devices are powered externally. If you use all the devices and power internally, then you must add all the power consumption.
- It is recommended to add more buffer while designing the ATX power supply.

2.1.4.2 Idle Mode Power Consumption

VGA and LVDS dual display, without DVI display, tested 1 minute after logging in Windows XP.

	12V	5V	3.3V	Total (W)
Current (A)	0.96	2.03	1.1	
Power (W)	11.52	10.15	3.63	25.3
Source	ATX	ATX	ATX	



- Tested with 12.1" LCD Panel (P/N: G121X1-L01). The LCD inverter uses 12V.
- The test devices do not include PCIE x1 add-in card and Mini-PCIE card. The two SATA devices are powered externally. If you use all the devices and power internally, then you must add all the power consumption.
- It is recommended to add more buffer while designing the ATX power supply.

2.1.4.3 Standby Mode Power Consumption

2.1.4.3.1 S3 state

	5V standby
Current(A)	0.19
Power(W)	0.95
Source	ATX

2.1.4.3.2 S5 State

	5V standby
Current(A)	0.13A
Power(W)	0.65
Source	ATX


2.2 Board Thermal Management and Placement

2.2.1 Board Thermal Management

The motherboard provides some thermal management strategy, including CPU junction temperature monitor. It can take corresponding action to protect system at catastrophic overheating.

Figure 2-1 shows the thermal management diagram.

Figure 2-1 Board Thermal Management

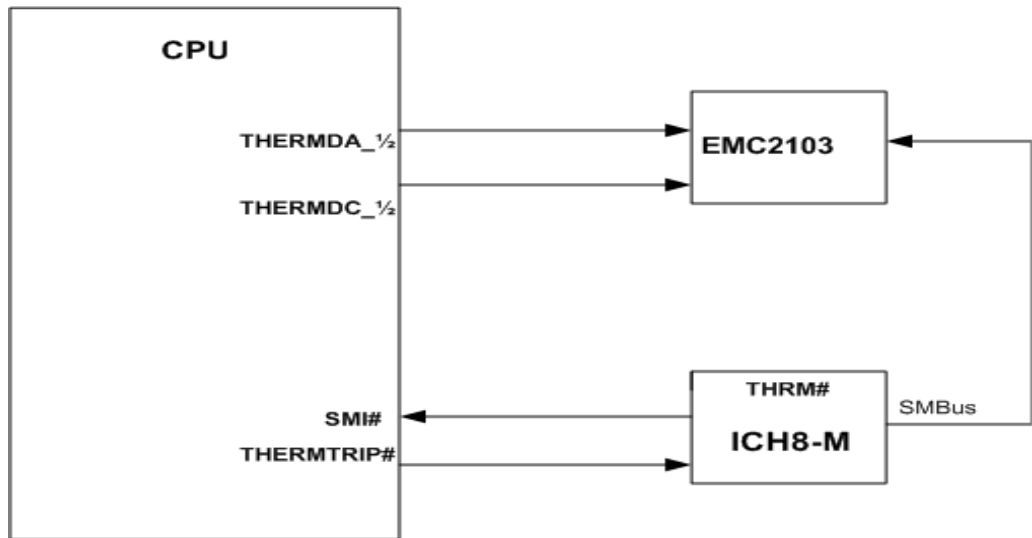

Two PNP thermal transistors are integrated in Pineview-D processor. It is used as a diode and connects to an external digital thermal sensor EMC2103. CPU receives the data of junction temperature through SMBus. Note that, this is an inaccurate value and the temperature offset must be taken into account by reading MSR of CPU.

When the CPU junction temperature is more than 125C, CPU asserts the THERMTRIP# signal, and then stops all bus activities, and the core power must be shut down in the specified time.

2.3 Unpacking and Inspecting the Board

NOTICE

Damage of Circuits

Electrostatic discharge and incorrect installation and removal of the product can damage circuits or shorten their life.

Before touching the product make sure that you are working in an ESD-safe environment or wear an ESD wrist strap or ESD shoes. Hold the product by its edges and do not touch any components or circuits.

Shipment Inspection

To inspect the shipment, follow the steps mentioned below:

1. Verify that you have received all items of your shipment:

- Quick Start Guide and Safety Notes summary
- Motherboard
- Two COM cables
- One SATA power cable
- One SATA data cable
- Driver CD
- I/O Shield

2. Check for damage and report any damage or differences to the customer service.
3. Remove the desiccant bag shipped together with the product.



Environmental Damage

Improper disposing of used products may harm the environment. Always dispose of used products according to your country's legislation and manufacturer's instructions.

2.4 Preparing the Installation Environment

Before you install or replace components, pay attention to the following:

- Wear an ESD-preventive wrist strap to prevent the static electricity from damaging the device.
- Keep the area where the components reside clean and keep the components away from heat-generating devices, such as radiator.
- Ensure that your sleeves are tightened or rolled up above the elbow. For safety purposes, it is not recommended to wear jewelry, watch, glasses with metal frame, or clothes with metal buttons.
- Do not exert too much force, or insert or remove the components forcibly. Avoid damage to the components or plug-ins.
- Confirm the feasibility of the operation
The spare parts of the components to be installed or replaced are available in the equipment warehouse. When the available spare parts are lacking, contact Emerson Network Power. For details on how to get help from Emerson Network Power, visit <http://www.emersonnetworkpower.com/embeddedcomputing>. Make sure that the new components are in good condition, without defects such as oxidation, chemical corrosion, missing components, or transportation damage.
- Check the environment
Make sure that the power supply, temperature, and humidity meets the operating requirements for the motherboard and its components. For details, refer to the respective system documentation.
- Prepare the parts and the tools

Prepare the components to be installed or replaced.

When you hold or transport the components, use the special antistatic package.

Prepare the cross screwdriver, screws, plastic supports, cooling gel, and ESD-preventive wrist strap.

- Confirm installation or changing position
Confirm the position where the MITX-430/MITX-440-DVI-2E will be installed.
- Others
If a serious problem occurs and cannot be solved when you install or replace the component, contact Emerson Network Power for technical support.

2.5 Processor Cooler Installation and Removal

Installing the Processor Cooler

1. Wear the ESD-preventive wrist strap.
2. Tear down the thermal pad resistant paper from back of the cooler.
3. Adjust the optimal installation direction for cooler. Place the cooler over the processor and align the two push-pins to the holes on the motherboard.
4. Push the two pins down and make sure that each of the push-pin is inserted correctly into the hole and properly locked on the motherboard.
5. Connect the fan to its connector on the motherboard.

Removing the Processor Cooler

1. Wear the ESD-preventive wrist strap.
2. Disconnect the fan from the motherboard.
3. Turn over the motherboard to backside. Locate the cooler pins, pinch the ends of the push tabs and push them out of the hole.

2.6 Memory Module Installation and Removal

When you install or replace the module, pay attention to the following:

- The MITX-430/MITX-440-DVI-2E supports single channel DDR2 667MHz, two SO-DIMM slots.
- The SO-DIMMs must have the same sizes, frequencies, types and technologies, physical designs, and manufacturers.
- SO-DIMMs must be of single or dual rank type. Quad rank type modules are not supported.

NOTICE

Pin Damage

Forcing the module into the system may damage connector pins. If the module hangs during insertion, pull it out and insert it again.

Installing Memory Module

1. Wear the ESD-preventive wrist strap.
2. Lay the MITX-430/MITX-440-DVI-2E, where the SO-DIMM is to be installed on the antistatic desktop.
3. Take the SO-DIMM out of the antistatic package, holding it by the edges.
4. Line up the notch located on the row of the metal pins at the bottom of the module with the key in the SO-DIMM slot on the motherboard.
5. Insert the SO-DIMM in a slantwise position or at a 45° angle to slide the module into place.
6. Press down on the module against the motherboard until you hear it snap into place. The modules must be properly aligned before you press it down into its final position. Remove the module from the socket and reinstall it if you cannot press it down into its final position.

Removing Memory Module

1. Wear the ESD-preventive wrist strap.
2. Release the module from the slot by pushing the spring latches on either side of the module outward.
3. Lift the module from the motherboard.

NOTICE

Damage of the Product and Additional Devices and Modules

Incorrect installation or removal of additional devices or modules damages the product or the additional devices or modules.

Before installing or removing additional devices or modules, read the respective documentation and use appropriate tools.

Controls, LEDs, and Connectors

3.1 Board Layout

Figure 3-1 shows the location of the major components on the motherboard.

Figure 3-1 Single Core Motherboard Components


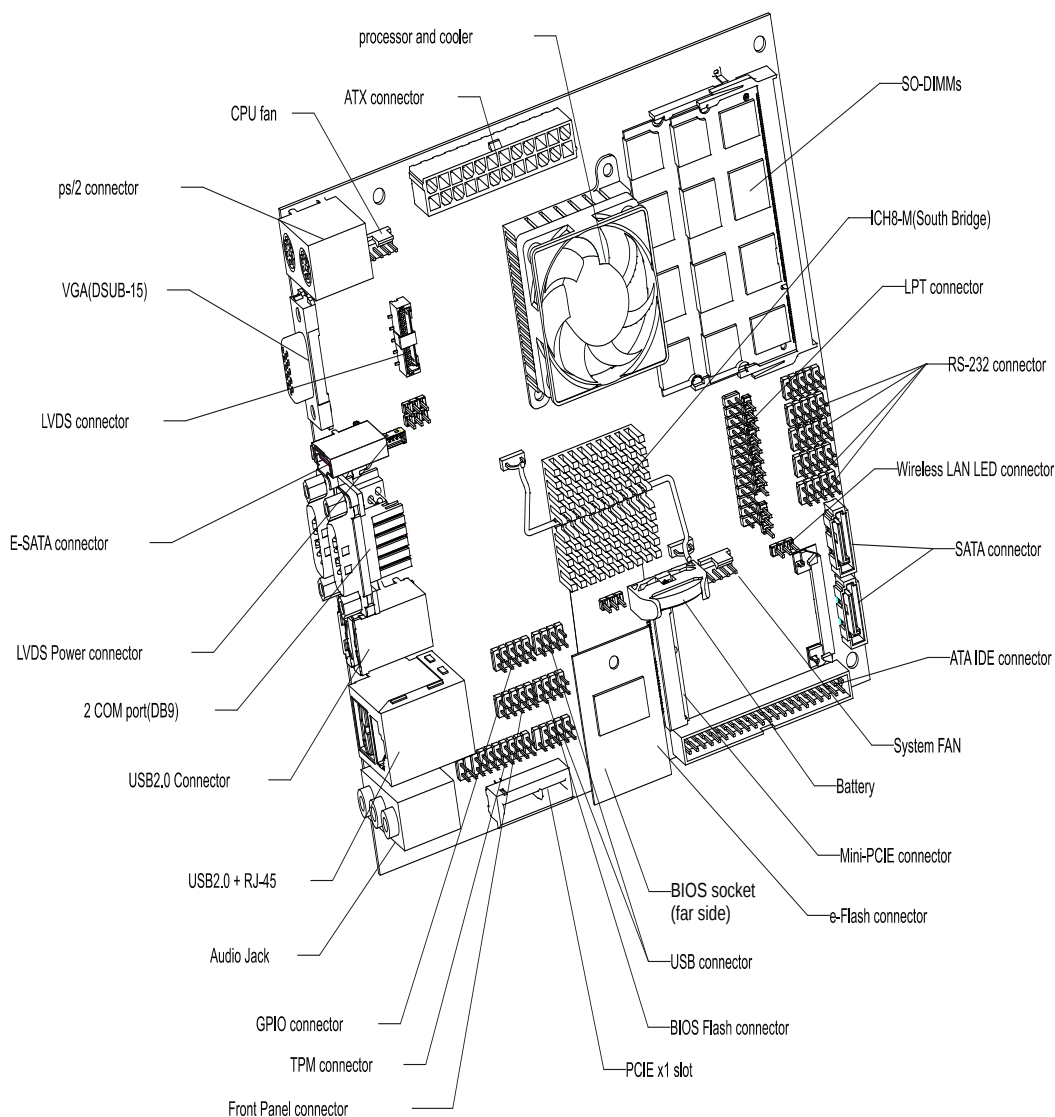


Figure 3-2 Dual Core Motherboard Components

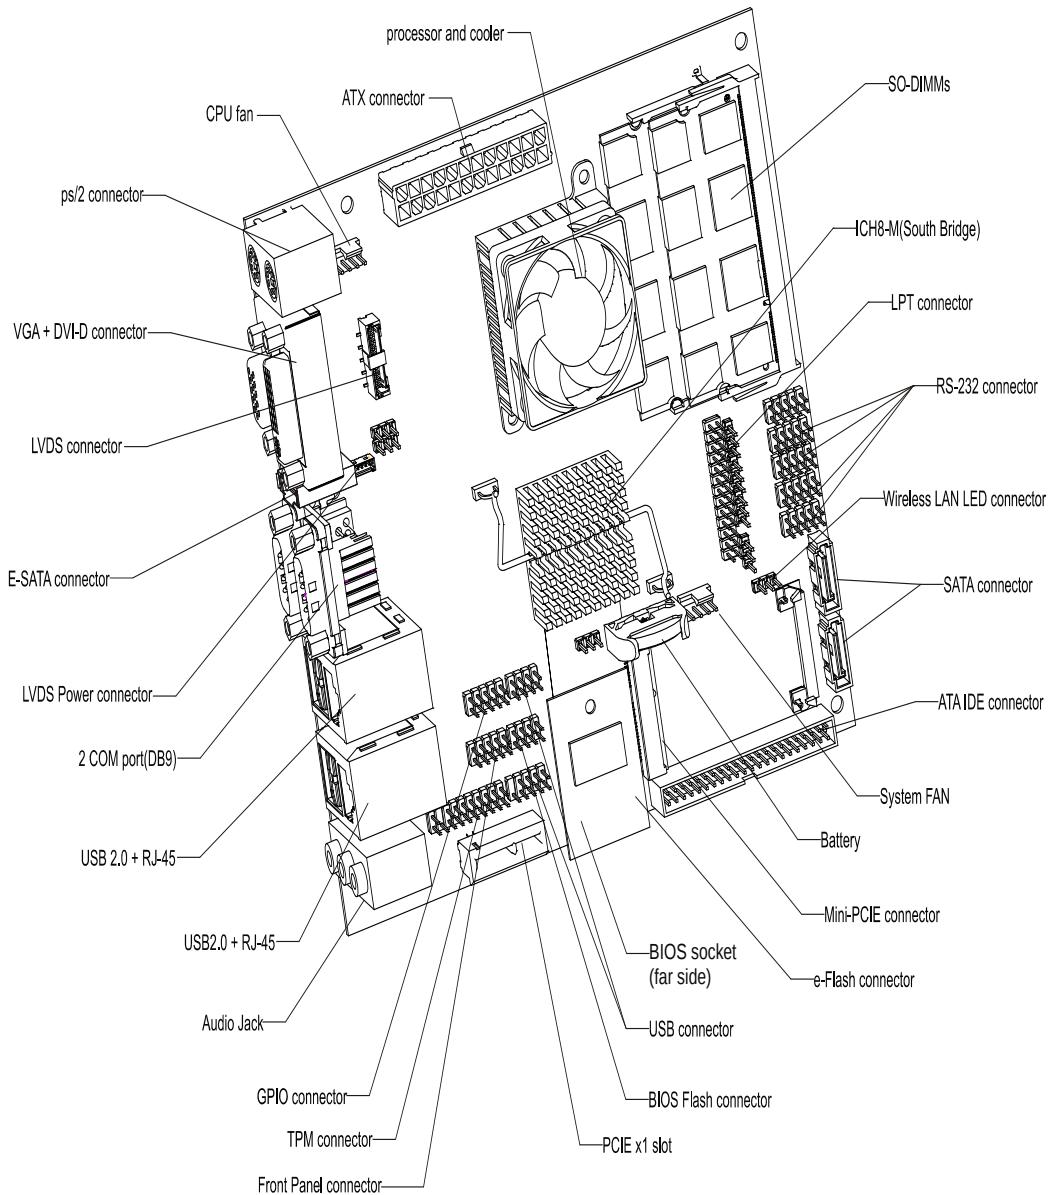

3.2 Connectors

The following subsections describe the connectors used on the board.

3.2.1 Clear CMOS (P3)

Table 3-1 Clear CMOS

Header	Mode
1-2 short	Clear CMOS

3.2.2 LVDS Header (J5)

Table 3-2 LVDS Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	VCC_LVDS	2	VCC_LVDS
3	GND	4	GND
5	LVDS_A_A0_P	6	LVDS_A_CLK_P
7	LVDS_A_A0_N	8	LVDS_A_CLK_N
9	GND	10	GND
11	LVDS_A_A1_P	12	LDDC_CLK
13	LVDS_A_A1_N	14	LDDC_DATA
15	GND	16	GND
17	LVDS_A_A2_P	18	NC
19	LVDS_A_A2_N	20	NC

3.2.3 LVDS Backlight Header (P23)

Table 3-3 LVDS Backlight Header Pin Definition

PIN	PIN Name
1	VCC12V
2	LVDS_BKLT_EN
3	GND
4	LCD_BKL_ADJ
5	VCC5V

3.2.4 LVDS Power

Header P5 selects the power of LCD Panel.

Table 3-4 LVDS Power

HEADER	MODE
1-2 short	3.3V (default)
2-3 short	5V

3.2.5 MINI IDE Header (J8)

Table 3-5 MINI IDE Header PIN Definition

PIN	PIN Name	PIN	PIN Name
1	IDE_RST_R_N	2	GND
3	IDE_D7	4	IDE_D8
5	IDE_D6	6	IDE_D9
7	IDE_D5	8	IDE_D10

Table 3-5 MINI IDE Header PIN Definition (continued)

PIN	PIN Name	PIN	PIN Name
9	IDE_D4	10	IDE_D11
11	IDE_D3	12	IDE_D12
13	IDE_D2	14	IDE_D13
15	IDE_D1	16	IDE_D14
17	IDE_D0	18	IDE_D15
19	GND	20	NC
21	IDE_REQ	22	GND
23	IDE_IOW_N	24	GND
25	IDE_IOR_N	26	GND
27	IDE_IORDY	28	IDE_SEL
29	IDE_ACK_N	30	GND
31	IDE_IRQ	32	NC
33	IDE_A1	34	IDE_DET
35	IDE_A0	36	IDE_A2
37	IDE_CS1_N	38	IDE_CS3_N
39	IDE_ACT_N	40	GND
41	VCC5V	42	VCC5V
43	GND	44	GND

3.2.6 USB Flash Header (P10)

Table 3-6 USB Flash Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	VCC5V	2	VCC5V
3	USB0_N	4	USB1_N
5	USB0_P	6	USB1_P

Table 3-6 USB Flash Header Pin Definition (continued)

PIN	PIN Name	PIN	PIN Name
7	GND	8	GND
9	KEY	10	NC

3.2.7 USB Header (P12)

Table 3-7 USB Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	VCC5V	2	VCC5V
3	USB0_N	4	USB1_N
5	USB0_P	6	USB1_P
7	GND	8	GND
9	KEY	10	GND

3.2.8 ELO Touch Screen Header (P6)

Table 3-8 ELO Touch Screen Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	VCC5V	2	VCC5V
3	USB_N	4	GND
5	USB_P	6	NC
7	GND	8	KEY

3.2.9 GPIO Header (P4)

Table 3-9 GPIO Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	GPO0	2	GPI0
3	GPO1	4	GPI1
5	GPO2	6	GPI2
7	GPO3	8	GPI3
9	VCC5DUAL	10	GND

3.2.10 COM Header (P9, P27)

Table 3-10 COM3, COM6 Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RING	10	KEY

3.2.11 RS-232/422/485 (P18)

Table 3-11 RS-232/422/485 Header Pin Definition

PIN	PIN Name
1	RS422TX_N

Table 3-11 RS-232/422/485 Header Pin Definition (continued)

PIN	PIN Name
2	RS422TX_P
3	RS422RX_485DAT_P
4	RS422RX_485DAT_N
5	GND

Table 3-12 RS-232/422/485 Jumper Selection (P28)

PIN	PIN Name
1-2 short	RS-232
2-3 short	RS422/RS-485

3.2.12 Power COM (P8, P26)

Table 3-13 COM4, COM5 Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	Pin9 Select	10	KEY

Table 3-14 COM4, COM5 Pin9 Selection

PIN	PIN Name
P19 1-2 short	COM4 Pin9 is Ring
P19 2-3 short P20 1-2 short	COM4 Pin9 is 5V

Table 3-14 COM4, COM5 Pin9 Selection (continued)

PIN	PIN Name
P19 2-3 short P20 2-3 short	COM4 Pin9 is 12V
P21 1-2 short	COM5 Pin9 is Ring
P21 2-3 short P22 1-2 short	COM5 Pin9 is 5V
P21 2-3 short P22 2-3 short	COM5 Pin9 is 12V

3.2.13 TPM Header (P2)

Table 3-15 TPM Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	PCI_CLK	2	GND
3	LPC_FRAME	4	KEY
5	TPM_RST#	6	VCC5V
7	LPC_AD3	8	LPC_AD2
9	VCC3V3	10	LPC_AD1
11	LPC_AD0	12	GND
13	SMB_CLK	14	SMB_DAT
15	VCC3V3DUAL	16	LPC_SERIRQ#
17	GND	18	CLKRUN#
19	TPM_LPC_PD#	20	TPM_LDRQ#

3.2.14 LPT Header (P11)

Table 3-16 LPT Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	STB#	2	PD0
3	PD1	4	PD2
5	PD3	6	PD4
7	PD5	8	PD6
9	PD7	10	ACK#
11	BUSY#	12	PE#
13	SLCT#	14	AFD#
15	ERR#	16	INIT#
17	SLIN#	18	GND
19	GND	20	GND
21	GND	22	GND
23	GND	24	GND
25	GND	26	KEY

3.2.15 Front Panel Header (P15)

Table 3-17 Front Panel Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	HDD_LED_PWR	2	PWR_LED
3	HDD_LED_N	4	GND
5	GND	6	POWER BUTTON#
7	SYSTEM RST#	8	GND

Table 3-17 Front Panel Header Pin Definition (continued)

PIN	PIN Name	PIN	PIN Name
9	STANDBY LED PWR	10	STANDBY LED

3.2.16 BIOS Program Header (P16)

Table 3-18 BIOS Program Header Pin Definition

PIN	PIN Name	PIN	PIN Name
1	VCC3V3DUAL	2	GND
3	SPI_CS0#	4	SPI_CLK
5	SPI_MISO	6	SPI_MOSI
7	NC	8	NC

3.2.17 Fan Header (P1, P13)

Table 3-19 Smart Fan Header Pin Definition

PIN	PIN Name
1	GND
2	VCC12V
3	TACH
4	PWM

3.2.18 MINI PCIE LED (P14)

Table 3-20 MINI PCIE Wireless LAN LED Header Pin Definition

PIN	PIN Name
1	VCC3V3
2	WWAN_LED#
3	WLAN_LED#
4	GND

3.2.19 Case Open Header (P25)

Table 3-21 Case Open Header Pin Definition


PIN	PIN Name
1	Case_open#
2	GND

Functional Description

4.1 Block Diagram

Figure 4-1 provides an overview of the main functional blocks of the motherboard and how they are interconnected.

Figure 4-1 Motherboard Block Diagram

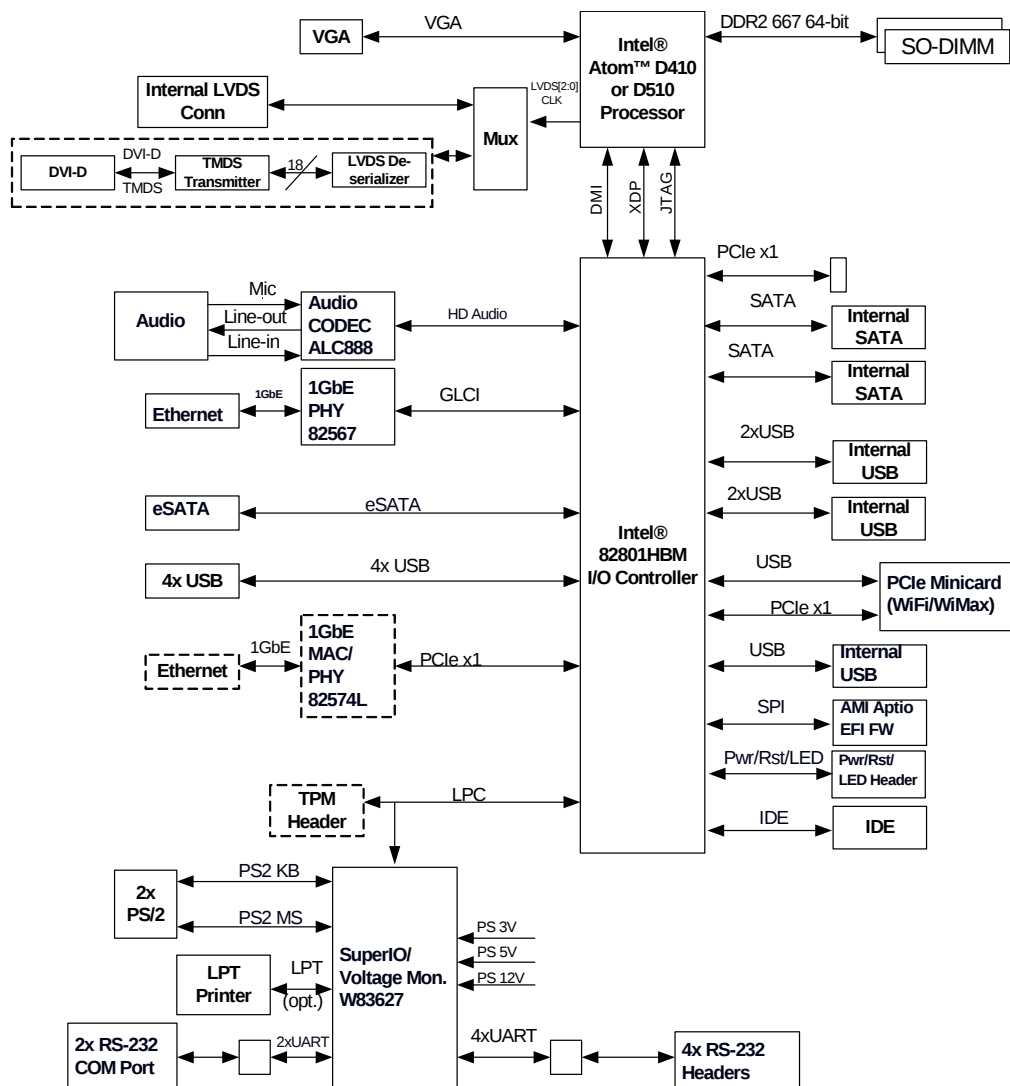

4.2 Pineview-D Processor

The MITX-430/MITX-440-DVI-2E is designed to support the Pineview-D processor. The processor features are as follows:

- Single chip integrated processor, memory controller, graphic controller with small size of 22mm x 22mm.
- Manufactured on 45nm process.
- 2 x 512KB L2 cache for D510 dual-core processor, 1 x 512KB L2 cache for D410 single-core processor, 32KB instruction cache, and 24KB data cache.
- Single channel DDR2 667MT/s, memory support up to 4GB, 64bit.
- Improved graphic engine with render core frequency at 400MHz.
 - Supports DirectX 9.0c and OpenGL 1.5.
 - Supports VGA port and 18bit LVDS.
- DMI link to ICH8-M.
- Supports C0 and C1 power states.
- Supports Intel thermal monitor with Adaptive Thermal Monitor 2 Enhancement.
- Enhanced Intel SpeedStep technology.
- Less TDP of 15W.

4.3 SMBus Interface and Devices


There is an SMBus on ICH8-M, which is I2C compatible. The following devices connect to SMBus:

- WG82574L LAN controller
- PCIEx1 slot
- Mini PCIE slot
- TPM header
- W83627UHG SIO
- PCA9557PW GPIO

- EMC2103-2-AP CPU thermal sensor
- 9LPR501SGLFT CLK GEN
- Memory slot
- XDP header

Figure 4-2 shows the SMBus device connection diagram.

Figure 4-2 Board I2C Device Connection

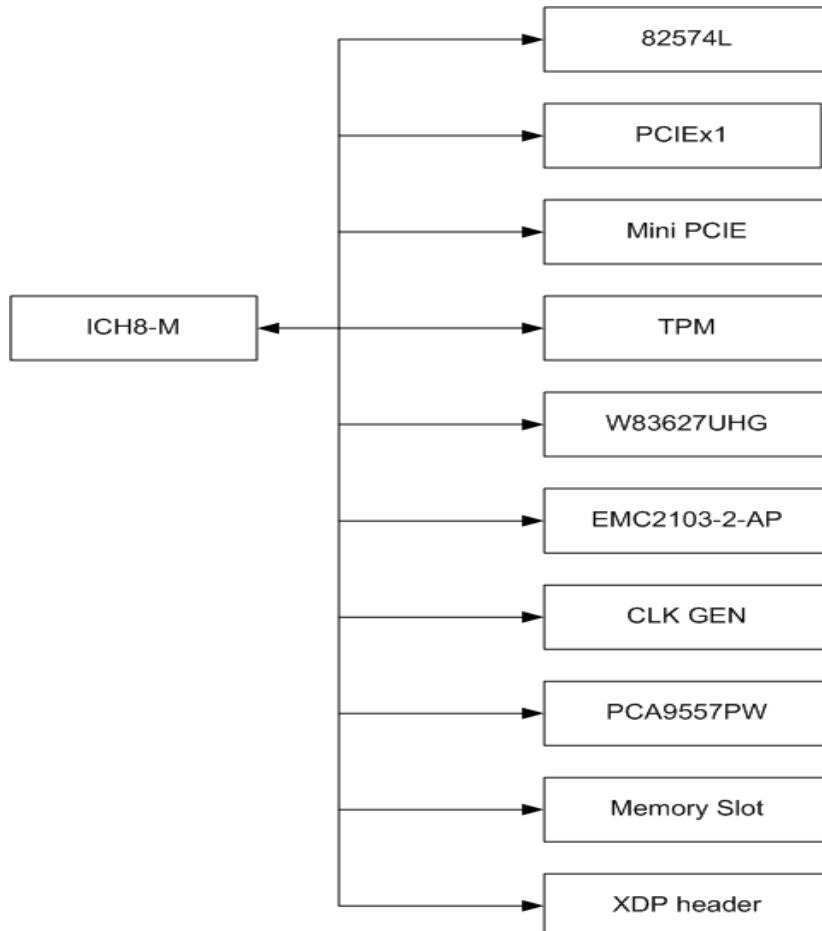

I2C device address is given in the table below:

Table 4-1 I2C Device Address

Device	CK505*	SPD0	SPD1	EMC2103*	PCA9557	82574L	W83627UHG
Address	D2	A0	A2	5C	30	C2	5A

4.4 System Memory

The Pineview-D integrates a single channel 64bit non ECC DDR2 controller.

There are two 200pin SO-DIMM slots on MITX-430/MITX-440-DVI-2E, and supports up to 4GB (assuming 2Gb density device technology) DDR2 memory at data transfer rate of 667MT/s.

4.5 Ethernet Interfaces

The MITX-430/MITX-440-DVI-2E provides two 10/100/1000 Ethernet, WG82567V and WG82574L.

The WG82567V MAC is integrated in ICH8-M and uses WG82567V as GBE PHY. The connection interface is GLCI between ICH8-M and WG82567V, and it occupies the PCIE port 6.

The WG82574L is a MAC and PHY GBE solution. The connection interface for WG82574L is PCIE port 3.

4.6 PCI-E Port

There are total six PCI-E ports in ICH8-M, and [Table 4-2](#) shows the PCI-E ports configuration.

Table 4-2 PCI-E Port

Port	Configuration
1	Connects to PCIEx1 slot
2	Connects to Mini PCIE slot
3	Connects to WG82574L


Table 4-2 PCI-E Port (continued)

Port	Configuration
4	Unused
5	Unused
6	Used as GLCI

The PCIE supports 2.5G transmission rate.

Figure 4-3 shows the PCI-E connection diagram.

Figure 4-3 PCI-E Connection

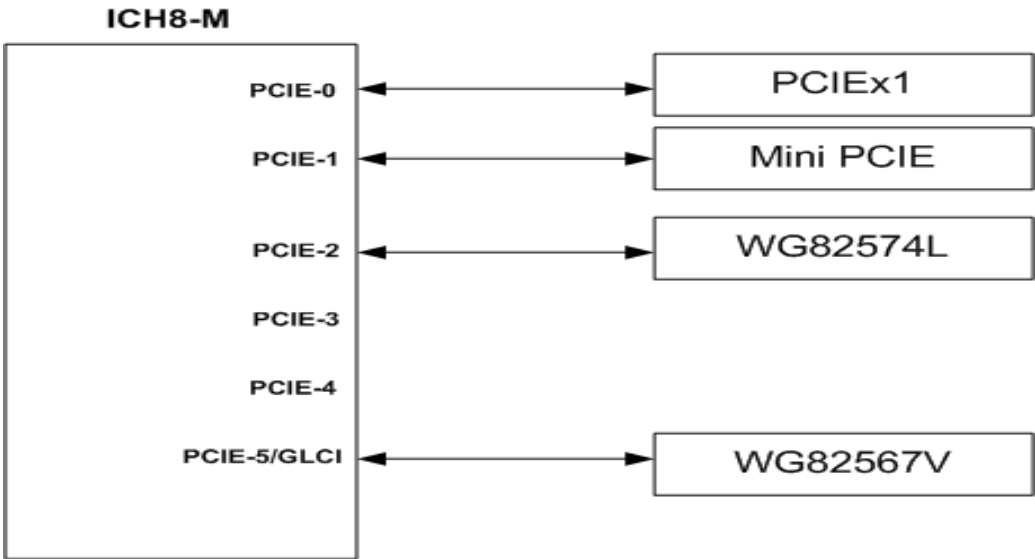


4.7 USB Interface

The ICH8-M supports 10 USB2.0 interface using UHCI or EHCI. Four USB ports are routed to USB+RJ45 connectors. Two USB ports are routed to USB headers, two for USB flash disk, and one for ELO Touch Screen Module. One is routed to Mini PCIE slot.

Figure 4-4 shows the routing diagram.

Figure 4-4 USB Ports Connection

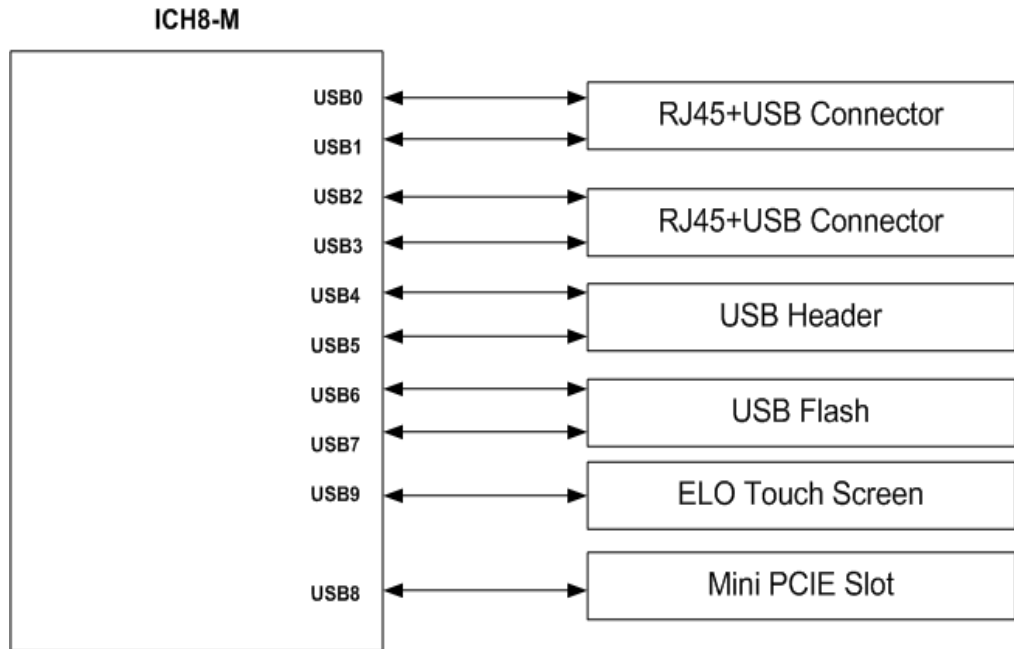

4.8 VGA, LVDS, LPC, and Audio Interface

A separate VGA and LVDS display interface is connected to connector from CPU.

The VGA supports resolution of 2048x1536 at 60Hz. The LVDS is a single channel with 18bit color definition, and supports resolution up to 1366 x 768.

The LPC is routed to super IO and TPM connector.

ICH8-M supports a high definition audio interface and ALC888GR is used as the audio codec.

4.9 DVI Interface

The DVI is switched and derived from LVDS, so DVI and LVDS cannot be used at the same time.

For display combination, use VGA + LVDS or VGA + DVI. Select the combination in the BIOS.

4.10 BIOS Device

A 4MB SPI Flash is used as BIOS device.

4.11 IDE

The MITX-430/MITX-440-DVI-2E supports a 44pin Mini-IDE header on board.

The IDE interface supports up to two IDE devices providing an interface for IDE hard disks and ATAPI devices. Each IDE device has independent timings. The IDE interface supports PIO IDE transfers up to 16 MB/sec and Ultra ATA transfers up to 100 MB/sec. It does not consume any legacy DMA resources. The IDE interface integrates 16 * 32-bit buffers for optimal transfers.

The ICH8s IDE system contains a single, independent IDE signal channel that can be electrically isolated. There are integrated series resistors on the data and control lines.

4.12 GPIO Configuration

There are two GPIOs:

- User defined GPIO which is generated from PCA9557PW
- ICH8-M GPIO

4.12.1 User Defined GPIO

4 GPI, 4 GPO 5V referenced. The 4 GPOs are internally pulled up to 5V with 10K resistor. The 4 GPIs are internally pulled down to GND with 10K resistor. The GPIO is controlled through SMBus and the state of GPO is not lost even in S3 and S5 sleep state.

4.12.2 ICH8-M GPIO

Table 4-3 describes the ICH8-M GPIO definition.

Table 4-3 ICH8-M GPIO Definition

Name	Type	Tolerance	Power Well	Default	Signal Description	Implementation
GPIO0	I/O	3.3V	Core	GPI	Multiplexed with BM_BUSY#	Unused, PU VCC3V3
GPIO1	I/O	3.3V	Core	GPI	Multiplexed with TACH1	Used as IDE 80 pin cable detect
GPIO2	I/OD	5V	Core	GPI	Multiplexed with PIRQ[H:E]#	Unused, PU VCC3V3
GPIO3	I/OD	5V	Core	GPI	Multiplexed with PIRQ[H:E]#	Unused, PU VCC3V3
GPIO4	I/OD	5V	Core	GPI	Multiplexed with PIRQ[H:E]#	Unused, PU VCC3V3
GPIO5	I/OD	5V	Core	GPI	Multiplexed with PIRQ[H:E]#	Unused, PU VCC3V3
GPIO6	I/O	3.3V	Core	GPI	Unmultiplexed	Used for board ID, PU VCC3V3
GPIO7	I/O	3.3V	Core	GPI	Unmultiplexed	Used for board ID, PU VCC3V3
GPIO8	I/O	3.3V	Resume	GPI	Unmultiplexed	Used as BIOS write protect (WP) signal, PU VCC3V3DUAL
GPIO9	I/O	3.3V	Resume	GPI	Multiplexed with WOL_EN	Unused, PU VCC3V3DUAL
GPIO10	I/O	3.3V	Resume	GPI	Multiplexed with SusPwrAck/ALERT#	Unused, PU VCC3V3DUAL
GPIO11	I/O	3.3V	Resume	Native	Multiplexed with SMBALERT#	Used for SMBus alert signal, PU VCC3V3DUAL

Table 4-3 ICH8-M GPIO Definition (continued)

Name	Type	Tolerance	Power Well	Default	Signal Description	Implementation
GPIO12	I/O	3.3V	Resume	Native	Natively used as GLAN_DOCK#	Used as LAN_DISABLE# signal, output low active
GPIO13	I/O	3.3V	Resume	Native	Natively used as ENERGY_DETECT	Unused, PU VCC3V3DUAL
GPIO14	I/O	3.3V	Resume	GPI	Multiplexed with AC_PRESENT	Unused, PU VCC3V3DUAL
GPIO15 Desktop only	I/O	3.3V	Resume	Native	GPIO is not implemented and is used instead as STP_PCI#.	Used as STP_PCI#
GPIO16	I/O	3.3V	Core	Native	Natively used as DPRSLPVR.	Used as DPRSLPVR
GPIO17	I/O	3.3V	Core	GPI	Multiplexed with TACH0	Used as DVI detect
GPIO18	I/O	3.3V	Core	GPO	Unmultiplexed	Used as LVDS backlight type selection 1 = DC mode; 0 = PWM mode
GPIO19	I/O	3.3V	Core	GPI	Multiplexed with SATA1GP	Unused, PD GND
GPIO20	I/O	3.3V	Core	GPO	Unmultiplexed	Unused, connect to a TP/used as a strap pin
GPIO21	I/O	3.3V	Core	GPI	Multiplexed with SATA0GP.	Unused, PD GND
GPIO22	I/O	3.3V	Core	GPI	Multiplexed with SCLOCK	Unused, PU VCC3V3
GPIO23	I/O	3.3V	Core	Native	Multiplexed with LDRQ1#	By default unused, optionally used as LPC_DRQ1#, connecting to TPM connector

Table 4-3 ICH8-M GPIO Definition (continued)

Name	Type	Tolerance	Power Well	Default	Signal Description	Implementation
GPIO24	I/O	3.3V	Resume	GPO	Multiplexed with MEM_LED	Unused, connect to a TP
GPIO25 Desktop only	I/O	3.3V	Resume	Native	This GPIO is not implemented and is used instead as STP_CPU#	Used as STP_CPU#
GPIO26	I/O	3.3V	Resume	Native	Multiplexed with S4_STATE#	Unused, PD GND
GPIO27	I/O	3.3V	Resume	GPO	ICH8 Base: Unmultiplexed	Used as Mini-PCIE Disable signal, Low active
GPIO28	I/O	3.3V	Resume	GPO	ICH8 Base: Unmultiplexed	Used as LAN2 disable signal, Low active
GPIO29	I/O	3.3V	Resume	Native	Multiplexed with OC5#	Used as USB OC func, associated with USB4 USB5
GPIO30	I/O	3.3V	Resume	Native	Multiplexed with OC6#	Used as USB OC func, associated with USB6 USB7
GPIO31	I/O	3.3V	Resume	Native	Multiplexed with OC7#	Used as USB OC func, associated with USB6 USB7
GPIO32 Desktop only	I/O	3.3V	Core	GPO	This GPIO is not implemented and is used instead as CLKRUN#	Used as CLKRUN#
GPIO33	I/O	3.3V	Core	GPO	Multiplexed with HDA_DOCK_EN#	Unused, low active
GPIO34	I/O	3.3V	Core	GPO	Multiplexed with HDA_DOCK_RST#	Used as LVDS/DVI display selection 1 = DVI; 0 = LVDS
GPIO35	I/O	3.3V	Core	GPO	Multiplexed with SATACLKREQ#	Used as SATA clock request

Table 4-3 ICH8-M GPIO Definition (continued)

Name	Type	Tolerance	Power Well	Default	Signal Description	Implementation
GPIO36	I/O	3.3V	Core	GPI	Multiplexed with SATA2GP	Unused, PD GND
GPIO37	I/O	3.3V	Core	GPI	Mobile:Unmultiple xed.	Unused, PD GND
GPIO38	I/O	3.3V	Core	GPI	Multiplexed with SLOAD	Unused, PU VCC3V3
GPIO39	I/O	3.3V	Core	GPI	Multiplexed with SDATAOUT0	Unused, PU VCC3V3
GPIO40	I/O	3.3V	Resume	Native	Multiplexed with OC[4:1]#	Used as USB OC func, associated with USB0 USB1
GPIO41	I/O	3.3V	Resume	Native	Multiplexed with OC[4:1]#	Used as USB OC func, associated with USB2 USB3
GPIO42	I/O	3.3V	Resume	Native	Multiplexed with OC[4:1]#	Used as USB OC func, associated with USB2 USB3
GPIO43	I/O	3.3V	Resume	Native	Multiplexed with OC[4:1]#	Used as USB OC func, associated with USB4 USB5
GPIO44	N/A	N/A	N/A	N/A	Not implemented	NC
GPIO45	N/A	N/A	N/A	N/A	Not implemented	NC
GPIO46	N/A	N/A	N/A	N/A	Not implemented	NC
GPIO47	N/A	N/A	N/A	N/A	Not implemented	NC
GPIO48	I/O	3.3V	Core	GPI	Multiplexed with SDATAOUT1	Unused, PU VCC3V3
GPIO49	I/O	V_CPU_IO	V_CPU_IO	Native	Multiplexed with CPUPWRGD	Used as CPUPWRGD
GPIO50	I/O	5.5V	Core	Native	Multiplexed with REQ1#	Unused, PU VCC3V3
GPIO51	I/O	3.3V	Core	Native	Multiplexed with GNT1#	Unused, connect to TP

Table 4-3 ICH8-M GPIO Definition (continued)

Name	Type	Tolerance	Power Well	Default	Signal Description	Implementation
GPIO52	I/O	5.5V	Core	Native	Multiplexed with REQ2#	Unused, PU VCC3V3
GPIO53	I/O	3.3V	Core	Native	Multiplexed with GNT2#	Used as a strap pin
GPIO54	I/O	5.5V	Core	Native	Multiplexed with REQ3#	Unused, PU VCC3V3
GPIO55	I/O	3.3V	Core	Native	Multiplexed with GNT3#	Used as a strap pin

4.13 Chipset

The MITX-430/MITX-440-DVI-2E is designed to use the Intel ICH8M I/O Hub. The ICH8 provides extensive I/O support. Functions and capabilities are as follows:

- PCI Express Base Specification, supports Revision 1.1.
- PCI Local Bus Specification, supports Revision 2.3 for 33 MHz PCI operations.
- Supports ACPI Power Management Logic.
- Enhanced DMA controller, interrupt controller, and timer functions.
- Integrated serial ATA host controllers with independent DMA operation on up to three ports.
- Integrated IDE controller supports Ultra ATA100/66/33.
- USB host interface with support for up to ten USB ports, five UHCI host controllers, two EHCI high-speed USB 2.0 host controllers.
- Integrated 10/100/1000 GbE MAC.
- System Management Bus (SMBus) Specification, Version 2.0 with additional support for most I2C devices.
- Supports Intel high definition audio.
- Low Pin Count (LPC) interface.
- Supports Serial Peripheral Interface (SPI).

4.14 Clock Generator

The MITX-430/MITX-440-DVI-2E contains a CK505 clock generator (ICS9LPR501) to provide the clocks for various components.

4.15 Video

The graphic core is integrated in Pineview-D processor.

The GPU contains a refresh of 3rd generation graphics core, and improved GFX engine. The GPU is a unified graphics driver which does end to end decode.

- Supports Directx* 9 compliant Pixel Shader* 2.0.
- Two display ports: LVDS and RGB.
 - Single LVDS channel supporting resolution up to 1366 * 768, 18bpp.
 - Analog RGB display output resolution up to 2048 * 1536 at 60 Hz.
- Intel® Dynamic Video Memory Technology support 4.0.
- Intel® Clear Video Technology.
 - MPEG2 Hardware Acceleration
 - ProcAmp

The MITX-430/MITX-440-DVI-2E supports dual-independent displays using the Intel Pineview-D processor's Integrated Graphics Controller. The display is LVDS or VGA. During boot, the BIOS detects whether a VGA monitor is attached or not. If VGA is attached, then the primary display is VGA. If VGA is not detected, then BIOS defaults to LVDS.

4.16 Storage

- **SATA**
MITX-430/MITX-440-DVI-2E supports two SATA ports and one E-SATA port integrated onboard which supports SATA Gen 2(3.0Gb/s).
Two SATA ports are routed to internal connector and one is routed to the E-SATA port.
- **USB Solid State Drive**
MITX-430/MITX-440-DVI-2E supports one standard USB flash disk (2x5Pin, 2.54mmPitch).

4.17 Super I/O

MITX-430/MITX-440-DVI-2E uses Winbond W83627UHG-LF as Super I/O.

- Serial Port
MITX-430/MITX-440-DVI-2E supports six serial ports:
 - Two to DSUB-9 in rear I/O region
 - One RS-232/422/485 port
 - Two power COM
 - One to 2x5Pin header
- Parallel Port
MITX-430/MITX-440-DVI-2E supports the parallel port integrated on board.
- PS/2
MITX-430/MITX-440-DVI-2E supports the PS/2 keyboard or mouse integrated on board.

4.18 HW Monitor

- Voltage monitor
MITX-430/MITX-440-DVI-2E uses W83627UHG hardware monitor as voltage monitor. It implements voltage monitoring capability on 1.05V, 3.3V, 5V, 12V, and CPU core. Voltages can be read in BIOS setup menu.
- Temperature
MITX-430/MITX-440-DVI-2E uses EMC2103 to monitor the CPU temperature, and uses W83627 hardware monitor to monitor the system temperature.
- Fan monitor and control
MITX-430/MITX-440-DVI-2E supports CPU fan and system fan speed control.

4.19 SPI Flash

MITX-430/MITX-440-DVI-2E uses onboard 4MB SPI flash part to store the firmware including the BIOS and GBE.

The SPI flash part type is AT25DF321A-SH-T from Atmel. The AT25DF321A-SH-T supports SPI, and a high performance dual output SPI using four pins: serial clock, chipset select, serial data I/O, and serial data out. SPI clock frequencies of up to 33MHz are supported.

4.20 Watchdog Timer

MITX-430/MITX-440-DVI-2E implements the watchdog timer feature. The SIO chipset is used to implement the watchdog function that supports 1-255s or 1-255m watchdog.

4.21 Debug

MITX-430/MITX-440-DVI-2E implements three ways for debugging:

- VGA for text and graphic information output.
- RS232 for AMI debugger. It can set, modify, or check the breakpoint, register value, and so on.
- Extended Debug Port (XDP) tool for processor run control and debug.

4.22 Power Management

MITX-430/MITX-440-DVI-2E supports ACPI S0, S3, S4, S5.

4.23 Manageability

MITX-430/MITX-440-DVI-2E does not support AMT feature.

4.24 RTC

MITX-430/MITX-440-DVI-2E supports a battery backed Real Time Clock (RTC). The ICH8 contains a Motorola MC146818A-compatible RTC with 256 bytes of battery backed RAM. The RTC performs two key functions: keeping track of the time of day and storing system data, even when the system is powered down. The RTC operates on a 32.768 KHz crystal and a 3V battery.

The RTC also supports two lockable memory ranges. By setting bits in the configuration space, two 8-byte ranges can be locked to read and write accesses. This prevents unauthorized reading of passwords or other system security information.

The RTC also supports a data alarm that allows for scheduling a wakeup event up to 30 days in advance, rather than just 24 hours in advance.

Operation

5.1 POST

After power up or reset, the BIOS performs a self-test, POST, that attempts to determine if further operation is possible and that the detected configuration is expected. This process either completes normally or results in a warning or an error. The boot process does not stop after a warning but displays a message on the primary display device.

To view all checkpoints generated by Aptio firmware, you require a checkpoint card, also referred to as a POST Card or POST Diagnostic Card. These are LPC add-in cards that show the value of I/O port 80h on a LED display.

5.2 Boot Process

While performing the functions of the traditional BIOS, Aptio 4.x core follows the firmware model described by the Intel Platform Innovation Framework for EFI. The framework refers to the following boot phases, which applies to various status code descriptions:

- Security (SEC) - initial low-level initialization
- Pre-EFI Initialization (PEI) - memory initialization¹
- Driver Execution Environment (DXE) - main hardware initialization²
- Boot Device Selection (BDS) - system setup, pre-OS user interface and selecting a bootable device (CD/DVD, HDD, USB, Network, Shell, and so on)

5.3 Initiating Setup

During the boot, press the F2 key on the keyboard to launch the setup utility once the self-test is complete and before searching for a boot device. If you exit setup without saving any changes, the boot process continues with the search for a boot device. If changes are made, the motherboard loads the new settings and resets, restarting the entire boot process.

5.4 Setup Utility

The BIOS incorporates a setup utility that allows you to alter a variety of system options. This section describes the operation of the utility by describing the various options available through a set of hierarchical menus. Not all options are available with all products and some depend on BIOS customizations.

The current settings are stored in the SPI FLASH NVRAM area and any changes can be copied back to this area via the Exit menu.

To start the utility, press the F2 key during the early stages of POST after powerup. This functionality operates with PS/2 keyboards, USB keyboards when enabled, and via the console redirection facility when enabled.

Table 5-1 briefly describes the primary menus.

Table 5-1 Setup Utility

Menu	Options
Main	BIOS information and date and time.
Advanced	Advanced features including ACPI, CPU, IDE, USB, HW monitoring and serial port settings.
Chipset	Features including Host Bridge and South Bridge.
Boot	Boot mode and boot options.
Security	Administrator's password.
Save & Exit	Save with or without changes, load or save default settings, and Boot Device Selection.

5.4.1 Main Menu

Table 5-2 Main Menu

Field	Description
BIOS Vendor	BIOS vendor name.
Core Version	Aptio core version.

Table 5-2 Main Menu (continued)

Field	Description
Project Version	Project name and its version.
Build Date	BIOS build date.
System Language	System setup language. Only English is available.
System Date	Set the time and date in month/day/year format. To change these values, go to each field and enter the desired value. Press the tab key to move from hour to minute to second, or from month to day to year. There is no default value.
System Time	

5.4.2 Advanced Menu

Table 5-3 Legacy OPROM Support

Field	Description
Launch PXE OpROM	Enable or disable boot option for Legacy Network Devices. Default option is Disabled.

Table 5-4 Advanced Menu

Field	Description
ACPI Settings	System ACPI Parameters, see Table 5-5 on page 76 .
Trusted Computing	Trusted Computing settings, see Table 5-6 on page 76 .
S5 RTC Wake Settings	Enable the system to wake from S5 using RTC alarm, see Table 5-7 on page 77 .
CPU Configuration	CPU Configuration Parameters, see Table 5-8 on page 77 .
IDE Configuration	Enter SATA device options settings, see Table 5-9 on page 78 .
IGD- LCD Control	Internal Graphics Device (IGD)-LCD control function, see Table 5-10 on page 79 .
USB Configuration	USB configuration parameters, see Table 5-11 on page 80 .

Table 5-4 Advanced Menu (continued)

Field	Description
EMC2103 H/W Monitor	Monitor hardware status, see Table 5-12 on page 81 .
Super IO Configuration	System super IO chip parameters, see Table 5-13 on page 81 .
W83627UHG H/W Monitor	Monitor hardware status, see Table 5-22 on page 86 .
Serial Port Console Redirection	Serial Port Console Redirection, see Table 5-23 on page 86 .

Table 5-5 ACPI Settings

Field	Description
Enable ACPI Auto Configuration	Enable or disable BIOS ACPI Auto Configuration. Default option is Disabled.
ACPI Sleep State	Select the highest ACPI sleep state the system enters when the SUSPEND button is pressed. The states are: ● Suspend Disabled ● S3 (Suspend to RAM) Default state is S3 (Suspend to RAM).

Table 5-6 Trusted Computing

Field	Description
TPM SUPPORT	Enable or disable TPM function. Default value is Disable. When the field is disabled in BIOS, OS does not show TPM function.
TPM State	Turn TPM On or Off. Default state is Disabled.
Pending TPM operation	Schedule TPM operation, default option is none.
Current TPM Status Information	

Table 5-6 Trusted Computing (continued)

Field	Description
No TPM Hardware	If no TPM is found.
TPM Enabled Status	Show TPM status, Enabled or Disabled
TPM Active Status	Show current state of the TPM, Activated or Deactivated.
TPM Owner Status	Show current TPM Ownership state, Owned or UnOwned.

Table 5-7 S5 RTC Wake Setting

Field	Description
Wake system with Fixed time	Enable or disable system wake on alarm event. When enabled, system wakes on the specified hr::min::sec. Default value is Disabled.
Wake up hour	Select 0-23, for example, enter 3 for 3AM and 15 for 3PM. Default value is 0.
Wake up minute	0-59. Default value is 0.
Wake up second	0-59. Default value is 0.
Wake system with Dynamic time	Enable or disable system wake on alarm event. When enabled, system wakes on the current time + Increase minute(s). Default value is Disabled.
Wake up minute increase	1-5. Default value is 1.

Table 5-8 CPU Configuration

Field	Description
Processor Type	
EMT64	EMT64
Processor Speed	Processor speed
System Bus Speed	System bus speed

Table 5-8 CPU Configuration (continued)

Field	Description
Ratio Status	Ratio Status
Actual Ratio	Actual ratio
Processor Stepping	Processor stepping
Microcode Revision	Microcode revision
L1 Cache RAM	L1 Cache RAM
L2 Cache RAM	L2 Cache RAM
Processor Core	Processor Core
Hyper-Threading	Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). Default value is Enabled.
Execute Disable Bit	XD prevents certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3). Default value is Enabled.
C-States	Enable or disable C1. Default value is Enabled.

Table 5-9 IDE Configuration

Field	Description
PATA Master	Port status
PATA Slave	Port status
SATA Port 0	Port status
SATA Port 1	Port status
SATA Port 2	Port status
ATA /IDE Configuration	Select ATA or IDE configuration. The configurations are: ● Disabled ● Compatible ● Enhanced Default value is Enhanced.

Table 5-9 IDE Configuration (continued)

Field	Description
Configure SATA as	Enhanced: you can select the IDE, AHCI mode. Compatible: you can select the legacy IDE Channels as SATA Only, SATA Pri, PATA Sec, PATA only.

Table 5-10 IGD-LCD Control

Field	Description
DVMT Mode Select	Select DVMT Mode or Fixed Mode. Default value is DVMT Mode.
DVMT/FIXED Memory	Select DVMT or FIXED mode memory size used by internal graphics device: The memory sizes are: ● 128MB ● 256MB ● Maximum Default value is 256MB.
IGD-Boot Type	Select the Video Device which is activated during POST. This has no effect if external graphic is present. The options are: ● VBIOS Default ● CRT ● LFP ● DVI ● CRT +LFP ● CRT +DVI Default value is CRT +LFP. Note that the optional value DVI and CRT+DVI are only for MITX-440-DVI-2E.
LCD Panel Type	Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item. The LCD panel types are: ● 800x600 LVDS ● 1024x768 LVDS Default value is 1024x768 LVDS.

Table 5-10 IGD-LCD Control (continued)

Field	Description
LCD Mode	Set LCD Mode as PWM Mode or DC Mode. Default value is PWM Mode.

Table 5-11 USB Configuration

Field	Description
USB Devices	List of the USB devices attached.
Legacy USB Support	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option keeps USB devices available only for EFI applications. Default value is Enabled.
EHCI Hand-off	This is a workaround for OSs without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver. Default value is Enabled.
Device Reset Timeout	USB mass storage device Start Unit command timeout. The options are: ● 10 sec ● 20 sec ● 30 sec ● 40 sec Default value is 20 sec.
Controller Timeout	The time out value for control, bulk, and interrupt transfer. The options are: ● 1sec ● 5 sec ● 10 sec ● 20 sec ● 30 sec Default value is 20 sec.

Table 5-12 EMC2103 H/W Monitor

Field	Description
CPU Temperature	CPU temperature.
CPU Fan Speed	CPU fan speed.
CPU Fan Duty Cycle	CPU fan duty cycle.
Automatic Fan Control	Enable or disable the CPU fan speed control. Default value is Enabled.

Table 5-13 Super IO Configuration

Field	Description
Super IO Chip	Winbond W83627UHG.
Serial Port 1 Configuration	Set Parameters of COM1, see Table 5-14 on page 82 .
Serial Port 2 Configuration	Set Parameters of COM2, see Table 5-15 on page 82 .
Serial Port 3 Configuration	Set Parameters of COM3, see Table 5-16 on page 83 .
Serial Port 4 Configuration	Set Parameters of COM4, see Table 5-17 on page 83 .
Serial Port 5 Configuration	Set Parameters of COM5, see Table 5-18 on page 84 .
Serial Port 6 Configuration	Set Parameters of COM6, see Table 5-19 on page 84 .
Parallel Port Configuration	Set Parameters of Parallel Port, see Table 5-20 on page 85 .
Watchdog Timer Configuration	Enable or disable WDT function, see Table 5-21 on page 85 .
Intrusion Detect	Select state for Intrusion Detect. The states are: ● Disable ● Enable ● Clear Default value is Disable.

Table 5-14 Serial Port 1 Configuration

Field	Description
Serial Port	Enable or disable serial port. Default value is Enabled.
Change Settings	Select an optimal settings for super IO device. The options are: ● Auto ● IO=3F8h; IRQ=4 ● IO=3F8h; IRQ=3,4,5,6,7,10,11,12 ● IO=2F8h; IRQ=3,4,5,6,7,10,11,12 ● IO=3E8h; IRQ=3,4,5,6,7,10,11,12 ● IO=2E8h; IRQ=3,4,5,6,7,10,11,12 Default value is Auto.

Table 5-15 Serial Port 2 Configuration

Field	Description
Serial Port	Enable or disable serial port. Default value is Enabled.
Change Settings	Select an optimal settings for super IO device. The options are: ● Auto ● IO=2F8h; IRQ=3 ● IO=3F8h; IRQ=3,4,5,6,7,10,11,12 ● IO=2F8h; IRQ=3,4,5,6,7,10,11,12 ● IO=3E8h; IRQ=3,4,5,6,7,10,11,12 ● IO=2E8h; IRQ=3,4,5,6,7,10,11,12 Default value is Auto.

Table 5-16 Serial Port 3 Configuration

Field	Description
Serial Port	Enable or disable serial port. Default value is Enabled.
Change Settings	Select an optimal settings for super IO device. ● Auto ● IO=3E8h; IRQ=7 ● IO=3F8h; IRQ=7,10,11,12 ● IO=2F8h; IRQ=7,10,11,12 ● IO=3E8h; IRQ=7,10,11,12 ● IO=2E8h; IRQ=7,10,11,12 ● IO=2E0h; IRQ=7,10,11,12 ● IO=2F0h; IRQ=7,10,11,12 Default value is Auto.

Table 5-17 Serial Port 4 Configuration

Field	Description
Serial Port	Enable or disable serial port. Default value is Enabled.
Change Settings	Select an optimal settings for super IO device. The options are: ● Auto ● IO=2E8h; IRQ=7 ● IO=3F8h; IRQ=7,10,11,12 ● IO=2F8h; IRQ=7,10,11,12 ● IO=3E8h; IRQ=7,10,11,12 ● IO=2E8h; IRQ=7,10,11,12 ● IO=2E0h; IRQ=7,10,11,12 ● IO=2F0h; IRQ=7,10,11,12 Default value is Auto.

Table 5-18 Serial Port 5 Configuration

Field	Description
Serial Port	Enable or disable serial port. Default value is Enabled.
Change Settings	Select an optimal settings for super IO device. The options are: ● Auto ● IO=2E0h; IRQ=10 ● IO=3F8h; IRQ=7,10,11,12 ● IO=2F8h; IRQ=7,10,11,12 ● IO=3E8h; IRQ=7,10,11,12 ● IO=2E8h; IRQ=7,10,11,12 ● IO=2E0h; IRQ=7,10,11,12 ● IO=2F0h; IRQ=7,10,11,12 Default value is Auto.

Table 5-19 Serial Port 6 Configuration

Field	Description
Serial Port	Enable or disable Serial Port. Default value is Enabled.
Change Settings	Select an optimal settings for Super IO Device. The options are: ● Auto ● IO=2F0h; IRQ=10 ● IO=3F8h; IRQ=7,10,11,12 ● IO=2F8h; IRQ=7,10,11,12 ● IO=3E8h; IRQ=7,10,11,12 ● IO=2E8h; IRQ=7,10,11,12 ● IO=2E0h; IRQ=7,10,11,12 ● IO=2F0h; IRQ=7,10,11,12 Default value is Auto.

Table 5-20 Parallel Port Configuration

Field	Description
Parallel Port	Enable or disable parallel port (LPT/LPTE). Default value is Enabled.
Change Settings	Select an optimal settings for super IO device. The options are: ● Auto ● IO=378h; IRQ=5 ● IO=378h; IRQ=5,6,7,10,11,12 ● IO=278h; IRQ=5,6,7,10,11,12 ● IO=3BCh; IRQ=5,6,7,10,11,12 ● IO=378h ● IO=278h ● IO=3BCh Default value is Auto.
Device Mode	Change the Printer Port mode. The modes are: ● STD Printer Mode ● SPP Mode ● EPP-1.9 and SPP Mode ● EPP-1.7 and SPP Mode ● ECP Mode ● ECP and EPP 1.9 Mode ● ECP and EPP 1.7 Mode

Table 5-21 Watchdog Timer Configuration

Field	Description
Watchdog Timer	Enable or disable WDT. Default value is Disabled.
WDT Mode	Select watchdog mode, default is Minutes.
Time-Out	Set time to wait before system reset without PS2 Keyboard or mouse operation. Default value is 5.

Table 5-22 W83627UHG H/W Monitor

Field	Description
System temperature	Shows system temperature.
System Fan Speed	Shows system fan speed.
CPU_VCORE	Monitors the CPU VCORE voltage.
1.05V	Monitors the VCC 1.05V.
3.3V	Monitors the VCC 3V.
5V	Monitors the VCC 5V.
12V	Monitors the VCC 12V.
Automatic Fan Control	Enable or disable the system fan speed control. Default value is Enabled.

Table 5-23 Serial Port Console Redirection

Field	Description
COM1:Console Redirection	Enable or disable console redirection. Default value is Enabled.
COM1 Console Redirection Settings	See Table 5-24 on page 87 .
COM2: Console Redirection	Enable or disable console redirection. Default value is Disabled.
COM2: Console Redirection Settings	See Table 5-24 on page 87 .
Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS): Console Redirection	Enable or disable console redirection. Default value is Disabled.

Table 5-23 Serial Port Console Redirection (continued)

Field	Description
Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS): Out-of-Band Mgmt Port	Microsoft Windows Emergency Management Services (EMS) allows for remote management of Windows Server OS through a serial port. The options are COM1 and COM2. Default value is COM1.
Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS): Data Bits	8
Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS): Parity	None
Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS): Stop Bits	1
Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS): Terminal Type	VT100

Table 5-24 COM1 and COM2 Console Redirection Settings

Field	Description
Terminal Type	Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, and so on. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes. Default value is VT100.

Table 5-24 COM1 and COM2 Console Redirection Settings (continued)

Field	Description
Bits per second	Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds. ● 9600 ● 19200 ● 57600 ● 115200 Default value is 115200.
Data Bits	Data bits of 7 and 8. Default is 8.
Parity	Parity bit is sent with the data bits to detect some transmission errors. Even: parity bit is 0, if the number of 1s in the data bits is even. Odd: parity bit is 0, if number of 1s in the data bits is odd. Mark: parity bit is always 1. Space: Parity bit is always 0. Mark and Space Parity do not allow for error detection. They can be used as an additional data bit. ● None ● Even ● Odd ● Mark ● Space Default value is None.
Stop Bits	Stop bits indicate the end of a serial data packet. (Start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit. The options are 1 and 2. Default value is 1.
Flow Control	Flow control prevents data loss from buffer overflow. While sending data, if the receiving buffers are full, a stop signal is sent to stop the data flow. Once the buffers are empty, a start signal is sent to restart the flow. Hardware flow control uses two wires to send start/stop signals. Options are None and Hardware RTS/CTS. Default value is None.
Terminal Resolution	Remote Terminal Resolution, 80x25 (default).

5.4.3 Chipset Menu

Table 5-25 Chipset Menu

Field	Description
Host Bridge	Host Bridge Parameters, see Table 5-26 on page 89 .
South Bridge	South Bridge Parameters, see Table 5-27 on page 89 .

Table 5-26 Host Bridge

Field	Description
Initiate Graphic Adapter	Select which graphics controller to use as the primary boot device. The options are IGD and PEG. Default value is IGD.
Memory Information	
Memory Frequency	Show memory frequency information.
Total Memory	Show total memory information.
DIMM#0	DIMM#0 information.
DIMM#1	DIMM#1 information.

Table 5-27 South Bridge

Field	Description
HD Audio Controller	Enable or disable HD Audio Controller. Default value is Enabled.
82567V LAN Controller	Enable or disable WG82567V LAN Controller. Default value is Enabled
PCI Express Port 0	Default value is Auto.

Table 5-27 South Bridge (continued)

Field	Description
PCI Express Port 1	Enable or disable PCI Express Root Port1. The options are: ● Auto ● Enabled ● Disabled Default value is Auto.
82574L LAN Controller	Enable or disable on board WG82574L chip. Default value is Enabled. Note that this is only for MITX-440-DVI-2E.
Restore AC Power Loss	Select AC power state when power is re-applied after a power failure. The options are: ● Power Off ● Power On ● Last State Default value is Last State.
Spread Spectrum	Enable or disable Spread Spectrum. The options are: Enabled and Disabled. Default value is Enabled.

5.4.4 Boot Menu

Table 5-28 Boot Menu

Field	Description
Quiet Boot	Enable or disable Quiet Boot option. Default value is Disabled.
Setup Prompt Timeout	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting. 0 means no waiting (not recommended). Default value is 3.
Bootup NumLock State	Select the keyboard NumLock state. Options are On and Off. Default value is On.

Table 5-28 Boot Menu (continued)

Field	Description
Option ROM Messages	Set display mode for Option ROM. The options are Force BIOS and Keep Current. Default value is Force BIOS.
Boot Option Priorities	Sets the system boot order.
Hard Drive Boot Order	Set the order of the legacy devices in this group.

5.4.5 Security Menu

Table 5-29 Security Menu

Field	Description
Administrator Password	Set Setup Administrator Password.
User Password	Set Setup User Password.

5.4.6 Save & Exit Menu

Table 5-30 Save & Exit Menu

Field	Description
Save Changes and Exit	Exit system setup after saving the changes.
Discard Changes and Exit	Exit system setup without saving any changes.
Save Changes and Reset	Reset the system after saving the changes.
Discard Changes and Reset	Reset system setup without saving any changes.
Save Changes	Save changes done so far to any of the setup options.
Discard Changes	Discard changes done so far to any of the setup options.
Restore Defaults	Restore or load default values for all the setup options.

Table 5-30 Save & Exit Menu (continued)

Field	Description
Save as User Defaults	Save the changes done so far as user defaults.
Restore User Defaults	Restore the user defaults to all the setup options.
Boot Override	Overrides the boot orders in Boot menu. So you can select the device which you want to boot.

5.5 POST Codes

5.5.1 Status Code Ranges

Table 5-31 Status Code Ranges

Status Code Range	Description
0x01 - 0x0F	SEC Status Codes & Errors.
0x10 - 0x2F	PEI execution up to and including memory detection.
0x30 - 0x4F	PEI execution after memory detection.
0x50 - 0x5F	PEI errors.
0x60 - 0xCF	DXE execution up to BDS.
0xD0 - 0xDF	DXE errors.
0xE0 - 0xE8	S3 Resume (PEI).
0xE9 - 0xEF	S3 Resume errors (PEI).
0xF0 - 0xF8	Recovery (PEI).
0xF9 - 0xFF	Recovery errors (PEI).

5.5.2 Standard Status Codes

5.5.2.1 SEC Status Codes

Table 5-32 SEC Status Codes

Status Code	Description
0x0	Unused.
Progress Codes	
0x1	Power on. Reset type detection (soft/hard).
0x2	AP initialization before microcode loading.
0x3	North Bridge initialization before microcode loading.
0x4	South Bridge initialization before microcode loading.
0x5	OEM initialization before microcode loading.
0x6	Microcode loading.
0x7	AP initialization after microcode loading.
0x8	North Bridge initialization after microcode loading.
0x9	South Bridge initialization after microcode loading.
0xA	OEM initialization after microcode loading.
0xB	Cache initialization.
SEC Error Codes	
0xC - 0xD	Reserved for future AMI SEC error codes.
0xE	Microcode not found.
0xF	Microcode not loaded.

5.5.2.2 PEI Status Codes

Table 5-33 PEI Status Codes

Status Code	Description
Progress Codes	
0x10	PEI Core is started.
0x11	Pre-memory CPU initialization is started.
0x12	CPU pre-memory initialization (CPU module specific).
0x13	CPU pre-memory initialization (CPU module specific).
0x14	CPU pre-memory initialization (CPU module specific).
0x15	Pre-memory North Bridge initialization is started.
0x16	Pre-memory North Bridge initialization (North Bridge module specific).
0x17	Pre-Memory North Bridge initialization (North Bridge module specific).
0x18	Pre-Memory North Bridge initialization (North Bridge module specific).
0x19	Pre-memory South Bridge initialization is started.
0x1A	Pre-memory South Bridge initialization (South Bridge module specific).
0x1B	Pre-memory South Bridge initialization (South Bridge module specific).
0x1C	Pre-memory South Bridge initialization (South Bridge module specific).
0x1D - 0x2A	OEM pre-memory initialization codes.
0x2B	Memory initialization. Serial Presence Detect (SPD) data reading.
0x2C	Memory initialization. Memory presence detection.
0x2D	Memory initialization. Programming memory timing information.
0x2E	Memory initialization. Configuring memory.
0x2F	Memory initialization (other).

Table 5-33 PEI Status Codes (continued)

Status Code	Description
0x30	Reserved for ASL, see Table 5-38 on page 102 .
0x31	Memory Installed.
0x32	CPU post-memory initialization is started.
0x33	CPU post-memory initialization. Cache initialization.
0x34	CPU post-memory initialization. Application Processor(s) (AP) initialization.
0x35	CPU post-memory initialization. Boot Strap Processor (BSP) selection.
0x36	CPU post-memory initialization. System Management Mode (SMM) initialization.
0x37	Post-Memory North Bridge initialization is started.
0x38	Post-Memory North Bridge initialization (North Bridge module specific).
0x39	Post-Memory North Bridge initialization (North Bridge module specific).
0x3A	Post-Memory North Bridge initialization (North Bridge module specific).
0x3B	Post-Memory South Bridge initialization is started.
0x3C	Post-Memory South Bridge initialization (South Bridge module specific).
0x3D	Post-Memory South Bridge initialization (South Bridge module specific).
0x3E	Post-Memory South Bridge initialization (South Bridge module specific).
0x3F	OEM post memory initialization codes.
0x4F	DXE IPL is started.
PEI Error Codes	
0x50	Memory initialization error. Invalid memory type or incompatible memory speed.
0x51	Memory initialization error. SPD reading has failed.
0x52	Memory initialization error. Invalid memory size or memory modules do not match.

Table 5-33 PEI Status Codes (continued)

Status Code	Description
0x53	Memory initialization error. No usable memory detected.
0x54	Unspecified memory initialization error.
0x55	Memory not installed.
0x56	Invalid CPU type or Speed.
0x57	CPU mismatch.
0x58	CPU self test failed or possible CPU cache error.
0x59	CPU micro-code is not found or micro-code update has failed.
0x5A	Internal CPU error.
0x5B	Reset PPI is not available.
0x5C-0x5F	Reserved for future AMI error codes.
S3 Resume Progress Codes	
0xE0	S3 resume is started (S3 resume PPI is called by the DXE IPL).
0xE1	S3 boot script execution.
0xE2	Video repost.
0xE3	OS S3 wake vector call.
0xE4-0xE7	Reserved for future AMI progress codes.
0xE0	S3 resume is started (S3 resume PPI is called by the DXE IPL).
S3 Resume Error Codes	
0xE8	S3 resume failed in PEI.
0xE9	S3 resume PPI not found.
0xEA	S3 resume boot script error.
0xEB	S3 OS wake error.
0xEC-0xEF	Reserved for future AMI error codes.
Recovery Progress Codes	
0xF0	Recovery condition triggered by firmware (Auto recovery).
0xF1	Recovery condition triggered by user (Forced recovery).
0xF2	Recovery process started.

Table 5-33 PEI Status Codes (continued)

Status Code	Description
0xF3	Recovery firmware image found.
0xF4	Recovery firmware image loaded.
0xF5 - 0xF7	Reserved for future AMI progress codes.
Recovery Error Codes	
0xF8	Recovery PPI is not available.
0xF9	Recovery capsule is not found.
0xFA	Invalid recovery capsule.
0xFB - 0xFF	Reserved for future AMI error codes.

5.5.2.3 PEI Beep Codes

Table 5-34 PEI Beep Codes

# of Beeps	Description
1	Memory not Installed.
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice).
3	DXE IPL was not found.
3	DXE core firmware volume was not found.
7	Reset PPI is not available.
4	Recovery failed.
4	S3 resume failed.

5.5.2.4 DXE Status Codes

Table 5-35 DXE Status Codes

Status Code	Description
0x60	DXE Core is started.
0x61	NVRAM initialization.
0x62	Installation of the South Bridge Runtime Services.
0x63	CPU DXE initialization is started.
0x64	CPU DXE initialization (CPU module specific).
0x65	CPU DXE initialization (CPU module specific).
0x66	CPU DXE initialization (CPU module specific).
0x67	CPU DXE initialization (CPU module specific).
0x68	PCI host bridge initialization.
0x69	North Bridge DXE initialization is started.
0x6A	North Bridge DXE SMM initialization is started.
0x6B	North Bridge DXE initialization (North Bridge module specific).
0x6C	North Bridge DXE initialization (North Bridge module specific).
0x6D	North Bridge DXE initialization (North Bridge module specific).
0x6E	North Bridge DXE initialization (North Bridge module specific).
0x6F	North Bridge DXE initialization (North Bridge module specific).
0x70	South Bridge DXE initialization is started.
0x71	South Bridge DXE SMM initialization is started.
0x72	South Bridge devices initialization.
0x73	South Bridge DXE initialization (South Bridge module specific).
0x74	South Bridge DXE initialization (South Bridge module specific).
0x75	South Bridge DXE initialization (South Bridge module specific).
0x76	South Bridge DXE initialization (South Bridge module specific).
0x77	South Bridge DXE initialization (South Bridge module specific).

Table 5-35 DXE Status Codes (continued)

Status Code	Description
0x78	ACPI module initialization.
0x79	CSM initialization.
0x7A	Reserved for future AMI DXE codes.
0x80	OEM DXE initialization codes.
0x90	Boot Device Selection (BDS) phase is started.
0x91	Driver connecting is started.
0x92	PCI Bus initialization is started.
0x93	PCI Bus hot plug controller initialization.
0x94	PCI Bus enumeration.
0x95	PCI Bus request resources.
0x96	PCI Bus assign resources.
0x97	Console output devices connect.
0x98	Console input devices connect.
0x99	Super IO Initialization.
0x9A	USB initialization is started.
0x9B	USB reset.
0x9C	USB detect.
0x9D	USB enable.
0x9E	Reserved for future AMI codes.
0xA0	Reserved for ASL. See Table 5-38 on page 102 .
0xA1	IDE initialization is started.
0xA2	IDE reset.
0xA3	IDE detect.
0xA4	IDE enable.
0xA5	SCSI initialization is started.
0xA6	SCSI reset.
0xA7	SCSI detect.

Table 5-35 DXE Status Codes (continued)

Status Code	Description
0xA8	SCSI enable.
0xA9	Setup verifying password.
0xAA	Reserved for ASL. See Table 5-38 on page 102 .
0xAB	Start of setup.
0xAC	Setup input wait.
0xAD	Ready to boot event.
0xAE	Legacy boot event.
0xAF	Exit boot services event.
0xB0	Runtime set virtual address MAP begin.
0xB1	Runtime set virtual address MAP end.
0xB2	Legacy option ROM initialization.
0xB3	System reset.
0xB4	USB hot plug.
0xB5	PCI bus hot plug.
0xB6	Clean-up of NVRAM.
0xB7	Configuration reset (reset of NVRAM settings).
0xB8	Reserved for future AMI codes.
0xC0	OEM BDS initialization codes.
DXE Error Codes	
0xD0	CPU initialization error.
0xD1	North Bridge initialization error.
0xD2	South Bridge initialization error.
0xD3	Some of the Architectural Protocols are not available.
0xD4	PCI resource allocation error. Out of resources.
0xD5	No space for legacy option ROM.
0xD6	No console output devices are found.
0xD7	No console input devices are found.

Table 5-35 DXE Status Codes (continued)

Status Code	Description
0xD8	Invalid password.
0xD9	Error loading boot option (LoadImage returned error).
0xDA	Boot option failed (StartImage returned error).
0xDB	Flash update failed.
0xDC	Reset protocol is not available.

5.5.2.5 DXE Beep Codes

Table 5-36 DXE Beep Codes

# of Beeps	Description
4	Some of the architectural protocols are not available.
5	No console output devices are found.
5	No console input devices are found.
1	Invalid password.
6	Flash update failed.
7	Reset protocol is not available.

5.5.2.6 CPU Exception Status Codes

Table 5-37 CPU Exception Status Codes

Status Code	Description
0x00	Divide error.
0x01	CPU debug exception.
0x02	Non maskable hardware interrupt occurred.
0x03	INT 3 breakpoint.

Table 5-37 CPU Exception Status Codes (continued)

Status Code	Description
0x04	Overflow, INT 0 instruction.
0x05	Bound range exceeded.
0x06	Invalid OpCode (undefined OpCode).
0x07	Device not available (no Math Co-Processor).
0x08	Double fault. Any instruction to the CPU that can generate an NMI or Interrupt.
0x09	Co-processor segment overrun.
0x0A	Invalid Task Switch Access.
0x0B	Segment not present. Occurs after a load segment.
0x0C	Stack Segment Fault. Relations to stack operations.
0x0D	General Protection fault. Any memory reference and other protection checks.
0x0E	Page fault.
0x0F	Reserved by Intel.
0x10	Floating point error.
0x11	Alignment check.
0x12	Machine check.
0x13	SIMD floating point exception.

5.5.2.7 ASL Status Codes

Table 5-38 ASL Status Codes

Status Code	Description
0x01	System is entering S1 sleep state.
0x02	System is entering S2 sleep state.
0x03	System is entering S3 sleep state.
0x04	System is entering S4 sleep state.

Table 5-38 ASL Status Codes (continued)

Status Code	Description
0x05	System is entering S5 sleep state.
0x10	System is waking up from the S1 sleep state.
0x20	System is waking up from the S2 sleep state.
0x30	System is waking up from the S3 sleep state.
0x40	System is waking up from the S4 sleep state.
0xAC	System has transitioned into ACPI mode. Interrupt controller is in PIC mode.
0xAA	System has transitioned into ACPI mode. Interrupt controller is in APIC.

5.5.2.8 OEM-Reserved Status Code Ranges

Table 5-39 OEM-Reserved Status Code Ranges

Status Code	Description
0x5	OEM SEC initialization before microcode loading.
0xA	OEM SEC initialization after microcode loading.
0x1D - 0x2A	OEM pre-memory initialization codes.
0x3F - 0x4E	OEM PEI post memory initialization codes.
0x80 - 0x8F	OEM DXE initialization codes.
0xC0 - 0xCF	OEM BDS initialization codes.

Operating System and Driver Support

6.1 Supported Operating System

The supported Operating Systems are:

- Microsoft XP SP3
- Microsoft XP Embedded
- Redhat Fedora Core 11

6.2 Supported Drivers

Table 6-1 Supported Drivers

Drivers	WinXP 32bit	WinXP 64bit	Redhat Fedora
Chipset	Yes	Yes	N/A
Graphic	Yes	Yes	N/A
WG82567V	Yes	Yes	Yes
WG82574L	Yes	Yes	Yes
Audio Codec	Yes	Yes	Yes

Related Documentation

A.1 Emerson Embedded Communications Computing Documents

The Emerson Network Power - Embedded Computing publications listed below are referenced in this manual. You can obtain electronic copies of Emerson Network Power - Embedded Computing publications by contacting your local Emerson sales office. For documentation of final released (GA) products, you can also visit the following website:

<http://www.emersonnetworkpowerembeddedcomputing.com> > Resources > Technical Documentation . This site provides the most up-to-date copies of Emerson Network Power - Embedded Computing product documentation.

Table A-1 Emerson Network Power - Embedded Computing Publications

Document Title	Publication Number
MITX-430/MITX-440-DVI-2E Quick Start Guide	6806800K40
MITX-430/MITX-440-DVI-2E Safety Notes Summary	6806800K41
MITX-430/MITX-440-DVI-2E Release Notes	6806800K55

A.2 Related Specifications

For additional information, refer to the following table for related specifications. As an additional help, a source for the listed document is provided. Please note that, while these sources have been verified, the information is subject to change without notice.

Table A-2 Related Specifications

Organization	Document
ACPI http://www.acpi.info/	Advanced Configuration and Power Interface Specification Revision 2.0c.
LVDS http://www.ansi.org/	ANSI/TIA/EIA-644-A-2001.
PCI Express card http://www.expresscard.org/	Express Card Standard Release 1.0.
IEEE http://www.ieee.org	IEEE 802.3 and IEEE 802.3ae.

Table A-2 Related Specifications (continued)

Organization	Document
PCI http://www.pcisig.com/	PCI Local Bus Specification Revision 2.3, March 29, 2002 Copyright. PCI Express Card Electromechanical Specification Revision 1.1, March 28, 2005. PCI Express Base Specification Revision 1.1, March 28, 2005.
SATA http://www.sata-io.org/	High Speed Serialized AT Attachment Revision 1.0a January 7, 2003.
SMBus www.sbs-forum.org	System Management Bus (SMBus) Specification Version 2.0, August 3, 2000.
USB http://www.usb.org/	Universal Serial Bus Specification Revision 2.0, April 27, 2000.

Safety Notes

This section provides warnings that precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed during all phases of operation, service, and repair of this equipment. You should also employ all other safety precautions necessary for the operation of the equipment in your operating environment. Failure to comply with these precautions or with specific warnings elsewhere in this manual could result in personal injury or damage to the equipment.

Emerson intends to provide all necessary information to install and handle the product in this manual. Because of the complexity of this product and its various uses, we do not guarantee that the given information is complete. If you need additional information, ask your Emerson representative.

The product has been designed to meet the standard industrial safety requirements. It must only be used in its specific area of office telecommunication industry, industrial control, and development. It must not be used in safety critical components, life supporting devices or on aircraft.

Only personnel trained by Emerson or persons qualified in electronics or electrical engineering are authorized to install, remove or maintain the product. The information given in this manual is meant to complete the knowledge of a specialist and must not be used as replacement for qualified personnel.

Keep away from live circuits inside the equipment. Operating personnel must not remove equipment covers. Only factory authorized service personnel or other qualified service personnel is allowed to remove equipment covers for internal subassembly or component replacement or any internal adjustment.

Do not install substitute parts or perform any unauthorized modification of the equipment or the warranty may be voided. Contact your local Emerson representative for service and repair to make sure that all safety features are maintained.

Emerson and our suppliers take significant steps to make sure that there are no bent pins on the backplane or connector damage to the boards prior to leaving the factory. Bent pins caused by improper installation or by inserting boards with damaged connectors could void the Emerson warranty for the backplane or boards.

This product operates with dangerous voltages that can cause injury or death. Use extreme caution when handling, testing, and adjusting this equipment and its components.

EMC

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, EN55022. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, can cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user is required to correct the interference at his own expense.

Use only shielded cables when connecting peripherals to assure that appropriate radio frequency emissions compliance is maintained. Installed blades must have the face plates installed and all vacant slots in the shelf must be covered.

For applications where this product is provided without a face plate, or where the face plate has been removed, your system chassis/enclosure must provide the required electromagnetic interference (EMI) shielding to maintain EMC compliance.

Board products are tested in a representative system to show compliance with the above mentioned requirements. A proper installation in a compliant system maintains the required performance.

As soon as you modify the product or change the default configuration you are responsible for complying with all relevant regulatory standards.

VCCI

This is a Class B product based on the standard of the Voluntary Control Council for Interference by Information Technology Interference (VCCI). If this equipment is used in a domestic environment, radio disturbance can arise. When such trouble occurs, the user is required to take corrective actions.

Installation

Damage of Circuits

Electrostatic discharge and incorrect installation and removal of the product can damage circuits or shorten their life.

Before touching the product make sure that you are working in an ESD-safe environment or wear an ESD wrist strap or ESD shoes. Hold the product by its edges and do not touch any components or circuits.

System Damage

To avoid system damage verify that the system environment meets the environmental and power requirements given in this manual before installing the system.

Before you begin to set up and cable your new system, consider these guidelines:

- **Restricted access area:** Install the system only in a restricted access area.
- **Installation codes:** This unit must be installed in accordance with the National Electrical Code, Articles 11016, 11017, and 11018 and the Canadian Electrical Code, Section 12.
- **Overcurrent protection:** A readily accessible listed branch circuit overcurrent protective device must be incorporated into the building wiring. For appropriate AWG rating of the overcurrent protection device see NEC Table 31016 and other national regulations.
- **The protective bonding conductor depends on your power distribution topology.** Make sure that you use an appropriate protective bonding conductor regarding the rating of the branch circuit protection.

- Install the system safely. Make sure that cables and cords are out of the way.
- Make sure that the set-up is comfortable for users.

Product Damage

Using wire sizes that are not sufficient for your environment may result in cable damage.

Always check with your local building authorities for wire sizing requirements for your environment and make sure that the installation complies with the 1993 National Electric Code (NEC) and other applicable codes.

Make sure to connect the ground wire to a reliable earth ground connection to comply with Class 1 Equipment requirements.

Damage of the Product and Additional Devices and Modules

Incorrect installation or removal of additional devices or modules damages the product or the additional devices or modules.

Before installing or removing additional devices or modules, read the respective documentation and use appropriate tools.

System Damage

Attaching power inputs to non-TNV/SELV approved power sources causes the system to fail compliance with safety regulations.

Make sure to attach power inputs to approved Telephone Network Voltage (TNV) or Safety Extra Low Voltage (SELV) branch circuits only.

Personal Injury or Product Damage

The product is supplied by a TNV-2 voltage. This voltage is considered hazardous. Make sure that the external power supply meets the relevant safety standards.

Make sure that TNV-2 is separated from dangerous voltages (mains) through double or reinforced insulation.

Personal or System Damage

The system is supplied by a SELV ONLY voltage (equipment is Class III nonenergy hazard circuits). This voltage is considered hazardous. Make sure that the external power supply meets the relevant safety standards.

Make sure that SELV is separated from hazardous voltages through double or reinforced insulation.

Multiple power sources are present. Removing one supply connection does not remove power from the shelf.

Service only by qualified service personnel.

Personal Injury or System Damage

A top-heavy rack can tip, causing damage to equipment and injury to personnel.

If your system is the only one in the rack, make sure to mount the system in the lowest part of the rack. If several systems are installed in one rack, start with the heaviest component at the bottom. If the rack is equipped with stabilizing devices, make sure that they are installed and extended so that the rack is secure. Then proceed to mount or service the system.

Product Damage

If the system is not installed properly, it may fall down.

You must provide your own hardware to secure the chassis. Emerson strongly recommends the use of chassis runners to help support the weight of the chassis.

Personal Injury or System Damage

Accidental dropping of the system can cause personal injury or system damage.

Use the appropriate equipment to safely lift and mount the system.

Personal Injury

The system is heavy and improper handling can lead to muscle strain or back injury.

Have two people lift the system or use lifting aids and proper lifting techniques when handling the system. Do not use the FRU handles to lift the shelf.

Product Damage

Improper removal of the product from the packaging can damage the FRU ejector handles at the bottom.

Do not tilt the system forward or backward when removing it from the packaging.

Operation

System Damage

During the course of handling, shipping, and assembly, pins, mounting screws, fans and other items can become loose or damaged.

Do not operate a damaged shelf, this can cause damage to devices that interact with it.

System Overheating

Cooling Vents

Improper cooling can lead to blade and system damage and can void the manufacturer's warranty.

To ensure proper cooling and undisturbed airflow through the system always operate the system in a horizontal position. Do not obstruct the ventilation openings at the top, sides and back of the system. Keep the fresh air intake at the bottom-front side of the chassis completely clear. Make sure that the fresh air supply is not mixed with hot exhaust from other devices. Make sure that all slots are populated with either blades, filler blades, or dummy blades.

System Damage

Environmental contamination can impair system operation. Place the system in a stable area free of movement and free of dust, smoke, and electrostatic discharge (ESD).

Make sure that the temperature does not exceed the operating temperature given in the environmental requirements in this manual and allow room for proper air cooling.

System Overheating

If you reduce the blower/fan speed the system temperature rises.

Constantly control the system temperature once you have reduced the blower/fan speed.

While operating the system make sure the environmental and power requirements are met.

System Damage or Personal Injury

Covers and Panels

Failure to operate the system without covering vacant slots voids the manufacturer's warranty. Do not operate the system with open module slots. For optimal cooling of the system and associated payload and to prevent electric shock, cover all open module slots and put all panels in place before turning on power. Slot covers and panels must remain in place during system operation.

System Damage

Most surge/transient suppressors can cause system damage from transients if used in the typical manner.

Do not overload branch circuits. Check the manual and/or rating plate of all devices and verify that the sum of the ampere ratings do not exceed two-thirds of the branch rating.

Do not use surge/transient suppressors without power system analysis.

System Damage

Air Filter

Air contamination can pollute the air filter and obstruct the air intake of the system which causes system overheating and blade or system component damage.

Air filters should be cleaned at least every 90 days or sooner, depending on the conditions of the central office environment. Because central offices vary in physical location and cleanliness, check your air filters every week after you first install your system. In a dusty environment, a filter may need cleaning more often than a filter in a cleaner environment. Check the filters frequently until you have a good idea of how often it needs cleaning. Based on your findings, establish a regular cleaning schedule and keep a log to record the date of each filter cleaning or replacement.

System Damage

Air Filters

Air contamination can pollute the air filters and obstruct the air intake of the system which causes system overheating and component damage.

To guarantee proper airflow through the system the air filters have to be replaced at least every six months. Emerson recommends to replace the air filters every 90 days. Filter replacement frequency depends on the environment the system is subjected to.

Because central offices vary in physical location and cleanliness, check your air filters every week after you first install your system. In a dusty environment, filter replacement may be required more often than in a cleaner environment. Check the filters frequently until you have a good idea of how often they must be replaced. Based on your findings, establish a regular replacement schedule and keep a log to record the date of each filter replacement.

Product Damage

High humidity and condensation on surfaces cause short circuits.

Do not operate the product outside the specified environmental limits. Make sure the product is completely dry and there is no moisture on any surface before applying power.

Overheating and Damage of the Product

Operating the product without forced air cooling can lead to overheating and thus damage of the product.

When operating the product, make sure that forced air cooling is available in the shelf.

Product Malfunction

Failure to observe proper grounding practices may cause a variety of noise, electrostatic discharge, and radio frequency interference (RFI) problems.

When operating the blade in areas of electromagnetic radiation make sure that the blade is bolted on the system and the system is shielded by enclosure.

Personal Injury

High leakage current can be hazardous and cause injury.

Locate the caution label near the grounding studs (may vary from system to system) and make an earth ground connection before connecting power to the PEM.

Product Malfunction

Bad operating voltage conditions may interrupt product operation during PEM replacement. Make the operating voltage conditions of the product optimal by keeping the input voltage at nominal -48 VDC to -60 VDC.

Personal Injury or Short Circuits

Blade or Power Supply

In case the ORing diodes of the product fail, the product may trigger a short circuit between input line A and input line B so that line A remains powered even if it is disconnected from the power supply circuit (and vice versa).

To avoid damage or injury, always check that there is no more voltage on the line that has been disconnected before continuing your work.

Personal Injury

At the system's rear there are sharp pins which can cause injury.

Be careful when handling the system.

Data Loss and Product Damage

Following the emergency power off procedure results in data loss and may damage chassis components in a running system.

Use this method only when normal shutdown procedures cannot be followed.

Configuration Switches/Jumpers

Product Malfunction

Switches marked as "Reserved" might carry production-related functions and can cause the product to malfunction if their setting is changed.

Do not change settings of switches marked as "reserved".

Product Damage

Setting/resetting the switches during operation can cause damage to the product.

Check and change switch settings before you install the product.

System Damage

Wrong jumper settings can make the shelf inoperable.

Never change the settings of the jumpers.

Product Damage

Too much force may damage the reset switch.

Use minimal force when pressing the reset switch.

Grounding

Product Damage

If the product is not properly grounded, it may be damaged by electrostatic discharge.

Make sure that each of the system's parts contact the EMI gasket. The system contains gaskets at the shelf and module level.

The shelf is also fitted with ESD contacts. Provide proper ESD protection for the operator.

Personal Injury

Touching the PEM power input terminals with metallic objects on your hands, wrists, or hanging from your neck may lead to severe injuries through electric shock and burning.

Do not wear any metallic attire or commodity on your hands, wrists, or hanging from your neck when working at the power input terminals or power input cables. Be extremely careful when you use electrically conductive tools near the PEMs.

Electric Shock

Power Cable

If the power cable is not connected properly, you may get an electric shock.

To minimize shock hazard, the system chassis and enclosure must be connected to an electrical ground. Failure to observe proper grounding practices may cause a variety of noise, electrostatic discharge, and radio frequency interference (RFI) problems.

Electric Shock (AC Systems)

If the three-conductor AC power cable is not connected properly, you may get an electric shock.

The power cable must be plugged into an approved three-contact electrical outlet with the grounding wire reliably connected to an electrical ground (safety ground) at the power outlet.

This equipment is designed to permit the connection of the earthed conductor of the DC supply circuit to the earthing conductor at the equipment. If this connection is made, all of the following conditions must be met:

- This equipment shall be connected directly to the DC supply system earthing electrode conductor or to a bonding jumper from an earthing terminal bar or bus to which the DC supply system earthing electrode conductor is connected.
- This equipment shall be located in the same immediate area (such as, adjacent cabinets) as any other equipment that has a connection between the earthed conductor of the same DC supply circuit and the earthing conductor, and also the point of earthing of the DC system. The DC system shall not be earthed elsewhere.
- The DC supply source shall be located within the same premises as this equipment.
- Switching or disconnecting devices shall not be in the earthed circuit conductor between the DC source and the point of connection of the earthing electrode conductor.

Connectors and Cabling

System Damage

RJ-45 connectors on some products are either twisted-pair Ethernet (TPE) or E1/T1/J1 network interfaces. Connecting an E1/T1/J1 line to an Ethernet connector may damage your system.

- Make sure that TPE connectors near your working area are clearly marked as network connectors.
- Verify that the length of an electric cable connected to a TPE bushing does not exceed 100 m.
- Make sure the TPE bushing of the system is connected only to safety extra low voltage circuits (SELV circuits).
- If in doubt, ask your system administrator.

Personal Injury

Cables that are not installed securely can cause injuries due to entanglement or tripping. Make sure cables are securely installed. Never change the system's cabling as delivered by Emerson. The cabling should follow existing cable paths using existing or similar cable fastenings. Check proper function of the system after cabling extensions.

System Malfunction or Damage

Accidental removal of the power cable while the system is operating might impact system operation or cause damage.

Make sure that the power cable is properly fixed to the chassis or the rack.

Personal Injury

Touching contacts and cables of the system may cause electric shock.

Make sure that contacts and cables of the system cannot be touched while the systems is operating. If in doubt concerning cabling, ask your local Emerson representative.

Personal Injury

Touching power cables that are energized may cause injuries.

Cables may or may not be preinstalled at the branch circuit or power distribution unit.

If the DC power cables are not connected to the branch circuit or power distribution unit, connect the power cables to the PEMs before connecting the DC power cables to the external power source.

If the DC power cables are connected to the branch circuit or power distribution unit, a qualified service person must confirm that the power to the cables is terminated (off) before continuing the steps to attach the cables to the PEMs.

In either case, use a multimeter to check the PEM end of the DC power cables to confirm there is no power present. If the multimeter indicates there is still power present and power cannot be removed from the terminals, the entire shelf must be powered down to perform the PEM replacement.

Product Malfunction or Damage

The mini-B USB cable connection does not have a locking mechanism. Accidental removal of the mini-B USB cable while the product is operating might impact product operation or cause damage.

Make sure that the mini-B USB cable is properly fixed to the product.

Product Malfunction

Connecting more than one serial port may create a conflict and the serial port may not operate correctly.

Although serial ports are available at the face plate and DMC, only one should be connected at any given time.

PEM

System Damage

To maintain proper airflow and cooling of the shelf it is essential that all PEMs are installed in the shelf.

Make sure that a skilled service technician replaces the PEM within the recommended service time to maintain the shelf within safe operating temperatures.

System Damage

Touching the chassis with an energized power cable causes a short circuit.

If possible, shut off the DC input power at the source prior to disconnecting the power cable from the product. If the power cannot be shut off, be careful not to let the cable short to the chassis frame.

Personal Injury

Touching a powered line may cause electric shock.

Always remove the input connector or turn off the input before physically removing the power module from the chassis. Always check that there is no voltage on the line that has been disconnected before removing the power module.

Short Circuit and Electric Shock

To avoid short circuits and electric shock, the power lugs must not be energized before removing the screws.

It is essential to ensure that the power lugs are not energized before loosening the screws. Be careful with the used tools in order to prevent a short circuit.

Personal Injury

Removing power from the PEMs cannot be accomplished by pushing the PEM's breakers to the OFF position. The PEMs remain powered until the -48 VDC power to each PEM is completely removed.

Make sure you disconnect the power at the external source and allow the capacitors in the PEM to discharge (1 minute) before removing the PEM from the chassis.

Personal Injury (AdvancedTCA)

Hot PEMs may cause injury.

Allow the PEM to cool before servicing.

Personal Injury (microTCA)

Hot power modules may cause injury.

Allow the power modules to cool before servicing.

System Damage

Inserting or extracting the PEM with the PEM breaker in the ON position may damage your system.

If power is connected to the shelf, make sure the PEM breaker is in the OFF position before you insert or extract a PEM.

System Damage

Applying feed power to the PEM with the PEM breaker in the ON position may damage your system.

Make sure the PEM breaker is in the OFF position when you turn on the feed power.

PEM Damage

Applying reversal power to the PEM causes damage to the electrolytic capacitors of the filter. This is indicated by the red reverse power LED.

Only push the breakers to the ON position if the reverse power LED (red) is not lit.

Product Damage

Improper cabling damages your product.

Tie the 48 V power cable to the most positive side. For example, if the power supply is labeled -48 V and RETURN, connect the 48 V power cable to RETURN. If the power supply is labeled +48 V and GND, connect the 48 power cable to +48 V.

Personal Injury

Hazardous energy levels may be present inside the enclosure.

To prevent serious injury or death from dangerous voltages, do not touch any of the exposed wires or terminals inside the enclosure. Only properly trained service personnel should remove or install power supplies.

Fans/Blowers

System Damage AXP

If it takes longer than 1 minute to replace an FTM, the system may be damaged.

Make sure the replacement FTM is available and ready to install. Replace the FTM within the 1-minute recommended service interval.

System Damage 31k/4100

Running the system longer than 30 seconds with less than three blowers damages the system.

Make sure the replacement blower is available and ready to install. Replace the blower within the 30-second recommended service interval.

System Damage

Insufficient cooling may damage the system.

The cooling system is designed to provide sufficient cooling with a single fan tray at work.

However, under bad conditions or due to a failure of the remaining fans, the cooling capacity of a single fan tray may not suffice.

Perform the fan tray replacement without delays.

Fan Damage

When a fan tray is taken out of operation, the system manager compensates for the loss by increasing the speed of the remaining fans. Turning on high speed for a long time may shorten the life of the fans.

Perform the fan tray replacement without delays.

System Damage

Removing the single operating fan tray leads to overheating very quickly.

Replace the defective fan tray immediately.

System Damage

Operating the system with the blower cover open for more than 30 seconds may damage the system.

When replacing a blower, make sure to open the blower cover only immediately before the replacement, perform the replacement without delays, and close it immediately after the replacement.

System Damage

Wrong fan tray insertion may result in system damage.

When inserting the fan tray into the shelf, make sure to insert the appropriate front or rear fan tray and to align it accurately to the guides.

Damage to Filter Frames

Wrong insertion can damage the frame or the guides.

When inserting the filter frame into the shelf, make sure to insert the appropriate bottom or top frame and to align it accurately to the guides.

System Damage and Personal Injury

Blowers/Fans may continue to rotate after power is removed. When exchanging a blower/fan, rotating blades in the fan/blower may be exposed. The centrifugal forces make the unit difficult to handle.

To prevent injury keep fingers and tools away from rotating blades in the fan/blower. Do not touch the blades before they have stopped rotating.

Personal Injury**Rotating Fans**

Inserting tools or fingers into operational fans may cause injuries.

Keep clear of the fans as long as they are rotating.

System Damage

The system will be damaged if you replace the cooling unit during system operation.

Power down the system to replace a cooling unit.

Product Damage

The FTM is heavy. Dropping it may damage it.

Hold it securely during replacement.

System Damage

Particles that fall into the fan tray module during air filter replacement may constrain proper air flow and thus lead to system damage.

Clean out (vacuum) any particles from the fan tray before you reinstall the fan tray into the chassis.

Pin Damage

Forcing the module into the system may damage connector pins.

If the module hangs during insertion, pull it out and insert it again.

Expansion and FRU Replacement

Product Damage

The memory module stays in its socket while you open the locks at both sides of the socket. It is not automatically ejected from the socket. If you open the locks too far, they break.

Open the locks on both sides of the sockets until you feel resistance. Do not open them any further.

Product Damage

Bent pins or loose components can cause damage to the product, the backplane, or other system components.

Carefully inspect the product and the backplane for both pin and component integrity before installation.

Product Damage

Incorrect product installation and removal can result in product damage.

When plugging the product in or removing it, do not press on the face plate but use the handles.

The intra-building port(s) of the equipment or subassembly is suitable for connection to intra-building or unexposed wiring or cabling only. The intra-building port(s) of the equipment or subassembly must not be metalically connected to interfaces that connect to the outside plant (OSP) or its wiring. These interfaces are designed for use as intra-building interfaces only (i.e., Type 2 or Type 4 ports as described in GR-1089-CORE, Issue 4) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection in order to connect these interfaces metalically to OSP wiring.

Product Damage

If you carry the FRU using the handle, the handle might break off.

Do not use the handle to carry the FRU. The handle on the FRU is for removal and insertion purposes only.

Personal Injury

During operation, hot surfaces may be present on the heat sinks and components of the product.

To prevent injury from hot surfaces do not touch any of the exposed components or heatsinks on the product when handling. Use the handle and face plate when removing the product from the enclosure.

Product Damage

If you install blades and RTMs in the wrong sequence the blades and RTMs are damaged.

First install the RTM, then install the matching blade.

System Damage

If the system is overloaded it gets damaged.

To avoid system overload check the total power consumption of all components installed. Make sure that any individual output current of any component stays within its acceptable limits. For more information, see the technical specification of the respective component.

Loss of Safety and EMC Compliance

By using additional plug-in products it may be possible that the system is no longer compliant to safety and EMC regulations.

The system integrator must make sure that the compliancy is guaranteed.

System Damage

A torn filter is ineffective in trapping particulates and interrupts air flow distribution.

Before returning a filter to service, visually inspect it for tears or rips that may have occurred during cleaning. Do not reinstall a torn filter. You may order replacement fan filters by contacting your Emerson sales representative.

Cable Damage

Folding the fiber cable damages the cable and inhibits data transmission.

Make sure you do not fold the cable.

Hot Swap

Product Damage

Installing or removing the product while power is applied damages the product.

Power off the rack before installing or removing the product.

Data Loss

Removing the product with the blue LED still blinking causes data loss.

Wait until the blue LED is permanently illuminated before removing the product.

Data Loss (comment: applies to blades with Emerson-IPMC)

Removing the RTM with the system power on and the blue LED on the front blade still flashing causes data loss.

Before removing the RTM from a powered system, power down the slot and the front blade's payload by opening the lower handle of the front blade and wait until the blue LED is permanently ON.

PMC Modules

Product Malfunction and/or Personal Injury

Using unqualified modules together with the blade may lead to product malfunction, safety hazards and/or personal injury.

When installing additional modules or RTMs you are responsible to comply to all relevant regulatory standards.

Product Damage

Exceeding the maximum power dissipation of an installed PMC module may damage the blade.

Make sure that the combined power dissipation of an installed PMC module on the 3.3 V and 5 V rail does not exceed 7.5 W.

SFP/SFP+ Modules

Personal Injury and Damage of the RTM and SFP/SFP+ Modules

Installing and using SFP/SFP+ modules which are not fully certified and which do not meet all relevant safety standards may damage the RTM and the SFP/SFP+ modules and may lead to personal injury.

Only use and install SFP/SFP+ modules which are fully certified and which meet all relevant safety standards.

Personal Injury

Optical SFP/SFP+ modules may be classified as laser products. When installing and using any of these SFP/SFP+ modules, the regulations which correspond to the respective laser class apply to the whole RTM. Not complying to these regulations may lead to personal injury.

When installing and using optical SFP/SFP+ modules which are classified as laser products, make sure to comply to the respective regulations.

Eye Damage

Optical SFP/SFP+ modules may emit laser radiation when no cable is connected. This laser radiation is harmful to your eyes.

Do not look into the optical lens at any time.

SFP/SFP+ Module Damage

The optical port plug protects the optical fibres against dirt and damage. Dirt and damage can render the SFP/SFP+ module inoperable.

Only remove the optical plug when you are ready to connect a cable to the SFP/SFP+ module. When no cable is connected, cover the port with an optical port plug.

Laser

Personal Injury

If a label with the words CLASS 1 LASER PRODUCT is fixed to your product, it is equipped with a laser device. These devices contain a laser diode that produces invisible laser radiation.

Performing adjustments or procedures other than those specified in this manual may result in hazardous radiation that is harmful to the eyes.

Do not look into the optical lens at any time.

Battery

Data Loss

If the battery does not provide enough power anymore, the RTC is initialized and the data in the NVRAM is lost.

Replace the battery before seven years of actual battery use have elapsed.

Data Loss

Exchanging the battery always results in data loss of the devices which use the battery as power backup.

Back up affected data before exchanging the battery.

Data Loss

Installing another battery type than the one that is mounted at product delivery may cause data loss since other battery types may be specified for other environments or may have a shorter lifetime.

Only use the same type of lithium battery as is already installed.

PCB and Battery Holder Damage

Removing the battery with a screw driver may damage the PCB or the battery holder.

Do not use a screw driver to remove the battery from its holder.

Product Damage

Incorrect replacement of lithium batteries can result in a hazardous explosion.

When exchanging the on-board lithium battery, make sure that the new and the old battery are exactly the same battery models.

If the respective battery model is not available, contact your local Emerson sales representative for the availability of alternative officially approved battery models.

Product Damage

The insulator is installed in order to prevent accidental shorting to the battery, which is installed positive side up.

Do not remove the battery holder insulator.

Product Damage

It is especially important that the insulator remains intact and that the battery holder maintains a low profile if a PMC or a SATA drive is installed in the PMC site 2 location. Otherwise a PMC or SATA drive will not fit.

Do not deform the battery holder retaining tab during the battery exchange procedure so that the battery holder retaining tab continues to perform its function and so that the battery holder maintains a low profile.

Environment

Environmental Damage

Improperly disposing of used products may harm the environment.

Always dispose of used products according to your country's legislation and manufacturer's instructions.

Dieses Kapitel enthält Hinweise, die potentiell gefährlichen Prozeduren innerhalb dieses Handbuchs vorrangestellt sind. Beachten Sie unbedingt in allen Phasen des Betriebs, der Wartung und der Reparatur des Systems die Anweisungen, die diesen Hinweisen enthalten sind. Sie sollten außerdem alle anderen Vorsichtsmaßnahmen treffen, die für den Betrieb des Systems innerhalb Ihrer Betriebsumgebung notwendig sind. Wenn Sie diese Vorsichtsmaßnahmen oder Sicherheitshinweise, die an anderer Stelle dieses Handbuchs enthalten sind, nicht beachten, kann das Verletzungen oder Schäden am System zur Folge haben.

Emerson ist darauf bedacht, alle notwendigen Informationen zum Einbau und zum Umgang mit dem System in diesem Handbuch bereit zu stellen. Da es sich jedoch bei dem System um ein komplexes Produkt mit vielfältigen Einsatzmöglichkeiten handelt, können wir die Vollständigkeit der im Handbuch enthaltenen Informationen nicht garantieren. Falls Sie weitere Informationen benötigen sollten, wenden Sie sich bitte an die für Sie zuständige Geschäftsstelle von Emerson.

Das Produkt erfüllt die für die Industrie geforderten Sicherheitsvorschriften und darf ausschließlich für Anwendungen in der Telekommunikationsindustrie, im Zusammenhang mit Industriesteuerungen und in der Entwicklung verwendet werden. Es darf nicht in sicherheitskritischen Anwendungen, lebenserhaltenden Geräten oder in Flugzeugen verwendet werden.

Einbau, Wartung und Betrieb dürfen nur von durch Emerson ausgebildetem oder im Bereich Elektronik oder Elektrotechnik qualifiziertem Personal durchgeführt werden. Die in diesem Handbuch enthaltenen Informationen dienen ausschließlich dazu, das Wissen von Fachpersonal zu ergänzen, können dieses jedoch nicht ersetzen.

Halten Sie sich von stromführenden Leitungen innerhalb des Systems fern. Entfernen Sie auf keinen Fall die Systemabdeckung. Nur werksseitig zugelassenes Wartungspersonal oder anderweitig qualifiziertes Wartungspersonal darf die Systemabdeckung entfernen, um Systemkomponenten zu ersetzen oder andere Anpassungen vorzunehmen.

Installieren Sie keine Ersatzteile oder führen Sie keine unerlaubten Veränderungen am System durch, sonst verfällt die Garantie. Wenden Sie sich für Wartung oder Reparatur bitte an die für Sie zuständige Geschäftsstelle von Emerson. So stellen Sie sicher, dass alle sicherheitsrelevanten Aspekte beachtet werden.

Emerson und unsere Zulieferer unternehmen größte Anstrengungen um sicherzustellen, dass sich Pins und Stecker von Boards vor dem Verlassen der Produktionsstätte in einwandfreiem Zustand befinden. Verbogene Pins, verursacht durch fehlerhafte Installation oder durch Installation von Boards mit beschädigten Steckern kann die durch Emerson gewährte Garantie für Boards und Backplanes erlöschen lassen.

Dieses Produkt wird mit gefährlichen Spannungen betrieben, die zu Verletzungen und Tod führen können. Seien Sie im Umgang mit dem Produkt und beim Testen und Anpassen des Produktes und seiner Komponenten äußerst vorsichtig.

EMC

FCC Class B

Das Produkt wurde getestet und erfüllt die für digitale Geräte der Klasse B gültigen Grenzwerte gemäß den FCC-Richtlinien Abschnitt 15 bzw. EN 55022 Klasse B. Diese Grenzwerte sollen einen angemessenen Schutz vor Störstrahlung beim Betrieb des Produkts in Geschäfts-, Gewerbe- sowie Industriebereichen gewährleisten. Das Produkt arbeitet im Hochfrequenzbereich und erzeugt Störstrahlung. Bei unsachgemäßem Einbau und anderem als in diesem Handbuch beschriebenen Betrieb können Störungen im Hochfrequenzbereich auftreten.

Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen.

Benutzen Sie zum Anschließen von Peripheriegeräten ausschließlich abgeschirmte Kabel. So stellen Sie sicher, dass ausreichend Schutz vor Störstrahlung vorhanden ist. Die Blades müssen mit der Frontblende installiert und alle freien Steckplätze müssen mit Blindblenden abgedeckt sein.

Änderungen, die nicht ausdrücklich von Emerson erlaubt sind, können Ihr Recht das System zu betreiben zunichte machen.

Wenn dieses Produkt ohne Frontblende ausgeliefert wird oder wenn die Frontblende entfernt wird, muss Ihr System die notwendigen Schutzmechanismen gegen elektromagnetische Interferenzen bereitstellen, um die Einhaltung der elektromagnetischen Verträglichkeit des Systems zu gewährleisten.

Boardprodukte werden in einem repräsentativen System getestet, um zu zeigen, dass das Board den oben aufgeführten EMC-Richtlinien entspricht. Eine ordnungsgemäße Installation in einem System, welches die EMC-Richtlinien erfüllt, stellt sicher, dass das Produkt gemäß den EMC-Richtlinien betrieben wird.

Sobald Sie das Produkt oder seine Standardkonfiguration verändern, müssen Sie dafür sorgen, dass alle relevanten Richtlinien eingehalten werden.

VCCI

Das Produkt ist eine Einrichtung der Klasse B gemäß dem Standard des Voluntary Control Council for Interference von Information Technology Interference (VCCI). Wird das Produkt in Wohngebieten betrieben, können Störungen im Hochfrequenzbereich auftreten. In einem solchen Fall ist der Benutzer verpflichtet, entsprechende Gegenmaßnahmen zu ergreifen.

System Installation

Beschädigung von Schaltkreisen

Elektrostatische Entladung und unsachgemäßer Ein- und Ausbau des Produktes kann Schaltkreise beschädigen oder ihre Lebensdauer verkürzen.

Bevor Sie das Produkt oder elektronische Komponenten berühren, vergewissern Sie sich, daß Sie in einem ESD-geschützten Bereich arbeiten.

Beschädigung des Systems

Bitte beachten Sie, dass die im Handbuch angegebenen Voraussetzungen erfüllt sein müssen, bevor Sie das System installieren.

Beachten Sie folgende allgemeinen Sicherheitshinweise bei der Installation des Systems:

- Bereich mit eingeschränktem Zugang - Installieren Sie das System nur in Bereichen mit eingeschränktem Zugang.
- Installationsrichtlinien: Dieses System muss gemäß folgender Richtlinien installiert werden: National Electrical Code, Artikel 11016, 11017 und 11018 und Canadian Electrical Code, Abschnitt 12.a
- Überstrom Schutzeinrichtung - Eine leicht zugängliche Trennvorrichtung muss in der Gebäudeverkabelung eingebaut sein. Einen angemessenen AWG (American Wire Gauge - amerikanische Norm für Drahtquerschnitte) Wert der Überstrom Schutzeinrichtung können Sie der NEC (National Electrical Code) Tabelle 31016 oder anderen nationalen Regelwerken entnehmen.
- Der Erdungsleiter ist abhängig von der Spannungsverteilungstopologie innerhalb Ihrer Anlage. Stellen Sie sicher, dass Sie einen angemessenen Erdungsleiter gemäß der Auslegung des Zugangsleitungsschutzes verwenden.
- Bauen Sie das System sicher ein. Stellen Sie sicher, dass Kabel und Leitungen nicht im Weg sind.
- Stellen Sie sicher, dass der Systemaufbau anwenderfreundlich ist.

Beschädigung des Produktes

Wenn Sie Kabel verwenden, die für Ihr Systemumfeld nicht ausreichend sind, können Kabel beschädigt werden.

Fragen Sie bei dem Bauamt vor Ort nach, wie die Anforderungen für Kabel in Ihrem Systemumfeld sind und stellen Sie sicher, dass die Installation gemäß des 1993 National Electric Code (NEC) und anderen zutreffenden Standards durchgeführt wird.

Um die Anforderungen für Klasse 1 Produkte zu erfüllen, stellen Sie sicher, dass das Erdungskabel mit einer zuverlässigen Erdung verbunden ist.

Beschädigung des Produktes und der Zusatzmodule

Fehlerhafter Ein- oder Ausbau von Zusatzmodulen führt zu Beschädigung des Produktes oder der Zusatzmodule.

Lesen Sie deshalb vor dem Ein- oder Ausbau von Zusatzmodulen die Dokumentation und benutzen Sie angemessenes Werkzeug.

Beschädigung des Systems

Die Gleichspannungseingänge des Systems dürfen ausschließlich an zugelassene Telekommunikationsnetzspannungen (TNV) oder Sicherheits-Kleinspannungs-Stromkreise (SELV) angeschlossen werden.

Wenn Sie das System an andere Stromkreise als TNV/SELV Stromkreise anschließen, verfällt die Sicherheitszulassung.

Verletzungsgefahr und Beschädigung des Produktes

Das Produkt ist an eine TNV-2 Spannungsquelle angeschlossen. Diese Spannung kann gefährlich sein.

Stellen Sie deshalb sicher, dass die externe Spannungsversorgung den entsprechenden Sicherheitsstandards entspricht.

Verletzungsgefahr und Beschädigung des Systems

Das System wird ausschließlich mit SELV Spannung versorgt (Class III nonenergy hazard circuits). Diese Spannung wird als gefährlich eingestuft. Stellen Sie sicher, dass die externe Spannungsversorgung alle relevanten Sicherheitsstandards erfüllt.

Stellen Sie sicher, dass die SELV Spannung durch doppelte oder verstärkte Isolierungen von gefährlichen Spannungen getrennt ist.

Es gibt mehrere Energiequellen.

Handhabung nur durch geschultes Personal.

Verletzungsgefahr und Beschädigung des Systems

Wenn die Gewichte im Schaltschrank ungleich verteilt sind, kann der Schaltschrank umkippen und Schäden am System oder Verletzungen verursachen.

Bauen Sie das System deshalb ganz unten im Schrank ein, wenn es das einzige System im Schrank ist. Wenn mehrere Systeme in einen Schrank eingebaut werden sollen, platzieren Sie das schwerste System ganz unten und die leichteren weiter oben. Falls der Schaltschrank mit Kippsicherungen ausgestattet ist, stellen Sie sicher, dass diese auch installiert und ausgefahren sind, um einen sicheren Stand des Schanks zu gewährleisten. Beginnen Sie erst danach mit dem Einbau oder der Wartung des Systems.

Beschädigung des Produktes

Wenn das System nicht ordnungsgemäß installiert wird, kann es herunterfallen.

Zur Befestigung des Systemes müssen Sie Ihre eigene Hardware bereitstellen. Emerson empfiehlt ausdrücklich den Einsatz von Schienen um das Gewicht des Chassis zu sichern.

Verletzungsgefahr und Beschädigung des Systems

Verhindern Sie ein unbeabsichtigtes Herunterfallen des Systems, das Verletzungen oder Beschädigungen am System zur Folge haben kann.

Benutzen Sie zum Heben und Einbauen des Systems geeignete Hilfsmittel.

Verletzungsgefahr

Das System ist schwer und falsche Handhabung kann zu Muskelzerrungen oder Rückenschäden führen.

Heben Sie das System nur zu zweit oder benutzen Sie zum Ausbau oder Ersetzen des Systems geeignete Hebevorrichtungen.

Beschädigung des Produktes

Wenn Sie das Produkt falsch aus der Verpackung herausholen, können die unteren Griffe der FRUs beschädigt werden.

Kippen Sie das System nicht nach vorne oder hinten, wenn Sie es aus der Verpackung herausholen.

Betrieb

Beschädigung des Systems

Während des Transportes, Zusammenbaus und dem Umgang mit dem System können sich Schrauben, Lüfter oder andere Teile lösen oder beschädigt werden.

Nehmen Sie ein beschädigtes System nicht in Betrieb. Sonst können andere Einrichtungen, die mit dem System kommunizieren, beschädigt werden.

Überhitzung des Systems

Lüftungsöffnungen

Unzureichende Lüftung kann Schäden an Blades und am System verursachen und die Herstellergarantie ungültig werden lassen.

Um eine ausreichende Lüftung zu gewährleisten, stellen Sie sicher, dass das System während des Betriebs waagrecht steht. Halten Sie die Lüftungsschlitze an der Oberseite, der Rückseite und den Seiten des Systems frei. Halten Sie die Frischluftzufuhröffnung an der unteren Vorderseite des Systems völlig frei und stellen Sie sicher, dass sich die Frischluft nicht mit der Abluft von anderen Systemen mischt.

Um eine ungestörte Luftzirkulation zu gewährleisten, stellen Sie sicher, dass alle Steckplätze mit Blades oder Platzhalter Blades belegt sind.

Beschädigung des Systems

Verunreinigungen können den Systembetrieb beeinträchtigen. Bauen Sie das System an einem Ort auf, an dem wenig Bewegung stattfindet und an dem es keinen Staub, Rauch oder elektrostatische Entladung gibt.

Stellen Sie sicher, dass die Raumtemperatur die zugelassene Betriebstemperatur, die in diesem Handbuch angegeben ist, nicht übersteigt und lassen Sie genügend Platz um eine angemessene Kühlung zu gewährleisten.

Überhitzung des Systems

Wenn Sie die Geschwindigkeit der Lüfter reduzieren, steigt die Systemtemperatur an.

In diesem Fall müssen Sie die Systemtemperatur über die Sensoren der Lüftermodule regeln. Stellen Sie während des Betriebs sicher, dass die Bedingungen, die im Handbuch beschrieben sind, eingehalten werden.

Beschädigung des Systems oder Verletzungsgefahr

Abdeckungen

Falls Sie das System betreiben, ohne die freien Steckplätze abzudecken, verfällt die Herstellergarantie.

Nehmen Sie das System nur in Betrieb, wenn alle Steckplätze abgedeckt sind. Damit gewährleisten Sie eine optimale Kühlung für das System und vermeiden die Gefahr von Stromschlägen. Alle Abdeckungen müssen während des Systembetriebs an Ort und Stelle bleiben.

Beschädigung des Systems

Die meisten Entstörgeräte gegen Über- oder Störspannungen können das System durch Störspannungen beschädigen, wenn sie in der üblichen Weise verwendet werden.

Überlasten Sie keine Zweigleitungen. Überprüfen Sie die Dokumentation und/oder die Typenschilder aller Geräte und stellen Sie sicher, dass die Summe aller Stromwerte höchstens zwei Drittel des zugelassenen Werts der Zweigleitung ausmacht. Benutzen Sie Entstörgeräte gegen Über- oder Störspannungen nur, wenn Sie eine genaue Analyse des Spannungssystems durchgeführt haben.

Beschädigung des Systems

Luftfilter

Verunreinigungen in der Luft können den Luftfilter verschmutzen und so die Luftzufuhr des Systems beeinträchtigen. Das kann zur Überhitzung des Systems und zu Schäden an Systemteilen führen.

Luftfilter sollten mindestens alle 90 Tage gereinigt werden. Je nach Umgebungsbedingungen kann dies auch früher nötig sein. Da die Verhältnisse in Vermittlungsstellen sehr unterschiedlich sein können, sollten Sie die Luftfilter nach der Erstinstallation des Systems jede Woche kontrollieren. In einer staubigen Umgebung muss ein Filter gegebenenfalls öfter gereinigt werden als in einer sauberen Umgebung. Prüfen Sie den Filter regelmäßig bis Sie eine Vorstellung davon haben, wie oft der Filter gereinigt werden muss. Erstellen Sie aufgrund Ihrer Beobachtungen einen Reinigungsplan und protokollieren Sie jede Reinigung oder jeden Austausch des Filters.

Beschädigung des Systems

Luftfilter

Verunreinigungen in der Luft können den Luftfilter verschmutzen und so die Luftzufuhr des Systems beeinträchtigen. Das kann zur Überhitzung des Systems und zu Schäden an Systemteilen führen.

Um eine ausreichende Kühlung zu gewährleisten, müssen die Luftfilter mindestens alle sechs Monate ausgetauscht werden. Emerson empfiehlt, die Luftfilter alle 90 Tage auszutauschen. Wie oft Filter ausgetauscht werden müssen hängt von der Umgebung ab, in der sich das System befindet.

Da die Verhältnisse in Vermittlungsstellen sehr unterschiedlich sein können, sollten Sie die Luftfilter nach der Erstinstallation des Systems jede Woche kontrollieren. In einer staubigen Umgebung muss ein Filter gegebenenfalls öfter ausgetauscht werden als in einer sauberen Umgebung. Prüfen Sie den Filter regelmäßig bis Sie eine Vorstellung davon haben, wie oft der Filter ausgetauscht werden muss. Erstellen Sie aufgrund Ihrer Beobachtungen einen Austauschplan und protokollieren Sie jeden Austausch des Filters.

Beschädigung des Systems

Hohe Luftfeuchtigkeit und Kondensat auf den Oberflächen der Produkte kann zu Kurzschlüssen führen.

Betreiben Sie die Produkte nur innerhalb der angegebenen Grenzwerte für die relative Luftfeuchtigkeit und Temperatur und stellen Sie vor dem Einschalten des Stroms sicher, dass sich auf den Produkten kein Kondensat befindet.

Überhitzung und Beschädigung des Produktes

Wenn Sie das Produkt ohne Zwangskühlung betreiben, kann es zu einer Überhitzung und damit zu Produktschäden kommen.

Stellen Sie deshalb sicher, dass beim Betrieb des Produktes eine Zwangskühlung zur Verfügung steht.

Fehlfunktion des Produktes

Wenn Sie das Produkt nicht ordnungsgemäß erden, kann es zu einer Vielzahl von Störungen, elektrostatischen Entladungen oder Hochfrequenzstörungen kommen.

Wenn Sie das Produkt in einem Bereich mit elektromagnetischer Strahlung einsetzen, müssen Sie sicherstellen, dass das Produkt mit dem System verschraubt ist und das System durch ein Gehäuse abgeschirmt wird.

Verletzungsgefahr

Hoher Ableitstrom ist gefährlich und kann Verletzungen verursachen.

Suchen Sie das Warnschild in der Nähe der Erdungsbolzen (kann von System zu System unterschiedlich sein) und stellen Sie eine Erdungsverbindung her, bevor Sie die PEMs anschließen.

Störung des Systembetriebs

Bevor Sie die PEMs austauschen, sollten Sie die Betriebsspannung des Systems optimieren.

Stellen Sie Eingangsspannung auf einen Nennwert von -48 V bis -60 VDC ein, um einen uneingeschränkten Systembetrieb während des PEM Austauschs zu gewährleisten.

Verletzungen oder Kurzschlüsse

Blade oder Stromversorgung

Falls die ORing Dioden des Produktes durchbrennen, kann das Produkt einen Kurzschluss zwischen den Eingangsleitungen A und B verursachen. In diesem Fall ist Leitung A immer noch unter Spannung, auch wenn sie vom Versorgungskreislauf getrennt ist (und umgekehrt). Prüfen Sie deshalb immer, ob die Leitung spannungsfrei ist, bevor Sie Ihre Arbeit fortsetzen, um Schäden oder Verletzungen zu vermeiden.

Verletzungsgefahr

An der Rückseite des Systems befinden sich spitze Stifte, an denen Sie sich verletzen können. Seien Sie vorsichtig beim Umgang mit dem System.

Datenverlust und Beschädigung des Produktes

Wenn Sie das System mit der Prozedur für die Notfallabschaltung abschalten, gehen Daten verloren und Komponenten in einem laufenden System können beschädigt werden.

Benutzen Sie diese Prozedur deshalb nur, wenn Sie die normale Prozedur nicht befolgen können.

Schaltereinstellungen

Fehlfunktion des Produktes

Schalter, die mit 'Reserved' gekennzeichnet sind, können mit produktionsrelevanten Funktionen belegt sein. Das Ändern dieser Schalter kann im normalen Betrieb Störungen auslösen.

Verstellen Sie nur solche Schalter, die nicht mit 'Reserved' gekennzeichnet sind.

Beschädigung des Produktes

Das Verstellen von Schaltern während des laufenden Betriebes kann zur Beschädigung des Produktes führen.

Prüfen und ändern Sie die Schaltereinstellungen, bevor Sie das Produkt installieren.

Beschädigung des Systems

Falsche Jumper-Einstellungen können dazu führen, dass das System nicht mehr funktioniert. Ändern Sie deshalb nie die Einstellungen der Jumper.

Beschädigung des Produktes
 Zu viel Druck kann den Reset Schalter beschädigen.
 Drücken Sie den Reset Schalter nur leicht.

Erdung

Beschädigung des Produktes
 Falls das Produkt nicht ordnungsgemäß geerdet ist, kann es durch elektrostatische Entladungen beschädigt werden.
 Stellen Sie sicher, dass die Systemteile die EMC-Dichtungen berühren. Das System enthält EMC-Dichtungen für das Shelf und einzelne Module.
 Das Shelf enthält außerdem ESD Anschlüsse. Sorgen Sie für ordnungsgemäßen ESD-Schutz für den Betreiber.

Verletzungsgefahr durch Stromschlag und Verbrennungen
 Berühren metallische Gegenstände an Händen, Handgelenken oder am Hals die Input Terminals der PEMs, kann dies zu extremen Verletzungen wie, zum Beispiel Verbrennungen oder Amputationen führen.
 Tragen Sie bei der Arbeit mit dem System keine metallischen Gegenstände an Ihren Händen oder Armen und lassen sie keine metallischen Gegenstände um Ihren Hals hängen. Seien Sie extrem vorsichtig mit elektrisch leitenden Gegenständen in der Nähe der PEMs.

Verletzung durch Stromschlag
Stromkabel
 Ist das Stromkabel nicht ordentlich angeschlossen, können Sie einen Stromschlag bekommen. Erden Sie das Systemchassis, um das Risiko eines Stromschlags so gering wie möglich zu halten. Falls Sie das System nicht ordnungsgemäß erden, kann dies außerdem zu vielfältigen Störgeräuschen, elektrostatischen Entladungen und Interferenzen im Hochfrequenzbereich führen.

Verletzung durch Stromschlag (Wechselstromsysteme)

Ist das dreiadrige Wechselstromkabel nicht ordentlich angeschlossen, können Sie einen Stromschlag bekommen.

Sie müssen das dreiadrige Wechselstromkabel mit einer zugelassen Anschlussdose mit drei Kontakten verbinden. Der Erdleiter (grün/gelb) muss dabei zuverlässig mit elektrischer Erde verbunden sein.

Stecker und Verkabelung

Beschädigung des Systems

Bei den RJ-45 Steckern, die sich auf einigen Produkten befinden, handelt es sich entweder um Twisted-Pair-Ethernet (TPE) oder um E1/T1/J1-Stecker. Beachten Sie, dass ein versehentliches Anschließen einer E1/T1/J1 Leitung an einen TPE-Stecker Ihr System zerstören kann.

- Kennzeichnen Sie deshalb TPE-Anschlüsse in der Nähe Ihres Arbeitsplatzes deutlich als Netzwerkanschlüsse.
- Stellen Sie sicher, dass die Länge eines mit Ihrem Systems verbundenen TPE-Kabels 100 m nicht überschreitet.
- Das System darf über die TPE Stecker nur mit einem Sicherheits-Kleinspannungs-Stromkreis (SELV) verbunden werden.
- Bei Fragen wenden Sie sich an Ihren Systemverwalter.

Verletzungsgefahr

Kabel, die nicht sicher angebracht sind, können zu Stolperfallen werden und Verletzungen verursachen.

Stellen Sie sicher, dass die Kabel sicher installiert sind, um Verletzungen zu vermeiden.

Verändern Sie nie die von Emerson ausgelieferte Verkabelung des Systems. Stellen Sie sicher, dass die Verkabelung schon existierenden Kabelführungen folgt und bestehende oder ähnliche Befestigungen verwendet. Überprüfen Sie nach der Erweiterung der Verkabelung, ob das System ordnungsgemäß arbeitet.

Beschädigung des Systems

Ein versehentliches Entfernen des Netzkabels während des Betriebs kann den Systembetrieb beeinträchtigen oder Schäden am System verursachen.

Schließen Sie ein versehentliches Entfernen des Netzkabels während des Betriebs aus, indem Sie es am Chassis oder am Rack befestigen.

Verletzungsgefahr

Schließen Sie in jedem Fall aus, dass Personen durch einen elektrischen Schlag verletzt werden können, indem Sie sicherstellen, dass Kontakte und Kabel des Systems während des Betriebs nicht berührt werden können.

Falls Sie Fragen bezüglich der Verkabelung haben, wenden Sie sich an die für Sie zuständige Geschäftsstelle von Emerson.

Verletzungsgefahr

Wenn Sie Stromkabel, die noch unter Strom stehen, berühren, können Sie verletzt werden.

Stromkabel können an der Zweigleitung oder am Stromverteiler vorinstalliert sein, oder auch nicht.

Falls die Gleichstromkabel nicht an der Zweigleitung oder dem Stromverteiler angeschlossen sind, müssen Sie die Gleichstromkabel am PEM anschließen bevor Sie die Gleichstromkabel an der externen Stromversorgung anschließen.

Falls die Gleichstromkabel an der Zweigleitung oder dem Stromverteiler angeschlossen sind, muss qualifiziertes Fachpersonal bestätigen, dass die Kabel nicht unter Strom stehen, bevor Sie damit fortfahren, die Kabel an die PEMs anzuschließen.

Benutzen Sie in jedem Fall ein Multimeter, um zu prüfen, dass die Kabelenden, die sich am PEM befinden, nicht unter Strom stehen. Falls das Multimeter Strom anzeigt, und dieser Strom nicht von den Terminals entfernt werden kann, muss das ganze System abgeschaltet werden, um die PEMs auszutauschen.

Fehlfunktion oder Beschädigung des Produktes

Die Mini-B USB Kabelverbindung besitzt keine Arretiervorrichtung. Falls Sie das Mini-B USB Kabel versehentlich entfernen, während das Produkt läuft, könnte der Betrieb gestört oder das Produkt beschädigt werden.

Stellen Sie sicher, dass das Mini-B USB Kabel ordnungsgemäß mit dem Produkt verbunden ist.

Fehlfunktion des Produktes

Falls Sie mehr als eine serielle Schnittstelle gleichzeitig anschließen, könnte das Konflikte hervorrufen und die serielle Schnittstelle könnte nicht mehr richtig funktionieren. Obwohl sowohl an der Frontblende als auch am DMC serielle Schnittstellen zur Verfügung stehen, sollten Sie immer nur eine einzige benutzen.

PEM

Beschädigung des Systems

Um einen ungestörten Luftstrom innerhalb des Shelves und somit eine ausreichende Kühlung sicherzustellen, ist es notwendig, dass alle PEMs im Shelf eingebaut sind.

Stellen Sie sicher, dass ein geübter Wartungstechniker das PEM innerhalb des empfohlenen Wartungszeitraums austauscht, damit das Shelf innerhalb des sicheren Betriebstemperaturbereichs arbeitet.

Beschädigung des Systems

Wenn Sie das Chassis mit einem Stromkabel, das noch unter Strom steht, berühren, entsteht ein Kurzschluss.

Nach Möglichkeit sollten Sie die Gleichstromquelle abschalten, bevor Sie das Stromkabel vom Produkt entfernen. Falls Sie die Gleichstromquelle nicht abschalten können, achten Sie darauf, dass das Stromkabel keinen Kurzschluss verursacht.

Verletzungsgefahr

Wenn Sie eine stromführende Leitung berühren, können Sie einen Stromschlag bekommen. Entfernen Sie deshalb immer den Eingangsstecker oder schalten Sie den Eingang ab, bevor Sie die Stromversorgungseinheit aus dem Chassis ausbauen. Überprüfen Sie außerdem, ob die entfernte Leitung spannungsfrei ist, bevor Sie die Stromversorgungseinheit ausbauen.

Kurzschluß und Gefahr durch Stromschlag

Um Kurzschlüsse und elektrischen Schlag zu vermeiden, muss die Stromzufuhr vor dem Lösen der Schrauben unterbrochen sein.

Überzeugen Sie sich vor dem Lösen der Schrauben unbedingt, dass die Stromzufuhr unterbrochen ist und während des Austausches unterbrochen bleibt. Vermeiden Sie Kurzschlüsse, indem Sie sehr vorsichtig mit dem Werkzeug umgehen.

Verletzungsgefahr

Sie können die PEMs nicht allein dadurch spannungsfrei schalten, dass Sie den Trennungsschalter an den PEMs in die OFF Stellung stellen. Die PEMs bleiben unter Spannung, bis die -48 V Spannung von jedem PEM vollständig entfernt ist.

Stellen Sie deshalb sicher, dass Sie die Spannung an der externen Spannungsversorgung ausschalten. Warten Sie außerdem eine Minute, bis die Kondensatoren im PEMs entladen sind, bevor Sie die PEMs aus dem Chassis entfernen.

Verletzungsgefahr (AdvancedTCA)

Sie können sich an heißen PEMs verletzen.

Lassen Sie die PEMs abkühlen, bevor Sie mit bloßen Händen herausziehen.

Verletzungsgefahr (microTCA)

Sie können sich an heißen Stromversorgungseinheiten verletzen.

Lassen Sie die Stromversorgungseinheiten vor der Wartung abkühlen.

Beschädigung des Systems

Wenn Sie das PEM ein- oder ausbauen, während sich der PEM-Kippschalter in der ON Stellung befindet, kann das System beschädigt werden.

Wenn das System unter Strom steht, müssen Sie sicherstellen, dass sich der PEM-Kippschalter in der OFF Stellung befindet, bevor Sie ein PEM ein- oder ausbauen.

Beschädigung des Systems

Wenn Sie dem System Strom zuführen während sich der Schalter für den Unterbrecher in der ON Stellung befindet, kann das System beschädigt werden.

Stellen Sie vor der Stromzufuhr sicher, dass sich der Schalter für den Unterbrecher in der OFF Stellung befindet.

Beschädigung der Spannungsversorgungseinheit

Wird die Spannungsversorgungseinheit verkehrt angeschlossen, werden die Elektrolytkondensatoren der Filter beschädigt. Den falschen Anschluss zeigt die rote LED "Reverse Power".

Schalten Sie die Unterbrecher deshalb nur, wenn die rote LED nicht leuchtet.

Beschädigung des Produktes

Fehlerhafte Verkabelung kann das Produkt beschädigen.

Verbinden Sie das 48 V Kabel immer mit der "positivsten" Seite. Wenn die Stromversorgungseinheit zum Beispiel -48 V und RETURN Anschlüsse besitzt, schließen Sie das 48 V Kabel an RETURN an. Wenn die Stromversorgungseinheit +48 V und GND-Anschlüsse besitzt, schließen Sie das 48 V Kabel an +48 V.

Verletzungsgefahr

Innerhalb des Gehäuses gibt es gefährliche Spannungen.

Berühren Sie keine Anschlüsse innerhalb des Gehäuses, um ernsthafte Verletzungen oder Tod durch Stromschlag zu vermeiden. PEMs dürfen nur von ausgebildetem Wartungspersonal ein- oder ausgebaut werden.

Lüfter

Beschädigung des Systems (AXP)

Tauschen Sie den Lüfter innerhalb des vorgeschriebenen Wartungszeitraums von 1 Minute aus. So vermeiden Sie Beschädigung des Systems.

Stellen Sie sicher, dass der Ersatzlüfter für den Austausch bereit ist.

Beschädigung des Systems (31k / 4100)

Wird das System länger als 30 Sekunden mit weniger als drei Lüftermodulen betrieben, kann das System beschädigt werden.

Wenn Sie ein Lüftermodul austauschen, stellen Sie sicher, dass der Austauschprozess innerhalb dieser Zeit abgeschlossen ist.

Beschädigung des Systems

Unzureichende Kühlung kann das System beschädigen.

Das Kühlsystem ist dafür ausgelegt, auch mit nur einem funktionierenden Lüftermodul ausreichende Kühlung zur Verfügung zu stellen. Unter bestimmten Umständen oder wenn ein verbleibender Lüfter ausfällt, kann es jedoch sein, dass ein Lüftermodul nicht ausreicht.

Führen Sie den Lüfteraustausch deshalb ohne Verzögerung aus.

Beschädigung der Lüfter

Wenn ein Lüftermodul außer Betrieb genommen wird, gleicht der System Manager das aus, indem er die Geschwindigkeit der verbleibenden Lüfter erhöht. Wenn ein Lüfter über einen längeren Zeitraum auf Höchstgeschwindigkeit läuft, kann sich seine Lebensdauer verkürzen. Führen Sie den Lüfteraustausch deshalb ohne Verzögerung aus.

Beschädigung des Systems

Wenn Sie ein einzelnes verbleibendes Lüftermodul aus dem System entfernen, führt dies sehr schnell zu einer Überhitzung des Systems.

Tauschen Sie deshalb ein fehlerhaftes Lüftermodul unverzüglich aus.

Beschädigung des Systems

Wird das System für mehr als 30 Sekunden mit offener Lüfterklappe betrieben, kann es zu Schäden am System kommen.

Öffnen Sie beim Austausch eines Lüftermodules die Klappe erst unmittelbar vor dem Austausch, führen Sie den Austausch ohne Verzögerungen durch und schließen Sie die Klappe unmittelbar nach dem Austausch wieder.

Beschädigung des Systems

Fehlerhafter Lüftereinbau kann zu Schäden am System führen.

Achten Sie beim Lüftereinbau darauf, dass Sie das korrekte Modul für die Vorder- und Rückseite des Systems nehmen und es an den Führungsschienen ausrichten.

Beschädigung des Filterrahmens

Fehlerhafter Einbau kann den Rahmen oder die Führungsschienen beschädigen.

Achten Sie beim Einbau des Filterrahmens darauf, dass Sie den korrekten Rahmen für die Ober- und Unterseite benutzen und ihn an den Führungsschienen ausrichten.

Beschädigung des Systems und Verletzungsgefahr

Lüfterschaukeln können sich noch bewegen, nachdem der Strom abgestellt ist. Wenn Sie die Lüfterschublade aus dem Chassis ziehen, werden die Lüfterschaukeln freigelegt.

Sie können verletzt werden, wenn Sie Werkzeuge oder Finger in rotierende Lüfter einführen.

Achten Sie deshalb beim Austausch der Lüfterschublade auf die rotierenden Lüfterschaukeln.

Berühren Sie die Lüfterschaukeln erst, wenn diese still stehen.

Verletzungsgefahr

Rotierende Lüfterschaufeln

Sie können verletzt werden, wenn Sie Werkzeuge oder Finger in rotierende Lüfter einführen. Berühren Sie die Lüfterschaufeln erst, wenn diese still stehen.

Beschädigung des Systems

Das System kann beschädigt werden, wenn Sie die Kühleinheit während des laufenden Betriebs entfernen.

Schalten Sie das System ab, bevor Sie die Kühleinheit entfernen.

Beschädigung des Produktes

Das Lüftermodul ist schwer. Wenn Sie es fallen lassen, kann es beschädigt werden.

Halten Sie es deshalb während des Austauschs gut fest.

Beschädigung des Systems

Staub oder Kleinteile, die während des Luftfilteraustauschs in das Lüftermodul fallen, können den Luftstrom beeinträchtigen und so zu Schäden am System führen.

Entfernen Sie deshalb Staub oder Kleinteile (mit einem Staubsauger) aus dem Lüftermodul bevor Sie es wieder einbauen.

Schäden an Steckern

Wenn Sie das Modul mit Gewalt installieren, können die Anschlussstifte in den Steckern beschädigt werden.

Falls sich das Modul während der Installation verkantet, ziehen Sie es wieder heraus und führen Sie sie erneut ein.

Erweiterung und FRU Austausch

Beschädigung des Produktes

Während Sie die Justierklemmen an den Seiten der Steckplätze öffnen, bleibt das Speichermodul im Steckplatz stecken. Es wird nicht automatisch aus dem Steckplatz ausgehebelt.

Öffnen Sie die Justierklemmen an den Seiten der Steckplätze bis Sie einen Widerstand spüren.

Öffnen Sie sie nicht weiter, da die Klemmen sonst abbrechen können.

Beschädigung des Produktes

Verbogene Stecker oder lose Teile können das Produkt, die Backplane oder andere Systemkomponenten beschädigen.

Prüfen Sie das Produkt und die Backplane vor dem Einbau sorgfältig auf verbogene Stecker und lose Teile.

Beschädigung des Produktes

Fehlerhafter Ein- und Ausbau des Produktes kann zu einer Beschädigung des Produktes führen.

Benutzen Sie die Handles, um das Produkt ein- und auszubauen. Auf diese Weise vermeiden Sie, dass die Frontblende beschädigt wird.

Beschädigung des Produktes

Falls Sie die FRU an den Handles tragen, können diese abbrechen.

Tragen Sie die FRU nicht an den Handles. Diese sind nur für den Ein- und Ausbau gedacht.

Verletzungsgefahr

Während des Betriebs können Oberflächen an den Kühlkörpern oder anderen Komponenten sehr heiß werden.

Um Verletzungen durch Verbrennung zu vermeiden, berühren Sie während der Arbeit keine Komponenten oder Kühlkörper auf dem Produkt. Fassen Sie das Produkt an den Handles und der Frontblende an, wenn Sie es aus dem System herausnehmen.

Beschädigung des Produktes

Wenn Sie Blades und RTMs in der falschen Reihenfolge installieren, können sie beschädigt werden.

Installieren Sie zuerst das RTM, dann das dazugehörige Blade.

Beschädigung des Systems

Eine Systemüberlastung beschädigt das System.

Verhindern Sie eine Systemüberlastung, indem Sie die gesamte aufgenommene Leistung aller eingebauten Komponenten, überprüfen. Stellen Sie sicher, dass der Ausgangsstrom jedes Verbrauchers innerhalb der zulässigen Grenzwerte liegt. Für weitere Informationen lesen Sie die Dokumentation der jeweiligen Komponente.

Verlust der Sicherheits- und EMC-Zulassung

Wenn Sie zusätzliche Produkte installieren, können Sicherheits- und EMC-Richtlinien verletzt werden.

Der Systemintegrator ist für die Einhaltung dieser Richtlinien verantwortlich.

Beschädigung des Systems

Ein beschädigter Filter kann Schwebstoffe nur ungenügend ausfiltern und den Luftstrom beeinträchtigen.

Prüfen Sie einen gereinigten Filter auf Risse bevor Sie ihn wieder in Betrieb nehmen. Bauen Sie keine beschädigten Filter in das System ein. Sie können Ersatzfilter bei der für Sie zuständigen Geschäftsstelle von Emerson bestellen.

Kabelschäden

Wenn Sie das Glasfaserkabel knicken, kann das Kabel beschädigt und die Datenübertragung beeinträchtigt werden.

Knicken Sie das Kabel nicht.

Hot Swap

Beschädigung des Produktes

Wenn Sie das Produkt im laufenden Betrieb ein- oder ausbauen, kann es beschädigt werden. Schalten Sie das Rack aus, bevor Sie das Produkt ein- oder ausbauen.

Datenverlust

Wenn Sie das Produkt ausbauen, obwohl die blaue Hot-Swap LED noch blinkt, kann dies zu Datenverlust führen.

Warten Sie daher, bis die blaue LED durchgehend leuchtet, bevor Sie das Produkt ausbauen.

Beschädigung des Produktes (applies to blades with Emerson-IPMC)

Wenn Sie das RTM ausbauen, während das System läuft und die blaue LED auf dem Front Board noch blinkt, können Daten verloren gehen.

Schalten Sie deshalb vor dem Ausbau des RTMs den Slot, in dem es sich befindet, ab und fahren Sie die Payload des Front Boards herunter, indem Sie den unteren Griff des Front Boards öffnen und warten, bis die blaue LED leuchtet ohne zu blinken.

PMC Module

Fehlfunktion des Produktes und/oder Verletzungsgefahr

Wenn Sie nichtqualifizierte Module gemeinsam mit dem Blade benutzen, kann dies zu einer Fehlfunktion des Produktes, Sicherheitsrisiken und/oder Verletzungen führen.

Sobald Sie zusätzliche Module oder RTMs installieren, sind Sie für die Einhaltung aller relevanten Richtlinien verantwortlich.

Beschädigung des Produktes

Wird die maximal zulässige Leistungsaufnahme eines installierten PMC Modules überschritten, so kann dies zu einer Beschädigung des Blades führen.

Stellen Sie sicher, dass die Leistungsaufnahme eines installierten PMC Modules zusammen auf der 3.3 V- und 5 V-Schiene insgesamt 7.5 W nicht überschreitet

SFP/SFP+ Modules

Gefahr von Verletzungen sowie von Beschädigung des RTMs und SFP/SFP+-Modulen

Die Installation und der Betrieb von SFP/SFP+-Modulen, welche nicht zertifiziert sind und welche nicht den Sicherheitsstandards entsprechen, kann Verletzungen zur Folge haben sowie zur Beschädigung des RTMs und von SFP/SFP+-Modulen führen.

Verwenden Sie daher nur SFP/SFP+-Module, die zertifiziert sind und die den Sicherheitsstandards entsprechen.

Verletzungsgefahr

Optische SFP/SFP+-Module können als Laserprodukte klassifiziert sein. Wenn Sie solche SFP/SFP+-Module installieren und betreiben, so gelten die entsprechenden Bestimmungen für Laserprodukte für das gesamte RTM. Werden diese Bestimmungen nicht eingehalten, so können Verletzungen die Folge sein.

Wenn Sie SFP/SFP+-Module betreiben, die als Laserprodukte klassifiziert sind, stellen Sie sicher, dass die entsprechenden Bestimmungen für Laserprodukte eingehalten werden.

Verletzungsgefahr der Augen

Optische SFP/SFP+-Module können Laserstrahlen aussenden, wenn kein Kabel angeschlossen ist.

Blicken Sie daher nicht direkt in die Öffnung eines SFP/SFP+-Moduls, um Verletzungen der Augen zu vermeiden.

Beschädigung von SFP/SFP+-Modulen

Die Schutzkappe eines SFP/SFP+-Modules dient dazu, die sensible Optik des SFP/SFP+-Modules gegen Staub und Schmutz zu schützen.

Entfernen Sie die Schutzkappe nur dann, wenn Sie beabsichtigen, ein Kabel anzuschließen. Andernfalls belassen Sie die Schutzkappe auf dem SFP/SFP+-Modul.

Laser

Verletzungsgefahr

Wenn sich an der Rückseite Ihres Systems ein Aufkleber mit der Aufschrift CLASS 1 LASER PRODUCT befindet, beinhaltet das System ein Bauteil mit einem Laser. Solche Bauteile enthalten Laserdioden, die unsichtbare und für die Augen schädliche Laserstrahlen abgeben. Falls Sie sich nicht an die Anweisung in diesem Handbuch halten, kann dies zu gefährlichen Strahlungsbelastungen führen. Schauen Sie niemals direkt in den Laserstrahl.

Batterie

Datenverlust

Wenn die Batterie nur noch ungenügend geladen ist, wird der RTC zurückgesetzt und Daten im NVRAM gehen verloren.

Tauschen Sie daher die Batterie nach spätestens einem Jahr aus.

Datenverlust

Der Austausch der Batterie führt unweigerlich zu Datenverlust bei Bauteilen, die die Batterie als Backup verwenden.

Sichern Sie daher alle Daten, die bei Austausch der Batterie verloren gehen.

Datenverlust

Wenn Sie einen anderen Batterietyp installieren als der, der bei Auslieferung des Produktes installiert war, kann Datenverlust die Folge sein, da die neu installierte Batterie für andere Umgebungsbedingungen oder eine andere Lebenszeit ausgelegt sein könnte. Verwenden Sie daher den gleichen Batterietyp, der bei Auslieferung des Produktes installiert war.

Beschädigung des PCBs und der Batteriehalterung

Wenn Sie die Batterie mit einem Schraubendreher ausbauen, können das PCB und die Batteriehalterung beschädigt werden. Benutzen Sie keinesfalls einen Schraubendreher, um die Batterie aus der Halterung zu nehmen.

Beschädigung des Produktes

Fehlerhafter Austausch von Lithium-Batterien kann zu gefährlichen Explosionen führen. Wenn Sie die Lithium-Batterie auf dem Produkt austauschen, stellen Sie sicher, dass die alte und die neue Batterie vom gleichen Typ sind. Ist der Batterietyp nicht verfügbar, wenden Sie sich an Emerson um herauszufinden, welcher Batterietyp offiziell alternativ verwendet werden darf.

Beschädigung des Produktes

Der installierte Isolator verhindert einen unbeabsichtigten Kurzschluss zur Batterie, die mit der positiven Seite nach oben installiert ist. Entfernen Sie niemals den Isolator an der Batteriehalterung.

Beschädigung des Produktes

Es ist äußerst wichtig, dass der Isolator unbeschädigt bleibt und dass die Batteriehalterung flach am Board anliegt, wenn ein PMC Module oder eine SATA Platte in PMC Slot 2 installiert sind. Sonst passen das PMC Modul oder die SATA Platte nicht auf das Board. Verbiegen Sie beim Austausch niemals die Batteriehalterung, damit gewährleistet ist, dass die Batteriehalterung funktionstüchtig bleibt und die Batteriehalterung weiterhin flach am Board anliegt.

Umweltschutz

Umweltverschmutzung

Falsche Entsorgung der Produkte schadet der Umwelt.

Entsorgen Sie alte Produkte gemäß der in Ihrem Land gültigen Gesetzgebung und den Empfehlungen des Herstellers.

Index

A

Advanced Menu 75

B

BIOS Device 63
Block Diagram 57
board accessories 27
Board Layout 45
Board Thermal Management 37
Boot Menu 90
Boot Process 73

C

Chipset 68
Chipset Menu 89
Clock Generator 69
comments and suggestions 18
Connectors 47
contact address 18
conventions 17

D

Debug 71
dimensions 27
Dual core 21
DVI Interface 63

E

Environmental Requirements 31
Ethernet Interfaces 60

F

Fan 70
feedback 18
functional blocks 57

G

GFX engine 69
GPIO Configuration 63
GPU 69

H

heat sinks 33
High humidity 31
HW Monitor 70

I

IDE 63
Initiating Setup 73
Installation Environment 40

M

Main Menu 74
Manageability 71
Memory Module 42
Mini-ITX motherboard 21

P

PCI-E Port 60
Pineview-D Processor 58
POST 73
POST Codes 92
Power Management 71
Power Requirements 35
Processor Cooler 41
product
 dimensions 27
 identification 28
 weight 27

R

Rear panel ports 22
RTC 71

S

Save & Exit Menu 91
Security Menu 91
serial number label 28
Setup Utility 74
Shipment Inspection 39
Single core 21
SMBus Interface and Devices 58
SPI Flash 70
standards 25
Storage 69
Super I/O 70
Supported Drivers 105
Supported Operating System 105
System Memory 60

T

Thermal Requirements 32
Trusted Platform Module 24

U

USB Interface 61

V

VGA, LVDS, LPC, and Audio Interface 62
Video 69

W

Watchdog Timer 71
weight 27

HOW TO REACH LITERATURE AND TECHNICAL SUPPORT:

Tempe, Arizona, USA

Munich, Germany
+49 89 9608 0

For literature, training, and technical assistance and support programs, visit
www.emersonnetworkpowerembeddedcomputing.com

Emerson Network Power.

The global leader in enabling Business-Critical Continuity™

www.emersonnetworkpowerembeddedcomputing.com

- | | | | |
|--------------------|--------------------------------|-----------------------------|-----------------------------|
| ■ AC Power Systems | ■ Embedded Computing | ■ Outside Plant | ■ Services |
| ■ Connectivity | ■ Embedded Power | ■ Power Switching & Control | ■ Site Monitoring |
| ■ DC Power Systems | ■ Integrated Cabinet Solutions | ■ Precision Cooling | ■ Surge & Signal Protection |

Emerson, Business-Critical Continuity, Emerson Network Power and the Emerson Network Power logo are trademarks and service marks of Emerson Electric Co.
All other product or service names are the property of their respective owners.

© 2010 Emerson Electric Co.