


T8112, T8131, T8132; TD2200, TD2400; CT2800, CT3200, CT3300, CT3395 Thermostats

INSTALLATION INSTRUCTIONS ADDENDUM

CYCLE RATES AND TIME FORMAT ADJUSTMENT

The adjustment for cycle rates and time format has changed from the current information in the Installation Instructions. See Fig. 1 and the tables for guidance.

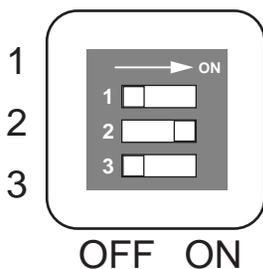

M14829

Fig. 1. DIP switch positions.

Heating System	DIP Switch Position		Fuel Switch Position
Warm air furnace	1 - On	2 - On	F
Hot water or high efficiency warm air furnace	1 - Off	2 - On	F
Electric furnace	1 - On	2 - Off	E

Temperature Display	DIP Switch Position
Display °F	3 - On
Display °C	3 - Off

Automation and Control Solutions
Honeywell
1985 Douglas Drive North
Golden Valley, MN 55422

Automation and Control Solutions
Honeywell Limited-Honeywell Limitée
35 Dynamic Drive
Scarborough, Ontario
M1V 4Z9

