

NEC PowerMate eco 40-GB Hard Drive Release Notes


The NEC 40-GB Hard Drive comes in a specially designed cradle that fits in the front drive bay of the NEC PowerMate eco™ computer. Swapping your optical drive and hard drive is quick and easy. You can change front bay devices without disassembling your system.

⚠ CAUTION The NEC PowerMate eco does *not* support hot swapping or warm swapping the hard drive in or out of the front bay — do not install or remove the hard drive while the system is powered on or in a sleep state. To prevent data loss and damage to the hard drive and the system, always power off the system before swapping the hard drive.

To install the hard drive:

1. Save your work, exit Microsoft® Windows®, and power off the system.
2. Remove the storage device currently in the front drive bay of the PowerMate eco system:
 - At the rear of the PowerMate eco system base, pull the drive release button out from its recessed position until it is perpendicular with the base.

Positioning the drive release button

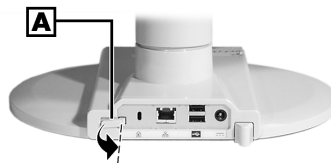

A – Drive Release Button

- Press the release button in towards the front of the system to release the drive from its connector.
 - From the front of the system, pull the drive out of the drive bay.
 - Return the drive release button to its recessed position on the system base.
3. Insert the rear of the hard drive into the drive bay. Press the drive into the drive bay to secure it into the drive bay connector.
 4. Power on the system.

Information in this publication is subject to change without notice. PowerMate eco is a trademark of NEC Solutions (America), Inc. NEC is a registered trademark and Empowered by Innovation is a trademark of NEC Corporation and/or one or more of its subsidiaries. All are used under license. Microsoft and Windows are registered trademarks of Microsoft Corporation. ©2002 NEC Solutions (America), Inc.