



# Module No. 1181/1182

## READING THE DISPLAY

Press (A) for an outline of all functions.

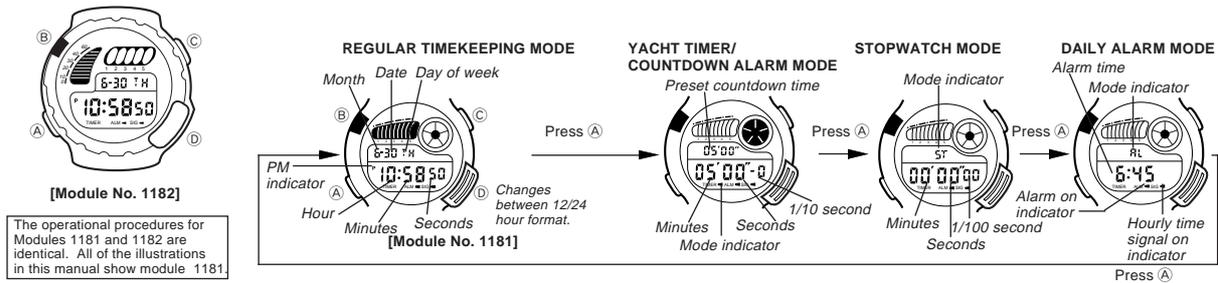

## SETTING TIME AND DATE

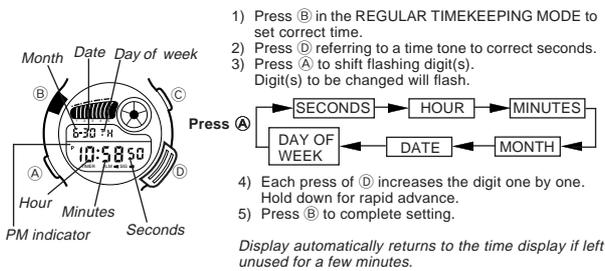


## USING DAILY ALARM


Beeper sounds for 20 seconds at preset time every day until cleared when daily alarm is set. Press any button to stop beeper. Signal sounds every hour on the hour if time signal is set.

### Setting daily alarm


- Press (B) in the DAILY ALARM MODE to set a new alarm time.
  - Press (A) to shift flashing digit(s). Digit(s) to be changed will flash.
  - Each press of (D) increases the digit. Hold down for rapid advance.
  - Press (B) to complete setting.
- Display automatically returns to initial daily alarm time if left unused for a few minutes.

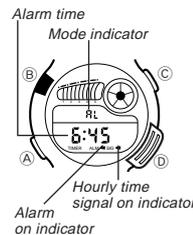

## USING YACHT TIMER/COUNTDOWN ALARM

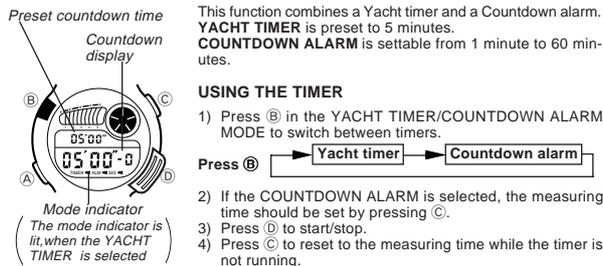

## On or off setting of alarm and time signal

 

The Yacht Timer and Countdown Alarm take 8 measurements from when they are started until they are stopped by pressing the (D) button. These functions stop automatically after 8 measurements.

When display reaches 0, a beeper sounds for 10 seconds. Pressing any button stops the beeper. Timer automatically repeats the countdown.

In the Yacht timer, an advance warning beeper indicates elapsed time (4, 3, 2, 1 minutes, 50, 40, 30, 20 seconds to start). When the countdown reaches 10 seconds before starting time, a beeper sounds every second.

## USING STOPWATCH

A signal confirms start/stop and split/reset operation. (Working range) Total elapsed time display is limited to 59 minutes 59.99 seconds. For longer times reset and started again.

