

Enclosure Installation Guide 37U Cabinet (37" DP / 42" DP) 42U Cabinet (37" DP / 42" DP) 45U Cabinet (37" DP / 42" DP)

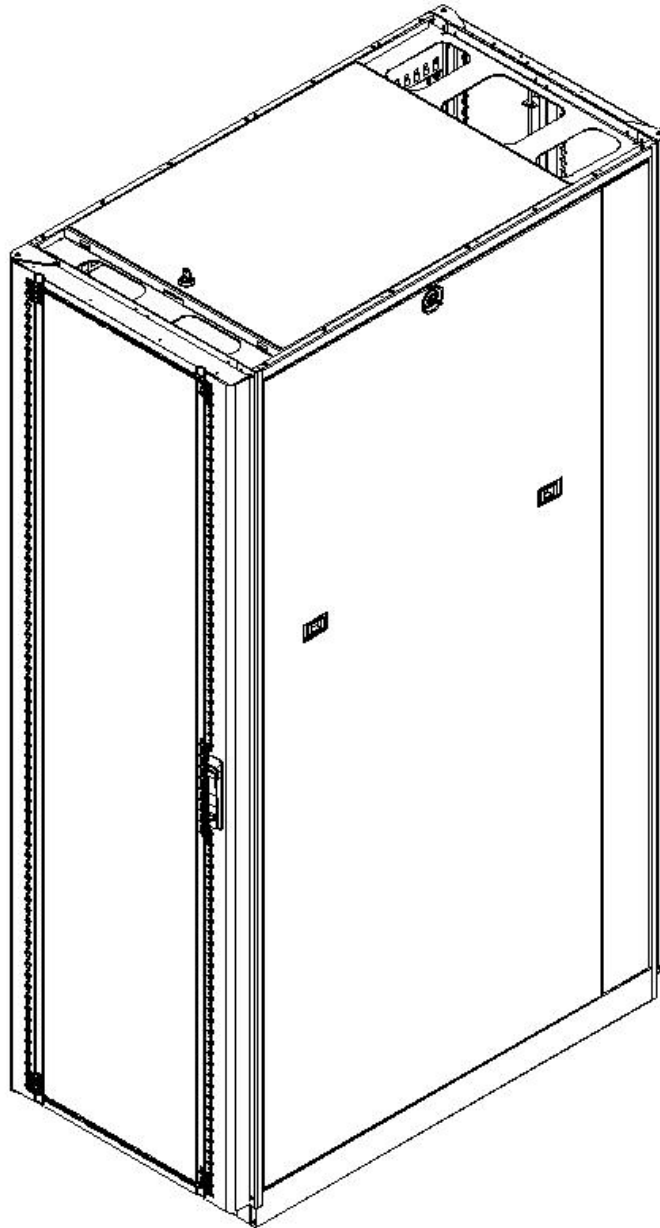


Figure 1
42U X 42" DP Shown

Table of Contents

Table of Contents	2
Introduction.....	3
Symbols in Text	4
Important Safety Notes For Installation	4
Chapter 1 Site Preparation	6
□ Check Facility Provisions	6
□ Cabinet with Full Rear and Front Doors.....	7
□ Cabinet with Split Rear Door.....	8
Chapter 2 Receiving and Unpacking	9
□ Unpacking Instructions- Standard Packaging	10
□ Unpacking Instructions- Integration Packaging.....	12
Chapter 3 Configure Accessories into the Cabinet	14
□ Configure Optional Accessories.....	14
□ Installing and Removing Doors	15
□ Installing and Removing Doors (cont.)	16
□ Door Handles.....	17
□ How to Reverse the Door Swing	18
□ How to Reverse the Door Swing (cont.).....	20
□ Adjusting the Leveling Feet.....	21
□ Installing the Retractable Tip Guard.....	22
□ Installing the Floor Mounting Brackets	23
□ Adjusting or Replacing the Mounting Rails	24
□ How to Remove or Install a Top Panel.....	25
□ How to Remove or Install Side Panels.....	26
□ Installing a Grounding Kit.....	27
□ Using the SharkTRAC™ and SharkSNAP™	28
□ Installing a Typical 19 inch EIA Power Strip (cont.).....	29
□ Installing a Typical 19 inch EIA Power Strip (cont.).....	30
□ Installing a Typical 19 inch EIA Power Strip (cont.).....	31
□ Cable Management.....	32
□ Installing a MultiBay Kit.....	33
Chapter 4 Install Computer Equipment.....	34
□ Cabinet settings for various manufacturers' devices.....	34
Chapter 5 Final Assembly.....	36
Appendix A: Glossary	37
Appendix B: Basic Cabinet Components	40
Appendix C: Cabinet Specifications.....	42
Warranty	46

Introduction

Thank you for buying a SharkRack computer cabinet. The SharkRack family of computer cabinets has been designed with great care and made with the highest quality materials to provide you with many years of satisfactory use. The SharkRack cabinet provides a top of the line cabinet with features that make installation, management, and ongoing maintenance fast, easy, and safe. We sincerely hope you enjoy using your SharkRack cabinet and we always welcome your feedback. If you have technical questions about any aspect of installing or using your computer cabinet, please call us at 87-SHARKRACK (877-427-5722).

SharkRack intends this manual to guide you through a smooth cabinet installation. SharkRack assumes that you are qualified in the servicing of computer equipment and trained in recognizing hazards in products with high energy levels. SharkRack also assumes you are qualified to move heavy pieces of equipment. All the instructions here are presented in great detail.

This document contains general installation instructions for the various SharkRack cabinet configurations and many of the common optional devices that can be installed into a SharkRack cabinet. Always consult the documentation that comes with your computer product or accessory for detailed installation instructions.

The following diagram shows an overview of a common cabinet installation.

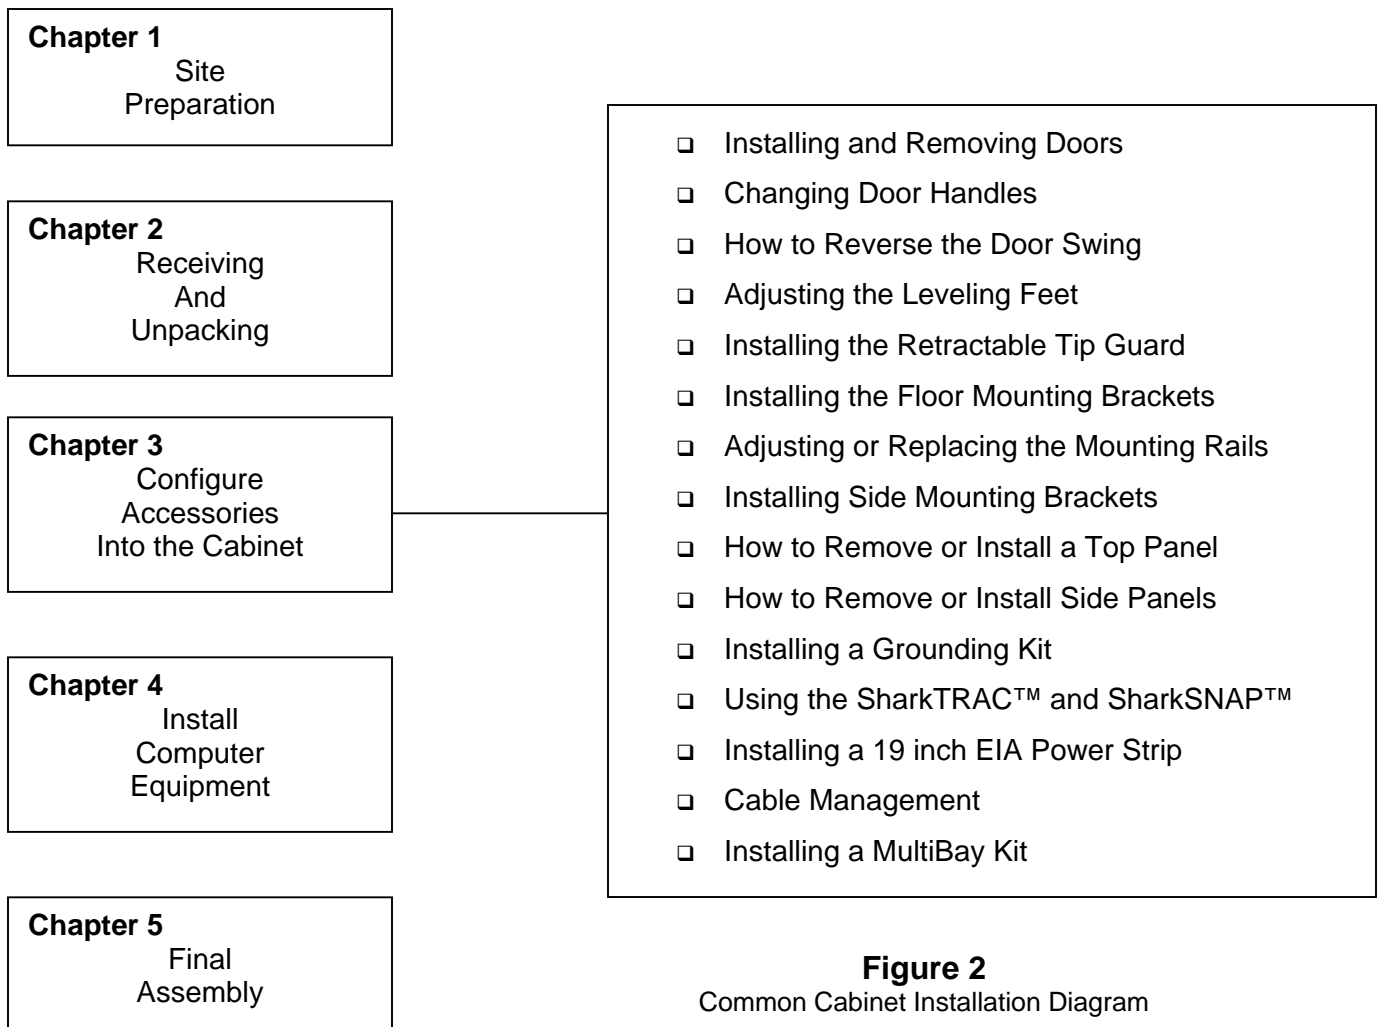


Figure 2
Common Cabinet Installation Diagram

Symbols in Text



WARNING: Text set off in this manner indicates that failure to follow directions in the warning could result in bodily harm or loss of life.



CAUTION: Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.

Note: Text set off in this manner presents commentary, sidelights, or interesting points of information.

Important Safety Notes For Installation

Note:

The information contained in this document is subject to change without notice.

SharkRack makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

SharkRack shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

SharkRack assumes no responsibility for the use or reliability of the software or hardware installed into a SharkRack cabinet.

Pictures in this manual represent a typical configuration. Your actual configuration may vary.

WARNING:



Always install a stabilizing/anti-tip device such as Floor Mounting Brackets or a Retractable Tip Guard.

Always install the UPS (uninterruptible power supply) in the bottom of the rack.

Always install the heaviest equipment in the bottom of the rack.

Always install servers and power devices in the rack from the bottom to the top.

Do not extend more than one sliding device at a time.

The center of gravity for an extended unit cannot exceed 16 inches from the face of the cabinet. If an extended device exceeds this distance, the configured cabinet might be unstable.

The maximum allowable weight for devices on slides is dependant upon the specific slide. Do not install sliding devices exceeding maximum allowed weight.

WARNING (CONT.):



Plug cabinet power cords into electrical outlets that are located near the cabinet and are easily accessible.

Connect all devices installed in a rack to power devices installed in the same cabinet. Do not plug into a power device installed in a different cabinet.

Check the equipment power rating before plugging into a cabinet power device. Check that both the voltage range and current draw are within the limitations of the power device. The voltages of the power device receptacles are typically equal to the voltages of the UPS or AC source.

To avoid overloading, check the total input current rating of the equipment being connected to a power device to ensure that it does not exceed the maximum rating of the power strip or any UPS to which it may be connected.

Each installed server or other device might have more than one power cord. Be sure to disconnect all power cords in the cabinet before servicing any device in the cabinet.

CAUTION:



Removing components from the top portion of the rack improves cabinet stability during relocation. Follow these general guidelines whenever you relocate a populated cabinet within a room or building:

Reduce the weight of the rack by removing equipment starting at the top of the rack. When possible, restore the cabinet to the configuration as you received it. If this is not possible or the configuration is unknown, remove all devices in the 11U position and above before moving the cabinet.

Inspect the route that you plan to take and eliminate any potential hazards.

Verify that the route that you choose to move the rack cabinet can support the weight of the loaded rack cabinet, which may exceed 2500 lbs.

Verify that all doorways can accommodate the cabinet.

Ensure that all devices, drawers, doors, and cables are secure.

Ensure that all leveling feet are raised to their highest position.

Ensure that the floor mounting brackets are removed (see Figure 6).

Once the cabinet is in its new location, repopulate the cabinet from the lowest position to the highest position.

If long distance relocation is required, pack the cabinet in the original packaging material, or equivalent. Also, use the floor mounting brackets to bolt the cabinet to the pallet.

Chapter 1 Site Preparation

Check Facility Provisions

Ensure that the following conditions are met:

- Floor is level and of sufficient strength to support the rack and your equipment. At maximum gross weight, the floor must be able to support 1000 lb/in².
- A qualified professional should complete site electrical power supply set-up. Ensure the types of outlets are consistent with the type of plugs on the power devices to be used.
- Check with a qualified HVAC technician to make sure the environment will support the heat load of the products being installed in the cabinet.
- Select a location for the cabinet that will allow adequate space for the door to open freely and slide-mounted equipment to be extended.
- Check that the site can accommodate the cabinet footprint and mounting locations according to the illustrations in Figure 3 and Figure 4.

Rack Cabinet Footprint and Mounting Locations for:

Cabinet with Full Rear and Front Doors

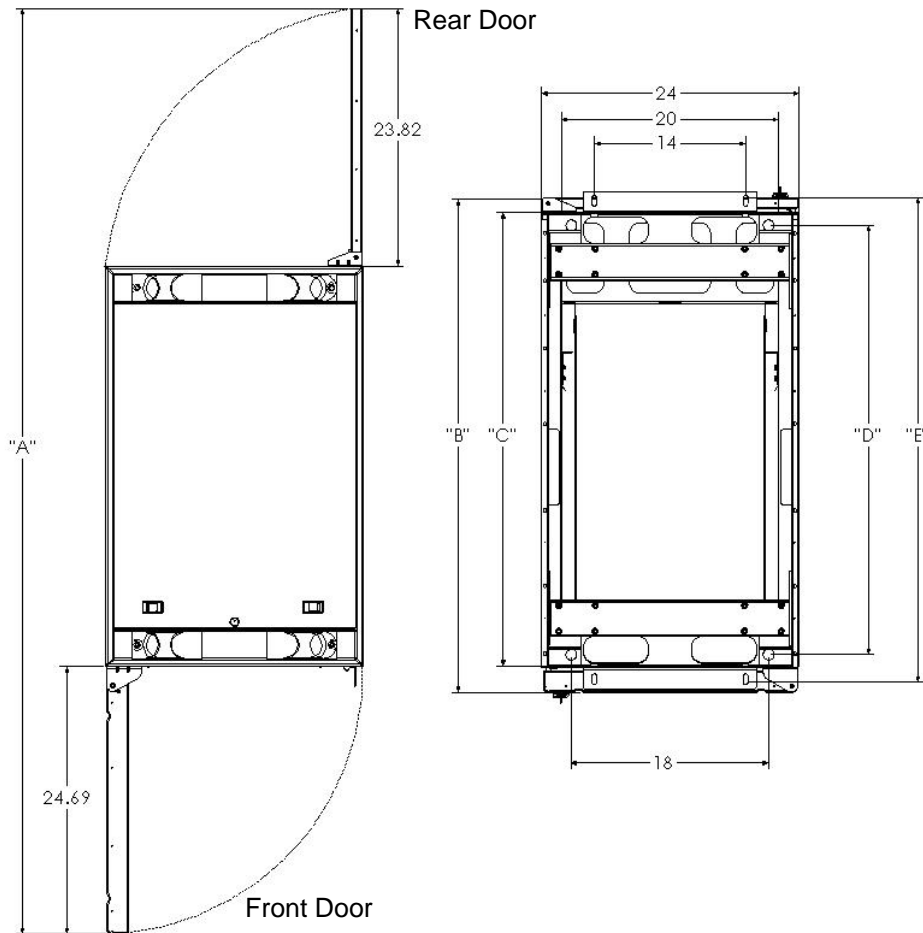


Figure 3

42U X 37DP (TOP VIEW) and 42U X 42DP (BOTTOM VIEW) Shown

Table 1

Cabinet Dimensions			
DIM	37" CABINET	42" CABINET	45" CABINET
A	86"	91"	82"
B	41"	46"	49"
C	37"	42"	45"
D Leveling Feet	35"	40"	43"
E Floor mounting brackets	38" or 40"	43" or 45"	46" or 48"

Rack Cabinet Footprint and Mounting Locations for:

Cabinet with Split Rear Door

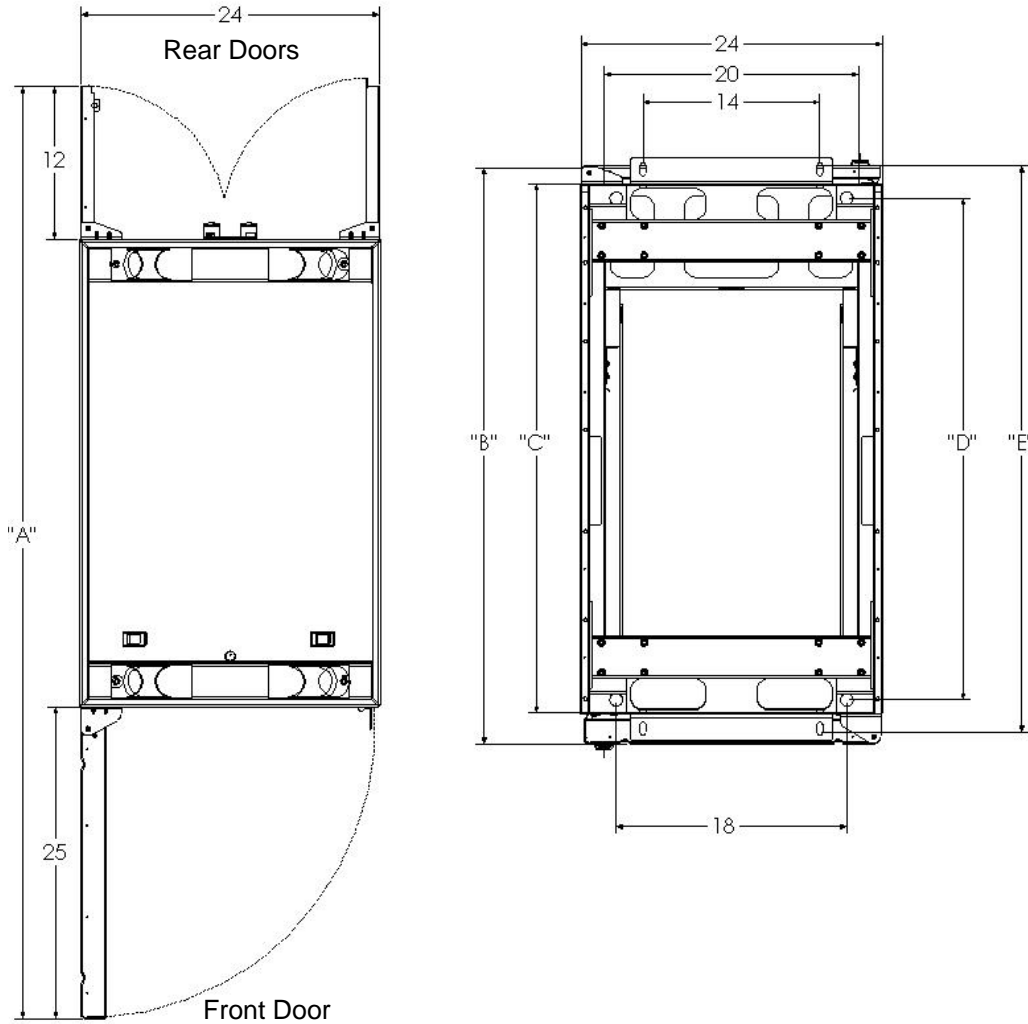


Figure 4
42U X 37DP (TOP VIEW) and 42U X 42DP (BOTTOM VIEW) Shown

Table 2

Cabinet Dimensions			
DIM	37" CABINET	42" CABINET	45" CABINET
A	74"	79"	82"
B	41"	46"	49"
C	37"	42"	45"
D Leveling Feet	35"	40"	43"
E Floor mounting brackets	38" or 40"	43" or 45"	46" or 48"

Chapter 2 Receiving and Unpacking

Check package and receiving area

- Verify contents and condition.
- Move the packaged cabinet on its pallet as close to its final destination as possible.
- Be sure there is enough room to unload the cabinet from its packaging. In front of the pallet, it requires at least 7 feet for standard packaging (with or without pallet) and 13 feet for integration (crate) packaging to unload the cabinet.
- Many SharkRack cabinets come on casters, which allow the cabinet to be rolled to its destination after unpacking.

Note:

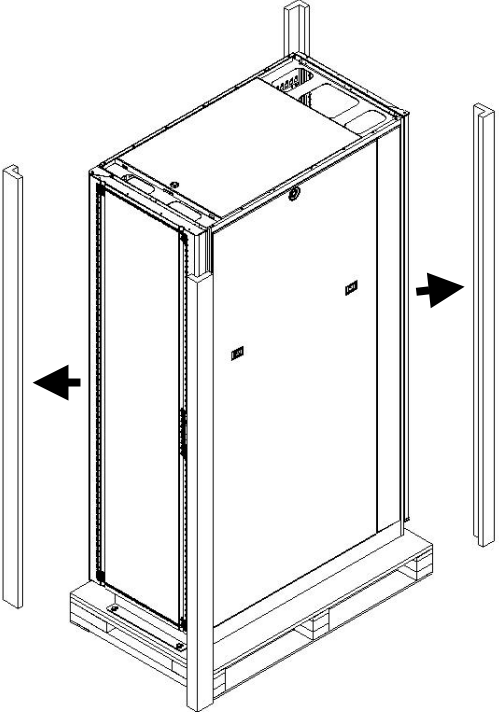
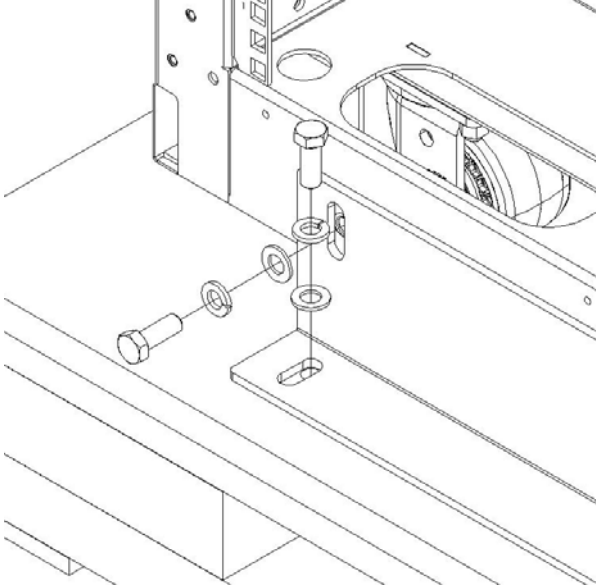
Ensure clear passage from the receiving site to the uncrating site.

Do not lift an unpackaged cabinet with a forklift.


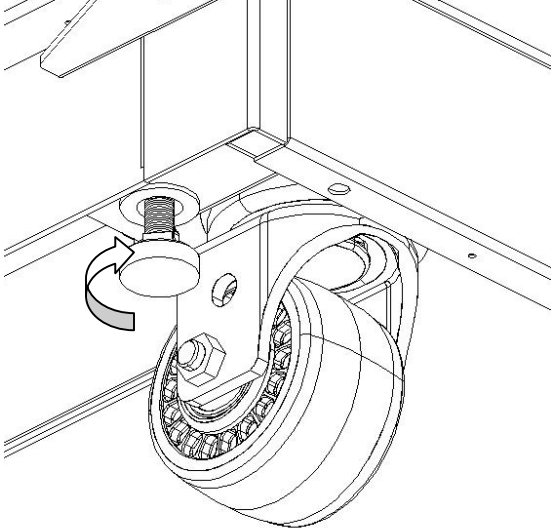
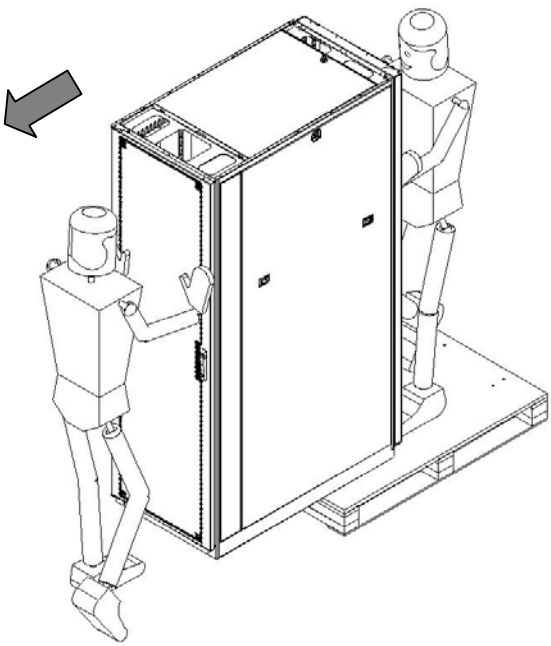
Do not move the packaged cabinet without adequate assistance.

Be sure leveling feet are raised before rolling to prevent tipping or damage to the feet.


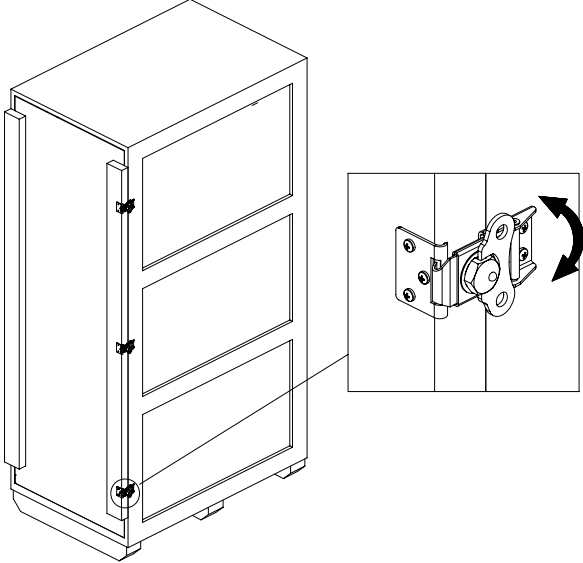
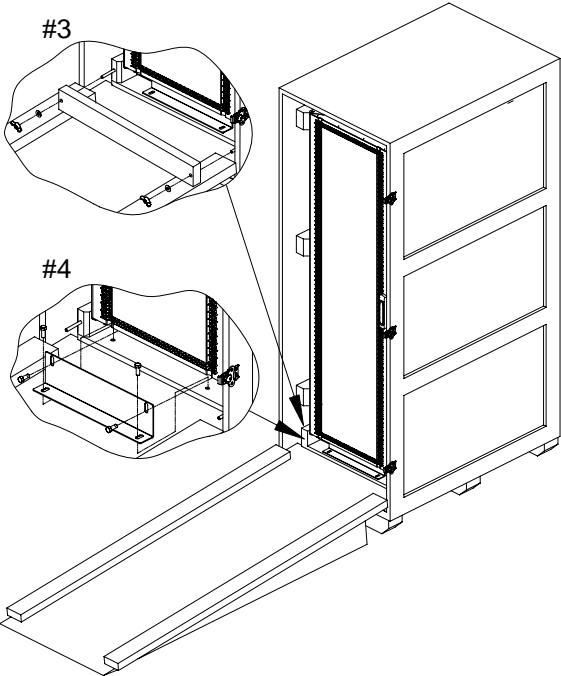
Unpacking Instructions- Standard Packaging

Step	Detail
<p>Note: Unpacking of a cabinet requires at least two people.</p> <p>There must be at least 7 feet of clear area in front of the loaded pallet to unload the cabinet.</p> <ol style="list-style-type: none">1. Unwrap packaging material from around the cabinet	 <p>Figure 5 42U X 42in DP Shown</p>
<ol style="list-style-type: none">2. Remove the (4) bolts securing the front Floor Mounting Bracket to the pallet and cabinet.3. Repeat Step 2 for the rear Floor Mounting Bracket	 <p>Figure 6 42U X 42in DP Shown Removal of Floor Mounting Bracket.</p>


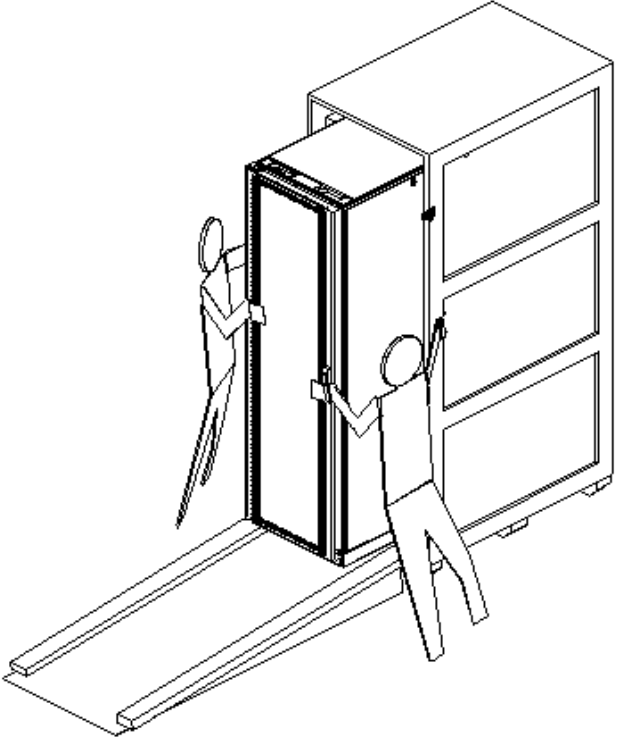
SharkRack Enclosure Installation Guide

Step	Detail
<p data-bbox="151 279 240 365"></p> <p data-bbox="256 296 735 352">CAUTION: Be sure the leveling feet are fully raised to prevent accidental tipping.</p>	 <p data-bbox="1057 789 1182 825">Figure 7</p> <p data-bbox="922 825 1317 852">View of Caster and Leveling Foot</p>
<p data-bbox="155 873 735 1010">4. With one person on each side of the enclosure, carefully roll it toward the rear of the pallet until the rear casters clear the back edge of the pallet. Continue to slide the enclosure rearward until the rear casters make contact with the floor.</p> <p data-bbox="155 1024 735 1108">5. While one person carefully tips the enclosure slightly away from the pallet, have the other person pull the pallet away from the enclosure.</p> <p data-bbox="155 1123 735 1180">(Optional) Store all packing materials in a safe place for future use.</p>	 <p data-bbox="1057 1556 1182 1591">Figure 8</p> <p data-bbox="1003 1591 1235 1619">42U X 42DP Shown</p>

Unpacking Instructions- Integration Packaging

Step	Detail
<p> WARNING: A fully loaded cabinet is very heavy. Take proper precautions when moving the cabinet</p> <hr/> <p>Note: Unpacking of a cabinet requires at least two people.</p> <hr/> <p>There must be at least 13 feet of clear area in front of the loaded crate to unload the cabinet.</p> <ol style="list-style-type: none"> 1. Open the Crate. Loosen the (6) clips securing the front of the crate. The front of the crate is used as a ramp to unload the cabinet. 	 <p style="text-align: center;">Figure 9 Shipping Crate Shown for 42U X 37DP Cabinet</p>
<ol style="list-style-type: none"> 2. Position the loading ramp onto the front of the crate. 3. Remove the (2) wing nuts securing the piece of wood at the base of the cabinet. 4. Remove the (4) bolts securing the front Floor Mounting Bracket to the crate and cabinet. 	 <p style="text-align: center;">Figure 10 Shipping Crate with 42U X 37DP Cabinet Shown</p>

Unpacking Instructions- Integration Packaging (cont.)

Step	Detail
<p data-bbox="149 363 240 447"></p> <p data-bbox="256 384 734 441">CAUTION: Be sure the leveling feet are fully raised to prevent accidental tipping.</p> <p data-bbox="256 453 542 485">(See Figure 7 for details.)</p> <hr/> <p data-bbox="149 541 683 598">5. With one person on each side of the enclosure, carefully roll it out of the wooden crate.</p> <p data-bbox="149 611 719 642">6. Unwrap packing material from around the cabinet.</p> <p data-bbox="149 655 719 711">(Optional) Store all packing materials in a safe place for future use.</p>	 <p data-bbox="831 1186 1409 1251">Figure 11 Shipping Crate with 42U X 37DP Cabinet Shown</p>

Chapter 3 Configure Accessories into the Cabinet

Configure Optional Accessories

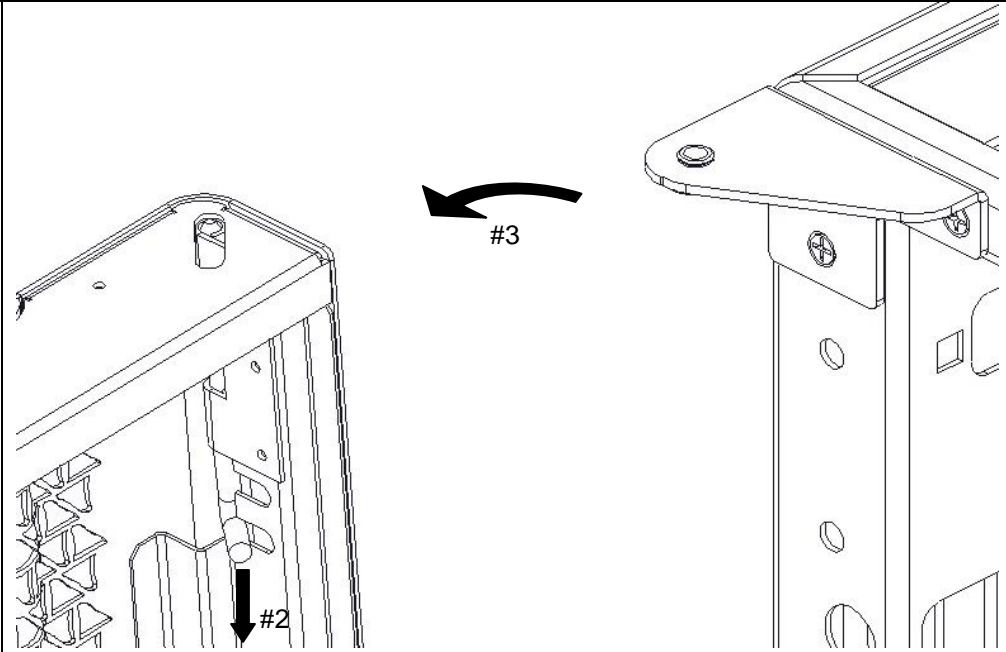
The SharkRack cabinet can be configured using multiple optional accessories. The configuration depends on your specific application and may vary from cabinet to cabinet. The following list of processes is organized to help guide you through the typical steps of configuring optional accessories. Since each configuration is different, some processes may be excluded. Also, some processes will refer back to previous processes.

- Installing and Removing Doors
- Changing Door Handles
- How to Reverse the Door Swing
- Adjusting the Leveling Feet
- Installing the Retractable Tip Guard
- Installing the Floor Mounting Brackets
- Adjusting or Replacing the Mounting Rails
- Installing Side Mounting Brackets
- How to Remove or Install a Top Panel
- How to Remove or Install Side Panels
- Installing a Grounding Kit
- Using the SharkTRAC™ and SharkSNAP™
- Installing a 19 inch EIA Power Strip
- Cable Management
- Installing a MultiBay Kit

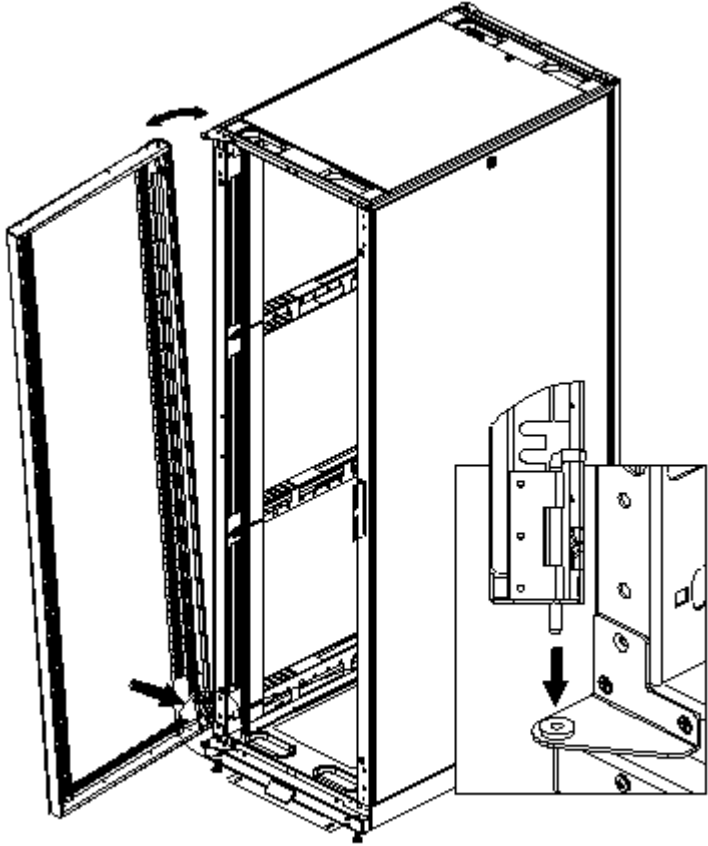

Tools Required for Cabinet setup:

- #2 Phillips Screwdriver
- 1/2" – 9/16" Open End Wrench (Included with leveling foot kit)
- 9/16" Hex Socket and Ratchet with 3" Extension Bar (Optional)
- Straight Blade Screwdriver (Optional for adjusting the leveling feet)

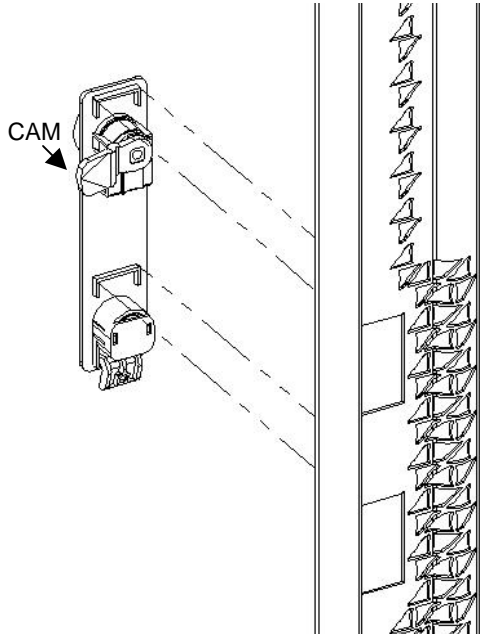
Installing and Removing Doors

Step	Detail
<p>To remove doors:</p> <ol style="list-style-type: none">1. Open the door.2. Pull down on the spring-loaded hinge pin attached to the top of the door.3. Move top of door away from enclosure and lift the bottom of door up from the cabinet and set aside.	 <p>The diagram illustrates the process of removing a door from a rack enclosure. On the left, a perspective view shows a door being pulled down from its top edge, indicated by a downward-pointing arrow labeled '#2'. On the right, a detail view shows the top corner of the door being moved away from the enclosure, indicated by a curved arrow labeled '#3'. The enclosure's internal structure, including a vertical support post with several circular cutouts, is visible.</p> <p>Figure 12 42U X 37DP Shown</p>

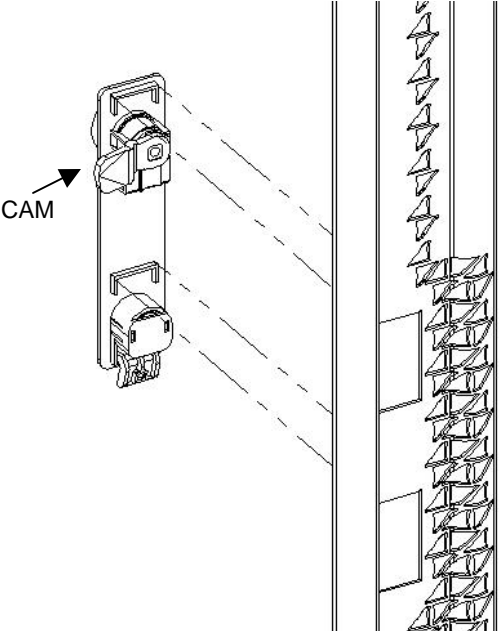
Installing and Removing Doors (cont.)

Step	Detail
<p>To install doors:</p> <ol style="list-style-type: none">1. Align the lower door hinge pin with the hole in the bottom hinge bracket and slide the hinge pin into the hole.2. Pull down the upper hinge pin.3. Align the upper hinge pin with the hole in the upper hinge bracket and release the hinge pin into the hole.4. Make sure the door opens and closes properly.	
<p> CAUTION: Ensure that hinge pins are secured into the hinge brackets. If not properly installed the door may unexpectedly fall.</p>	<p>Figure 13 42U X 37DP Shown</p>

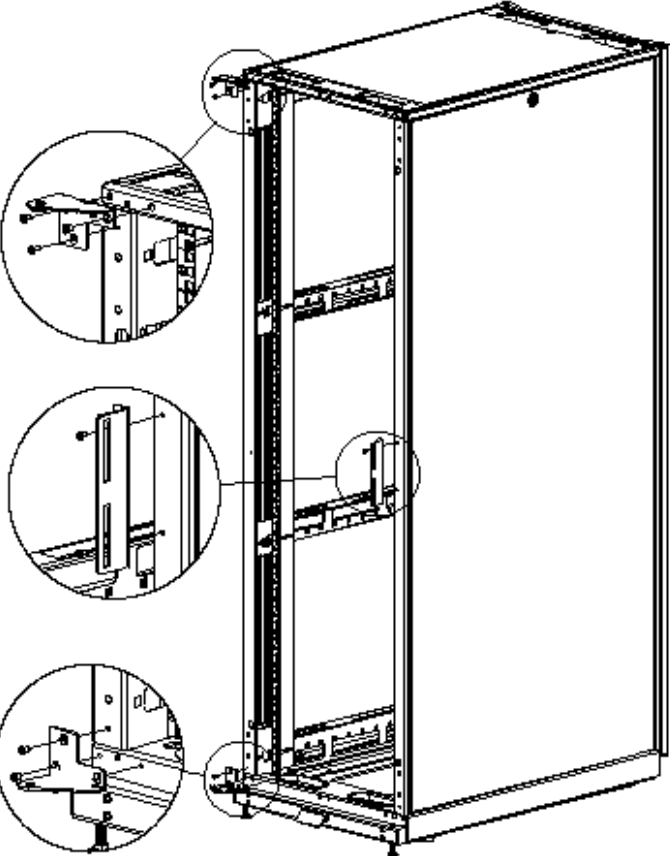
Door Handles

Step	Detail
<p>Remove door handle:</p> <p>To enhance your cabinet, SharkRack offers an optional line of electronic door handles which use HID or keypad entry. These locks can be networked together for remote management and access tracking. To install follow the steps.</p> <ol style="list-style-type: none">1. Open the door.2. Rotate the handle to align the cam pointing down.3. Use a screwdriver to push the snaps inward. Lift the handle off the door.4. Install new door handle. <hr/> <p>Note: The installation of some door handles may require additional steps. Consult the installation guide with for your specific door handle option.</p>	 <p>The diagram illustrates the removal of a door handle. On the left, a detailed view of the handle assembly is shown. An arrow labeled 'CAM' points to a small protrusion on the handle. On the right, a perspective view of a cabinet door with a handle is shown. Dashed lines connect the handle in the perspective view to the detailed view on the left, indicating the specific part being discussed.</p> <p>Figure 14 Snap-In Handle and Lock</p>


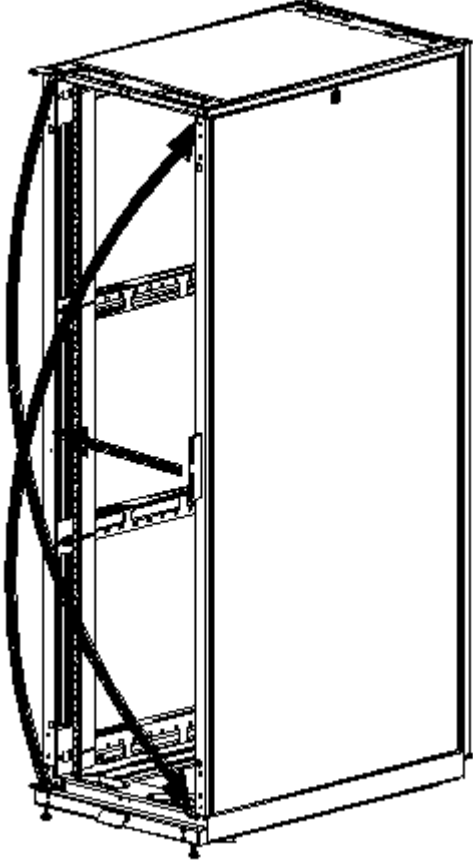
How to Reverse the Door Swing

Step	Detail
<p>Reverse the door handle:</p> <ol style="list-style-type: none">1. Open the door.2. Rotate the handle to align the cam pointing down.3. Use a screwdriver to push the snaps inward. Lift the handle off the door.4. Remove the cam screw securing the cam and rotate the cam 180°. Re-secure with the cam screw.5. Rotate the door handle assembly 180° and reinstall it.	 <p>The diagram shows a vertical door handle assembly. On the left, a callout shows a detailed view of the handle's internal mechanism, with an arrow pointing to a component labeled 'CAM'. The main drawing shows the handle mounted on a door edge, with dashed lines indicating its alignment with the door's internal structure. The door is shown with a mesh-like texture, and the handle is positioned vertically.</p> <p>Figure 15 Snap-In Handle and Lock</p>

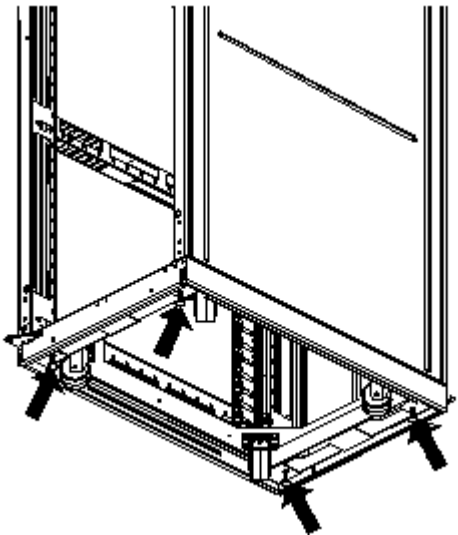
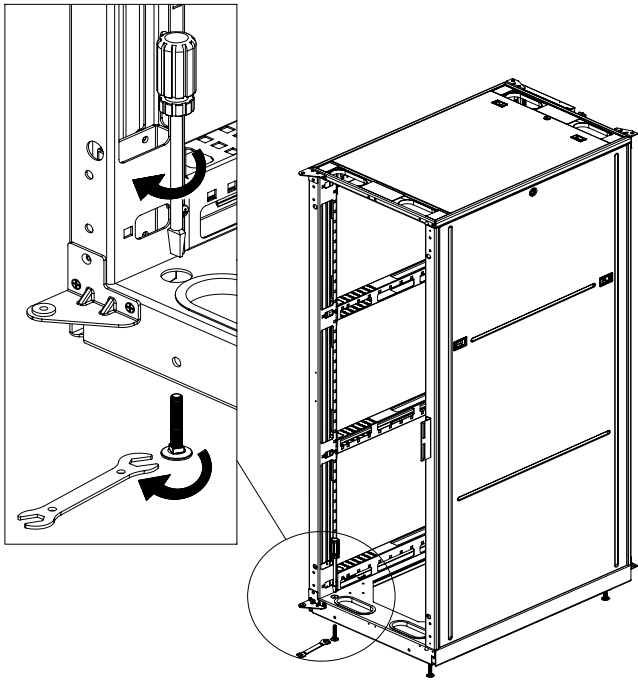
SharkRack Enclosure Installation Guide

Step	Detail
<p>Reverse the door hinge brackets:</p> <ol style="list-style-type: none">4. Remove the door. (See “Installing and Removing Doors” on page 15)5. Use a Phillips head screwdriver to remove the hinge pin brackets and latch bracket(s) from the cabinet frame.	 <p>The diagram shows a 42U X 37DP SharkRack enclosure. Three circular callouts provide detailed views of the hinge mechanism on the left side of the cabinet. The top callout shows the hinge pin bracket being removed from the upper frame. The middle callout shows the hinge pin bracket being removed from the middle frame. The bottom callout shows the hinge pin bracket being removed from the lower frame. The main drawing shows the enclosure with the door removed, and the hinge brackets are clearly visible on the left side of the cabinet frame.</p> <p>Figure 16 42U X 37DP Shown</p>

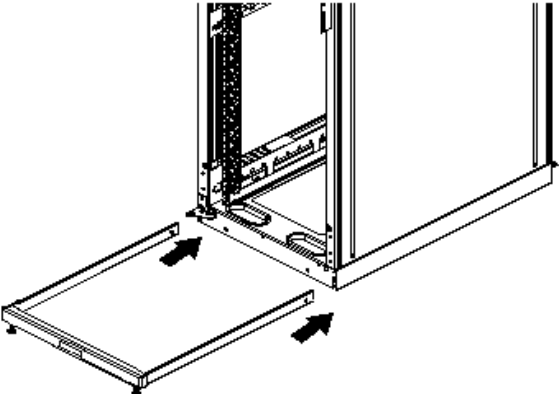
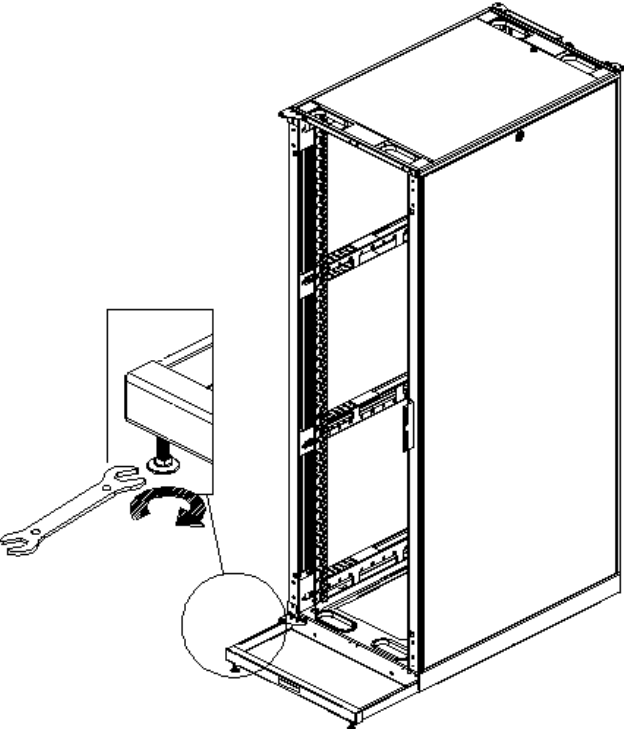
How to Reverse the Door Swing (cont.)

Step	Detail
<p>6. Reinstall the hinge pin brackets and latch bracket(s) on the opposite side of the cabinet.</p> <p>7. Reinstall the door.</p> <hr/> <p> CAUTION: Ensure that the door and its hinge pins are secured into the hinge brackets after the door is reinstalled.</p>	 <p>Figure 17 42U X 37DP Shown</p>

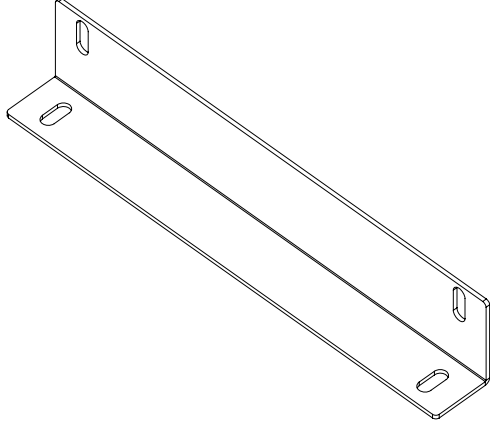
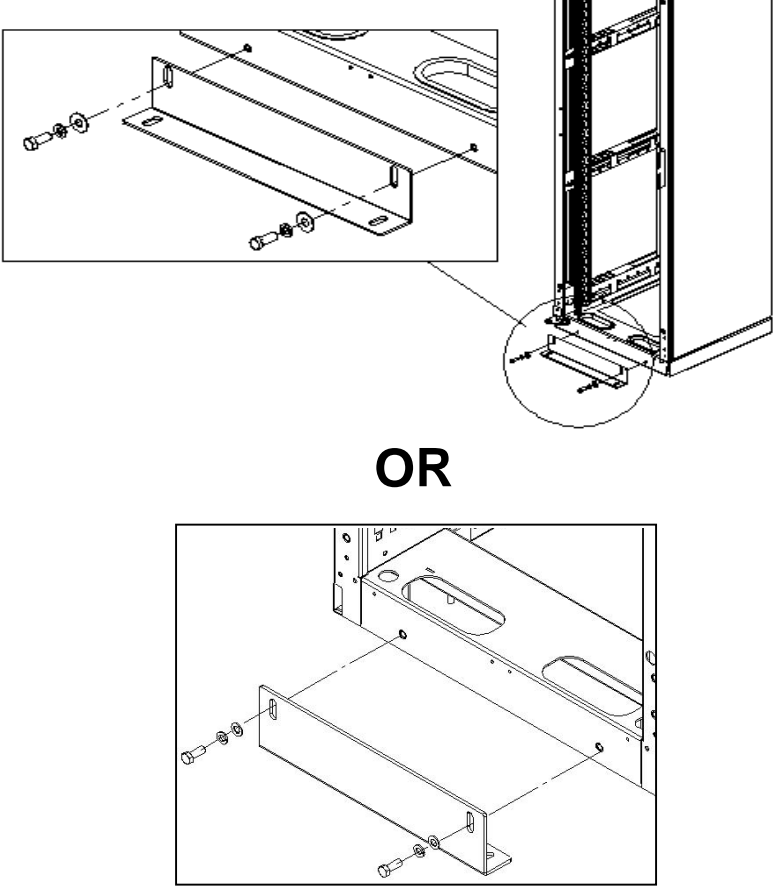
Adjusting the Leveling Feet

Step	Detail
<p>The leveling feet help stabilize the cabinet and keep the cabinet level on uneven floors. This should be done before you install products into the cabinet.</p> <ol style="list-style-type: none">1. Locate the (4) leveling feet. There is one in each corner as shown.2. Loosen the Jam Nut.	 <p>The diagram shows a perspective view of the bottom of a cabinet. Four leveling feet are attached to the base, one in each corner. A dashed line indicates the vertical axis of one of the feet.</p> <p style="text-align: center;">Figure 18 42U X 37DP Shown</p>
<ol style="list-style-type: none">3. Lower the leveling feet. Rotate the leveling feet clockwise from inside the cabinet using a straight blade screwdriver or from underneath the cabinet using the supplied 9/16" wrench. The levelers should plant firmly to the floor.	 <p>The diagram consists of two parts. On the left, a close-up shows a straight blade screwdriver being used to rotate a leveling foot clockwise. On the right, a larger perspective view of the cabinet shows a 9/16" wrench being used to adjust a leveling foot from underneath. A circular callout highlights the wrench's position.</p> <p style="text-align: center;">Figure 19 42U X 37DP Shown</p>

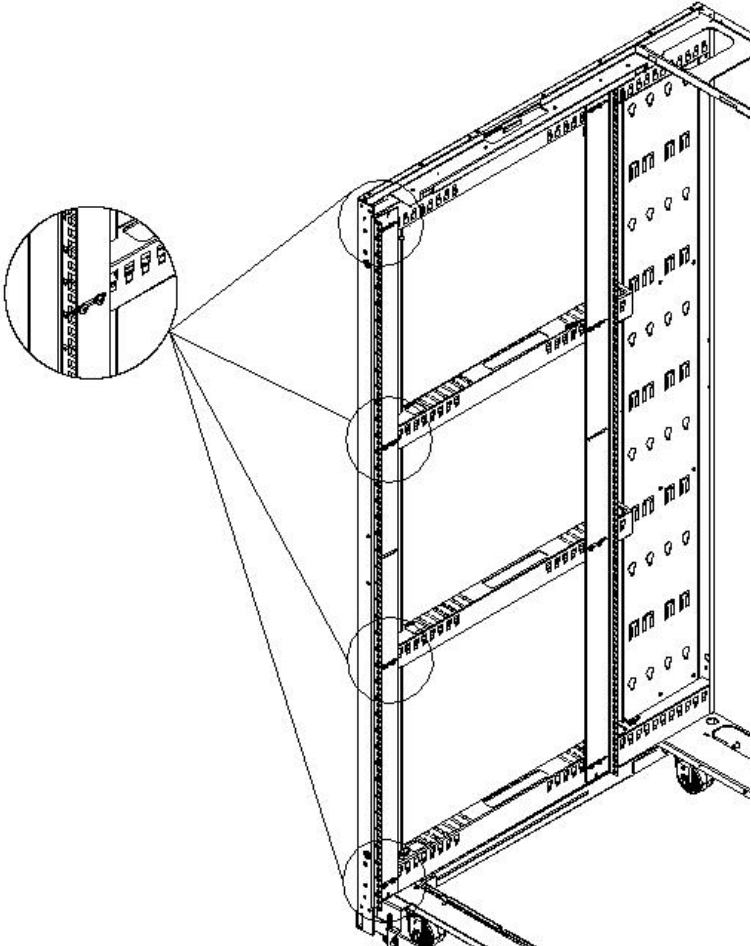

Installing the Retractable Tip Guard

Step	Detail
<p>The Retractable Tip Guard should be used when the cabinet is not secured to the floor and equipment is being slid in and out of the cabinet. This feature is used to prevent the cabinet from tipping over.</p> <p>1. Insert the legs of the tip guard into the base of the cabinet. Detent the spring latches towards the rear of each leg.</p>	 <p style="text-align: center;">Figure 20 42U X 37DP Shown</p>
<p>2. Check the operation of the Retractable Tip Guard. It should freely cycle through its full range of motion.</p>	 <p style="text-align: center;">Figure 21 42U X 37DP Shown</p>
<p>Note: Some adjustment of the center section may be required for smooth operation. To adjust loosen the (4) screws at the front of the Tip Guard. Reposition the pieces as required. Tighten the screws.</p>	
<p>Note: When in use, remember to fully lower both leveling feet on the retractable stabilizer kit until they are firmly planted on the floor.</p>	

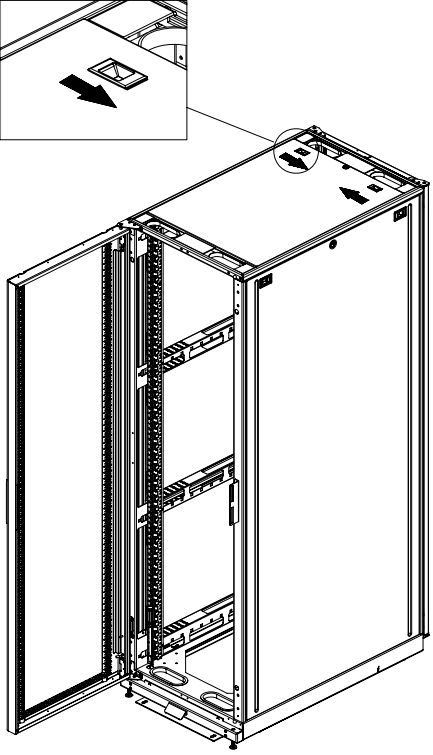
Installing the Floor Mounting Brackets

Step	Detail
<p>The Floor Mounting Brackets should be used when sliding equipment in and out of the cabinet and no other stabilizing provisions are in place. This safety feature is used to prevent the cabinet from tipping over or to keep it in a fixed location. Consult a contractor or trained professional on the best method of fastening your cabinet to the floor.</p> <p>1. Prepare the location. Check the location to make sure the area is suitable to bolt down the cabinet. (Refer to Site Preparation Information).</p>	 <p style="text-align: center;">Figure 22 Floor Mounting Bracket</p>
<p>2. Secure the Floor Mounting Brackets to the front and rear of the cabinet base using supplied hardware.</p> <p>3. Have a qualified professional fasten the brackets to your data center floor.</p>	 <p style="text-align: center;">OR</p> <p style="text-align: center;">Figure 23 Floor Mounting Bracket on 42U X 37DP cabinet</p>

Adjusting or Replacing the Mounting Rails

Step	Detail
<p>Adjusting the mounting rails:</p> <p>The mounting rails are factory set at 29.12 inches apart. However, both the front and rear mounting rails are adjustable to any depth within the cabinet.</p> <ol style="list-style-type: none"> 1. Loosen the screws securing each mounting rail using a Phillips screwdriver. 2. Adjust the mounting rail to the desired location. Make sure each mounting rail is adjusted parallel and square inside the cabinet. 3. Tighten the screws. 4. Repeat steps for any other rail to be adjusted. <p>Replacing the mounting rails:</p> <p>To replace any of the mounting rails you must:</p> <ol style="list-style-type: none"> 1. Loosen the screws securing the mounting rail. 	
<p> CAUTION: Remove bottom screws first to help eliminate the possibility of the rail falling on your head.</p> <ol style="list-style-type: none"> 2. Remove the rail and replace with another style rail available from SharkRack. 3. Secure the mounting rail with the screws that were previously removed. 	<p>Figure 24 Section view of 42U X 37DP Cabinet</p>

How to Remove or Install a Top Panel

Step	Detail
<p>The Top Panel can be removed.</p> <p>To remove a Top Panel:</p> <ol style="list-style-type: none">1. Unlock the Top Panel using the key.2. With the key turned in the unlocked position, lift up until you can grab the top panel with your free hand. <hr/> <p>Note: If using a grounding kit, remove the cable prior to lifting the panel from the Cabinet Frame. See "Installing a Grounding Kit" for details.</p> <hr/> <ol style="list-style-type: none">3. Remove the Top Panel and set aside. <p>To install a Top Panel:</p> <ol style="list-style-type: none">1. Set the Top Panel on the top of the Cabinet Frame. When installed properly it should sit flush with the rest of the cabinet2. Lock the Top Panel using the key, if preferred.	 <p>Figure 25 42U X 37DP Cabinet Shown</p>

How to Remove or Install Side Panels

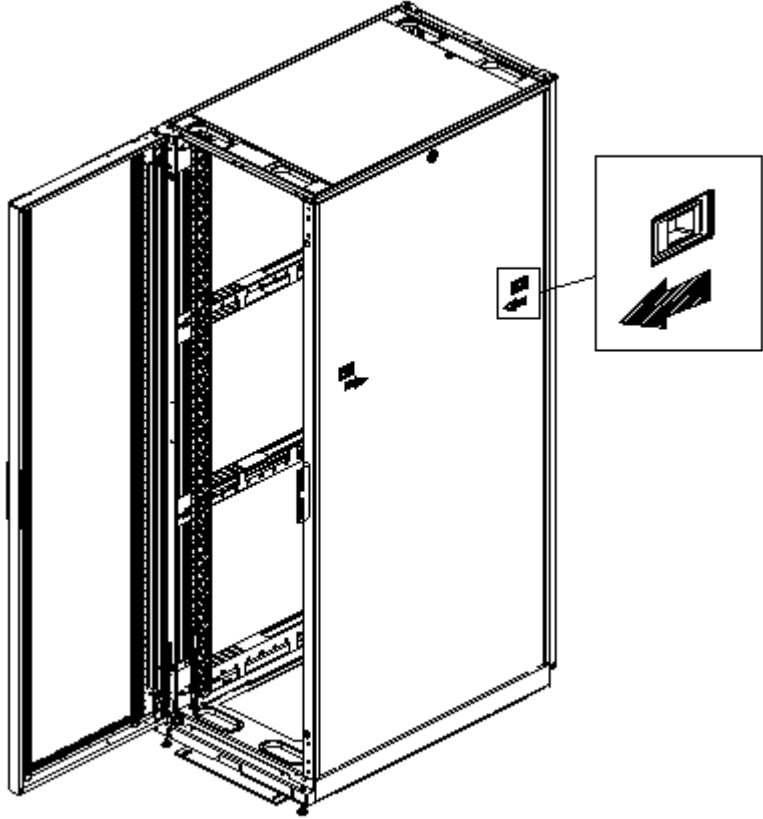
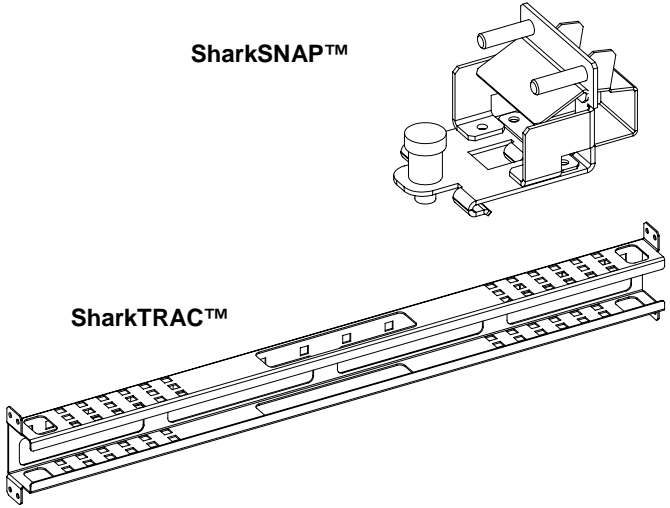
Step	Detail
<p>The Side Panels can be removed to provide further access to equipment mounted inside the cabinet. This is a great way to get added access for cable management or installing powerstrips.</p> <p>To remove a Side Panel:</p> <ol style="list-style-type: none"> 1. Unlock the Side Panel using the key, if necessary. 2. Slide both Side Panel latches inward towards each other at the same time and tilt the panel outward. 	
<p>Note: If using a grounding kit, remove the cable prior to lifting the panel from the Cabinet Frame. See "Installing a Grounding Kit" for details.</p> <ol style="list-style-type: none"> 3. Release the latches and lift the Side Panel up and off the cabinet frame. 4. Remove the Side Panel and set aside. <p>To install a Side Panel:</p> <ol style="list-style-type: none"> 1. Approaching the cabinet from the side, set the bottom edge of the Side Panel onto the Cabinet Frame 2. The bottom edge of the panel must securely engage with the cabinet frame before pushing the top of the panel forward into place. 3. Lock the panel using the key, if preferred. 	

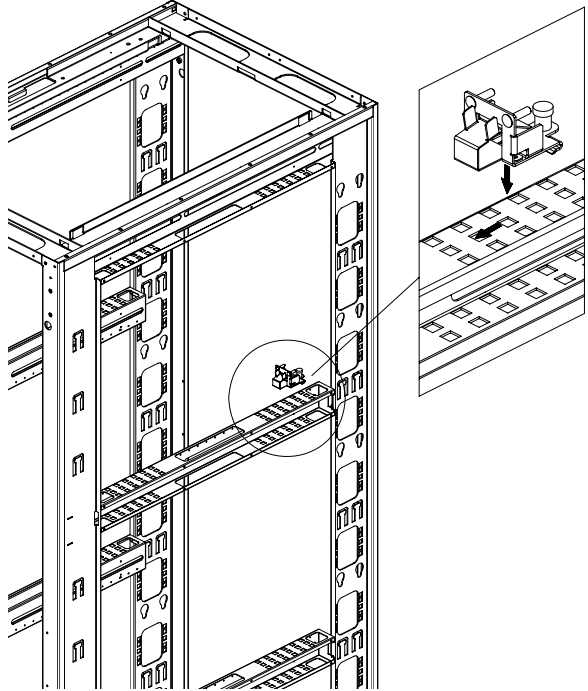
Figure 26
42U X 37DP Cabinet Shown

Installing a Grounding Kit

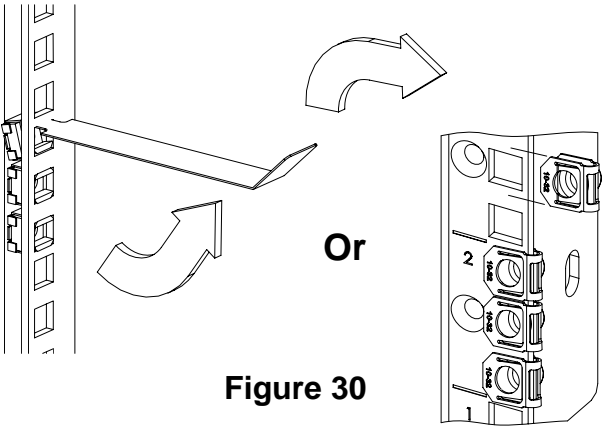
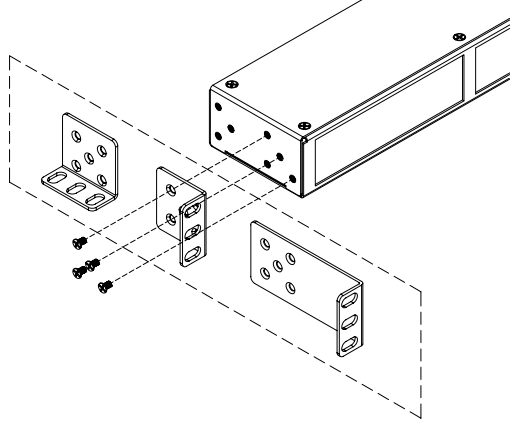
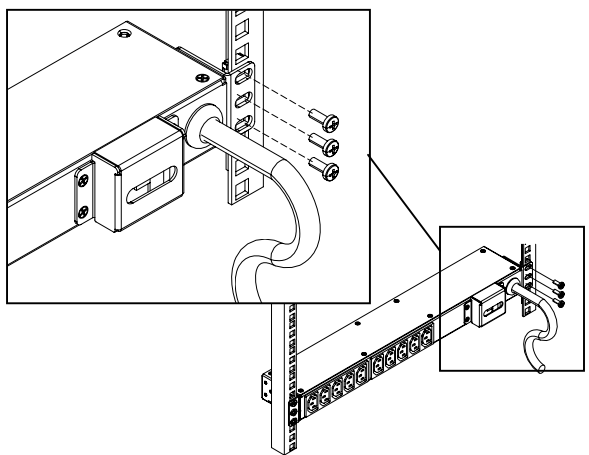
Step	Detail
<p>Grounding points are provided on the various cabinet components so that each component can be electrically bonded to the frame.</p> <p>Detail A: Shows how to route the grounding cables through the frame of the cabinet. Connection (1) attaches to either of the door assemblies. Connection (2) attaches to the side panel</p> <p>Detail B: Shows where connection (2) attaches to the corner of the Side Panel</p> <p>Detail C: Shows how to route the grounding cable to the top panel.</p> <p>Detail D: Shows the door grounding cable being routed through the face of the corner post (reverse side of Detail A).</p>	<p style="text-align: center;">Figure 27 Grounding Points 42U X 37DP Cabinet Shown</p>

Using the SharkTRAC™ and SharkSNAP™

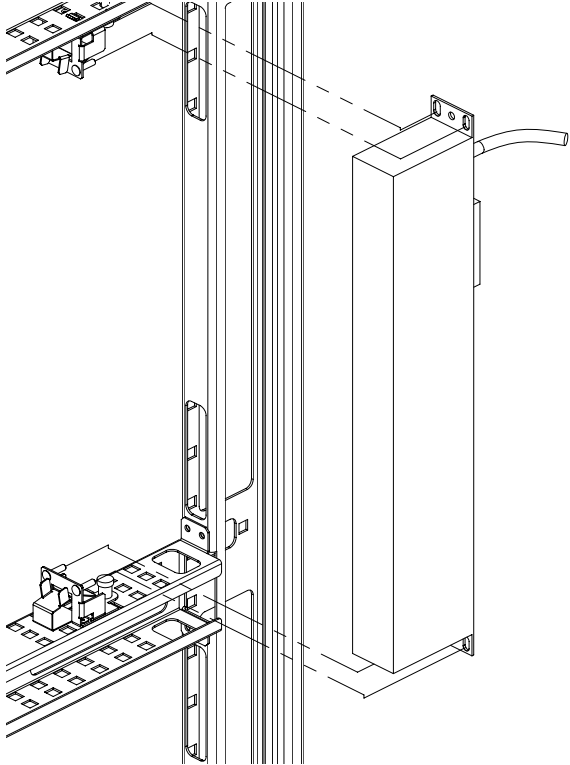
Step	Detail
<p>The SharkTRAC™ is a patent pending platform consisting of a series of holes, which allows attachment of various devices.</p> <p>We have also developed a family of SharkSNAP™ tool-less clip-in devices that attach directly to the SharkTRAC™. SharkSNAP™ devices reduce time and hassle when installing things such as power strips, patch panels, routers, and environmental monitoring products.</p>	 <p style="text-align: center;">Figure 28</p>

<ol style="list-style-type: none"> 1. To install a SharkSNAP™, align the small metal fingers over the holes of the SharkTRAC™. Drop the fingers through the holes and slide the SharkSNAP™ into the track until the retention pin snaps into place. 2. To remove a SharkSNAP™, pull up on the retention pin and slide the SharkSNAP™ back and away from the SharkTRAC™. 	 <p style="text-align: center;">Figure 29</p>
---	--

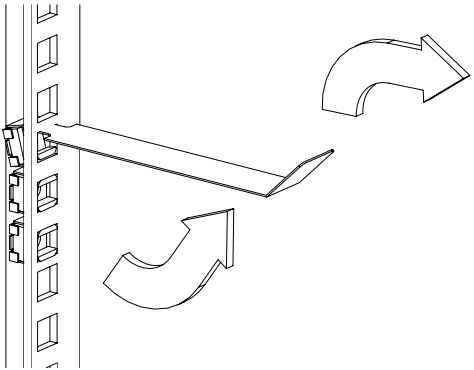
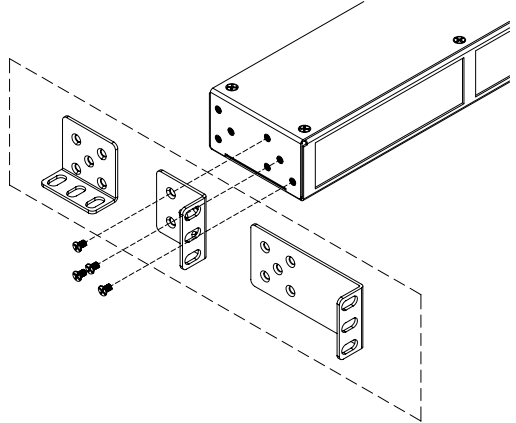
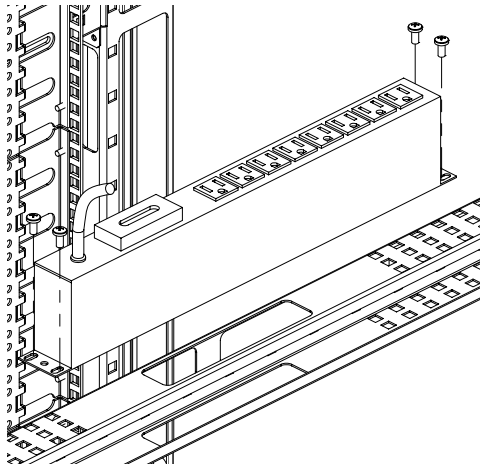
Installing a Typical 19 inch EIA Power Strip

Step	Detail
<p>1. Secure to the Cabinet Mounting Rails</p> <p>1a. (As required) Install 10-32 cage nuts. Some mounting rails require the use of cage nuts; install them into the appropriate holes as shown.</p> <p>Or</p> <p>Install 10-32 clip nuts as shown. Some mounting rails require the use of clip nuts; install them into the appropriate holes as shown.</p>	 <p style="text-align: center;">Or</p> <p style="text-align: center;">Figure 30</p>
<p>1b. (As required) Adjust the mounting brackets orientation. Remove the hardware from the brackets as required. Rotate the mounting brackets as required. Reinstall the hardware.</p>	 <p style="text-align: center;">Figure 31</p>
<p>1c. Secure the strip using (6) 10-32 x 1/2 inch panhead screws.</p> <p>1d. Connect necessary cables.</p>	 <p style="text-align: center;">Figure 32</p>

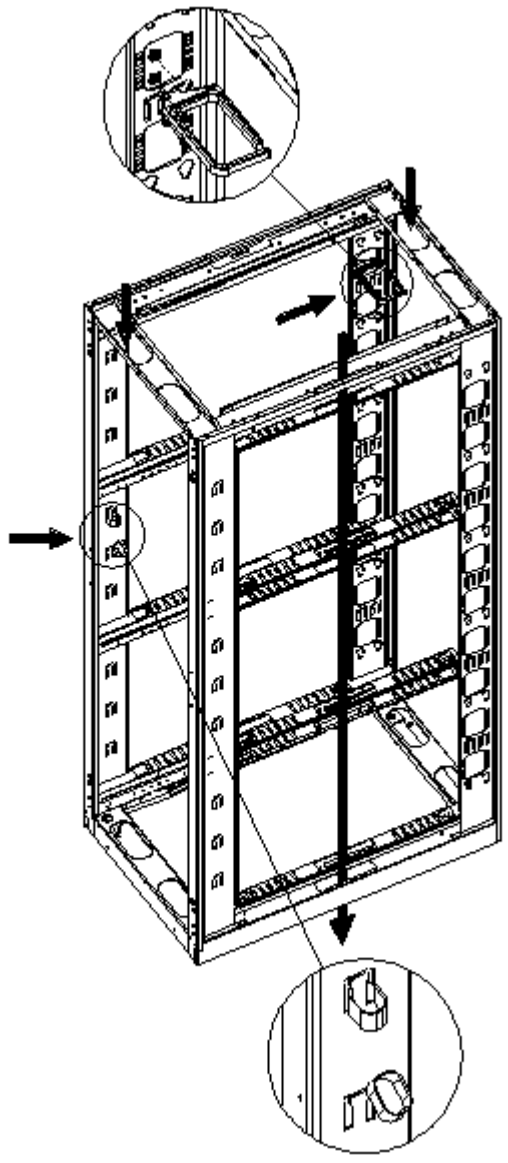
Installing a Typical 19 inch EIA Power Strip (cont.)

Step	Detail
<p data-bbox="172 342 683 407">2. Secure to the SharkTRAC™ using SharkSNAP™ Brackets</p> <hr/> <p data-bbox="172 468 792 525">Note: There must be two SharkSNAP™ brackets installed which allows a power strip to clip in-between them.</p> <hr/> <p data-bbox="172 583 748 663">2a. Install a pair of SharkSNAP™ brackets into the SharkTRAC™. See “Using the SharkTRAC™ and SharkSNAP™ on page 28 for further details.</p> <p data-bbox="172 680 808 816">2b. Approach the SharkSNAP™ brackets with the power strip. Align the pins of the SharkSNAP™ bracket with the screw holes on the strip mounting brackets and push the strip straight onto the bracket. There is a spring that holds the strip into place.</p> <p data-bbox="172 833 501 861">2c. Connect necessary cables.</p>	 <p data-bbox="1089 1115 1230 1150">Figure 33</p>

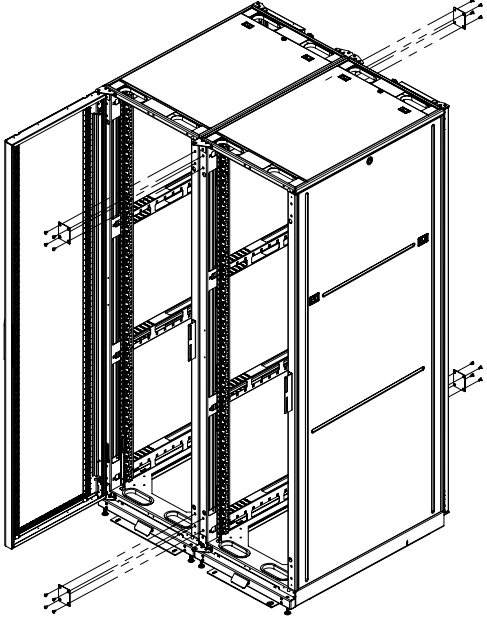
Installing a Typical 19 inch EIA Power Strip (cont.)

Step	Detail
<p>3. Secure to the SharkTRAC™ using screws</p> <p>3a. Install 10-32 cage nuts. The SharkTRAC™ requires the use of cage nuts; install them into the appropriate holes using the method shown.</p>	 <p style="text-align: center;">Figure 34 Cage Nut installation</p>
<p>3b. (As required) Adjust the mounting brackets orientation. Remove the hardware from the brackets as required. Rotate the mounting brackets as required. Reinstall the hardware.</p>	 <p style="text-align: center;">Figure 35 Mounting Bracket</p>
<p>3c. Secure the strip using (6) 10-32 x 1/2 inch panhead screws.</p> <p>3d. Connect necessary cables.</p>	 <p style="text-align: center;">Figure 36 PDU installation</p>

Cable Management

Step	Detail
<p>The SharkRack cabinet has been designed with integrated cable management. There are numerous provisions for running cables in the corner posts of the frame as well as out the top, bottom, in both the front and back of the cabinet. There are also many places that cables can be tied down to the frame by using nylon ties or hook and loop strips or ties.</p>	 <p>The diagram illustrates the SharkRack cabinet's cable management system. It shows a perspective view of the cabinet frame with several callouts. A circular callout at the top right shows a cable being routed through a corner post. A circular callout at the bottom right shows a cable being secured to the frame with a hook and loop strip. A circular callout on the left side shows a cable being routed through a side panel. Arrows point to various locations on the cabinet where cables can be managed, including the top, bottom, front, and back.</p> <p>Figure 37 Cable Management</p>

Installing a MultiBay Kit

Step	Detail
<p>MultiBay kits are used to group two or more SharkRack cabinets together. MultiBay kits can be installed prior to installing computer equipment into the rack cabinet or after equipment is already loaded.</p> <p>(Optional) Remove the two side panels facing each other from the two cabinets being bayed together. See “How to Remove or Install Side Panels” on page 26.</p> <ol style="list-style-type: none">1. Move the two cabinets together.2. As necessary, adjust the leveling feet until the cabinets are level and square to each other.3. Secure the (4) MultiBay plates to the cabinets using (4) M6 screws in each plate	 <p>Figure 38 MultiBay Kit</p>

Chapter 4 Install Computer Equipment

To install computer equipment into the cabinet:

- Plan component locations in the cabinet.
- Install computer equipment.
- Route and secure all loose cables accordingly.

Note: Refer to important safety note for installation on page 4 prior to installing equipment.

Cabinet settings for various manufacturers' devices

Note: Always review equipment manufacturer's manual for specific mounting specifications.

Compaq™

- Most Compaq rack mountable products require 3/8" square-holed "L"-style mounting rails.
- Distance between the front and rear mounting rails needs to be 29.12 inches. Many rack mount kits from Compaq use fixed depth side rails and require the cabinet mounting rails to be exactly 29.12 inches apart.
- Typically products use 6mm cage nuts and screws.

Dell™

- Most Dell rack mountable products require 3/8" square-holed "L"-style mounting rails.
- Typically products use 10-32 cage nuts and screws.
- If a front door is required, use a fully vented front door.

HP™

- Most HP rack mountable products use a 3/8" square-holed "L"-style mounting rails.
- Typically products use 10-32 cage nuts and screws, but some use M5 fasteners.
- If a front door is required, use a fully vented front door.
- If a front door is required, you may need to set all mounting rails back.

Cabinet settings for various manufacturers' devices (cont.)

IBM™

- Most IBM rack mountable products use a 3/8" square-holed "L"-style mounting rails.
- Typically products use 10-32 cage nuts and screws.
- If a front door is required, use a fully vented front door.
- If a front door is required, you may need to set all mounting rails back.

Sun™

- Sun has not published a corporate wide set of racking requirements for 3rd party cabinets.
- Check with a SharkRack Representative or www.sharkrack.com for recommended racking hardware.
- Most equipment works with the use of SharkRack's 3/8" square-holed L-style mounting rails.
- Many of Sun rack mount kits use 10-32 cage nuts and screws, but some of their newer equipment uses M6 hardware.

Chapter 5 Final Assembly

Check for Functionality

- Have a qualified electrician verify the power sources for your specified power requirements.
- Check that there is no obstruction to any device that needs to be accessed for maintenance.
- Check that there is easy access to the power strips
- Check that all fasteners are tight. Typical torque values are:
 - 10-32 30 inch-lbs.
 - M5 24 inch-lbs.
 - M6 40 inch-lbs.
- Re-install the doors (See “Installing and Removing Doors” for details).
- Power up devices.

Appendix A: Glossary

EIA:

For more than 72 years the **Electronic Industries Alliance** has been the national trade organization representing U.S. electronics manufacturers. Committed to the competitiveness of the American producer, EIA represents the entire spectrum of companies involved in the design and manufacture of electronic components, parts, systems and equipment for communications, industrial, government and consumer uses.

U (or RU):

A Rack Unit, or sometimes referred to as “U”, is the measure of space in a rack cabinet enclosure equal to 1.75 inches as defined by the EIA-310 standard. Each Rack Unit in an EIA rack cabinet enclosure will have three holes. The first hole is spaced at .25 inches from the bottom of the U to the center, followed by 2 holes spaced at .625 center to center and then .25 inches to the top of the RU.

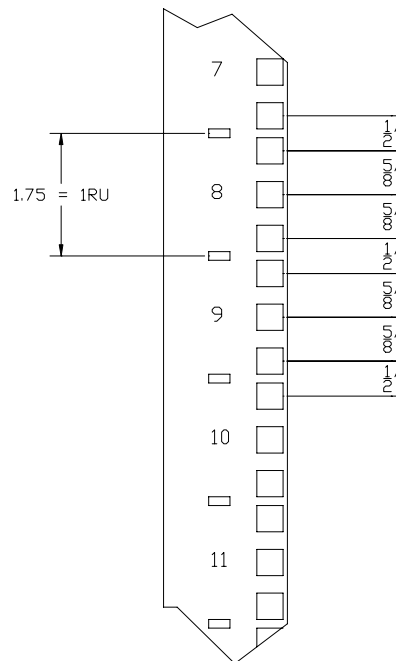


Figure 39
“U” Spacing

Zero U:

Zero U is any rack unit that is not a part of the main stacked rack unit in a cabinet.

Appendix A: Glossary (cont.)

Cage Nut:

A fastener typically used in square-hole universal type racks, similar to a Clip Nut. When selecting the correct cage nut you must specify the thread size as well as the thickness of the mounting rail they will be attaching to.

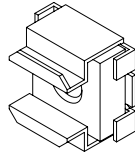


Figure 40
Cage Nut

Clip Nut:

A fastener typically used on round-hole universal type racks, similar to a Cage Nut. They come in different shapes and sizes. You must specify the thread type as well as the thickness of the mounting rail they will be attaching to.

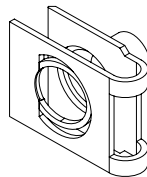


Figure 41
Clip Nut

SharkSNAP™:

SharkSNAP™ is a family of tool-less clip-in devices that attach to the SharkTRAC™. SharkSNAP™ devices reduce time and hassle when installing things such as power strips, patch panels, routers, and environmental monitoring products into a cabinet.

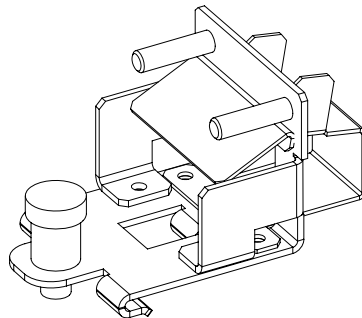


Figure 42
SharkSNAP™

Appendix A: Glossary (cont.)

SharkTRAC™:

The SharkTRAC™ is a platform consisting of a series of holes, which allows attachment of various devices such as the family of SharkSNAP™ tool-less clip-in devices.

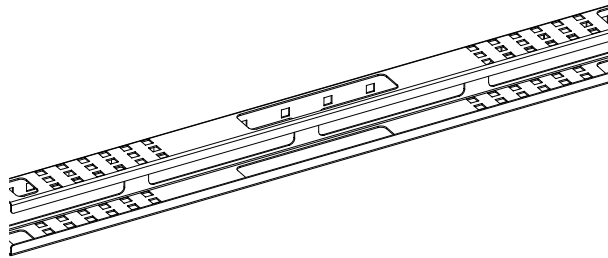


Figure 43
SharkTRAC™

Appendix B: Basic Cabinet Components

Note: Before you begin configuring your SharkRack cabinet, it is best to verify that you have received all necessary items to begin your installation. Also verify that your equipment has arrived free of damage. Rack configurations may vary.

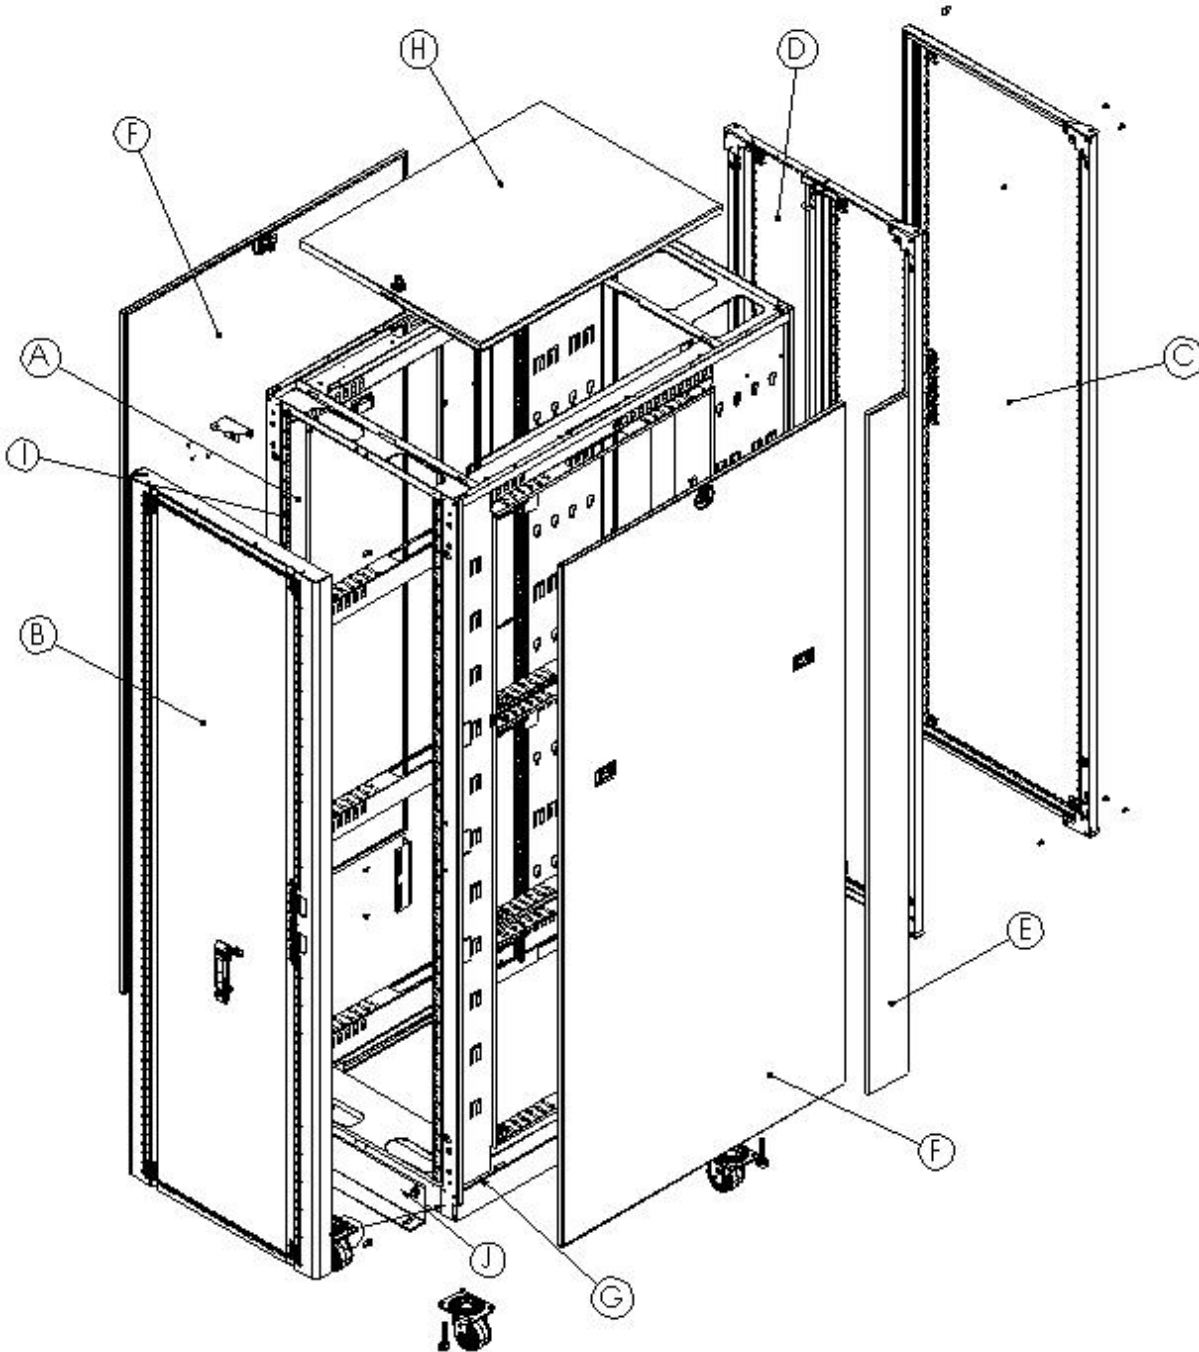


Figure 44
42U X 42DP Cabinet – Exploded View

Parts List		
REF	Description	Quantity/REF
A	Cabinet Frame	1
B	Front Door Kit	
	<i>Grommet Bumper</i>	2
	<i>Bracket, Latch – Front Door</i>	1
	<i>Front Hinge, Bracket Top-Left/Bottom-Right</i>	1
	<i>Front Hinge, Bracket Top-Right/Bottom-Left</i>	1
	<i>Front Door Perforated</i>	1
	<i>Snap-In swing Handle</i>	1
	<i>#10-32X.375 Flat Head Screw</i>	8
C	Full Rear Door Kit	
	<i>Bracket, Latch, Full Rear Door</i>	1
	<i>Snap-In swing Handle</i>	1
	<i>Grommet Bumper</i>	2
	<i>Rear Hinge, Bracket Top-Left/Bottom-Right</i>	1
	<i>Rear Hinge, Bracket Top-Right/Bottom-Left</i>	1
	<i>#10-32X.375 Flat Head Screw</i>	8
	<i>Full Rear Door Perforated</i>	1
D	Split Rear Door Kit	
	<i>Rod Latch</i>	1
	<i>#10-32 Flat Head Screw</i>	16
	<i>#10 Hex Nut w/Tooth Washer</i>	2
	<i>Rear Hinge, Bracket Top-Left/Bottom-Right</i>	2
	<i>Rear Hinge, Bracket Top-Right/Bottom-Left</i>	2
	<i>Grommet Bumper</i>	7
	<i>Right Hand Split Door</i>	1
	<i>Left Hand Split Door</i>	1
E	5" Filler Panel	2
F	Side Panel	2
G	Casters	4
I	Leveling Feet	4
J	Floor Mounting Bracket	2
H	Non-Perforated Top Panel	1
I	Mounting Rails (Set of 4)	1

Table 1
Parts List

Appendix C: Cabinet Specifications

Note: The information listed on the chart in Table 2 is taken from SharkRack’s latest generation of racks. Previous generations vary from that listed below.

Note: The Reference column of Table 2 references the Figures and the following pages. All Measurements are listed in Inches unless otherwise specified.

	Reference	Cabinet Depth		
		37"	42"	45"
Distance Between Frame Members (in)	G	19.985	19.985	19.985
Mounting Rail Mounting Holes Center-to-Center (in)	H	18.42	18.42	18.42
Mounting Flange Inside Width (in)	I	17.925	17.925	17.925
Mounting Rail Thickness (in)	J	.1046 (12 Gage)	.1046 (12 Gage)	.1046 (12 Gage)
Front Mounting Flange to Rear Mounting Flange (in)	K	28.91	28.91	28.91
Interior Clearance (in)	L	19.78	19.78	19.78
Front Mounting Rail to Inside of Front Door (in)	M	1.98	1.98	1.98
Rear Mounting Rail to Inside of Rear Door (in)	N	9.13	14.13	17.13
Cabinet Width (in)	O	23.89	23.89	23.89
Inside Front Door to Inside Rear Door (in)	P	40.23	45.23	48.23
Distance from frame to Front Door Handle (in)	Q	2.82	2.82	2.82
Distance from frame to Rear Door Handle (in)	R	1.93	1.93	1.93
Cabinet Depth (Frame Only) (in)	S	37	42	45
Cabinet Depth (With Doors) (in)	T	41	46	49
Front Door Perforation (Open Area) %		64%	64%	64%
Rear Door Perforation (Open Area) %		64%	64%	64%
Service Clearance Front (in)		25	25	25
Service Clearance Rear (Split Rear) (in)		24 (12)	24 (12)	24 (12)

Table 2

Cabinet Specifications

All dimensions are nominal unless indicated otherwise

Cabinet Dimensions (Top View)

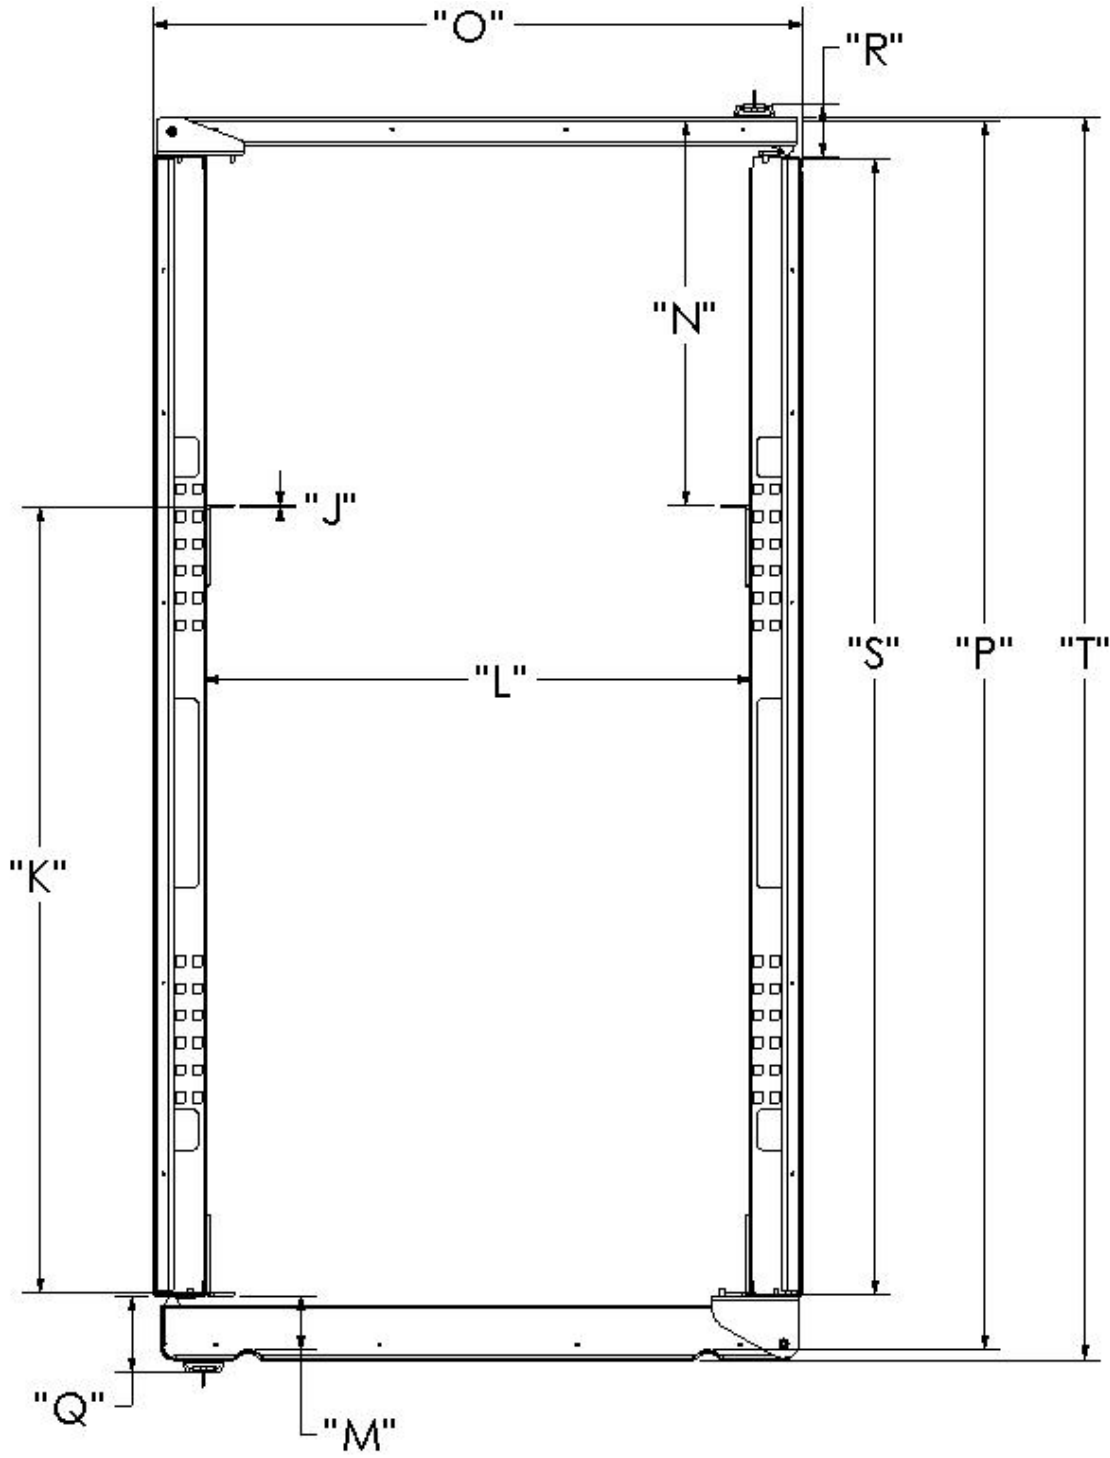


Figure 45
Cabinet Dimensions

Mounting Rail Dimensions (Front View)

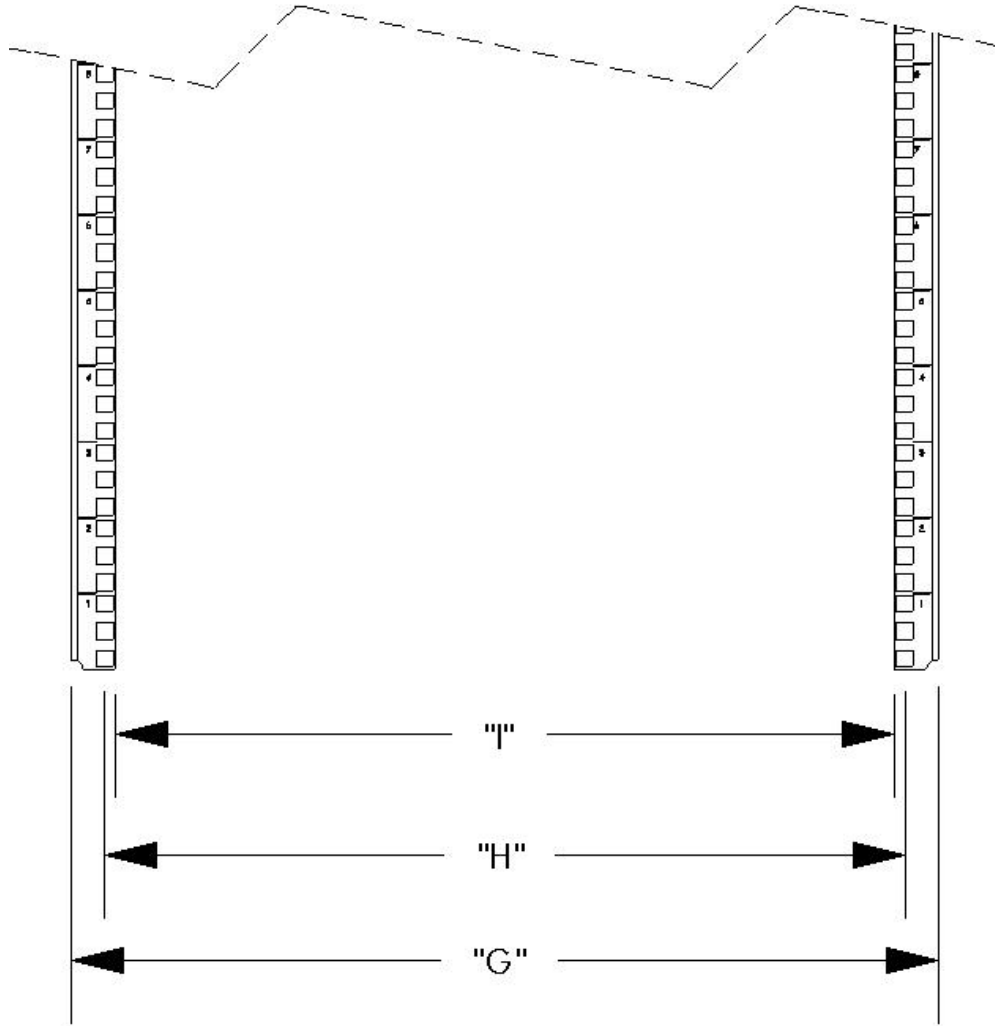


Figure 46
Mounting Rails

SharkRack Enclosure Installation Guide

Figure 1.....	1
Figure 3.....	7
Figure 4.....	8
Figure 5.....	10
Figure 6.....	10
Figure 7.....	11
Figure 8.....	11
Figure 9.....	12
Figure 10.....	12
Figure 11.....	13
Figure 12.....	15
Figure 13.....	16
Figure 14.....	17
Figure 15.....	18
Figure 16.....	19
Figure 17.....	20
Figure 18.....	21
Figure 19.....	21
Figure 20.....	22
Figure 21.....	22
Figure 22.....	23
Figure 23.....	23
Figure 24.....	24
Figure 25.....	25
Figure 26.....	26
Figure 27.....	27
Figure 28.....	28
Figure 30.....	29
Figure 31.....	29
Figure 32.....	29
Figure 33.....	30
Figure 34.....	31
Figure 35.....	31
Figure 36.....	31
Figure 37.....	32
Figure 38.....	33
Figure 39.....	37
Figure 40.....	38
Figure 41.....	38
Figure 42.....	38
Figure 43.....	39
Figure 44.....	40
Figure 45.....	43
Figure 46.....	44

Warranty

LIMITED WARRANTY AND WARRANTY DISCLAIMER - Seller warrants that the System will be free from defects in materials and workmanship for a period of one (1) year from date of delivery to customer premises. Seller's sole liability and Customer's sole and exclusive remedy for any breach of this warranty is, at Seller's option and expense, to repair or replace any defective System that is returned to it by Customer. Seller will have no obligation under this section to the extent any defect in the System is caused by or is attributable to negligence, accident, misuse, abuse, use of the System than in accordance with Seller's documentation or user manual, modifications, alterations or repairs to the System made by a party other than Seller, or actions of third parties or like events outside Seller's reasonable control. EXCEPT AS EXPRESSLY SET FORTH IN THIS SECTION, TO THE EXTENT PERMITTED BY APPLICABLE LAW, SELLER DISCLAIMS ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUALITY, OR NONINFRINGEMENT, AND ANY WARRANTIES ARISING FROM COURSE OF DEALING OR USAGE OF TRADE.

LIMITATIONS OF LIABILITY - IN NO EVENT WILL SELLER BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS OR REVENUE, LOSS OF USE, LOST BUSINESS OPPORTUNITIES OR LOSS OF GOODWILL), OR FOR THE COSTS OF PROCURING SUBSTITUTE PRODUCTS, ARISING OUT OF OR IN CONNECTION WITH THESE TERMS OF SALE OR THE USE OF THE SYSTEM, WHETHER SUCH LIABILITY ARISES FROM ANY CLAIM BASED UPON CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, WHETHER OR NOT SELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. IN NO EVENT WILL SELLER'S TOTAL CUMULATIVE LIABILITY, FROM ALL CAUSES OF ACTION AND ALL THEORIES OF LIABILITY, EXCEED THE TOTAL AMOUNTS ACTUALLY PAID TO SELLER BY CUSTOMER UNDER THE ORDER THAT GIVES RISE TO ANY LIABILITY HEREUNDER.

During the warranty period, purchaser must promptly call SharkRack (877-427-5722) to log any such defects in materials and workmanship.