

INSTALLATION MANUAL

HIGH EFFICIENCY TUBULAR HEAT EXCHANGER SERIES

MODELS: GY9S*DH / GM9S*DH / GF9S*DH
(Single Stage Downflow/Horizontal)

40 - 120 MBH INPUT
(11.72 - 35.17 KW) INPUT



ISO 9001
Certified Quality
Management System

LIST OF SECTIONS

SAFETY	1	TWINNING AND STAGING	13
DUCTWORK	4	COMBUSTION AIR AND VENT SYSTEM	14
FILTERS	7	CONDENSATE PIPING	22
GAS PIPING	9	SAFETY CONTROLS	31
ELECTRICAL POWER	10	START-UP AND ADJUSTMENTS	31
		WIRING DIAGRAM	39

LIST OF FIGURES

Transition Kit Assembly	6	Sealed Combustion Air Intake Connection and Vent Connection ..	19
Dimensions	7	Combustion Airflow Path Through The Furnace Casing to the Burner	20
Return Filter Grill and Return Duct Installation	8	Box	20
Typical Attic Installation	8	Outside and Ambient Combustion Air	21
Typical Suspended Furnace / Crawl Space Installation	9	Attic Combustion Air Termination	22
Gas Valve	9	Condensate Drain Internal Hose Routing	22
Downflow Gas Piping	9	Downflow Condensate Drain Hose Configuration	23
Horizontal Gas Piping	9	Horizontal Left Condensate Drain Hose Configuration	24
Electrical Wiring	11	Horizontal Left Condensate Drain Hose Configuration	25
Thermostat Chart	12	Horizontal Right Condensate Drain Hose Configuration	
Accessory Connections	13	(Option 1 - Front of Casing)	27
Typical Twinned Furnace Application	13	Horizontal Right Condensate Drain Hose Configuration	
Single Stage Twinning Wiring Diagram	14	(Option 1 - Front of Casing)	28
Two-Stage Twinning Wiring Diagram	14	Horizontal Right Condensate Drain Hose Configuration	
Dimensions	16	(Option 2 - Back of Casing)	29
Home Layout	17	Horizontal Right Condensate Drain Hose Configuration	
Downflow/Horizontal Vent Assembly	18	(Option 2 - Back of Casing)	30
Termination Configuration - 1 Pipe	18	Pressure Switch Tubing Routing	31
Termination Configuration - 2 Pipe	18	Gas Valve	34
Termination Configuration - 2 Pipe Horizontal	18	Reading Gas Pressure	35
Crawl Space Termination Configuration - 2Pipe	19	Furnace Control Board	35
Double Horizontal Sealed Combustion Air and Vent Termination ..	19	Wiring Diagram	39
Double Vertical Sealed Combustion Air and Vent Termination ..	19		

LIST OF TABLES

Unit Clearances to Combustibles	4	Combustion Air Intake and Vent Connection Size at Furnace	
Minimum Duct Sizing For Proper Airflow	5	(All Models)	16
Round Duct Size	5	Estimated Free Area	20
Cabinet and Duct Dimensions	7	Free Area - Outdoor Air	20
Recommended Filter Sizes	7	Unconfined Space Minimum Area in Square Inches	20
Nominal Manifold Pressure	10	Condensate Drain Hose	22
Electrical and Performance Data	10	Inlet Gas Pressure Range	34
Maximum Equivalent Pipe Length	15	Nominal Manifold Pressure	34
Equivalent Length of Fittings	15	Blower Performance CFM	37
Elbow Dimensions	16	Filter Performance - Pressure Drop Inches W.C. and (kPa)	37

SECTION I: SAFETY



This is a safety alert symbol. When you see this symbol on labels or in manuals, be alert to the potential for personal injury.

Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

DANGER indicates an **imminently** hazardous situation, which, if not avoided, **will result in death or serious injury**.

WARNING indicates a **potentially** hazardous situation, which, if not avoided, **could result in death or serious injury**.

CAUTION indicates a potentially hazardous situation, which, if not avoided **may result in minor or moderate injury**. It is also used to alert against unsafe practices and hazards involving only property damage.

WARNING

Improper installation may create a condition where the operation of the product could cause personal injury or property damage.

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual for assistance or for additional information, consult a qualified contractor, installer or service agency.

CAUTION

This product must be installed in strict compliance with the installation instructions and any applicable local, state, and national codes including, but not limited to building, electrical, and mechanical codes.

SPECIFIC SAFETY RULES AND PRECAUTIONS

1. Only Natural gas or Propane (LP) gas are approved for use with this furnace. Refer to the furnace rating plate or Section IV of these instructions.
2. Install this furnace only in a location and position as specified in SECTION I of these instructions.
3. A gas-fired furnace for installation in a residential garage must be installed as specified in SECTION I of these instructions.
4. Provide adequate combustion and ventilation air to the furnace space as specified in SECTION VI of these instructions.
5. Combustion products must be discharged outdoors. Connect this furnace to an approved vent system only, as specified in SECTION VII of these instructions.

WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

6. Tests for gas leaks as specified in SECTION X of these instructions.
7. Always install the furnace to operate within the furnace's intended temperature rise range. Only connect the furnace to a duct system which has an external static pressure within the allowable range, as specified on the furnace rating plate.
8. When a furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.
9. It is permitted to use the furnace for heating of buildings or structures under construction. Installation must comply with all manufacturer's installation instructions including:
 - Proper vent installation;
 - Furnace operating under thermostatic control;
 - Return air duct sealed to the furnace;
 - Air filters in place;
 - Set furnace input rate and temperature rise per rating plate marking;
 - Means for providing outdoor air required for combustion;
 - Return air temperature maintained between 55°F (13°C) and 80°F (27°C);
 - The **air filter must be replaced** upon substantial completion of the construction process;
 - Clean furnace, duct work and components upon substantial completion of the construction process, and verify furnace-operating conditions including ignition, input rate, temperature rise and venting, according to the manufacturer's instructions.
10. When installed in a Non-HUD-Approved Modular Home or building constructed on-site, combustion air shall not be supplied from occupied spaces.
11. The size of the unit should be based on an acceptable heat loss calculation for the structure. ACCA, Manual J or other approved methods may be used.

SAFETY REQUIREMENTS

- This furnace should be installed in accordance with all national and local building/safety codes and requirements, local plumbing or wastewater codes, and other applicable codes. In the absence of local codes, install in accordance with the National Fuel Gas Code ANSI Z223.1/NFPA 54, National Fuel Gas Code, and/or CAN/CGA B149.1 Natural Gas and Propane Installation Code (latest editions). Furnaces have been certified to the latest edition of standard ANSI Z21-47 • CSA 2.3.
- Refer to the unit rating plate for the furnace model number, and then see the dimensions page of this instruction for return air plenum dimensions in Figure 3. The plenum must be installed according to the instructions.

- Provide clearances from combustibles materials as listed under Clearances to Combustibles in Table 1.
- Provide clearances for servicing ensuring that service access is allowed for both the burners and blower.
- These models **ARE NOT** CSA listed or approved for installation into a **HUD Approved Modular Home** or a **Manufactured (Mobile) Home**.
- This furnace is not approved for installation in trailers or recreational vehicles.
- **Failure to carefully read and follow all instructions in this manual can result in furnace malfunction, death, personal injury and/or property damage.**
- Furnaces for installation on combustible flooring shall not be installed directly on carpeting, tile or other combustible material other than wood flooring.
- Check the rating plate and power supply to be sure that the electrical characteristics match. All models use nominal 115 VAC, 1 Phase, 60-Hertz power supply. **DO NOT CONNECT THIS APPLIANCE TO A 50 HZ POWER SUPPLY OR A VOLTAGE ABOVE 130 VOLTS.**
- Furnace shall be installed so the electrical components are protected from water.
- Installing and servicing heating equipment can be hazardous due to the electrical components and the gas fired components. Only trained and qualified personnel should install, repair, or service gas heating equipment. Untrained service personnel can perform basic maintenance functions such as cleaning and replacing the air filters. When working on heating equipment, observe precautions in the manuals and on the labels attached to the unit and other safety precautions that may apply.
- These instructions cover minimum requirements and conform to existing national standards and safety codes. In some instances these instructions exceed certain local codes and ordinances, especially those who have not kept up with changing residential and non-HUD modular home construction practices. These instructions are required as a minimum for a safe installation.

COMBUSTION AIR QUALITY (LIST OF CONTAMINANTS)

The furnace will require **OUTDOOR AIR** for combustion when the furnace is located in any of the following environments.

- Restricted Environments
- Commercial buildings
- Buildings with indoor pools
- Furnaces installed in laundry rooms
- Furnaces installed in hobby or craft rooms
- Furnaces installed near chemical storage areas
- Chemical exposure

The furnace will require **OUTDOOR AIR** for combustion when the furnace is located in an area where the furnace is being exposed to the following substances and / or chemicals.

- Permanent wave solutions
- Chlorinated waxes and cleaners
- Chlorine based swimming pool chemicals
- Water softening chemicals
- De-icing salts or chemicals
- Carbon tetrachloride
- Halogen type refrigerants
- Cleaning solvents (such as perchloroethylene)
- Printing inks, paint removers, varnishes, etc.
- Hydrochloric acid
- Cements and glues
- Antistatic fabric softeners for clothes dryers
- Masonry acid washing materials

When outdoor air is used for combustion, the combustion air intake pipe termination must be located external to the building and in an area where there will be no exposure to the substances listed above.

▲ WARNING

The furnace area must not be used as a broom closet or for any other storage purposes, as a fire hazard may be created. Never store items such as the following on, near or in contact with the furnace.

1. Spray or aerosol cans, rags, brooms, dust mops, vacuum cleaners or other cleaning tools.
2. Soap powders, bleaches, waxes or other cleaning compounds; plastic items or containers; gasoline, kerosene, cigarette lighter fluid, dry cleaning fluids or other volatile fluid.
3. Paint thinners and other painting compounds.
4. Paper bags, boxes or other paper products

Never operate the furnace with the blower door removed. To do so could result in serious personal injury and/or equipment damage.

FOR FURNACES INSTALLED IN THE COMMONWEALTH OF MASSACHUSETTS ONLY

For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

1. **INSTALLATION OF CARBON MONOXIDE DETECTORS.** At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gasfitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors
 - a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.
 - b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.
2. **APPROVED CARBON MONOXIDE DETECTORS.** Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.
3. **SIGNAGE.** A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "**GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS**".
4. **INSPECTION.** The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a)1 through 4.

INSPECTION

As soon as a unit is received, it should be inspected for possible damage during transit. If damage is evident, the extent of the damage should be noted on the carrier's freight bill. A separate request for inspection by the carrier's agent should be made in writing. Also, before installation the unit should be checked for screws or bolts, which may have loosened in transit. There are no shipping or spacer brackets which need to be removed.

FURNACE LOCATION AND CLEARANCES

The furnace shall be located using the following guidelines:

1. Where a minimum amount of air intake/vent piping and elbows will be required.
2. As centralized with the air distribution as possible.
3. Where adequate combustion air will be available (particularly when the appliance is not using outdoor combustion air).
4. Where it will not interfere with proper air circulation in the confined space.
5. Where the outdoor combustion air/vent terminal will not be blocked or restricted. Refer to "COMBUSTION AIR / VENT CLEARANCES" located in SECTION VII of these instructions. These minimum clearances must be maintained in the installation.
6. Where the unit will be installed in a level position with no more than 1/4" (0.6 cm) slope side-to-side and front-to-back to provide proper condensate drainage.

Installation in freezing temperatures:

1. Furnace shall be installed in an area where ventilation facilities provide for safe limits of ambient temperature under normal operating conditions. Ambient temperatures must not fall below 32°F (0°C) unless the condensate system is protected from freezing.
2. Do not allow return air temperature to be below 55° F (13° C) for extended periods. To do so may cause condensation to occur in the main heat exchanger, leading to premature heat exchanger failure.

▲ WARNING

Improper installation in an ambient below 32°F (0.0° C) could create a hazard, resulting in damage, injury or death.

3. If this furnace is installed in any area where the ambient temperature may drop below 32° F (0° C), a UL listed self-regulated heat tape must be installed on any condensate drain lines. It is required that self regulating heat tape rated at 3 watts per foot be used. This must be installed around the condensate drain lines in the unconditioned space. Always install the heat tape per the manufacturer's instructions. Cover the self-regulating heat tape with fiberglass, Armaflex or other heat resistant insulating material.
4. If this unit is installed in an unconditioned space and an extended power failure occurs, there will be potential damage to the condensate trap, drain lines and internal unit components. Following a power failure situation, do not operate the unit until inspection and repairs are performed.

Clearances for access:

Ample clearances should be provided to permit easy access to the unit. The following minimum clearances are recommended:

1. Twenty-four (24) inches (61 cm) between the front of the furnace and an adjacent wall or another appliance, when access is required for servicing and cleaning.
2. Eighteen (18) inches (46 cm) at the side where access is required for passage to the front when servicing or for inspection or replacement of flue/vent connections.

In all cases, accessibility clearances shall take precedence over clearances for combustible materials where accessibility clearances are greater.

WARNING

Downflow/Horizontal furnaces for installation on combustible flooring only when installed on the accessory combustible floor base on wood flooring only and shall not be installed directly on carpeting, tile or other combustible material.

Check the rating plate and power supply to be sure that the electrical characteristics match. All models use nominal 115 VAC, 1 Phase 60Hz power supply.

Furnace shall be installed so the electrical components are protected from water.

Installation in a residential garage:

1. A gas-fired furnace for installation in a residential garage must be installed so the burner(s) and the ignition source are located not less than 18 inches (46 cm) above the floor, and the furnace must be located or protected to avoid physical damage by vehicles.

TABLE 1: Unit Clearances to Combustibles

Application		Downflow	Horizontal
Top	In. (cm)	1 (2.5)	0 (0)
Front	In. (cm)	3 (7.6)	3 (7.6)
Rear	In. (cm)	0 (0)	0 (0)
Left Side	In. (cm)	0 (0)	1 (2.5)
Right Side	In. (cm)	0 (0)	1 (2.5)
Flue	In. (cm)	0 (0)	0 (0)
Floor / Bottom	In. (cm)	1 (2.5) ¹	0 (0)
Closest		Yes	Yes
Alcove		Yes	Yes
Attic		Yes	Yes
Line Contact		NA	Yes ²

1. Combustible floor base or air conditioning coil required for use on combustible floor.
2. Line contact only permitted between lines formed by the intersection of the rear panel (top in horizontal position) of the furnace jacket and building joists, studs or framing.

SECTION II: DUCTWORK

DUCTWORK GENERAL INFORMATION

The duct system's design and installation must:

1. Handle an air volume appropriate for the served space and within the operating parameters of the furnace specifications.
2. Be installed in accordance with standards of NFPA (National Fire Protection Association) as outlined in NFPA pamphlets 90A and 90B (latest editions) or applicable national, provincial, or state, and local fire and safety codes.
3. Create a closed duct system. For residential and Non-HUD Modular Home installations, when a furnace is installed so that the supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by a duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.
4. Complete a path for heated or cooled air to circulate through the air conditioning and heating equipment and to and from the conditioned space.

CAUTION

The cooling coil must be installed in the supply air duct, downstream of the furnace. Cooled air may not be passed over the heat exchanger.

When the furnace is used in conjunction with a cooling coil, the coil must be installed parallel with, or in the supply air side of the furnace to avoid condensation in the primary heat exchanger. When a parallel flow arrangement is used, dampers or other means used to control airflow must be adequate to prevent chilled air from entering the furnace. If manually operated, the damper must be equipped with means to prevent the furnace or the air conditioner from operating unless the damper is in full heat or cool position.

WARNING

The duct system must be properly sized to obtain the correct airflow for the furnace size that is being installed.

Refer to Table 7 and the furnace rating plate for the correct rise range and static pressures

If the ducts are undersized, the result will be high duct static pressures and/or high temperature rises which can result in a heat exchanger OVERHEATING CONDITION. This condition can result in premature heat exchanger failure, which can result in personal injury, property damage, or death.

FLOOR BASE AND DUCTWORK INSTALLATION

Downflow Combustible Floor Base



Installations on combustible materials require the use a combustible floor base shown in Figure 1.

The floor base must be secured to the floor. A supply air duct plenum with 1" (2.54 cm) flange is installed through the opening provided. The supply air duct is then secured to the duct system with screws and sealed to prevent leaks. Do not shoot screws through the flanges of the supply air duct into the top of the combustible floor base. Install the furnace on the combustible floor base so that the corners of the furnace are parallel with the corner brackets of the floor base. Follow the instructions supplied with the combustible floor base accessory.

This combustible floor base can be replaced with a matching cooling coil, properly sealed to prevent leaks. Follow the instructions supplied with the cooling coil cabinet for installing the cabinet to the duct connector. Refer to the installation instructions for additional information.

When replacing an existing furnace, if the existing plenum is not the same size as the new furnace then the existing plenum must be removed and a new plenum installed that is the proper size for the new furnace.

Ductwork Installation

NOTE: When attaching duct flange, do not shoot the screw down into the casing. Use the formed flange intended for duct flange attachment.

A proper Heat Loss/Gain Calculation should be done on all installations for proper application of equipment. From this the ductwork sizing can be calculated, ACCA Manual J and D and industry standards are helpful.

The duct system is a very important part of the installation. **If the duct system is improperly sized the furnace will not operate properly.** The ducts attached to the furnace plenum, should be of sufficient size so that the furnace plenum should be if sufficient size so that the furnace operates at the specified external static pressure and within the air temperature rise specified on the nameplate.

Table 2 is a guide for determining whether the rectangular duct system that the furnace is being connected to be of sufficient size for proper furnace operation.

Use the Example below to help you in calculating the duct area to determine whether the ducts have sufficient area so that the furnace operates at the specified external static pressure and within the air temperature rise specified on the nameplate.

The following are general duct sizing guidelines that may not serve to requirements of every application.

Example: The furnace input is 80,000 BTUH, 1,200 CFM blower requirement. The recommended duct area is 216 sq.in, there are two 8 x 12 rectangular ducts attached to the plenum and there are two 7 inch round ducts attached to the furnace.

1. Take 8 x 12, which equals 96 square inch x 2 = 192 square inches then go to round duct size located in Table 3.

2. The square inch area for 7 inch round ducts, 38.4 square inch x 2 = 76.8 square inches,
3. Then take the 192 square inch from the rectangular duct and add it to the 76.8 square inch of round duct. The total square inch of duct attached to the furnace supply plenum is 268.8 square inches. This exceeds the recommended 216 square inch of duct.

In this example, the duct system attached to the plenum has a sufficient area so that the furnace operates at the specified external static pressure and within the air temperature rise specified on the nameplate. Providing the return duct is properly sized as well.

TABLE 2: Minimum Duct Sizing For Proper Airflow

Input	Nominal Airflow	Return ¹	Rectangular ²	Round ²	Supply ³	Rectangular ²	Round ²
BTU/H(kW)	CFM(m ³ /min)	In ² (cm ²)	in. x in.(cm x cm)	in. (cm)dia.	In ² (cm ²)	in. x in.(cm x cm)	in. (cm)dia.
40,000 (11.7)	1,200 (34.0)	280 (1806)	14 x 20 (35.6 x 90.8)	18 (45.7)	216 (1394)	12 x 18 (30.5 x 45.7)	16 (40.6)
60,000 (17.6)	1,200 (34.0)	280 (1806)	14 x 20 (35.6 x 50.8)	18 (45.7)	216 (1394)	12 x 18 (30.5 x 45.7)	16 (40.6)
80,000 (23.4)	1,200 (34.0)	280 (1806)	14 x 20 (35.6 x 50.8)	18 (45.7)	216 (1394)	12 x 18 (30.5 x 45.7)	16 (40.6)
80,000 (23.4)	1,600 (45.3)	360 (2322)	18 x 20 (45.7 x 50.8)	22 (55.8)	280 (1806)	14 x 20 (35.6 x 50.8)	18 (45.7)
100,000 (29.3)	1,600 (45.3)	360 (2322)	18 x 20 (45.7 x 50.8)	22 (55.8)	280 (1806)	14 x 20 (35.6 x 50.8)	18 (45.7)
100,000 (29.3)	2,000 (56.6)	440 (2839)	20 x 22 (50.8 x 55.8)	24 (60.9)	390 (2516)	16 x 22 (40.6 x 55.8)	22 (55.8)
120,000 (35.2)	2,000 (56.6)	440 (2839)	20 x 22 (50.8 x 55.8)	24 (60.9)	390 (2516)	16 x 22 (40.6 x 55.8)	22 (55.8)

NOTE: This chart does not replace proper duct sizing calculations or take into account static pressure drop for run length and fittings. Maintain proper temperature rise and static pressures.

1. Maximum return air velocity in rigid duct @ 700 feet per minute (213 m/min).
2. Example return main trunk duct minimum dimensions.
3. Maximum supply air velocity in rigid duct @ 900 feet per minute (274m/min).

TABLE 3: Round Duct Size

Round Duct Size	Calculated Area For Each Round Duct Size
Inches (cm)	Sq.in (cm ²)
5 (13)	19.6 (126)
6 (15)	28.2 (182)
7 (18)	38.4 (248)
8 (20)	50.2 (324)
9 (23)	63.6 (410)
10 (25)	78.5 (506)
11 (28)	95 (613)
12 (30)	113.1 (730)
13 (33)	132.7 (856)
14 (36)	153.9 (993)

1. The Air Temperature Rise is determined by subtracting the Return Air Temperature Reading from the Supply Air Temperature Reading.
2. The External Static Pressure is determined by adding the Supply Duct Static Pressure reading to the Return Duct Static Pressure reading.

TABLES 2 AND 3 are to be used as a guide only to help the installer determine if the duct sizes are large enough to obtain the proper air flow (CFM) through the furnace. TABLES 2 and 3 ARE NOT to be used to design ductwork for the building where the furnace is being installed. There are several variables associated with proper duct sizing that are not included in the tables. To properly design the ductwork for the building, Refer to the ASHRAE Fundamentals Handbook, Chapter on "DUCT DESIGN" or a company that specializes in Residential and Modular Home duct designs.

IMPORTANT: If the supply air duct is being connected to the furnace without the use of an accessory duct connector, then a transition duct must be installed with flanges or tabs that are securely attach and sealed to the supply air duct and to the base of the furnace. The transition duct must have insulation between the transition duct and any combustible material.

The transition duct must be the same dimensional size as the rectangular opening in the base of the furnace.

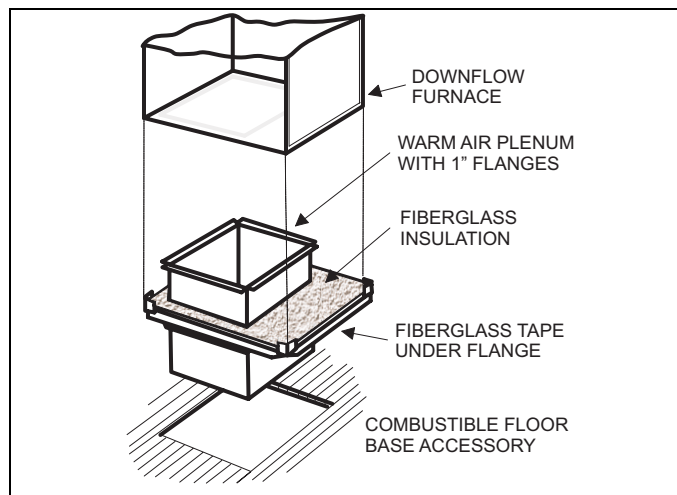


FIGURE 1 : Combustibility Floor Base Accessory

WARNING

The supply air temperature **MUST NEVER** exceed the **Maximum Supply Air Temperature**, specified on the nameplate. Operating the furnace above the maximum supply air temperature will cause the heat exchanger to overheat, causing premature heat exchanger failure. Improper duct sizing, dirty air filters, incorrect manifold pressure, incorrect gas orifice and/or a faulty limit switch can cause the furnace to operate above the maximum supply air temperature. Refer to sections II, III, IX & X for additional information on correcting the problem.

Downflow Air Conditioning Coil Cabinet

The Cooling Coil Cabinet can be used in place of the combustible floor base for downflow installations on combustible materials. The furnace should be installed with the cooling coil cabinet specifically intended for downflow applications. The cooling coil cabinet must be secured to the floor. A supply air duct plenum is installed through the opening provided. The supply air duct is then secured to the duct system with screws and sealed to prevent leaks. If a matching cooling coil is used, it may be placed directly on the furnace outlet using the accessory transition kit and sealed to prevent leakage. The transition kit must be used to secure the cooling coil cabinet to the furnace casing when installed in a downflow configuration.

These kits are required in downflow application when using G*F* series coils. These kits are not required with MC/FC series coils, but please ensure that the coil and furnace are secured and that there are no air leaks.

This transition kit may be installed in one of two ways. The transition kit may be installed and secured to either the furnace or the cooling coil cabinet by the use of screws and then it must be sealed to prevent leaks.

- If the transition kit has been installed on the cooling coil cabinet it must be secured to the cooling coil cabinet with screws. The supply air side of the furnace is then placed on the cooling coil cabinet and then sealed for leaks.
- If the transition kit has been installed on the supply air side of the furnace it must be secured to the furnace with screws. The furnace and the transition kit are then placed on the cooling coil cabinet and then sealed for leaks.

NOTE: Refer to instructions packed out with coil cabinet, for securing and sealing to the furnace.

IMPORTANT: The furnace, transition kit, and the cooling coil cabinet **MUST BE SEALED** as needed to prevent leaks, **AND SECURED**. Refer to the assembly drawing in Figure 2.

IMPORTANT: On all installations without a coil, a removable access panel is recommended in the outlet duct such that smoke or reflected light would be observable inside the casing to indicate the presence of leaks in the heat exchanger. This access cover shall be attached in such a manner as to prevent leaks.


 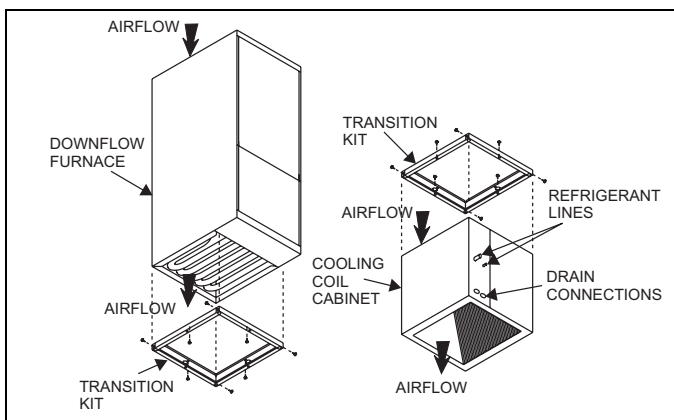


FIGURE 2: Transition Kit Assembly

Horizontal Models



IMPORTANT: This furnace may be installed in a horizontal position on either side as shown above. **It must not be installed on its back.**

Horizontal Installations With a Cooling Coil Cabinet

The furnace should be installed with the cooling coil cabinet specifically intended for horizontal applications. If a matching cooling coil is used, it may be placed directly on the supply air side of the furnace and sealed to prevent leakage. A warm air duct plenum with 1" (2.54 cm) is installed through the opening provided. The supply air duct system is connected to the warm air plenum and sealed to prevent leaks.

IMPORTANT: The furnace, the cooling coil cabinet, and all duct work **MUST BE SEALED** as needed to prevent leaks, **AND SECURED**. Refer to the assembly drawing in Figure 2.

Attach the supply plenum to the air conditioning coil cabinet outlet duct flanges through the use of S cleat material when a metal plenum is used. The use of an approved flexible duct connector is recommended on all installations. The connection to the furnace, air conditioning coil cabinet and the supply plenum should be sealed to prevent air leakage.

The sheet metal plenum should be crosshatched to eliminate any popping of the sheet metal when the indoor fan is energized. The minimum plenum height is 12" (30.5 cm). If the plenum is shorter than 12" (30.5 cm) the turbulent air flow may cause the limit controls not to operate as designed, or the limit controls may not operate at all. Also the plastic drain pan in the under the air conditioning coil can overheat and melt. Refer to the installation instructions supplied with the air conditioning coil for additional information.

Horizontal Installations Without a Cooling Coil Cabinet

When installing this appliance, the furnace must be installed so as to create a closed duct system, the supply duct system must be connected to the furnace outlet and the supply duct system must terminate outside the space containing the furnace. When replacing an existing furnace, if the existing plenum is not the same size as the new furnace then the existing plenum must be removed and a new plenum installed that is the proper size for the new furnace.

Attach the supply plenum to the furnace outlet duct flanges through the use of S cleat material when a metal plenum is used. The use of an approved flexible duct connector is recommended on all installations. This connection should be sealed to prevent air leakage. The sheet metal should be crosshatched to eliminate any popping of the sheet metal when the indoor fan is energized. On all installations without a coil, a removable access panel is recommended in the outlet duct such that smoke or reflected light would be observable inside the casing to indicate the presence of leaks in the heat exchanger. This access cover shall be attached in such a manner as to prevent leaks.

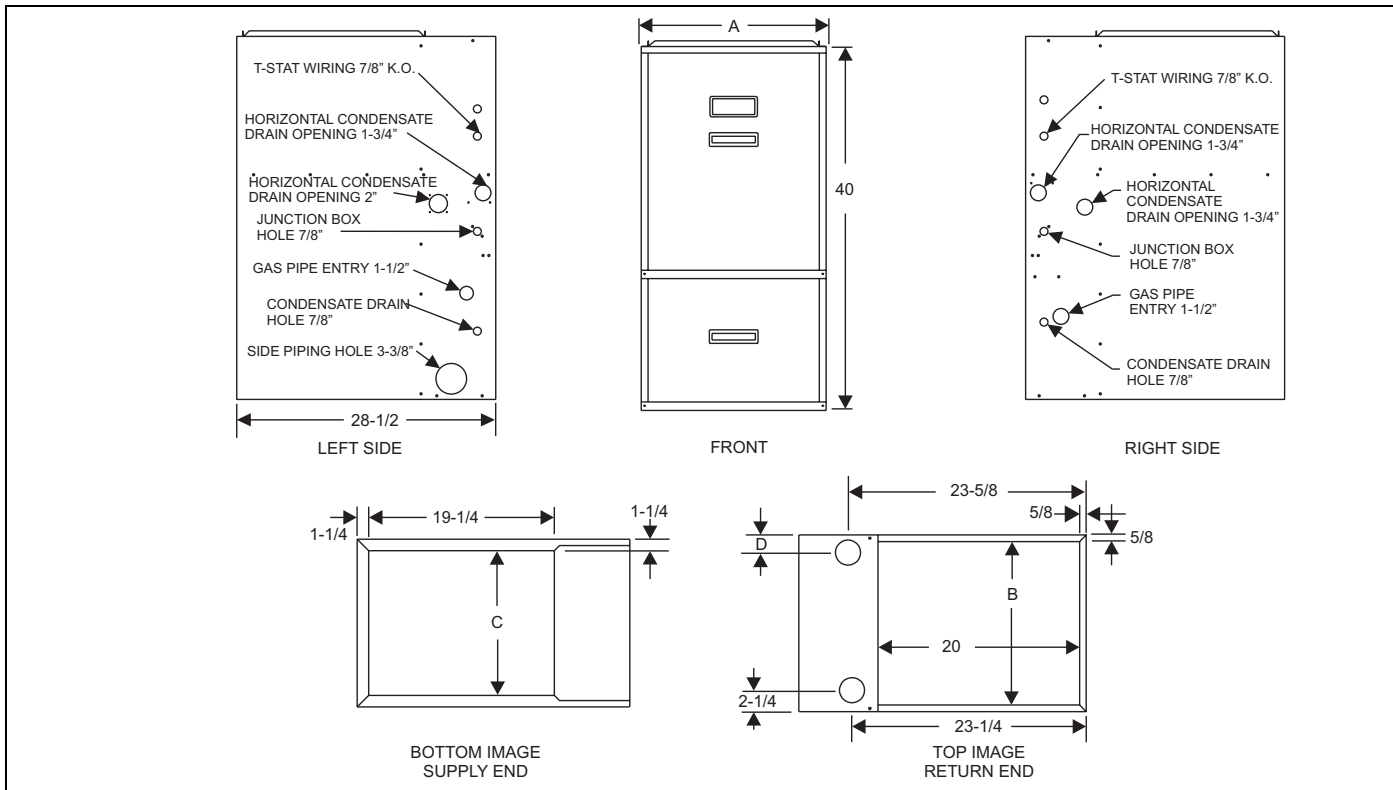


FIGURE 3: Dimensions

TABLE 4: Cabinet and Duct Dimensions

BTUH (kW) Input/Output	CFM	Cabinet Size	Cabinet Dimension							
			A (in.)	A (cm)	B (in.)	B (cm)	C (in.)	C (cm)	D (in.)	D (cm)
40/37 (11.7/10.8)	1200 (34.0)	A	14-1/2	36.8	13-1/4	33.7	12	30.5	1-3/4	4.44
60/56 (17.6/16.4)	1200 (34.0)	B	17-1/2	44.4	16-1/4	41.3	15	38.1	1-3/4	4.44
80/75 (23.4/22.0)	1200 (34.0)	B	17-1/2	44.4	16-1/4	41.3	15	38.1	1-3/4	4.44
80/75 (23.4/22.0)	1600 (45.3)	C	21	53.3	19-3/4	50.2	18-1/2	47.0	2-1/8	5.40
100/95 (29.3/27.8)	1600 (45.3)	C	21	53.3	19-3/4	50.2	18-1/2	47.0	2-1/8	5.40
100/95 (29.3/27.8)	2000 (56.6)	C	21	53.3	19-3/4	50.2	18-1/2	47.0	2-1/8	5.40
120/112 (35.1/32.8)	2000 (56.6)	D	24-1/2	62.2	23-1/4	59.1	22	55.9	2-1/2	6.35

RESIDENTIAL AND NON HUD MODULAR HOME DOWNFLOW AND HORIZONTAL RETURN PLENUM CONNECTION

The return duct system must be connected to the furnace inlet and the return duct system must terminate outside the space containing the furnace. When replacing an existing furnace, if the existing plenum is not the same size as the new furnace then the existing plenum must be removed and a new plenum installed that is the proper size for the new furnace.

Attach the return plenum to the furnace inlet duct flanges. This is typically through the use of S cleat material when a metal plenum is used. The use of an approved flexible duct connector is recommended on all installations. The connection of the plenum to the furnace and all the ducts connecting to the plenum must be sealed to prevent air leakage. The sheet metal should be crosshatched to eliminate any popping of the sheet metal when the indoor fan is energized.

The duct system is a very important part of the installation. If the duct system is improperly sized the furnace will not operate properly. The ducts attached to the furnace must be of sufficient size so that the furnace operates at the specified external static pressure and within the air temperature rise specified on the nameplate.

Attic installations must meet all minimum clearances to combustibles and have floor support with required service accessibility.

IMPORTANT: If an external mounted filter rack is being used see the instructions provided with that accessory for proper hole cut size.

SECTION III: FILTERS

FILTER INSTALLATION

All applications require the use of a filter. Replacement filter size is shown in Table 5.

TABLE 5: Recommended Filter Sizes

Input / Output BTU/H (kW)	CFM (m ³ /min)	Cabinet Size	Top Return Filter in(cm)
40 (11.7)	1200 (34)	A	(2) 14 x 20 (36 x 51)
60 (17.8)	1200 (34)	B	(2) 14 x 20 (36 x 51)
80 (23.4)	1200 (34)	B	(2) 14 x 20 (36 x 51)
80 (23.4)	1600 (45)	C	(2) 14 x 20 (36 x 51)
100 (29.3)	1600 (45)	C	(2) 14 x 20 (36 x 51)
100 (29.3)	2000 (57)	C	(2) 14 x 20 (36 x 51)
120 (35.1)	2000 (57)	D	(2) 14 x 20 (36 x 51)

NOTES:

1. Air velocity through throwaway type filters may not exceed 300 feet per minute. All velocities over this require the use of high velocity filters.

Downflow Filters

Downflow furnaces typically are installed with the filters located above the furnace, extending into the return air plenum or duct. Any branch duct (rectangular or round duct) attached to the plenum must attach to the vertical plenum above the filter height.

Filters(s) may be located in the duct system external to the furnace using an external duct filter box attached to the furnace plenum or at the end of the duct in a return filter grille(s). The use of straps and / or supports is required to support the weight of the external filter box.

If the accessory electronic air cleaner is installed, be sure the air cleaner is designed to accommodate the furnace CFM (cm/m) and the air cleaner is installed so it does not obstruct the return airflow. Consideration should be given when locating the air cleaner for maintenance and temperatures should the indoor fan motor fail to operate. The use of straps and / or supports is required to support the weight of the electronic air cleaner. It is recommended that the air cleaner not be located within 12 inches (30.5 cm) from the top of the return air opening on the furnace. Refer to the instructions supplied with the electronic air cleaner.

CAUTION

All loose accessories shipped with the furnace must be removed from the blower compartment, prior to installation.

If pleated media air filters or any filter that has a large pressure drop is installed in the return air duct system be sure that the pressure drop caused by the air filter will not prevent the furnace from operating within the rise range specified on the rating plate. If the furnace does not operate within the specified rise range then a larger air filter or an air filter that has a lower pressure drop must be installed.

IMPORTANT: For easier filter access in a downflow configuration, a removable access panel is recommended in the vertical run of the return air plenum immediately above the furnace.

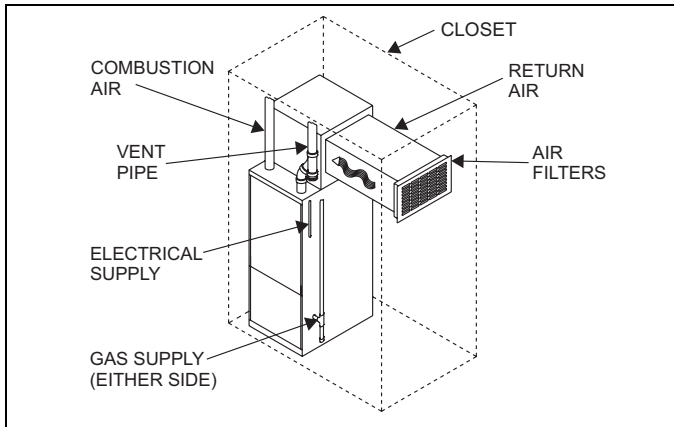


FIGURE 4: Return Filter Grill and Return Duct Installation

IMPORTANT: Air velocity through throwaway type filters must not exceed 300 feet per minute (91 m/min). All velocities over this require the use of high velocity filters. Refer to Table 19.

CAUTION

All installations must have a filter installed.

HORIZONTAL APPLICATION

Horizontal Filters

All filters and mounting provision must be field supplied. Filters(s) may be located in the duct system external to the furnace or in a return filter grille(s). Filters(s) may be located in the duct system using an external duct filter box attached to the furnace plenum. Any branch duct (rectangular or round duct) attached to the plenum must attach to the vertical plenum above the filter height. The use of straps and / or supports is required to support the weight of the external filter box.

An accessory filter rack is available.

ATTIC INSTALLATION

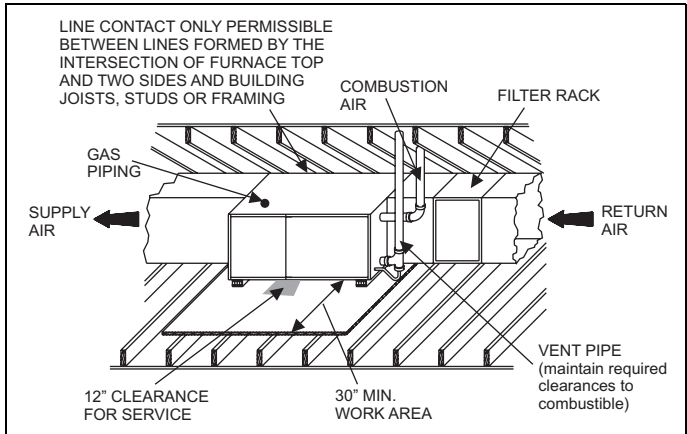


FIGURE 5: Typical Attic Installation

This appliance is design certified for line contact when the furnace is installed in the horizontal left or right position. The line contact is only permissible between lines are formed by the intersection of the top and two sides of the furnace and the building joists, studs or framing. This line may be in contact with combustible material.

IMPORTANT: In either a horizontal left or right installation, a minimum of 8" (20.3 cm) clearance is required beneath the furnace to allow for the installation of the condensate trap and drain pipe. Refer to "CONDENSATE PIPING" section of this manual for more information.

WARNING

When a furnace is installed in an attic or other insulated space, keep all insulating materials at least 12 inches (30.5 cm) away from furnace and burner combustion air openings.

CAUTION

If this furnace is installed over a finished space, a condensate safety pan must be installed.

SUSPENDED FURNACE / CRAWL SPACE INSTALLATION

The furnace can be hung from floor hoists or installed on suitable blocks or pad. Blocks or pad installations shall provide adequate height to ensure the unit will not be subject to water damage. Units may also be suspended from rafters or floor joists using rods, pipe angle supports or straps. Angle supports should be placed at the supply air end and near the blower deck. Do not support at return air end of unit. All four suspension points must be level to ensure quiet furnace operation. When suspending the furnace use a secure a platform constructed of plywood or other building material secured to the floor joists. Refer to Figure 6 for typical crawl space installation.

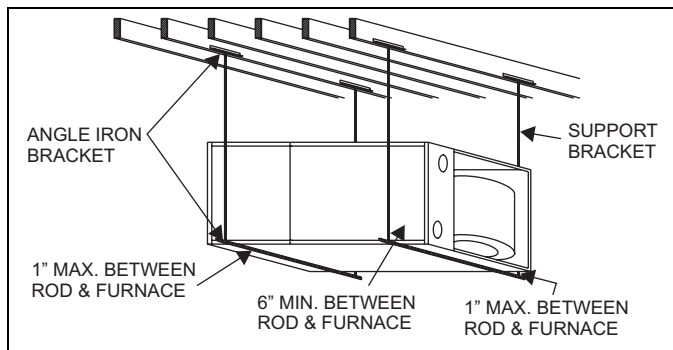


FIGURE 6: Typical Suspended Furnace / Crawl Space Installation

CAUTION

In any application where temperatures below freezing are possible, see "BELOW FREEZING LOCATIONS".

SECTION IV: GAS PIPING

GAS SAFETY

DANGER

An overpressure protection device, such as a pressure regulator, must be installed in the gas piping system upstream of the furnace and must act to limit the downstream pressure to the gas valve so it does not exceed 0.5 PSI {14" w.c. (3.48 kPa)}. Pressures exceeding 0.5 PSI {14" w.c. (3.48 kPa)} at the gas valve will cause damage to the gas valve, resulting in a fire or explosion or cause damage to the furnace or some of its components that will result in property damage and loss of life.

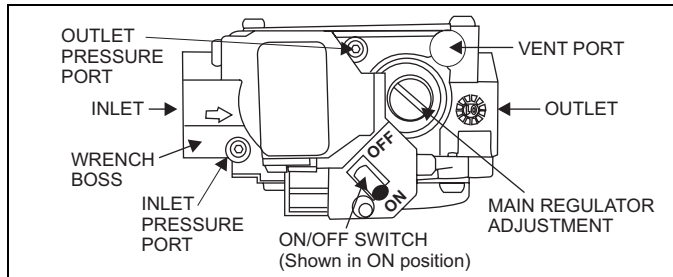


FIGURE 7: Gas Valve

IMPORTANT: Plan your gas supply before determining the correct gas pipe entry. Use 90-degree service elbow(s), or short nipples and conventional 90-degree elbow(s) to enter through the cabinet access holes.

GAS PIPING INSTALLATION

Properly sized wrought iron, approved flexible or steel pipe must be used when making gas connections to the unit. If local codes allow the use of a flexible gas appliance connection, always use a new listed connector. Do not use a connector that has previously serviced another gas appliance.

Some utility companies or local codes require pipe sizes larger than the minimum sizes listed in these instructions and in the codes. The furnace rating plate and the instructions in this section specify the type of gas approved for this furnace - only use those approved gases. The installation of a drip leg and ground union is required. Refer to Figure 8.

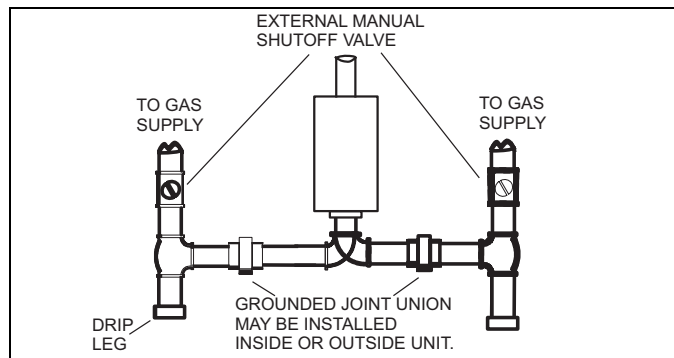


FIGURE 8: Downflow Gas Piping

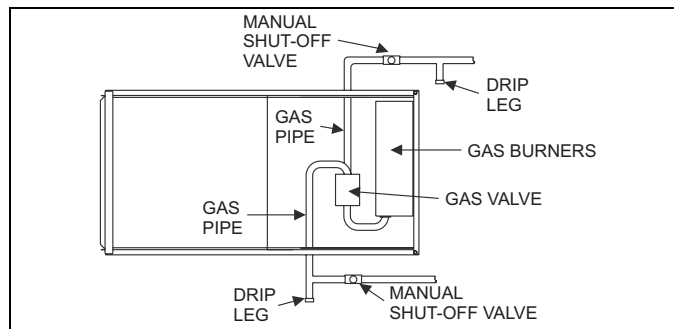


FIGURE 9: Horizontal Gas Piping

IMPORTANT: An accessible manual shutoff valve must be installed upstream of the furnace gas controls and within 6 feet (1.8 m) of the furnace.

The furnace must be isolated from the gas supply piping system by closing its individual external manual shutoff valve during any pressure testing of the gas supply piping system at pressures equal to or less than 1/2 psig (3.5 kPa).

CAUTION

Never apply a pipe wrench to the body of the gas valve when installing piping. A wrench must be placed on the octagonal hub located on the gas inlet side of the valve. Placing a wrench to the body of the gas valve will damage the valve causing improper operation and/or the valve to leak.

Gas piping may be connected from either side of the furnace using any of the gas pipe entry knockouts on both sides of the furnace. Refer to Figure 3 dimensions.

GAS ORIFICE CONVERSION FOR PROPANE (LP)

This furnace is constructed at the factory for natural gas-fired operation, but may be converted to operate on propane (LP) gas by using a factory-supplied LP conversion kit. Follow the instructions supplied with the LP kit. Refer to Table 6 or the instructions in the propane (LP) conversion kit for the proper gas orifice size.

HIGH ALTITUDE GAS ORIFICE CONVERSION

This furnace is constructed at the factory for natural gas-fired operation at 0 – 8,000 feet (0-m – 2,438 m) above sea level.

The manifold pressure must be changed in order to maintain proper and safe operation when the furnace is installed in a location where the altitude is greater than 8,000 feet (2,438 m) above sea level. Refer to Table 6 for proper manifold pressure settings.

HIGH ALTITUDE PRESSURE SWITCH CONVERSION

For installation where the altitude is less than 8,000 feet (2,438 m), it is not required that the pressure switch be changed. For altitudes above 8,000 feet (2,438 m), see Field Installed Accessories - High Altitude pressure Switch.

TABLE 6: Nominal Manifold Pressure

Manifold Pressures (in wc)					Manifold Pressures (kpa)				
		Altitude (feet)					Altitude (m)		
		0-7999	8000-8999	9000-9999			0-2437	2438-2742	2743-3048
Gas Heating Value (BTU/cu ft.)	800	3.5	3.5	3.5	Gas Heating Value (MJ/cu m)	29.8	0.87	0.87	0.87
	850	3.5	3.5	3.5		31.7	0.87	0.87	0.87
	900	3.5	3.5	3.5		33.5	0.87	0.87	0.87
	950	3.5	3.5	3.3		35.4	0.87	0.87	0.81
	1000	3.5	3.2	2.9		37.3	0.87	0.80	0.73
	1050	3.5	2.9	2.7		39.1	0.87	0.73	0.67
	1100	3.2	2.7	2.4		41.0	0.80	0.66	0.61
	2500 (LP)	9.8	8.2	7.5		93.2 (LP)	2.44	2.03	1.86

▲ DANGER**PROPANE AND HIGH ALTITUDE CONVERSION KITS**

It is very important to choose the correct kit and/or gas orifices for the altitude and the type of gas for which the furnace is being installed.

Only use natural gas in furnaces designed for natural gas. Only use propane (LP) gas for furnaces that have been properly converted to use propane (LP) gas. Do not use this furnace with butane gas.

Incorrect gas orifices or a furnace that has been improperly converted will create an extremely dangerous condition resulting in premature heat exchanger failure, excessive sooting, high levels of carbon monoxide, personal injury, property damage, a fire hazard and/or death.

High altitude and propane (LP) conversions are required in order for the appliance to satisfactorily meet the application.

An authorized distributor or dealer must make all gas conversions.

In Canada, a certified conversion station or other qualified agency, using factory specified and/or approved parts, must perform the conversion.

The installer must take every precaution to insure that the furnace has been converted to the proper gas orifice size when the furnace is installed. Do not attempt to drill out any orifices to obtain the proper orifice size. Drilling out a gas orifice will cause misalignment of the burner flames, causing premature heat exchanger burnout, high levels of carbon monoxide, excessive sooting, a fire hazard, personal injury, property damage and/or death.

SECTION V: ELECTRICAL POWER**ELECTRICAL POWER CONNECTIONS**

Field wiring to the unit must be grounded. Electric wires that are field installed shall conform to the temperature limitation for 63°F (35°C) rise wire when installed in accordance with instructions. Refer to Table 7 in these instructions for specific furnace electrical data.

▲ CAUTION

Use copper conductors only.

TABLE 7: Electrical and Performance Data

Input/Cabinet		Output		Nominal Airflow		Cabinet Width		Total Unit	AFUE	Air Temp. Rise	
MBH	kW	MBH	kW	CFM	m ³ /min	In.	mm	Amps	%	°F	°C
40/A	12	37	10.8	1200	34	14-1/2	368	9	94	35 - 65	19 - 36
60/B	18	55	16.1	1200	34.0	17-1/2	444	9	92	35 - 65	19 - 36
80/B	23	74	21.7	1200	34.0	17-1/2	444	9	92	35 - 65	19 - 36
80/C	23	74	21.7	1600	45.3	21	533	12	92	35 - 65	19 - 36
100/C	29	93	27.3	1600	45.3	21	533	12	92	35 - 65	19 - 36
100/C	29	93	27.3	2000	56.6	21	533	14	92	35 - 65	19 - 36
120/D	35	112	32.8	2000	56.6	24-1/2	622	14	92	35 - 65	19 - 36

Input/Cabinet		Max. Outlet Air Temp.		Blower		Blower Size		Max. Over-current Protect	Min. Wire Size (awg) @ 75 ft. One Way	Operation Weight	
MBH	kW	°F	°C	HP	Amps	In.	cm			Lbs.	Kg.
40/A	12	165	73.9	1/2	7.0	11 x 8	27.9 x 20.3	20	14	120	54.5
60/B	18	165	73.9	1/2	7.0	11 x 8	27.9 x 20.3	20	14	130	59.0
80/B	23	165	73.9	1/2	7.0	11 x 8	27.9 x 20.3	20	14	145	65.9
80/C	23	165	73.9	3/4	10.2	11 x 10	27.9 x 25.4	20	14	155	70.5
100/C	29	165	73.9	3/4	10.2	11 x 10	25.4 x 25.4	20	14	170	77.3
100/C	29	165	73.9	1	12.7	11 x 11	27.9 x 27.9	20	12	175	79.5
120/D	35	165	73.9	1	12.7	11 x 11	27.9 x 27.9	20	12	180	81.8

Annual Fuel Utilization Efficiency (AFUE) numbers are determined in accordance with DOE Test procedures.

Wire size and over current protection must comply with the National Electrical Code (NFPA-70-latest edition) and all local codes.

The furnace shall be installed so that the electrical components are protected from water.

NOTES:

- For altitudes above 2000 ft. (609 m) reduce capacity 4% for each 1000 ft. above sea level.
- Wire size based on copper conductors, 140° F (60°C), 3% voltage drop.
- Continuous return air temperature must not be below 55°F (12.8° C).

SUPPLY VOLTAGE CONNECTIONS

IMPORTANT: The power connection leads and wiring box may be relocated to the left side of the furnace. Remove the screws and cut wire tie holding excess wiring. Reposition on the left side of the furnace and fasten using holes provided.

1. Provide a power supply separate from all other circuits. Install overcurrent protection and disconnect switch per local/national electrical codes. The switch should be close to the unit for convenience in servicing. With the disconnect or fused switch in the OFF position, check all wiring against the unit wiring label. Refer to the wiring diagram shown in Figure 41.
2. Remove the screws retaining the junction box cover. Route the power wiring through the opening in the unit into the junction box with a conduit connector or other proper connection. In the junction box there will be three wires, a Black Wire, a White Wire and a Green Wire. Connect the power supply as shown on the unit-wiring label on the inside of the blower compartment door or Figure 10. The black furnace lead must be connected to the L1 (hot) wire from the power supply. The white furnace lead must be connected to neutral. Connect the green furnace lead (equipment ground) to the power supply ground. An alternate wiring method is to use a field provided 2" (5.08 cm) x 4" (10.2 cm) box and cover on the outside of the furnace. Route the furnace leads into the box using a protective bushing where the wires pass through the furnace panel. After making the wiring connections replace the wiring box cover and screws.
3. The furnace's control system requires correct polarity of the power supply and a proper ground connection. If the power supply polarity is reversed, the control board will flash 9 times. The furnace will not operate until the polarity is corrected. Refer to "Furnace Diagnostics" section of the "User's Information, Maintenance, & Service Manual" provided with this furnace.

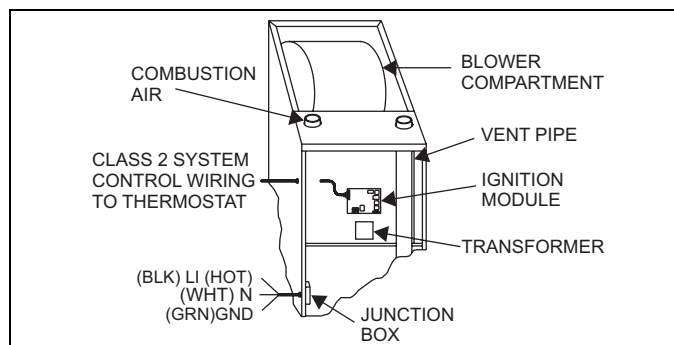


FIGURE 10: Electrical Wiring

LOW VOLTAGE CONTROL WIRING CONNECTIONS

Install the field-supplied thermostat by following the instructions that come with the thermostat. With the thermostat set in the OFF position and the main electrical source disconnected, connect the thermostat wiring from the wiring connections on the thermostat to the terminal board on the ignition module, as shown in Figure 11. Electronic thermostats may require the common wire to be connected as shown with the dashed line in Figure 11. Apply strain relief to thermostat wires passing through cabinet. If air conditioning equipment is installed, use thermostat wiring to connect the Y and C terminals on the furnace control board to the yellow and brown wires on the condensing unit (unit outside). Refer to Figure 11.

IMPORTANT: Set the heat anticipator in the room thermostat to 0.45 amps. Setting it lower will cause short cycles. Setting it higher will cause the room temperature to exceed the set points. Some electronic thermostats do not have adjustable heat anticipators. They may have other type cycle rate adjustments. Follow the thermostat manufacturer's instructions.

The 24-volt, 40 VA transformer is sized for the furnace components only, and should not be connected to power auxiliary devices such as humidifiers, air cleaners, etc. The transformer may provide power for an air conditioning unit contactor.

For additional connection diagrams for all UPG equipment refer to "Low Voltage System Wiring" document available online at www.upgnet.com in the Product Catalog Section.

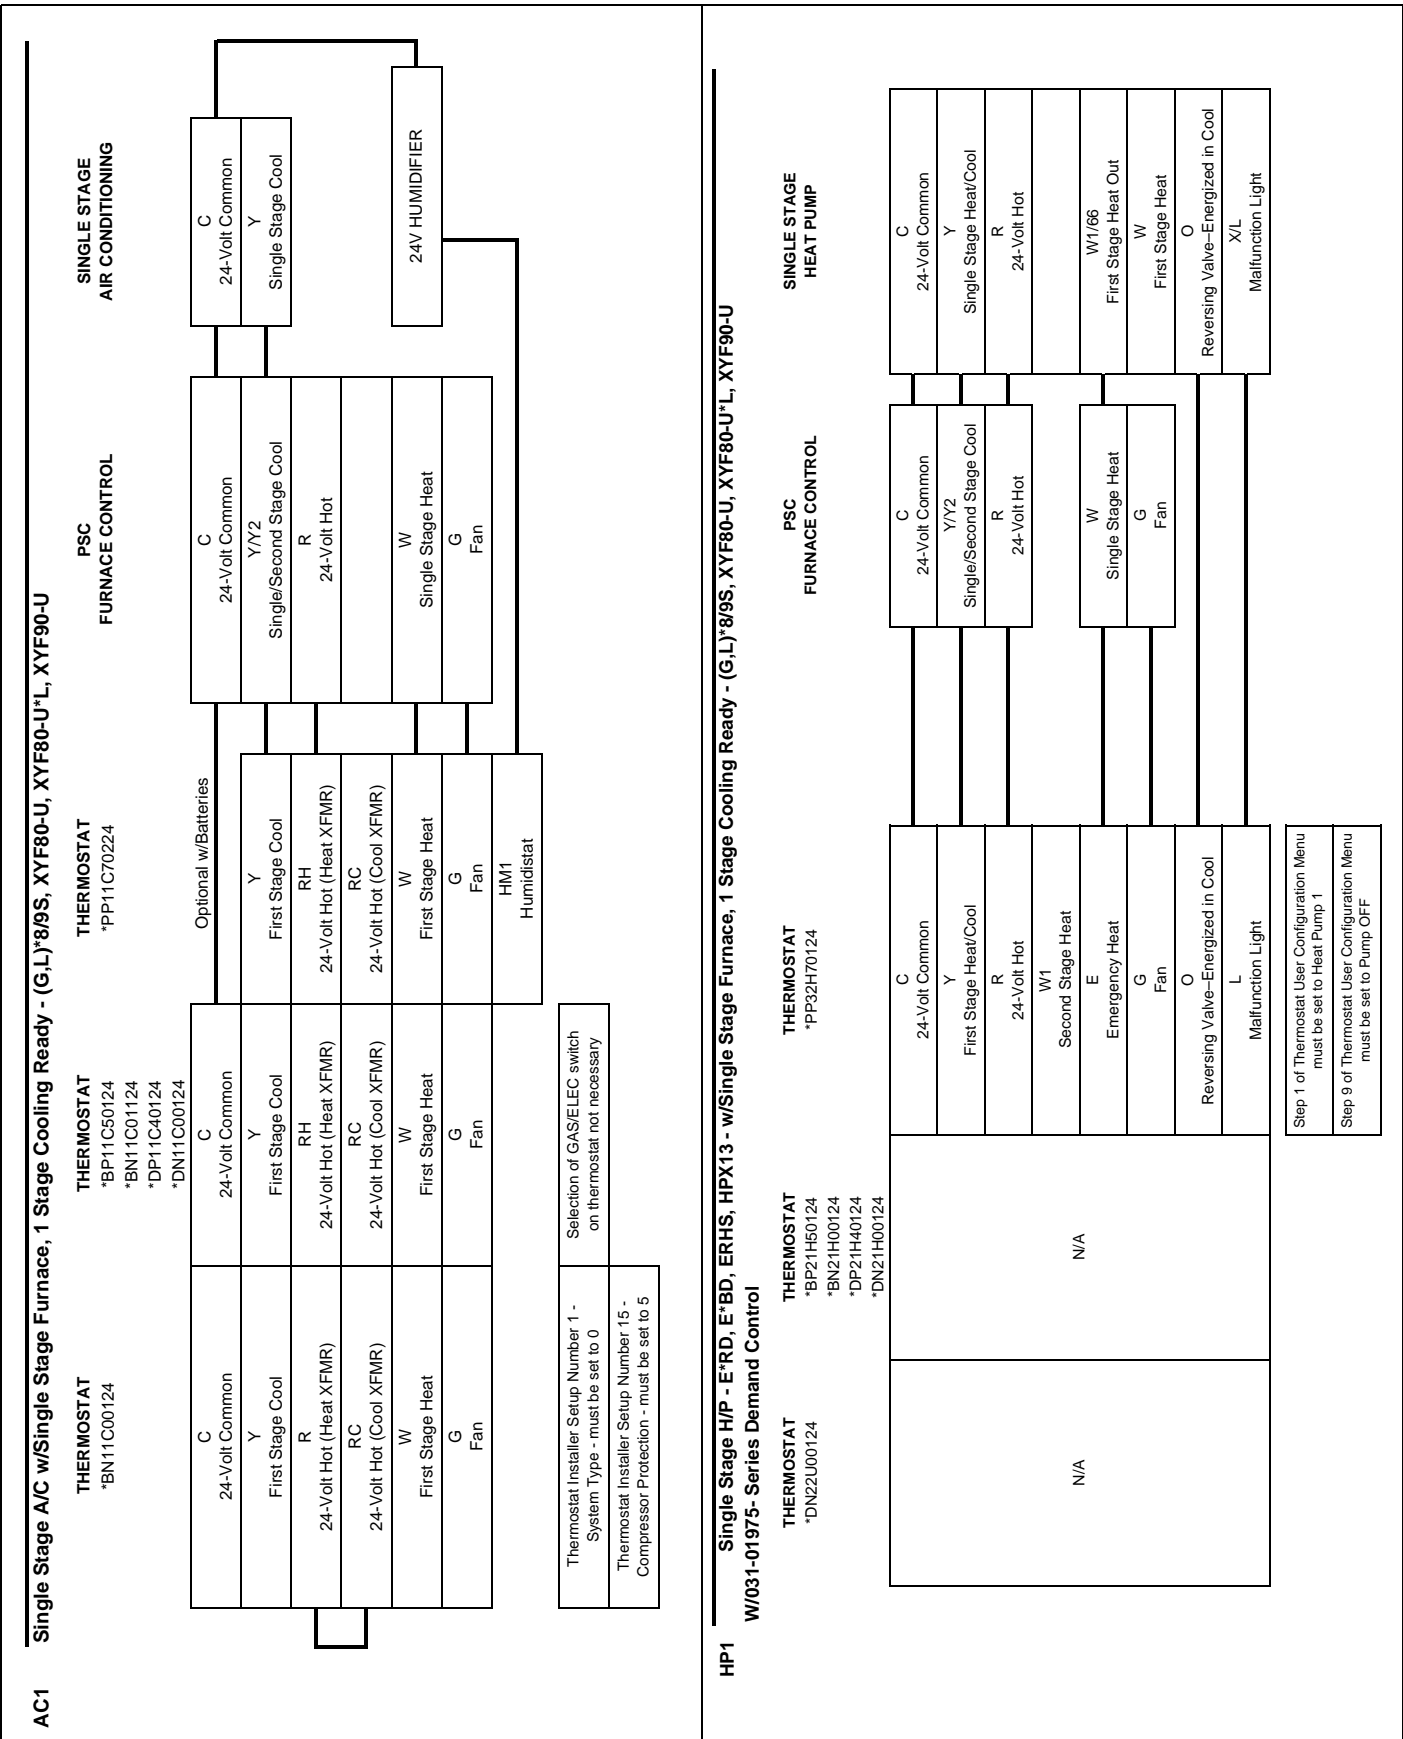


FIGURE 11: Thermostat Chart

ACCESSORY CONNECTIONS

The furnace control will allow power-switching control of various accessories. Refer to Figure 12, for connection details.

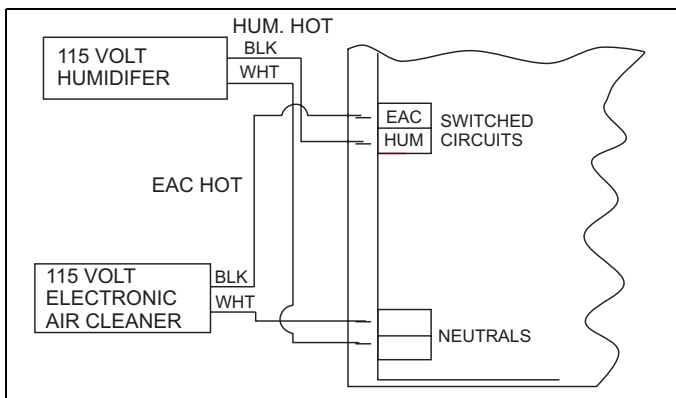


FIGURE 12: Accessory Connections

ELECTRONIC AIR CLEANER CONNECTION

Two 1/4" (0.64 cm) spade terminals (EAC and NEUTRAL) for electronic air cleaner connections are located on the control board. The terminals provide 115 VAC (1.0 amp maximum) during circulating blower operation.

HUMIDIFIER CONNECTION

Two 1/4" (0.64 cm) spade terminals (HUM and NEUTRAL) for humidifier connections are located on the control board. The terminals provide 115 VAC (1.0 amp maximum) during heating system operation.

SECTION VI: TWINNING AND STAGING

NOTE: You can twin two furnaces that have the same integrated control module. Check the part number on the integrated control module. You **cannot twin** two furnaces that have different integrated control module part numbers. If the part numbers of the two integrated control modules are different they may not communicate with each other so they will not work in a twinning application.

In applications where more heating capacity or more airflow capacity is needed than what one furnace can deliver, twinning can be used to make two furnaces operate in tandem. When two furnaces are installed using the same duct system, it is very important that the two furnace circulating air blowers operate in unison. If one blower starts before the second blower, the duct system will become pressurized and the blower on the second furnace will turn backwards causing the second furnace to overheat, resulting in damage to the furnace. Twinning is used to make two furnaces operate in tandem, using one duct system, one room thermostat and causing both furnaces to turn on and off simultaneously.

⚠ WARNING

Before installing the relay and wiring, disconnect electrical power to both furnaces. Failure to cut power could result in electrical shock or equipment damage.

⚠ CAUTION

The relay must not be installed in any location where it could be exposed to water. If the relay has been exposed to water in any way, it must not be used.

TWINNING DUCT SYSTEM

Twinning furnaces must only be applied on a common duct system. A single air supply plenum must be used for both furnaces and coil(s). Separate plenums and supply ducts systems cannot be utilized. A single return air plenum, common to both furnaces must be used.

Both furnaces must be identical models in both heating capacity and CFM capacity. Both furnaces must be operated on the same motor speed tap. See typical application, Figure 13.

If furnace staging is desired with two single stage furnaces on a common duct, where the gas burner on the first furnace operates on W1 and the gas burner on the second furnace operates on W2, then the use of an air-mixing device in the plenum to mix the air from both furnaces is strongly recommended. The mixing device must be installed before any ducts that supply air to occupied spaces. Twinning causes both indoor fans to operate simultaneously. If a mixing device is not used, any ducts that are connected down stream from the furnace that operates on W2, will be supplying cold air in the Heating mode to the occupied spaces unless W2 is energized.

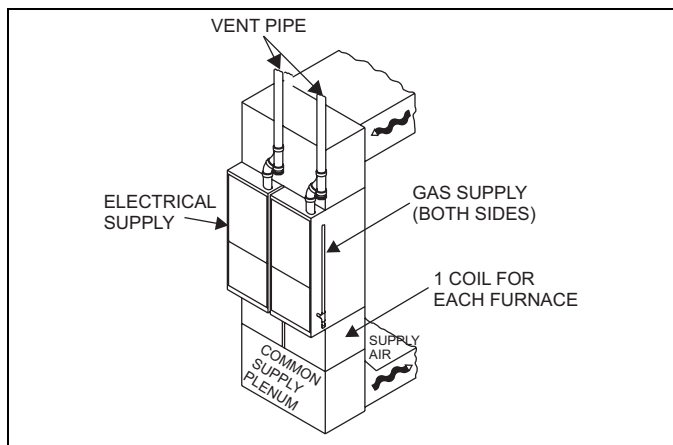


FIGURE 13: Typical Twinned Furnace Application

IMPORTANT: When two furnaces are twinned, typical system total airflow will be approximately 85% of additive individual furnaces, i.e., two 2000 CFM (56.6 m³/m) units will yield a total 3400 CFM (96.3 m³/m).

GAS PIPING

Furnace gas supplies must be provided as specified with these instructions. Since the furnaces are side by side, with no space between, gas supplies must enter on the right and left respectively. All gas piping must be in accordance with the national fuel gas code, ANSI Z223.1, latest edition, and/or all local code or utility requirements.

TWINNING

In applications where more heating capacity or more airflow capacity is needed than what one furnace can deliver, twinning can be used to make two furnaces operate in tandem, using one duct system and one room thermostat. When one duct system is used for two furnaces, it is necessary that the two blowers operate in unison. The twinning function of the board in this furnace ensures that both blowers turn on and off simultaneously, and operate on the same blower speed.

Single-Wire Twinning

The control in the furnace has the single-wire twinning feature. With this feature, a single wire is connected between the TWIN terminal on one furnace board to the TWIN terminal on the second furnace board. The board then communicates the blower status from one furnace to the other along this wire. This communication makes the second furnace blower come on at the same time, and on the same speed, as the first furnace blower.

Single-Wire Twinning Instructions

Connect the control wiring as shown in the Figure 14.

1. Connect the low voltage wiring from the wall thermostat to the terminal strip on the control board of Furnace #1.
2. Connect a wire from the TWIN terminal of Furnace #1 to the TWIN terminal of Furnace #2.
3. Install a separate 24V relay as shown in the diagram below. Use of this relay is required, as it ensures that the transformers of the two furnaces are isolated, thus preventing the possibility of any safety devices being bypassed.

Single-Wire Twinning Operation

Heating - On a call for heat (W signal) from the wall thermostat, both furnaces will start the ignition sequence and the burners on both furnaces will light. About thirty seconds after the burners light, the blowers on both furnaces will come on in heating speed. When the thermostat is satisfied, the burners will all shut off and, after the selected blower off delay time, both blowers will shut off at the same time. The twinning control ensures that both blowers come on and shut off at the same time.

Cooling - On a call for cooling (Y signal) from the wall thermostat, both furnace blowers will come on at the same time in cooling speed. When the thermostat is satisfied, both blowers will stay on for 60 seconds, then will shut off at the same time.

Continuous Fan - On a thermostat call for continuous fan (G signal), both furnace blowers will come on at the same time in cooling speed and will stay on until the G signal is removed.

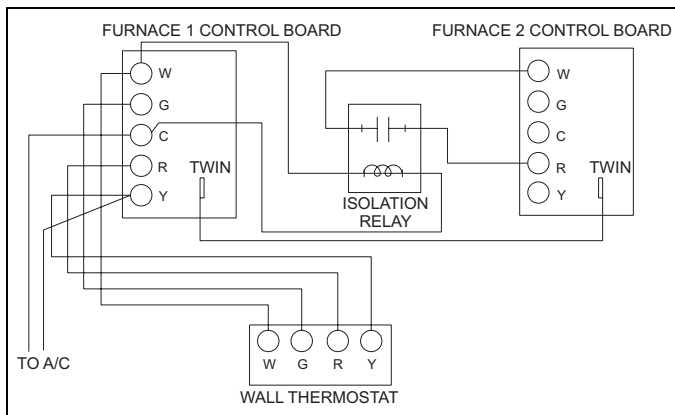


FIGURE 14: Single Stage Twinning Wiring Diagram

STAGING

In applications where more heating capacity or more airflow capacity is needed than what one furnace can deliver, twinning can be used to make two furnaces operate in tandem, using one duct system and one room thermostat. This control can also be used along with a two-stage wall thermostat to stage two twinned furnaces, making them operate like a single two-stage furnace. This allows only one furnace to supply heat during times when the heat output from one furnace is sufficient to satisfy the demand. When one duct system is used for two furnaces, it is necessary that the two blowers operate in unison. The twinning function of this board ensures that both blowers turn on and off simultaneously, and operate on the same blower speed. Even when only one furnace is supplying heat, both furnace blowers must run.

Single-Wire Staging

The single-wire twinning feature of this board can also be used for staging of two furnaces. With this feature, a single wire is connected between the TWIN terminal on one furnace board to the TWIN terminal on the second furnace board. The board then communicates the blower status from one furnace to the other along this wire. This communication makes the second furnace blower come on at the same time, and on the same speed, as the first furnace blower.

Single-Wire Staging Instructions

Connect the control wiring as shown in the Figure 15.

1. Connect the low voltage wiring from the wall thermostat to the terminal strip on the control board of Furnace #1. For staging applications, the wire from thermostat W1 is connected to the W connection on the board on Furnace #1. The wire from thermostat W2 is connected to Furnace #2 through a separate relay, as described below.
2. Connect a wire from the TWIN terminal of Furnace #1 to the TWIN terminal of Furnace #2.
3. Install a separate 24V relay as shown in the diagram below. Use of this relay is required, as it ensures that the transformers of the two furnaces are isolated, thus preventing the possibility of any safety devices being bypassed.

Single-Wire Staging Operation

Heating - On a call for first-stage heat (W1 signal) from the wall thermostat, Furnace #1 will start the ignition sequence and the burners will light. About thirty seconds after the burners light, the blowers on both furnaces will come on in heating speed. When the thermostat is satisfied, the burners will shut off and, after the selected blower off delay time, both blowers will shut off at the same time. On a call for second stage of heat, the burners of Furnace #2 will also light and both blowers will run. The twinning control ensures that both blowers come on and shut off at the same time.

Cooling - On a call for cooling (Y signal) from the wall thermostat, both furnace blowers will come on at the same time. When the thermostat is satisfied, both blowers will stay on for 60 seconds, then will shut off at the same time.

Continuous Fan - On a thermostat call for continuous fan (G signal), both furnace blowers will come on at the same time in cooling speed and will stay on until the G signal is removed.

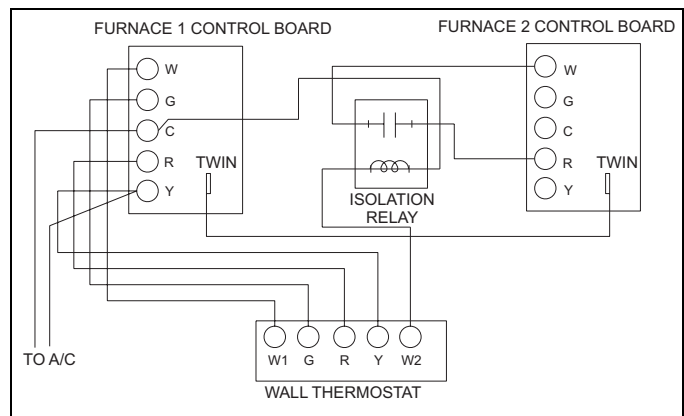


FIGURE 15: Two-Stage Twinning Wiring Diagram

SECTION VII: COMBUSTION AIR AND VENT SYSTEM COMBUSTION AIR AND VENT SAFETY

This Category IV, dual certified direct vent furnace is designed for residential application. It may be installed without modification to the condensate system in a basement, garage, equipment room, alcove, attic or any other indoor location provided the space temperature is 32 °F (0°C) or higher and where all required clearance to combustibles and other restrictions are met. The combustion air and the venting system must be installed in accordance with Section 5.3, Air for Combustion and Ventilation, of the National Fuel Gas Code Z223.1/NFPA 54 (latest edition), or Sections 7.2, 7.3 or 7.4 of CSA B149.1, National Gas and Propane Codes (latest edition) or applicable provisions of the local building code and these instructions.

IMPORTANT: The "VENT SYSTEM" must be installed as specified in these instructions for Residential and Non HUD Modular Homes. The sealed combustion air / vent system is the only configuration that can be installed in a Non HUD Modular Home.

WARNING

This furnace may not be common vented with any other appliance, since it requires separate, properly sized air intake and vent lines. The furnace shall not be connected to any type of B, BW or L vent or vent connector, and not connected to any portion of a factory-built or masonry chimney

The furnace shall not be connected to a chimney flue serving a separate appliance designed to burn solid fuel.

CAUTION

When combustion air pipe is installed above a suspended ceiling or when it passes through a warm and humid space, the pipe must be insulated with 1/2" Armaflex or other heat resistant type insulation.

Vent piping must be insulated with 1/2" insulation if it will be subjected to freezing temperatures such as routing through unheated areas or through an unused chimney.

COMBUSTION AIR/VENT PIPE SIZING

The size of pipe required will be determined by the furnace model, the total length of pipe required and the number of elbows required.

Table 8 lists the maximum equivalent length of pipe allowed for each model of furnace. The equivalent length of elbows is shown in Table 9. The equivalent length of the vent system is the total length of straight pipe PLUS the equivalent length of all of the elbows.

The following rules must also be followed:

1. Long radius (sweep) elbows are recommended. Standard elbows may be used, but since they have a longer equivalent length, they will reduce the total length of pipe that will be allowed. Short radius (plumbing vent) elbows are not allowed. The standard dimensions of the acceptable elbows are shown below.
2. The maximum equivalent length listed in Table 8 is for the vent piping and the air intake piping separately. For example, if the table allows 65 equivalent feet for a particular model, then the vent can have 65 equivalent feet of pipe, AND the combustion air intake can have another 65 equivalent feet of pipe.
3. Three vent terminal elbows (two for the vent and one for the combustion air intake) are already accounted for and need not be included in the equivalent length calculation.
4. All combustion air and vent pipe must conform to American National Standards Institute (ANSI) and American Society for Testing and Materials (ASTM) standards D1785 (Schedule 40 PVC), D2665 (PVC-DWV), F891 (PVC-DWV Cellular Core), D2261 (ABS-DWV) or F628 (Schedule 40 ABS). Pipe cement and primer must conform to ASTM Standard D2546 (PVC) or D2235 (ABS). If ABS pipe is to be used, any joint where ABS pipe is joined to PVC pipe must be glued with cement that is approved for use with BOTH materials. Metallic materials must not be used for venting or air intake.
5. If a flexible connector is used in the vent system, it must be made of a material that is resistant to acidic exposure and to at least 225° F temperature. Flexible connectors are also allowed in the combustion air pipe.
6. All models are supplied with 2" vent connections. When the pipe must be increased to 3" diameter, the transition from 2" to 3" must be done as close to the furnace as possible. For upflow models, the transition from 2" to 3" should be done immediately above the furnace. For downflow or horizontal models, the transition from 2" to 3" pipe should be done immediately after the drain tee or drain elbow.
7. In Canada, vents shall be certified to ULC S636, Standard for Type BH Gas Venting Systems. IPEX System 636 PVC is certified to this standard.
8. In Canada, the first three feet (900 mm) of the vent must be readily accessible for inspection.

TABLE 8: Maximum Equivalent Pipe Length

Model Input BTUH (kW)	Pipe Size Inches (cm)	Maximum Equivalent length feet (m)
40,000 (11.7)	2 (5.1)	65 (19.8)
40,000 (11.7)	3 (7.6)	90 (27.4)
60,000 (17.6)	2 (5.1)	65 (19.8)
60,000 (17.6)	3 (7.6)	90 (27.4)
80,000 (23.4)	2 (5.1)	65 (19.8)
80,000 (23.4)	3 (7.6)	90 (27.4)
100,000 (29.3)	2 (5.1)	30 (9.2)
100,000 (29.3)	3 (7.6)	85 (25.9)
120,000 (29.3)	3 (7.6)	60 (18.3)

TABLE 9: Equivalent Length of Fittings

Fitting	Equivalent Length
2" 90° sweep elbow	5 feet of 2" pipe
2" 45° sweep elbow	2-1/2 feet of 2" pipe
2" 90° standard elbow	10 feet of 2" pipe
2" 45° standard elbow	5 feet of 2" pipe
3" 90° sweep elbow	5 feet of 3" pipe
3" 45° sweep elbow	2-1/2 feet of 3" pipe
3" 90° standard elbow	10 feet of 3" pipe
3" 45° standard elbow	5 feet of 3" pipe
2" corrugated connector	10 feet of 2" pipe
3" corrugated connector	10 feet of 3" pipe

Example:

An 80,000 BTUH furnace requires 32 feet of pipe and four 90° elbows. Using 2" pipe and standard elbows, the total equivalent length will be:

$$\begin{array}{r} 32 \text{ feet of 2" pipe} = 32 \text{ equivalent feet} \\ 4 - 90^\circ \text{ standard 2" elbows} = (4 \times 10) = 40 \text{ equivalent feet} \\ \hline \text{Total} = 72 \text{ equivalent feet of 2" pipe} \end{array}$$

This exceeds the 65 foot maximum equivalent length of 2" pipe allowed for that model and is thus not acceptable.

By using sweep elbows, the total equivalent length will be:

$$\begin{array}{r} 32 \text{ feet of 2" pipe} = 32 \text{ equivalent feet} \\ 4 - 90^\circ \text{ standard 2" elbows} = (4 \times 5) = 20 \text{ equivalent feet} \\ \hline \text{Total} = 52 \text{ equivalent feet of 2" pipe} \end{array}$$

This is less than the 65 foot maximum equivalent length of 2" pipe allowed for that model and is thus acceptable.

Alternatively, using 3" pipe and standard elbows, the total equivalent length will be:

$$\begin{array}{r} 32 \text{ feet of 3" pipe} = 32 \text{ equivalent feet} \\ 4 - 90^\circ \text{ standard 2" elbows} = (4 \times 5) = 40 \text{ equivalent feet} \\ \hline \text{Total} = 72 \text{ equivalent feet of 3" pipe} \end{array}$$

This is less than the 90 foot maximum equivalent length of 3" pipe allowed for that model and is thus acceptable.

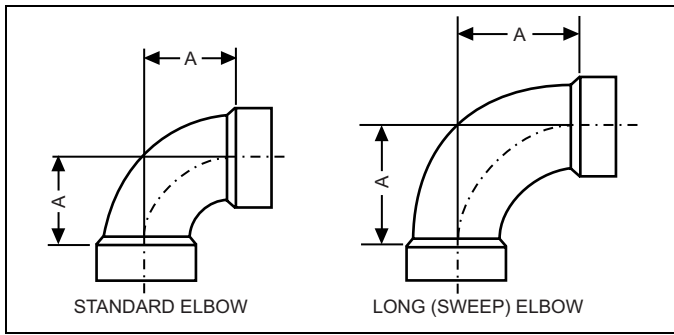


FIGURE 16: Dimensions

TABLE 10: Elbow Dimensions

Elbow	"A" Dimension
2" Standard	2-5/16"
3" Standard	3-1/16"
2" Sweep	3-1/4"
3" Sweep	4-1/16"

Dimensions are those required in Standard ASTM D-3311.

NOTE: Sidewall vent terminal may be used for sidewall vent terminations. Refer to part list in the back of the USERS INFORMATION AND SERVICE AND MAINTENANCE MANUAL for the terminal part number.

TABLE 11: Combustion Air Intake and Vent Connection Size at Furnace (All Models)

FURNACE VENT CONNECTION SIZES		
Furnace Input	40 - 100 MBH (17.5 - 29.3 kW)	120 MBH (35.2 kW)
Intake Pipe Size	2" (5.1 cm)	3" (7.6 cm)
Vent Pipe Size	2" (5.1 cm)	2" (5.1 cm)

*. Vent pipe size must be increased to 3" diameter after connection to furnace on this model.

IMPORTANT: Accessory concentric vent / intake termination kits 1CT0302 and 1CT0303 are available and approved for use with these furnaces. Horizontal sidewall vent terminations kits 1HT0901 & 1HT0902 are also approved for use with these furnaces.

IMPORTANT: Furnace vent pipe connections are sized for 2" (5.1 cm) pipe. Any pipe size change must be made outside the furnace casing in a vertical pipe section to allow proper drainage of condensate. An offset using two 45° (degree) elbows will be required for plenum clearance when the vent is increased to 3" (7.6 cm).

COMBUSTION AIR AND VENT PIPING ASSEMBLY

The final assembly procedure for the combustion air and vent piping is as follows:

1. Cut piping to the proper length beginning at the furnace.
2. Deburr the piping inside and outside.
3. Chamfer (bevel) the outer edges of the piping.
4. Dry-fit the vent piping assembly from the furnace to the outside termination checking for proper fit support and slope.
5. Dry-fit the combustion air piping assembly checking for proper fit, support and slope on the following systems:
 - A. Sealed combustion air systems from the furnace to the outside termination.
 - B. Ventilated combustion air systems from the furnace to the attic or crawl space termination.

⚠ CAUTION

Solvent cements are flammable and must be used in well-ventilated areas only. Keep them away from heat, sparks and open flames. Do not breathe vapors and avoid contact with skin and eyes.

6. Disassemble the combustion air and vent piping, apply cement primer and the cement per the manufactures instructions. Primer and cement must conform to ASTM D2564 for PVC, or ASTM D2235 for ABS piping.
7. All joints must provide a permanent airtight and watertight seal.
8. Support the combustion air and vent piping such that it is angled a minimum of 1/4" per foot (0.635 cm/m) so that condensate will flow back towards the furnace. Piping should be supported with pipe hangers to prevent sagging.
9. Seal around the openings where the combustion air and / or vent piping pass through the roof or sidewalls.

COMBUSTION AIR / VENT CLEARANCES

IMPORTANT: The vent must be installed with the minimum clearances as shown in Figure 17, and must comply with local codes and requirements.

VENT CLEARANCES

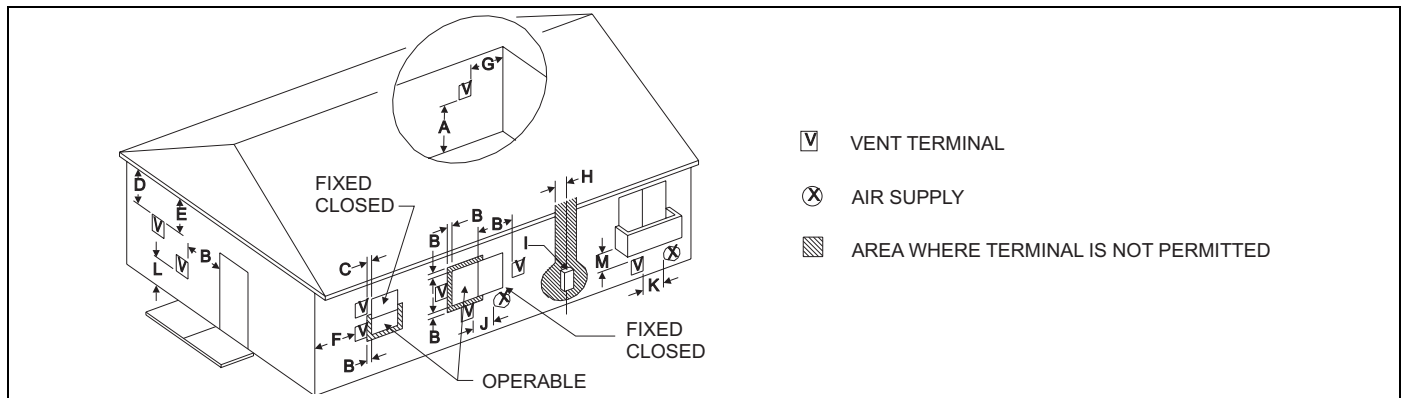


FIGURE 17: Home Layout

Direct Vent Terminal Clearances	Canadian Installations ^{1,3}	US Installation ^{2,3}
A. Clearance above grade, veranda, porch, deck, or balcony	12 inches (30 cm)	12 inches (30 cm)
B. Clearance to window or door that may be opened	12 inches (30 cm) for models ≤100,000 BTUH (30 kW), 36 inches (91 cm) for models >100,000 BTUH (30 kW)	Two-pipe (direct vent) applications: 9 inches (23 cm) for models ≤50,000 BTUH (15 kW), 12 inches (30 cm) for models >50,000 BTUH (15 kW). ††
C. Clearance to permanently closed window	12 inches (30 cm)	12 inches (30 cm)
D. Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (61 cm) from the center line of the terminal	12 inches (30 cm) or in accordance with local installation codes and the requirements of the gas supplier.	12 inches (30 cm) or in accordance with local installation codes and the requirements of the gas supplier
E. Clearance to unventilated soffit	12 inches (30 cm) or in accordance with local installation codes and the requirements of the gas supplier	12 inches (30 cm) or in accordance with local installation codes and the requirements of the gas supplier
F. Clearance to outside corner	12 inches (30 cm) or in accordance with local installation codes and the requirements of the gas supplier	12 inches (30 cm) or in accordance with local installation codes and the requirements of the gas supplier
G. Clearance to inside corner	3 feet (91 cm)	3 feet (91 cm)
H. Clearance to each side of center line extended above meter/regulator assembly	Above a meter/regulator assembly within 3 feet (91 cm) horizontally of the vertical center-line of the regulator vent outlet to a maximum vertical distance of 15 feet (4.5 cm) above the meter/regulator assembly.	Above a meter/regulator assembly within 3 feet (91 cm) horizontally of the vertical center-line of the regulator vent outlet to a maximum vertical distance of 15 feet (4.5 cm) above the meter/regulator assembly.
I. Clearance to service regulator vent outlet	3 feet (91 cm)	3 feet (91 cm) or in accordance with local installation codes and the requirements of the gas supplier.
J. Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance	12 inches (30 cm) for models ≤100,000 BTUH (30 kW), 36 inches (91 cm) for models >100,000 BTUH (30 kW)	Two-pipe (direct vent) applications: 9 inches (23 cm) for models ≤50,000 BTUH (15 kW), 12 inches (30 cm) for models >50,000 BTUH (15 kW).
K. Clearance to a mechanical supply inlet	6 feet (1.83 m)	3 feet (91 cm) above if within 10 feet (3 cm) horizontally
L. Clearance above paved sidewalk or paved driveway located on public property	7 feet (2.13 m)†	7 feet (2.13 m) or in accordance with local installation codes and the requirements of the gas supplier.
M. Clearance under veranda, porch, deck, or balcony	12 inches (30 cm)‡	12 inches (30 cm) or in accordance with local installation codes and the requirements of the gas supplier.

1. In accordance with the current CSA B149.1-00, Natural Gas and Propane Installation Code.

2. In accordance with the current ANSI Z223.1 / NFPA 54, National Gas Code.

3. In accordance with the current ANSI Z21.47 * CSA 2.3 American National Standard.

† A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

†† 12 inches (30 cm) up from the bottom edge of the structure for Two-pipe (direct vent) applications per ANSI Z223.1 / NFPA 54, National Gas Code.

‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor and the distance between the top of the vent termination and the underside of the veranda, porch, or deck is greater than 1 foot (30 cm) as specified in CSA B149.1-00.

A vent shall not terminate less than 1 foot (30 cm) above a grade level.

Any fresh air or make up inlet for dryer or furnace area is considered to be forced air inlet.

Avoid areas where condensate drippage may cause problems such as above planters, patios, or adjacent to windows where steam may cause fogging.

A terminus of a vent shall be fitted with a cap in accordance with the vent manufacturer's installation instructions, or in accordance with the installation instructions for a special venting system.

IMPORTANT: Consideration must be given for degradation of building materials by flue gases. Sidewall termination may require sealing or shielding of building surfaces with a corrosion resistant material to protect against combustion product corrosion. Consideration must be given to wind direction in order to prevent flue products and/or condensate from being blown against the building surfaces. If a metal shield is used it must be a stainless steel material at a minimum dimension of 20 inches. It is recommended that a retaining type collar be used that is attached to the building surface to prevent movement of the vent pipe.

Responsibility for the provision of proper adequate venting and air supply for application shall rest with the installer.

Vent shall extend high enough above building, or a neighboring obstruction, so that wind from any direction will not create a positive pressure in the vicinity of the vent.

VENT SYSTEM

This furnace is certified to be installed with one of two possible vent configurations.

1. Horizontal vent system. This vent system can be installed completely horizontal or combinations of horizontal, vertical, or offset using elbows.
2. Vertical vent system. This vent system can be installed completely vertical or a combination of horizontal, vertical, or offset using elbows.

HORIZONTAL VENT APPLICATIONS AND TERMINATION

When selecting the location for a horizontal combustion air / vent termination, the following should be considered:

1. Observe all clearances listed in vent clearances in these instructions.
2. Termination should be positioned where vent vapors will not damage plants or shrubs or air conditioning equipment.
3. Termination should be located where it will not be affected by wind gusts, light snow, airborne leaves or allow recirculation of flue gases.
4. Termination should be located where it will not be damaged or exposed to flying stones, balls, etc.
5. Termination should be positioned where vent vapors are not objectionable.
6. Horizontal portions of the vent system must slope upwards and be supported to prevent sagging. The vent system may be supported by the use of clamps or hangers secured to a permanent part of the structure every 4 ft. (1.22 m).
7. Sealed combustion air systems must be installed so the vent and the combustion air pipes terminate in the same atmospheric zone. Refer to Figures 19, 20, & 21.

DOWNFLOW VENT ASSEMBLY

1. Place the 2" (5.08 cm) 45° PVC street elbow on the vent connection shown in Figure 18.
2. Place the 2" (5.08 cm) PVC WYE ("Y") assembly on the 2" (5.08 cm) 45° PVC street elbow as shown in Figure 18.
3. Locate the rubber condensate hose in front of the blower access panel.
4. Slide the hose through the hole in the top cover, and insert the hose on to the barbed fitting on the bottom of the 2" (5.08 cm) PVC WYE ("Y") assembly as shown in Figure 18.

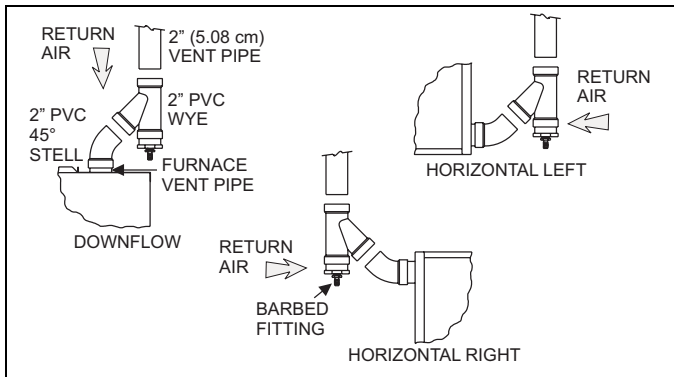


FIGURE 18: Downflow/Horizontal Vent Assembly

HORIZONTAL VENT ASSEMBLY

Horizontal Left Vent Assembly

1. Place the 2" (5.08 cm) 45° PVC street elbow on the vent connection shown in Figure 18.
2. Place the 2" (5.08 cm) PVC WYE ("Y") assembly on the 2" (5.08 cm) 45° PVC street elbow as shown in Figure 18.
3. Refer to the "DOWNFLOW/HORIZONTAL CONDENSATE INTERNAL DRAIN CONFIGURATIONS" for further details.

Horizontal Right Vent Assembly

1. Place the 2" (5.08 cm) 45° PVC street elbow on the vent connection shown in Figure 18.
2. Place the 2" (5.08 cm) PVC WYE ("Y") assembly on the 2" (5.08 cm) 45° PVC street elbow as shown in Figure 18.
3. Refer to the "DOWNFLOW/HORIZONTAL CONDENSATE INTERNAL DRAIN CONFIGURATIONS" for further details.

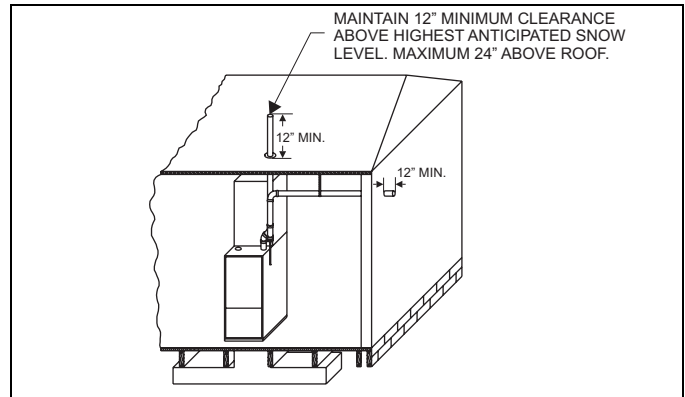


FIGURE 19: Termination Configuration - 1 Pipe

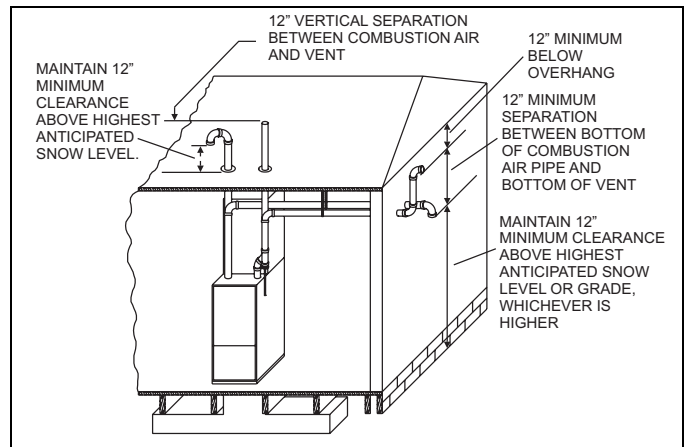


FIGURE 20: Termination Configuration - 2 Pipe

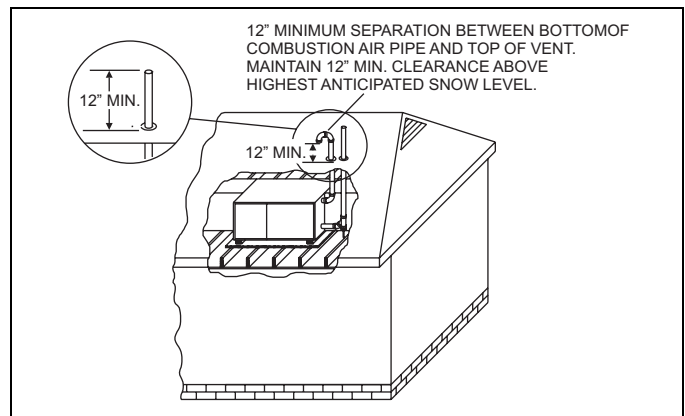


FIGURE 21: Termination Configuration - 2 Pipe Horizontal

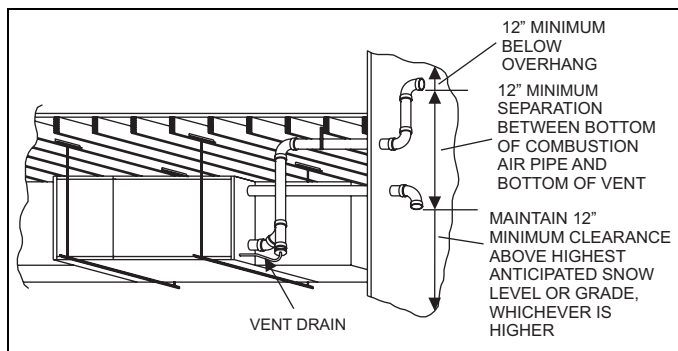


FIGURE 22: Crawl Space Termination Configuration - 2Pipe

VERTICAL VENT APPLICATIONS AND TERMINATION

Roof mounted vertical terminals may be field fabricated. Standard PVC/SRD fittings may be used. If installing a vertical venting system through any unconditioned space such as an attic or crawl space it must be insulated.

1. Observe all clearances listed in vent clearances in these instructions.
2. Termination should be positioned where vent vapors are not objectionable.
3. Termination should be located where it will not be affected by wind gusts, light snow, or allow recirculation of flue gases.
4. Termination should be located where it cannot be damaged, plugged or restricted by tree limbs, leaves and branches.
5. Horizontal portions of the vent system must slope upwards and be supported to prevent sagging. The vent system may be supported by the use of clamps or hangers secured to a permanent part of the structure every 4 ft. (1.22 m).

VENTING MULTIPLE UNITS

Only the sealed combustion system can be used for installations requiring more than one furnace in a structure. A separate sealed combustion air pipe and a separate vent pipe must be installed for each furnace. Do not connect more than one furnace to a combustion air pipe or a vent pipe. The combustion air and vent termination must be located as shown in Figures 23 or 24.

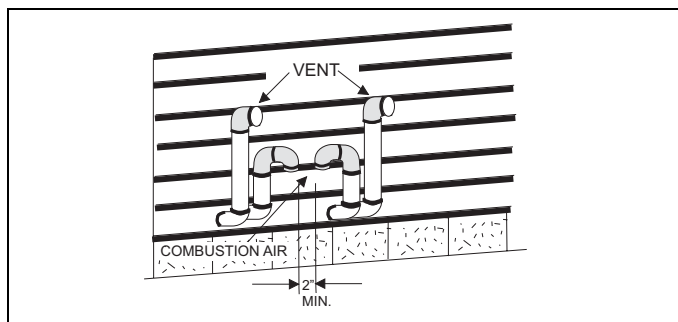


FIGURE 23: Double Horizontal Sealed Combustion Air and Vent Termination

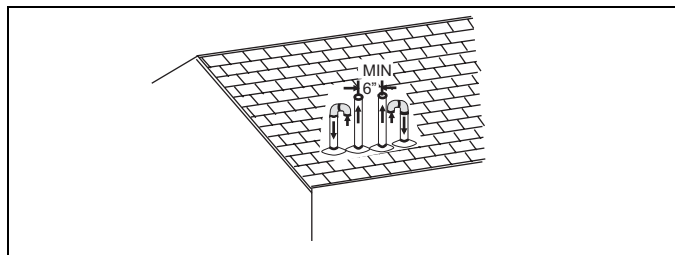


FIGURE 24: Double Vertical Sealed Combustion Air and Vent Termination

COMBUSTION AIR SUPPLY

All installations must comply with Section 5.3, Air for Combustion and Ventilation of the National Fuel Gas Code, ANSI Z223.1 or Sections 7.2, 7.3 or 7.4 of CAN/CGA B149.1 or .2 Installation Code - latest editions.

This furnace is certified to be installed with one of three possible combustion air intake configurations.

1. **OUTDOOR COMBUSTION AIR:** This is a sealed combustion air configuration where the combustion air is supplied through a PVC or ABS pipe that is connected to the PVC coupling attached to the burner box and is terminated in the same atmospheric zone as the vent. This type of installation is approved on all models. Refer to Figures 25 & 27.
2. **AMBIENT COMBUSTION AIR:** Combustion air is supplied from the area surrounding the furnace through the combustion air pipe in the furnace casing. The combustion air and the vent pipes are not terminated in the same atmospheric zone. Refer to Figures 19 & 26 for vent terminations. Refer to "AMBIENT COMBUSTION AIR SUPPLY" and "VENT AND SUPPLY OUTSIDE AIR SAFETY CHECK PROCEDURE" for proper installation.
3. **VENTILATED COMBUSTION AIR:** Combustion air is supplied through a PVC or ABS pipe that is connected to the PVC coupling attached to the burner box and is terminated in a ventilated attic or crawl space. The combustion air and the vent pipes are not terminated in the same atmospheric zone. Refer to Figure 28 for crawl space and attic termination. Only the combustion air intake may terminate in the attic. The vent must terminate outside.

Outdoor Combustion Air

Combustion Air Intake/Vent Connections

This installation requires combustion air to be brought in from outdoors. This requires a properly sized pipe (shown in Figures 31, 33, or 35) that will bring air in from the outdoors to the furnace combustion air intake collar on the burner box. The second pipe (shown in Figures 31, 33 or 35) is the furnace vent pipe.

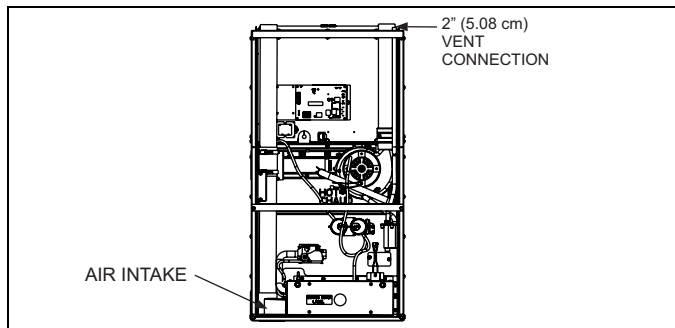


FIGURE 25: Sealed Combustion Air Intake Connection and Vent Connection

The combustion air intake pipe should be located either through the wall (horizontal or side vent) or through the roof (vertical vent). Care should be taken to locate side vented systems where trees or shrubs will not block or restrict supply air from entering the terminal.

Also, the terminal assembly should be located as far as possible from a swimming pool or a location where swimming pool chemicals might be stored. Be sure the terminal assembly follows the outdoor clearances listed in Section #1 "COMBUSTION AIR QUALITY (LIST OF CONTAMINANTS)."

Fresh air pipe can either be routed through the furnace or routed outside the furnace.

Ambient Combustion Air Supply

This type installation will draw the air required for combustion from within the space surrounding the appliance and from areas or rooms adjacent to the space surrounding the appliance. This may be from within the space in a non-confined location or it may be brought into the furnace area from outdoors through permanent openings or ducts. It is not piped directly into the burner box. A single, properly sized pipe from the furnace vent connector to the outdoors must be provided. For down-flow models combustion air is brought into the furnace through the unit top panel opening. Do not install a pipe into the combustion air pipe at the top of the furnace. Refer to Figures 19 & 26.

WARNING

This type of installation requires that the supply air to the appliance(s) be of a sufficient amount to support all of the appliance(s) in the area. Operation of a mechanical exhaust, such as an exhaust fan, kitchen ventilation system, clothes dryer or fireplace may create conditions requiring special attention to avoid unsatisfactory operation of gas appliances. A venting problem or a lack of supply air will result in a hazardous condition, which can cause the appliance to soot and generate dangerous levels of CARBON MONOXIDE, which can lead to serious injury, property damage and / or death.

An **unconfined space** is not less than 50 cu.ft (1.42 m³) per 1,000 Btu/hr. (0.2928 kW) input rating for all of the appliances installed in that area.

Rooms communicating directly with the space containing the appliances are considered part of the unconfined space, if openings are not furnished with doors.

A **confined space** is an area with less than 50 cu.ft (1.42 m³) per 1,000 Btu/hr. (0.2928 kW) input rating for all of the appliances installed in that area. The following must be considered to obtain proper air for combustion and ventilation in confined spaces.

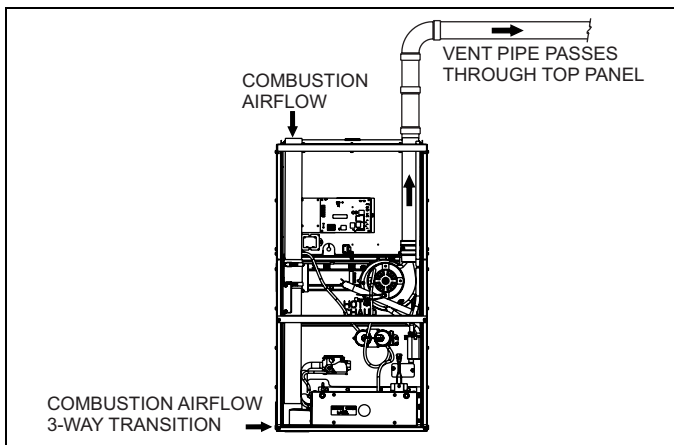


FIGURE 26: Combustion Airflow Path Through The Furnace Casing to the Burner Box

Combustion Air Source From Outdoors

The blocking effects of louvers, grilles and screens must be given consideration in calculating free area. If the free area of a specific louver or grille is not known, refer to Table 12, to estimate free area.

TABLE 12: Estimated Free Area

Wood or Metal Louvers or Grilles	Wood 20-25%* Metal 60-70% *
Screens+	1/4" (0.635 cm) mesh or larger 100%

* Do not use less than 1/4" (0.635 cm) mesh
+ Free area of louvers and grilles varies widely; the installer should follow louver or grilles manufacturer's instructions.

Dampers, Louvers and Grilles (Canada Only)

1. The free area of a supply air opening shall be calculated by subtracting the blockage area of all fixed louvers grilles or screens from the gross area of the opening.
2. Apertures in a fixed louver, a grilles, or screen shall have no dimension smaller than 0.25" (0.64 cm).
3. A manually operated damper or manually adjustable louvers are not permitted for use.
4. A automatically operated damper or automatically adjustable louvers shall be interlocked so that the main burner cannot operate unless either the damper or the louver is in the fully open position.

TABLE 13: Free Area - Outdoor Air

BTUH Input Rating	Minimum Free Area Required for Each Opening		
	Horizontal Duct (2,000 BTUH)	Vertical Duct or Opening to Outside (4,000 BTUH)	Round Duct (4,000 BTUH)
40,000	20 sq. in. (129 cm ²)	10 sq. in. (65 cm ²)	4" (10 cm)
60,000	30 sq. in. (194 cm ²)	15 sq. in. (97 cm ²)	5" (13 cm)
80,000	40 sq. in. (258 cm ²)	20 sq. in. (129 cm ²)	5" (13 cm)
100,000	50 sq. in. (323 cm ²)	25 sq. in. (161 cm ²)	6" (15 cm)
120,000	60 sq. in. (387 cm ²)	30 sq. in. (194 cm ²)	7" (18 cm)

EXAMPLE: Determining Free Area.
 Appliance 1Appliance 2Total Input
 100,000 + 30,000 = (130,000 ÷ 4,000) = 32.5 Sq. In. Vertical
 Appliance 1Appliance 2Total Input
 100,000 + 30,000 = (130,000 ÷ 2,000) = 65 Sq. In. Horizontal

TABLE 14: Unconfined Space Minimum Area in Square Inches

BTUH Input Rating	Minimum Free Area Required for Each Opening
40,000	40 (258 cm ²)
60,000	60 (387 cm ²)
80,000	80 (516 cm ²)
100,000	100 (645 cm ²)
120,000	120 (774 cm ²)

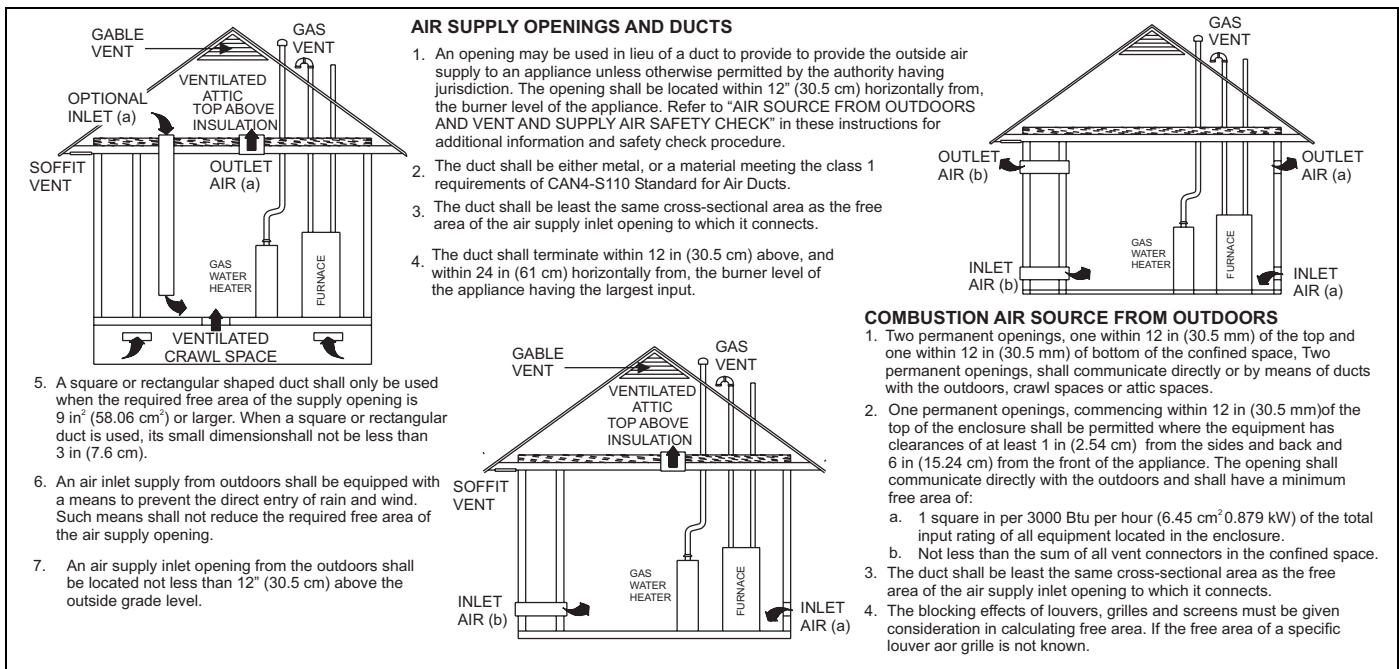


FIGURE 27: Outside and Ambient Combustion Air

Vent and Supply (Outside) Air Safety Check Procedure

Follow the procedure in ANSI Z223.1 National Fuel Gas Code. Refer to the section on the "Recommended Procedure for Safety Inspection of an Existing Appliance" or in Canada B149.1-00 Natural Gas and Propane Installation Code section on "Venting Systems and Air Supply for Appliances" and all local codes. In addition to the procedure specified in ANSI Z223.1, it is recommended that you follow the venting safety procedure below. This procedure is designed to detect an inadequate ventilation system that can cause the appliances in the area to operate improperly causing unsafe levels of Carbon Monoxide or an unsafe condition to occur.

1. Inspect the venting system for proper size and horizontal pitch. Determine that there is no blockage, restriction, leakage, corrosion or other deficiencies, which could cause an unsafe condition
2. Close all building doors and windows and all doors.
3. Turn on clothes dryers and TURN ON any exhaust fans, such as range hoods and bathroom exhausts, so they shall operate at maximum speed. Open the fireplace dampers. Do not operate a summer exhaust fan.
4. Follow the lighting instructions. Place the appliance being inspected in operation. Adjust thermostat so the appliance shall operate continuously.
5. Test each appliance (such as a water heater) equipped with a draft hood for spillage (down-draft or no draft) at the draft hood relief opening after 5 minutes of main burner operation. Appliances that do not have draft hoods need to be checked at the vent pipe as close to the appliance as possible. Use a combustion analyzer to check the CO₂ and CO levels of each appliance. Use a draft gauge to check for a downdraft or inadequate draft condition.
6. After it has been determined that each appliance properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas burning appliance to their normal condition.
7. If improper venting is observed during any of the above tests, a problem exists with either the venting system or the appliance does not have enough combustion air (Supply Air from outside) to complete combustion. This condition must be corrected before the appliance can function safely.

NOTE: An unsafe condition exists when the CO reading exceeds 40 ppm and the draft reading is not in excess of - 0.1 in. W.C. (-25 kPa) with all of the appliance(s) operating at the same time.

8. Any corrections to the venting system and / or to the supply (outside) air system must be in accordance with the National Fuel Gas Code Z223.1 or CAN/CGA B149.1-00 Natural Gas and Propane Installation Code (latest editions). If the vent system must be resized, follow the appropriate tables in Appendix G of the above codes or for this appliance, refer to Table 8 of these instructions.

Ventilated Combustion Air

The ventilated attic space or a crawl space from which the combustion air is taken must comply with the requirements specified in "COMBUSTION AIR SOURCE FROM OUTDOORS" in this instruction or in Section 5.3, Air for Combustion and Ventilation of the National Fuel Gas Code, ANSI Z223.1 (latest edition). This type installation requires two properly sized pipes. One brings combustion air from a properly ventilated attic space or crawl space and a second pipe that extends from the furnace vent connection (top right of unit) to the exterior of the building. Refer to Table 8 for intake pipe sizing, allowable length and elbow usage. Follow all notes, procedures and required materials in the SEALED COMBUSTION AIR SUPPLY section in these instructions when installing the combustion air pipe from the unit and into a ventilated attic space or crawl space. DO NOT terminate vent pipe in an Attic or Crawl Space.

Ventilated Combustion Air Termination

Refer to Figure 28 for required attic termination for the combustion air intake pipe. For attic termination, use two 90 elbows with the open end in a downward position. Be sure to maintain 12" (30.5 cm) clearance above any insulation, flooring or other material.

A crawl space combustion air installation consists of a straight pipe from the PVC coupling on the burner box that extends into the crawl space and terminates with a 1/4" (0.63 cm) mesh screen and no elbows.

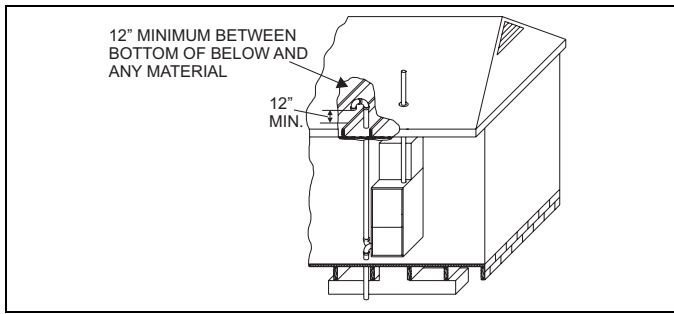


FIGURE 28: Attic Combustion Air Termination

Specially Engineered Installations

The above requirements shall be permitted to be waived where special engineering, approved by the authority having jurisdiction, provides an adequate supply of air for combustion, ventilation and dilution of flue gases.

▲ **WARNING**

Be sure to instruct the owner not to block this intake pipe.

SECTION VIII: CONDENSATE PIPING

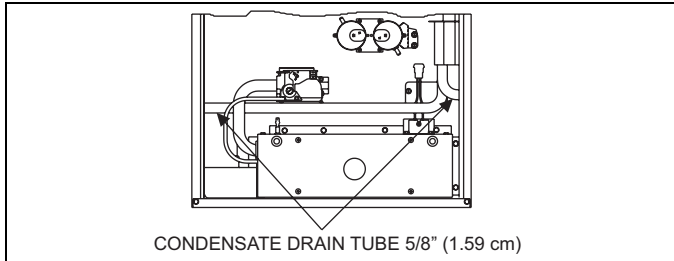


FIGURE 29: Condensate Drain Internal Hose Routing

CONDENSATE DRAIN

The condensate drain connection is provided in the furnace for field installation. It consists of the hoses shown below, a NPT male connection, and a 1/2" (1.27 cm) female x 3/4" (1.9 cm) PVC slip coupling. Some of the drain hoses will be needed to convert the condensate drain system when the furnace is installed in a horizontal left or right configuration. Refer to Figures 30 - 36 for the condensate hose sizes for condensate drain connections.

IMPORTANT: The condensate drain from the furnace may be connected in common with the drain from an air conditioning coil if allowed by local code.

IMPORTANT: Condensate must be disposed of properly. Follow local plumbing or wastewater codes. The drain line must maintain a 1/4" per foot (0.635 cm per meter) slope to the drain.

CONDENSATE DRAIN TRAP AND DRAIN FREEZE PROTECTION

Special precautions **MUST** be made if installing furnace in an area, which may drop below freezing. This can cause improper operation or damage to the equipment. If the furnace is installed in an area that has the potential of freezing, the drain line and the drain trap must be protected. Use a 3 to 6 watt per foot at 115 vac, 40° F (4.4° C) self-regulating, shielded and waterproof heat tape. Wrap the drain trap and the drain line with the heat tape and secure with ties. Follow the heat tape manufacturer's recommendations.

CONDENSATE DRAIN HOSE PART NUMBERS

TABLE 15: Condensate Drain Hose

Part Number	Hose Number	Description
028-15156-000	#1	Drain tube - Condensate pan (Down flow)
028-15176-000	#2	Drain tube - Inducer (Horizontal RT.)
-Vent system Down flow		
028-15168-000	#3	Drain tube - Inducer (Down flow)
028-15176-000	#4	Drain tube - Rain gutter (Down flow & Horizontal RT.)
028-15176-000	#5	Drain tube - After Tee (Down flow)
028-15196-000	#6	Drain tube - Upper rain gutter (Horizontal LT.)
028-15169-001	#7	Drain tube - After Tee (Horizontal RT.)
028-13309-004	#8	Drain tube - P-trap (All models)
028-15158-000	#9	Drain tube - Vent system (Horizontal LT.)
- Before Tee (Horizontal RT.)		
028-15197-000	#10	Drain tube - Condensate pan (Horizontal - drain closer to the front of the furnace, both LT & RT)
Hoses #2, #4, #5, along with a barbed nipple, and a barbed tee are part of condensate hose assembly 028-15176-000.		

DOWNFLOW/HORIZONTAL CONDENSATE INTERNAL DRAIN CONFIGURATIONS

Downflow - Refer to Figure 30

Furnace is shipped with one end of condensate hose #2 left open in the furnace. If the provided Wye's drain is aligned with the opening in the top of the furnace, hose #2 can be used. If it is desired that the Wye and street elbow assembly point away from the opening in the casing top, then the #2 hose will have to be replaced with provided #9 hose. The dogleg end of hose #9 hose should be installed on the drain of the Wye.

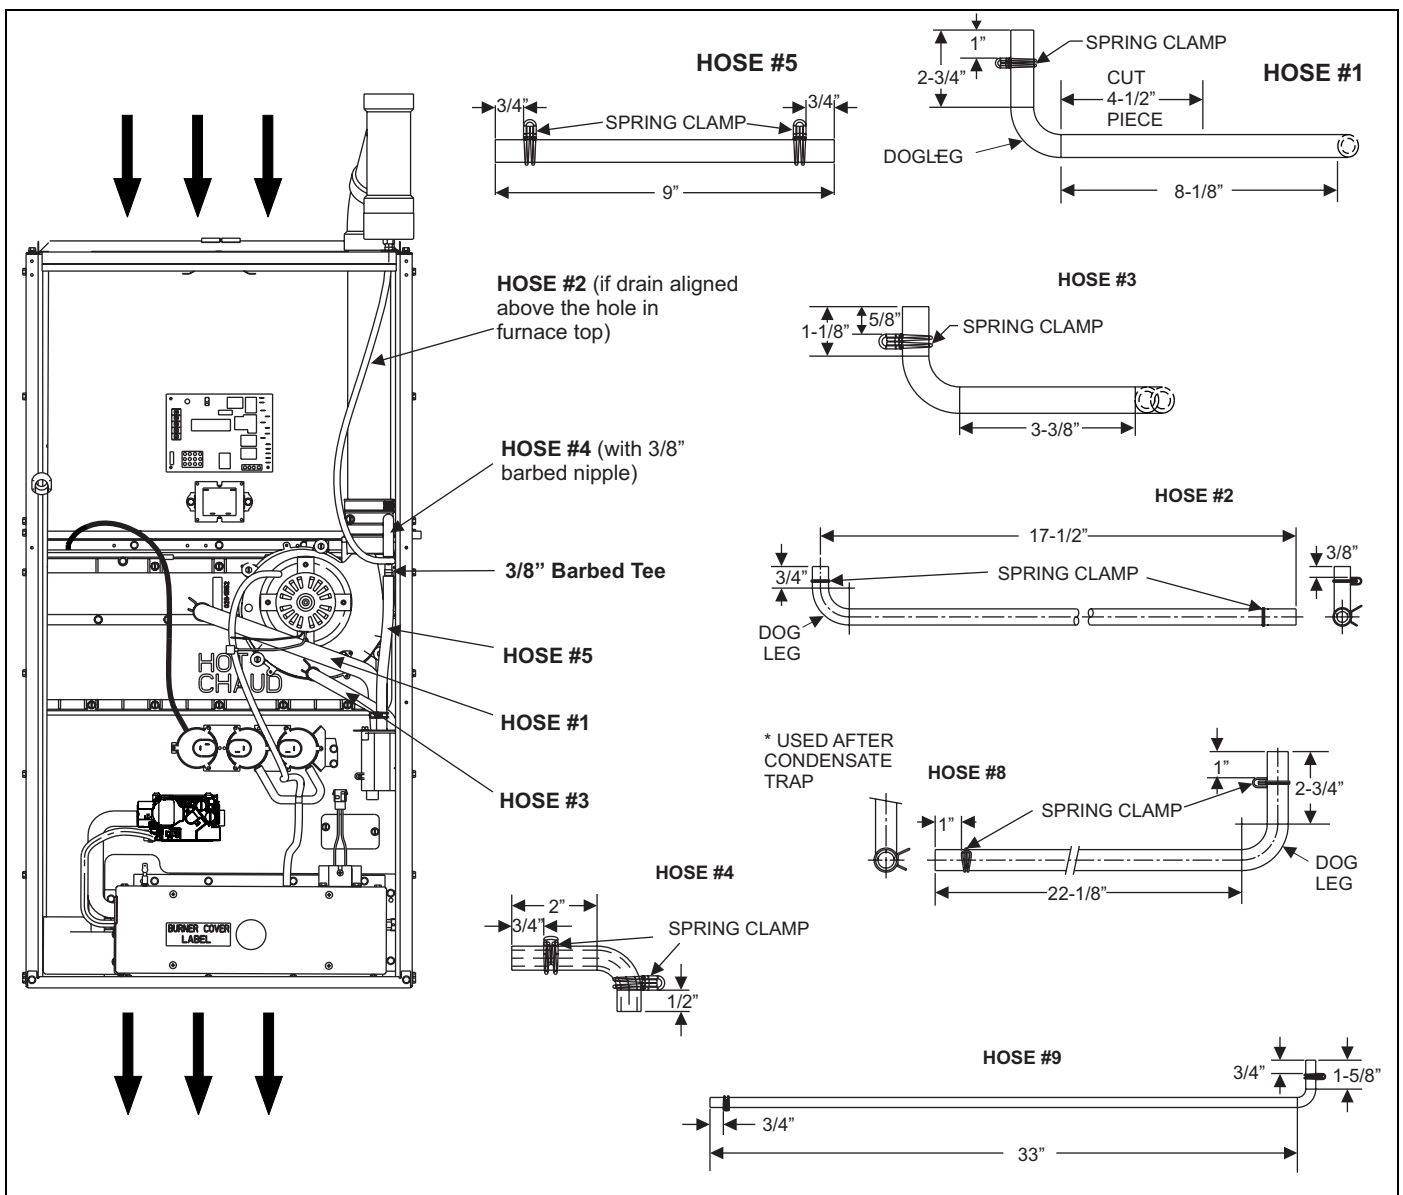


FIGURE 30: Downflow Condensate Drain Hose Configuration

Horizontal Left Air Flow (Inducer Low) - Refer to Figures 31 & 32

- Remove all the condensate hoses inside the furnace, leaving the 3/8" barbed nipple and hose # 4, both factory installed, in the rain gutter.
- Remove the condensate trap and its bracket from inside the furnace, saving the screws for use later.
- Remove the yellow cap from the top drain of the rain gutter and install loosely packed 3/8" barbed nipple in it.
- Remove the large condensate cap from the side of the condensate pan and install it on the middle drain of the condensate pan, from where #1 hose was removed.
- Install longer dogleg end of hose #10 through the casing hole on to the side drain of the condensate pan, where cap was removed in step #4. Some lubricant may have to be used to facilitate this installation as the hose is designed as a tight fit over the condensate drain. The other, shorter, dogleg end of hose #10 should be installed into the large recessed drain in the condensate trap.
- Install the condensate trap bracket, with the condensate trap, on to the front side of the furnace, using the screws removed in step #1.
- Switch the blocked condensate hose to the condensate tap on the bottom of the condensate pan (close to the inducer).
- Install hose #9 between the external drain on the Wye and the condensate trap; with the dogleg end installed on the protruded (stub) drain of the condensate trap. The length of hose #9 may have to be trimmed to ensure proper condensate drainage.
- Remove all condensate hoses off the 3/8" barbed tee.
- Cut 1-1/2" length of straight 3/8" hose off of hose #5 and install it on the 3/8" barbed tee. The other end of the 1-1/2" hose should be installed on the welled opening on the condensate trap.
- Install one end of the 3/8" barbed tee on hose #4 as shown. Ensure that hose #4 follows a gradual downward slope all the way to the barbed tee.
- Install hose #6 between the top drain of the rain gutter of the inducer and the remaining open end of 3/8" barbed tee.
- Ensure that all hoses are properly installed, have no kinks, and are draining properly. All hoses on the condensate trap should be pushed all the way down to ensure against leakage.

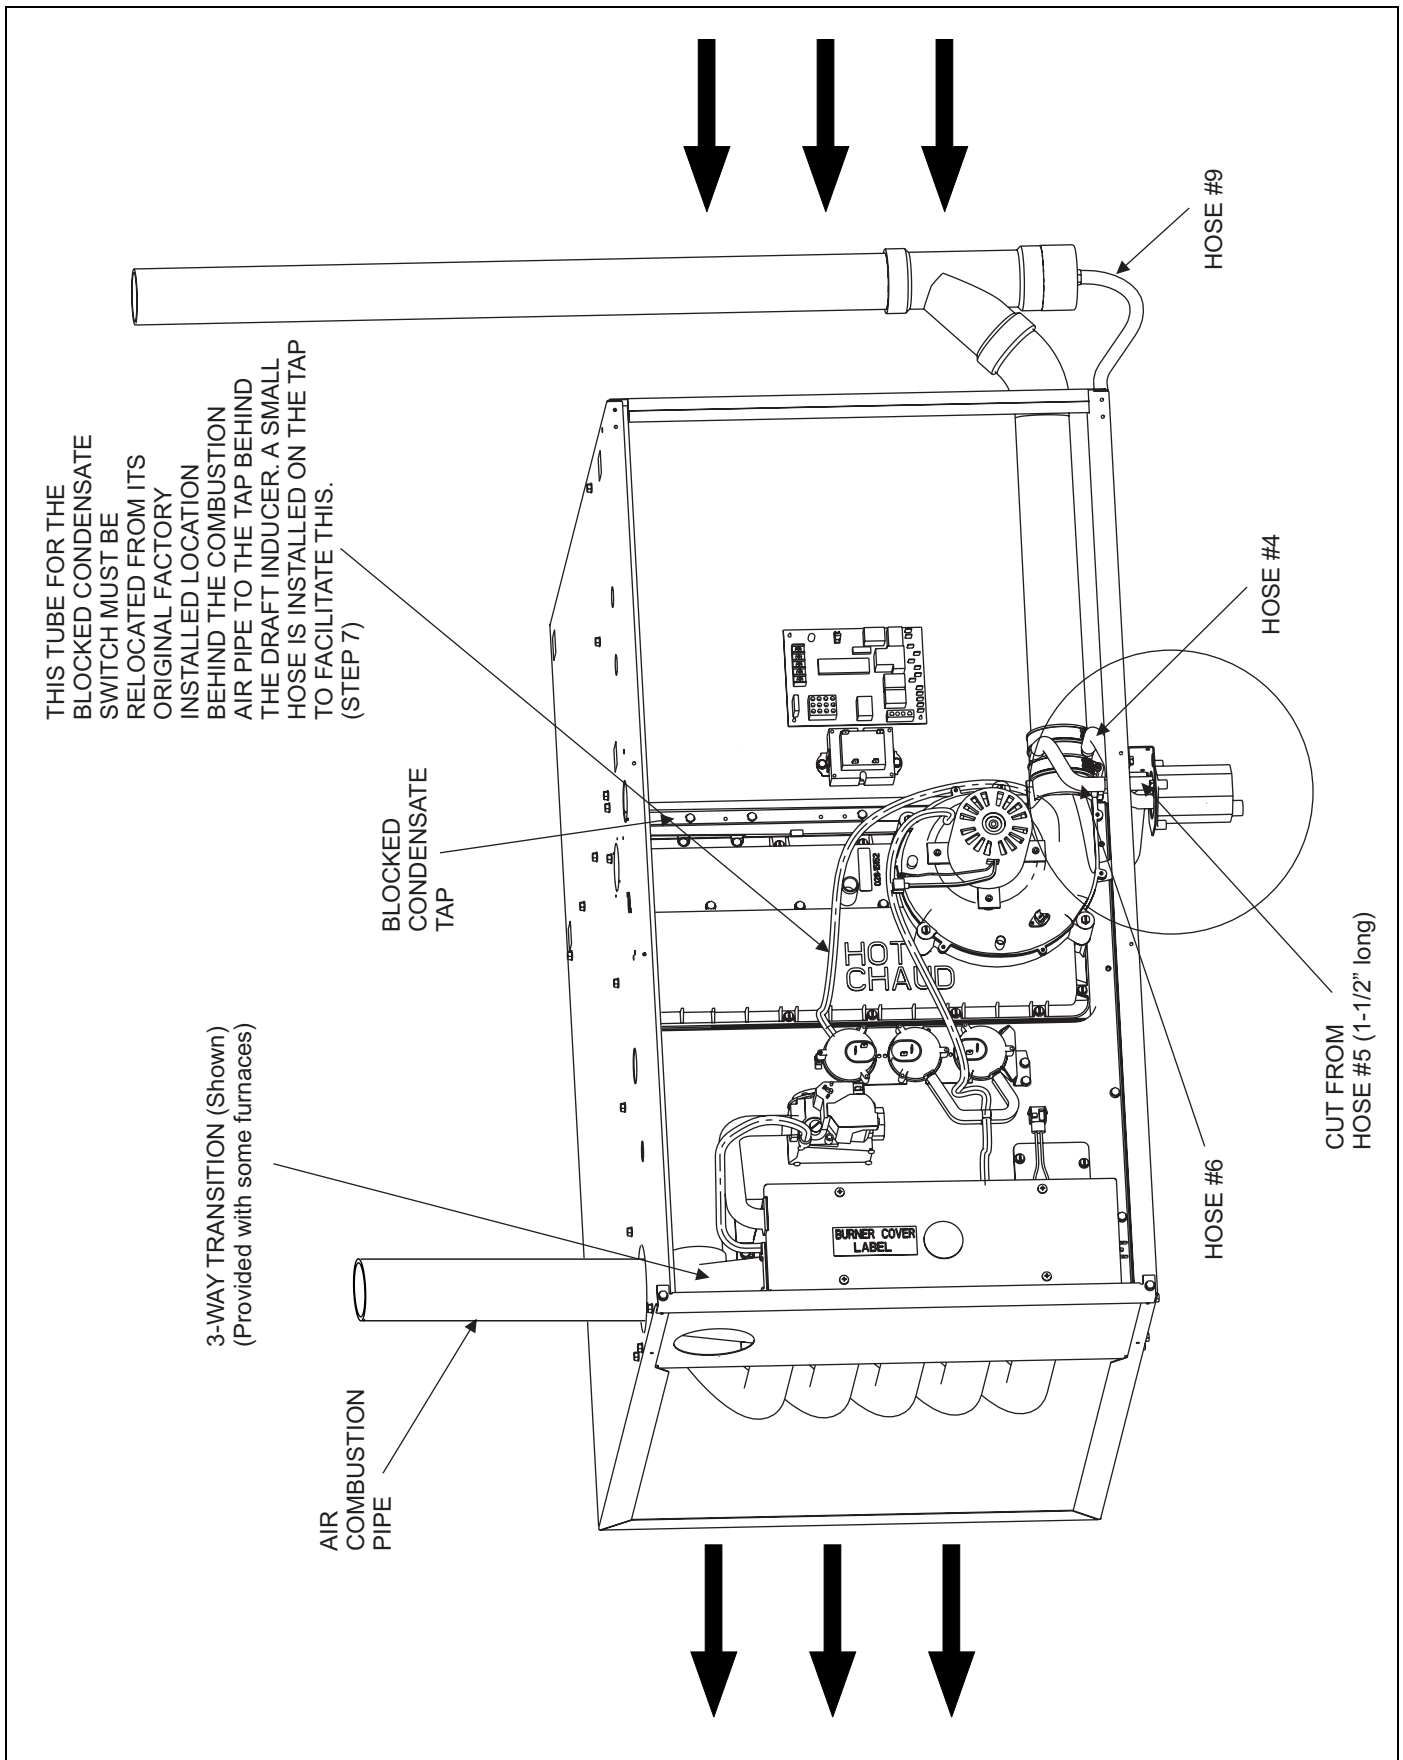


FIGURE 31: Horizontal Left Condensate Drain Hose Configuration

Horizontal Right Air Flow (Inducer High)**Refer to Figures 33-36****Installation with condensate trap bracket (Front of casing):****Refer to Figure 33 & 34**

1. Remove the 2" knockout on the casing side, away from the inducer motor.
2. Remove all the condensate hoses inside the furnace, including the 3/8" barbed nipple, factory installed, in the rain gutter.
3. Remove the drain cap from the bottom rain gutter drain and insert the 3/8" barbed nipple removed above in the bottom rain gutter drain. Place the cap, just removed, to the other side of the rain gutter on the inducer.
4. Remove the condensate trap and its bracket from inside the furnace, saving the screws for later use.
5. Remove the large condensate cap from the side of the condensate pan and install it on the middle drain of the condensate pan, from where #1 hose was removed.
6. Install longer dogleg end of hose #10 through the casing hole on to the side drain of the condensate pan, where cap was removed in step #3. Some lubricant may have to be used to facilitate this installation as the hose is designed to be a tight fit over the condensate drain. The other, smaller, dogleg end of hose #10 should be installed into the large recessed drain in the condensate trap.
7. Install the condensate trap bracket, with the condensate trap, on to the front side of the furnace, using the screws removed in step #1.
8. Install the dogleg end of hose #9 on the Wye drain and route the hose through the opening on top of the furnace, as shown. Install the other end of the #9 hose to the barbed tee, inside the furnace.
9. Install the dogleg end of hose #4 to the rain gutter on the inducer. The other end of hose #4 should be installed on the 3/8" barbed tee.
10. Install one end of hose #7 on the 3/8" barbed tee inside the furnace. Guide the other end of hose #7 towards the condensate trap, and install it on the tap on the condensate trap.
11. Install the dogleg end of hose #2 on the bottom drain of the inducer. Guide the other end of hose #2 towards the condensate trap, and install it on the small recessed drain in the condensate trap.
12. Ensure that all hoses are properly installed, have no kinks, and are draining properly. All hoses on the condensate trap and condensate pan should be pushed all the way down to ensure against leakage and performance. Some hoses may have to be trimmed for proper fit.

NOTE: The condensate trap can also be installed on the 2" knockout opening, in this configuration, using the provided condensate trap bracket. Some modifications may, however, have to be made to the condensate hoses.

CAUTION

Ensure all condensate hoses are pushed all the way down on the condensate trap, barbed fittings, and condensate pan drains.

CAUTION

Plug all unused condensate trap, condensate pan and inducer drain connection points using plugs provided.

Installation with condensate trap bracket (Back of casing):**Refer to Figure 35 & 36**

1. Remove the 2" knockout on the casing side, away from the inducer motor.
2. Remove all the condensate hoses inside the furnace, including the 3/8" barbed nipple, factory installed, in the rain gutter.
3. Remove the drain cap from the bottom rain gutter drain and insert the 3/8" barbed nipple removed above in the bottom rain gutter drain. Place the cap, just removed, to the other side of the rain gutter on the inducer.
4. Remove the condensate trap and its bracket from inside the furnace, saving the screws for later, use.
5. Remove the large condensate cap from the side of the condensate pan and install it on the middle drain of the condensate pan, from where #1 hose was removed.
6. Do not remove condensate trap from the condensate trap bracket.
7. Cut 2-1/2" straight piece from hose #1 and install it through the knockout opening in the casing on the side of the condensate pan, from where the cap was previously removed. Insert the other end of the hose into the large recessed drain on the condensate trap.
8. Install the condensate trap bracket to the 2" inch hole on the side of casing, using existing holes, lining up the condensate pan opening with the larger opening on the condensate trap.
9. Install the dogleg end of hose #9 on the Wye drain and route the hose through the opening on top of the furnace. Install the other end of the #9 hose to the barbed tee, inside the furnace.
10. Install the dogleg end of hose #4 on 3/8" barbed nipple, in the rain gutter. The other end of hose #4 should be installed on the 3/8" barbed tee.
11. Install one end of hose #7 on the 3/8" barbed tee inside the furnace. Guide the other end of hose #7 towards the condensate trap, and install it on the tap on the condensate trap
12. Install the dogleg end of hose #2 on the bottom drain of the inducer. Guide the other end of hose #2 towards the condensate trap, and install it on the small recessed drain in the condensate trap.
13. Ensure that all hoses are properly installed, have no kinks, and are draining properly. All hoses on the condensate trap should be pushed all the way down to ensure against leakage. All hoses on the condensate pan should be pulled all the way up to ensure proper operation.

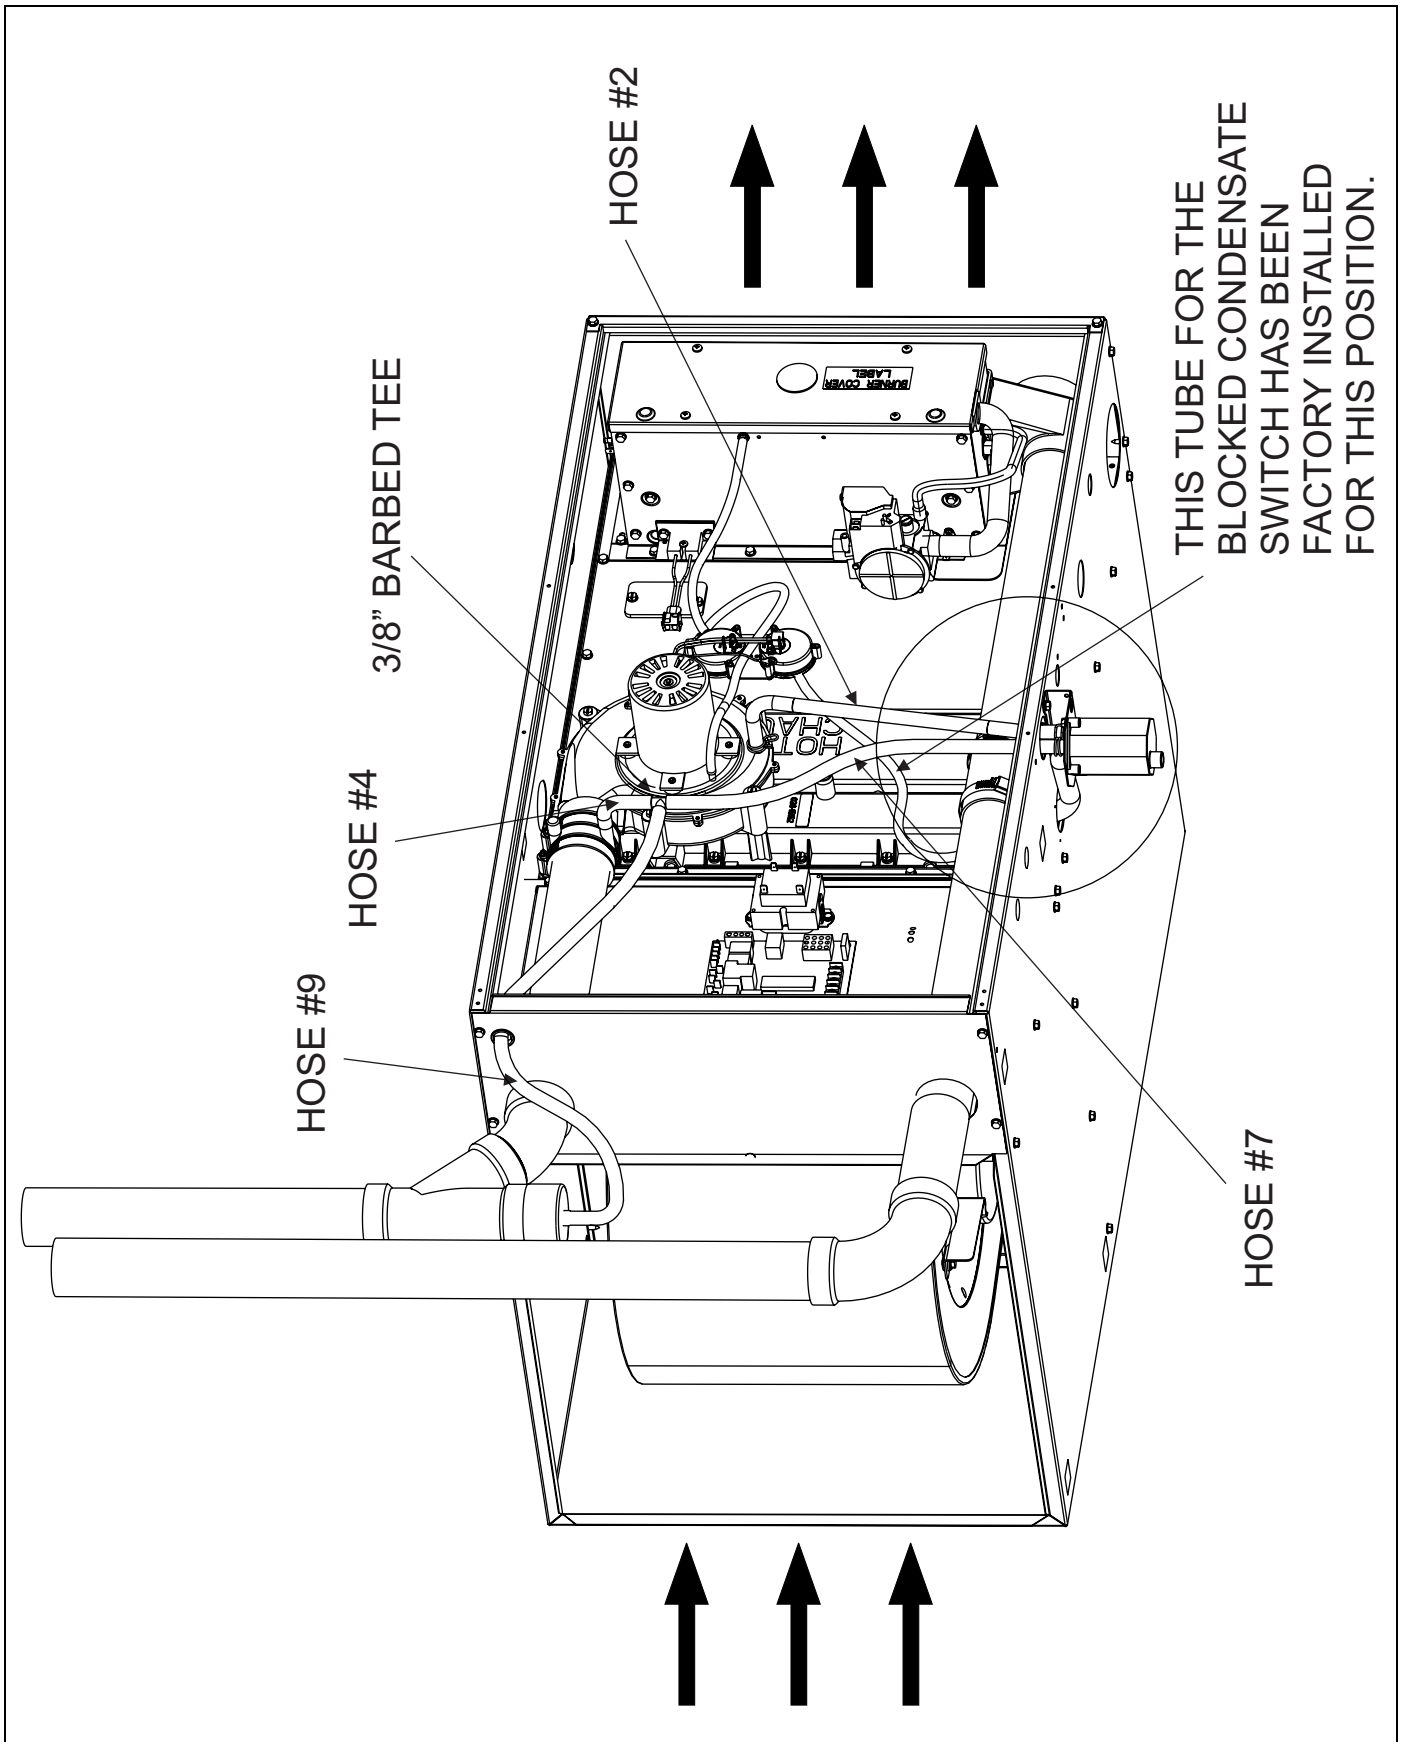


FIGURE 33: Horizontal Right Condensate Drain Hose Configuration (Option 1 - Front of Casing)

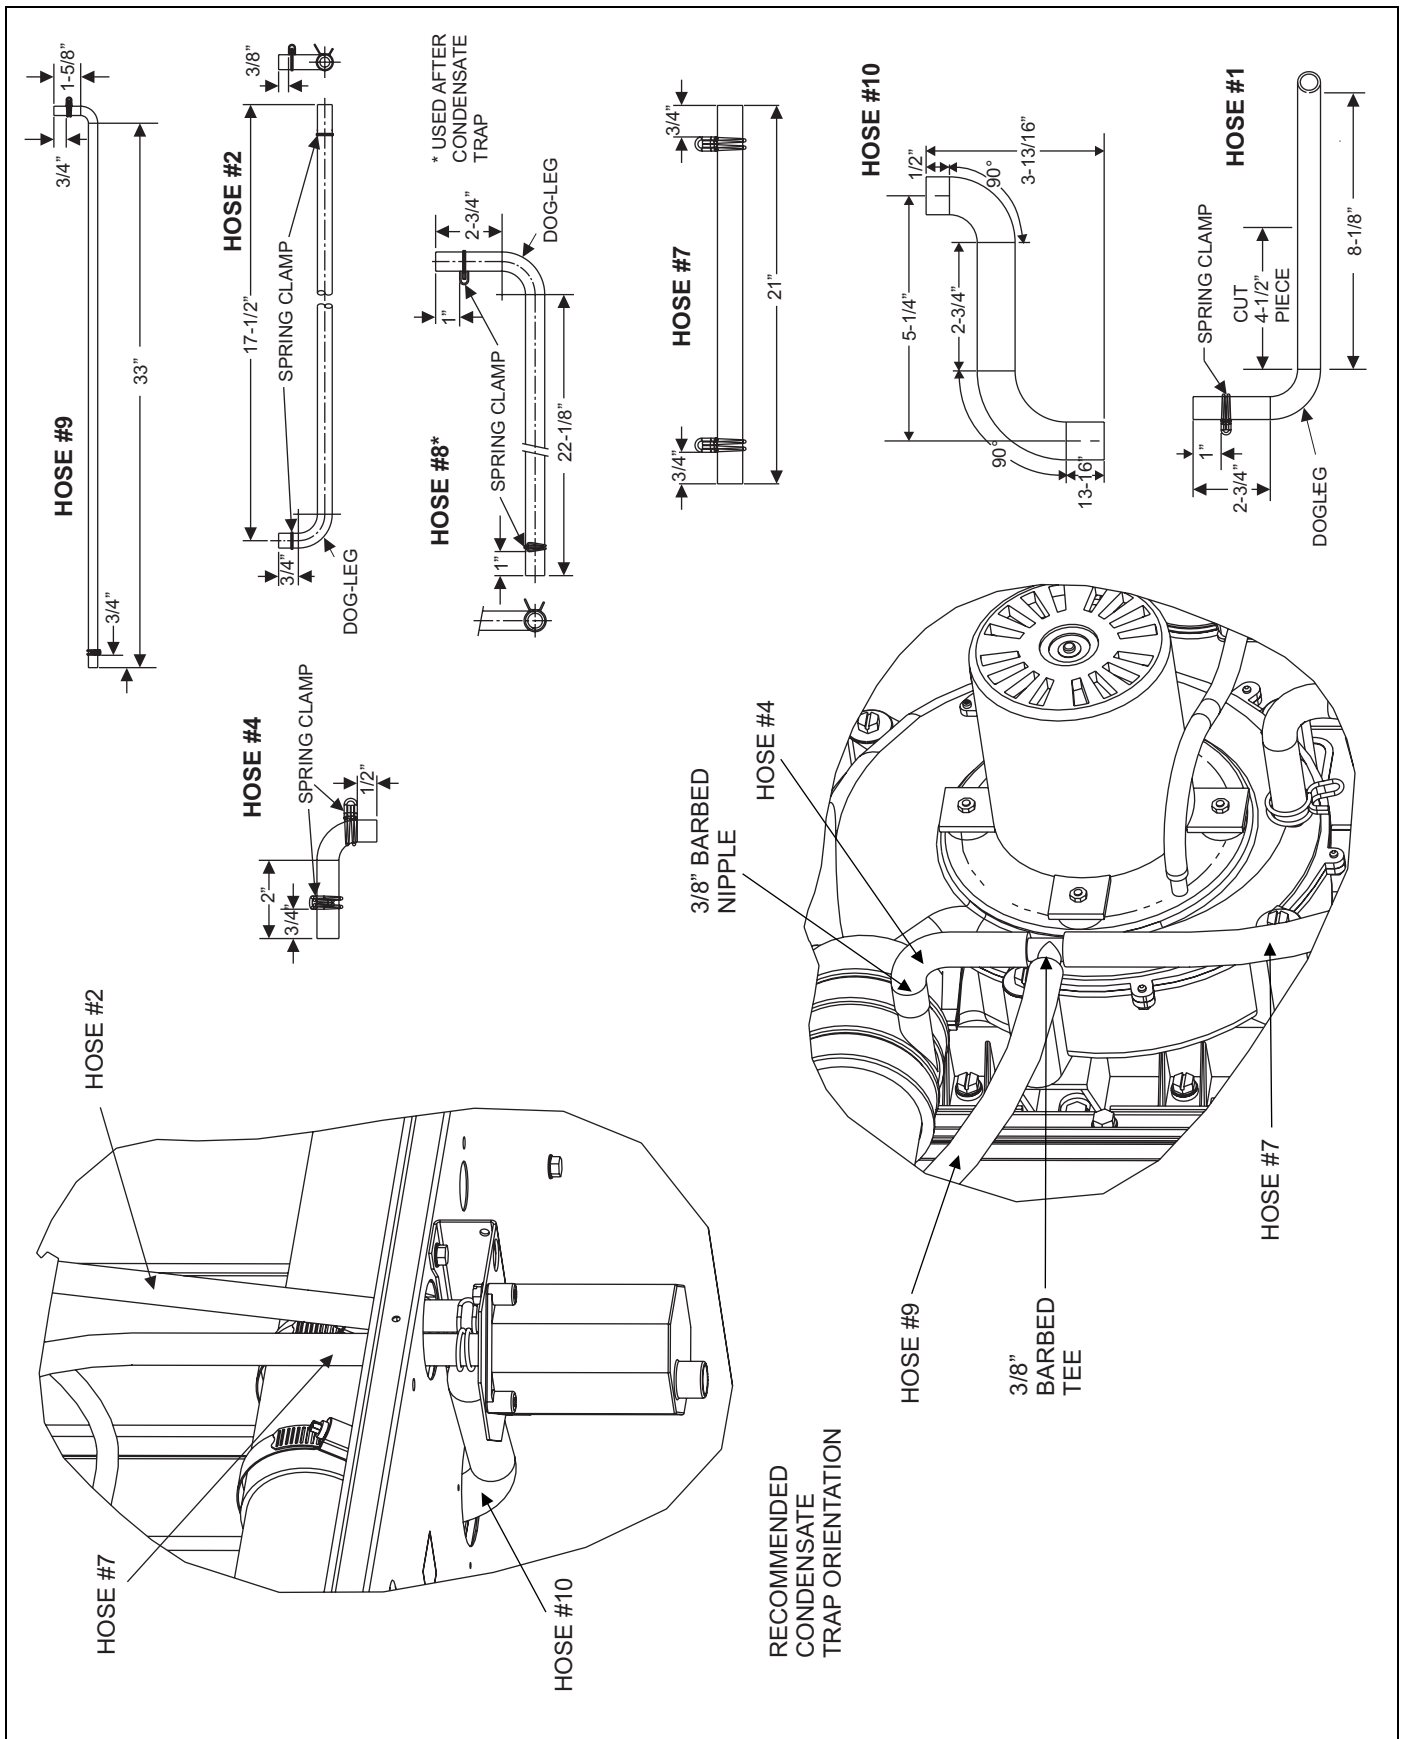


FIGURE 34: Horizontal Right Condensate Drain Hose Configuration (Option 1 - Front of Casing)

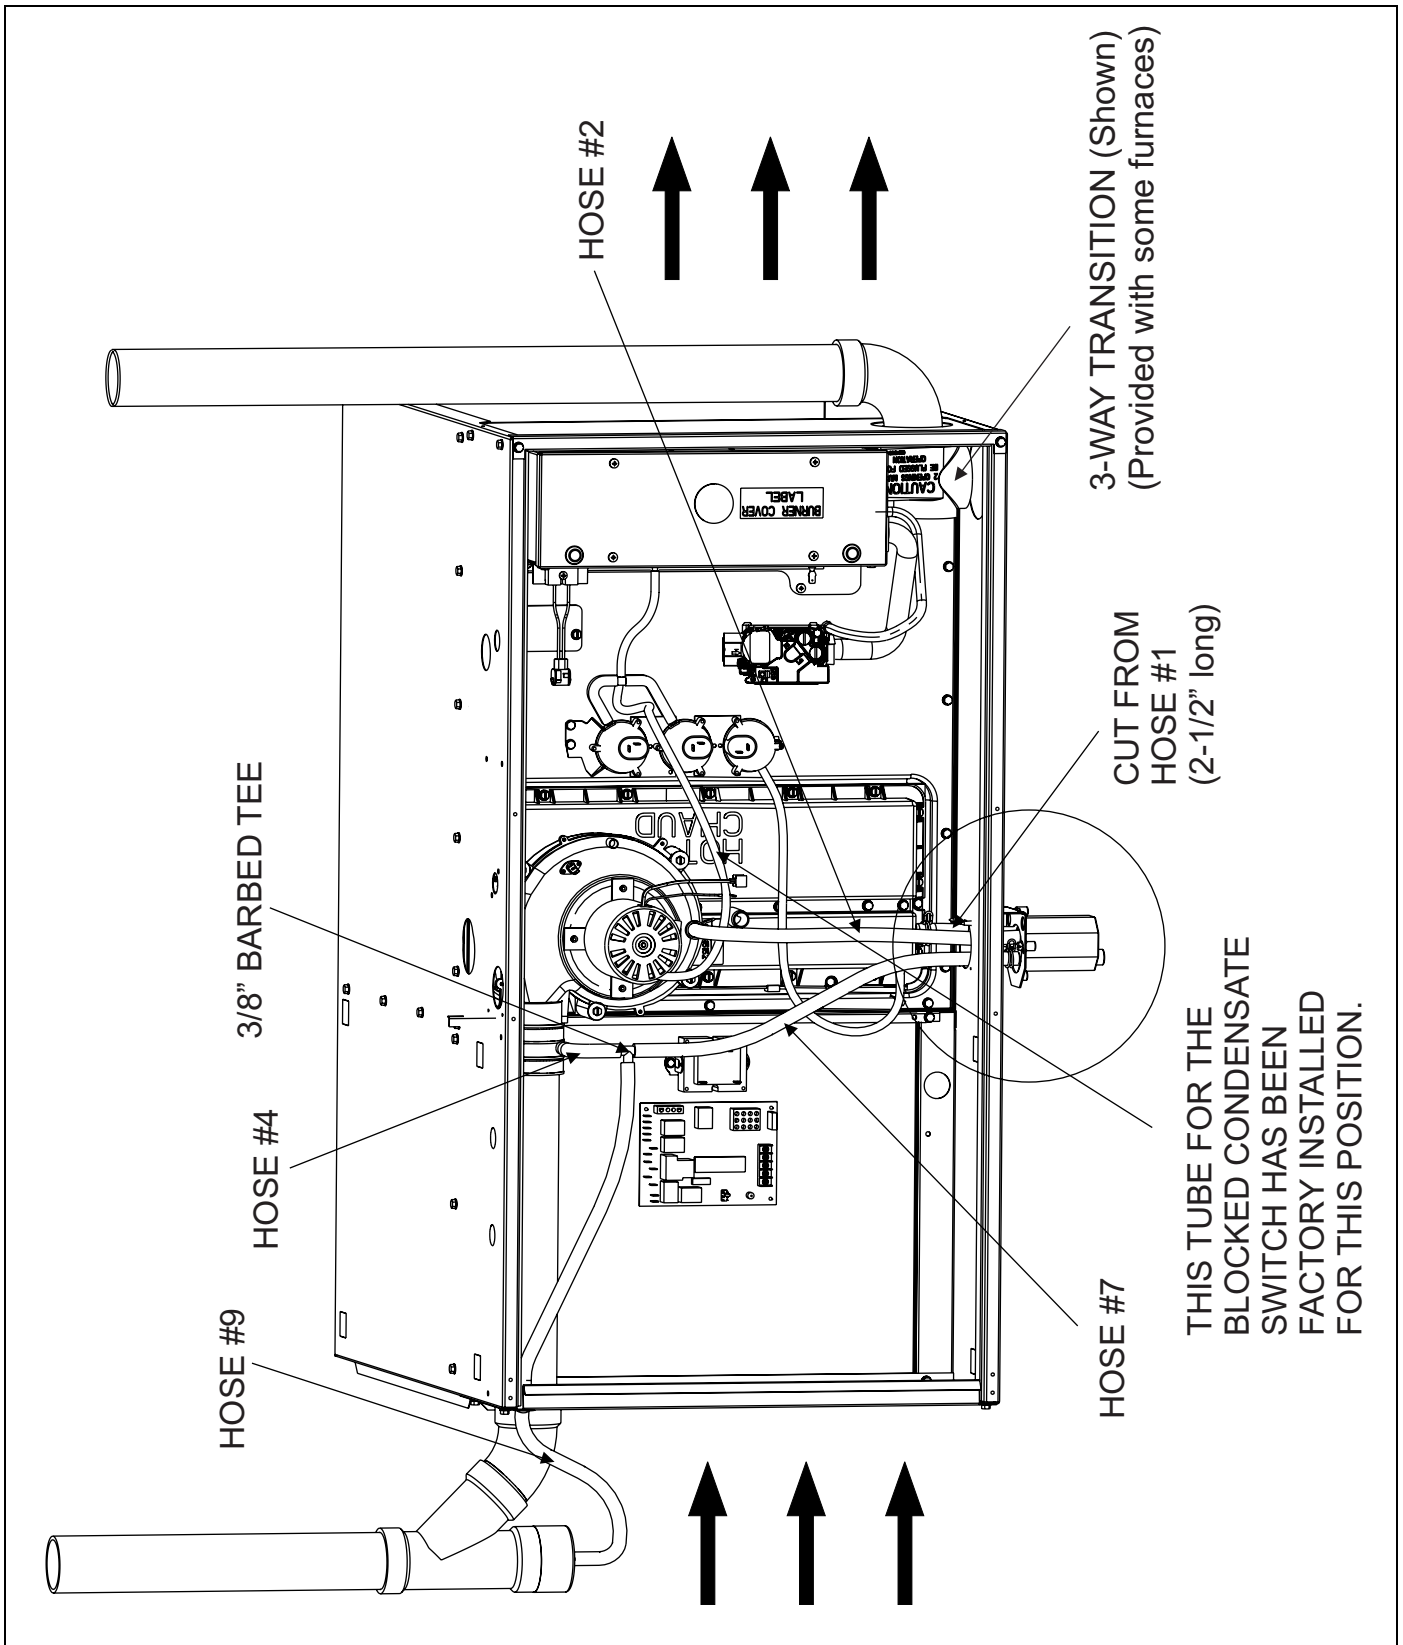


FIGURE 35: Horizontal Right Condensate Drain Hose Configuration (Option 2 - Back of Casing)

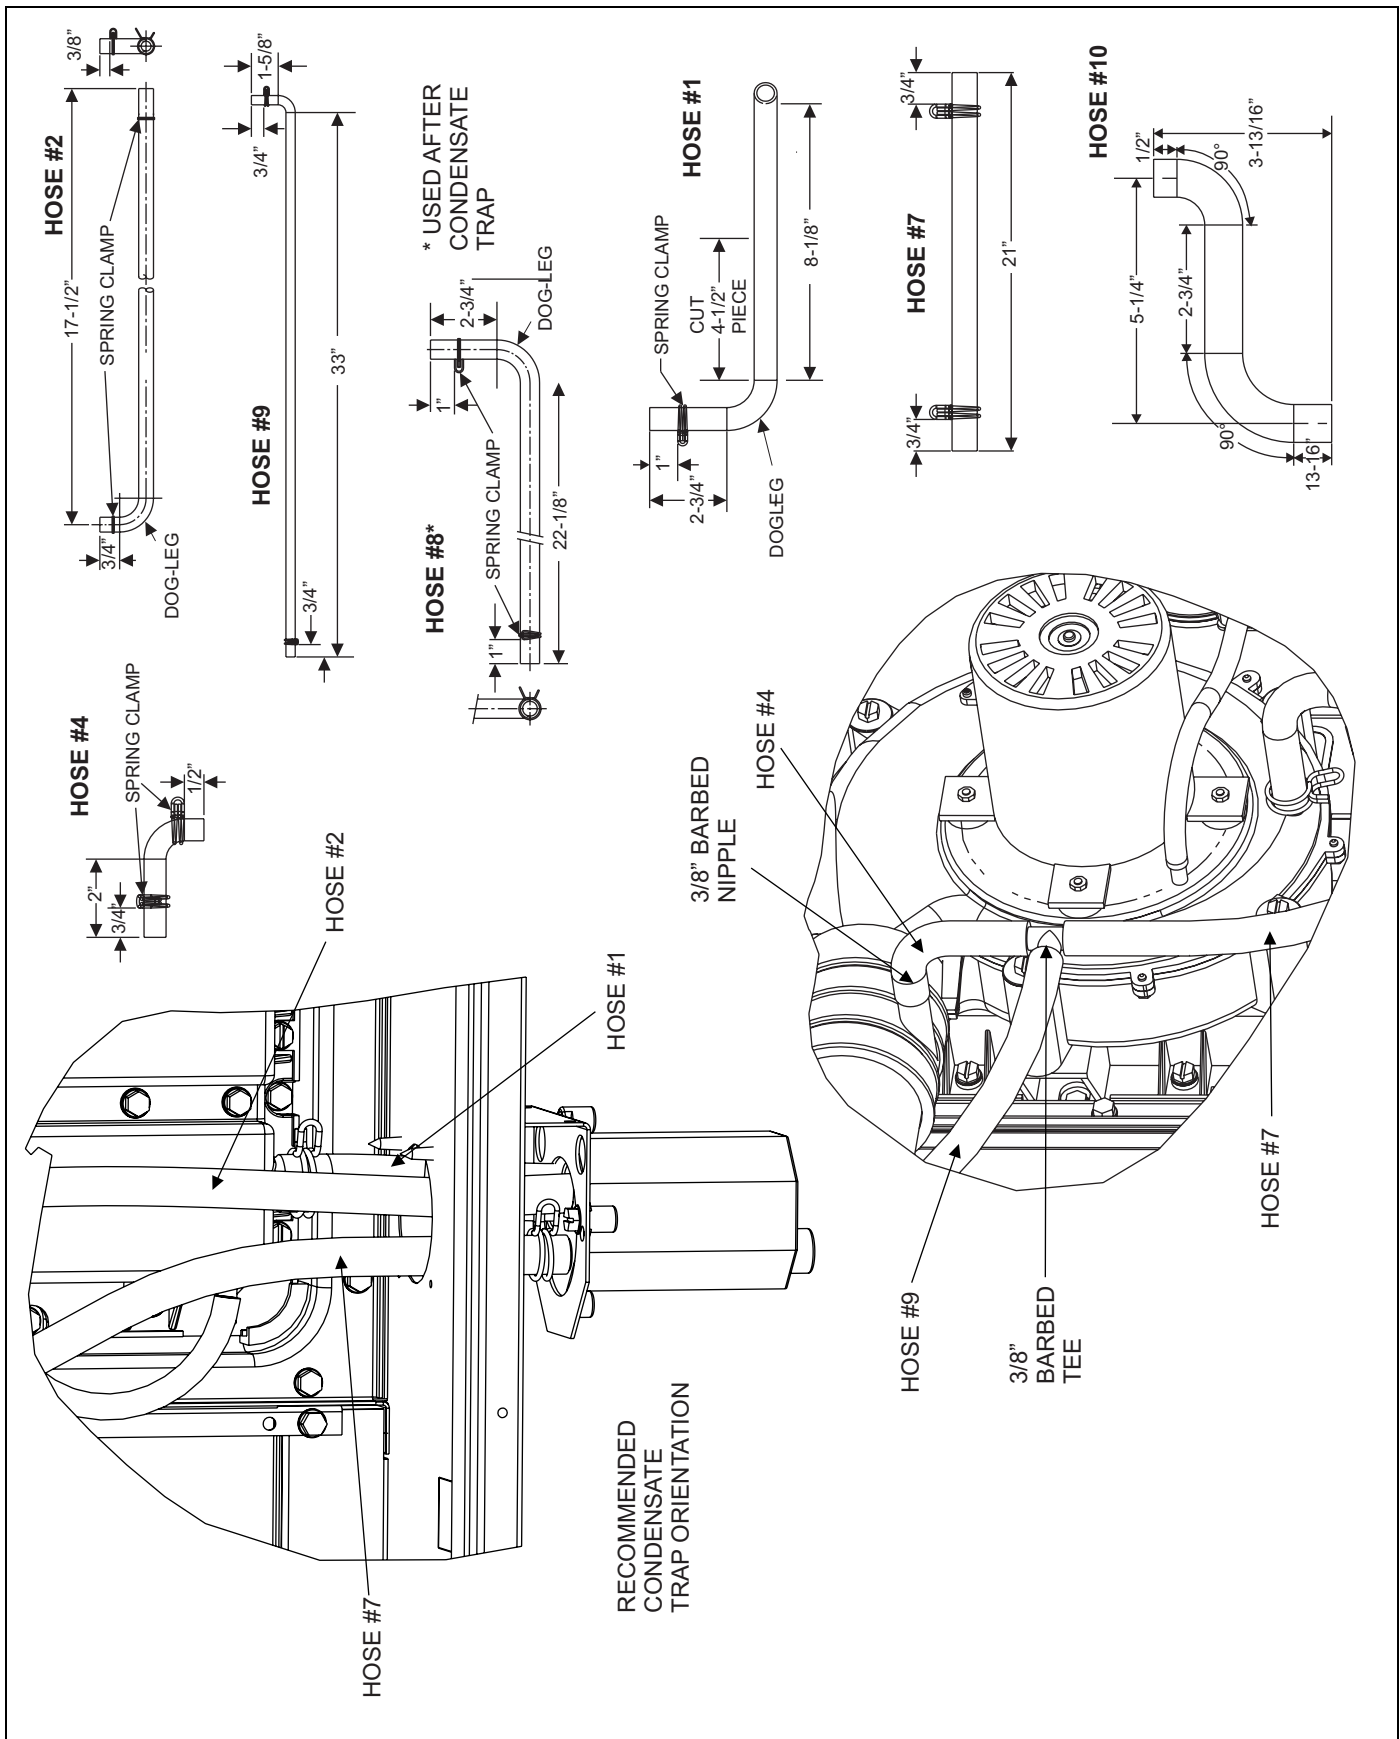


FIGURE 36: Horizontal Right Condensate Drain Hose Configuration (Option 2 - Back of Casing)

CONDENSATE DRAIN TERMINATION

DO NOT terminate condensate drain in a chimney, or where the drain line may freeze. The line must terminate at an inside drain to prevent freezing of the condensate and possible property damage. DO NOT trap the drain line at any other location than at the condensate drain trap supplied with the furnace. A condensate sump pump **MUST** be used if required by local codes, or if no indoor floor drain is available. The condensate sump pump must be approved for use with acidic condensate.

CONDENSATE DRAIN PRE-START UP PROCEDURE

The condensate trap must be filled with water before putting the furnace into operation. Perform the following procedures only after the condensate trap has been properly piped to a drain connection using the procedure in this instruction. The recommended procedure is as follows:

1. Disconnect the condensate drain hose from the induced draft blower discharge.
2. Elevate this hose and fill with water using a funnel.
3. Replace the condensate drain hose and clamps. If this procedure is not followed, the unit may not properly drain on initial start up.

SECTION IX: SAFETY CONTROLS

CONTROL CIRCUIT FUSE

A 3-amp fuse is provided on the control circuit board to protect the 24-volt transformer from overload caused by control circuit wiring errors. This is an ATO 3, automotive type fuse and is located on the control board.

BLOWER DOOR SAFETY SWITCH

This unit is equipped with an electrical interlock switch mounted in the blower compartment. This switch interrupts all power at the unit when the panel covering the blower compartment is removed.

Electrical supply to this unit is dependent upon the panel that covers the blower compartment being in place and properly positioned.

CAUTION

Main power to the unit must still be interrupted at the main power disconnect switch before any service or repair work is to be done to the unit. Do not rely upon the interlock switch as a main power disconnect.

Blower and burner must never be operated without the blower panel in place.

ROLLOUT SWITCH CONTROLS

These controls are mounted on the burner box assembly. If the temperature in the burner box exceeds its set point, the ignition control and the gas valve are de-energized. The operation of this control indicates a malfunction in the combustion air blower, heat exchanger or a blocked vent pipe connection. Corrective action is required. These are manual reset controls that must be reset before operation can continue.

PRESSURE SWITCHES

This furnace is supplied with a pressure switch which monitors the flow through the combustion air/vent piping system. This switch de-energizes the ignition control module and the gas valve if any of the following conditions are present. Refer to Figure 37 for tubing connections.

1. Blockage of combustion air piping or terminal.
2. Blockage of vent piping or terminal.
3. Failure of combustion air blower motor.
4. Blockage of condensate drain piping.

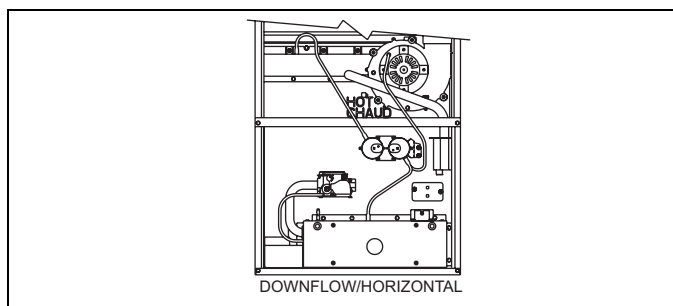


FIGURE 37: Pressure Switch Tubing Routing

LIMIT CONTROLS

There is high temperature limit control located on the furnace vestibule panel near the gas valve. This is an automatic reset control that provides over-temperature protection due to reduced airflow. This may be caused by

1. Dirty filter,
2. If the indoor fan motor should fail, or
3. Too many supply or return registers closed or blocked off.

The control module will lockout if the limit trips 5 consecutive times within a single call for heat. Control will reset and try ignition again after 1 hour.

SECTION X: START-UP AND ADJUSTMENTS

The initial start-up of the furnace requires the following additional procedures:

IMPORTANT: All electrical connections made in the field and in the factory should be checked for proper tightness.

When the gas supply is initially connected to the furnace, the gas piping may be full of air. In order to purge this air, it is recommended that the ground union be loosened until the odor of gas is detected. When gas is detected, immediately retighten the union and check for leaks. Allow five minutes for any gas to dissipate before continuing with the start-up procedure.

CAUTION

Perform the following procedures only after the condensate trap has been properly piped to a drain connection using the procedure in this instruction. Be sure proper ventilation is available to dilute and carry away any vented gas.

TOOLS AND INFORMATION THAT WILL BE REQUIRED IN ORDER TO PROPERLY PERFORM THE FURNACE STARTUP PROCEDURE.

1. Call the local gas supplier to obtain heating value of the natural gas. If you cannot obtain the heating value of the gas from the gas supplier, you may use a default value of 1030 BTU/SCF (38.4 MJ / m³).
2. You will need a thermometer or portable digital thermometer to read the supply and return air temperatures.
3. You will need a U-tube manometer or digital equipment that has the ability to read pressures between 0 – 15" in.w.c (0 - 3.73 kPa) in order to measure the gas line and the manifold pressures.
4. You will need a 3/32" Allen wrench for the pressure port plugs in the gas valve.
5. You will need 2 pieces of 1/8" (0.3 cm) ID flexible tubing that is 12" (30 cm) in length, 2 – pieces of 1/8" (0.3 cm) tubing that are 4" (10.1 cm) in length, a 1/8" (0.3 cm) tee and a 1/8" (0.3 cm) adapter to connect the U-tube manometer or the digital pressure measuring equipment to the gas valve pressure ports.

There is an accessory kit (1PK0601) available from Source 1, which has the following items:

- 1 - 12" (30 cm) length x 1/8" (0.3 cm) diameter tubing
- 2 – pieces of 4" (10 cm) length x 1/8" (0.3 cm) diameter tubing
- 1 - 5/16" (0.8 cm) tee
- 1 – 5/16" (0.8 cm) x 1/8" (3.175 mm) reducing coupling
- 1 – 1/8" (0.3 cm) adapter

There is a accessory kit (1PK0602) available from Source 1, which has the following items:

- 12" (30 cm) length x 1/8" (0.3 cm) diameter tubing
- 2 – pieces of 4" (10 cm) length x 1/8" (0.3 cm) diameter tubing
- 1 - 5/16" (0.8 cm) tee
- 1 – 5/16" (0.8 cm) x 1/8" (0.3 cm) reducing coupling
- 1 – 1/8" (0.3 cm) adapter
- 1 - Dwyer – Manometer

These items are required in order to properly perform the required start-up procedure.

IGNITION SYSTEM SEQUENCE

1. Turn the gas supply ON at external valve and main gas valve.
2. Set the thermostat above room temperature to call for heat.
3. System start-up will occur as follows:
 - a. The induced draft blower motor will start and come up to speed. Shortly after inducer start-up, the hot surface igniter will glow for about 17 seconds.
 - b. After this warm up, the ignition module will energize (open) the main gas valve.
 - c. After flame is established, the supply air blower will start in about 30 seconds.

⚠ WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

IMPORTANT: Burner ignition may not be satisfactory on first startup due to residual air in the gas line or until gas manifold pressure is adjusted. The ignition control will make 3 attempts to light before locking out.

With furnace in operation, check all of the pipe joints, gas valve connections and manual valve connections for leakage using an approved gas detector, a non-corrosive leak detection fluid, or other leak detection methods. Take appropriate steps to stop any leak. If a leak persists, replace the component.

The furnace and its equipment shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 PSI (3.45 kPa).

The furnace must be isolated from the gas supply piping system by closing the equipment shutoff valve during any pressure testing of the gas supply piping system.

CALCULATING THE FURNACE INPUT (NATURAL GAS)

NOTE: Burner orifices are sized to provide proper input rate using natural gas with a heating value of 1030 BTU/Ft³ (38.4 MJ/m³). If the heating value of your gas is significantly different, it may be necessary to replace the orifices.

NOTE: Front door of burner box must be secured when checking gas input.

1. Turn off all other gas appliances connected to the gas meter.
2. At the gas meter, measure the time (with a stop watch) it takes to use 2 cubic ft. (0.0566 m³.) of gas.
3. Calculate the furnace input by using one of the following equations.

In the USA use the following formula to calculate the furnace input.

For natural gas multiply the heat content of the gas BTU/SCF or Default 1030 BTU/SCF (38.4 MJ/m³), times 2 cubic ft. (0.056 m) of gas measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time (In seconds) it took to measure 2 cubic ft. (0.056 m) of gas from the gas meter.

For propane (LP) gas multiply the heat content of the gas BTU/SCF or Default 2500 BTU/SCF (93.15 MJ/m³), times 1 cubic ft. (0.028 m) of gas measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time (In seconds) it took to measure 1 cubic ft. (0.028 m) of gas from the gas meter.

The formula for US input calculation using a cubic foot gas meter:

$\frac{\text{BTU/ft}^3 \times 2 \text{ cu.ft.} \times 0.960 \times 3600}{\text{Seconds it took to measure the 2 cu.ft. of gas}} = \text{BTU/H}$	$\frac{\text{BTU/ft}^3 \times 1 \text{ cu.ft.} \times 0.960 \times 3600}{\text{Seconds it took to measure the 1 cu.ft. of gas}} = \text{BTU/H}$
NATURAL GAS INPUT CALCULATION EXAMPLE: $\frac{1030 \times 2 \times 0.960 \times 3600}{90.5} = 78,666.90$ Natural Gas 1030 BTU/SCF	PROPANE (LP) GAS INPUT CALCULATION EXAMPLE: $\frac{2500 \times 1 \times 0.960 \times 3600}{108} = 80,000.00$ Propane Gas 2500 BTU/SCF

In Canada you will use the following formula to calculate the furnace input if you are using a cubic foot gas meter.

For Natural Gas multiply the Heat content of the gas MJ/m³ (or Default 38.4), times 2 cubic ft. of gas x 0.028 to convert from cubic feet to cubic meters measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time it took to measure 2 cubic ft. (0.056 m) of gas from the gas meter.

For Propane (LP) Gas multiply the Heat content of the gas MJ/m³ (or Default 93.15), times 1 cu. ft. of gas x 0.028 to convert from cubic feet to cubic meters measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time it took to measure 1 cubic ft. (0.028 m) of gas from the gas meter.

The formula for metric input calculation using a cubic foot gas meter:

$\frac{\text{MJ/m}^3 \times 2 \text{ cu.ft.} \times 0.028 \times 0.960 \times 3600}{\text{Seconds it took to measure the 2 cu.ft. of gas}} = \text{MJ/H} \times 0.2777 = \text{kW} \times 3412.14 = \text{BTU/H}$
NATURAL GAS INPUT CALCULATION EXAMPLE: $\frac{38.4 \times 2 \times 0.028 \times 0.960 \times 3600}{90.5} = 82.12 \times 0.2777 = 22.80 \times 3412.14 = 77,796.80$ Natural Gas 1030 BTU/SCF = 38.4 MJ/m ³
PROPANE (LP) GAS INPUT CALCULATION EXAMPLE: $\frac{93.15 \times 1 \times 0.028 \times 0.960 \times 3600}{108} = 83.46 \times 0.2777 = 23.18 \times 3412.14 = 79,093.4$ Propane Gas 2500 BTU/SCF = 93.15 MJ/m ³

In Canada use the following formula to calculate the furnace input if you are using a gas meter that measures cubic meters.

For Natural Gas multiply the Heat content of the gas MJ/m³ (or Default 38.4), times 0.10 m³ of gas measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time it took to measure 0.10 m³ of gas from the gas meter.

For Propane (LP) Gas multiply the Heat content of the gas MJ/m³ (or Default 93.15), times 0.10 m³ of gas measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time it took to measure 0.10 m³ of gas from the gas meter.

The formula for metric input calculation using a cubic meter gas meter:

$\frac{\text{MJ/m}^3 \times \text{m}^3 \times 0.960 \times 3600}{\text{Seconds it took to measure the 0.10 m}^3 \text{ of gas}} = \text{MJ/H} \times 0.2777 = \text{kW} \times 3412.14 = \text{BTU/H}$
NATURAL GAS INPUT CALCULATION EXAMPLE: $\frac{38.4 \times 0.1 \times 0.960 \times 3600}{160} = 82.94 \times 0.2777 = 23.03 \times 3412.14 = 78,581.60$ Natural Gas 1030 BTU/SCF = 38.4 MJ/m ³
PROPANE (LP) GAS INPUT CALCULATION EXAMPLE: $\frac{93.15 \times 0.1 \times 0.960 \times 3600}{387} = 83.19 \times 0.2777 = 23.10 \times 3412.14 = 78,826.3$ Propane Gas 2500 BTU/SCF = 93.15 MJ/m ³

DO NOT ADJUST the manifold pressure regulator if the actual input is equal to or within 8% less than the furnace input specified on the rating plate or if the furnace rise is above the specified rise range on the rating plate.

If the actual input is significantly higher than the furnace input specified on the rating plate then replace the gas orifices with the gas orifices of the proper size for the type of gas you are using.

CAUTION

Be sure to relight any gas appliances that were turned off at the start of this input check.

TABLE 16: Inlet Gas Pressure Range

INLET GAS PRESSURE RANGE		
	Natural Gas	Propane (LP)
Minimum	4.5" W.C. (1.12 kPa)	8.0" W.C. (1.99 kPa)
Maximum	10.5" W.C. (2.61 kPa)	13.0" (3.24 kPa) W.C.

IMPORTANT: The inlet gas pressure operating range table specifies what the minimum and maximum gas line pressures must be for the furnace to operate safely. The gas line pressure **MUST BE**

- 7" W.C. (1.74 kPa) for Natural Gas
- 11" W.C. (2.74 kPa) for Propane (LP) Gas

in order to obtain the BTU input specified on the rating plate and/or the nominal manifold pressure specified in these instructions and on the rating plate.

ADJUSTMENT OF MANIFOLD GAS PRESSURE

Manifold gas pressure may be measured by two different procedures. It may be measured with the burner box cover in place or it may be measured with the burner box cover removed. Follow the appropriate section in the instructions below. Refer to Figure 38 for a drawing of the locations of the pressure ports on the gas valve.

Turn gas off at the ball valve or gas cock on gas supply line before the gas valve. Find the pressure ports on the gas valve marked OUT P and IN P.

1. The manifold pressure must be taken at the port marked OUT P.
2. The gas line pressure must be taken at the port marked IN P.
3. Using a 3/32" (2.4 mm) Allen wrench, loosen the setscrew by turning it 1 turn counter clockwise. **DO NOT REMOVE THE SET SCREW FROM THE PRESSURE PORT.**

Read the inlet gas pressure using either of the two methods below.

Reading the gas pressure with the burner box cover in place:

- A. Disconnect the pressure reference hose from the right side of the burner box. Using a tee fitting and a short piece of hose, connect the negative side of the manometer to the burner box as described in below.
- B. Remove one end the 5/16" (0.8 cm) ID flexible tubing over the pressure port on the burner box.
- C. Insert the end of the 5/16" (0.8 cm) tubing, that has the 1/8" (0.3 cm) adapter at the end of the tube, in to the 1/8" (0.3 cm) tee.
- D. Connect the 1/8" (0.3 cm) tee to the burner box adapter and to the negative side of a U-tube manometer or digital pressure measuring equipment with 2 – 1/8" (0.3 cm) tubes.
- E. Use the 5/16" (0.8 cm x 1/8" (0.3 cm) reducing coupling and a 4" (10.2 cm) piece of 1/8" (0.3 cm) tubing to connect the positive side of the manometer to the gas valve pressure reference port. Refer to Figure 39 for connection details.

Reading the gas pressure with the burner box cover removed -

Remove the screws securing the burner box front cover plate. Remove the cover. The gasket and may stick in place. Connect the positive side of the manometer to the gas valve as described in E above. There will be no second connection to the manometer, as it will reference atmospheric pressure. Refer to Figure 39 for connection details.

IMPORTANT: The cap for the pressure regulator must be removed entirely to gain access to the adjustment screw. Loosening or tightening the cap does not adjust the flow of gas.

1. Refer to Figure 38 for location of pressure regulator adjustment cap and adjustment screw on main gas valve.
2. Turn gas and electrical supplies on and follow the operating instructions to place the unit back in operation.
3. Adjust manifold pressure by adjusting gas valve regulator screw for the appropriate gas per the following:

TABLE 17: Nominal Manifold Pressure

NOMINAL MANIFOLD PRESSURE	
Natural Gas	3.5" w.c. (0.87 kPa)
Propane (LP) Gas	10.0" w.c. (2.488 kPa)

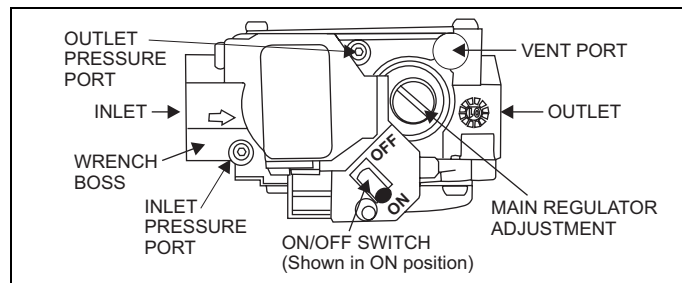


FIGURE 38: Gas Valve

IMPORTANT: If gas valve regulator is turned in (clockwise), manifold pressure is increased. If screw is turned out (counterclockwise), manifold pressure will decrease.

4. After the manifold pressure has been adjusted, re-calculate the furnace input to make sure you have not exceeded the specified input on the rating plate. Refer to "CALCULATING THE FURNACE INPUT (NATURAL GAS)".
5. Once the correct BTU (kW) input has been established, turn the gas valve to OFF and turn the electrical supply switch to OFF; then remove the flexible tubing and fittings from the gas valve pressure tap and the pressure reference hose from the right side of the burner box and tighten the pressure tap plug using the 3/32" Allen wrench. Replace the burner box front cover (if it was removed) and place the pressure reference hose back on the gas valve.
6. Turn the electrical and gas supplies back on, and with the burners in operation, check for gas leakage around the gas valve pressure port for leakage using an approved gas detector, a non-corrosive leak detection fluid, or other leak detection methods.

WARNING

The manifold pressure must be checked with the screw-off cap for the gas valve pressure regulator in place. If not, the manifold pressure setting could result in an over-fire condition. A high manifold pressure will cause an over-fire condition, which could cause premature heat exchanger failure. If the manifold pressure is too low, sooting and eventual clogging of the heat exchanger could occur. Be sure that gas valve regulator cap is in place and burner box to gas valve pressure reference hose is connected.

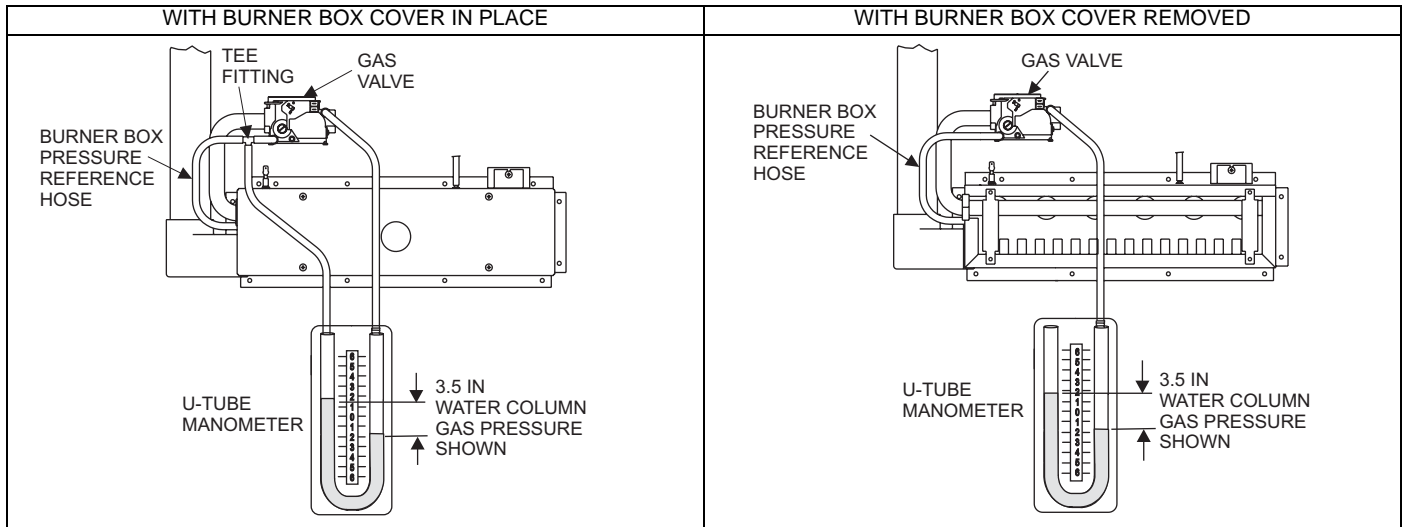


FIGURE 39: Reading Gas Pressure

ADJUSTMENT OF TEMPERATURE RISE

▲ DANGER

The temperature rise, or temperature difference between the return air and the supply (heated) air from the furnace, must be within the range shown on the furnace rating plate and within the application limitations shown in Table 7 "ELECTRICAL AND PERFORMANCE DATA".

The supply air temperature cannot exceed the "Maximum Supply Air Temperature" specified in these instructions and on the furnace rating plate. Under NO circumstances can the furnace be allowed to operate above the Maximum Supply Air Temperature. Operating the furnace above the Maximum Supply Air Temperature will cause premature heat exchanger failure, high levels of Carbon Monoxide, a fire hazard, personal injury, property damage, and/or death.

The temperature rise, or temperature difference between the return air and the heated supply air from the furnace, must be within the range shown on the furnace rating plate and within the application limitations as shown in Table 7.

After about 20 minutes of operation, determine the furnace temperature rise. Take readings of both the return air and the heated air in the ducts, about six feet (1.83 m) from the furnace where they will not be affected by radiant heat. Increase the blower speed to decrease the temperature rise; decrease the blower speed to increase the rise.

All direct-drive blowers have multi-speed motors. The blower motor speed taps are located in the control box in the blower compartment. Refer to Figure 40, and the unit-wiring label to change the blower speed. To use the same speed tap for heating and cooling, the heat terminal and cool terminal must be connected using a jumper wire and connected to the desired motor lead. Place all unused motor leads on Park terminals. Two are provided.

▲ CAUTION

Do not energize more than one motor speed at a time or damage to the motor will result.

ADJUSTMENT OF FAN CONTROL SETTINGS

This furnace is equipped with a time-on/time-off heating fan control. The fan on delay is fixed at 30 seconds. The fan off delay has 4 settings (60, 90, 120 and 180 seconds). The fan off delay is factory set to 120 seconds. The fan-off setting must be long enough to adequately cool the furnace, but not so long that cold air is blown into the heated space. The fan-off timing may be adjusted by positioning the jumper on two of the four pins as shown in Figure 40.

The blower speed connections shown in Figure 40 are typical. However, these connections may vary from model to model and may be changed as needed to give proper heating and cooling airflow.

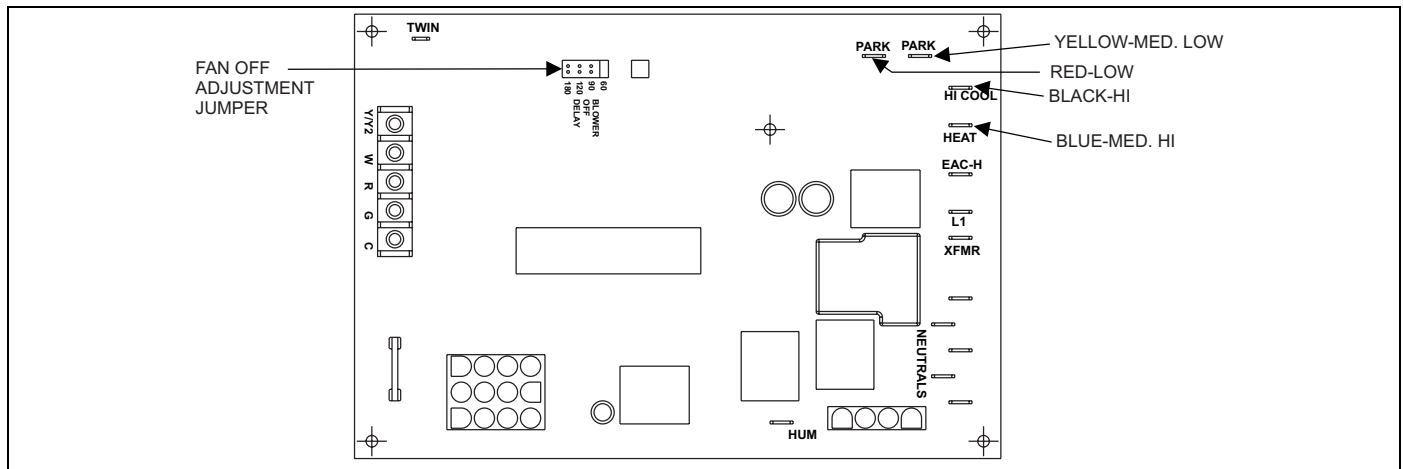


FIGURE 40: Furnace Control Board

FURNACE CONTROL DIAGNOSTICS

The furnace has built-in, self-diagnostic capability. If a system problem occurs, a blinking LED shows a fault code. The LED can flash red, green or amber to indicate various conditions. It is located behind a clear view port in the blower compartment door.

The control continuously monitors its own operation and the operation of the system. If a failure occurs, the LED will indicate the failure code. If the failure is internal to the control, the light will stay on continuously. In this case, the entire control should be replaced, as the control is not field repairable.

Flash sequence codes 1 through 10 are as follows: LED will turn "on" for 1/4 second and "off" for 1/4 second. This pattern will be repeated the number of times equal to the code. For example, six "on" flashes equals a number 6 fault code. All flash code sequences are broken by a 2 second "off" period.

SLOW GREEN FLASH: Normal operation.

SLOW AMBER FLASH: Normal operation with call for heat.

RAPID RED FLASH: Twinning error, incorrect 24V phasing. Check twinning wiring.

RAPID AMBER FLASH: Flame sense current is below 1.5 microamps. Check and clean flame sensor. Check for proper gas flow.

4 AMBER FLASHES: The control board is receiving a "Y" signal from the thermostat without a "G" signal, indicating improper thermostat wiring.

1 RED FLASH: This indicates that flame was sensed when there was not a call for heat. With this fault code the control will turn on both the inducer motor and supply air blower. A gas valve that leaks through or is slow closing would typically cause this fault.

2 RED FLASHES: This indicates that the normally open pressure switch contacts are stuck in the closed position. The control confirms these contacts are open at the beginning of each heat cycle. This would indicate a faulty pressure switch or miswiring.

3 RED FLASHES: This indicates the normally open pressure switch contact did not close after the inducer was energized. This could be caused by a number of problems: faulty inducer, blocked vent pipe, broken pressure switch hose or faulty pressure switch.

4 RED FLASHES: This indicates that a primary or auxiliary limit switch has opened its normally closed contacts. With this fault code the control will operate the supply air blower and inducer. This condition may be caused by: dirty filter, improperly sized duct system, incorrect blower speed setting, incorrect firing rate or faulty blower motor.

5 RED FLASHES: This fault is indicated if the normally closed contacts in the rollout switch opens. The rollout control is manually reset. If it has opened, check for proper combustion air, proper inducer operation, and primary heat exchanger failure or burner problem. Be sure to reset the switch after correcting the failure condition.

6 RED FLASHES: This indicates that after the unit was operating, the pressure switch opened 4 times during the call for heat. If the main blower is in a "Delay on" mode it will complete it, and any subsequent delay off period. The furnace will lock out for one hour and then restart.

7 RED FLASHES: This fault code indicates that the flame could not be established. This no-light condition occurred 3 times (2 retries) during the call for heat before locking out. Low gas pressure, faulty gas valve, faulty hot surface ignitor or burner problem may cause this. The furnace will lock out for one hour and then restart.

8 RED FLASHES: This fault is indicated if the flame is lost 5 times (4 recycles) during the heating cycle. This could be caused by low gas pressure or faulty gas valve. The furnace will lock out for one hour and then restart.

9 RED FLASHES: Indicates reversed line voltage polarity or grounding problem. Both heating and cooling operations will be affected. Check polarity at furnace and branch. Check furnace grounding. Check that flame probe is not shorted to chassis.

10 RED FLASHES: Gas valve energized with no call for heat. Check gas valve and gas valve wiring.

11 RED FLASHES: This indicates that a primary or auxiliary limit switch has opened its normally-closed contacts and has remained open for more than five minutes. This condition is usually caused by a failed blower motor or blower wheel.

12 RED FLASHES: This code indicates an open igniter circuit, which could be caused by a disconnected or loose wire or by a cracked or broken igniter.

STEADY ON RED: Control failure. Replace control board.

60-MINUTE AUTOMATIC RESET FROM LOCKOUT: This control includes a "watchdog" type circuit that will reset from a lockout condition after 60 minutes. Operational faults 6,7,8 will be reset. This provides protection to an unoccupied structure if a temporary condition exists causing a furnace malfunction. An example would be a low incoming gas supply pressure preventing unit operation. When the gas pressure is restored, at some point the "watchdog" would restart the unit and provide heat for the house.

NOTE: If a flame is detected the control flashes the LED for 1/8 of a second and then enters a flame stabilization period.

IGNITION CONTROL

Normal flame sense current is approximately
3.7 microamps DC (μa)
Low flame signal warning starts at 1.5 microamps.
Low flame signal control lockout point is
0.1 microamps DC (μa)

DIAGNOSTIC FAULT CODE STORAGE AND RETRIEVAL

The control in this furnace is equipped with memory that will store up to five error codes to allow a service technician to diagnose problems more easily. This memory will be retained even if power to the furnace is lost. **This feature should only be used by a qualified service technician.**

The control stores up to five separate error codes. If more than five error codes have occurred since the last reset, only the five most recent will be retained. The furnace control board has a button, labeled "LAST ERROR" that is used to retrieve error codes. This function will only work if there are no active thermostat signals. So any call for heating, cooling or continuous fan must be terminated before attempting to retrieve error codes.

To retrieve the error codes, push the LAST ERROR button. The LED on the control will then flash the error codes that are in memory, starting with the most recent. There will be a two-second pause between each flash code. After the error codes have all been displayed, the LED will resume the normal slow green flash after a five second pause. To repeat the series of error codes, push the button again.

If there are no error codes in memory, the LED will flash two green flashes. To clear the memory, push the LAST ERROR button and hold it for more than five seconds. The LED will flash three green flashes when the memory has been cleared, then will resume the normal slow green flash after a five-second pause.

TABLE 18: Blower Performance CFM

MODELS Input/ Airflow/ Cabinet	Speed Tap	Airflow with Top Return - without Filters (CFM)										Airflow with Top Return - without Filters (m ³ /min)									
		External Static Pressure, Inches W.C.										External Static Pressure, Inches (kPa)									
		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0	0.025	0.050	0.075	0.099	0.124	0.149	0.174	0.199	0.224	0.249
40/1200/A	High	1635	1590	1535	1480	1415	1340	1280	1185	NR	NR	46	45	43	42	40	38	36	34	NR	NR
	Med-High	1179	1170	1160	1140	1135	1098	1048	1026	NR	NR	33	33	33	32	32	31	30	29	NR	NR
	Med-Low	969	967	967	959	938	905	860	802	NR	NR	27	27	27	27	27	26	24	23	NR	NR
	Low	774	753	745	726	698	674	652	612	NR	NR	22	21	21	21	20	19	18	17	NR	NR
60/1200/B	High	1687	1652	1631	1595	1557	1511	1456	1382	1313	1211	48	47	46	45	44	43	41	39	37	34
	Med-High	1193	1183	1173	1162	1142	1115	1076	1036	982	950	34	33	33	33	32	32	30	29	28	27
	Med-Low	933	933	921	911	902	872	825	793	771	712	26	26	26	26	26	25	23	22	22	20
	Low	752	745	731	718	698	652	602	580	536	496	21	21	21	20	20	18	17	16	15	14
80/1200/B	High	1686	1658	1623	1572	1534	1465	1391	1305	1202	1091	48	47	46	44	43	41	39	37	34	31
	Med-High	1257	1223	1218	1203	1177	1142	1094	1026	939	874	36	35	34	34	33	32	31	29	27	25
	Med-Low	977	982	976	955	934	899	843	791	738	686	28	28	28	27	26	25	24	22	21	19
	Low	775	777	757	733	698	663	627	584	549	490	22	22	21	21	20	19	18	17	16	14
80/1600/C	High	2071	2026	1981	1935	1864	1796	1713	1625	1532	1401	59	57	56	55	53	51	48	46	43	40
	Med-High	1583	1590	1569	1554	1532	1502	1457	1409	1327	1221	45	45	44	44	43	43	41	40	38	35
	Med-Low	1256	1275	1275	1288	1275	1265	1232	1187	1126	1023	36	36	36	36	36	36	35	34	32	29
	Low	937	939	936	945	942	936	912	874	810	726	27	27	26	27	27	26	26	25	23	21
100/1600/C	High	1996	1961	1938	1896	1836	1779	1707	1625	1531	1399	56	56	55	54	52	50	48	46	43	40
	Med-High	1449	1480	1495	1488	1488	1449	1417	1368	1299	1208	41	42	42	42	42	41	40	39	37	34
	Med-Low	1167	1192	1192	1187	1202	1192	1182	1140	1097	1018	33	34	34	34	34	34	33	32	31	29
	Low	932	900	871	840	805	761	710	663	641	623	26	25	25	24	23	22	20	19	18	18
100/2000/C	High	2404	2320	2225	2138	2034	1924	1816	1692	1559	1422	68	66	63	61	58	54	51	48	44	40
	Med-High	2018	1955	1883	1815	1750	1670	1586	1497	1394	1246	57	55	53	51	50	47	45	42	39	35
	Med-Low	1626	1581	1531	1488	1418	1363	1291	1225	1123	964	46	45	43	42	40	39	37	35	32	27
	Low	1336	1291	1249	1205	1155	1091	1018	951	884	759	38	37	35	34	33	31	29	27	25	21
120/2000/D	High	2520	2432	2353	2251	2152	2042	1947	1815	1701	1525	71	69	67	64	61	58	55	51	48	43
	Med-High	2018	1979	1945	1911	1863	1779	1705	1599	1493	1353	57	56	55	54	53	50	48	45	42	38
	Med-Low	1586	1545	1501	1457	1407	1351	1287	1216	1081	926	45	44	42	41	40	38	36	34	31	26
	Low	1321	1266	1213	1163	1111	1071	987	864	763	700	37	36	34	33	31	30	28	24	22	20

NOTES:

1. Airflow expressed in standard cubic feet per minute (CFM) and in cubic meters per minute (m³/min).
2. Motor voltage at 115 V.
3. NR = Operation at this static pressure is not recommended.

FILTER PERFORMANCE

The airflow capacity data published in Table 18 represents blower performance WITHOUT filters. To determine the approximate blower performance of the system, apply the filter drop value for the filter being used or select an appropriate value from the Table 19.

NOTE: The filter pressure drop values in Table 19 are typical values for the type of filter listed and should only be used as a guideline. Actual pressure drop ratings for each filter type vary between filter manufacturers.

TABLE 19: Filter Performance - Pressure Drop Inches W.C. and (kPa)

Airflow Range		Minimum Opening Size		Filter Type					
				Disposable		Washable Fiber		Pleated	
CFM	m ³ /min	in ²	cm ²	In W.C.	kPa	In W.C.	kPa	In W.C.	kPa
0 - 750	0 - 21.4	230	1484	0.01	0.00249	0.01	0.00249	0.15	0.03736
751 - 1000	21.25 - 28.32	330	2129	0.05	0.01245	0.05	0.01245	0.20	0.04982
1001 - 1250	28.33 - 35.40	330	2129	0.10	0.02491	0.10	0.02491	0.20	0.04982
1251 - 1500	35.41 - 42.48	330	2129	0.10	0.02491	0.10	0.02491	0.25	0.06227
1501 - 1750	42.49 - 49.55	380	2452	0.15	0.03736	0.14	0.03487	0.30	0.07473
1751 - 2000	49.56 - 56.63	380	2542	0.19	0.04733	0.18	0.04484	0.30	0.07473
2001 & Above	56.64 - Above	463	2987	0.19	0.04733	0.18	0.04484	0.30	0.07473

APPLYING FILTER PRESSURE DROP TO DETERMINE SYSTEM AIRFLOW

To determine the approximate airflow of the unit with a filter in place, follow the steps below:

1. Select the filter type.
2. Determine the External System Static Pressure (ESP) without the filter.
3. Select a filter pressure drop from the table based upon the number of return air openings or return air opening size and add to the ESP from Step 2 to determine the total system static.
4. If total system static matches a ESP value in the airflow table (i.e. 0.20, 0.60, etc.) the system airflow corresponds to the intersection of the ESP column and Model/Blower Speed row.
5. If the total system static falls between ESP values in the table (i.e. 0.58, 0.75, etc.), the static pressure may be rounded to the nearest value in the table determining the airflow using Step 4 or calculate the airflow by using the following example.

Example: For a 120,000 Btuh furnace operating on high speed blower, it is found that total system static is 0.58" w.c. To determine the system airflow, complete the following steps:

1. Obtain the airflow values at 0.50" & 0.60" ESP.
Airflow @ 0.50": 2152 CFM
Airflow @ 0.60": 2042 CFM
2. Subtract the airflow @ 0.50" from the airflow @ 0.60" to obtain airflow difference.
 $2042 - 2152 = -110$ CFM
3. Subtract the total system static from 0.50" and divide this difference by the difference in ESP values in the table, 0.60" - 0.50", to obtain a percentage.
 $(0.58 - 0.50) / (0.60 - 0.50) = 0.8$
4. Multiply percentage by airflow difference to obtain airflow reduction.
 $(0.8) \times (-110) = -88$
5. Subtract airflow reduction value to airflow @ 0.50" to obtain actual airflow @ 0.58" ESP.
 $2152 - 88 = 2064$

FIELD INSTALLED ACCESSORIES - NON-ELECTRICAL		
MODEL NO.	DESCRIPTION	USED WITH
1NP0347	PROPANE (LP) CONVERSION KIT	ALL MODELS
1CT0302	CONCENTRIC INTAKE/VENT 2"	ALL MODELS EXCEPT 120 MBH
1CT0303	CONCENTRIC INTAKE/VENT 3"	ALL MODELS
1PS0904	HIGH ALTITUDE PRESSURE SWITCH KIT (Does Not Include Orifices)	40
1PS0901		60/100/120
1PS0902		80/1200
1PS0903		80/1600
1NK0301	CONDENSATE NEUTRALIZER KIT	ALL MODELS
1HT0901	SIDEWALL VENT TERMINATION KIT 3"	ALL MODELS
1HT0902	SIDEWALL VENT TERMINATION KIT 2"	ALL MODELS
1CB0314	COMBUSTIBLE FLOOR BASE These kits are required in downflow application when using G*F* series coils. These kits are not required with MC/FC series coils, but please ensure that the coil and furnace are secured and that there are no air leaks.	14-1/2" CABINET
1CB0317		17-1/2" CABINET
1CB0321		21" CABINET
1CB0324		24 1/2" CABINET
1TK0914		14-1/2" CABINET
1TK0917	COIL TRANSITION KIT	17-1/2" CABINET
1TK0921		21" CABINET
1TK0924		24 1/2" CABINET
1VK0901		3-WAY TRANSITION KIT

SECTION XI: WIRING DIAGRAM

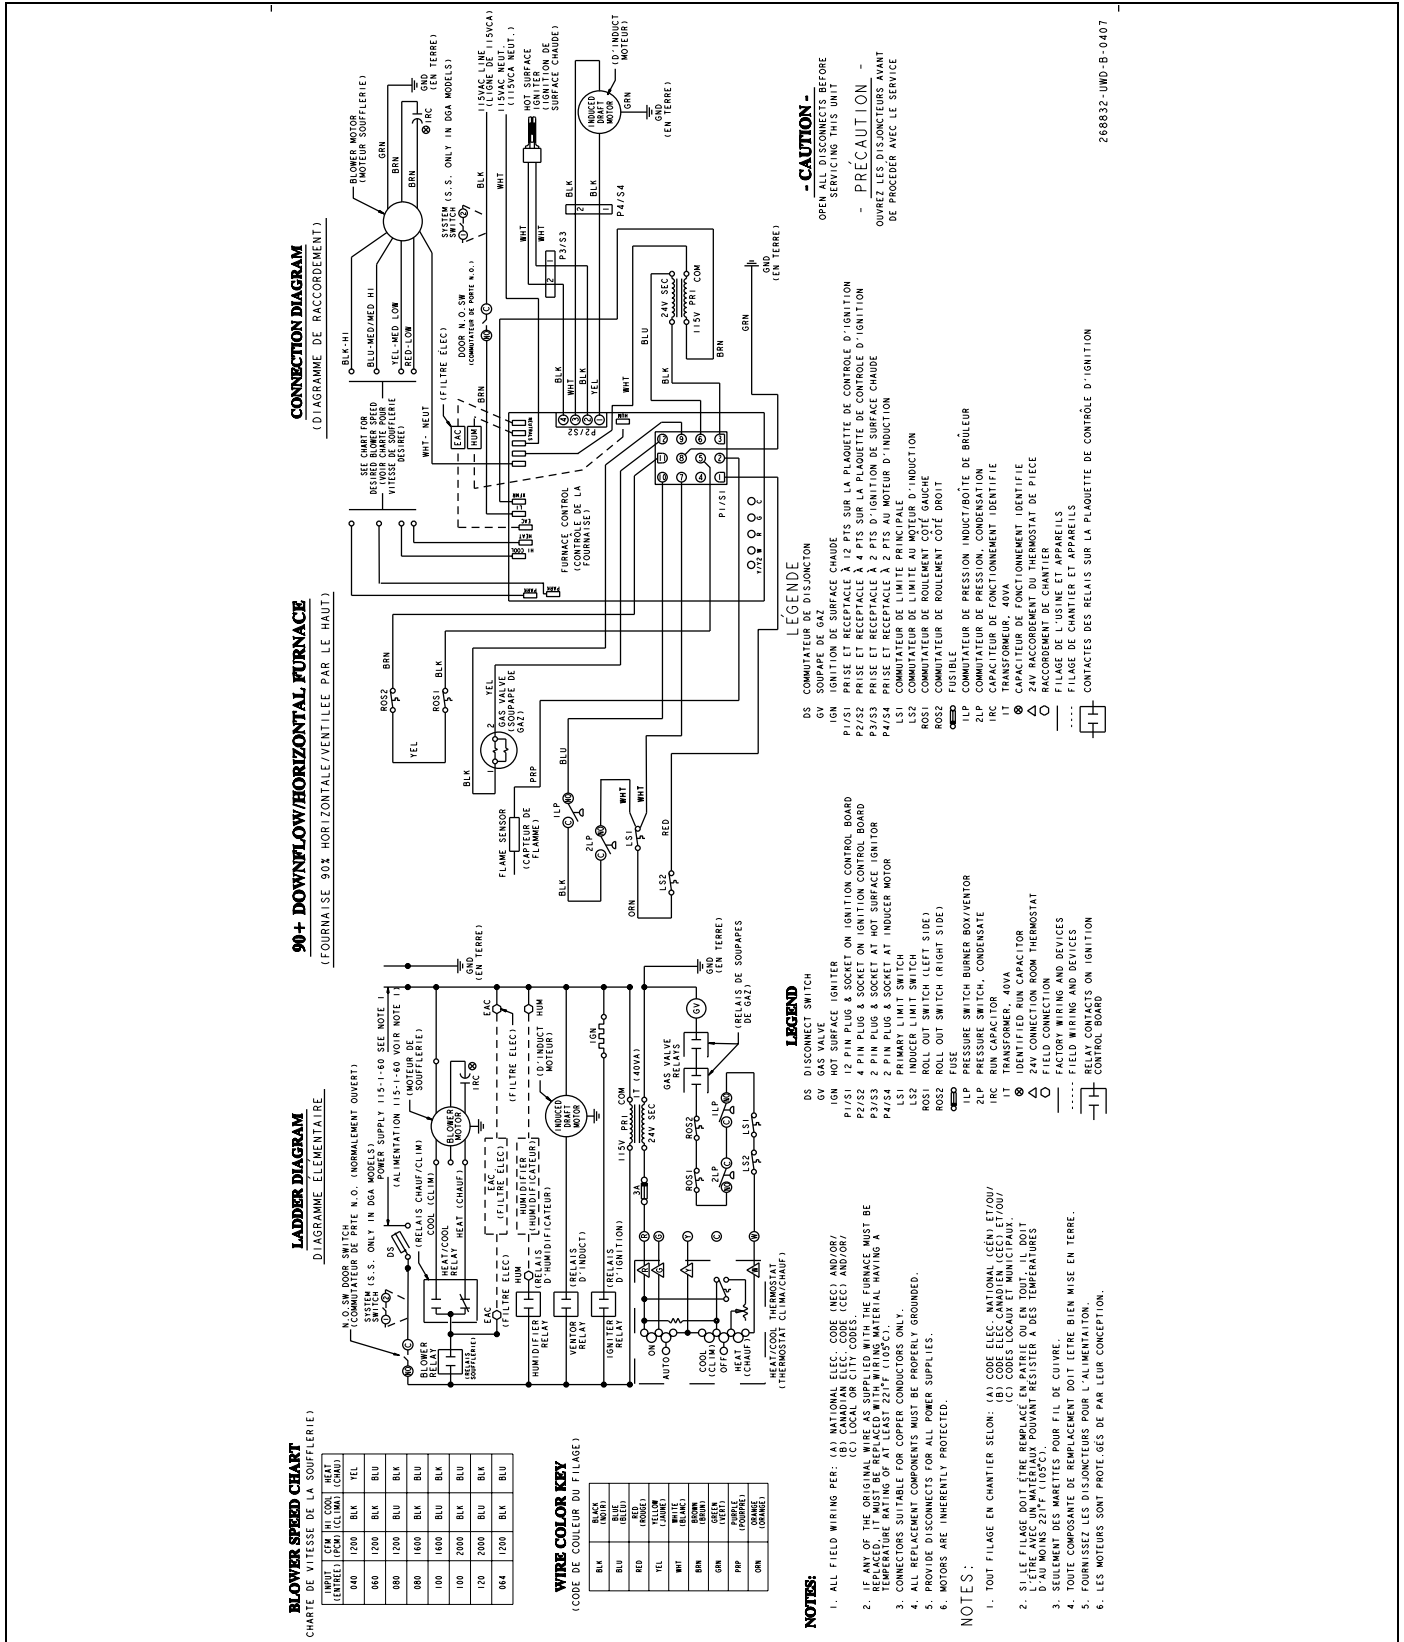


FIGURE 41: Wiring Diagram

NOTES