



LCD MONITOR

quick start guide

520DX , 520DXn



(Floor standing type)가



 
 
 
LCD Display




D-Sub




(AAA X 2)

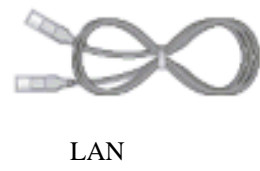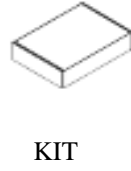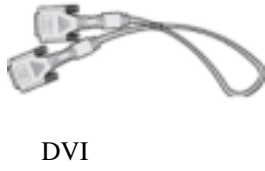

(DXN .)

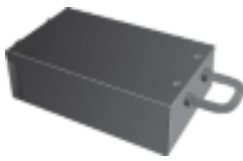 

- TV .
- 가 .

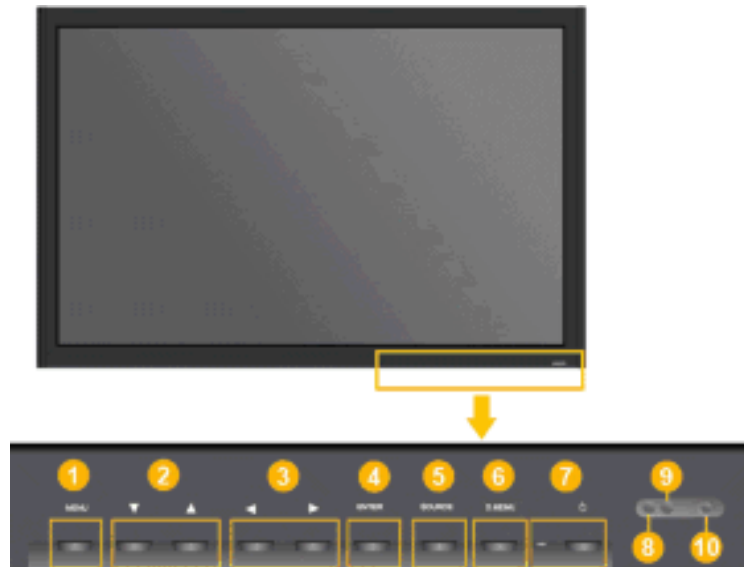 

1 MENU [MENU]

2

3 /

4 ENTER [ENTER]

5 SOURCE [SOURCE]

[PC] [DVI] [] [HDMI] [MagicInfo] [TV]
[BNC] [Component]



- TV TV
- MagicInfo DXN DX

6 D.MENU

D.MENU



- TV

7

[⏻]

 
8

가

9



10

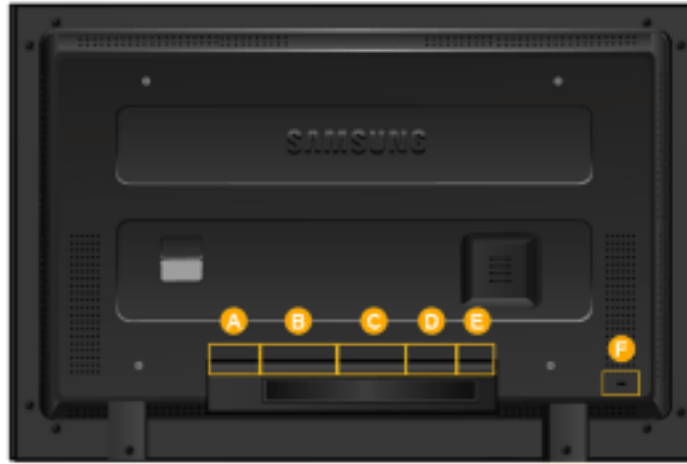


A



1 POWER S/W ON [] / OFF [O]

2 POWER IN

 B

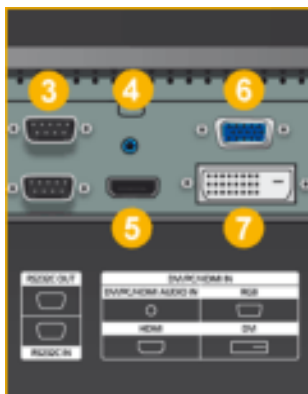

3 RS232C OUT/IN (RS232C /)

MDC (Multiple Display Control) /

4 DVI/PC/HDMI IN [DVI/PC/HDMI AUDIO IN] (DVI/PC/HDMI ())

AUDIO IN] PC [DVI/PC/HDMI

5 DVI / PC / HDMI IN [HDMI]

HDMI HDMI HDMI

HDMI

6 DVI / PC / HDMI IN [RGB] (PC)

D-SUB [RGB] PC
RGB .

7 DVI / PC / HDMI IN [DVI] (PC)

DVI [DVI] PC
DVI .

C



8 DC OUT [5V/1.5A]

TV Power
..

9 AV IN [VIDEO]

VIDEO [VIDEO]

 
10 AV AUDIO IN [L-AUDIO-R] ()

[L-AUDIO-R]

11 AV AUDIO OUT [L-AUDIO-R] ()

[L-AUDIO-R]

D

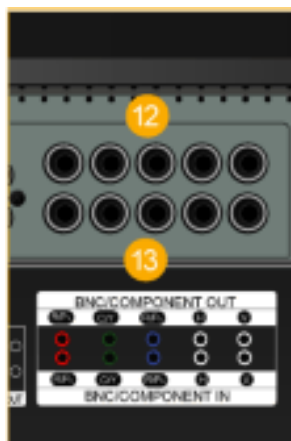


12 BNC/COMPONENT OUT [R/PR, G/Y, B/PB, H, V] (BNC /)

BNC (PC) : R, G, B, H, V


: PR, Y, PB

13 BNC/COMPONENT IN [R/PR, G/Y, B/PB, H, V] (BNC /)

 E

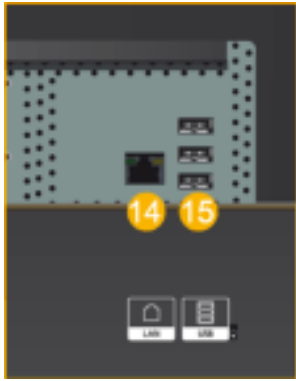



⑭ LAN(LAN)
(DXN .)

⑮ USB(USB)
/ ,
(DXN .)


Loopout 가 , signal 가
, signal 10 가

 F

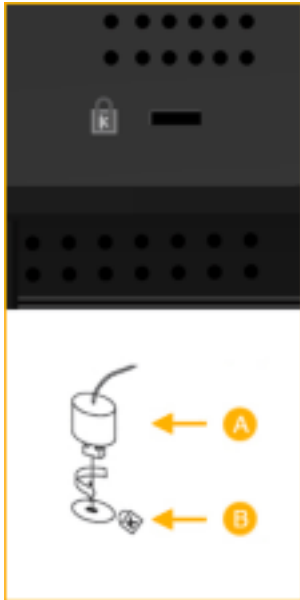

 
1.  
- 2.
- 3.









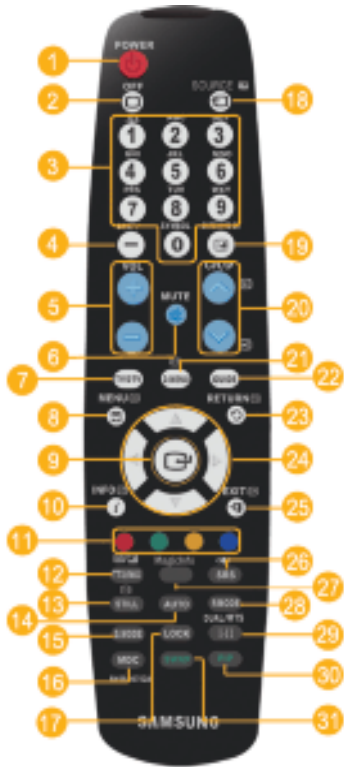




()







TV



- 1 POWER
- 2 OFF
- 3
- 4 Del
- 5 + VOL -
- 6 MUTE
- 7 TV/DTV
- 8 MENU
- 9 ENTER
- 10 INFO
- 11
- 12 TTX/MIX
- 13 STILL
- 14 AUTO
- 15 S.MODE
- 16 MDC
- 17 LOCK
- 18 SOURCE
- 19 ENTER/PRE-CH
- 20 CH/P
- 21 D-MENU
- 22 GUIDE
- 23 RETURN
- 24
- 25 EXIT
- 26 SRS
- 27 MagicInfo
- 28 P.MODE
- 29 DUAL/MTS
- 30 PIP

31 SWAP

1.  POWER .
2.  Off .
3. .
4. Dell  button " - " DTV DTV MMS() .
5. + VOL - .
6.  MUTE 가 .
7. TV/DTV TV, DTV .
8.  MENU ,
9.  .
10.  INFO 가 .
11. .
12.  TTX/MIX TV .
- Teletext

13. STILL .
14. AUTO PC .
15. S.MODE 가 .
가 가 .
가 (.
16. MDC MDC 가 .
17. LOCK LOCK .

- 18.  SOURCE TV/ .
- 19.  ENTER/PRE-CH .
- 20.  CH/PA TV .
- 21. D.MENU DTV .
- 22. GUIDE 가 .
- 23.  RETURN .
- 24. .
- 25.  EXIT .
- 26.  SRS SRS .
- 27. MagicInfo MagicInfo 가 .
- 28. P.MODE 가 .

/HDMI /TV : P.MODE

4가 가 .
가 .

()

PC / DVI / MagicInfo: M/B (MagicBright)

MagicBright , PC , ,

가 .
가 . ()

- 29.  DUAL/MTS *DUAL-*
TV DUAL
STEREO/MONO, DUAL 1 / DUAL II, MONO/NICAM
MONO/NICAM STEREO .

MTS-

MTS (Multichannel Television Stereo)

		MTS/S_Mode		
FM	Mono	Mono		
	Stereo	Mono	Stereo	
	SAP	Mono	SAP	Mono

- 30. PIP .

 
31.SWAP

가

.PIP
가 PIP

Mechanical Layout

Mechanical Layout

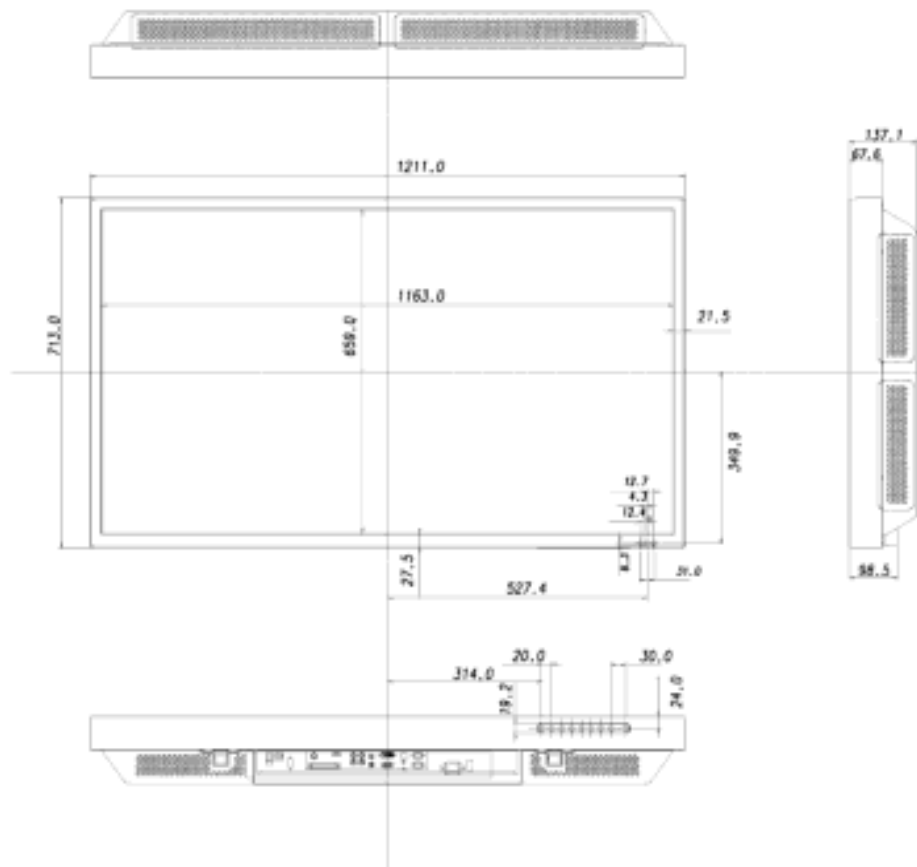




DVD, VCR

AV

가

AV

 가

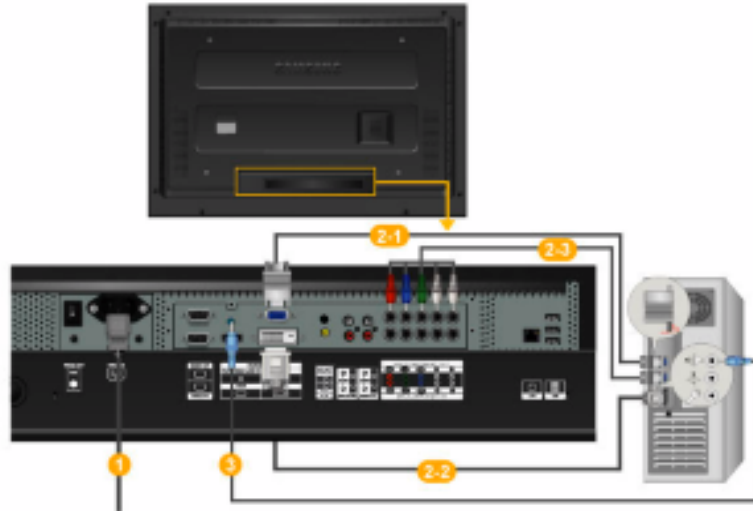

1

220V

110V

2

2가

3가

가

2-1

D-Sub()

• D-Sub

RGB

D-Sub



2-2

DVI()

• DVI

DVI

DVI



2-3

BNC()

- BNC

BNC/COMPONENT IN - R, G, B, H, V

D-Sub



3



-

- DVI

-



DVD, VCR

 
AV

가

AV

가

AV

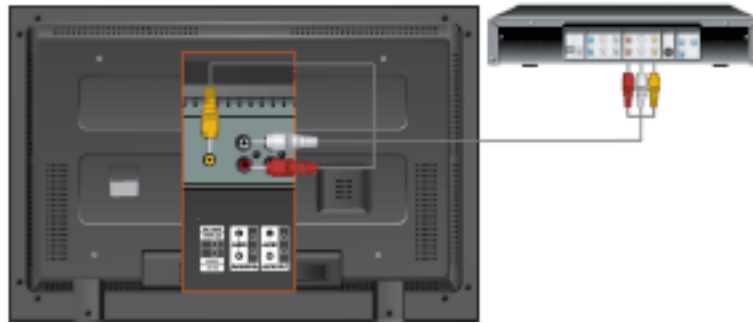

1. DVD, VCR
[R-AUDIO-L]

2. DVD, VCR DVD

3. SOURCE DVD, VCR 가 " "



 
DVD, VCR

AV

가

AV


가

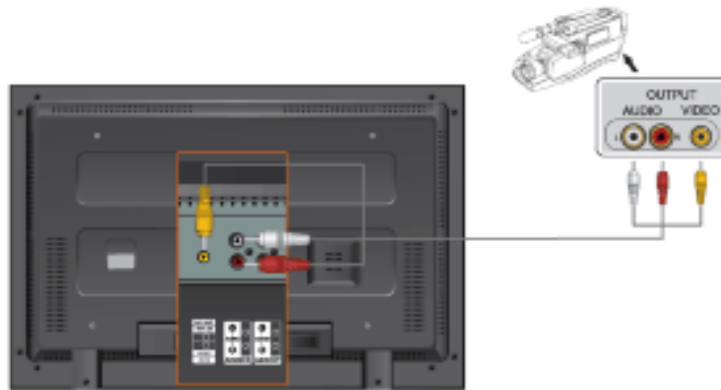

1. A/V AUDIO IN [L-AUDIO-R] AV AU-
2. AV IN [VIDEO]
3. SOURCE
4. 

가 .(

 Connecting a DVD Player

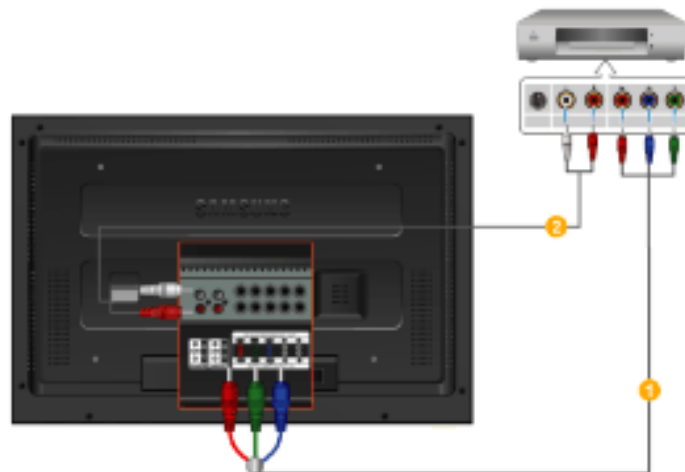

1. Connect a set of audio cables between the AV AUDIO IN [L-AUDIO-R] on the LCD Display and the AUDIO OUT jacks on the DVD player.
2. Connect a Component cable between the BNC/COMPONENT IN - P_R, Y, P_B port on the LCD Display and the P_R, Y, P_B jacks on the DVD player.

 **Note**

- Select Component for the connection to a DVD player using the SOURCE button on the front of the LCD Display or on the remote control.
- Then, start the DVD Player with a DVD disc inserted.

 **Note**

 
- A component cable is optional.

For an explanation of Component video, consult your DVD manual.

Connecting a DTV Set Top Box

 **Note**

- The connections for a typical Set Top Box are shown below.

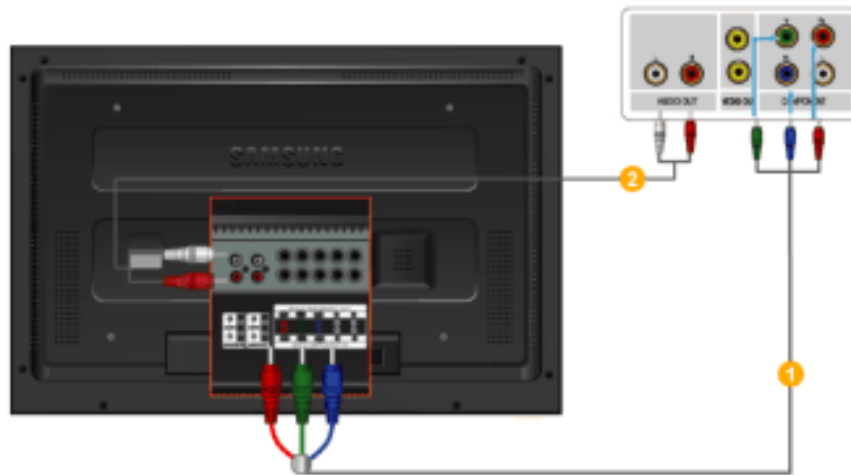

1. Connect a Component cable between the BNC / COMPONENT IN - P_R, Y, P_B port on the LCD Display and the P_R, Y, P_B jacks on the Set Top Box.
2. Connect a set of audio cables between the AV AUDIO IN [L-AUDIO-R] on the LCD Display and the AUDIO OUT jacks on the Set Top Box.


 **Note**

 - Select Component for the connection to a DTV Set Top Box using the SOURCE button on the front of the LCD Display or on the remote control.

 **Note**


- For an explanation of Component video, see your Set Top Box owner's manual.
-

HDMI

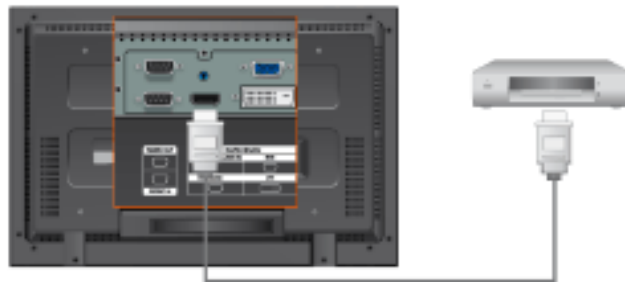


- HDMI HDMI [HDMI]
- [HDMI] PC

 DVI - HDMI

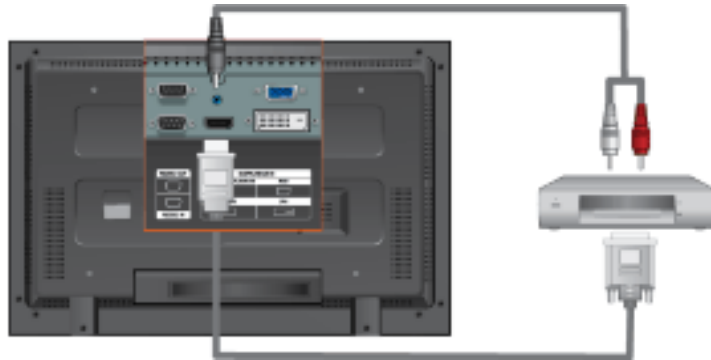

 1. DVI - HDMI DVI [HDMI]
2. RCA -(PC)stereo , [HDMI/PC DVI AUDIO IN]

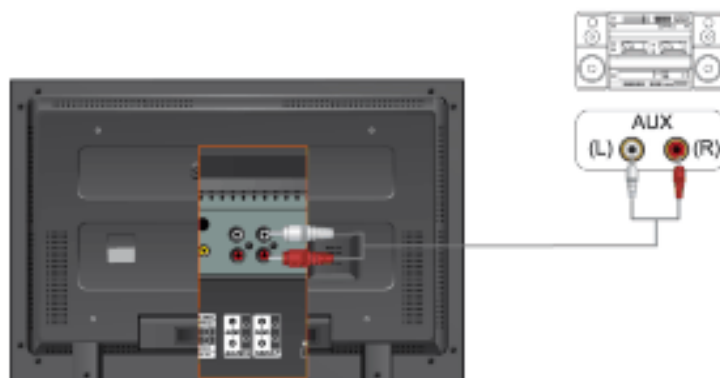

- AUX L, R AUDIO OUT [L-AUDIO-R]

LAN



 
DVD, VCR

AV

가

AV

가

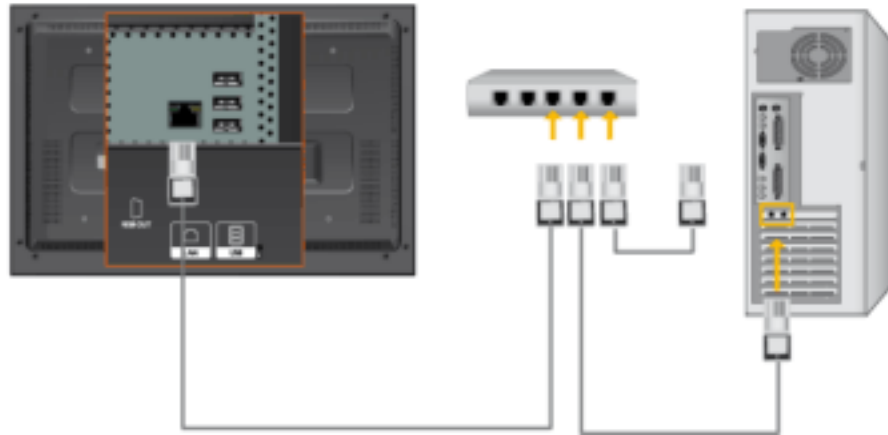

LAN



- DXn

USB



DVD, VCR

AV

가

AV

가



USB



- DXn



가 , 가

가

- 1.
- 2.
- 3.

가 ()

LED



 
- 4.

1920 x 1080
1

.85Hz

가

가

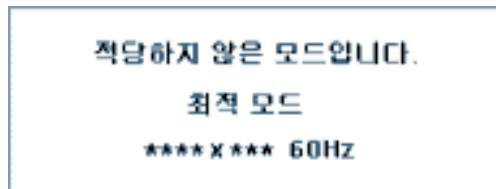

가

>

- 1)



- ,
- . ()

2)

()



- , ,
- (.)
-

/



PC

PC

가

1

1.

2.

3

(" " 가 3 .)

3.

PC

()

4.

50Hz ~ 85Hz

(, 60Hz .)

5.

" " " "

()



•

•

MagicInfo

(PC)



Q:

A:

()



Q:

A:

()

Q: " " 가

A:

()

A:

Q: " " 가

A: 가

A:

Q:

A:

()

Q:

A:

A: ()

A:

Q:

A: 가 가
가

Q: 가

A: 가 가
가

Q:

A:

(,)

Q:

A:

Q:

A:

Q:

A:

Q:

0.5 1

A: 가

A:

Q:

A: MENU

"TEST GOOD"



Q: 가

A:

()

A:

Q: 가

A:

A: 가

Q: 가

A:



Q:

A: +/- 가 ?

A: 가 ?

A: 가 ?

A: 가 ?

A: ?

MagicInfo



가 USB Flash Disk .

Q: 가 USB Flash Disk

A: 1) 512Mb USB USB Bootable Disk TOOL 가 USB
Disk . () : HP USB Disk Storage Format Tool)

A: 2) USB Disk OS .

A: 3) CMOS Setup 가 USB Booting 가
"Usb Boot First" Enable .

A: 4) USB Disk set power on USB .

A: 5) c:\ghost Local Partition From Image USB Disk
.

A: 6) 가 .

Q: ?

A:

. (.)

Q: ?

A: Windows XP:
Set the resolution in the .

A: Windows ME/2000:
.
* .

Q: ?

A: Windows XP:
Set the resolution in the
BIOS SETUP . (Windows/)

A: Windows ME/2000:

BIOS SETUP

. (Windows/)

Q: /LCD ?

A:

,LCD 가 ,
가 .

Q: ?

A: Movie WMV, MPEG1 가 . WMV,
MPEG1 .() ,



, 가 . 가
