



ACCUSPLIT® AMBASSADOR™ 625X WIZARD STOPWATCH

OPERATING INSTRUCTIONS CUMULATIVE OR LAP SPLIT STOPWATCH

Event
 C → Start
 C → Stop
 C → Restart (time out)
 C → Stop
 A → Reset

Split (CUM or LAP)
 B → LAP or CUM appears
 C → Start
 A → Split
 A → Return to running time
 C → Stop
 A → Reset

1-2 Fast Split
 C → Start
 A → Split. Display shows first split
 C → Stop
 A → Display shows second split
 A → Reset

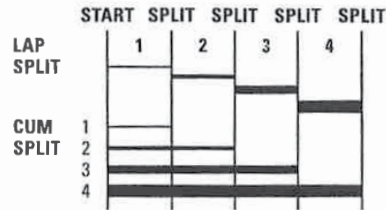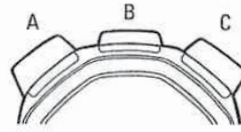

HOW TO WIN MORE BASEBALL GAMES GET MORE RUNNERS ON BASE

START



Always start at the swing. Professional scouts time every swing. Don't wait for contact.

CUM SPLIT OR LAP SPLIT



Runner may go to second or third, so split, don't stop.

STOP*



Stop when runner reaches second or third.

In practice, and in games, time batters to first. Have contests and post rankings. Develop the attitude and habit to get there fast.

GET MORE STOLEN BASES

Time the steal

START



Always start the runner's time with the pitcher starting for home, not when the runner starts.

STOP



Stop at the bag.

In practice, and in games, develop good pitching motion and throws to second, and base running.

Your goal is to develop the best offensive skills and defensive skills you can, and hope that you are better prepared than your opponent.

Time the throw

START



Start when the pitcher goes for home.

CUM SPLIT OR LAP SPLIT



Split at the pop to see how long the catcher takes to complete the tag throw.

STOP*



Stop at the tag. This keeps the catcher focused on the correct tag spot. It takes time to tag from a high throw.

* See 1-2 Fast Split Operation

World Headquarters: ACCUSPLIT, Inc., 2290A Ringwood Ave., San Jose, CA 95131 USA

©1997-2002 AST

Made in PRC

REGISTER NOW! Please return your AA625XWIZ Registration to the Repair Center address in the warranty, & we will let you know about future products.

E-mail _____
 User _____

SPECIFICATIONS

Batteries: Batteries should last for 3 years. If display becomes dim, open back and replace with Duracell® D357, Eveready 357, or Ray-O-Vac RW42.
 Operating Temperature: 14°F to 138°F (-10°C to 59°C).
 Quartz Crystal Accuracy: 0.04sec/hr (accuracy may vary with shock, temperature, or aging of crystal).

ACCUSPLIT, Inc., 3090 Independence Drive, Suite 148
 Livermore, CA 94551 USA
 800-935-1996 • 925-290-1900 • FAX 925-290-1930
www.ACCUSPLIT.com • support@ACCUSPLIT.com

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check
<http://support.ACCUSPLIT.com>