


## IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
  2. Keep these Instructions.
  3. Heed all Warnings.
  4. Follow all instructions.
  5. Do not use this apparatus near water.
  6. Clean only with a dry cloth.
  7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  11. Only use attachments/accessories specified by the manufacturer.
  12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
  14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## WARNINGS AND PRECAUTIONS


- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** Danger d'explosion si les piles sont remplacées de façon incorrecte. Remplacer les piles seulement par le même type de pile ou l'équivalent.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

Main plug is used as disconnect device and it should remain readily operable during intended use.


Do not mix old and new batteries.  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.  
No mezcle baterias viejas y nuevas.  
No mezcle baterias alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN


**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

## FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


## Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.  
*L'appareil ne doit pas être exposé aux éclaboussures ou aux écoulements et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.*
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.  
*La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.*
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
*Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*
- Caution marking is located at the rear of the apparatus.  
*Les marquages sont inscrits de derrière de l'appareil.*
- Caution marking is located at the rear of the apparatus.  
*Les marquages sont inscrits de derrière de l'appareil.*
- The marking information is located at the bottom of apparatus.  
*Les précautions d'emploi sont inscrites en bas de l'appareil.*
- The marking information is located at the bottom of apparatus.  
*Les précautions d'emploi sont inscrites en bas de l'appareil.*

## SETUP


### Power

Plug the attached AC cord into a standard AC power outlet to power the clock radio.

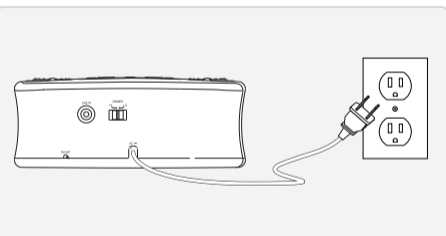

### Battery Backup

Requires one 9V battery (not included)

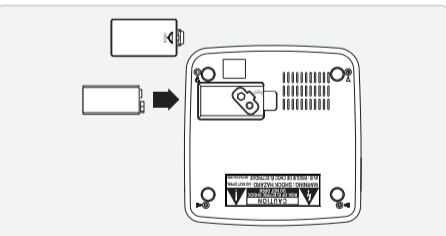

## INTRODUCTION

**DISPLAY**

**PM INDICATOR**  
Illuminates when the time is set in the PM.

**AL INDICATOR**  
Illuminates when the alarm is set and active.

**BUZZER/AUTO/OFF/ON**  
Adjust to set the alarm to BUZZER or AUTO (radio or iPod), or to turn the clock radio OFF or ON.

**CLOCK SET**  
Press and hold to adjust the time.

**VOLUME**  
Turn to adjust the volume.

**SNOOZE**  
Press, after the alarm sounds, to delay the alarm for an additional 9 minutes.

**LINE INPUT (3.5mm)**

**FM WIRE ANTENNA**

**DOCK FOR IPOD**

**HOUR/MIN**  
Press to adjust the hour and minute when setting the clock, alarm, or sleep timer.

**AL SET**  
Press and hold to set the alarm.

**FM/AM/iPod**  
Adjust to set the clock radio to FM, AM, or iPod mode.

**SLEEP**  
Press and hold to set the sleep timer.

**TUNING**  
Turn to adjust the AM or FM radio station.

**PLAY/PAUSE**  
Press to play or pause a docked iPod.

**SKIP/SEARCH**  
Press to skip between tracks on a docked iPod. Press and hold to search through an individual track on a docked iPod.

**DIMMER**  
Use to adjust the brightness of the display.

## CLOCK

### Setting the Clock

- 1 Press and hold the **CLOCK SET** button.
- 2 While holding the **CLOCK SET** buttons, press the **HOURL** and **MIN** buttons to adjust the hour and minute.
- 3 Release the **CLOCK SET** button to finish setting the clock.

### Setting the Alarm

- 1 Press and hold the **ALARM SET** button.
- 2 While holding the **ALARM SET** buttons, press the **HOURL** and **MIN** buttons to adjust the hour and minute.
- 3 Release the **ALARM SET** button to finish setting the alarm time.
- 4 Adjust the **VOLUME** to the desired level.
- 5 Adjust the **BUZZER/AUTO/OFF/ON** to BUZZER to wake to the buzzer, or to AUTO to wake to the radio or iPod.
- 6 If waking to the radio or iPod, adjust the **FM/AM/iPod** switch to the desired setting.

### Setting the Sleep Timer

- 1 Adjust the **BUZZER/AUTO/OFF/ON** switch to AUTO.
- 2 While listening to the radio or a docked iPod press and hold the **SLEEP** button.
- 3 While holding the **SLEEP** button, press the **HOURL** and **MIN** buttons to adjust the hour and minute to the desired time.
- 4 Once the desired time is set, release the **SLEEP** button to finish setting the sleep timer.
- 5 After the set time has expired the clock radio will automatically power off.

## iPod

### Docking an iPod

- 1 Locate the numbered bracket that fits the iPod model that will be docked.  
*Each included bracket has a number on it, indicating which iPod model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.*
- 2 Snap the bracket into place over the iPod connector in the dock for iPod.
- 3 Connect the iPod to the connector inside the Dock for iPod.  
*When the clock radio is plugged in, using AC power, the docked iPod will charge.*

### Playing an iPod

- 1 Follow the instructions for DOCKING AN IPOD.
- 2 Adjust the **BUZZER/AUTO/OFF/ON** switch to AUTO or ON.
- 3 Adjust the **FM/AM/iPod** switch to iPod.
- 4 Press the **PLAY/PAUSE** button to begin playing the docked iPod.  
*When the LINE INPUT is connected, AM and FM radio or a docked iPod will not play through the clock radio.*

## Radio and Line Input

### Playing the AM or FM Radio

- 1 Adjust the **BUZZER/AUTO/OFF/ON** switch to AUTO or ON.
- 2 Adjust the **FM/AM/iPod** switch to FM or AM.
- 3 Turn the **TUNING** dial to adjust the AM or FM radio station.  
*When the LINE INPUT is connected, AM and FM radio or a docked iPod will not play through the clock radio.*

### Using the Line Input

- Requires a 3.5mm line input cable (not included)
- 1 Connect an MP3 player to the **LINE INPUT** using a 3.5mm line input cable.
  - 2 Adjust the **BUZZER/AUTO/OFF/ON** switch to AUTO or ON.
  - 3 Use the native controls on the connected MP3 player to control audio played through the clock radio.  
*When the LINE INPUT is connected, AM and FM radio or a docked iPod will not play through the clock radio.*

## LIMITED 90 DAY WARRANTY

The Manufacturer warrants this product to the original purchaser to be free from defects in material and workmanship, under normal conditions, for a period of 90 days from date of original purchase.

The Manufacturer agrees, at its option during the warranty period, to repair any defect in material or workmanship or to furnish an equal product in exchange without charge. Such repair or replacement is subject to verification of the defect or malfunction and proof of purchase as confirmed by showing a copy of the original dated sales receipt.

To obtain service, return the unit insured and freight PREPAID to:

**GPX, a brand of DPI, Inc. Consumer Service**  
2116 CARR STREET, ST. LOUIS, MO 63106

- Pack the unit in a well-padded, sturdy carton.
- Enclose a copy of your sales receipt to verify the date of purchase.
- Include your name, address and phone number.

The Manufacturer will elect to repair or replace properly warranted product free of charge.

- **NOTE:** This warranty does not cover any product which has been subject to damage due to an act of God, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to external media such as DVD, CD, LP, tape and/or memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall the Manufacturer be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.
- iPods are not covered under this warranty.
- This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than the Manufacturer.
- This warranty does not cover re-manufactured units, product sold AS IS or closeout product.
- This warranty is valid only in the United States and grants specific legal rights. You may also have other rights which vary from state to state.
- **NOTE:** For products that contain internal memory for storage of music, data, etc., the amount of memory your operating system reports may vary from the stated memory of this device.
- **IMPORTANT NOTICE: DO NOT RETURN THIS UNIT TO THE RETAIL STORE FOR SERVICE. INSTEAD, FOLLOW THE ABOVE WARRANTY SERVICE INSTRUCTIONS.**

2116 CARR STREET • ST. LOUIS, MO 63106 • TEL: 314-621-2881 • FAX: 314-588-1805

### Garantía Limitada de 1 año

The Manufacturer garantiza este producto al comprador inicial contra todo defecto de material y de fabricación, bajo condiciones normales, por un periodo de 90 días a partir de la fecha de compra inicial. Un año en partes comenzando del día de compra. The Manufacturer le proporcionará partes sólo a los productos reparados en el Departamento de Servicios de GPX en St. Louis, MO y costos de envío tienen que ser pagados por el cliente en anticipo después de 90 días.

The Manufacturer acepta, a su discreción durante el periodo de vigencia de esta garantía, reparar todo defecto de material o de fabricación o reemplazar el producto defectuoso por el mismo producto sin costo adicional. Esta reparación o reemplazo está sujeta a la verificación del defecto o del mal funcionamiento del aparato y prueba mostrando el número de modelo de GPX en el recibo original de compras con la fecha.

Para obtener este servicio, envíe su unidad asegurada y con el transporte PAGADO POR ADELANTADO a:

**GPX Consumer Service**  
2116 CARR STREET, ST. LOUIS, MO 63106

- Embale la unidad en una caja de cartón resistente, con relleno protector.
- Adjunte una copia de su recibo de venta para verificar la fecha de compra del producto.
- Incluya su nombre, dirección y número de teléfono.

The Manufacturer decidirá reparar o reemplazar el producto garantizado sin costo adicional.

- **NOTA:** Esta garantía no cubre ningún producto dañado por causas de fuerza mayor, mala utilización, negligencia, accidente, abuso, uso comercial o modificación de o a cualquier parte del producto, incluyendo la antena. Esta garantía no cubre tampoco los daños causados a medios externos como DVD, discos compactos, discos de larga duración, cintas y/o aparatos de memoria ni tampoco el costo de envío del producto para su reparación. The Manufacturer no es responsable, bajo ninguna circunstancia, de pérdidas (directas, indirectas, secundarias, previstas, imprevistas, especiales) o de daños que resulten de o por el uso de este producto.
- Esta garantía no cubre los daños que resulten de la utilización o del mantenimiento incorrecto, de la conexión a una fuente de voltaje inapropiada o de un intento de reparación realizado por personal no autorizado por the Manufacturer, St. Louis, MO.
- Esta garantía no cubre las unidades fabricadas nuevamente, los productos vendidos TAL CUAL o productos de liquidación.
- Esta garantía es válida únicamente en Estados Unidos y confiere derechos legales específicos. Usted puede tener otros derechos que varían de Estado a Estado.
- **NOTA:** Para los productos que contienen memoria interna para almacenar música, información, etc., la cantidad de memoria que su sistema operativo reporta puede variar según la memoria que éste aparato indica.
- **IMPORTANTE: NO ENVÍE ESTE PRODUCTO AL NEGOCIO EN QUE LO COMPRÓ PARA REPARACIÓN. CONSULTE ESTA GARANTÍA PARA OBTENER INFORMACIONES AL RESPECTO.**

### Garantie Limitée de 1 année

The Manufacturer garantit ce produit à l'acheteur initial contre tout défaut de matériel et de fabrication, en conditions normales, pour une période de 90 jours à compter de la date d'achat initial du produit. Un an sur des parties de jour d'achat. The Manufacturer fournira des pièces seulement pour @ le centre commercial service par produits de GPX à St. Louis, MOIS. Le travail et les honoraires de S&H doivent être payés par le client après 90-jours, à l'avance.

The Manufacturer accepte à son choix, pendant la durée de cette garantie, de réparer tout défaut de matériel et de fabrication ou de remplacer le produit défectueux par le même produit sans frais. Cette réparation ou ce remplacement sera effectué moyennant la vérification du défaut ou du mauvais fonctionnement de l'appareil et la présentation d'une preuve d'achat dans la forme d'un reçu de vente original daté en montrant le numéro de type de GPX.

Pour obtenir ce service, envoyez le produit assuré, avec fret PAYÉ D'AVANCE à:

**GPX Consumer Service**  
2116 CARR STREET, ST. LOUIS, MO 63106

- Emballez votre produit dans une boîte de carton remboursée.
- Joignez une copie de votre reçu de ventes pour vérification de la date d'achat du produit.
- Indiquez votre nom, adresse et numéro de téléphone.

The Manufacturer choisira de réparer ou de remplacer tout produit garanti, sans frais.

- **REMARQUE:** Cette garantie ne couvre pas les produits endommagés par cause de force majeure, mauvaise utilisation, négligence, accident, mauvais traitement, utilisation commerciale ou modification de ou à quelque part que ce soit de ces produits, y compris l'antenne. Cette garantie ne couvre pas non plus les dommages causés aux médias extérieurs tels que des DVD, disques compacts, albums, cassettes et/ou appareils de mémoire ni le coût d'envoi du produit pour sa réparation. En aucun cas, the Manufacturer ne sera pas tenu responsable des pertes (directes, indirectes, secondaires, prévues, imprévues, spéciales) ou des dommages qui découlent de ou en raison de l'utilisation de ce produit.
- Sont exclus de cette garantie les défauts pouvant survenir par la suite de l'utilisation et de l'entretien anormaux, du raccordement à une source de tension inadéquate ou des réparations effectuées par du personnel non autorisé par the Manufacturer, St. Louis, MO.
- Cette garantie ne couvre pas les produits fabriqués à nouveau ou les produits vendus TEL QUELS ou produits liquidés.
- Cette garantie n'est valable qu'aux États-Unis et vous confère des droits légaux spécifiques. Vous pouvez avoir d'autres droits en vertu des lois étatiques.
- **REMARQUE:** Pour les produits qui contiennent mémoire interne pour stocker de la musique, information, etc., la quantité de mémoire que votre système d'exploitation rapporte peut varier selon la mémoire que cet appareil indique.
- **IMPORTANT: N'ENVOYEZ PAS CE PRODUIT AU DÉTAILLANT POUR RÉPARATION. LISEZ CETTE GARANTIE POUR OBTENIR DES INFORMATIONS SUR LES SERVICES FOURNIS.**

## COMPANY INFORMATION

### Green Initiative

Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marks the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI and its four brands, iLive, WeatherX, Capri, and GPX, are building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

### International Support

To download this User's Guide in English, Spanish, or French, visit the support section at [www.gpx.com](http://www.gpx.com).

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en [www.gpx.com](http://www.gpx.com).

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez [www.gpx.com](http://www.gpx.com).

### Contact Information

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: [prodinfo@gpx.com](mailto:prodinfo@gpx.com)

Parts Email: [partsinfo@dpi-global.com](mailto:partsinfo@dpi-global.com)

Website: [www.gpx.com](http://www.gpx.com)