

UH-040XR

Operating Guide



Uniden

WARNING!

- Do not operate the transmitter of any radio equipment unless all the Radio Frequency (RF) connectors are secured and any open connectors are properly terminated.
- Do not operate the transmitter of any radio equipment near electrical blasting caps or in an explosive atmosphere.
- Do not let children operate any transmitter-equipped radio equipment unless supervised.
- Have your radio equipment serviced by a qualified Uniden technician.
- Do not operate the transmitter of any radio equipment with the antenna touching or close to the eyes, face, or exposed body parts.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CONTENTS

Introduction

| | |
|---|---|
| Features | 1 |
| Technical Support & Service | 2 |
| Included in your UH-040XR Package | 3 |

Getting Started

| | |
|--------------------------------|---|
| Battery Installation | 4 |
| Low Battery Alert | 5 |
| Belt Clip | 5 |

Operation

| | |
|--|----|
| Power on/off | 6 |
| Volume | 6 |
| Selecting Channel | 7 |
| To Transmit and Receive | 7 |
| To Operate in Duplex Mode | 8 |
| Scanning | 8 |
| Open Scan | 8 |
| Group Scan | 9 |
| Programming Scan Channels | 10 |
| Drop-Out Delay | 11 |
| Keypad Confirmation Tone/Keypad Tone | 11 |
| Power Save | 11 |
| Backlight | 12 |
| Keypad Lock | 12 |
| Monitor | 12 |
| Battery Level Display | 13 |
| Charging Batteries° | 14 |

| | |
|---|-----------|
| UHF Channels and Frequencies | 15 |
|---|-----------|

| | |
|---------------------------------------|-----------|
| Optional Accessories | 16 |
|---------------------------------------|-----------|

| | |
|---|-----------|
| Technical Specifications | 16 |
|---|-----------|

| | |
|---------------------------|-----------|
| Warranty | 18 |
|---------------------------|-----------|

| | |
|---|-----------|
| Controls & Functions | 19 |
|---|-----------|

INTRODUCTION

The **UH-040XR** is a portable two-way UHF-CB radio. It is compact, rugged and fits easily in your hand. This hand held UHF radio will give you consistent, outstanding performance in virtually all conditions and situations. To ensure that you get the most from the **UH-040XR**'s features, please read this operating guide carefully before using the unit.

FEATURES

- 40 Channels
- 500mW Output Power
- Up to 3 km range*
- LCD Display
- Group Scan
- Open Scan
- Duplex Capability
- Monitor
- LCD Back Light (Auto On for 5 Sec)
- Auto Power Save
- Battery Level Indicator
- Built in Keypad Lock
- Key Lock On/Off
- Key Touch Tone On/Off
- Auto Squelch Control

** Range varies depending on the environment. 3km range is noted in a flat open environment.*

TECHNICAL SUPPORT AND SERVICE

Should you find it desirable or necessary to service your **UH-040XR**, we suggest you contact the Uniden dealer where you purchase your radio. Your dealer will be able to assist you with the complete service information.

If you require service that is within the terms of your warranty, you should present a copy of your receipt to your dealer to authenticate your claim.

If you find it inconvenient to obtain service assistance from a dealer, please pack your radio in a suitable packaging that will provide adequate protection to your radio. Enclose a note describing the problem, a copy of your receipt, and send it prepaid to:

AUSTRALIA:

Uniden Australia Pty Ltd
Customer Service Division
345 Princes Highway
Rockdale NSW 2216
Ph. (02) 9599-3355
Fax. (02) 9599-3278
Toll Free 1300 366 895

NEW ZEALAND:

Uniden New Zealand Ltd
Customer Service Division
150 Harris Road
East Tamaki, Auckland
Ph. (9) 273 8383
Fax. (9) 274 4253
Toll Free 0800 4 UNIDEN
4 864336

Caution: *Changes or modifications to this product not expressly approved by Uniden; or operation of this product in any way other than as detailed by this Operating Guide, can void your warranty and authority to operate this product.*

INCLUDED IN YOUR UH-040XR PACKAGE



UH-040XR




Wrist Strap



Belt Clip



Operating Guide

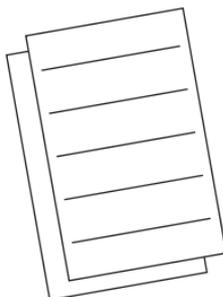

Product Registration Card
and other printed materials

Note: If any of these items are missing from the box, contact your Uniden Dealer.

GETTING STARTED

BATTERY INSTALLATION


Your UH040XR radio uses 3 AA ALKALINE batteries for power. Please refer to page 14 should you wish to use rechargeable batteries.

To install the batteries:




Do not mix old and new batteries to avoid damage to the unit.


1. Make sure your radio is off.
2. Release the battery cover clip, then remove the battery cover.

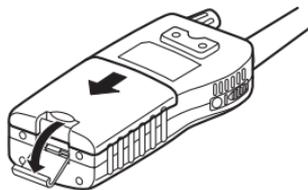

3. Insert 3 AA ALKALINE batteries according to the polarity symbols inside the battery compartment.

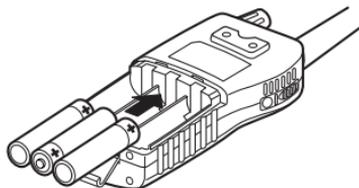

4. Align the battery cover tabs with the UH040XR tab holes then replace the cover.

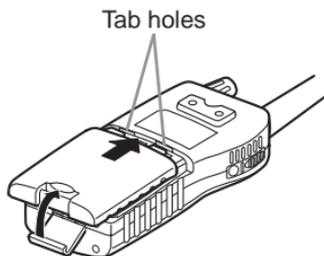

Note: Batteries are not supplied

LOW BATTERY ALERT

The LCD on your radio shows a battery meter in the lower right corner.

■ ■ ■ ■ icon indicates a fully powered unit. As the batteries lose power,

⚡ will flash.



When the batteries in the unit are low, the unit will go into a Battery Low/Sleep Mode. The Scan Mode, Transmit, Transmit Call Tone Mode are disabled. Replace the batteries immediately to continue using the radio.



BELT CLIP

Because you will most likely use your radio when you are out and about, the unit comes equipped with a belt clip to securely fasten the unit to your belt, pocket or purse.

To remove the belt clip, turn the screw counterclockwise.

To attach the belt clip:

1. Insert the belt clip screw into the slot on the belt clip.
2. Align the screw with the hole on the back of the radio and turn it clockwise, using a Phillips screwdriver to secure the belt clip. Do not over-tighten.

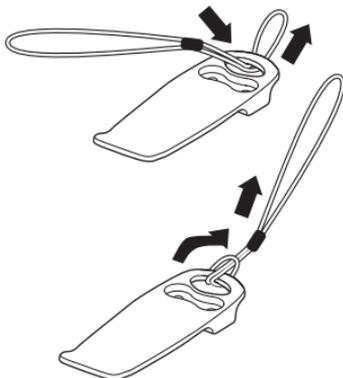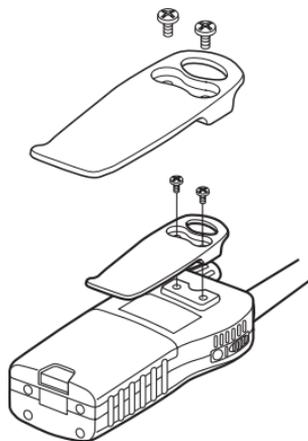

WRIST STRAP

1. Insert short end of the strap through the belt clip hole.
2. Slip the long end through the loop to enclose the clip in the strap and pull tight.

OPERATION

- When you press any key (except PTT), a short tone sounds.
- See the Controls and Indicators page at the back of this operating guide for button and key operations.

POWER ON/OFF

To turn the unit **ON**, rotate the **[ON/OFF VOL]** clockwise until a “click” is heard. A channel number and battery level should appear on the display.




To turn the unit **OFF**, rotate the **[ON/OFF VOL]** knob counter-clockwise until a “click” is heard. The display will disappear.



VOLUME


1. Press the **[MON]** button to hear background noise. The “BUSY” icon (📶) will appear on the display.
2. Turn the **[ON/OFF VOL]** control clockwise to increase the volume, counterclockwise to decrease the volume.

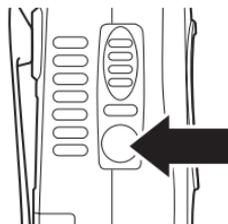

SELECTING CHANNEL

Press [▲] or [▼] to select the desired channel.


Note: If you press and hold the [▲] or [▼], channel numbers will scroll rapidly.

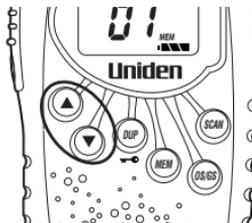

TO TRANSMIT AND RECEIVE

The **UH-040XR** uses the 40 UHF-CB Channels. For your reference a list of the available channels and corresponding frequencies is printed at the end of this manual.

1. The maximum RF transmit power of **UH-040XR** is 500 mWatts.
2. Before you transmit, listen for activity on the selected channel.
3. When the channel is clear, press and hold the [PTT] to transmit.
 appears on the LCD.

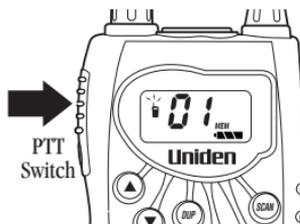

Hold the radio with microphone approximately two inches in front of your mouth with the antenna at approximately 45° angle away from your head. Speak in a clear, normal conversational voice.

4. When you have finished speaking, release the [PTT] and listen for a response. TX indicator then disappears on the LCD.

The display shows  when a transmission is being received by your radio.



TO OPERATE IN DUPLEX MODE

Eg. CH01 is being used in your area for repeater use.

Press **[DUP]** momentarily. The **DUP** icon appears.

Press **[DUP]** again to deactivate the duplex operation. **UH-040XR** will return to simplex operation.




SCANNING

The **UH-040XR** has two types of scanning; Open Scanning (OS) and Group Scanning (GS), giving you flexibility and allowing you to use the radio more effectively.

Scanning allows you to search for active channels programmed in the OS or GS memory.

To initiate scanning,

1. Assuming the unit is on CH01 when switched on.
2. Press **[SCAN]** and scanning starts.
Scan icon flashes during scanning.

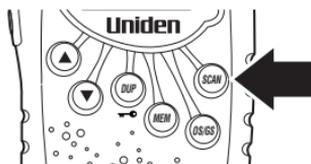

1. **Open Scan (OS) Mode** (the absence of GS icon indicates that the unit is on OS mode)

Allows continuous scanning of channels stored in the Open Scan (OS) memory. If an active channel is found, scanning will stop on that channel.

Note: The factory has preprogrammed all the 40 UHF channels into the Open Scan channel memory. However, you can change or customise the channels by following the steps on programming Scan Channels on pages 10.

Example. CH40 becomes active

If the received signal ceases, the unit will wait for at least 3 seconds for the signal to return, otherwise scanning resumes.



To skip the active channel, press **[MEM]** momentarily. Scanning resumes.


To deactivate SCAN, press the **[SCAN]** or **[PTT]**.

Note:

1. If **SCAN** is deactivated while in an active channel, the UH-040XR will stay on that active channel. If no other channels are active, the UH-040XR will reinstate the starting channel.
2. Pressing **[OS/GS]** will switch to Group Scanning.

2. Group Scan (GS) Mode

To use GS Mode Scanning, press the **[OS/GS]** key. **GS** icon appears on the display.

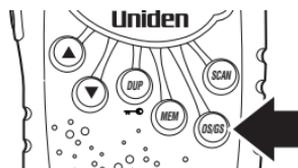

1. When **[SCAN]** SW is pressed during Group Scan Mode, **SCAN** icon will blink and Group Scan Scanning begins.



2. To deactivate GS scan, press **[SCAN]** or **[PTT]**.

Note:

1. If **SCAN** is deactivated while it is tuned to an active channel, the UH-040XR will stay on that active channel. If none of the channels are active, the UH-040XR will reinstate the Priority channel.
2. If GS Scanning is initiated when there are no channels programmed in GS memory, an error tone will be heard and scanning will not start.
3. Pressing **[OS/GS]** will switch to Open Scanning.



PRIORITY CHANNEL

The *Priority Channel* feature allows user to monitor one of 40 channels in the **UH-040XR**, monitoring it every 1.5secs during *Group Scanning*.

Choosing a *Priority Channel*

The starting channel, when *Group Scanning* is initiated, is always the *Priority Channel*. To change the priority channel setting while scanning, (eg. PRI Channel is CH17 (476.825 MHz))

- a. press [▲], to select a higher channel
(scanning pauses)
- or
- b. press [▼], to select a lower channel





Programming Scan Channels

1. Select which Scanning Mode you wish to use on the channel
OS or GS Mode

Note: OS is indicated by the absence of the GS icon

2. Select the channel you want to store by pressing [▲] or [▼]
3. Pressing [MEM] momentarily to store. **MEM** icon appears and beep sounds are heard.
4. To remove the channel from Memory, pressing [MEM] momentarily. To remove **MEM** icon disappears and beep sounds are heard.

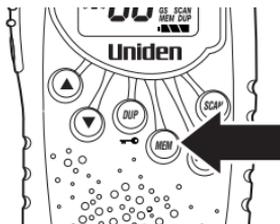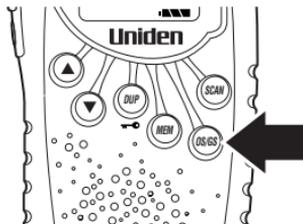


DROP-OUT DELAY

While scanning, the **UH-040XR** stops at a busy channel and receives a transmission. When the received signal is over, the unit will wait for 3 seconds for the return of the signal, otherwise, the radio resumes scanning.

KEYPAD CONFIRMATION TONE

Assures the user that the keypad has been properly pressed by emitting a beep tone. This tone can be switched on or off.

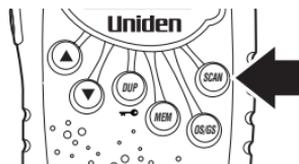

1. Press and hold **[SCAN]** button for 1.5 sec
“**bp on**” will appear for 1.5 sec



2. Press and hold **[SCAN]** button for 1.5 secs
“**bp of**” will appear for 1.5 secs and you will hear a beep sound.



POWER SAVE

Battery Save feature extends the battery life by switching the receiver circuit power ON and OFF. This feature automatically activates during stand by mode (RX mode without signal). It turns OFF automatically when a signal is present, and activates again after channel inactivity.

BACK LIGHTING

The Liquid Crystal Display (LCD) is backlit for easy viewing at night or in low light situations. The back lighting automatically switches ON every time a key (except PTT) is pressed. It turns OFF 5secs after the last key is pressed.

KEYPAD LOCK

To prevent accidental entries, you can lock the keypad.

Press and hold the **[LOCK]** button for 1.5 Secs until it beeps to activate Key Lock.  icon appears.

To unlock the keypad, press and hold the **[LOCK]** button again for 1.5 Secs.  icon disappears.



Note: When the Key Lock is active, a warning beep will be heard if you attempt to press the keys.


MONITOR

This feature enables users to listen in for weak signals on the current channel at the press of a button.



To use monitor,

- For brief listening, press **[MON]**
- For continuous listening. Press and hold **[MON]** for 2 sec. A two tone beep will be heard and the receiver circuit will stay open, letting in both the noise & weak signals.
- Display shows  icons.
- To return to normal receive mode press **[MON]**, **[SCAN]**, **[PTT]** **[▲]** or **[▼]**.

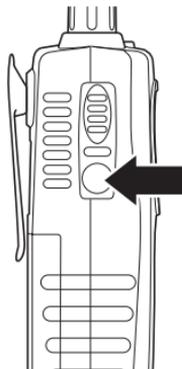

BATTERY LEVEL DISPLAY

The  icon in the bottom right hand corner of the screen indicates the *UH-040XR* current battery voltage level at all times. The battery level is displayed in 3 levels:

LEVEL 3
Battery 100% full



LEVEL 2
Battery approx
70% capacity



LEVEL 1
Battery approx
30% capacity



Almost Empty




Note:
When [PTT] SW is pressed at
Level Empty, battery icon and
channel number will flash



CHARGING BATTERIES

Warning Notice! Use only the AAD042S optional power adaptor if rechargeable batteries will be used in the UH040XR.

- Turn the UH040XR **[ON/OFF VOL]** knob off and connect the AC adaptor plug to the mic jack.
- Battery charging times vary. A longer time is required to charge higher capacity batteries.

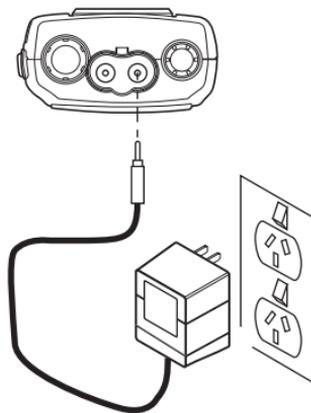

| Rechargeable Batteries | Charging Time |
|------------------------|---------------|
| 600mAH Ni-Cad | 14-16 hrs |
| 1000mAH Ni-Cad | 24-27 hrs |
| 1300mAH Ni-MH | 31-35 hrs |

- Disconnect the AC adaptor from the unit when charging is completed.

UHF CHANNELS & FREQUENCIES

| Ch. | Freq. | Usage | Ch. | Freq. | Usage |
|-----|----------|------------------------------|-----|---------|---------|
| 01 | 476.425 | Simplex/Duplex | 21 | 476.925 | Simplex |
| 02 | 476.450 | Simplex/Duplex | 22 | 476.950 | Simplex |
| 03 | 476.475 | Simplex/Duplex | 23 | 476.975 | Simplex |
| 04 | 476.500 | Simplex/Duplex | 24 | 477.000 | Simplex |
| 05 | *476.525 | Simplex/Duplex | 25 | 477.025 | Simplex |
| 06 | 476.550 | Simplex/Duplex | 26 | 477.050 | Simplex |
| 07 | 476.575 | Simplex/Duplex | 27 | 477.075 | Simplex |
| 08 | 476.600 | Simplex/Duplex | 28 | 477.100 | Simplex |
| 09 | 476.625 | Repeater | 29 | 477.125 | Simplex |
| 10 | 476.650 | Repeater | 30 | 477.150 | Simplex |
| 11 | #476.675 | Back-up Emergency Channel | 31 | 477.175 | Simplex |
| 12 | 476.700 | Repeater | 32 | 477.200 | Simplex |
| 13 | 476.725 | Repeater | 33 | 477.225 | Simplex |
| 14 | 476.750 | Repeater | 34 | 477.250 | Simplex |
| 15 | 476.775 | Repeater | 35 | 477.275 | Simplex |
| 16 | 476.800 | Repeater | 36 | 477.300 | Simplex |
| 17 | 476.825 | Repeater | 37 | 477.325 | Simplex |
| 18 | 476.850 | Repeater | 38 | 477.350 | Simplex |
| 19 | 476.875 | Repeater | 39 | 477.375 | Simplex |
| 20 | 476.900 | Repeater | 40 | 477.400 | Simplex |

* Emergency calling for both simplex and duplex operation
Please do not use this channel in non-emergency cases.

Back-up Emergency Channel

OPTIONAL ACCESSORIES

- Speaker Microphone (SM-050)
- AC Adaptor (AAD-042S)
- Headset Microphone (HM-050)

TECHNICAL SPECIFICATIONS

General

| | |
|--|---|
| Channels | Transmit 40 (with Duplex Channel Support) Receive 40 |
| Oper. Temp. | 0°C - +55°C |
| Antenna | Fixed |
| Microphone | Built-in Electret type |
| Display | Liquid Crystal Display |
| Speaker | 36mm Round, 8Ω |
| Power Source | AA Size Battery x 3pcs |
| Size | (without antenna) 160(H) x 62(W) x 32(D)mm |
| Weight | 150g (with Antenna & without Battery) |
| Operating Time at 5-5-90 Duty Cycle | 25 hrs (Ni-Cd Batteries) 32 hrs (Ni-MH Batteries) 38 hrs (Alkaline Batteries) |

Transmitter

| | |
|---------------------|----------------------|
| Frequency Control | Phase Locked Loop |
| Frequency Range | 476.425 to 477.4 MHz |
| Frequency Stability | ±3 ppm |
| Power Output | 0.5W |
| Spurious Emissions | -40 dBm |
| Current Drain | 320mA |

Receiver

| | |
|------------------------------|---|
| Receiver Type | Dual Conversion Super Heterodyne Phase Locked Loop System for Local Oscillator |
| Frequency Range | 476.425 to 477.4 MHz |
| Sensitivity @ 12 dB SINAD | 0.22 μ V |
| Squelch Sensitivity | 0.19 μ V (Threshold) |
| Audio Frequency Response | 500Hz, 5dB (ref: 1KHz, \pm 3KHz Dev.) 2000Hz, -6dB |
| Selectivity | 50dB |
| Hum & Noise Ratio | 37dB |
| Audio Output Drain | 0.15W (10% THD) |
| Current Drain | 150 mA 50mW output |

Specifications shown are typical and subject to change without notice.

WARRANTY

UNIDEN UH-040XR UHF CB RADIO

Limited One Year Warranty

Note: Please keep your sales docket as it provides evidence of warranty.

Warrantor: Uniden Australia Pty Limited ACN 001 865 498
Uniden New Zealand Limited

Elements of Warranty: Uniden warrants to the original retail owner for the duration of this warranty, its UH-040XR UHF CB Transceiver Radio (hereinafter referred to as the Product) to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

Warranty Duration: This warranty to the original retail owner only, shall terminate and be of no further effect ONE (1) Year after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Installed, programmed or serviced by anyone other than an authorised Uniden Repair Agent, or (G) Where the Serial Number label of the product has been removed or damaged beyond recognition.

Parts Covered: This warranty covers for 1 year, the UHF CB Transceiver Unit only. Accessories: Belt Clip and Wrist Strap are covered for 90 days.

Statement of Remedy: In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts and service. This warranty does not cover provide for the reimbursement or payment of incidental or consequential damages.

Warranty card: If a warranty card has been included with this product, please fill it in and return it to us within 14 days of purchase. Your name and serial number of the product will then be registered in our database and this will help us process your claim with greater speed and efficiency should you require warranty service.

Procedure for obtaining performance or warranty: In the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase, (eg. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA PTY LIMITED

Service Division

345 Princes Highway, Rockdale, NSW 2216

Ph (02) 9599 3577 Fax (02) 9599 3278 Toll Free 1300 366 895

UNIDEN NEW ZEALAND LTD




Service Division


150 Harris Road, East Tamaki, Auckland

Ph (9) 273 8383 Fax (9) 274 4253 Toll Free 0800 4UNIDEN
4864336

Customers in other states should ship or deliver the Product freight pre-paid to the nearest Uniden Authorised Repair Centre. (Contact Uniden for the Warranty Agent nearest you.)

CONTROLS & INDICATORS

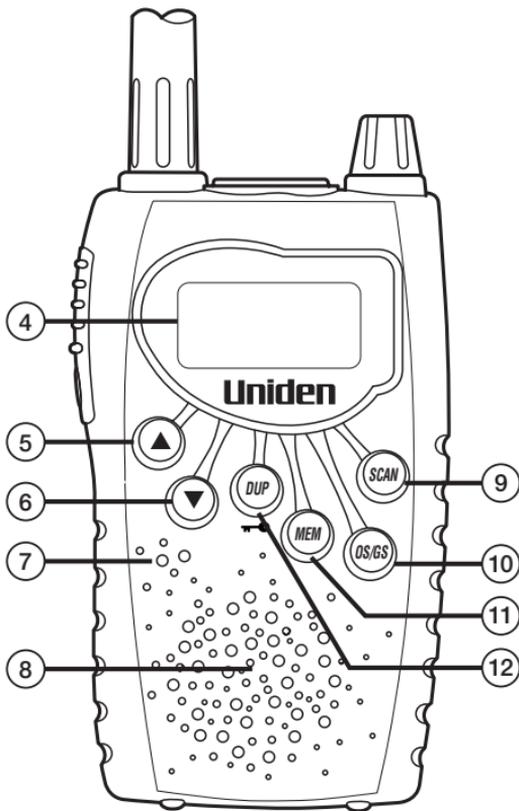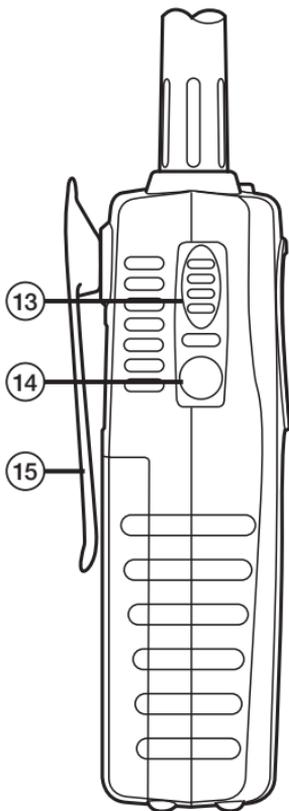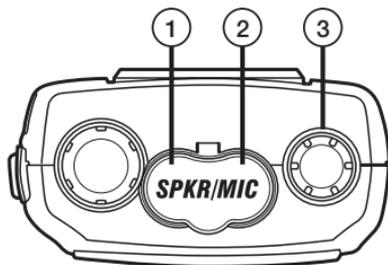

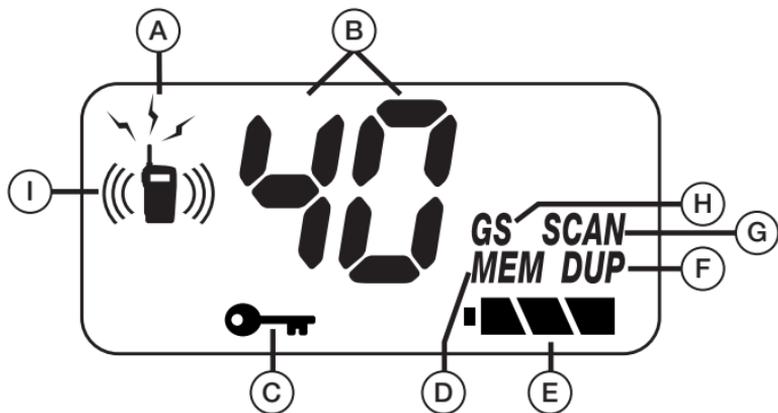

- | | |
|----------------------------|--------------------|
| A. Transmit | E. Duplex Transmit |
| B. Channel Numbers | G. Scanning |
| C. Key Lock | H. Group Scanning |
| D. Memory | I. Receiving |
| E. Battery Level Indicator | |

- | | |
|--------------------|-------------------------------|
| 1. Speaker Jack | 9. Scan Button |
| 2. Microphone Jack | 10. Open/Group Scan Button |
| 3. On/Off Volume | 11. Memory On/Off Button |
| 4. LCD Display | 12. Duplex On/Off Button |
| 5. Up Button | 13. PTT (Push-to-talk) Button |
| 6. Down Button | 14. Monitor Switch |
| 7. Microphone | 15. Belt CLip |
| 8. Speaker | |

Uniden

© 2000 Uniden Australia Pty Limited/Uniden New Zealand Limited
UTZZ01876ZZ