 


User Manual (GB)

# GSM-Com 608

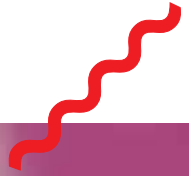

# **BOSCH**

# PRECAUTIONS



## For your safety

Please pay special attention to the following simple guidelines. Breaking the rules may be dangerous or illegal.



## In-car safety

Do not use your mobile phone when driving a vehicle except from in emergency cases. Always park the vehicle and take the ignition before using the phone.



## Interference with other electronics

Mobile phones may interfere with other nearby electronics if these are not sufficiently protected from radio signals. Do not use your mobile phone near telephones, televisions, radios, personal computers, etc.



## Risk of explosion

Don't use your mobile phone at petrol stations, fuel depots, chemical plants, etc. Always switch off your telephone before entering such areas, and observe any restrictions, regulations and rules.



## Aircraft safety

The use of mobile telephones in an aircraft may be dangerous to the operation of the aircraft and is illegal. Switch off your mobile phone before boarding an aircraft. Before using your mobile phone near an aircraft, consult the crew.



## Blasting

Don't use your mobile phone where blasting is in progress. Observe any restrictions, regulations and rules.



## Medical electronics

Mobile telephones may interfere with the functionality of inadequately protected medical devices. Consult your physician or the manufacturer of the medical device if in doubt. Always switch off your mobile phone before visiting a hospital and observe the local regulations and rules.



## Radiation

As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body should be allowed to come too close to the antenna during operation of the equipment.



## Children

A mobile telephone is not a toy. Keep the phone in a safe place out of children's reach. Children may harm themselves or others and they may damage the phone.



## Electrical safety

This mobile telephone is intended for use when supplied with power from a MA 1010, MA 1011, MA 1012, MA 1013, or MA 1014 charger. The use of any other battery charging equipment will invalidate any approval given to this apparatus as well as the manufacturer's warranty.



## Batteries

Batteries may explode if incinerated. To prevent any injury or burn please observe that the battery terminals never get in contact with conducting objects or are short circuited.

# CONTENTS

Precautions .....	Page 2	Message setup .....	Page 31
Keypad functions .....	Page 4	Phone book setup .....	Page 32
Display symbols .....	Page 5	Call timers and charge .....	Page 32
Before you start .....	Page 6	Security .....	Page 33
Making your first call .....	Page 8	Calculator .....	Page 34
Options when in conversation .....	Page 10	Important notice .....	Page 35
Phone book .....	Page 12	Accessories .....	Page 36
Phone book editing .....	Page 14	Index .....	Page 39
Fixed numbers .....	Page 15		
List menu system .....	Page 16		
Outgoing calls .....	Page 17		
Answered calls .....	Page 17		
Missed calls .....	Page 18		
Messages .....	Page 19		
Setup menu system .....	Page 22		
Call divert .....	Page 24		
Call barring .....	Page 26		
Call waiting .....	Page 27		
Tones setup .....	Page 28		
Phone setup .....	Page 29		

# KEYPAD FUNCTIONS

## LED (Status indicator)

Slow green flash: Your phone is in contact with a network.

Fast green flash: Indicates an incoming call.

Slow red flash: Your phone cannot get in contact with a network.

Fast red flash: The battery needs recharging.

## ⊙ On/off key

Press the key for one second to switch your telephone on or off.



## Function keys with text line in display

The function of each key varies according to whether you are in standby, menu or conversation mode. The text line at the bottom of the display will inform you of the actual function of each key at any time.

## ▲ ▼ Arrow keys up/down

For controlling volume level when in conversation, and scrolling through menus, phone book, lists, messages etc.

## Ⓜ Voice mail key

Quick access to your voice mail.

 
## \* Key

Inserts the "+" before international phone numbers.

## # Key

Inserts a pause between the main number and the extension number.





## Introduction

### Making a call

Enter phone number. Press **CALL**

### Answering a call

The telephone rings. Press **ANSWER**

### Ending a call

Press **END**

### Back to standby mode

Press **EXIT**

The telephone automatically returns to standby mode when no key has been pressed for 60 seconds.



### Battery level indicator

See page 6 for more information.



### Signal strength indicator

The stronger the signal (more signal bars displayed), the better the radio connection.

### List menu indicator

### Phone book indicator

## Scroll indicators

Shows you that there are more functions up or down which you can access. Also used for scrolling through the list menus.

Indicates which key to press to increase and decrease the volume level.

## ((( ))) Call indicator

### SMS message indicators

There is a new message for you.

On: There are still unread messages.

Flashing: The SMS memory is full.

### Voice mail indicator

Indicates that there is a voice mail for you.

### Call divert indicator

On: All calls to your mobile telephone are diverted to another telephone number.

Flashing: Check the status of your call diverts.

### Microphone off indicator

### Volume level indicator

Indicates volume level when adjusting.

### Ring volume off indicator

### Calculator

Survey of arithmetic operations in the calculator menu.

 
## Display and keypad backlighting

The backlight switches on automatically when you press a key. In standby mode the light will automatically switch off if no key is pressed for 10 seconds or more.


# BEFORE YOU START

## Insert rechargeable battery

When changing the battery your phone should always be switched off.

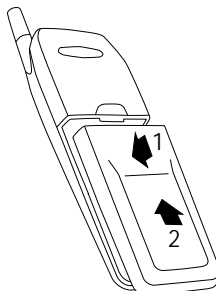

Insert

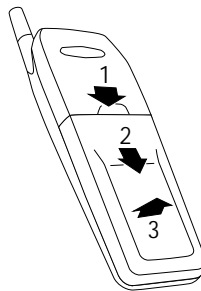 

Remove

## Charge the battery

The battery supplied with this telephone is completely discharged. The telephone will initiate charging as soon as you have inserted the charger plug. The battery takes one and a half to 7 hours to become fully charged depending on the size of the battery.

 
To obtain optimum battery performance in daily use, wait until the battery is completely discharged, before recharging to full capacity.

## Battery level indicator

During charging the battery symbols will flash on and off one after another continuously from the bottom of the display up. When the battery is fully charged all 4 symbols are permanently displayed as long as the phone is switched on.

- 4 batteries: Battery is fully charged.
- 1- 3 batteries: Battery is partly discharged.
- 0 batteries: Battery needs recharging. You have limited conversation time left. At the same time the phone will emit a short warning tone and the LED on top of the phone will emit a fast red flash.

If you insert another battery, this should be fully charged in order to read out the battery capacity accurately.

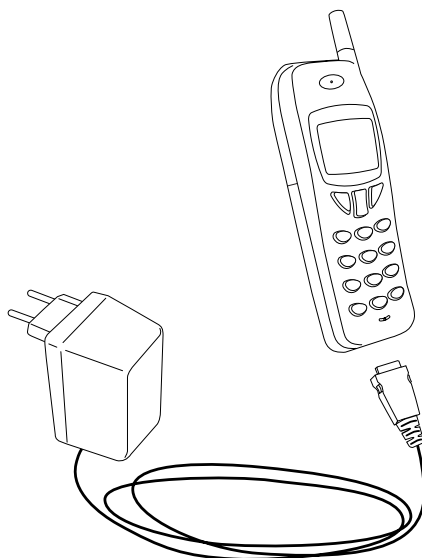

## Insert SIM card

Before you can make a call on your mobile phone you have to insert the SIM card.

Should you have forgotten to insert the SIM card the telephone will ask you to do so.

Before inserting the SIM card into the phone please make sure that any plastic remains from the frame punching have been removed.

1. Remember to switch off your phone before removing the battery.
2. Remove the battery if attached on the phone.
3. Insert the SIM card in the slot and slide it upwards until the locking catch snaps. Please note that the truncated corner should be at the bottom right.
4. Insert the battery.
5. Switch on the telephone.

 
The phone will display a welcome greeting.

6. Enter PIN code, if requested, and confirm by pressing **OK**

The telephone will now start searching for your home network. When connection is successfully established, the name of your network operator will be displayed.

If the telephone cannot get in touch with your home network it will start searching for another co-operating network.

If the phone cannot establish contact with any network at all and you attempt to make a call, the display will show **please redial later**.

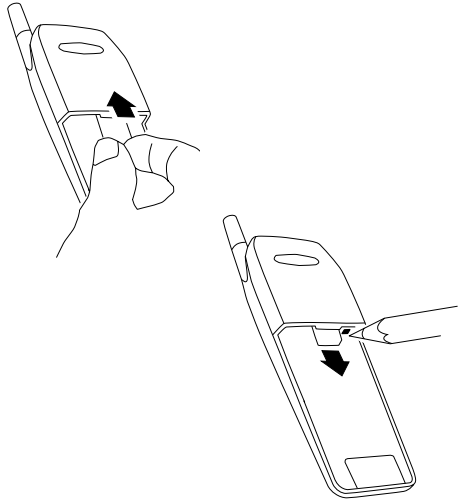

## Remove SIM card

To remove the SIM card press the small red catch to the right of the SIM card with a pencil or other pointed object.

# MAKING YOUR FIRST CALL

 
 
## Selection of language

The display language of your phone is normally the national language of the country in which you purchased your SIM card. If this is not the case the display language will be English. You have the option of choosing between different languages.

1. Press **MENU**
2. Press 31
3. Select language using ▼
4. Confirm by pressing **OK**
5. Press **EXIT**

## Making your first call

1. Enter the phone number you want to call.
2. Press **CALL** to make the call.
3. Press **END** to end the call.

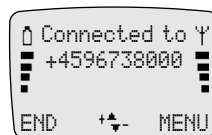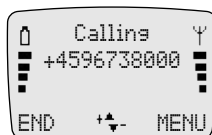

If you call a phone number which is diverted to another phone number, the display will show the phone number to which you are connected and not the one entered by you.

## International calls

When making an international call, enter "+" by pressing the \* -key for one second and then enter the relevant national code number before the telephone number (e.g. +45 for Denmark).

## Phone numbers with extension number

Extension numbers can be dialled by entering a pause between the main number and the extension number. To enter a pause, press the # -key for one second until the pause code P appears on the display.



 
## Emergency calls

In most cases emergency calls can be made with or without a SIM card. To make an emergency call without a SIM card just enter the worldwide mobile phone emergency number 112, press **SOS** and confirm by pressing **CALL**.

## Answering a call

1. Press **ANSWER** when the phone rings.
2. Press **END** to end the call.

Use the arrow keys **▲** and **▼** to increase and decrease the speaker volume.

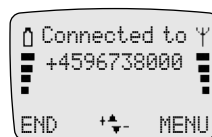

## Muting the microphone

While having a call, you may wish to have a private conversation with someone else. You will hear everything your caller says but you cannot be heard by the caller.

### To switch off the microphone:

1. Press **MENU**
2. Select **Microphone off**

### To return to your telephone conversation:

1. Press **MENU**
2. Select **Microphone on**

# OPTIONS WHEN IN CONVERSATION

Your telephone supports the following network options: Having more than one conversation at a time, placing calls on hold, switching between calls, joining calls and transferring a conversation to another phone number. However, some services may not be available on all networks.

## How to proceed

1. Press **MENU** when in conversation.

2. Select using ▼ either

Microphone off  
Hold call  
Continue call  
Switch calls  
Drop active  
Join calls  
Private  
Drop held  
Transfer call  
Phone book  
Send message

3. Confirm by pressing **SELECT**

Note: The status of the call determines which menu items are visible and available for you to select.

### Muting the microphone

If during a telephone conversation you want to have a private conversation with someone else present you can switch off the microphone by selecting **Microphone off**.

### Putting a call on hold

You can make a second call without having to end a call that is currently active. Key in the second phone number and press **CALL**.

The first call will automatically be put on hold. Please be aware that you can only have one call on hold at a time. You can also put calls on hold manually by selecting **Hold call**.

### Continuing a call

When you want to retrieve the call put on hold, just select **Continue call**.

### Switching between calls

If you select **Switch calls**, the active call will be put on hold and the call on hold will now be active. In this way you can switch between your conversations.

### Ending an active call while another is on hold

An active call can be ended by selecting **Drop active**. The held call will remain on hold and you have to retrieve it to continue conversation.

### Joining calls

If you have an active call and a call on hold at the same time, you can select **Join calls** to enable all of you to speak together.

### Having a private call while others are on hold

If you have joined all calls and want to have a private conversation with one of the callers, select **Private**. The other calls will be put on hold.

### Ending a call put on hold

You can end the call put on hold by selecting **Drop held**.

### Transferring a call

If you have an active call and a call on hold you can transfer the call without breaking the connection by selecting **Transfer call** so that the other parties can continue speaking to each other.

### Calling a number in the phone book

During a conversation you can make a new call to a number stored in your phone book by selecting **Phone book**.

### Sending an SMS message

If you want to send a message to a third party select **Send message**.



## How to lock the keypad

To avoid making calls accidentally you can lock the keypad.

1. Press **MENU**
2. Press **#**

If you try to activate one of the keys, the display will tell you that the keypad is locked.

## How to unlock the keypad

The keypad lock is automatically disabled

- during an incoming call until you have finished your conversation
- when the telephone is placed in the hands-free car installation kit










 

 
1. Press **UNLOCK**
2. Press **#**

You can store names and telephone numbers in a phone book. The entries are stored on the SIM card and the number of entries is dependent on the capacity of the SIM card.

Each name may (depending on SIM card) contain up to 20 characters and each telephone number up to 40 digits.

There are several characters available on each key, as shown in the table below. Press once to get the first character, twice to get the second character, and so on. When you need a space between two characters, press **#**

Holding down one of the keys for one second will give you the option of lower case. Just press the key again for one second to return to upper case.

 1 .,:;'"/"!j?i &%£\$¥@§□	 7 P Q R S 7 ß Π Φ Ψ Σ p q r s 7 ß
 2 ABC 2 Æ Å Ä Ç a b c 2 æ å ä ç	 8 T U V 8 Ü Ø t u v 8 ü ø
 3 DEF 3 É Æ d e f 3 é è	 9 W X Y Z 9 Æ w x y z 9
 4 GHI 4 Γ g h i 4 i	 * +
 5 JKL 5 Λ j k l 5	 0 0- / ( ) = < > _
 6 MNO 6 Ø N O Ω m n o 6 ø ñ ö ò	 # Space #

## How to edit a name and a phone number

Press **CLEAR** briefly

- one character will be deleted

Press **CLEAR** for one second

- the entire display will be deleted

## How to store a name and a telephone number

If you enter the phone number with the help of "+" followed by the national code you can use your phone book abroad without having to think about international codes.

1. Enter the phone number.
2. Press ▼
3. Enter name and press **OK**

The telephone will suggest that the name/number should be stored under the first vacant location number.

4. Confirm the location number by pressing **OK**

## How to select your own location number

If you do not want to store the entry under the suggested location number, you can select a number of your own choice. Store frequently used numbers in location numbers 1 to 9 so that you can speed dial them by pressing only one key (see page 13).

1. Store telephone number and name as described previously in steps 1. to 3.
2. Press **CLEAR** and enter a location number of your own choice (up to 3 digits).
3. Confirm by pressing **OK**

If you choose a location number that is occupied, the phone will give you the option of overwriting the existing entry. If you do not want to overwrite the existing entry, press **EXIT** and the location number suggested will be visible again.

If you have a voice mail number stored in your phone book this should be stored under location 1.

## How to find a name and a telephone number

1. Press ▼
2. Enter one or more letters of the name you wish to find.
3. The name and telephone number will be displayed.

Names are normally displayed alphabetically.

If there is more than one name matching the entered letters, use the arrow keys to scroll through to find the required name.

If there is no name to match the entered letters, the display gives you the best match in the phone book.

4. Press **CALL** to make the call.

When making a call the name will be shown on the display. If the entry has no name the telephone number will be displayed.

## Speed dialling

It is possible to make calls to any number stored in the phone book more easily by using the location number (up to 3 digits).

To be able to use the speed dialling function it must be switched on (see page 30).

1. Press the location number for one second.

If the location number consists of more than 1 digit, press the first digit(s) and hold the last digit for one second.

2. The call will automatically be initiated.

## How to edit a name or a telephone number

1. Press **▲** to enter the List menu system.
2. Select **Phone book** and press **SELECT**
3. Select **Edit entry** and press **OK**
4. Enter one or more letters of the entry you wish to edit or select it by using **▼**
5. Press **EDIT**
6. Change the number using **CLEAR**
7. Enter the correct phone number.
8. Confirm the change by pressing **OK**
9. Change name and location number in the same way, if necessary.

## How to see the status of your phone book

The telephone can display the total number of locations on your SIM card and inform you how many of these are free.

1. Press **▲** to enter the List menu system.
2. Select **Phone book** and press **SELECT**
3. Select **Status** and press **OK**

## How to delete a name and a telephone number

1. Press **▲** to enter the List menu system.
2. Select **Phone book** and press **SELECT**
3. Select **Delete entry** and press **OK**
4. Enter one or more letters of the entry you wish to delete or select it by using **▼**
5. Press **DELETE**
6. Reconfirm by pressing **OK**

# FIXED NUMBERS / PREFIX TELEPHONE NUMBERS

## Fixed numbers

Your telephone offers you the possibility of making an alternative phone book if this feature is available on your SIM card. With the help of this alternative phone book you can restrict the use of your phone only to numbers stored in this special phone book. This telephone book operates in exactly the same way as your ordinary phone book.

However, in order to be able to make such a phone book you need to have a PUK2 code from your network operator and to use a PIN2 code of your own choice.

See on page 32 under Phone book setup how to make use of fixed numbers.

## Own numbers

Some networks offer the possibility of having more than one phone number on the same SIM card. For instance one for normal conversations, one for fax and one for data transmission.

This sub menu operates in the same way as the ordinary phone book menu giving you the possibilities of finding, adding, editing and deleting the entries.

## Prefix telephone numbers

In your phone book you can store prefix phone numbers and add additional digits to these. A useful feature if for instance you often call a company with a switchboard with direct dialling facility.

### How to enter a prefix telephone number

1. Enter the prefix digits of the telephone number.
2. Hold down the **#**-key for approx. 2 seconds, and you will see a **W** on the display.
3. Repeat, holding down the **#**-key for each character you wish to add to the prefix number.
4. Press **▼**
5. Enter name and location number and press **OK**

### How to call a prefix telephone number

1. Press **▼**
2. Find the number you wish to call in your phone book.
3. Press **CALL**
4. Enter the actual digits to replace the **W**
5. The call will automatically be initiated.

# LIST MENU SYSTEM

Information about outgoing, answered and missed calls as well as SMS messages are automatically stored in lists:

## Outgoing calls

- View names/phone numbers of your latest outgoing calls

## Answered calls

- View names/phone numbers of your latest answered calls

## Missed calls

- View names/phone numbers of your latest calls received but not answered

## Phone book

- Find, add, edit or delete entries
- Phone book status

## Fixed number phone book

- Find, add, edit or delete entries
- Phone book status

## Own numbers

- Find, add, edit or delete entries

## Messages

- Inbox for received Point-to-point messages
- Outbox for sent Point-to-point messages
- Send messages
- Read broadcast messages

## How to access the List menu system

1. Press ▲
2. Select the menu you want to access by using ▲ or ▼
3. Confirm by pressing **SELECT/OK**
4. Select the sub menu you want to access using ▼ and press **SELECT/OK**

## Back to standby mode

While you are in menu mode, pressing **EXIT** briefly will bring you one level up in the system. Holding **EXIT** will always bring you to the standby mode.

The telephone automatically returns to standby mode when no key has been pressed for 60 seconds.



## Outgoing calls

Your phone has memory for your last 10 dialled telephone numbers.

### How to see the list of last outgoing calls

1. Press **▲** to enter the List menu system.
2. Select **Outgoing calls** and press **OK**.
3. Scroll through the telephone numbers.
4. When the telephone number you wish to redial is displayed, press **SELECT**.
5. Press **CALL** to initiate the call.

### Shortcut to your last outgoing call

However, to use this facility you must enter the Phone setup menu and select **Speed dialling on** (see page 30).

1. Just press 0 for one second and the call is initiated automatically.

## Who is calling?

Calling Line Identification (CLI) is a network feature whereby the phone numbers of callers to your phone are shown on your phone's display. If your caller is one of the entries that you have stored in your phone book, then his name will appear on your display.

To enable the telephone to identify the calls it is a condition that the network supports Calling Line Identification.

## Answered calls

Your phone remembers the last 10 calls your phone has received.


### How to see the list of answered calls

1. Press **▲** to enter the List menu system.
2. Select **Answered calls** and press **OK**.
3. Scroll through the telephone numbers.
4. When the telephone number you wish to redial is displayed, press **SELECT**.
5. Press **CALL** to initiate the call.

# MISSED CALLS

## Missed calls

Your phone remembers the last 10 incoming calls which you did not answer.


The display will tell you how many missed calls your phone has received. If, for instance, there are 15 missed calls the standby display will show 15.

As the telephone registers only identified calls in the list, the number of missed calls shown on the display and the number of phone numbers actually listed may be different.

## Immediate access to the list of missed calls

1. Press **▲**
2. Scroll through the telephone numbers using **▼** or **▲**
3. When the telephone number you wish to dial is displayed, press **SELECT**
4. Press **CALL** to initiate the call.

## How to see the list of missed calls at a later moment

As soon as you have used the list, either to make a call or to view numbers, the  symbol will disappear from the display. However, the list will always be available through the List menu system.

1. Press **▲** to enter the List menu system.
2. Select **Missed calls** and press **OK**

The telephone number will be deleted from the list as soon as you have called it, but you can always find it again in the list of last outgoing calls.

## How to copy a phone number from one of the lists into your phone book

1. Press **▲** to enter the List menu system.
2. Select the actual menu and the phone number you wish to copy into your phone book.
3. Confirm by pressing **SELECT**
4. Press **▼** to access your phone book.
5. Give the number a name and a location number and press **OK**

## How to delete call information


You can delete all entries stored in the Outgoing, Answered and Missed calls lists. Select the sub menu **Delete call information** in the Phone book setup menu and select the list which you want to delete.

## Short Message Services (SMS)

Your phone can receive and send short text messages via the network. On some networks you have to subscribe to this facility.

There are two types of messages: point-to-point messages which you can both receive and send, and cell broadcast messages which you can only receive.

### Point-to-point messages

A new incoming message will be indicated by the SMS indicator  on the standby display, as well as by a message tone (if enabled – see page 26). The display will also inform you how many new messages there are for you.

### How to read a new message

1. Press **▲** to access the messages.

The display will show date and time of receipt of each individual message.

2. Select the message you want to read by means of **▼** or **▲** and confirm by pressing **SELECT**

The phone number of the message sender will be displayed in front of the message. You can now scroll through the message by using the arrow keys.


The message is automatically stored in the inbox if you do not delete it.

In addition to reading the message, you can either


- delete it
- send a reply
- forward it to another phone number
- edit it before sending
- extract a phone number, if any, from the message to call or to store in your phone book
- call back to the sender

1. Press **OPTION**
2. Select the option you wish to enter and confirm by pressing **OK**
3. The display will guide you through the next steps.

When a message has been read it will be indicated by a **√** to the left of the date of receipt.

The SMS indicator  remains on the standby display as long as there are unread messages.

### Delete messages

If the SMS indicator  is flashing, it indicates that the message memory is full.

You can delete all messages stored either in the Inbox or the Outbox at the same time.

1. Enter the sub menu **Delete messages**
2. Confirm by pressing **OK**

## How to read a message again

1. Press **▲** to enter the List menu system.
2. Select **Messages** and press **SELECT**
3. Select **Inbox** by pressing **OK**
4. Scroll through the list of messages and confirm your choice by pressing **SELECT**

## How to send a message

Before you can send a message you have to enter your network operator's telephone number for this special service. Contact your network operator to obtain this number. On page 29 you can see how you enter this special phone number and how to select validity period, transmission format etc. once for all. If you do not specify these parameters in the Setup menu system you will be asked for a specification each time you wish to send a message.

1. Press **▲** to enter the List menu system.
2. Select **Messages** and press **SELECT**
3. Select **New message** by pressing **OK**

Start entering your message using the keypad in the same way as you enter a name or a telephone number in the phone book. **▲** moves the cursor to the left, **▼** moves the cursor to the right. Delete unwanted characters by pressing **CLEAR**.

If you want to use the **#**-symbol in your SMS message press the **#**-key briefly twice.

4. End your message by pressing **OK**
5. Select whether you wish to **Send message** at once or whether you wish to **Save message** for sending it later on.
6. Confirm your choice by pressing **SELECT**

Having selected **Send message** the phone will ask for a phone number to send the message to. Either enter a phone number or select one from your phone book using **▼**

The message is automatically stored in Outbox under Messages in the List menu system.

## How to edit an old message

1. Press **▲** to enter the List menu system.
2. Select **Messages** and press **SELECT**
3. Select **Inbox** or **Outbox** by pressing **OK**
4. Select the message you wish to edit and confirm by pressing **SELECT**
5. Press **OPTION**
6. Select **Edit message** and press **OK**

A digit between the scroll indicators on the display indicates the number of the individual messages.

## Cell broadcast messages

To select whether you want the cell broadcast option to be on or off you must enter the Message setup menu and select **Broadcast setup** (see page 31).

These are general messages broadcast to a group of telephones and are available to network subscribers only. Cell broadcast messages are typically local weather and traffic reports, stock market prices, sports results etc. If you have selected **Roaming**, i.e. if you are abroad and connected to a foreign network (see page 26), you may be able to receive cell broadcast messages from other networks, too.

The messages are transmitted in numbered channels and in general each channel will contain information of the same type. Cell broadcast messages may be sent out in different languages. Contact your network operator for further details.

## Cell broadcast channel list

To be able to receive cell broadcast messages you have to set up a list of the channels from which you want to receive information. See page 31 for how to set up this list and to specify what kind of information you wish to receive.

## How to read a cell broadcast message

A cell broadcast message is scrolled twice on the display at the time of reception. If you don't see it at that time, you can read it via the List menu system by pressing **▲**, selecting **Messages** and then **Broadcasts**.

The display will show the Broadcast ID number and you can thus identify the kind of message received. Messages are read in exactly the same way as Point-to-point messages. A read message will be marked by **√**.

In addition to reading the message, you can either

- delete it
- store it on your SIM card
- forward it to another phone number
- extract a phone number, if any, from the message to call or to store in your phone book

1. Press **OPTION**
2. Select the option you wish to enter and confirm by pressing **OK**
3. The display will guide you through the next steps.

A cell broadcast message will be deleted when you switch off your telephone - even if the message has not been read.

The setup menu system offers you the possibility of setting the individual sub menus and options according to your own personal wishes.

## Network services (Menu 1)

- 11 Call divert
- 12 Call barring
- 13 Call waiting
- 14 Closed user group

## Tones setup (Menu 2)

- 21 Ring tone
- 22 Trembler (optional extra)
- 23 Message tone
- 24 Broadcast tone
- 25 Key tone
- 26 Factory settings

## Phone setup (Menu 3)

- 31 Selection of language
- 32 Automatic redial
- 33 Selection of network
- 34 Power saving function
- 35 Car kit options
- 36 Edit welcome greeting
- 37 Speed dialling
- 38 Any key answer
- 39 Factory settings

## Message setup (Menu 4)

- 41 Setup for sending Point-to-point messages
- 42 Setup for receiving Cell broadcast messages
- 43 Delete messages

## Phone book setup (Menu 5)

- 51 Fixed dialling on/off
- 52 Phone book sorting
- 53 Delete all entries stored in the lists (Outgoing, Answered, Missed)

 
## Call timers and charge (Menu 6)

- 61 View duration and cost of last call
- 62 View duration and cost of total calls
- 63 Reset call timers
- 64 Display call timer and cost during conversation
- 65 Call charge

## Security (Menu 7)

- 71 PIN code
- 72 SIM card lock
- 73 Change network password

## Calculator (Menu 8)



## How to access the Setup menu system

1. Press **MENU**
2. Select the menu you want to access using ▼
3. Confirm by pressing **SELECT**
4. Select the sub menu you want to access using ▼
5. Confirm by pressing **SELECT**

## Back to standby mode

While you are in menu mode, holding **EXIT** will always bring you to the standby mode.

The telephone automatically returns to standby mode when no key has been pressed for 60 seconds.

## Menu numbers

On the right hand side in the first line of the display you will always see the number of the menu and sub menu in which you are operating. This is indicated by up to 6 digits.

Example: **62**

6 = Menu 6: Call timers and charge

2 = Sub menu 2: View total calls

A √ before the sub menu/option number indicates the option you have selected.

## Shortcut to the setup menu system

As you get more familiar with the Setup menu system, you will probably find it easier to access some of the menus simply by pressing the menu code number.

For example, to see the duration of your total calls:

1. Press **MENU**
2. Press **62**

# CALL DIVERT

You have the option of diverting all calls or choosing to divert incoming calls only if unanswered. The unanswered calls option diverts calls

- if you are busy
- if you do not reply
- if there is no contact

## Registration

To enable a call divert you must register it first. You will be asked to specify whether you want the call divert function to apply to all services, speech, data services, fax services or message services (SMS).

## Deactivation/activation

If your network does not support Phase 2 features, you will not be able to make use of the deactivate and activate options. In that case you must cancel a call diversion by selecting **Cancel**. Next time you want your incoming calls diverted, select **Register**.

Calls can be diverted to a telephone number stored in your phone book or to any other number. Access your phone book by pressing ▼ or enter a phone number via the keypad.

If you have chosen to have all calls diverted, the call divert indicator ➔ will be visible on the standby display.

If you wish to suspend your calls being diverted for a time, select **Deactivate**. All registrations will remain in the network, so next time you wish to divert your calls to the same number, simply select **Activate**.

## Validity time

If you have selected

**Divert if unanswered**

or

**Divert if no reply**

you can specify that a period of time must elapse before the call is diverted. This period can be from 5 to 30 seconds at intervals of 5 seconds.

It is always possible to see the status of the activated call diversions by selecting **Status**. Registered call diversions can be cancelled individually or can all be cancelled at once by selecting **Cancel all**.





## How to activate call divert for all calls

1. Press **MENU**
2. Select **Network services** by pressing **SELECT**
3. Confirm by pressing **SELECT** once more to indicate that you want access to the call divert menu.
4. Select using ▼

```

Divert all calls
Register
- All services
- Speech
- Data services
- Fax services
- Message services
  - Number
Activate
Deactivate
Status
Cancel

```

```

Status
Cancel all (call diverts)

```

5. Confirm your choice by pressing **OK**

If you want to activate a call divert on the basis of

```

Divert if unanswered
Divert if busy
Divert if no reply
Divert if no contact

```

just follow the procedure described above giving you the same options.

# CALL BARRING

You can set up call barring for different types of outgoing and incoming calls to restrict the use of your phone.

You have to activate the type of call barring you wish to set up. You are asked to specify whether you want the call barring to apply for all services, speech, data services, fax services or message services (SMS).

When setting up or cancelling any call barring, you will be asked to enter your 4-digit password provided by your network operator.

You can always see the status of the actually activated call barring by selecting **Status**.

## Outgoing call barring

Select **All calls** if you want to bar all outgoing calls. Select **International** if you want to bar international calls only. Select **Roaming** if you want outgoing calls to be barred when you are connected to a foreign network – this still leaves you the possibility of making calls to your home country.

Calls to Emergency Services (see page 9) can still be made even if all outgoing calls are barred.

1. Press **MENU**
2. Select **Network services** by pressing **SELECT**
3. Select **Call barring** using **▼** and confirm by pressing **SELECT**
4. Select using **▼**  
**Outgoing calls**  
**All calls**  
**Activate**  
- **All services**  
- **Speech**  
- **Data services**  
- **Fax services**  
- **Message services**  
**Status**  
**Cancel**  
  
**Status**  
**Cancel all** (call barrings)
5. Confirm your choice by pressing **OK**

If you want to activate call barring for **International calls** or **Roaming calls** just follow the procedure described above giving you the same options.

Call barring of incoming calls is activated and cancelled in exactly the same way covering the sub menus

**All calls**  
**Roaming calls**

## Incoming call barring

Select **All calls** if you want to bar all incoming calls. Select **Roaming** if you want incoming calls to be barred only when you are connected to a foreign network.

## Cancelling call barrings

Call barrings can be cancelled individually or by selecting **Cancel all**.

## Call waiting

During a conversation your telephone can notify you that a new call is waiting. This is indicated by a special ringing tone in the earphone. To activate this function just select **Activate** in the Call waiting option.

If you want to answer the new call press **ANSWER**

The active call will be put on hold automatically.

See page 10 for further details on how to handle multi-party calls.

If you do not want to answer the call, press **REJECT** instead. You can have the new call diverted to, for example, your telephone answering service. See page 24 for how to set up a call divert.

If you do not want to be disturbed by new incoming calls you can disable the function by selecting **Cancel** in the Call waiting option.

You can always see whether Call waiting is activated or not by selecting **Status**.

## Supplementary network services

### Closed user group

This is a network feature by which the use of your telephone is restricted to certain phone numbers within a group defined by the network operator and the owner of the SIM card. You may be a member of different groups. Each group has its own ID number. The network defines which group is your default user group. You have the option of calling outside the group – perhaps at a higher charge. Contact your network operator for further information.

### Unstructured supplementary services (USSD)

On some networks you have the possibility of sending unstructured supplementary service strings. An USSD service string should always be terminated by pressing the **#**-key. Contact your network operator for further details.

In order to be able to send USSD service strings you must enter the Phone setup menu and select **Speed dialling off**. Pressing the relevant keys 0 to 9 for one second will lead you to the alpha mode enabling you to enter letters and digits instead of only digits.

## How to adjust tones

1. Press **MENU**
2. Select **Tones setup** using ▼
3. Confirm by pressing **SELECT**
4. Select using ▼ either
  - Ringing tone**
  - Trembler** (Optional extra)
  - Message tone**
  - Broadcast tone**
  - Key tone**
  - Factory settings**
5. Confirm by pressing **SELECT**
6. Select the kind of tone you want using ▼
7. Confirm by pressing **OK**

## Ringing volume level and ringing tones

You can adjust the ringing volume level and the ringing tones according to your surroundings and preferences.

Ringing volume levels are high, medium, low, escalating and off. The LED on top of the phone will emit a fast green flash to indicate an incoming call. If the ringing tone is set to **off** you will see the 📞 symbol on the standby display.

You have the option of selecting between 27 different ringing tone patterns.

The selected ringing tone will sound at the relevant ringing volume level when making your selection.

## Trembler

If you have a trembler battery you can select whether the trembler should be active or not at an incoming call.

## Message tone

Your telephone can alert you to the arrival of a SMS message by means of different alert tones.

## Keypad tone

To help you keep check on your dialling, the phone can be set to give 8 different tone patterns following every key pressed.

## Factory settings

You can always return to the original tones setup of your phone. The phone is set up by the manufacturer as follows:

Ringing volume level:	Loud
Ringing tone:	British
Trembler:	Off
Message tone:	Simple
Broadcast tone:	Discreet 1
Key tone:	3

This menu offers you the possibility of setting some of the telephone's options according to your own personal wishes.

## How to set up options

1. Press **MENU**
2. Select **Phone setup** using ▼
3. Confirm by pressing **SELECT**
4. Select using ▼ either
  - Language
  - Auto redial
  - Network selection
  - Power saving
  - Car kit
  - Greetings
  - Speed dialling
  - Any key answer
  - Factory settings
5. Confirm by pressing **SELECT**
6. Make your selection using ▼
7. Confirm by pressing **OK**

## Language selection

The display language of your phone is normally the national language of the country in which you purchased your SIM card. If this is not the case the display language will be English. You have the option of choosing between different languages. (See page 8 for how to select language).

## Automatic redial

If the phone number you are calling is busy or your call is not answered, you can let your phone make up to 10 automatic redial attempts. A special redialling success tone sounds when the attempt is successful. To cancel the auto redialling attempts just press the left function key.

## Network selection

When you wish to use your phone abroad, you have to select a foreign network. This can be done either manually or by letting your telephone do it for you automatically.

In the automatic mode, your phone will automatically try to reach your home network first, then, alternatively to find another available network stored in a preferred list made by you (see page 30).

In the manual mode, the phone will always start searching for the network with which it was in contact when it was switched off. If the phone cannot locate this network it will present some alternative networks on the display, and you can then select one manually.

You can select any network from the list, but your phone can get in contact only with co-operating networks (Roaming). The telephone can get into contact with other networks but only for emergency calls.

Your dealer or network operator can tell you which networks are co-operating.

## Preferred list

The list of networks on your SIM card defines the order of preference in which your phone will select a network in automatic mode. Network operators offer different services and call charges; therefore it may be beneficial for you to make a preferred list of your own. Enter the individual networks in your own order of preference and store them on your SIM card.

To do this, you must access the Selection of network sub menu, select the Set preferred list option and use ▼ to select the empty location in which you want to store the new network. Pressing **EDIT** will give you a list of available networks. Scroll through the list using ▼. When you see a network you wish to store in your preferred list, just press **OK**. If you select a currently used location and press **EDIT**, the former occupant can be deleted when you enter the new one. Just press **EXIT** to leave the list as it was.

Once a network is stored in the preferred list, you can always see the country and network code of the actual network by pressing **EDIT** in the Set preferred list option.

## Power saving

To save your battery and thus increase both conversation and standby times you can select whether you want the display contents to be visible or not in standby mode.

Select **Display remains on** if you want it to be visible, and **Display switches off** if you want it not to be visible. The display will switch off after 3 minutes in standby mode.

In standby mode the display and keypad backlight will always switch off after 10 seconds if your telephone is set to **Backlight on**. However, you have the option of having the backlight switched off permanently by selecting **Backlight off**.

## Car kit installation

This option is only effective if the phone is connected to a handsfree car kit. See page 36 for more information.

## Welcome greeting

You can change the welcome greeting of your phone according to your own wishes. Delete the old message by holding **CLEAR**, enter the new greeting via the keypad and confirm by pressing **OK**.

## Speed dialling

To speed dial using your location numbers, you have to select **Speed dialling on**. If you do not want to make use of this feature, select **Speed dialling off**.

## Any key answer

You can answer an incoming call by pressing any key you like except for the left function key and the arrow keys if you select **Any key answer on**.

## Factory settings

You can always return to the original setup of your phone. The phone is set up by the manufacturer as follows:

Language:	Automatic
Autoredial:	Off
Network:	Automatic
Power saving:	Display on
	Backlight on
Car kit:	Auto answer off
	Auto power off on
Greeting:	Welcome
Speed dialling:	On
Any key answer:	Off

## Send message setup

Before you can send a message you have to enter your network operator's telephone number for this special service. Contact your network operator to obtain this number.

1. Press **MENU**
2. Select **Message setup** using ▼ and confirm by pressing **SELECT**
3. Select **Send message setup**
4. Select **Service centre**
5. Confirm by pressing **SELECT**
6. Enter the SMS operator telephone number. Remember to add "+" and national code before the number.
7. Press **OK**

The number will automatically be used for sending all future messages.

Having stored a service centre number you have the option of adding a new service centre, deleting a service centre or editing the number of an existing service centre by pressing ▼ and confirm your choice by pressing **OK**.

The option of storing more than one service centre number may not be available with all SIM cards.

If for some reason your message cannot be delivered, it will remain with your SMS operator for a period of time specified by you under Validity period.

Under the option Teleservice you can specify in what format you want your messages to be sent - for instance select **Text message** if you want to send it to another mobile telephone.

If the message has to be sent via several service centres to reach the recipient, some networks offer the feature of sending a reply, if any, back to

you through the same chain of service centres. To keep this possibility open, you must enter the Send message setup option and select **Reply path on**.

## Broadcast setup

To set up the list covering the kind of information you wish to receive, select the option **Broadcast channels**. The display will show you various locations in which you can store the individual channels. Pressing **EDIT** will give you a range of different kinds of information. Use ▼ to scroll through the possibilities and confirm your choice by pressing **SELECT**. The selected kind of information is now stored in the channel list. Proceed in the same way if you want to receive other kinds of information.

Some network operators offer cell broadcast messages in different languages. Select the option **Broadcast language** and confirm your choice by pressing **OK**.

You can select whether you want the cell broadcast option to be on or off by selecting **Broadcast settings** and using ▼ to select whether the function should be on or off.

# PHONE BOOK SETUP / CALL TIMERS AND CHARGE

## Fixed dialling

In order to enable you to make use of fixed dialling numbers stored in an alternative phone book defined by you, select **Fixed dialling on**. To enable the alternative phone book you have to enter your PIN2 code. Having selected **Fixed dialling on** your ordinary phone book will not be visible on the display and can thus not be accessed, but, of course, it will remain on your SIM card and can be accessed again by selecting **Fixed dialling off**.

## Phone book sorting

You have the option of selecting whether you want your phone book sorted by name or by location.

## Delete call information

You can delete all entries stored in the Outgoing, Answered and Missed calls lists. Select the sub menu **Delete call information** and select the list which you want to delete.

## Call timers and charge

Your telephone can display the actual duration and cost of an ongoing conversation if you so wish. It can also show you the duration and cost of the last call and all calls made with your SIM card since the timer was last reset. However, the call charge feature must be supported by your network.

In order to be able to see the cost in the display you have to enter a unit price and the actual currency. You can also enter a maximum call charge limit, so that when this maximum has been reached no more phone calls can be made.

To enter or change call charge and currency you will be requested to enter your PIN2 code.

## How to see timers

1. Press **MENU**
2. Select **Call timers and charge** using **▼**
3. Confirm by pressing **SELECT**
4. Select using **▼** either  
**Last call**  
**Total calls**  
**Reset timers**  
**Display timer** (on display)  
**Call charge**
  - maximum
  - unit price
  - currency
  - remaining
5. Confirm by pressing **OK**



## PIN code

To prevent misuse of your SIM card, e.g. if it is lost or stolen, you can select a PIN code to be entered each time you switch on the phone.

The PIN code is a 4 to 8-digit number of your own choice, which you can change any time you like.

If you enter an invalid PIN code three times, your SIM card will be blocked and to unblock it you have to enter the PIN Unlocking Key (PUK) code supplied by your network operator. This procedure prevents unauthorized person from working out your PIN code by repeatedly entering different combinations of numbers.

The display will inform you how many tries you have left before the SIM card is blocked. If you enter an invalid PUK code 10 times, your SIM card will be permanently blocked and you have to contact your network operator to have it unblocked.

Some SIM cards (not phase 1) use a PIN2 code for accessing special functions. Contact your network operator for further information on PUK2 and PIN2 codes.

## How to enable, disable and change PIN codes

1. Press **MENU**
2. Select **Security** using ▼
3. Confirm by pressing **SELECT**
4. Select using ▼ either
  - PIN code**
    - PIN code on
    - PIN code off
    - PIN code change
      - Change PIN
      - Change PIN2
  - SIM lock**
    - SIM lock on
    - SIM lock off
  - Network password**
5. Confirm your choice by pressing **OK**

## SIM lock

You can link your telephone and your SIM card together. This means that if, for instance, your phone is stolen it cannot be used together with another SIM card. To enable this feature just select **SIM lock on** and enter an 8-digit code of your own choice. *For your own sake remember to write down this code to be able to deactivate the lock at a later time. You have 10 attempts before the phone is blocked.*

## How to change password

If you subscribe to a call barring service your network operator will have supplied you with a 4-digit password. If you want to change this, select **Network password** in the Security menu.

# CALCULATOR

You can use your mobile phone as an ordinary calculator.

## How to use the calculator

1. Press **MENU**
2. Select **Calculator** using **▲**
3. Confirm by pressing **OK**

Your telephone now acts as a normal calculator. The equal-sign (=) is found on the right hand function key.

Hold down the relevant key for one second to get the desired arithmetic operation.

By pressing **▲** you get access to a survey of what arithmetic operation is placed on what key.

Key	Operation
1	Addition (+)
2	Multiplication (*)
3	Square function ( $x^2$ )
4	Subtraction (-)
5	Division (/)
6	Square root ( $\sqrt{\quad}$ )
7	Percentage (%)
8	Fractions (1/x)
9	Exponent (E)
*	M+ or decimal point (press briefly)
0	MC
#	MR or -/+ (neg./pos.) (press briefly)

## Calculation examples

### 5 plus 2

Press 5, hold down 1 for one second, press 2 and press = **(7)**

### 8 divided by 4

Press 8, hold down 5 for one second, press 4 and press = **(2)**

### Square root of 8

Press 8 and hold down 6 for one second **(2.8284271)**

### 15 per cent of 60

Press 6, 0, hold down 2 for one second, press 1, 5, hold down 7 for one second **(9)**

### -5.2 times 10,000

Press 5, \*, 2, #, hold down 2 for one second, press 1, hold down 9 for one second, press 4 and finally = **(-52000)**

As soon as a figure is stored in the memory this will be indicated on the display by an **M**. You can access the memory by pressing **▼** or the **#**-key (MR).

The memory is reset each time you switch off your phone.



## **Batteries**

Never dispose of old batteries in your household refuse. Return them to the place of purchase or take them to a recycling centre so that they may be disposed of in an environmentally friendly manner.

## **Care of your phone**

To clean your phone, wipe over with a soft cloth. Do not use alcohol or other solvents as these will harm your phone.

Do not use your mobile phone in high humidity environments or where the temperature falls below  $-20^{\circ}$  or exceeds  $+55^{\circ}$  C.

## **SIM card limitations**

Network operators offer different kinds of services and different kinds of SIM cards. SIM cards may be either Phase 1 or Phase 2 cards. Please contact your network operator for further details about the type of your SIM card.

Depending on your type of SIM card some features described in this user guide may not be available to you or may not be operated in the way described.

The memory capacity of your SIM card may differ from one type of card to another. This applies to all entries stored in your phone book or in the list of missed calls.

## Hands-free car installation

When your phone is placed in the cradle, it will switch on automatically with the car ignition. You can select whether you want the telephone to switch off automatically with the car ignition after a delay of 1 hour or whether you want to switch it off manually.

If you have selected **Switch off automatically** and want to switch your telephone off while the ignition is still on, you must do so manually.

The display and keypad backlighting on your phone will switch on and off automatically with the car ignition. While the phone is switched on and placed in the cradle the backlighting will remain on continuously.

The battery will be automatically recharged as necessary.

A telephone with an extended battery cannot be used in the hands-free car installation kit.

## How to make a hands-free call

 
1. Enter the phone number you wish to call or retrieve it from the phone book.
2. Press **CALL** to let the conversation take place via the external speaker and microphone.
3. Press **END** to end your call.

## How to receive a hands-free call

1. Press **ANSWER** when the phone rings.
2. Press **END** to end your call.

By selecting **Car kit auto answer on** you can set your telephone to answer a call automatically after 5 seconds. This option is only effective when the car ignition is on.

If you have selected **Any key answer on** in the Phone setup menu you can, of course, answer the call by pressing any key.

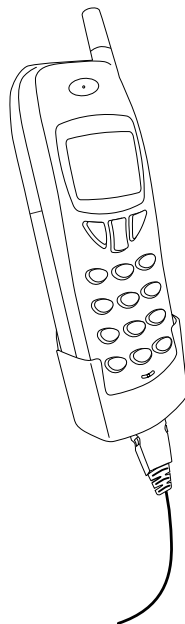

## Desk top charge stand

The desk top charge stand is powered by means of the charger supplied with your telephone. When the desk top charge stand is on the power lamp will always show green.

 
 
When you place the telephone in the desk top charge stand you have to make sure that the battery symbols on the display start flashing. The battery takes one and a half to 7 hours to become fully charged depending on the size of the battery. During charging the battery symbols on the display of your telephone will flash on and off one after another. When the battery is fully charged all 4 symbols are permanently displayed.

A telephone with an extended battery cannot be charged in the desk top charge stand.

The desk top charge stand has two sockets on its back. When charging the telephone you use the socket to the left side.

It is possible to connect a PC Combo card to your telephone while this is placed in the desk top charge stand.

The PC Combo card is supplied with two wires. You can connect the card to the desk top charge stand by means of the wire you normally use when connecting the card to your telephone. This wire must be plugged into the socket to the left.

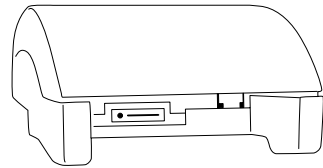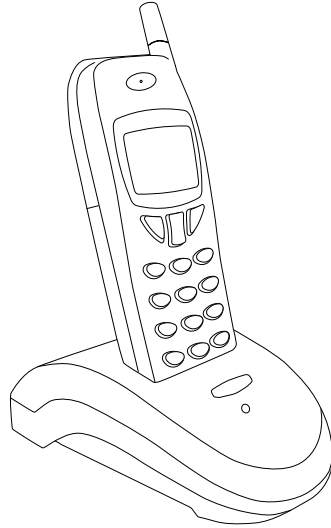

## Belt clip

 
The belt clip can be removed or fitted by means of a screwdriver. In the retail box you will find the necessary screws and labels for mounting the belt clip.

### How to fit the belt clip:

Remove the label (A) on the back of the phone. The belt clip can now be fitted by means of a screwdriver. Place the label (B) on the belt clip to cover the screw.

### How to remove the belt clip:

Remove the label (B) on the belt clip. The belt clip can now be removed by means of a screwdriver. Place the label (A) on the back of the phone to cover the screw hole.

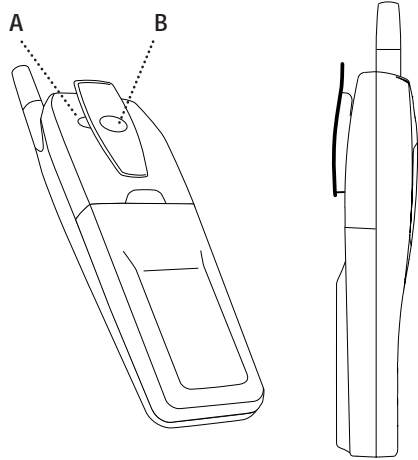

## Other accessories

- 550 mAh NiMH battery
- Light 650 mAh NiMH battery
- High Power 1800 mAh NiMH battery
- Vibra-alarm 480 mAh NiMH battery
- Basic charger
- Fast travel charger
- Cigar lighter charger 12/24V
- Antenna coupler
- Simple car holder
- Hands-free headset
- PC Combo card
- PC Editor

<b>Accessories</b>	36	<b>Greeting</b>	30	<b>Precautions</b>	2
Answered calls	17	<b>Hands-free car installation</b>	36	Preferred list	30
Answering a call	5, 9	<b>Important notice</b>	35	Prefix telephone numbers	15
Any key answer	30	<b>International calls</b>	8	Private calls	10
Auto answer	36	<b>Joining calls</b>	10	PUK code	33
Automatic redial	29	<b>Keypad</b>	4	PUK2 code	33
Automatic switch off	36	Keypad lock	11	Putting a call on hold	10
<b>Battery</b>	6	Keypad tone	28	<b>Reading a message</b>	
Battery level indicator	6	<b>Language</b>	8	- cell broadcast	21
Before sending messages	20	Last call	32	- point-to-point	19
Before you start	7	List menu system	16	Receiving a call	5, 9
Belt clip	38	Location numbers	12	Reset timers	32
Broadcast channel list	31	<b>Making a call</b>	5, 8	Ringing tones	28
Broadcast language	31	Maximum charge	32	<b>Security</b>	33
Broadcast setup	31	Menu numbers	23	Selection of language	8
<b>Calculator</b>	34	Messages		Selection of network	29
Call barring	26	- cell broadcast	21	Sending a new message	20
Call divert	24	- point-to-point	19	Service centre (SMS)	31
Call timers/charge	32	Message setup		Setup menu system	22
Call waiting	27	- cell broadcast	31	SIM card	7
Car kit installation	36	- point-to-point	31	SIM card limitations	35
CLI	17	Message tones	28	SIM lock	33
Closed user group	27	Missed calls	18	Speed dialling	13
Continuing calls	10	Muting the microphone	9	Store a name/number	12
Currency/Call charge	32	<b>Network password</b>	33	Supplementary network	
<b>Delete all messages</b>	19	Network selection	29	services	27
Delete a name/number	14	<b>Options in conversation</b>	10	Switching calls	10
Delete call information	32	Outgoing calls	17	<b>Tones setup</b>	28
Desk top charge stand	37	Own numbers	15	Total calls	32
Display	5	<b>PC Combo card</b>	37	Transferring calls	10
<b>Edit an old message</b>	20	Phone book	12	Trembler	28
Edit a name/number	14	Phone book sorting	32	<b>Volume control</b>	5
Emergency calls	9	Phone book status	14	<b>Unit price</b>	32
Extension numbers	8	Phone setup	29	USSD	27
<b>Factory settings</b>		PIN code	33	<b>Welcome greeting</b>	30
- telephone	30	PIN2 code	33		
- tones	28	Power saving	30		
Find a name/number	13				
Fixed numbers	15				

# BOSCH EASY SETS

Accessories for Bosch mobile phones



GSM-Com 608



## For the car

Handsfree Car Kit	44
Simple Car Holder	43
Antenna Coupler	45
Cigarette lighter Charger 12V/24V	31
Handsfree Headset	69

## For the computer

PC Card/PC Combo card	68
PC-Editor	62

## For charging

Basic Charger US 110 V	17
Basic Charger US 230 V	18
Basic Charger AUS	19
Basic Charger GB	20
Basic Charger EU	21
Desktop Charger	27
Fast Travel Charger - EU	22
Fast Travel Charger - GB	24
Fast Travel Charger - AUS	25
Fast Travel Charger - US	26

## For power / outfit

Light 650 mAh NiMH battery	12
550 mAh NiMH battery AAA	16
Vibra-Alarm 480 mAh NiMH battery	14
High Power 1800 mAh NiMH battery	15
Belt clip	63

Red identification numbers refer to the right accessory.



- D** Bosch Telecom GmbH  
Produktbereich Endgeräte  
Kleyerstr. 94,  
60326 Frankfurt/Main,  
Tel. (0 180) 5 22 14 92  
Fax (0 180) 5 22 14 93
- B** N.V. Robert Bosch S.A.  
Rue Henri Genessestraat 1,  
10 70 Bruxelles / Brussel  
Tel. (02) 5 25 5460
- DK** Robert Bosch A/S  
Telegrafvej 1, 2750 Ballerup,  
Tel. 44 89 89 89
- F** Robert Bosch (France) S.A.  
B.P. 170, 32 Avenue Michelet,  
93404 Saint Ouen,  
Tel. (0) 1 40 10 70 07
- GR** Robert Bosch S.A.  
162 Kifissou, 12131 Peristeri, Athens,  
Tel. (3 01) 5 70 12 86
- NL** Robert Bosch BV  
Neptunusstraat 71,  
2132 JP Hoofddorp,  
Tel. 023 56 56-3 91
- GB** Robert Bosch Ltd.  
Sales Communication Equipment  
P.O. Box 98  
Uxbridge, Middlesex UB9 5HJ  
Tel. 0345 585220
- I** Robert Bosch  
Industriale e Commerciale S.P.A.  
Via M.A. Colonna 35, 20149 Milano,  
Tel. (3 92) 36 96-1
- N** Robert Bosch AS  
Postboks 629, 1411 Kolbotn,  
Tel. 66 81 70 00
- S** Robert Bosch Aktiebolag  
Box 1154, 164 26 Kista,  
Tel. (8) 7 50 15 00
- P** Robert Bosch Lda.  
Av. Infante D. Henrique, Lotes 1E, 2E,  
Apartado 8058, 1801 Lisboa Codex,  
Tel. (35 11) 8 50 00 00
- E** Robert Bosch SA  
Ctra. Nacional VI, km. 18,150,  
28230 Las Rozas Madrid  
Tel. (3 41) 6 31 23 72
- A** Robert Bosch AG  
Postfach 146, 1110 Wien,  
Tel. (4 31) 7 97 22-0
- CH** Robert Bosch AG  
Industriestr. 31, 8112 Otelfingen,  
Tel. (4 11) 8 47 14 14
- TR** Bosch Sanayi ve Ticaret A.S.  
Ambarlar CAD No. 4,  
34780 Zeytinburnu-Istanbul  
Tel. (0212) 5 58 24 70
- H** Robert Bosch Kft.  
Postfach 405,1519 Budapest  
Tel. (3 61) 2 69 83 40
- SF** OY Hedengren AB  
Lauttasaarentie 50,  
00200 Helsinki  
Tel. (90) 68 281
- IRL** Beaver Distribution Ltd.  
Greenhills Road, Tallaght, Dublin 24,  
Tel. (35 31) 4 51 52 11
- L** Central Import Export Corporation  
Zone Industrielle, Rue des Jones,  
1818 Howald,  
Tel. (2) 40 30 60
- SGP** Robert Bosch Pte Ltd  
38c Jalan Pemimpin,  
Singapore 57180,  
Tel. 3 50 54 52
- ZA** Robert Bosch (Pty) Ltd.  
Private Bag X118, Randjespark,  
Midrand 1685  
Rep. of South Africa  
Tel. (011) 651-9600  
  
<http://www.bosch-telecom.de>

**BOSCH**

7910.1900 GB / 12.98

