

Emjoi®

BodyBare Trio

cordless rechargeable epilator

Instruction Booklet

AP10LR

Please read these instructions carefully
and retain for future reference.



Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşılığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Emjoi's Safety Precautions

Safety Precautions for your Emjoi BodyBare epilator

- Keep out of the reach of children.
- Do not use if the tweezers are broken or damaged.
- The appliance must only be used as described in this booklet.
- This appliance is for household use only.
- Do not immerse the product in water or any other liquid.
- If you suffer from any of the following conditions, please see your health care provider before using your BodyBare epilator – acne, moles, diabetes, during pregnancy, eczema, hemophilia, immune deficiency, psoriasis, varicose veins or wounds.
- Do not use this unit where it can come into contact with the scalp, clothing and shoelaces to avoid personal injury and damage to the unit.
- Use only on clean, dry skin.
- This product has not been designed for use on the eyebrows.
- Use only with the adaptor supplied with this appliance.
- As this is a personal care product, we recommend that it is used by one person only.
- The external flexible cord of the adaptor cannot be replaced.
If the cord is damaged, the transformer should be scrapped.

Note: Use of an epilator may cause reddening or irritation of the skin. This is a normal reaction which will quickly disappear. However if the irritation remains for more than three days, please see your health care practitioner

Ensure that the above safety precautions are understood


We are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.

- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

Ensure that the above safety precautions are understood

Features of your BodyBare Trio Epilator

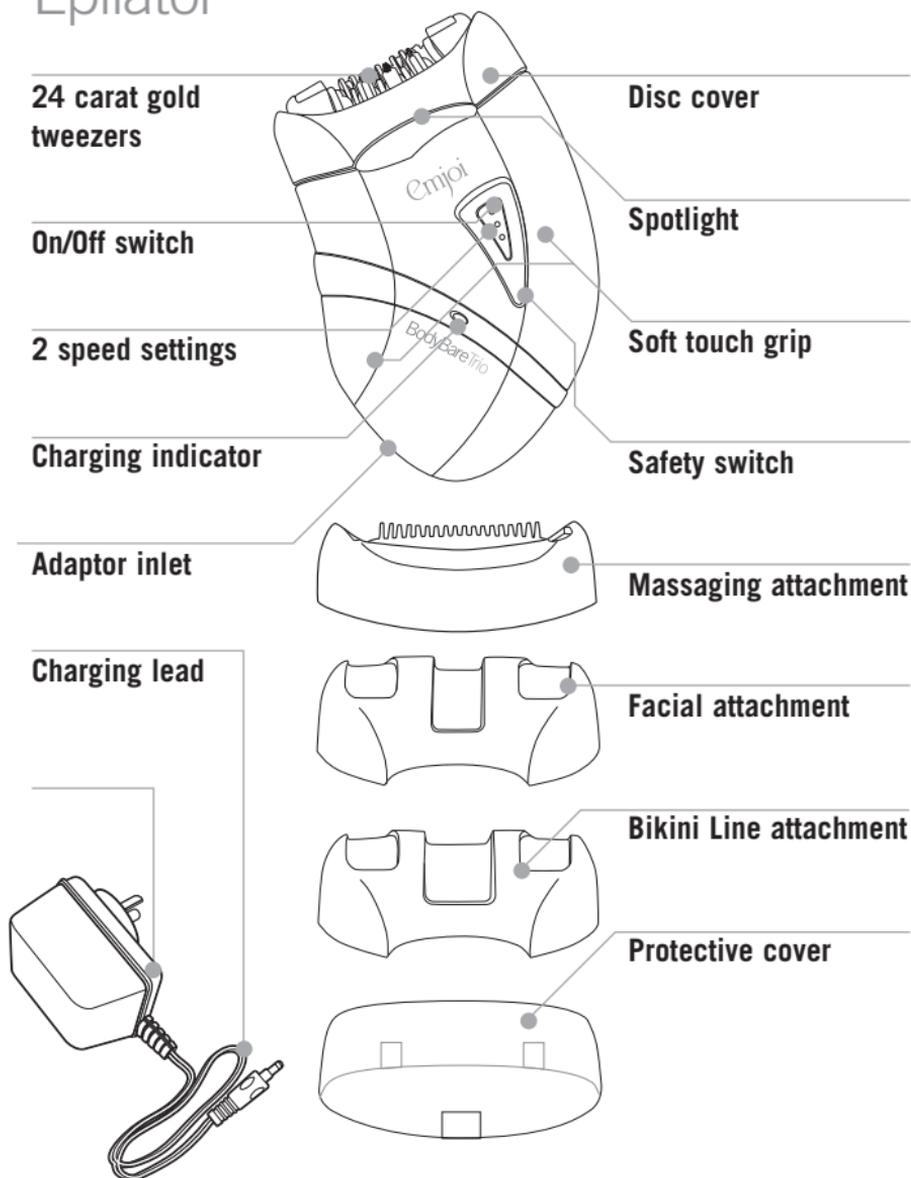

Using your BodyBare epilator

Before using your epilator for the first time

- This epilator must be fully charged before using for the first time.
- To reach optimum recharge capacity, the batteries should initially be charged for 16 hours. Do not recharge for longer than this.
- The charging indicator light will light up to show you that unit is charging.
- On subsequent charging, you should recharge for only 8 hours. This will provide up to 30 minutes of cordless use.
- Ensure that the epilator is switched off. Insert the charging lead into the adaptor inlet, plug the adaptor into a suitable mains outlet and switch on.
- When the batteries are run down, it is possible to use this appliance from the mains via an adaptor. However frequent use of the epilator as a corded unit is not recommended.
- To extend the life of the epilator we recommend that you fully drain the batteries every six months.

Using your epilator

- Before using your BodyBare epilator for the first time, we recommend that you familiarise yourself with how the appliance feels on the skin. Try the unit on the back of the hand before using it on more delicate areas.
- We recommend that you have a warm shower or bath before use and use the loofah provided or exfoliating cream to prepare the skin.
- Ensure that the skin is clean and dry. Do not use over body lotions or moisturisers.
- Remove the protective cover by pressing both sides of the cover at the same time.
- Switch the appliance on by pressing the safety switch and at the same time sliding it up to your desired speed.

- Choose from 2 speed settings. Use setting I on fine hair and setting II on thicker or coarser hair.
- Hold at a 90 degree angle to the area you wish to remove hair from with the BodyBare logo facing away from you.
- Move the appliance in rapid circles, lightly gliding over the skin. There is no need to apply pressure.
- If too much pressure is applied, the appliance may slow down.
- When removing hair it is very important to hold the skin very taut to avoid pinching.
- The appliance is designed to be used on hair as short as 0.5mm so there is no need for stubble to appear before epilating.

Where can I use my epilator?

- The epilator can be used on the legs and underarms. Use the epilator with the disc cover attached on these areas.
- It can also be used on the bikini line. Use the specially designed bikini line attachment supplied. Remove the disc cover by pulling it off and attach the bikini line attachment and click into place.
- It can also be used on single hairs on the face particularly on the upper lip and chin. Use the facial attachment provided as described above.
- If hair is longer than 5mm, trim with scissors before use.
- The appliance is not suitable for use on the eyebrows.
- The epilator is also supplied with a massaging attachment for very sensitive skin. To use this attachment you must remove any other attachment such as the disc cover or facial attachment. Attach as described above.

Care and Cleaning

- Switch the epilator off after use. Always turn the power off and remove the plug before cleaning.
- Do not immerse the appliance in water or any other liquid.
- To clean the exterior, simply wipe over with a dampened cloth and wipe dry.
- Brush away any hairs using the brush supplied.
- Occasionally clean the tweezers by wiping with a cotton bud that has been dipped in alcohol. Remove any residue alcohol before using again.
- Keep the protective cover on the appliance when not in use.

Help Line

If you have any additional questions about using your BodyBare epilator, please call the Sunbeam help line in Australia on 1300 881 861. In New Zealand, please call 0800 786 232

Battery Disposal

- The battery must not be disposed of in ordinary household waste. At the end of the shaver's life, the shaver must be returned to a Sunbeam Service Centre for correct disposal of the rechargeable battery.
- The battery must be removed from the appliance before it is scrapped.
- The battery is to be disposed of safely.

Notes

Emjoi Epilators and Lady Shavers are distributed in Australia and New Zealand by Sunbeam Corporation Limited. If you have any concerns regarding the performance and use of your Emjoi appliance, please contact the Sunbeam Customer Service Centre.

Made in China.

Backed by Sunbeam's 2 year replacement guarantee and National Service network

For more information or advice on this appliance, please contact the Sunbeam Customer Service Line

Australia 1300 881 861

New Zealand 0800 786 232

06/08

Consumer Hotline

Australia

1300 881 861

New Zealand

0800 786 232