

# PeerCall USB Adaptor



## CONTENTS

### CHAPTER 1: Welcome to USB Adaptor

<b>1.1</b>	<b>Summary</b>	<b>3</b>
<b>1.2</b>	<b>Features</b>	<b>3</b>
<b>1.3</b>	<b>System Requirements</b>	<b>3</b>

### CHAPTER 2: How to use the USB Adaptor

<b>2.1</b>	<b>Connect USB Adaptor to PC</b>	<b>4</b>
<b>2.2</b>	<b>Run PeerCall WIN</b>	<b>4</b>
<b>2.3</b>	<b>Switch between PeerCall &amp; PSTN</b>	<b>4</b>
<b>2.4</b>	<b>Make calls through USB</b>	<b>4</b>
<b>2.5</b>	<b>Make calls through PSTN</b>	<b>4</b>
<b>2.6</b>	<b>Answer a call</b>	<b>4</b>
<b>2.7</b>	<b>Adjust options (Default channel)</b>	<b>5</b>
<b>2.8</b>	<b>Adjust Volume</b>	<b>5</b>

## CHAPTER 1

### Welcome to PeerCall USB Adaptor

#### **1.1 Summary**

PeerCall USB Adaptor is a convenient, effective, and easy-to-use device for everyday voice communication. User can switch between an Internet phone (VoIP) and a regular phone simply by pressing "\*" key. It provides not only the great convenience but big cost savings as well.

#### **1.2 Features**

1. Receive both PeerCall and PSTN calls.
2. PC-to-PC, Phone to Phone operation.
3. Plug-and-play installation, USB1.1 compatible, no need for sound card.
4. Echo cancellation, noise reduction.
5. Full duplex communication.

#### **1.3 System Requirements**

1. P II with 200 MHz CPU or better with USB interface.
2. 64MB of RAM.
3. 10MB or more hard disk space.
4. Operating System: Windows 2000/XP
5. Network: LAN, ADSL, ISDN, 33.6K modem or better
6. PeerCall WIN pre-installed

## CHAPTER 2

### How to use the PeerCall USB Adaptor

#### **2.1 Connect USB Adaptor to PC**

- ▣ Connect USB Adaptor to PC, POWER indicator will be on.
- ▣ Connect telephone line from the wall outlet to "LINE" port.
- ▣ Connect Phone set to "TEL" port.

#### **2.2 Run PeerCall WIN**

- ▣ PeerCall WIN shows a dialog indicate device is connected successfully.



#### **2.3 Channels Switch**

You can press "\*" to switch PSTN channel to USB channel or switch USB channel to PSTN channel.

#### **2.4 Make calls through USB**

- ▣ Input number and call out:  
Press "\*" to change to USB channel, the "USB" indicator is on. Press PeerCall number on the phone keypad, this number will be shown on PeerCall WIN window, then press "#" to call out. When you hang-up, the USB Adaptor switch to PSTN channel automatically.

#### **2.5 Make calls through PSTN (Phone to Phone)**

Press the regular phone number, then press "#" to call out.

For example: to call 800-123-4567

Operation: Input the number 8001234567, then press "#" to call out.

#### **2.6 Answer a call**

When a call (can be either PeerCall or PSTN) comes in, the phone is ringing, pick up handset or press handfree key to answer the call.

#### **2.7 Adjust options (default channel)**


Set the default channel and sound card settings in the "Options", as shown:



## 2.8 Adjust Volume

Please execute the “Control Panel->Sounds and Multimedia()->Audio”, it shown as below:

Click Volume for sound Playback show “Speaker” dialog:

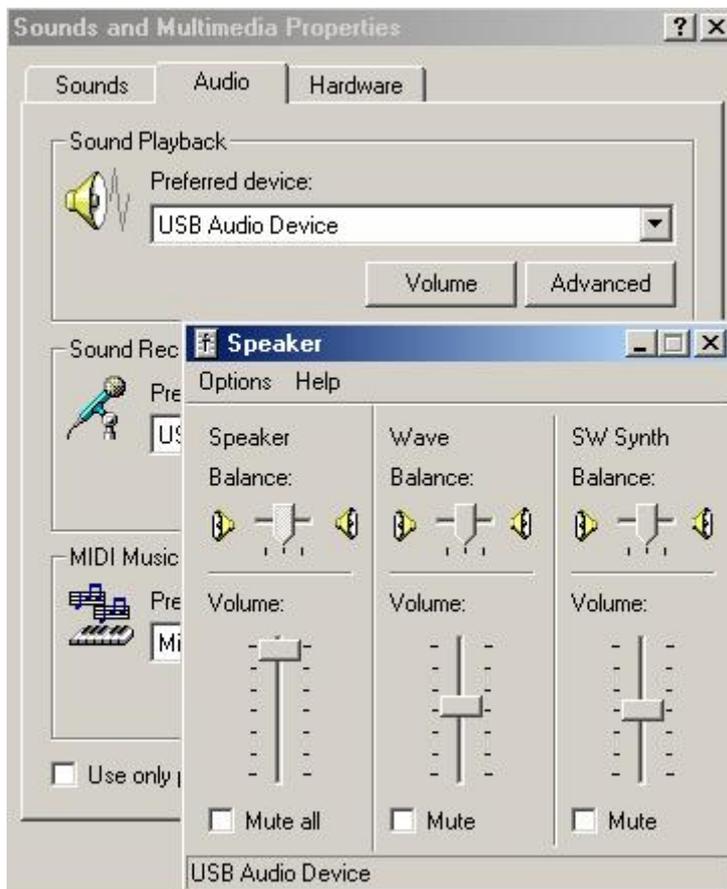

Click Volume for sound Recording show "Wave IN" dialog

