

# DATEXX

## DC-750A Calculator

### TELEDEX Limited U.S.A. Warranty

TELEDEX INC. warrants these products to the original purchaser to be free from defective material and workmanship. Under this warranty, the product will be repaired or replaced at our option, for up to one year, without charge except for supplies or accessories such as batteries, wallets etc, when returned with proof of purchase to **TELEDEX SERVICE CENTER, 1 ATLAS St. Kenilworth NJ 07033**. A check or money order for \$3.00 to cover postage must be included. This is the exclusive written warranty. No other warranty, expressed or implied, shall extend beyond the time listed above. TELEDEX is not liable for consequential economic or property damage. Some states do not allow a time limit on implied warranties or exclusion of consequential damage so this may not apply to you. This warranty gives you specific legal rights. You may have other legal rights that vary from state to state.

**TELEDEX INC. 1 Atlas st. Kenilworth, NJ 07033**

Warranty valid only in the U.S.A.

Printed in China

### FEATURES

**Large, 8-Digit Display** – Adjustable, with large, easy-to-read digits.

**Folding design** – Works like a desktop calculator, then folds to compact size for travelling.

**Solar Powered** – with battery back-up for use in low light.

**Automatic Power Off** – If left unused for about 7 minutes.

### TURNING THE CALCULATOR ON AND OFF

#### ON/C Key

Press **ON/C** to turn on the calculator. The calculator turns off automatically after about 7 minutes if no key is pressed. Press **OFF** to turn off the calculator sooner.

### OPERATING THE CALCULATOR

#### +/- Key

Changes the displayed number from positive (+) to negative (-) or from negative (-) to positive (+).

- appears when the displayed value is negative.

#### CE Key

Deletes the displayed number without losing any pending calculation. If a result exceeds the number of digits that can show on the display, the calculator stops and displays E. Press **CE** to resume calculating.

#### ON/C Key

If the calculator is on, press **ON/C** to reset the display to 0.

### PERFORMING CALCULATIONS

	Press	Displayed
<b>Addition (+)</b> $6 + 7 = 13$	p6 + 7 =	13
<b>Subtraction (-)</b> $10 - 4 = 6$	p10 - 4 =	6
<b>Multiplication (x)</b> $7 \times 5 = 35$	p7 x 5 =	35
<b>Division (÷)</b> $14 \div 7 = 2$	p14 ÷ 7 =	2

**Square Root (√)** Calculate the square root of 64.

p64 √ 8

#### Percentages (%)

6% of 100. p100 x 6 % 6

Add 6% tax to \$20. p20 + 6 % 21.2

20% discount from \$150. p150 - 20 % 120

### MEMORY FUNCTIONS

**M +** Press to add the displayed number into memory. **M** appears in the display.

**M -** Press to subtract the currently displayed number from memory.

**MRC** Press once to display the number stored in memory. Press twice to clear the memory. **M** disappears from the display.

### CARE AND MAINTENANCE

- Keep the calculator dry. If it gets wet, dry it before use.
- Store the calculator in moderate temperatures.
- Do not drop or strike the calculator.
- Do not use harsh chemicals to clean the case.

For more information on  
**Datexx** and **S.O.H.O.** (Small Office/Home Office) products,  
 visit our internet Web site at: **HTTP://WWW.DATEXX.COM**