Nikon

DIGITAL CAMERA

COOLPIX L620

User's Manual





Introduction

Parts of the Camera

The Basics of Shooting and Playback

Shooting Features

Playback Features

Recording and Playing Back Movies

General Camera Setup

Connecting the Camera to a TV, Computer, or Printer

Technical Notes and Index


Introduction

Read This First

Thank you for purchasing the Nikon COOLPIX L620 digital camera. Before using the camera, please read the information in "For Your Safety" (\square) viii-xi) and familiarize yourself with the information provided in this manual. After reading, please keep this manual handy and refer to it to enhance your enjoyment of your new camera.

Confirming the Package Contents

In the event that any items are missing, please contact the store where you purchased the camera.

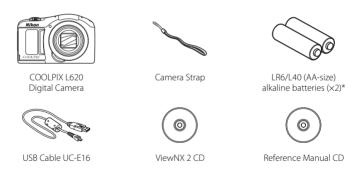

• User's Manual (this manual)

- Warranty
- * The included batteries are for trial use only.

NOTE: A memory card is not included with the camera.

About This Manual

If you want to start using the camera right away, see "The Basics of Shooting and Playback" (10).

To learn about the parts of the camera and information that is displayed in the monitor, see "Parts of the Camera" (\square 1).

About the Included "Reference Manual CD"

A PDF version of the COOLPIX L620 Reference Manual can be found on the included CD. Refer to it for more detailed information.

Viewing the "Reference Manual CD"

The Reference Manual can be viewed using Adobe Reader, available for free download from the Adobe website.

- 1 Start the computer and insert the "Reference Manual CD".
- 2 Double-click the CD (COOLPIX L620) icon in Computer or My Computer (Windows) or on the desktop (Mac OS).
- 3 Double-click the **INDEX.pdf** icon to display the language selection screen. Click a language and follow the links to view the Reference Manual.

Other Information

• Symbols and Conventions

To make it easier to find the information you need, the following symbols and conventions are used in this manual:

lcon	Description
V	This icon indicates cautions and information that should be read before using the camera.
	This icon indicates notes and information that should be read before using the camera.
□/ 6• /&	These icons indicate other pages containing relevant information; "Reference Section", "E': "Technical Notes and Index."

^{*} Refer to the Reference Manual for pages indicated with .

- SD, SDHC, and SDXC memory cards are referred to as "memory cards" in this manual.
- The setting at the time of purchase is referred to as the "default setting."
- The names of menu items displayed in the camera monitor, and the names of buttons or messages displayed on a computer monitor appear in bold.
- In this manual, images are sometimes omitted from monitor display samples so that monitor indicators can be more clearly shown.
- Illustrations and monitor content shown in this manual may differ from the actual product.

Information and Precautions

Life-Long Learning

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually updated information is available online at the following sites:

- For users in the U.S.A.: http://www.nikonusa.com/
- For users in Europe and Africa: http://www.europe-nikon.com/support/
- For users in Asia, Oceania, and the Middle East: http://www.nikon-asia.com/

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. Visit the site below for contact information:

http://imaging.nikon.com/

Use Only Nikon Brand Electronic Accessories

Nikon COOLPIX cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including battery chargers, batteries, and AC adapters) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry. The USE OF NON-NIKON ELECTRONIC ACCESSORIES COULD DAMAGE THE CAMERA AND MAY VOID YOUR NIKON WARRANTY.

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

About the Manuals

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in these manuals at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort was made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

Notice Concerning Prohibition of Copying or Reproduction

Note that simply being in possession of material that was digitally copied or reproduced by means of a scanner, digital camera or other device may be punishable by law.

• Items prohibited by law from being copied or reproduced

Do not copy or reproduce paper money, coins, securities, government bonds or local government bonds, even if such copies or reproductions are stamped "Sample." The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited. Unless the prior permission of the government was obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

· Cautions on certain copies and reproductions

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards and tickets, such as passes and meal coupons.

· Comply with copyright notices

The copying or reproduction of copyrighted creative works such as books, music, paintings, woodcut prints, maps, drawings, movies, and photographs is governed by national and international copyright laws. Do not use this product for the purpose of making illegal copies or to infringe copyright laws.

Disposing of Data Storage Devices

Please note that deleting images or formatting data storage devices such as memory cards or built-in camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Be sure to also replace any pictures selected for the **Select an image** option in the **Welcome screen** setting (\square 69). Care should be taken to avoid injury or damage to property when physically destroying data storage devices.

For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.



This icon marks warnings, information that should be read before using this Nikon product, to prevent possible injury.

WARNINGS



Turn off in the event of malfunction

Should you notice smoke or an unusual smell coming from the camera or AC adapter, unplug the AC adapter and remove the batteries immediately, taking care to avoid burns. Continued operation could result in injury. After removing or disconnecting the power source, take the equipment to a Nikon-authorized service representative for inspection.



Do not disassemble

Touching the internal parts of the camera or AC adapter could result in injury. Repairs should be performed only by qualified technicians. Should the camera or AC adapter break open as the result of a fall or other accident. take the product to a Nikon-authorized service representative for inspection. after unplugging the product and/or removing the batteries.



Do not use the camera or AC adapter in the presence of flammable gas

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.



A Handle the camera strap with care

Never place the strap around the neck of an infant or child

Keep out of reach of children

Particular care should be taken to prevent infants from putting the batteries or other small parts into their mouths



♠ Do not remain in contact with the camera, battery charger, or AC adapter for extended periods while the devices are on or in use

Parts of the devices become hot Leaving the devices in direct contact with the skin for extended periods may result in low-temperature burns.



♠ Do not leave the product where it will be exposed to extremely high temperatures, such as in an enclosed automobile or in direct sunlight

Failure to observe this precaution could cause damage or fire.

Observe caution when handling batteries

Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries for use in this product:

- Before replacing the batteries, turn the product off. If you are using an AC adapter, be sure it is unplugged.
- Use only the batteries approved for use in this product (10). Do not combine old and new batteries or batteries of different makes or types.
- If Nikon rechargeable Ni-MH batteries FN-MH2 (FN-MH2-B2 or EN-MH2-B4) are purchased separately, charge and use each of them as a set. Do not combine batteries from different pairs.
- The EN-MH2 rechargeable batteries are for use with Nikon digital cameras only, and are compatible with COOLPIX L620.
- · Insert batteries in the correct orientation.
- Do not short or disassemble batteries or attempt to remove or break battery insulation or casing.
- Do not expose batteries to flame or to excessive heat.

- Do not immerse in or expose to water
- Do not transport or store with metal objects such as necklaces or hairpins.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the batteries when no charge remains.
- Discontinue use immediately should you notice any change in the batteries, such as discoloration or deformation.
- If liquid from damaged batteries comes in contact with clothing or skin, rinse immediately with plenty of water.

Observe the following precautions when handling the Battery Chargers (available separately)

- Keep dry. Failure to observe this precaution could result in fire or electric shock.
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire

- Do not handle the power cable or go near the battery charger during lightning storms. Failure to observe this precaution could result in electric shock.
- Do not damage, modify, forcibly tug
 or bend the power cable, place it
 under heavy objects, or expose it to
 heat or flame. Should the insulation
 be damaged and the wires become
 exposed, take it to a Nikonauthorized service representative for
 inspection. Failure to observe these
 precautions could result in fire or
 electric shock.
- Do not handle the plug or battery charger with wet hands. Failure to observe this precaution could result in electric shock.
- Do not use with travel converters or adapters designed to convert from one voltage to another or with DCto-AC inverters. Failure to observe this precaution could damage the product or result in overheating or fire.



Use appropriate cables

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose, to maintain compliance with product regulations.



Handle moving parts with care

Be careful that your fingers or other objects are not pinched by the lens cover or other moving parts.



The CD-ROMs included with this device should not be played back on audio CD equipment. Playing CD-ROMs on an audio CD player could cause hearing loss or damage the equipment.



Observe caution when using the flash

Using the flash close to your subject's eyes could cause temporary visual impairment. The flash should be no less than 1 m (3 ft 4 in.) from the subject. Particular care should be observed when photographing infants



Do not operate the flash with the flash window touching a person or object

Failure to observe this precaution could result in burns or fire



Avoid contact with liquid crvstal

Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes or mouth.



Turn the power off when using inside an airplane or the hospital

Turn the power off while inside the airplane during take off or landing. Do not use wireless network functions while in the air Follow the instructions of the hospital when using while in a hospital.

The electromagnetic waves emitted by this camera may disrupt the electronic systems of the airplane or the instruments of the hospital. If you are using an Eye-Fi card, remove it from the camera before boarding an aircraft or entering a hospital.

Notices

Notice for Customers in the U.S.A.

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the ECC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.



CAUTIONS

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

Notice for customers in the State of California

WARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

Wash hands after handling.

Nikon Inc..

1300 Walt Whitman Road Melville, New York 11747-3064 USA

Tel: 631-547-4200

Notice for customers in Canada

CAN ICES-3 B / NMB-3 B

Notice for Customers in Europe

This symbol indicates that electrical and electronic equipment is to be collected separately.



The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- Separate collection and recycling helps conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.
- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the batteries indicates that the batteries are to be collected separately.



The following apply only to users in European countries:

- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

Table of Contents

Introduction ii
Read This Firstii
Confirming the Package Contentsii
About This Manualiii
Information and Precautionsv
For Your Safety viii
WARNINGS viii
Notices xii
Parts of the Camera 1
The Camera Body 1
Attaching the Camera Strap 3
Raising and Lowering the Flash 3
Using Menus (MENU Button)4
The Monitor 6
Shooting Mode 6
Playback Mode 8
The Basics of Shooting and Playback 10
Preparation 1 Insert the Batteries
Applicable Batteries 10
Preparation 2 Insert a Memory Card 12
Internal Memory and Memory Cards 13
Preparation 3 Setting the Display Language,
Date, and Time 14
Step 1 Turn the Camera On 18
Step 2 Select a Shooting Mode 20
Available Shooting Modes 21

Step 3 Frame a Picture	22
Using the Zoom	23
Step 4 Focus and Shoot	24
The Shutter-release Button	25
Step 5 Play Back Images	26
Step 6 Delete Images	27
Shooting Features	29
(Easy Auto) Mode	29
Scene Mode (Shooting Suited to Scenes)	30
Tips and Notes	31
Special Effects Mode	
(Applying Effects When Shooting)	35
Smart Portrait Mode	
(Capturing Images of Smiling Faces)	37
(Auto) Mode	
Functions That Can Be Set Using the Mult	i
Selector	40
Using the Flash	41
Using the Self-timer	44
Using Macro Mode	46
Adjusting Brightness	
(Exposure Compensation)	
Default Settings	48
Functions That Can Be Set with the	
MENU Button (Shooting Menu)	
Options Available in the Shooting Menu	51
Functions That Cannot Be Used	
Simultaneously	52

Focusing	54	
Using Face Detection		Reference Section 🚗
Using Skin Softening		Using Easy Panorama
Using Target Finding AF	56	(Shooting and Playback) 🟍
Subjects Not Suitable for Autofocus		Shooting with Easy Panorama 🟍
Focus Lock		Viewing Images Captured with Easy Panorama
Playback Features	59	Favorite Pictures Mode 😁
Playback Zoom		Adding Images to Albums 🚗
Thumbnail Playback, Calendar Display		Playing Back Images in Albums 🟍
Functions That Can Be Set with the	. 00	Removing Images from Albums 🟍
MENU Button (Playback Menu)	61	Changing the Favorites Album Icon 🟍
WENG BULLOTI (Flayback Merid)	. 01	Auto Sort Mode 🖰 1
Recording and Playing Back Movies	63	List by Date Mode
Recording Movies		Viewing and Deleting Images Captured
Functions That Can Be Set with the	. 63	Continuously (Sequence)
MENU Button (Movie Menu)	66	Viewing Images in a Sequence
Playing Back Movies		Deleting Images in a Sequence
Flaying back Movies	. 07	Editing Still Images
General Camera Setup	69	Before Editing Images
Functions That Can Be Set with the		Enhancing Contrast and Saturation 6-01
MENU Button (Setup Menu)	69	D-Lighting:
meno batton (setap mena)	. 07	Enhancing Brightness and Contrast 6-01
Connecting the Camera to a TV,		Red-eye Correction: Correcting Red Eyes
Computer, or Printer	71	Caused by Using the Flash
Connection Methods		Skin Softening: Softening Skin Tones 🗪 1
		Filter Effects:
Using ViewNX 2		Applying Digital Filter Effects ♣1
Installing ViewNX 2		Small Picture:
Transferring Images to the Computer Viewing Images		Reducing the Size of an Image
viewing images	/0	Crop: Creating a Cropped Copy


Connecting the Camera to a TV
(Viewing Images on a TV) 5 22
Connecting the Camera to a Printer
(Direct Print)
Connecting the Camera to a Printer 🟍 25
Printing Individual Images 🗪 26
Printing Multiple Images 🗪 28
Editing Movies 5 31
The Shooting Menu
(for (Auto) Mode)
Image Mode Settings
(Image Size and Quality) 🟍 33
White Balance (Adjusting Hue)
Continuous Shooting 🗪38
ISO Sensitivity
Color Options 6-641
AF Area Mode
The Smart Portrait Menu
Skin Softening
Smile Timer 6-644
Blink Proof
The Playback Menu 5–346
Print Order
(Creating a DPOF Print Order) 🗝 46
Slide Show
Protect
Rotate Image 6-653
Voice Memo
Copy (Copy Between Internal Memory
and Memory Card) 👈 55
Sequence Display Options 🗝 57
Choose Key Picture 🏍57

he Movie Menu	∂- 058
Movie Options	6-6 58
Autofocus Mode	6-6 61
Wind Noise Reduction	6-6 61
he Setup Menu	6 €062
Welcome Screen	6-6 62
Time Zone and Date	6-6 63
Monitor Settings	6-6 65
Print Date	
(Imprinting Date and Time)	6-6 67
Vibration Reduction	6 68
Motion Detection	6-6 69
AF Assist	6-6 70
Digital Zoom	6-6 70
Sound Settings	6–6 71
Auto Off	6–6 71
Format Memory/Format Card	6−6 72
Language	6−6 73
TV Settings	6-6 73
Blink Warning	6-6 74
Eye-Fi Upload	6-6 75
Reset All	6-6 76
Battery Type	6-6 77
Firmware Version	6-6 77
rror Messages	∂= 078
ile Names	∂= 082
Optional Accessories	∂= 083
Attaching the AN-CP23 Camera Strap	∂= 084

echnical Notes and Index	⊘ -1
Caring for the Product	🌣-2
The Camera	💢 2
Batteries	🌣 -3
Memory Cards	⋩ 5
Cleaning and Storage	🜣 6
Cleaning	💢 6
Storage	冹-7
Troubleshooting	🜣 8
Specifications	⋩ 16
Approved Memory Cards	2 -20
Inday	ά. 22


Parts of the Camera

The Camera Body

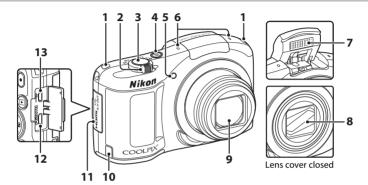

1	Eyelet for camera strap	3
2	Zoom control	23 23 60 59
3	Shutter-release button	24
4	Power switch/power-on lamp	18
5	Self-timer lampAF-assist illuminator	

6	Microphone (stereo)61, 63
7	Flash3, 41
8	Lens cover
9	Lens
10	Power connector cover (for AC adapter available separately from Nikon)
11	Connector cover71
12	HDMI micro connector (Type D)71
13	USB/audio/video output connector71

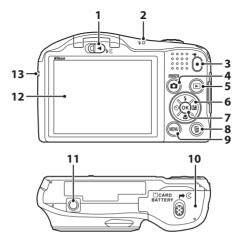

1	\$ ⓒ (flash pop-up) control3, 41
2	Flash lamp43
3	● (*▼ movie-record) button63
4	(shooting mode) button29, 30, 35, 37, 39
5	(playback) button26
6	Multi selector4
7	(apply selection) button4

8	(delete) button27
9	MENU (menu) button4, 50, 61, 66, 69
10	Battery-chamber/ memory card slot cover10, 12
11	Tripod socket
12	Monitor6
13	Speaker61, 67

Attaching the Camera Strap


Pass the strap through either the left or right strap eyelet and attach the strap.



Raising and Lowering the Flash

Slide the **\$ (**flash pop-up) control to raise the flash.

- See "Using the Flash" (41) for more information about flash settings.
- Push the flash down gently to lower the flash until it clicks into place when not in use.

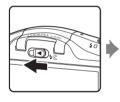





Using Menus (MENU Button)

Use the multi selector and **66** button to navigate the menus.

1 Press the **MENU** button.

• The menu is displayed.



2 Press the multi selector **◄**.

• The current menu icon is displayed in yellow.





Menu icons

- **3** Select the desired menu icon.
 - The menu is changed.






4 Press the 🛞 button.

• The menu options become selectable.





5 Select a menu option.

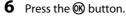

 The settings for the option you selected are displayed.





7 Select a setting.

f 3 Press the f 0 button.

- The setting you selected is applied.
- When you are finished using the menu, press the **MENU** button.







Notes About Setting Menu Options


- Certain menu options cannot be set depending on the current shooting mode or the state of the camera. Unavailable options are displayed in gray and cannot be selected.
- When a menu is displayed, you can switch to shooting mode by pressing the shutter-release button, ☐ (shooting mode) button, or (★ movie-record) button.

The Monitor

The information that is displayed in the monitor during shooting and playback changes depending on the camera's settings and state of use.

By default, information is displayed when the camera is first turned on and when you operate the camera, and turns off after a few seconds (when **Photo info** is set to **Auto info** in **Monitor settings** (69)).


Shooting Mode

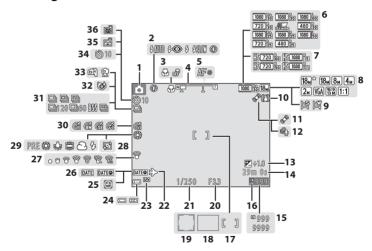

1	Shooting mode20, 21
2	Flash mode41
3	Macro mode46
4	Zoom indicator23, 46
5	Focus indicator24
6	Movie options (normal speed movies)66
7	Movie options (HS movies)66
8	Image mode51, 6→ 33
9	Easy panorama33
10	Vibration reduction icon69
11	Motion detection icon69
12	Wind noise reduction66
13	Exposure compensation value47
14	Movie recording time remaining63
15	Number of exposures remaining (still images)18
16	Internal memory indicator18
17	Focus area (center)24
18	Focus area (target finding AF)51, 56

19	Focus area (face detection, pet detection)	24, 34, 37
20	Aperture value	25
21	Shutter speed	25
22	Travel destination icon	69
23	ISO sensitivity	5
24	Battery level indicator	18
25	"Date not set" indicator	14, 69
26	Print date	69
27	Eye-Fi communication indicator	70
28	Skin softening	5
29	White balance mode	5
30	Color options	5
31	Continuous shooting mode	34, 51
32	Blink proof icon	5
33	Hand-held, tripod	31, 32
34	Self-timer indicator	4
35	Smile timer	5
36	Pet portrait auto release	34

Playback Mode

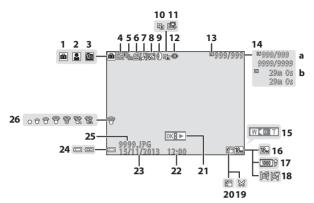

1	Album icon in favorite pictures mode 🏍 6
2	Category icon in auto sort mode 🗪 10
3	List by date icon
4	Protect icon61, ◆◆ 51
5	Sequence display (when Individual pictures is selected)62,
6	Print order icon61, 646
7	Voice memo indicator61, ♣ 54
8	Skin softening icon61, 🗪 17
9	Filter effects icon61, 🗪 18
10	D-Lighting icon61, 61,
11	Quick retouch icon61, 🗪 15
12	Red-eye correction icon61, ♣616
13	Internal memory indicator13
14	(a) Current image number/ total number of images26 (b) Movie length67

15	Volume indicator67
16	Image mode51, 6-33
17	Movie options66, 6-658
18	Easy panorama33, 6-62
19	Crop icon59, 6-6 21
20	Small picture icon
21	Easy panorama playback guide33, ��5 Sequence playback guide62, ��12 Movie playback guide67
22	Time of recording14
23	Date of recording14
24	Battery level indicator18
25	File number and type
26	Eye-Fi communication indicator

The Basics of Shooting and Playback

Preparation 1 Insert the Batteries

- Open the battery-chamber/memory card slot cover.
 - Hold the camera upside down to prevent the batteries from falling out.



- 2 Insert the batteries.
 - Confirm that the positive (+) and negative (-) terminals are oriented correctly and insert the batteries.



3 Close the battery-chamber/memory card slot cover.



Applicable Batteries

- Two LR6/L40 (AA-size) alkaline batteries (included batteries)
- Two FR6/L91 (AA-size) lithium batteries
- Two EN-MH2 rechargeable Ni-MH (nickel metal hydride) batteries

Removing the Batteries

- Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/memory card slot cover.
- The camera, batteries, and memory card may be hot immediately after using the camera.

Notes About the Batteries

- Do not combine old and new batteries or batteries of different makes or types.
- Batteries with the following defects cannot be used:







d d

Batteries with insulation that does not cover the area around the negative terminal

negative terminal

Battery Type

By setting **Battery type** in the setup menu (\square 70) to match the type of batteries inserted in the camera, the batteries can perform more efficiently.

The default setting is the type of batteries included with purchase.

Alkaline Batteries

Performance of alkaline batteries may vary greatly depending on the manufacturer. Choose a reliable brand.

Preparation 2 Insert a Memory Card

- **1** Turn off the camera and open the battery-chamber/memory card slot cover.
 - Hold the camera upside down to prevent the batteries from falling out.



- **2** Insert the memory card.
 - Slide the memory card in until it clicks into place.



Memory card slot



Inserting the memory card upside down or backwards could damage the camera and the memory card.



3 Close the battery-chamber/memory card slot cover.



Formatting Memory Cards

The first time you insert a memory card that has been used in another device into this camera, make sure to format it with this camera, Insert the card into the camera, press the MENU button, and select Format card in the setup menu.

Removing Memory Cards

Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/ memory card slot cover.

Gently push the memory card into the camera (1) to partially eiect the card (2)



High Temperature Caution

The camera, batteries, and memory card may be hot immediately after using the camera.


Internal Memory and Memory Cards

Camera data, including images and movies, can be saved either in the camera's internal memory or on a memory card. To use the camera's internal memory, first remove the memory card.

Preparation 3 Setting the Display Language, Date, and Time

When the camera is turned on for the first time, the language-selection screen and the date and time setting screen for the camera clock are displayed.

- If you exit without setting the date and time, will flash when the shooting screen is displayed.
- **1** Press the power switch to turn on the camera.

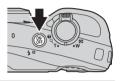





3 Select **Yes** and press the **®** button.



4 Select your home time zone and press the (8) button.

To enable daylight saving time, press ▲.
When the daylight saving time function is enabled, ⑤ is displayed above the map. To turn off the daylight saving time function, press ▼.





Select the date format and press the button.



- **6** Set the date and time, and press the ® button.

 - Edit the date and time: Press ▲▼.
 - Confirm the setting: Select the minute field and press the
 button.



7 Select **Yes** and press the ® button.



8 Press the **D** button.

• The shooting-mode selection screen is displayed.



When Easy auto mode is displayed, press the button.

- To switch to another shooting mode, press ▲▼ before pressing the button.



Changing the Language Setting and the Date and Time Setting

- You can change these settings using the **Language** and **Time zone and date** settings in the **∀** setup menu (□ 69).

The Clock Battery


- The camera's clock is powered by a built-in backup battery. The backup battery charges when the
 main batteries are inserted into the camera or when the camera is connected to an optional AC
 adapter, and it can run the clock for several days after about ten hours of charging.
- If the camera's backup battery becomes exhausted, the date and time setting screen is displayed
 when the camera is turned on. Set the date and time again. See step 3 (\(\sigma\) 14) of "Preparation 3
 Setting the Display Language, Date, and Time" for more information.

Imprinting the Shooting Date on Printed Images

- You can permanently imprint the shooting date on images as they are captured by setting **Print date** in the setup menu (page 169).
- If you want the shooting date to be printed without using the **Print date** setting, print using the ViewNX 2 software (\(\superscript{\

Step 1 Turn the Camera On

- 1 Press the power switch.
 - The monitor turns on.
 - To turn the camera off, press the power switch again.

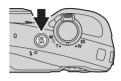

2 Check the battery level indicator and the number of exposures remaining.

Battery level indicator

Display	Description			
The battery level is high.				
The battery level is low.				
Battery exhausted.	The camera cannot capture images. Replace the batteries.			



Battery level indicator

Number of exposures
remaining

Number of Exposures Remaining


The number of images that can be taken is displayed.

• In is displayed when no memory card is inserted in the camera, and images are saved in the internal memory.



When you need to use the flash, such as when shooting in dark locations or when the subject is backlit, slide the $\mbox{\ensuremath{\$}}\mbox{\ensuremath{\$$

The Auto Off Function

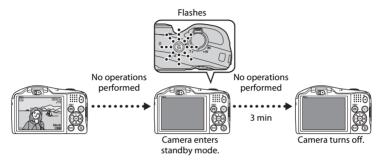

- The time that elapses before the camera enters standby mode is about one minute. The time can be changed using the **Auto off** setting in the setup menu (\(\simega\) 70).
- While the camera is in standby mode, the monitor turns back on if you perform any of the following operations:
 - → Press the power switch, shutter-release button,

 (shooting mode) button,

 (playback) button, or

 (* movie-record) button

Step 2 Select a Shooting Mode

1 Press the D button.



- Use the multi selector ▲▼ to select a shooting mode and press the
 w button.
 - 🗖 (easy auto) mode is used in this example.
 - The shooting mode setting is saved even after the camera is turned off.





Available Shooting Modes

Easy auto mode Q 29

The camera automatically selects the optimum scene mode when you frame an image, making it even easier to take images using settings that suit the scene.

☼ Scene mode □ 30

Camera settings are optimized according to the scene that you select.

- Smart portrait ☐ 37

When the camera detects a smiling face, you can take an image automatically without pressing the shutter-release button (smile timer). You can also use the skin softening option to smooth the skin tones of human faces.

Auto mode 🕮 39

Used for general shooting. Settings can be adjusted to suit the shooting conditions and the type of shot you want to capture.

Step 3 Frame a Picture

1 Hold the camera steady.

 Keep fingers and other objects away from the lens, flash, AF-assist illuminator, microphone, and speaker.





2 Frame the picture.

 When the camera automatically determines the scene mode, the shooting mode icon changes (29).

Shooting mode icon



Notes About Easy Auto Mode

- Depending upon shooting conditions, the camera may not select the desired scene mode. In this case, select another shooting mode (☐ 30, 35, 37, 39).
- When the digital zoom is in effect, the scene mode changes to ...

When Using a Tripod

- We recommend using a tripod to stabilize the camera in the following situations.
 - When shooting in dim lighting
 - When the flash is lowered or when using a shooting mode in which the flash does not fire
 - When using the telephoto setting
- When using a tripod to stabilize the camera during shooting, set **Vibration reduction** to **Off** in the setup menu (69) to prevent potential errors caused by this function.

Using the Zoom


When you move the zoom control, the zoom lens position changes.

- To zoom in closer to the subject: Move toward **T** (telephoto)
- To zoom out and view a larger area: Move toward **W** (wide-angle)

When you turn the camera on, the zoom moves to the maximum wide-angle position.

- The zoom operates quickly when you rotate the zoom control fully (except when recording movies).
- A zoom indicator is displayed at the top of the monitor when the zoom control is moved.
- Digital zoom, which allows you to further magnify the subject up to approximately 2x the maximum optical zoom ratio, can be activated by moving and holding the

zoom control toward ${\bf T}$ when the camera is zoomed in to the maximum optical zoom position.

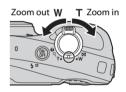




Digital Zoom and Interpolation

While using digital zoom, the image quality decreases due to interpolation when the zoom is increased beyond the position. The position of moves to the right as the size of an image decreases.



Step 4 Focus and Shoot

- **1** Press the shutter-release button halfway.
 - When the subject is in focus, the focus area glows green (multiple focus areas can glow green).
 - When you are using digital zoom, the camera focuses on the subject in the center of the frame and the focus area is not displayed. When the camera has focused, the focus indicator (\(\simeq\simeq\)7) glows green.
 - If the focus area or focus indicator flashes, the camera is unable to focus. Modify the composition and try pressing the shutter-release button halfway again.

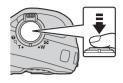



2 Without lifting your finger, press the shutter-release button the rest of the way down.



The Shutter-release Button

Press halfway



To set focus and exposure (shutter speed and aperture value). press the shutter-release button lightly until you feel a slight resistance. Focus and exposure remain locked while the shutterrelease button is pressed halfway.

Press all the way



Press the shutter-release button all the way to release the shutter and take an image.

Do not use force when pressing the shutter-release button, as this may result in camera shake and blurred images. Press the button gently.




Notes About Saving Images and Recording Movies


The indicator showing the number of exposures remaining or the indicator showing the maximum movie length flashes while images are being saved or while a movie is being recorded. **Do not open** the battery-chamber/memory card slot cover or remove the batteries or memory card while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.

Step 5 Play Back Images

- **1** Press the **▶** (playback) button.
 - If you press and hold down the (playback) button
 while the camera is turned off, the camera turns on in
 playback mode.

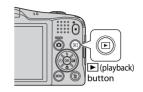

- **2** Use the multi selector to select an image to display.
 - Press and hold down ▲▼◀► to scroll through the images quickly.
 - To return to shooting mode, press the button or shutter-release button.

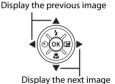



Step 6 Delete Images

1 Press the ibutton to delete the image currently displayed in the monitor.



- 2 Use the multi selector ▲▼ to select the desired deletion method and press the ® button.
 - To exit without deleting, press the MENU button.



- **3** Select **Yes** and press the **(B)** button.
 - Deleted images cannot be recovered.
 - To cancel, select **No** and press the (N) button.



Operating the Erase Selected Images Screen

- 1 Use the multi selector ◆▶ to select an image to be deleted, and then use ▲ to display ∰.
 - To undo the selection, press ▼ to remove 📆
 - Move the zoom control (□ 1) toward T (Q) to switch to full-frame playback or W (□ 1) to switch to thumbnail playback.



- Add to all images that you want to delete and then press the button to confirm the selection.
 - A confirmation dialog is displayed. Follow the instructions displayed in the monitor.

V Deleting Images in a Sequence

- If you press the mutter button and delete a key picture while only key pictures are displayed for sequences of images (QQ 62), all images in the sequence, including the key picture, are deleted.
- To delete individual images in a sequence, press the 🔞 button to display them one at a time and press the 🛍 button.

Deleting the Last Image Captured While in Shooting Mode

When using shooting mode, press the to button to delete the last image that was saved.

Shooting Features

(Easy Auto) Mode

The camera automatically selects the optimum scene mode when you frame an image, making it even easier to take images using settings that suit the scene.

Enter shooting mode \Rightarrow \bigcirc (shooting mode) button \Rightarrow \bigcirc (easy auto) mode \Rightarrow \bigcirc button

Automatic Scene Selection

When the camera selects a scene mode, the shooting mode icon displayed in the shooting screen changes to that for the scene mode currently enabled.

- Portrait (close-ups of one or two people)
- Portrait (shots of three or more people, shots with large areas of background)
- Landscape
- Night portrait (close-ups of one or two people)
- Night portrait (shots of three or more people, shots with large areas of background)
- Night landscape
- Close-up
- Backlighting (shots with no people in them)
- Backlighting (shots with people in them)
- Other scenes

Functions Available in 🗖 (Easy Auto) Mode

- Self-timer (44)
- Exposure compensation (\$\sum 47\$)
- Easy auto mode menu (50)

Scene Mode (Shooting Suited to Scenes)

When a scene is selected, camera settings are automatically optimized for the selected scene.

Enter shooting mode $\rightarrow \square$ (shooting mode) button $\rightarrow 2$ (second icon from the top*) $\rightarrow \square$ $\rightarrow \square$ $\rightarrow \square$ select a scene $\rightarrow \square$ button

* The icon of the last scene selected is displayed.

Portrait (default setting)	■ Landscape ²	₹ Sports ¹ (□ 31)	Night portrait (\(\sum 31\)
Party/indoor ¹ (\(\superstriangle 31)	₽ Beach ¹	₿ Snow ¹	Sunset ^{1, 3}
≐ Dusk/dawn ^{2, 3}	Night landscape ² (\(\simega\) 32)	Close-up ¹ (\(\sup 32\)	Food ¹ (\(\Omega\) 32)
<u>■</u> Museum ¹ (□ 33)	Fireworks show ^{2, 3} (\(\simega\) 33)	Black and white copy ¹ (33)	Backlighting ¹ (\bigcirc 33)
Easy panorama ¹ (CC) 33)	Pet portrait (\(\Omega\) 34)		

¹ The camera focuses on the area in the center of the frame.

To View a Description (Help Display) of Each Scene

Select a scene and move the zoom control (\square 1) toward T(?) to view a description of that scene. To return to the original screen, move the zoom control toward T(?) again.



The camera focuses at infinity.

³ Use of a tripod is recommended, because the shutter speed is slow. Set **Vibration reduction** to **Off** in the setup menu (QQ 69) when using a tripod to stabilize the camera during shooting.

Tips and Notes

Sports

- While the shutter-release button is held all the way down, the camera shoots up to about 6
 images continuously at a rate of about 2 fps (when Image mode is set to 18 4896×3672).
- The frame rate for continuous shooting may vary depending upon the current image mode setting, the memory card used, or shooting condition.
- Focus, exposure, and hue are fixed at the values determined with the first image in each series.

Night portrait

- · The flash always fires. Raise the flash before shooting.
- From the screen displayed after **Night portrait** is selected, select **Hand-held** or **Tripod**.
- Hand-held (default setting):
 - When the **■** icon at the top left of the monitor glows green, press the shutter-release button all the way to capture a series of images which are combined into a single image and saved.
 - Once the shutter-release button is pressed all the way, hold the camera still until a still image is displayed. After taking an image, do not turn the camera off before the monitor switches to the shooting screen.
 - If the subject moves while the camera is shooting continuously, the image may be distorted, overlapped, or blurred.

Tripod:

- One image is captured at a slow shutter speed when the shutter-release button is pressed all the way.
- Vibration reduction is disabled even when Vibration reduction (\$\sum_{\text{0}}\$ 69) in the setup menu is set to \$\mathbf{O}n\$.

XX Party/indoor

To avoid the effects of camera shake, hold the camera steady. Set Vibration reduction to Off
in the setup menu (69) when using a tripod to stabilize the camera during shooting.

■ Night landscape

- From the screen displayed after Might landscape is selected, select Hand-held or Tripod.
 Hand-held (default settino):
 - When the **i** icon at the top left of the monitor glows green, press the shutter-release button all the way to capture a series of images which are combined into a single image and saved.
 - Once the shutter-release button is pressed all the way, hold the camera still until a still image is displayed. After taking an image, do not turn the camera off before the monitor switches to the shooting screen.

Tripod:

- One image is captured at a slow shutter speed when the shutter-release button is pressed all the way.
- Vibration reduction is disabled even when Vibration reduction (\$\sum_{\text{0}}\$ 69) in the setup menu is set to \$\mathbf{O}n\$.

Close-up

Macro mode (\$\sum 46\$) is enabled and the camera automatically zooms to the closest position at
which it can focus.

¶¶ Food

- Macro mode (
 46) is enabled and the camera automatically zooms to the closest position at
 which it can focus.



<u>m</u> Museum

- The camera captures a series of up to ten images while the shutter-release button is held all the
 way down, and the sharpest image in the series is automatically selected and saved (BSS (Best
 Shot Selector)).
- · The flash does not fire.

Fireworks show

- The shutter speed is fixed at about four seconds.
- · Six zoom positions are available.

■ Black and white copy

• Use together with macro mode (46) when shooting subjects that are close to the camera.

Backlighting

• The flash always fires. Raise the flash before shooting.

□ Easy panorama

- From the screen displayed after
 Easy panorama is selected, select the shooting range from Normal (180°) or Wide (360°).
- The zoom position is fixed at wide-angle.
- Press the shutter-release button all the way down, remove your finger from the button, and then slowly pan the camera horizontally. Shooting ends when the camera captures the specified shooting range.
- · Focus and exposure are locked when shooting starts.
- If you press the button when a captured image is displayed in full-frame playback mode, the image scrolls automatically.
- · The images cannot be edited on this camera.

See "Using Easy Panorama (Shooting and Playback)" (2) for more information.

Notes About Printing Panorama Images

The entire image may not be able to be printed depending on the printer's settings. Additionally, printing may not be possible depending on the printer.

🐕 Pet portrait


- When you point the camera at a dog or cat, the camera detects the pet's face and focuses on it.
 By default, the shutter is automatically released when focus is acquired (pet portrait auto release).
- From the screen displayed after **77 Pet portrait** is selected, select **Single** or **Continuous**.
 - **Single**: Whenever the detected face is in focus, the camera captures one image.
 - Continuous: Whenever the detected face is in focus, the camera captures three images continuously.

Pet Portrait Auto Release

- Press the multi selector ◀ (🍪) to change the **Pet portrait auto release** settings.
 - The camera detects a dog or cat face and automatically releases the shutter when the detected face is in focus.
 - OFF: The camera does not release the shutter automatically, even if a dog or cat face is
 detected. Press the shutter-release button. The camera also detects human faces when OFF is
 selected.
- Pet portrait auto release is set to OFF after five bursts have been taken.
- Shooting is also possible by pressing the shutter-release button, regardless of the Pet portrait
 auto release setting. When Continuous is selected, you can take images continuously while
 holding down the shutter-release button all the way.

Focus Area

- When the camera detects a face, the face is displayed inside a
 yellow border. When the camera acquires focus on a face
 displayed inside a double border (focus area), the double border
 turns green. If no faces are detected, the camera focuses on the
 subject in the center of the frame.
- In some shooting conditions, the pet face may not be detected and other subjects may be displayed inside a border.

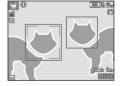

Special Effects Mode (Applying Effects When Shooting)

Effects can be applied to images during shooting.

Enter shooting mode \rightarrow \square (shooting mode) button \rightarrow \square (third icon from the top*) \rightarrow \triangleright \rightarrow \triangle \triangleleft \triangleright select an effect \rightarrow \square button



Category	Description			
High key (default setting)	Gives the entire image a bright tone.			
Low key	Gives the entire image a dark tone.			
S0 Soft	Softens the image by adding a slight blur to the entire image.			
SE Nostalgic sepia	Adds a sepia tone and reduces the contrast to simulate the qualities of an old photograph.			
High-contrast monochrome	Changes the image to black and white and gives it sharp contrast.			
Selective color	Creates a black and white image in which only the specified color remains.			

^{*} The icon of the last effect selected is displayed.

- The camera focuses on the area in the center of the frame.
- When Selective color is selected, use the multi selector
 To select the desired color from the slider.

To change settings for any of the following functions, press the **®** button to cancel color selection.

- Flash mode (QQ 41)
- Self-timer (QQ 44)
- Macro mode (QQ 46)
- Exposure compensation (QQ 47)

To return to the color selection screen, press the $\ensuremath{\mathfrak{G}}$ button again.



Slider

Smart Portrait Mode (Capturing Images of Smiling Faces)

When the camera detects a smiling face, you can take an image automatically without pressing the shutter-release button (smile timer (\square 51)). You can use the skin softening option to smooth the skin tones of human faces.

Enter shooting mode $\Rightarrow \Box$ (shooting mode) button $\Rightarrow \boxdot$ Smart portrait mode \Rightarrow 8 button

- 1 Frame the picture.
 - · Point the camera at a human face.
- Without pressing the shutter-release button, wait for the subject to smile.
 - If the camera detects that the face framed by the double border is smiling, the shutter is automatically released.
 - · Whenever the camera detects a smiling face, it automatically releases the shutter.
- **3** End automatic shooting.
 - Perform one of the operations listed below to end shooting.
 - Set Smile timer to Off.
 - Press the button and select a different shooting mode.

Notes About Smart Portrait Mode

Under some shooting conditions, the camera may be unable to detect faces or detect smiles (\square 54). The shutter-release button can also be used for shooting.

When the Self-timer Lamp Flashes

When using smile timer, the self-timer lamp flashes when the camera detects a face and flashes quickly immediately after the shutter is released.

Functions Available in Smart Portrait Mode

- Flash mode (41)
 Self-timer (44)
- Exposure compensation (47)
 Smart portrait menu (50)

(Auto) Mode

Used for general shooting. Settings can be adjusted to suit the shooting conditions and the type of shot you want to capture.

Enter shooting mode \Rightarrow \square (shooting mode) button \Rightarrow \square (auto) mode \Rightarrow \square button

You can change how the camera selects the area of the frame to focus on by changing the
 AF area mode setting (\$\sqrt{1}\$).

The default setting is **Target finding AF** (\square 56).

Functions Available in 🗖 (Auto) Mode

- Flash mode (QQ 41)
- Self-timer (44)
- Macro mode (46)
- Exposure compensation (QQ 47)
- Shooting menu (50)

Functions That Can Be Set Using the Multi Selector

The functions that are available vary with the shooting mode, as shown below.



		(easy auto)	Scene	Special effects	Smart portrait	(auto)
1	‡ Flash mode ¹ (◯◯ 41)	-		~	✓ ²	~
2	♦ Self-timer (□ 44)	~		~	✓ ²	~
3	₩ Macro (QQ 46)	-	2	~	-	~
4	Exposure compensation (QQ 47)	~		~	~	~

Can be set when the flash is raised. The flash does not fire while it is lowered.

² Availability depends on the setting.


Using the Flash

In dark locations or when the subject is backlit, you can take images with the flash by raising the flash.

When using \(\begin{align*} \oldsymbol{(auto)} \) mode and other shooting modes, you can select the flash mode to match the shooting conditions.

1 Slide the **♦ ©** (flash pop-up) control.

- · The flash pops up.
- The flash does not fire while it is lowered. **3** is displayed to indicate that the flash does not fire.

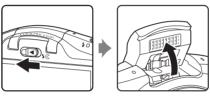

2 Press the multi selector **▲** (‡).



- 3 Select the desired flash mode (☐ 42) and press the ௵ button.
 - If a setting is not applied by pressing the button within a few seconds, the selection will be canceled.



Available Flash Modes

\$AUTO Auto

The flash fires when necessary, such as in dim lighting.

• The flash mode icon on the shooting screen is displayed only immediately after the setting is made.

4 Auto with red-eye reduction

Reduce red-eye in portraits caused by the flash (QQ 43).

Fill flash

The flash fires whenever an image is taken. Use to "fill-in" (illuminate) shadows and backlit subjects.

\$SIDW Slow sync

Suited to evening and night portraits that include background scenery. The flash fires when necessary to illuminate the main subject; slow shutter speeds are used to capture background at night or under dim lighting.

• Lower the flash when you do not want the flash to fire.

Lowering the Flash

Push the flash down gently to lower the flash until it clicks into place when not in use (3).

The Flash Lamp

The status of the flash can be confirmed by pressing the shutterrelease button halfway.

- On: The flash fires when you press the shutter-release button all the way down.
- Flashing: The flash is charging. The camera cannot shoot images.
- Off: The flash does not fire when an image is taken.

If the battery level is low, the monitor turns off while the flash is charging.



The Flash Mode Setting

- The setting may not be available with some shooting modes.
- The setting applied in (auto) mode is saved in the camera's memory even after the camera is turned off.

Red-eye Reduction

If the camera detects red eye while saving an image, the affected area is processed to reduce redeye before the image is saved.

Note the following when shooting:

- · More time than usual is required to save images.
- Red-eye reduction may not produce the desired results in all situations.
- In some cases, red-eye reduction may be applied to areas of an image unnecessarily. In these
 cases, select another flash mode and take the image again.

Using the Self-timer

The camera is equipped with a self-timer that releases the shutter about ten seconds after you press the shutter-release button.

Set **Vibration reduction** to **Off** in the setup menu (\square 69) when using a tripod to stabilize the camera during shooting.

1 Press the multi selector ◀ (🖒).



2 Select **ON** and press the **®** button.

- If a setting is not applied by pressing the 🕦 button within a few seconds, the selection will be canceled.



Frame the picture and press the shutter-release button halfway.

· Focus and exposure are set.





4 Press the shutter-release button the rest of the way down.

- Countdown starts. The self-timer lamp flashes and then glows steadily about one second before the shutter is released.
- When the shutter is released, the self-timer is set to **OFF**.
- To stop the countdown, press the shutterrelease button again.







Using Macro Mode

Use macro mode when taking close-up images.

1 Press the multi selector **▼** (**♀**).



- **2** Select **ON** and press the **®** button.
 - If a setting is not applied by pressing the **(B)** button within a few seconds, the selection will be canceled.



3 Move the zoom control to set the zoom ratio to a position where ⊕ and the zoom indicator glow green.



When the zoom ratio is set to a position where
 \$\overline{\Omega}\$ and the zoom indicator glow green, the camera can focus on subjects as close as approximately 10 cm (4 in.) from the lens.
 When the zoom is at the position where is displayed, the camera can focus on subjects as close as approximately 1 cm (0.4 in.) from the lens.

Notes About Using the Flash

The flash may be unable to light the entire subject at distances of less than 50 cm (1 ft 8 in.).

The Macro Mode Setting

- The setting may not be available with some shooting modes.
- The setting applied in (auto) mode is saved in the camera's memory even after the camera is turned off.

Adjusting Brightness (Exposure Compensation)

You can adjust overall image brightness.

1 Press the multi selector ► (🔀).



- 2 Select a compensation value and press the ® button.
 - To brighten the image, set a positive (+) value.
 - To darken the image, set a negative (-) value.
 - The compensation value is applied, even without pressing the
 Button.



Exposure Compensation Value

The setting applied in 🗖 (auto) mode is saved in the camera's memory even after the camera is turned off

Default Settings

Default settings for each shooting mode are described below.

	Flash ¹ (41)	Self-timer (44)	Macro (◯◯ 46)	Exposure compensation (QQ 47)
(easy auto)	\$ AUTO ²	Off	Off ³	0.0
Scene				
💈 (portrait)	\$®	Off	Off ⁴	0.0
(landscape)	③ ⁴	Off	Off ⁴	0.0
🔾 (sports)	③ ⁴	Off ⁴	Off ⁴	0.0
(night portrait)	\$⊚ ⁵	Off	Off ⁴	0.0
💥 (party/indoor)	\$⊚ 6	Off	Off ⁴	0.0
(beach)	\$ AUTO	Off	Off ⁴	0.0
(snow)	\$ AUTO	Off	Off ⁴	0.0
(sunset)	3 ⁴	Off	Off ⁴	0.0
≐ (dusk/dawn)	3 ⁴	Off	Off ⁴	0.0
(night landscape)	3 ⁴	Off	Off ⁴	0.0
🗱 (close-up)	③	Off	On ⁴	0.0
¶¶ (food)	3 ⁴	Off	On ⁴	0.0
<u>■</u> (museum)	③ ⁴	Off	Off	0.0
(fireworks show)	③ ⁴	Off ⁴	Off ⁴	0.04
(black and white copy)	③	Off	Off	0.0
(backlighting)	\$ ⁴	Off	Off ⁴	0.0
(easy panorama)	③ ⁴	Off ⁴	Off ⁴	0.0
🙀 (pet portrait)	3 ⁴	ਛ ੱ ⁷	Off	0.0
(special effects)	\$ AUTO	Off	Off	0.0
≅ (smart portrait)	≯ AUTO ⁸	Off ⁹	Off ⁴	0.0
(auto)	\$ AUTO	Off	Off	0.0

- ¹ The setting that is used when the flash is raised.
- ² The setting cannot be changed. The camera automatically selects the flash mode appropriate for the scene it has selected.
- ³ The setting cannot be changed. Automatically changes to macro mode when the camera selects **Close-up**.
- ⁴ The setting cannot be changed.
- 5 The setting cannot be changed. The flash mode setting is fixed at fill flash with slow sync and redeye reduction.
- ⁶ Slow sync with red-eye reduction flash mode may be used.
- ⁷ Self-timer cannot be used. Pet portrait auto release can be turned on or off (\square 34).
- ⁸ Cannot be used when **Blink proof** is set to **On** or when **Smile timer** is set to **On (BSS)**.
- ⁹ Can be set when **Smile timer** is set to **Off**.

Functions That Can Be Set with the MENU Button (Shooting Menu)

The settings listed below can be changed by pressing the **MENU** button during shooting.



The settings that can be changed vary depending on the shooting mode, as shown below.

	Easy auto mode	Scene	Special effects	Smart portrait	Auto mode
Image mode*	~	~	~	~	~
White balance	-	-	-	-	~
Continuous	-	-	-	-	~
ISO sensitivity	-	-	-	-	~
Color options	-	-	-	-	~
AF area mode	-	-	-	-	~
Skin softening	-	-	-	~	-
Smile timer	-	-	-	~	
Blink proof	-	-	-	~	-

^{*} The setting is also applied to other shooting modes.

Options Available in the Shooting Menu

Option	Description	
Image mode	Allows you to set the combination of image size and image quality used when saving images. • Default setting: 13 4896×3672	
White balance	Allows you to adjust white balance to suit the weather conditions or light source in order to make the colors in images match what you see with your eyes. • Default setting: Auto	
Continuous	Allows you to select single or continuous shooting. • Default setting: Single	⇔ 38
ISO sensitivity	Allows you to control the camera's sensitivity to light. • Default setting: Auto When Auto is selected, ISO is displayed in the monitor while shooting if ISO sensitivity increases.	6-6 40
Color options	Allows you to change the color tones of images. • Default setting: Standard color	6-6 41
AF area mode	Allows you to determine how the camera selects the focus area that is used for autofocus. • Default setting: Target finding AF (6-6 42
Skin softening	Allows you to make the skin tones in human faces smoother. • Default setting: On	6−0 43
Smile timer	Allows you to select whether or not the camera automatically releases the shutter when it detects a human smiling face. • Default setting: On (BSS)	6-6 44
Blink proof	The camera automatically releases the shutter twice with every shot and saves one image in which the subject's eyes are open. • Default setting: Off	6−6 45

Functions That Cannot Be Used Simultaneously

Some functions cannot be used with other menu options.

Restricted function	Option	Description
	Continuous (CC 51)	When a setting other than Single is selected, the flash cannot be used.
Flash mode	Smile timer (CC 51)	When On (BSS) is selected, the flash cannot be used.
	Blink proof (CC 51)	When Blink proof is set to On , the flash cannot be used.
Self-timer	Smile timer (🕮 51)	When Smile timer is selected, the self-timer cannot be used.
lmage mode	Continuous (CC 51)	Image mode is set as follows depending on the continuous shooting setting: Continuous H: 120 fps: (image size: 640 x 480 pixels) Continuous H: 60 fps: (image size: 1920 x 1080 pixels) Multi-shot 16: (image size: 2560 x 1920 pixels)
White balance	Color options (CC) 51)	When Black-and-white, Sepia, or Cyanotype is selected, the White balance setting is fixed at Auto.
ISO sensitivity	Continuous (🕮 51)	When Continuous H: 120 fps, Continuous H: 60 fps, or Multi-shot 16 is selected, the ISO sensitivity setting is automatically specified according to the brightness.
AF area mode	White balance (◯ 51)	When a setting other than Auto is selected for White balance in Target finding AF mode, the camera does not detect the main subject.
Smile timer	Blink proof (CC 51)	When Smile timer is set to On (BSS) , it changes and is fixed at On (single) if Blink proof is set to On .

Restricted function	Option	Description
Blink proof Smile timer (\$\sup\$ 51) When Smile timer is set to On (BSS) , Bli fixed at Off .		When Smile timer is set to On (BSS) , Blink proof is fixed at Off .
		When Continuous H: 120 fps or Continuous H: 60 fps is selected, date and time cannot be imprinted on images.
	Flash mode (41)	When the flash fires, Motion detection is disabled.
Motion detection	Continuous (CC 51)	When a setting other than Single is selected, Motion detection is disabled.
	ISO sensitivity (QQ 51)	When the ISO sensitivity is set to any setting other than Auto , Motion detection is disabled.
	Smile timer (CC 51)	When On (BSS) is selected, Motion detection is disabled.
Digital zoom Continuous (QQ 51)		When Multi-shot 16 is selected, digital zoom cannot be used.
Shutter sound	Continuous (CC 51)	When a setting other than Single is selected, the shutter sound is disabled.

Notes About Digital Zoom

- Depending on the shooting mode or the current settings, digital zoom may not be available (\$\infty\$ 70).
- When digital zoom is in effect, the camera focuses in the center of the frame.


Focusing

The focus area varies depending on the shooting mode.

Using Face Detection

In the following shooting modes, the camera uses face detection to automatically focus on human faces.

- ☑/☒ Portrait, ☒/☒ Night portrait, or ☒ Backlighting in ☒ (easy auto) mode (☒ 29)
- Portrait or Night portrait in scene mode (30)
- Smart portrait mode (CC 37)

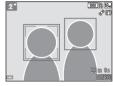

If the camera detects more than one face, a double border is displayed around the face that the camera focuses on, and single borders are displayed around the other faces.

If no faces are detected when the shutter-release button is pressed halfway, the camera focuses on the subject in the center of the frame.

Notes About Face Detection

- The camera's ability to detect faces depends on a variety of factors, including the direction in which the faces are looking.
- The camera may be unable to detect faces in the following situations:
 - When faces are partially hidden by sunglasses or otherwise obstructed
 - When faces take up too much or too little of the frame

Using Skin Softening

When the shutter is released while using one of the shooting modes listed below, the camera detects human faces and processes the image to soften facial skin tones (up to three faces).

- Smart portrait mode (QQ 37)
- Portrait, Night portrait, or Backlighting in (easy auto) mode (29)
- Portrait or Night portrait in scene mode (30)

Skin softening can also be applied to saved images (□ 61, € 17).

Notes About Skin Softening

- It may take more time than usual to save images after shooting.
- Under some shooting conditions, the desired skin softening results may not be achieved, and skin softening may be applied to areas of the image where there are no faces.

Using Target Finding AF

When **AF area mode** (51) in (auto) mode is set to **Target finding AF**, the camera focuses in the manner described below when you press the shutter-release button halfway:


 The camera detects the main subject and focuses on it.
 When the subject is in focus, the focus area glows green. If a human face is detected, the camera automatically sets focus priority on it.



Focus area

 If no main subject is detected, the camera automatically selects one or more of the nine focus areas containing the subject closest to the camera.

When the subject is in focus, the focus areas that are in focus glow green.

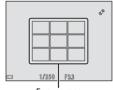

Focus areas

Notes About Target Finding AF

- Depending on shooting conditions, the subject that the camera determines to be the main subject may vary.
- The main subject may not be detected when using certain **White balance** settings.
- The camera may not detect the main subject appropriately in the following situations:
 - When the subject is very dark or bright
 - When the main subject lacks clearly defined colors
 - When the shot is framed so that the main subject is at the edge of the monitor
 - When the main subject is composed of a repeating pattern

Subjects Not Suitable for Autofocus

The camera may not focus as expected in the following situations. In some rare cases, the subject may not be in focus despite the fact that the focus area or the focus indicator glows green:

- Subject is very dark
- Objects of sharply differing brightness are included in the scene (e.g. the sun behind the subject makes that subject appear very dark)
- No contrast between the subject and surroundings (e.g. a portrait subject wearing a white shirt is standing in front of a white wall)
- Several objects are at different distances from the camera (e.g. the subject inside a cage)
- Subjects with repeating patterns (window blinds, buildings with multiple rows of similarly shaped windows, etc.)
- · Subject is moving rapidly

In the situations noted above, try pressing the shutter-release button halfway to refocus several times, or focus on another subject positioned at the same distance from the camera as the actual desired subject, and use focus lock (\square 58).

Focus Lock

Focus lock shooting is recommended when the camera does not activate the focus area that contains the desired subject.

- 1 Set **AF area mode** to **Center** in **(auto)** mode (**()** 51).
- 2 Position the subject in the center of the frame and press the shutter-release button halfway.
 - · Confirm that the focus area glows green.
 - · Focus and exposure are locked.





- Without lifting your finger, recompose the picture.
 - Make sure to maintain the same distance between the camera and the subject.



4 Press the shutter-release button the rest of the way down to take the picture.



Playback Features

Playback Zoom

Moving the zoom control toward ${\bf T}(Q)$ in full-frame playback mode (\square 26) zooms in on the image.



- You can change the zoom ratio by moving the zoom control toward W (■) or T (९).
- To view a different area of the image, press the multi selector ▲▼◀▶.
- When a zoomed image is displayed, press the button to return to full-frame playback mode.

Ø Cropping Images

When a zoomed image is displayed, you can press the **MENU** button to crop the image to include only the visible portion and save it as a separate file ($\bullet \bullet$ 21).

Thumbnail Playback, Calendar Display

Moving the zoom control toward \mathbf{W} (\blacksquare) in full-frame playback mode (\square 26) displays images as thumbnails.



Full-frame Playback

Thumbnail Playback

Calendar Display

- You can change the number of thumbnails displayed by moving the zoom control toward
 W () or T (Q).
- While using thumbnail playback mode, press the multi selector ▲▼◀▶ to select an image and then press the ඔ button to display that image full-frame.
- While using calendar display mode, press ▲▼◀► to select a date and then press the white using calendar display mode, press ▲▼

Notes About Calendar Display

Images captured when the camera's date is not set are treated as images captured on January 1, 2013

Functions That Can Be Set with the MENU Button (Playback Menu)

When viewing images in full-frame playback mode or thumbnail playback mode, you can configure the menu operations listed below by pressing the **MENU** button.

Option	Description	ш
Quick retouch*	Allows you to create retouched copies in which contrast and saturation have been enhanced.	6−6 15
D-Lighting*	Allows you to create copies with enhanced brightness and contrast, brightening dark portions of an image.	6−6 15
Red-eye correction*	Corrects the red-eye effect that sometimes appears in the eyes when shooting using the flash.	6−6 16
Skin softening*	The camera detects human faces in images and creates a copy with softer facial skin tones.	6−6 17
Filter effects*	Digital filter effects can be used to apply a variety of effects to images.	6 €018
Print order	Allows you to select which images are printed, and how many copies of each image are printed, prior to printing.	6–6 46
Slide show	Allows you to view images in an automatic slide show.	6-6 50
Protect	Protects selected images from accidental deletion.	∂−6 51
Rotate image	Allows you to rotate the displayed image to portrait or landscape orientation.	6 €53
Small picture*	Creates a small copy of images.	6-6 20
Voice memo	Allows you to use the camera's microphone to record voice memos and attach them to images.	6-6 54
Сору	Allows you to copy images between the internal memory and a memory card.	6 €55

Option	Description	TI I
Sequence display options	Allows you to select whether to display only the key picture for a sequence of images captured continuously, or to display the sequence as individual images. When only the key picture is displayed for a sequence, press the button to display each image in the sequence. Press the multi selector to return to the key picture display.	6-6 57
Choose key picture	Allows you to change the key picture for images captured in sequence.	∂= 057
Favorite pictures	Allows you to add images to an album. This option is not displayed in favorite pictures mode.	6 €6
Remove from favorites	Allows you to remove images from an album. This option is displayed only in favorite pictures mode.	≈ 8

^{*} Edited images are saved as separate files. Some images may not be edited.

Recording and Playing Back Movies

Recording Movies

- **1** Display the shooting screen.
 - · Check the remaining amount of movie recording time.



Movie recording time remaining

- 2 Press the (T movie-record) button to start movie recording.
 - The camera focuses on the subject in the center of the frame.





3 Press the ● (*★ movie-record) button again to end recording.

Maximum Movie Length

Individual movie files cannot exceed 4 GB in size or 29 minutes in length, even when there is sufficient free space on the memory card for longer recording.

- The maximum movie length for a single movie is displayed on the shooting screen.
- Recording may end before either limit is reached if camera temperature becomes elevated.
- The actual movie length may vary depending on the movie content, subject movement, or type of memory card.

Notes About Saving Images and Recording Movies

The indicator showing the number of exposures remaining or the indicator showing the maximum movie length flashes while images are being saved or while a movie is being recorded. **Do not open the battery-chamber/memory card slot cover or remove the batteries or memory card** while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.

Notes About Movie Recording

- Memory cards with an SD Speed Class rating of 6 or faster are recommended when recording
 movies (20). Movie recording may stop unexpectedly when memory cards with a lower Speed
 Class rating are used.
- There may be some degradation in image quality when digital zoom is used.
- The sounds of zoom control operation, zoom, autofocus lens drive movement, vibration reduction, and aperture operation when brightness changes may be recorded.
- The following phenomena may be seen in the monitor while recording movies. These phenomena are saved in the recorded movies.
 - Banding may occur in images under fluorescent, mercury-vapor, or sodium-vapor lighting.
 - Subjects that move quickly from one side of the frame to the other, such as a moving train or car, may appear skewed.
 - The entire movie image may be skewed when the camera is panned.
 - Lighting or other bright areas may leave residual images when the camera is moved.
- Depending on the distance to the subject or the amount of zoom applied, subjects with repeating patterns (fabrics, lattice windows, etc.) may have colored stripes (interference patterns, moire, etc.) in them during movie recording and playback. This occurs when the pattern in the subject and the layout of the image sensor interfere with each other; it is not a malfunction.

Camera Temperature

- The camera may become warm when shooting movies for an extended period of time or when the camera is used in a hot area.
- If the inside of the camera becomes extremely hot when recording movies, the camera will automatically stop recording.

The amount of time remaining until the camera stops recording (**a** 10 s) is displayed. After the camera stops recording, it turns itself off

Leave the camera off until the inside of the camera has cooled.

Notes About Autofocus

Autofocus may not perform as expected (\$\sum_{57}\$). Should this occur, try the following:

- Set Autofocus mode in the movie menu to Single AF (default setting) before starting movie recording.
- 2. Frame another subject—positioned at the same distance from the camera as the intended subject—in the center of the frame, press the (*★ movie-record) button to start recording, and then modify the composition.

Functions That Can Be Set with the MENU Button (Movie Menu)

Enter shooting mode → MENU button → 🐂 menu icon → 🔞 button

The settings of the menu options listed below can be configured.



Option	Description	ш
Movie options	Select the movie type. Select normal speed to record movies at normal speed, or HS (high speed) to record movies that play in slow or fast motion. Default setting: 醋 1080 ★/30p or 醋 1080 ★/25p	∂− 058
Autofocus mode	Select either Single AF , which locks focus when movie recording begins, or Full-time AF , which continues focusing during movie recording. • Default setting: Single AF	6−0 61
Wind noise reduction	Set whether or not to reduce wind noise during movie recording. • Default setting: Off	6−0 61

Playing Back Movies

Press the ▶ button to enter playback mode.

Movies are indicated by the movie options icon (☐ 66).

Press the ❷ button to play back movies.



Movie options

• To adjust the volume, move the zoom control (QQ 1).




Volume indicator

Functions Available During Playback

Playback controls are displayed in the monitor.

The operations listed below can be performed by using the multi selector ◀▶ to select a control and then pressing the 函 button.

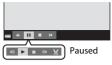

Function	lcon		Description	
Rewind	*	Hold do	own the 🚱 button to rewind the movie.	
Advance	>>	Hold do	own the 🚱 button to advance the movie.	
		Pause p	layback. The operations listed below can be performed while paused.	
Pause		411	Rewind the movie one frame. Hold down the ${\color{red} \Theta}$ button for continuous rewinding.	
		II>	Advance the movie one frame. Hold down the ${\color{red} \!\!\!\!\! \!$	
			Resume playback.	
		×	Extract the desired portion of a movie and save it as a separate file $(\bullet \bullet 31)$.	
End		Return to full-frame playback mode.		

Deleting Movies

To delete a movie, select the desired movie in full-frame playback mode (\square 26) or thumbnail playback mode (\square 60) and press the $\overleftarrow{\mathbf{m}}$ button (\square 27).

General Camera Setup

Functions That Can Be Set with the MENU Button (Setup Menu)

Press the MENU button → Y (setup) menu icon → (N) button

The settings of the menu options listed below can be configured.




Option	Description	Щ
Welcome screen	Allows you to select whether or not the welcome screen is displayed when the camera is turned on.	6 €62
Time zone and date	Allows you to set the camera clock.	6 €63
Monitor settings	Allows you to adjust photo information display, post-shooting image review, and monitor brightness settings.	65 65
Print date	Allows you to imprint the shooting date and time on images.	6−6 67
Vibration reduction	Allows you to select the vibration reduction setting used when shooting.	68
Motion detection	Allows you to set whether or not the camera automatically increases the shutter speed to reduce blurring caused by camera shake if motion is detected when shooting still images.	6 €69
AF assist	Allows you to enable and disable the AF-assist illuminator.	6-6 70
Digital zoom	Allows you to enable and disable digital zoom.	~ 70

Option	Description	m
Sound settings	Allows you to adjust sound settings.	6–6 71
Auto off	Allows you to set the amount of time that passes before the monitor turns off to save power.	6-6 71
Format memory/ Format card	Allows you to format the internal memory or the memory card.	6−6 72
Language	Allows you to change the camera's display language.	∂−6 73
TV settings	Allows you to adjust TV-connection settings.	∂−6 73
Blink warning	Allows you to set whether or not closed eyes are detected when taking images of people using face detection.	6–6 74
Eye-Fi upload	Allows you to set whether or not to enable the function for sending images to a computer using a commercially available Eye-Fi card.	6−6 75
Reset all	Allows you to reset the camera's settings to their default values.	∂= 076
Battery type	Change this setting to match the type of batteries that are inserted in the camera.	6-6 77
Firmware version	View the current camera firmware version.	6–6 77

Connecting the Camera to a TV, Computer, or Printer

Connection Methods

You can enhance your enjoyment of images and movies by connecting the camera to a TV, computer, or printer.

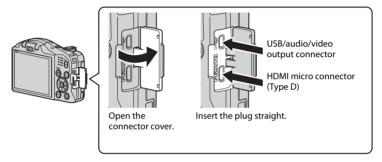

- Before connecting the camera to an external device, make sure the remaining battery level
 is sufficient and turn the camera off. Before disconnecting, make sure to turn the camera
 off.
- If the AC Adapter EH-65A (available separately) is used, this camera can be powered from an electrical outlet. Do not use any other make or model of AC adapter as it may cause the camera to heat up or malfunction.
- For information about the connection methods and subsequent operations, refer to the documentation included with the device in addition to this document.



Images and movies captured with the camera can be viewed on a TV. Connection method: Connect the video and audio plugs of the optional audio video cable to the TV's input jacks. Alternatively, connect a commercially available HDMI cable to the TV's HDMI input jack.

Viewing and organizing images on a computer





You can transfer images to a computer to perform simple retouching and manage image data.

Connection method: Connect the camera to the computer's USB port with the included USB cable.

 Before connecting to a computer, install ViewNX 2 on the computer (\(\superaction\) 73).

Printing images without using a computer





If you connect the camera to a PictBridge-compatible printer, you can print images without using a computer.

Connection method: Connect the camera directly to the printer's USB port with the USB cable.

Using ViewNX 2

ViewNX 2 is an all-in-one software package which enables you to transfer, view, edit and share images.

Install ViewNX 2 using the included ViewNX 2 CD-ROM.



Installing ViewNX 2

• An Internet connection is required.

Compatible Operating Systems

Windows

Windows 8, Windows 7, Windows Vista, Windows XP

Macintosh

Mac OS X 10.6, 10.7, 10.8

Refer to the Nikon website for details on system requirements, including the latest information on operating system compatibility.

Start the computer and insert the ViewNX 2 CD-ROM into the CD-ROM drive.

- Windows: If instructions for operating the CD-ROM are displayed in the window, follow the instructions to proceed to the installation window.
- Mac OS: When the **ViewNX 2** window is displayed, double-click the **Welcome** icon.

2 Select a language in the language selection dialog to open the installation window.

- If the desired language is not available, click Region Selection to choose a different region
 and then choose the desired language (the Region Selection button is not available in the
 European release).
- Click Next to display the installation window.



3 Start the installer.

- We recommend clicking Installation Guide in the installation window to check the installation help information and system requirements before installing ViewNX 2.
- Click **Typical Installation (Recommended)** in the installation window.

4 Download the software.

- When the Software Download screen is displayed, click I agree Begin download.
- · Follow the on-screen instructions to install the software.

5 Exit the installer when the installation completion screen is displayed.

- · Windows: Click Yes.
- · Mac OS: Click OK.

The following software is installed:


- ViewNX 2 (consisting of the three modules below)
 - Nikon Transfer 2: For transferring images to the computer
 - ViewNX 2: For viewing, editing, and printing transferred images
 - Nikon Movie Editor: For basic editing of transferred movies
- Panorama Maker (for creating a single panorama image of a landscape, etc. from a series of images that each capture a separate portion of the subject)
- 6 Remove the ViewNX 2 CD-ROM from the CD-ROM drive.

Transferring Images to the Computer

1 Choose how images will be copied to the computer.

Choose one of the following methods:

Direct USB connection: Turn the camera off and ensure that the memory card is inserted in the
camera. Connect the camera to the computer using the USB cable. Turn the camera on.
To transfer images that are saved in the camera's internal memory, remove the memory card
from the camera before connecting it to the computer.

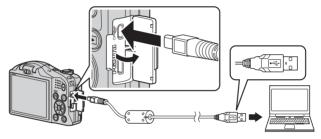

- **SD card slot**: If your computer is equipped with an SD card slot, the card can be inserted directly in the slot.
- **SD card reader**: Connect a card reader (available separately from third-party suppliers) to the computer and insert the memory card.

If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

• When using Windows 7

If the dialog shown at right is displayed, follow the steps below to select Nikon Transfer 2.

- 1 Under Import pictures and videos, click Change program. A program selection dialog will be displayed; select Import File using Nikon Transfer 2 and click OK.
- 2 Double-click Import File.



If the memory card contains a large number of images, it may take a while for Nikon Transfer 2 to start. Wait until Nikon Transfer 2 starts.

Connecting the USB Cable

The connection may not be recognized if the camera is connected to the computer via a USB hub.

2 Transfer images to the computer.

- Confirm that the name of the connected camera or removable disk is displayed as the "Source" on the "Options" title bar of Nikon Transfer 2 (1).
- Click Start Transfer (2).



• At default settings, all the images on the memory card will be copied to the computer.

3 Terminate the connection.

If the camera is connected to the computer, turn the camera off and disconnect the USB
cable. If you are using a card reader or card slot, choose the appropriate option in the
computer operating system to eject the removable disk corresponding to the memory card
and then remove the card from the card reader or card slot.

Viewing Images

Start ViewNX 2

- Images are displayed in ViewNX 2 when transfer is complete.
- Consult online help for more information on using ViewNX 2.



Starting ViewNX 2 Manually

- Windows: Double-click the ViewNX 2 shortcut icon on the desktop.
- Mac OS: Click the ViewNX 2 icon in the Dock.



Technical Notes and Index

Caring for the Product	
The Camera	& -2
Batteries	& -3
Memory Cards	& -5
Cleaning and Storage	b-6
Cleaning	& -6
Storage	& -7
Storage Troubleshooting	b-8
Specifications	ఏ 16
Approved Memory Cards	
Index	

Caring for the Product

The Camera

To ensure continued enjoyment of this Nikon product, observe the precautions described below in addition to the warnings in "For Your Safety" (\sum viii-xiv) when using or storing the device

Do Not Drop

The product may malfunction if subjected to strong shock or vibration.

Handle the Lens and All Moving Parts with Care

Do not apply force to the lens, lens cover, monitor, memory card slot, or battery chamber. These parts are easily damaged. Applying force to the lens cover could result in camera malfunction or damage to the lens. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth

Keep Dry

The device will be damaged if immersed in water or subjected to high humidity.

Avoid Sudden Changes in Temperature

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

Keep away from Strong Magnetic Fields

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charge or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data saved on the memory card, or affect the product's internal circuitry.

Do Not Point the Lens at Strong Light Sources for Extended Periods

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause deterioration of the image sensor, producing a white blur effect in photographs.

Turn the Product off Before Removing or Disconnecting the Power Source

Do not remove the batteries while the product is on, or while images are being saved or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry.

Notes About the Monitor

- Monitors and electronic viewfinders are constructed with extremely high precision; at least 99.99%
 of pixels are effective, with no more than 0.01% being missing or defective. Hence while these
 displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is
 not a malfunction and has no effect on images recorded with the device.
- · Images in the monitor may be difficult to see under bright lighting.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon-authorized service representative.

Batteries

Be sure to read and follow the warnings in "For Your Safety" (QQ viii-xiv) before use.

Notes About Using Batteries

- Used batteries may overheat. Handle with caution.
- Do not use batteries beyond their recommended expiration date.
- Do not turn the camera on and off repeatedly if discharged batteries are inserted in the camera.

Spare Batteries

We recommend carrying spare batteries depending on where you are shooting. It may be difficult to purchase batteries in certain areas.

Charging Batteries

If using optional rechargeable batteries, charge the batteries before taking pictures. Batteries are not charged at the time of purchase.

Be sure to read and follow the warnings noted in the operating instructions included with the battery charger.

Charging Rechargeable Batteries

- Do not mix batteries with different amounts of charge remaining, or batteries of a different make or model.
- When using EN-MH2 batteries with this camera, charge two batteries at a time using Battery Charger MH-72. When using Battery Charger MH-73, charge two or four batteries at a time. Use only Battery Charger MH-72 or MH-73 to charge EN-MH2 batteries.
- When using Battery Charger MH-72 or MH-73, only charge EN-MH2 batteries.

Notes About EN-MH1 Rechargeable Batteries and Battery Charger MH-70/71

- You can also use EN-MH1 Ni-MH rechargeable batteries with this camera.
- Use only Battery Charger MH-70 or MH-71 to charge EN-MH1 batteries.
- When using Battery Charger MH-70 or MH-71, only charge EN-MH1 batteries.
- Set Battery type (70, 577) to COOLPIX (Ni-MH).

Notes About Rechargeable Ni-MH Batteries

- If you repeatedly charge rechargeable Ni-MH batteries while they still have some charge
 remaining, the message **Battery exhausted**. may be displayed prematurely when using the
 batteries. This is due to the "memory effect," in which the amount of charge the batteries can hold
 decreases temporarily. Use the batteries until there is no charge remaining and they will return to
 their normal behavior.
- Rechargeable Ni-MH batteries discharge even when not being used. We recommend charging the batteries just before using them.

Cold Environment Usage

Battery performance decreases in cold environments. When using the camera in cold environments, try not to let the camera and batteries become too cold. The camera may not function if you use discharged batteries in cold environments. Keep spare batteries warm and alternate between two sets of batteries. Batteries that cannot be used because they have become too cold can often be used again when they have been warmed up.

Battery Terminals

Dirt on the battery terminals can prevent the camera from functioning. Remove dirt from the terminals using a dry cloth.



Remaining Battery Charge

If you insert discharged batteries into the camera, the camera may indicate that the batteries have adequate charge remaining. This is a characteristic of batteries.

Recycling

Used batteries are a valuable resource. Please recycle used batteries in accordance with local regulations. Cover the battery terminals with plastic tape when recycling.

Memory Cards

- Use only Secure Digital memory cards. See "Approved Memory Cards" (20) for recommended memory cards.
- Observe the precautions noted in the documentation included with your memory card.
- Do not affix labels or stickers to the memory card.
- Do not format the memory card using a computer.
- The first time you insert a memory card that has been used in another device into this camera, be sure to format it with this camera. We recommend formatting new memory cards with this camera before using them with this camera.
- Note that formatting a memory card permanently deletes all images and other data on the memory card. If there is data saved on the memory card that you wish to keep, copy that data to a computer before formatting.
- If the message Card is not formatted. Format card? is displayed when the camera is turned on, the memory card must be formatted. If there is data on the memory card that you do not want to delete, select No and press the button. Copy that data to a computer before formatting. To format the memory card, select Yes.
- Observe the following precautions while formatting the memory card, saving and deleting images, and copying images to a computer, otherwise data or the memory card itself may be damaged.
 - Do not open the battery-chamber/memory card slot cover or remove the memory card or batteries.
 - Do not turn off the camera.
 - Do not disconnect the AC adapter.



Cleaning and Storage

Cleaning

Do not use alcohol, thinner, or other volatile chemicals.

Lens	Avoid touching glass parts with your fingers. Remove dust or lint with a blower (typically a small device with a rubber bulb attached to one end that is pumped to produce a stream of air out the other end). To remove fingerprints or other stains that cannot be removed with a blower, wipe the lens with a soft cloth, using a spiral motion that starts at the center of them and working toward the edges. If this fails, clean the lens using a cloth lightly dampened with commercial lens cleaner.
Monitor	Remove dust or lint with a blower. To remove fingerprints and other stains, clean the monitor with a soft, dry cloth, being careful not to apply pressure.
Body	Use a blower to remove dust, dirt, or sand, then wipe gently with a soft, dry cloth. After using the camera at the beach or other sandy or dusty environment, wipe off any sand, dust, or salt with a dry cloth lightly dampened with fresh water and dry thoroughly. Note that foreign matter inside the camera could cause damage not covered by the warranty.

Storage

Turn the camera off when not in use. Be sure that the power-on lamp is off before putting the camera away. Remove the batteries if the camera will not be used for an extended period. Do not store the camera with naphtha or camphor moth balls, or in any of the following locations:

- Next to equipment that produces strong electromagnetic fields, such as televisions or radios
- Exposed to temperatures below −10°C (14°F) or above 50°C (122°F)
- Places that are poorly ventilated or subject to humidity of over 60%

To prevent mold or mildew, take the camera out of storage at least once a month. Turn the camera on and release the shutter a few times before putting the camera away again. For storing the batteries, follow the precautions in "Batteries" (3) in "Caring for the Product" (3):2).

Troubleshooting

If the camera fails to function as expected, check the list of common problems below before consulting your retailer or Nikon-authorized service representative.

Power, Display, Settings Issues

Problem	Cause/Solution	Ш
The camera is on but does not respond.	Wait for recording to end. If the problem persists, turn the camera off. If the camera does not turn off, remove and reinsert the battery or batteries or, if you are using an AC adapter, disconnect and reconnect the AC adapter. Note that although any data currently being recorded will be lost, data that have already been recorded will not be affected by removing or disconnecting the power source.	10, 18, ◆◆ 83
Camera turns off without warning.	The camera automatically turns off to save power (auto off function). The camera or batteries have become too cold and cannot operate properly. The inside of the camera has become hot. Leave the camera off until the inside of the camera has cooled, and then try turning it on again.	19 & -4
Monitor is blank.	The camera is off. The batteries are exhausted. The camera has entered standby mode to save power. Press the power switch, shutter-release button, button, button, button, or \(\mathbb{T} \) movierecord) button. The flash lamp flashes while the flash is charging. Wait for the flash to charge. The camera and computer are connected via a USB cable. The camera and TV are connected via an audio/video cable or HDMI cable.	18 18 1,19 43 71,76 71,6



Problem	Cause/Solution	Ф
Monitor is hard to read.	Adjust the monitor brightness. The monitor is dirty. Clean the monitor.	69, 6 €65 ⋩ 6
Date and time of recording are not correct.	If the camera clock has not been set, flashes during shooting and movie recording. Images and movies saved before the clock is set are dated "00/00/0000 00:00" or "01/01/2013 00:00" respectively. Set the correct time and date from the Time zone and date option in the setup menu. The camera clock is not as accurate as ordinary watches or clocks. Periodically compare the time of the camera clock with that of a more accurate timepiece and reset as required.	14, 69, ◆ •63
No indicators displayed in monitor.	Hide info is selected for Photo info in Monitor settings in the setup menu.	69, 6 65
Print date not available.	Time zone and date has not been set in the setup menu.	14, 69, 6 €63
Date not imprinted on images even when Print date is enabled.	The current shooting mode does not support Print date. The date cannot be imprinted on movies.	69, 64 67
Screen for setting time zone and date is displayed when camera is turned on.	The clock battery is exhausted; all settings were restored to their default values.	14, 17
Camera settings reset.		
Camera becomes hot.	The camera may become hot when used for an extended period of time to shoot movies or send images using an Eye-Fi card, or when used in a hot environment; this is not a malfunction.	_
Camera makes sound.	When Autofocus mode is set to Full-time AF or while in some shooting modes, the camera may produce an audible focusing sound.	66, ♣ 61



Shooting Issues

Problem	Cause/Solution	Ф
Cannot switch to shooting mode.	Disconnect the HDMl cable or USB cable.	71, 76, 6-6 22, 6-6 25
No image captured when the shutter-release button is pressed.	When the camera is in playback mode, press the button or the shutter-release button. When menus are displayed, press the MENU button. The batteries are exhausted. When the flash lamp is flashing, the flash is charging.	1, 26 2 18 43
Camera cannot focus.	The subject is too close. Try shooting using easy auto mode, Close-up scene mode, or macro mode. The subject is hard to focus on. Set AF assist in the setup menu to Auto. Turn the camera off and then on again.	29, 32, 46 57 69, \$\ldots 70 18
Images are blurred.	Use the flash. Increase the ISO sensitivity value. Enable vibration reduction or motion detection. Use BSS (Best Shot Selector). Use a tripod to stabilize the camera when shooting (using the self-timer at the same time is more effective).	41 51, \$\infty\$40 69, \$\infty\$68, \$\infty\$69 33, \$\infty\$38 44

Problem	Cause/Solution	Image: control of the
Bright specks appear in images captured with flash.	The flash is reflecting off particles in the air. Lower the flash.	3
Flash does not fire.	The flash is lowered. A scene mode that restricts the flash is selected. On (BSS) is selected for Smile timer in the smart portrait menu. On is selected for Blink proof in the smart portrait menu. A function that restricts the flash is enabled.	3, 41 48 51, 44 51, 44 51, 44
Digital zoom cannot be used.	Digital zoom is set to Off in the setup menu. Digital zoom cannot be used in the following situations. When Portrait, Night portrait, Night landscape, Easy panorama, or Pet portrait is selected in scene mode When smart portrait mode is selected When Continuous in the shooting menu is set to Multi-shot 16	69, ◆ 70 30 37 51, ◆ 38
Image mode not available.	A function that restricts the Image mode option is enabled.	52
No sound when shutter is released.	Off is selected for Sound settings > Shutter sound in the setup menu. No sound is produced with some shooting modes and settings, even when On is selected. Do not block the speaker.	70, 6-6 71
AF-assist illuminator does not light.	Off is selected for the AF assist option in the setup menu. AF-assist illuminator may not light depending on the current scene mode, even when Auto is selected.	69, 64 70

Problem	Cause/Solution	Ф
Images appear smeared.	The lens is dirty. Clean the lens.	\$ -6
Colors are unnatural.	White balance or hue is not adjusted properly.	32, 51, 6−6 35
Randomly spaced bright pixels ("noise") appear in image.	The subject is dark, and the shutter speed is too slow or ISO sensitivity is too high. Noise can be reduced by: Using the flash. Specifying a lower ISO sensitivity setting.	41 51, ~ 40
Images are too dark (underexposed).	The flash is lowered or a shooting mode that restricts the flash is selected. The flash window is blocked. The subject is beyond the range of the flash. Adjust exposure compensation. Increase ISO sensitivity. The subject is backlit. Select Backlighting scene mode, or raise the flash and set the flash mode setting to ∜ (fill flash).	3, 41, 48 22 3:18 47 51, 6•40 33, 41
Images are too bright (overexposed).	Adjust exposure compensation.	47
Unexpected results when flash set to \$ (auto with red-eye reduction).		
Skin tones are not softened.	In some shooting conditions, facial skin tones may not be softened. For images containing four or more faces, try using the Skin softening effect in the playback menu.	55 61, ♣ 17



Problem	oblem Cause/Solution	
Saving images takes time.	It may take more time to save images in the following situations. • When the noise reduction function is in operation, such as when shooting in a dark environment. • When the flash mode is set to * (auto with redeye reduction) • When shooting in Night portrait or Night landscape scene mode • When the skin softening function is applied while shooting • When using continuous shooting mode	- 43 31,32 55 51, ••38

Playback Issues

Problem	Cause/Solution	Ф
File cannot be played back.	 This camera may not be able to play back images saved with another make or model of digital camera. This camera cannot play back movies recorded with another make or model of digital camera. This camera may not be able to play back data edited on a computer. 	-
Cannot zoom in on image.	Playback zoom cannot be used with movies, small pictures, or images that have been cropped to a size of 320 × 240 or smaller. This camera may not be able to zoom in on images captured with another make or model of digital camera.	-
Cannot record voice memos.	Voice memos cannot be attached to movies. Voice memos cannot be attached to images captured with other cameras. Voice memos attached to images using another camera cannot be played back on this camera.	_ 61, ॐ 54

Problem	Cause/Solution	Ш
Cannot edit image.	Some images cannot be edited. Images that have already been edited may not be edited again. There is not enough free space in the internal memory or on the memory card. This camera is unable to edit images captured with other cameras. Editing functions used for images are not available for movies.	33, 4 14 - -
Cannot rotate image.	This camera cannot rotate images captured with another make or model of digital camera.	-
Images are not displayed on TV.	Video mode or HDMI is not correctly set in the TV settings setup menu. The cables are connected to the HDMI micro connector (Type D) and to the USB/audio/video output connector simultaneously. The memory card contains no images. Replace the memory card. Remove the memory card to play back images from the internal memory.	70, 6 73 71, 76, 6 22, 6 25 12
Nikon Transfer 2 does not start when camera is connected to a computer.	The camera is off. The batteries are exhausted. The USB cable is not correctly connected. The camera is not recognized by the computer. Confirm system requirements. The computer is not set to start Nikon Transfer 2 automatically. For more information about Nikon Transfer 2, refer to help information contained in ViewNX 2.	18 18 71,76 - 73 78
Images to be printed are not displayed.	The memory card contains no images. Replace the memory card. Remove the memory card to print images from the internal memory.	12

Problem	Cause/Solution	\Box
Cannot select paper size with camera.	The camera cannot be used to select the paper size in the following situations, even when printing from a PictBridge-Compatible printer. Use the printer to select the paper size. • The printer does not support the paper sizes specified by the camera. • The printer automatically selects the paper size.	71, 6- 026, 6- 028

Specifications

Nikon COOLPIX L620 Digital Camera

Туре	2	Compact digital camera	
Num	ber of effective pixels	18.1 million	
Imag	ge sensor	¹ /2.3-in. type CMOS; approx. 18.91 million total pixels	
Lens	i	NIKKOR lens with 14x optical zoom	
Focal length		4.5–63.0 mm (angle of view equivalent to that of 25–350 mm lens in 35mm [135] format)	
f/	-number	f/3.3-5.9	
C	onstruction	11 elements in 10 groups (2 ED lens elements)	
	tal zoom nification	Up to 2x (angle of view equivalent to that of approx. 700 mm lens in 35mm [135] format)	
Vibra	ation reduction	Lens shift	
Motion blur reduction		Motion detection (still pictures)	
Autofocus (AF)		Contrast-detect AF	
Focus range		[W]: Approx. 50 cm (1 ft 8 in.)—∞, [∏: Approx. 1.0 m (3 ft 4 in.)—∞ Macro mode: Approx. 1 cm (0.4 in.) (wide-angle position relative to △)—∞ (All distances measured from center of front surface of lens)	
Fo	ocus-area selection	Center, face detection, target finding AF	
Monitor		7.5 cm (3-in.), approx. 460k-dot, TFT LCD with anti-reflection coating and 5-level brightness adjustment	
	rame coverage shooting mode)	Approx. 96% horizontal and 96% vertical (compared to actual picture)	
	rame coverage olayback mode)	Approx. 96% horizontal and 96% vertical (compared to actual picture)	

S	torage		
	Media	Internal memory (approx. 83 MB), SD/SDHC/SDXC memory card	
	File system	DCF, Exif 2.3, and DPOF compliant	
	File formats	Still pictures: JPEG Sound files (voice memo): WAV Movies: MOV (Video: H.264/MPEG-4 AVC, Audio: LPCM stereo)	
	nage size bixels)	18M (High) [4896 × 3672★] 18M [4896 × 3672] 8M [3264 × 2448] 4M [2272 × 1704] 2M [1600 × 1200] VGA [640 × 480] 16:9 [4896 × 2754] 1:1 [3672 × 3672]	
ISO sensitivity (Standard output sensitivity)		ISO 125–1600ISO 3200 (available when using Auto mode)	
Exposure			
	Metering mode	Matrix, center-weighted (digital zoom less than 2x), spot (digital zoom 2x)	
	Exposure control	Programmed auto exposure and exposure compensation $(-2.0 - +2.0 \text{ EV})$ in steps of $^{1}/3 \text{ EV})$	
SI	nutter	Mechanical and CMOS electronic shutter	
	Speed	• 1/1600-1 s • 1/4000 s (maximum speed during high-speed continuous shooting) • 4 s (Fireworks show scene mode)	
Α	perture	Electronically-controlled ND filter (–2 AV) selection	
	Range	2 steps (f/3.3 and f/6.6 [W])	
S	elf-timer	Approx. 10 s	



Flash			
Range (approx.) (ISO sensitivity: Auto)	[M]: 0.5–5.0 m (1 ft 8 in.–16 ft) [T]: 1.0–3.0 m (3 ft 4 in.–9 ft 10 in.)		
Flash control	TTL auto flash with monitor preflashes		
Interface	Hi-Speed USB		
Data transfer protocol	MTP, PTP		
Video output	Can be selected from NTSC and PAL		
HDMI output	Can be selected from Auto, 480p, 720p, and 1080i		
I/O terminal	Audio/video (A/V) output; digital I/O (USB) HDMI micro connector (Type D) (HDMI output)		
Supported languages	Arabic, Bengali, Bulgarian, Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hindi, Hungarian, Indonesian, Italian, Japanese, Korean, Marathi, Norwegian, Persian, Polish, Portuguese (European and Brazilian), Romanian, Russian, Serbian, Spanish, Swedish, Tamil, Telugu, Thai, Turkish, Ukrainian, Vietnamese		
Power sources	 Two LR6/L40 (AA-size) alkaline batteries Two FR6/L91 (AA-size) lithium batteries Two EN-MH2 rechargeable Ni-MH batteries (available separately) AC Adapter EH-65A (available separately) 		
Battery life ¹			
Still pictures	 Approx. 150 shots when using alkaline batteries Approx. 660 shots when using lithium batteries Approx. 410 shots when using EN-MH2 batteries 		
Movies (actual battery life for recording) ²	 Approx. 10 min when using alkaline batteries Approx. 1 h 25 min when using lithium batteries Approx. 55 min when using EN-MH2 batteries 		
Tripod socket	1/4 (ISO 1222)		
Dimensions (W \times H \times D)	Approx. 108.3 \times 68.7 \times 34.1 mm (4.3 \times 2.8 \times 1.4 in.) (excluding projections)		
Weight	Approx. 237 g (8.4 oz) (including batteries and SD memory card)		



Operating environment

Temperature 0°C−40°C (32°F−104°F)

Humidity 85% or less (no condensation)

- Unless otherwise stated, all figures assume fresh LR6/L40 (AA-size) alkaline batteries and an
 ambient temperature of 23 ±3 °C (73.4 ±5.4 °F) as specified by the Camera and Imaging
 Products Association (CIPA).
- Battery life may vary depending on conditions of use, such as the interval between shots or the length of time that menus and images are displayed.
 - The included batteries are for trial use only. Figures listed for lithium batteries are measured using commercially available FR6/L91 (AA-size) Energizer(R) Ultimate Lithium batteries.
- Individual movie files cannot exceed 4 GB in size or 29 minutes in length. Recording may end before this limit is reached if camera temperature becomes elevated.

Specifications

- Nikon will not be held liable for any errors this manual may contain.
- The appearance of this product and its specifications are subject to change without notice.

Approved Memory Cards

The following Secure Digital (SD) memory cards have been tested and approved for use in this camera.

 Memory cards with an SD Speed Class rating of 6 or faster are recommended for recording movies. When using a memory card with a lower Speed Class rating, movie recording may stop unexpectedly.

	SD memory card	SDHC memory card ²	SDXC memory card ³
SanDisk	2 GB ¹	4 GB, 8 GB, 16 GB, 32 GB	64 GB, 128 GB
TOSHIBA	-	4 GB, 8 GB, 16 GB, 32 GB	64 GB
Panasonic	2 GB ¹	4 GB, 8 GB, 16 GB, 32 GB	64 GB
Lexar	-	4 GB, 8 GB, 16 GB, 32 GB	64 GB, 128 GB

If the memory card will be used with a card reader or similar device, make sure that the device supports 2 GB cards.

² SDHC compliant. If the memory card will be used with a card reader or similar device, make sure that the device supports SDHC.



3 SDXC compliant. If the memory card will be used with a card reader or similar device, make sure that the device supports SDXC.



Contact the manufacturer for details on the above cards. We cannot guarantee camera
performance when using memory cards made by other manufacturers.

AVC Patent Portfolio License

This product is licensed under the AVC Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard ("AVC video") and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.

See http://www.mpegla.com.

Trademark Information

- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries. The iFrame logo and the iFrame symbol are trademarks of Apple Inc.
- Adobe and Acrobat are registered trademarks of Adobe Systems Inc.
- SDXC, SDHC and SD Logos are trademarks of SD-3C, LLC.
- PictBridge is a trademark.
- HDMI, HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

HDMI

 All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

FreeType License (FreeType2)

Portions of this software are copyright © 2013 The FreeType Project (http://www.freetype.org). All rights reserved.

MIT License (HarfBuzz)

Portions of this software are copyright © 2013 The HarfBuzz Project (http://www.freedesktop.org/wiki/Software/HarfBuzz). All rights reserved.

Index

<u>Symbols</u>		<u>A</u>	
T Telephoto	23	AC adapter	6
W Wide-angle		AF area mode	
Playback zoom	59	AF-assist illuminator	1, 69, 🖰 70
Thumbnail playback	60	Album	
Easy auto mode	29	Alkaline batteries	10
Z Scene mode	30	Aperture value	
MB Special effects mode	35	Audio/video cable	72, 6-622, 6-683
Smart portrait mode	37	Audio/video-in jack	72, 🏍 22
Auto mode	39	Auto flash	42
▶ Playback mode	26	Auto mode	39
★ Favorite pictures mode	6	Auto off	19, 70, 🏍 7
Auto sort mode	🖰 10	Auto sort menu	61, 🏍 10
🕰 List by date mode	🏍 11	Auto sort mode	🖰 10
Y Setup menu 69	9, 🏍 62	Autofocus	57, 66, 🖰 6
	2	Autofocus mode	66, 66 6
Shooting mode button		<u>B</u>	
● Movie-record button	2	Backlighting 🖺	30, 33
Playback button		Battery	
🗑 Delete button	2, 27	Battery charger	
MENU button 2, 4, 50, 61		Battery level	
∮© Flash pop-up control		Battery type	
Flash mode		Battery-chamber/mem	
Self-timer			
Macro mode		Beach 🕰	30
Exposure compensation		Best shot selector	
? Help	30	Black and white copy [

Black-and-white	<i>6</i> •641	<u>E</u>	
Blink proof	51, 🏍 45	Easy auto mode	29
Blink warning	70, 🏍74	Easy panorama 🗖	
Brightness	<i>6</i> 65	Easy panorama playback.	33, 6
BSS	33, 🗪 38	Editing movies	
Button sound	6-6 71	EN-MH1	
<u>C</u>		EN-MH2	
Calendar display	60	Exposure compensation	
Choose key picture	62, 6-6 12, 6-6 57	Extension	🏍82
Close-up 🌃	30, 32	Eye-Fi upload	70, 🏍 75
Color options	51, 🗪 41	Eyelets for camera strap	1
Compression ratio	<i>6</i> 33	<u>E</u>	
Computer	72, 76	Face detection	54
Connector cover		Favorite pictures	62, 6 6
Continuous shooting	51, 🗪 38	Favorite pictures menu	61, 🏍7
Copy	61, 🖰 55	Favorite pictures mode	
Crop		File name	
Cyanotype	<i>6</i> -641	Fill flash	42
<u>D</u>		Filter effects	61, 🏍 18
Date and time	14, 69, 🖰 63	Fireworks show 🍪	30, 33
Date format	15, 🖰 63	Firmware version	70, 🏍 77
Daylight saving time	15, 🏍 64	Flash	1, 3, 41
Delete	27	Flash lamp	
Digital zoom	23, 69, 🏍 70	Flash mode	
Direct print	72, 🏍 24	Flash pop-up control	
D-Lighting	61, 🏍 15	Focus	
DPOF print		Focus area	
DSCN		Focus indicator	
Dusk/dawn 當	30	Focus lock	
		Food †¶	30, 32

Refer to the *Reference Manual* for pages indicated with 6.



ormat internal memory 70, 🖰72	List by date menu	61, 🏍 11
ormat memory cards 13, 70, 6672	List by date mode	
ormatting 13, 70, 6672	Lithium batteries	
SCN <i>6</i> 82	Low key Lo	35
ull-frame playback mode 26	M	
ull-time AF 66, 661		46
<u>l</u>	Memory card	12, 🌣 20
IDMI <i>6</i> →73	Memory card slot	12
IDMI cable 72, 6 22	Microphone (stereo)	
IDMI device control	Monitor	
DMI micro connector 1	Monitor settings	
elp 30	Motion detection	69, 🏍 69
ligh key 🚻	MOV	<i>6</i> 82
ligh-contrast monochrome	Movie length	63
S movie	Movie menu	
	Movie options	66, 🏍 58
dentifier *** 82	Movie playback	67
mage mode	Movie recording	63
mage review	Movie-record button	2
mprinting date and time 17, 667	Multi selector	2
nternal memory13	Multi-shot 16	🖰 38
60 sensitivity	Museum <u> </u>	30, 33
31, 0 040	N	
PG <i>6</i> −882	Night landscape ⊞	30.32
~G 0 ~ 082	Night portrait	
. <u> </u>	Nikon Transfer 2	
andscape 🖬 30	Nostalgic sepia SE	
anguage70, 🍣 73	Number of exposures remain	
ens 1, Ö -16		
ens cover 1		10, 0 054

<u>)</u>	<u>K</u>		
Optical zoom 23	Rechargeable battery		
Dptional accessories	Rechargeable nickel-metal hydride		
o [']	batteries 10		
- Panorama Maker 75	Recording movies63		
Paper size	Recording slow motion movies		
Party/indoor 3 0, 31	66, 6-0 59, 6-0 60		
Pet portrait auto release	Red-eye correction		
Pet portrait 3	Red-eye reduction 42, 43		
Photo info	Remove from favorites 62, 6-68		
PictBridge	Reset all 70, 6676		
Playback	Rotate image		
Playback button	RSCN		
Playback menu	S		
Playback mode	Scene mode		
Playback zoom	Selective color 🖋		
Portrait ½	Self-timer		
Power 18	Self-timer lamp		
Power switch/power-on lamp 1, 18	Sepia		
Preset manual	Sequence display options		
Pressing halfway	62, \$\infty\$ 12, \$\infty\$ 57		
Print 61, 72, 6026, 6028, 6046	Setup menu		
Print date 17, 69, 6–67	Shooting		
Print order	Shooting menu		
Print order option 17, 6–647, 6–649	Shooting mode button		
Printer	Shutter sound		
Protect	Shutter speed25		
701,0-031	Shutter-release button		
<u></u>	Single AF		
Quick retouch	Single-frame shooting 51, 5–38		
	311gle-11atrie 31100tillg		

Refer to the *Reference Manual* for pages indicated with \clubsuit .



Skin softening 51, 61, 6	→17, →43
Slide show	61, 🏍 50
Slow sync	42
Small picture	
Smart portrait menu	
Smart portrait mode	37
Smile timer	51, 6-6 44
Snow 8	30
Soft \$0	35
Sound settings	
Speaker	2
Special effects mode	35
Sports 🔾	30, 31
SSCN	
Standard color	<i>5</i> 41
Strap	3, 🏍84
Sunset *	30
I	
Thumbnail playback	60
Time difference	
Time zone	
Time zone and date 1	
Tripod socket	
TV	
TV settings	
U	
USB cable 7	2 76 ₳25
USB/audio/video output cor	
1, 71, 76, 6	
1, 7 1, 7 0, 0	. 022, 0 024

<u>V</u>	
Vibration reduction	69, 🏍 68
Video mode	6-673
ViewNX 2	73, 74
Vivid color	🏍 41
Voice memo	61, 🏍 54
Volume	67, 🏍 54
W	
WAV	<i>6</i> 82
Welcome screen	69, 6
White balance	51, 6-0 35
Wind noise reduction	66, 🏍 61
Z	
Zoom	23
Zoom control	
Zoom in	•
Zoom out	
200111 Out	23

No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

NIKON CORPORATION

Printed in UAE

