

Cordless Phone DT570

User's Guide



EN/LZTNB 101 218 R1

- Using this guide
- Overview DT570
- Contents
- Preparing for use
- Basic use
- Telephoning options
- Advanced telephoning
- Phone book
- Mail
- Settings
- Extra features
- Using networks
- Tips
- Troubleshooting
- Maintenance
- Safety instructions
- Technical specifications
- Glossary

print

find

contents

DT570 menu

index



Using this guide

Tip

Cross references in the text are marked **blue**. You can click on them to go to the referenced topic. Use the Back tab to go back.

Click to print one or more pages.

print

Click to find words in this guide.

find

Click to go to this part in the guide.

contents

Click to go to the page that precedes this page.

Click to enter a page number you want to go to.

DT570 menu

Click to go back to the page you were before.

index

Click to go to a topic.

Click to go to the next page.

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Overview DT570

Overview buttons and keys



Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back




Using the phone menu

Use the  key to access the menu and scroll through the menu options. Press  to confirm an option. Some options take you into a new menu. Press  once or repeatedly to return to the previous menu.

Note If you do not press any key for a minute, the cordless phone automatically reverts to the stand-by display.

Navigation keys

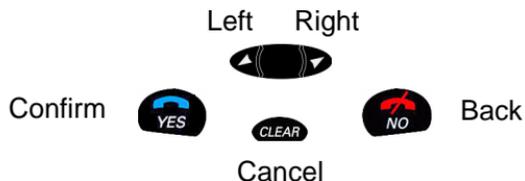

Menu path “Route:”

In this User’s Guide the word “**Route:**” at the beginning of each procedure indicates the options you have to select in the phone menu.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Contents

Using this guide	2	Basic use	19
Overview DT570	3	Making a call	20
Overview buttons and keys	3	Receiving a call	22
Using the phone menu	4	Stop ringing when receiving a call	23
Preparing for use	9	Information in the display	24
Steps to be performed	9	Keys	27
Step 1: Attach battery	10	Display icons and indicators	29
Step 2: Charge battery	11	DT570 menu	31
Step 3: Switch cordless phone on	12	Setting date and time	35
Step 4: Set display language	13	Charging the battery	37
Step 5: Check searchmode setting	14	Switching the cordless phone off	38
Step 6: Subscribe to a network	15		

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Contents

Telephoning options 39

- Call using the phone book 40
- Redialling one of the last dialled numbers 46
- Returning a call 48
- Changing the earpiece volume during a call 51
- Turning off the microphone during a call 52
- Mute ring signal temporarily 53
- Using the display as scratch pad 54

Advanced telephoning 55

- Consulting with another person 56
- Transferring a call 57
- Second call and conference call 58
- Setting the cordless phone to tone dialling 59
- Setting the cordless phone to long tones 60
- Inserting a pause 61

Phone book 62

- About the phone book 63
- Entering names in the phone book 65
- Adding name and phone number 67
- Editing phone book names and numbers 70
- Erasing names and numbers 72

Mail 74

- Four message types 75
- Information that a message has arrived 77
- Looking up the messages 78
- Reading page messages 79
- Confirming a page message 81
- Dial the phone number in a page message 82
- Erasing a page message 83

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Contents

Settings	84	Using networks	119	Using this guide
Ring level	85	Connecting to networks	120	Overview DT570
Ear volume	87	Automatic network search	123	Contents
Ring type	88	Searching for a specific network	125	Preparing for use
Edit melody	89	Ordering the network list	126	Basic use
Key sound	91	Editing the network name	128	Telephoning options
Display light	92	Erasing a network	129	Advanced telephoning
Answering mode	93			Phone book
Greeting text	95	Tips	130	Mail
Own line settings	97			Settings
Master reset: clear all settings	105	Troubleshooting	131	Extra features
Extra features	106	The cordless phone does not come on	132	Using networks
Call statistics	107	The phone lock is activated	133	Tips
Call diversion	110	No network	134	Troubleshooting
Phone lock code protection	112	Phone lock code forgotten	135	Maintenance
Looking up the IPEI code	116	Cannot understand the language in the display	136	Safety instructions
Blocking the keys	117	Long beep at regular intervals	137	Technical specifications
		External call requires wait for dial tone	138	Glossary
		Unable to make an international call	139	

[print](#)[find](#)[contents](#)[DT570 menu](#)[index](#)[back](#)

Contents

Maintenance	140
Required service	141
Cleaning	142
Changing the battery	143
Safety instructions	144
Technical specifications	146
Glossary	149
Index	155

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Preparing for use

Steps to be performed

Attach battery (page 10)



Charge battery (page 11)



Switch cordless phone on (page 12)



Set display language (page 13)



Check searchmode setting (page 14)



Subscribe to a network (page 15)

Tip

Click on a topic.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index



back



Step 1: Attach battery

The cordless phone is powered by a rechargeable battery.

- Attach the battery as shown below.

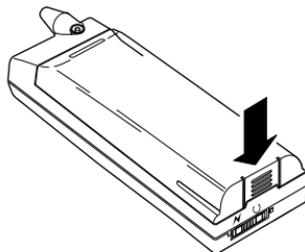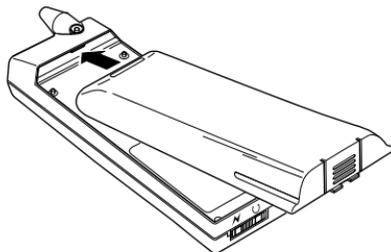

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Step 2: Charge battery

1. Connect the charger to the phone (see the accompanying information).
2. Leave the cordless phone connected to the charger until the battery is fully charged.
 - When the phone is switched off, the indicator light on the cordless phone turns green if the battery is fully charged.
 - When the phone is switched on, the battery icon is completely filled when the battery is fully charged.
3. Disconnect the charger.

[Using this guide](#)
[Overview DT570](#)
[Contents](#)
[Preparing for use](#)
[Basic use](#)
[Telephoning options](#)
[Advanced telephoning](#)
[Phone book](#)
[Mail](#)
[Settings](#)
[Extra features](#)
[Using networks](#)
[Tips](#)
[Troubleshooting](#)
[Maintenance](#)
[Safety instructions](#)
[Technical specifications](#)
[Glossary](#)

print

find

contents

DT570 menu

index

back



Step 3: Switch cordless phone on

To switch the cordless phone on

- Press and hold  until you hear a click. The display turns on. The greeting text is displayed for a short while and the cordless phone starts searching for a network.

When a network has been found, the cordless phone beeps three times. The indicator light on the top of the cordless phone flashes green once every second and the network name appears in the display. The cordless phone is now in stand-by mode and ready to make and receive calls.



NETWORK

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Step 4: Set display language

To change the display language

Route: Settings » Language

1. Select **Language** and press .
2. Select the required language and press .
The language has now been changed.

Note To reset the language to English (the default language) you can enter the sequence `*#0000#` at any time.

SETTINGS

Language
(English)

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Step 5: Check searchmode setting

To check if searchmode setting is (Auto)

Route: Networks » Searchmode

1. Select **Networks** and **Searchmode**.
2. Check the setting between () brackets.
Only if the setting is **Manual**, press  to enter the menu.
3. Use  to select **Auto**.
4. Press  to enable automatic network search.
After subscription the phone will automatically search for an available network and will be ready for use.

NETWORKS

Searchmode
(Auto)

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Step 6: Subscribe to a network

Normally your telephone network administrator has subscribed the cordless phone for you. If not, follow the procedure below.

Note To subscribe the cordless phone to a network you need two codes. Contact your network administrator for these two codes:

- The PAK (Portable Access Rights Key) code.
The PAK code identifies the network. Entering the PAK code is not necessary but it can increase the chances of successful subscribing.
- The AC (Authentication Code) code of the network.
The AC code prevents other phones subscribing to the network without approval.

Note You can subscribe a cordless phone to 8 networks. The names of these networks are stored in a list. If you want to subscribe and no free entries are left in the network list, you have to delete an entry first. See [“Erasing a network”](#) on page 129.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



To subscribe the cordless phone to a network

Route: Networks » Edit list

1. Select **Edit list** and press .
The first entry of the network list is displayed.
2. If necessary, press  to find the empty entry (last position in the list).
3. Press  to select the entry.
Add net? is displayed.
4. Press  to confirm.
Enter name is displayed.
5. Enter a name (e.g. Build1) for the network. This name is displayed if the phone (when in stand-by) is connected to that network ( = delete;  = move left or right;  = space;  = change case).
6. Press  to confirm.
Enter PARK is displayed.

NETWORKS

Edit list

EDIT LIST

Add net?

ADD NET

Enter name

ADD NET

Enter PARK

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

To subscribe the cordless phone to a network (continued)

7. Enter the PARK code of the network. The PARK code is a row of digits which may be separated by hyphens. Do not enter hyphens. If you want to skip the PARK code, enter nothing and proceed with the next step.
8. Press  to confirm.
Enter AC is displayed.
9. Enter the AC code of the network. Each digit is shown as *.
10. Press  to confirm.
Please wait is displayed.
11. Wait until **Add net done** is briefly displayed. The cordless phone is now subscribed to the network. If another message is displayed, see [“Error messages when subscribing”](#) on page 18.

ADD NET
Enter AC

Add net done

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Error messages when subscribing

In case of one the following messages, try to subscribe again:

- **Add net failed:** the AC number you have entered may be incorrect or the network has no space for an extra subscription. To add the cordless phone, you may have to delete the subscription of another phone.
- **Error No network:** the PARK code you have entered is probably incorrect or you are out of range of the network. Check that the network is on and that you are within range.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Basic use

Overview

[Making a call \(page 20\)](#)

[Receiving a call \(page 22\)](#)

[Stop ringing when receiving a call \(page 23\)](#)

[Information in the display \(page 24\)](#)

[Keys \(page 27\)](#)

[Display icons and indicators \(page 29\)](#)

[DT570 menu \(page 31\)](#)

[Setting date and time \(page 35\)](#)

[Charging the battery \(page 37\)](#)

[Switching the cordless phone off \(page 38\)](#)

Tip Click on a topic.

[Using this guide](#)

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

 
[back](#)

Making a call

Dialling while on hook

1. Enter the phone number.
The digits are shown in the display.
2. If necessary, use the **CLEAR** key to correct the number.
3. Press **YES** and wait for an answer.
A call time meter is displayed.
4. Press **NO** to end the call.
The duration of the call is displayed.

- Tips**
- The cordless phone contains a phone book in which names and phone numbers can be stored. See [“About the phone book”](#) on page 63.
 - If nobody answers your call, the number is busy or you cannot get through, you can redial the number. See [“Redialling one of the last dialled numbers”](#) on page 46.

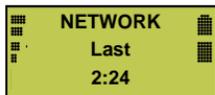

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Basic use

- When dialling on hook, press and hold down  to erase all digits at the same time.
- It is possible to protect the cordless phone against misuse. See “[Phone lock code protection](#)” on page 112.
- On some networks you can only make an external call after waiting for dial tone. See “[Inserting a pause](#)” on page 61 to solve this.

Dialling while off hook

1. Press  in the stand-by mode.
Hook off is displayed.
2. Press  and wait for the dial tone.
3. Dial the number and wait for a connection.
4. Press  to end the call.
The duration of the call is displayed.

MENU

Hook off

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Receiving a call

To receive a call

1. Press  to answer a call.
2. To end the call press .
The duration of the call is displayed.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Stop ringing when receiving a call

You can stop the phone from ringing when receiving a call. Rejecting a call is not possible.

- If you do not want to answer a call, press  or one of the volume keys twice.
The cordless phone stops ringing. You can still answer the call by pressing .

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

 
contents

DT570 menu

index

back


Information in the display

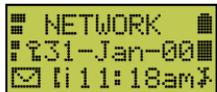

After switching on the cordless phone, the display may show several icons and other information. For the icons, see “[Display icons and indicators](#)” on page 29.

Network name

 The name of the currently connected network. Only displayed when the cordless phone is in stand-by.

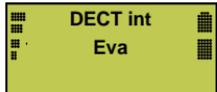

Call information

When receiving a call in the display the caller's number is displayed (if supported by the network). Also you can see if the call is external (**DECT ext**) or internal (**DECT int**).

If the caller's name is in the phone book of the cordless phone, the caller's name is displayed.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Redirected call information



When someone has redirected his phone to your phone, you can see in the display if an incoming call is from the redirected phone (if supported by the network). The name or number from the redirected phone is displayed between () below the caller's name or number.

Who answers your call

When your call is answered, the called person's number or name if in the phone book of the cordless phone is displayed (if supported by the network).

When the phone you called is redirected to another phone, the number or name of the phone that is actually answering the call, is displayed (if supported by the network).

Call duration

During a call, the cordless phone displays the duration of the call.



Using this guide

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

Basic use

Time and date

The cordless phone displays the current time and, if set, the date when it is in stand-by (if supported by the network). See “[Setting date and time](#)” on page 35 for more details.

Network messages

Network messages can be shown on the cordless phone display.

Using this guide

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)



Keys

Key	Function
	<ul style="list-style-type: none">• Make a call or answer a call.• Enter a menu.• Confirm selections and settings.
	<ul style="list-style-type: none">• During call: press and hold to switch microphone off.• While entering text or a number: delete last letter or digit, delete whole line if held longer.• Cancel a menu option, cordless phone goes to stand-by.
	<ul style="list-style-type: none">• Press and hold to switch cordless phone on/off.• If the cordless phone rings: mute sound.• End a call.• Cancel a menu option.
	<ul style="list-style-type: none">• Scroll through menu options or lists.• While entering text or number: move one character position, move to end or beginning if held longer.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Basic use

Key Function *(continued)*

-  – 
- Enter digits.
 - Enter text when in phone book menu (names).
 - The  key also enters the international sign + if held down (to be used in the phone book only).

- 
- Enter the * character.
 - If held down insert dial tone pause (p) while entering a phone number.
 - Switch between lower and upper case letters.

- 
- Enter the # character.
 - To confirm selections and settings.
 - To recall a phone number from the phone book.



- Earpiece volume louder/quieter.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Display icons and indicators

Icon or indicator	Meaning
Signal strength 	Visible when connected to a network. Four vertical bars means good reception and no bars means no connection.
Ring off 	Ring signal muted.
Key 	Keys locked.
Message 	New message received.
Battery 	<ul style="list-style-type: none">• On: indicates battery status (icon completely filled means fully charged).• Flashing: battery is being charged (icon is being filled and emptied).
Call info 	New missed calls.

[Using this guide](#)

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

Basic use

Icon or indicator	Meaning
 (in the phone book)	Phone book entry cannot be changed. It is part of the company phone book.
Indicator light on top is green	<ul style="list-style-type: none">• On: charging has been completed (only if the cordless phone is switched off or connected to a charger).• Flashing: connected to a network.• Flashing quickly: incoming call or message.
Indicator light on top is red	<ul style="list-style-type: none">• On: battery is being charged while the cordless phone is switched off.• Flashing: low battery warning.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu


index

back



DT570 menu

The figure below illustrates the menu structure and the browse sequence. Press  to enter the menu structure.

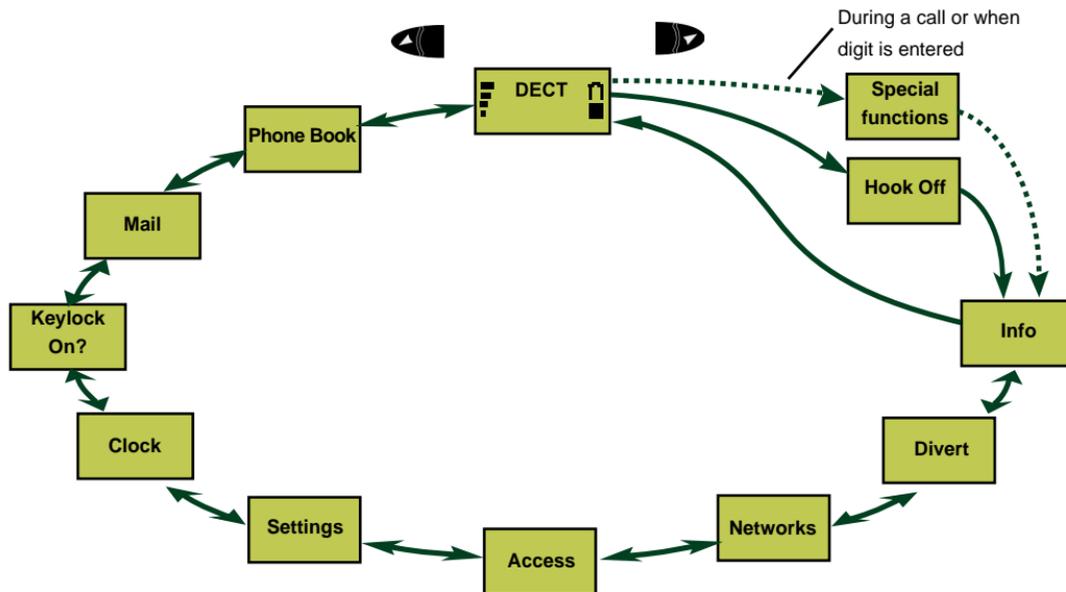

Tip Click on a menu item for more information about it.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Basic use

The submenus of each menu are described below. Click on a menu item for a more detailed description.

Hook Off

- **Dial off hook.**

Info

- **Last call** Check time of last call.
- **Tot calls** Check total call time.

Divert

- **Divert recall** Activate a call divert.

Networks

- **Select net** Start searching for a specific network.
- **Searchmode** Enable automatic or manual search.
- **Edit list** Subscribe cordless phone to a network.
- **New search** Start a new automatic network search.

Access

- **Phone lock** Activate or cancel phone lock code protection.
- **Phone lock - Change code** Change phone lock code.

Settings

- **Ring level** Set ring signal volume.
- **Ear volume** Change earpiece volume.
- **Ring type** Set ringer tones or melodies.
- **EditMelody** Program a melody.
- **Keylock** Set automatic keylock. If no keys are pressed within 25 seconds, the keys are locked.
- **Key sound** Set key sound (clicks, tones or no signal).

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Settings *(continued)*

- **Light** Set display light (automatic, on (all the time), off)
- **Call info** Set type of call information for retrieving statistics (all calls, outgoing calls).
- **Answering mode** Set answering mode (answering when clicking any key, auto answering), used for example when calling handsfree.
- **Greeting** Enter and turn on/off greeting text on display.
- **Language** Set display language.
- **Own line** Set own line settings. Applicable, for example, when using the phone in different networks.
- **Master reset** Clear all menu settings to its default.

Clock

- **Clock mode** Set time format (24h or AM/PM)
- **Date mode** Enable date to be displayed if phone is in standby mode.

Keylock On?

- Block the keys to avoid accidental dialling.

Mail

- **Page** Read, confirm, dial phone number in page, erase page messages.
- **Voice** Handling of voice messages (if supported by the network).
- **Text** Handling of text messages (if supported by the network).
- **Other** Handling of other message types (if supported by the network).

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Basic use

Phone book

- **Name recall** Call by name.
- **Position recall** Call by phone book position.
- **Store** Add names and numbers in phone book.
- **Edit** Edit phone book names and numbers.
- **Erase** Erase phone book names and numbers.
- **Answered calls** Return answered calls.
- **Dialled numbers** Redial last dialled numbers.
- **Missed calls** Return missed calls.

Special functions (during a call)

- **Goto DTMF** Switch the phone to tone dialling during a call.
- **Internal call** Only on home cordless system: to make an internal call.

Special functions (during a call) *(continued)*

- **Send pause** Send a pause during a call.
- **Send tones** Switch the phone to long tones during a call.

Special functions (when digit entered)

- **Internal call** Only on home cordless system: to make an internal call.
- **Pause** Insert a pause before dialling.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Setting date and time

When the cordless phone is in stand-by the current time and date (optional) can be displayed (if supported by the network). Default no date is displayed.

To set the date

Route: Clock » Date mode

1. Select **Date mode** and press .
2. Select one of the following formats:
 - DD-MM-YY
 - MM/DD/YY
 - YYMMDD
 - DD-MMM-YY
 - Off
3. Press  to confirm your choice.
The date is now displayed in stand-by mode.





Setting time format

The time is automatically retrieved from the system (if available). You can set how the time is displayed.

To set the time format

Route: Clock » Clock mode

1. Select **Clock mode** and press .
2. Select **24 hours** or the **AM/PM** format.
3. Press  to confirm your choice.

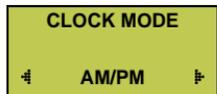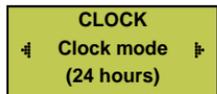

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Charging the battery

If the battery is nearly flat or if you want to keep the battery fully charged, you can connect the cordless phone to the charger. There is no need to wait until the battery is completely discharged.

You can still use the cordless phone while the battery is being charged. However, it will take more time to charge the battery.

For more information, see the information on the charger.

[Using this guide](#)

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

Switching the cordless phone off

To switch the cordless phone off

1. Go to the stand-by display, by pressing  repeatedly.
2. Press and hold  until the display turns blank.

Note You cannot turn the cordless phone off during a call.

- Using this guide
- Overview DT570
- Contents
- Preparing for use
- Basic use
- Telephoning options
- Advanced telephoning
- Phone book
- Mail
- Settings
- Extra features
- Using networks
- Tips
- Troubleshooting
- Maintenance
- Safety instructions
- Technical specifications
- Glossary

Telephoning options

Overview

[Call using the phone book \(page 40\)](#)

[Redialling one of the last dialled numbers \(page 46\)](#)

[Returning a call \(page 48\)](#)

[Changing the earpiece volume during a call \(page 51\)](#)

[Turning off the microphone during a call \(page 52\)](#)

[Mute ring signal temporarily \(page 53\)](#)

[Using the display as scratch pad \(page 54\)](#)

Tip Click on a topic.

- Using this guide
- Overview DT570
- Contents
- Preparing for use
- Basic use
- Telephoning options
- Advanced telephoning
- Phone book
- Mail
- Settings
- Extra features
- Using networks
- Tips
- Troubleshooting
- Maintenance
- Safety instructions
- Technical specifications
- Glossary

print

find

contents

DT570 menu

index

back

Call using the phone book

You can conveniently make calls using the phone book (provided that it contains names and numbers). For the ways you can make calls using the phone book, see:

- “Quick call by name” on page 41.
- “Call by name” on page 42.
- “Quick call by position in the company phone book” on page 43.
- “Quick call by position in the user phone book” on page 44.
- “Call by phone book position” on page 45.

For the difference between company and user phone book, see “Company phone book and user phone book” on page 63.

Note If own line settings are specified: either **External?** or **Internal?** and the phone number is displayed at the end of each of the following procedures.

If number is correct, press  to dial. Press  to proceed or cancel.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Quick call by name

NAME

RECALL

Name:A

NAME

RECALL

Name:ABC

1. In stand-by, press and hold one of the keys  up to  until the first letter of the key is entered. For other letters: immediately press the key again until the required letter appears. Use the  key to correct.
2. You can enter more letters.
3. Press  to confirm.
The first name in the phone book beginning with the entered letter(s) is displayed. If it does not exist, a name beginning with the next letter is displayed.
4. Scroll by using the  keys.
5. Press  to dial the number.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Call by name

Route: Phone book » Name recall

1. Select **Name recall** and press .
2. Press the key which has the first letter of the name you are searching for.
 - Press once for the first letter.
 - For other letters: immediately press the key again until the required letter appears. Use the  key to correct.
3. You can enter more letters.
4. Press  to confirm.
The first name in the phone book beginning with the entered letter(s) or, if it does not exist, a name beginning with the next letter is displayed.
5. Scroll by using the  keys.
6. Press  to dial the number.

PHONE BOOK

Name
recall

NAME
RECALL

Name:ABC_

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Telephoning options

Quick call by position in the company phone book

1. In stand-by, press and hold  until  appears in the display.
2. Enter the position number in the company phone book of the person you wish to call and press .
3. If necessary, scroll by using the  key.
4. Press  to make the call.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Quick call by position in the user phone book

1. In stand-by, enter the position number in the user phone book of the person you wish to call and press .
2. Press  to make the call.

Phone numbers that are stored in positions 1 – 9 of the user phone book can be called very easily. You can use these positions to store important or frequently used numbers.

To call a phone number in position 1 - 9 of the user phone book

1. In stand-by, press the number key to enter the position number in the user phone book.
2. Press  to select the phone number.
3. Press  to make the call.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Call by phone book position

Route: Phone book » Position recall

1. Select **Position recall**, press  and then press .
 appears in the display.
2. Enter the phone book position number of the person you wish to call and press .
3. If necessary, scroll by using the  key.
4. Press  to make the call.

POSITION
RECALL
Position 

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Redialling one of the last dialled numbers

You can redial one of the last dialled numbers by:

- Quick redial.
- Redial using the **Phone Book** (see [page 47](#)).

Quick redial

1. In stand-by, press  and wait until the last dialled number and name (if stored in the phone book) appears.
2. If message **Call?** is displayed, scroll through the last dialled numbers by using the  key. If you press , the time or date of the call is also displayed. Press  to toggle between date and time.
3. Press  to dial the number.

Note If no names or numbers are available for redial the message **Empty list** is displayed.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Call?

31-Jan-00

012345678

print

find

contents

DT570 menu

index

back

Redial using the phone book

Route: Phone book » Dialed numbers

1. Select **Dialed numbers** and press . The last dialed number and name (if stored in the phone book) appears.
If you press , the time or date of the call is also displayed. Press  to toggle between date and time.
2. Scroll by using the  key.
3. Press  to dial the number.

Note If no names or numbers are available for redial the message **Empty list** is displayed.

Tip If you press  instead of  to dial the number, you can erase all entries in the last dialed numbers list.

PHONE BOOK

Dialed

numbers

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Returning a call

Both missed and answered calls can be returned. The following options are available:

- Return last missed call.
- Return one of the missed calls (see [page 49](#)).
- Return one of the answered calls (see [page 50](#)).

Return last missed call

If you miss a call, **Calls:1** appears in the display, together with the  symbol. The number indicates the number of missed calls.

If you do not want to return a call at this stage, press . To return the last missed call now press .

PHONE BOOK

Calls:1

 11:48 am

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Return one of the missed calls

Route: Phone book » Missed calls

1. Select **Missed calls** and press .
A list of numbers or names (if stored in the phone book) is displayed.
If you press , the time or date of the call is also displayed. Press  to toggle between date and time.
2. Scroll by using the  key.
3. Press  to dial the number.

- Notes**
- If no names or numbers are available for returning a call the message **Empty list** is displayed.
 - The message **Unidentified** is displayed if no information about a caller's number was received.

Tip If you press  instead of  to dial the number, you can erase the selected entry in the missed calls list.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Return one of the answered calls

Route: Phone book » Answered calls

1. Select **Answered calls** and press .
2. Scroll by using the  key.
3. Press  to dial the number.

Note If no names or numbers are available for calling back the message **Empty list** is displayed.

Tip If you press  instead of  to dial the number, you can erase all entries in the answered calls list.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Changing the earpiece volume during a call

To change the earpiece volume during a call

- Press the **VOLUME UP/DOWN** keys once or more. If the earpiece is at maximum or minimum volume, you hear a warning tone.



Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Turning off the microphone during a call

To turn off the microphone

- Press and hold down the  key. **Mute** is displayed.
- Release the  key to resume the conversation.



Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Mute ring signal temporarily

If the cordless phone rings at an inconvenient moment, you can turn off the ring signal temporarily by pressing .

You can also press one of the volume keys twice.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Using the display as scratch pad

During a phone call you can use the display as a scratch pad by entering a phone number with the number keys.

1. During a call enter a phone number with the number keys.
The digits are shown in the display.
2. When you finish the call, press .
The number remains in the display.
3. Press  to call the number.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Advanced telephoning

Overview

[Consulting with another person \(page 56\)](#)

[Transferring a call \(page 57\)](#)

[Second call and conference call \(page 58\)](#)

[Setting the cordless phone to tone dialling \(page 59\)](#)

[Setting the cordless phone to long tones \(page 60\)](#)

[Inserting a pause \(page 61\)](#)

Tip Click on a topic.

- Using this guide
- Overview DT570
- Contents
- Preparing for use
- Basic use
- Telephoning options
- Advanced telephoning
- Phone book
- Mail
- Settings
- Extra features
- Using networks
- Tips
- Troubleshooting
- Maintenance
- Safety instructions
- Technical specifications
- Glossary

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

Consulting with another person

The cordless phone allows you to consult with another person, if supported by the network. Please check your network administrator.

To consult another person

1. Press  to put the caller on hold.
2. Dial another number (the first caller is on hold and cannot hear you).
3. Press  to end the second call and continue the first call.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Transferring a call

The cordless phone allows you to transfer a call, if supported by the network. Please check your network administrator.

To transfer a call

1. Press  to put the caller on hold.
2. Dial another number.
3. If answered: press  to transfer the first call.
If not answered: press  to return to the first call.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Second call and conference call

During a call you may receive a second call or even a third, depending on the network.

If supported by the network you can have a conference call.

The handling of second calls and conference calls depends on your network. Please check your network administrator.

Using this guide
Overview DT570
Contents
Preparing for use
Basic use
Telephoning options
Advanced telephoning
Phone book
Mail
Settings
Extra features
Using networks
Tips
Troubleshooting
Maintenance
Safety instructions
Technical specifications
Glossary

print

find

contents

DT570 menu

index

back



Setting the cordless phone to tone dialling

If your cordless phone uses pulse dialling, you can switch to tone dialling if required. For example, to control a teleservice such as voice mail.

To switch the cordless phone to tone dialling during a call

Route: Special functions » Goto DTMF

1. Press  and then  to enter the **Special functions** menu.
2. Select **Goto DTMF** and press .
The cordless phone now uses tone dialling.

When you end the call, the cordless phone goes back to pulse dialling.

SPECIAL FUNC

Goto DTMF

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Setting the cordless phone to long tones

The tones transmitted by the cordless phone may be too short for some interactive information services. If you have problems, you can temporarily change the length of the tones.

If the cordless phone is set to long tones, the tones are transmitted for the same length of time as you keep the keys pressed down.

To switch the cordless phone to long tones during a call

Route: Special functions » Send tones

1. Press  and then  to enter the **Special functions** menu.
2. Select **Send tones (Off)** and press .
3. Select **On** and press .
The cordless phone switches to long tones for the duration of the call.

SPECIAL FUNC

Send tones
(Off)

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary



Inserting a pause

On some networks you can only make an external call if you first wait for the dial tone. You can insert a pause to have the cordless phone waiting for the dial tone.

To insert a pause in a phone number

Route: Special functions » Pause

1. Enter the phone number.
2. Press  and then  to enter the **Special functions** menu.
3. Select **Pause** and press .
A 'p' is displayed and the cordless phone waits at that position in the number.

Tip

When you enter a phone number before dialling, you can also press  for one second to insert a pause.

SPECIAL FUNC

Pause

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Phone book

Overview

[About the phone book \(page 63\)](#)

[Entering names in the phone book \(page 65\)](#)

[Adding name and phone number \(page 67\)](#)

[Editing phone book names and numbers \(page 70\)](#)

[Erasing names and numbers \(page 72\)](#)

Tip Click on a topic.

- [Using this guide](#)
- [Overview DT570](#)
- [Contents](#)
- [Preparing for use](#)
- [Basic use](#)
- [Telephoning options](#)
- [Advanced telephoning](#)
- [Phone book](#)
- [Mail](#)
- [Settings](#)
- [Extra features](#)
- [Using networks](#)
- [Tips](#)
- [Troubleshooting](#)
- [Maintenance](#)
- [Safety instructions](#)
- [Technical specifications](#)
- [Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

About the phone book

Your cordless phone contains a phone book in which you can store the numbers you call frequently. You get to the phone book via the **Phone book** menu.

The phone book menu includes functions for recalling the last dialed numbers. If you have the CLIP (Calling Line Identification Presentation) service you can also recall the last answered numbers and missed numbers.

Company phone book and user phone book

The phone memory can hold max. 1100 telephone numbers.

- The company phone book can have max. 1000 phone numbers. These numbers are programmed with a special accessory. The numbers are marked with an  icon and cannot be edited.
- You can also add phone numbers (max. 100) yourself. These numbers are the user phone book. You can edit these numbers.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Recall by position number

Phone numbers can be recalled from the phone memory by using its position number in the phone book. See “[Call by phone book position](#)” on page 45.

Speed dialling facility

You can “speed dial” the phone numbers that you store in positions 1 - 9 in the user phone book. You can use these positions to store important or frequently dialled numbers. See “[To call a phone number in position 1 - 9 of the user phone book](#)” on page 44.

Using this guide

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

print

find

contents

DT570 menu

index

back



Entering names in the phone book

Use the number keys to enter names in the phone book. Press a key once for the first letter on the key, immediately press twice for the second letter, and so on. See the table on [page 66](#) for more details.

Some special considerations:

- Insert lower case letters** • Press the letter first and then .
- Revert to upper case letters** • Press the letter and then .
- Insert an asterix (*)** • Press  twice.
- Enter a digit** • Press and hold the key until the digit appears.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Phone book

Key	Press key this many times for the character																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	-	?	!	,	.	:	;	"	'	<	=	>	()	1		
2 ABC	A	B	C	À	Ä	Æ	à	Ç	2	Γ							
3 DEF	D	E	F	è	É	3	Δ	Φ									
4 GHI	G	H	I	ì	4												
5 JKL	J	K	L	5	Λ												
6 MNO	M	N	O	Ñ	Ö	Ø	ò	6									
7 PQRS	P	Q	R	S	ß	7	Π	Σ									
8 TUV	T	U	V	Ü	ù	8											
9 WXYZ	W	X	Y	Z	9												
0 +	+	&	@	/	¤	%	\$	£	¥	§	¿	¡	Ø	θ	≡	Ψ	Ω
#	#	*															

Example: to insert **C** press **2** three times; to insert **è** press number **3** four times and to enter a space, press **1** once.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Adding name and phone number

Before you store phone numbers in the phone book, you have to decide how completely you have to store these numbers.

Do you want to make calls using the phone book in only one network?

Then you can store the phone numbers in the phone book just the way you dial them.

Do you want to make calls using the phone book in different networks?

Then you have to store the phone numbers with the phone number elements that differ per network. You have to fill in the **Own line settings** also. For more information on the phone number elements and the own line settings, see “[Own line settings](#)” on page 97.

- Using this guide
- Overview DT570
- Contents
- Preparing for use
- Basic use
- Telephoning options
- Advanced telephoning
- Phone book
- Mail
- Settings
- Extra features
- Using networks
- Tips
- Troubleshooting
- Maintenance
- Safety instructions
- Technical specifications
- Glossary

To store name and number in the phone book

Route: Phone book » Store

1. Select **Store** and press .
2. Enter the name you want to store ( = delete;  = move left or right;  = space;  = change case) and press .
3. Enter the phone number (press and hold  = pause).
The first free memory position in the phone book is prompted.

International phone numbers can be stored with the + sign in front. Press the  key until the + is displayed. The + sign replaces the international access code from the country you are calling from.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

STORE 16
Name: JAMES_

STORE 16
Name: JAMES
Enter no.: _

To store name and number in the phone book (continued)

- You now have two options:
 - If you want to store the phone number in this position press .
 - If you want to store the number in another position press . Then enter the number of the required memory position.
- Press  to store the name and number.

Overwrite Protection

If you try to store a phone number in a position which already contains a phone number, the message **Used Overwrite?** appears in the display.

You can then do one of the following:

- Store the number in a different position. Press  and then enter the new position number.
- Overwrite old number. Press .

STORE 15
Used
Overwrite?

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Editing phone book names and numbers

Note You cannot edit the entries that are marked with the  icon.

To edit an entry in the phone book using the name

Route: Phone book » Edit » Find name

1. Select **Find name**.
2. Enter the name or the first characters of the name you want to change and press  .
 - You can now change the name (in the middle line), the position number (in the top line) or the phone number (in the bottom line).
 - Press  to move the cursor to the next line.
 - Press  to move back the cursor.

EDIT

Find name

Name: _____

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

To edit an entry in the phone book using the name (continued)

3. Correct the name, the position number or the phone number with the number keys ( = delete character to the left of the cursor;  = move left or right). You can insert a character at the cursor's position.
4. Press  to confirm.

To edit an entry using the position number

Route: Phone book » Edit » Find pos

1. Select Find pos.
2. Enter the position number of the entry you want to change and press . Proceed from step 2 as described above.

EDIT

Find pos

Position: _

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Erasing names and numbers

Note You cannot erase the entries that are marked with the  icon.

To erase a phone number from the phone book directly

Route: Phone Book » Erase

1. Select **Erase** and press .
2. Enter the position number and press , or scroll with the  key.
3. Press  to erase the number.

To erase a phone number from the phone book using name or position recall

Route: Phone book » Name recall/Position recall

1. Select **Name recall** or **Position recall** and press .

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

PHONE BOOK

Erase

print

find

contents

DT570 menu

index

back

To erase a phone number from the phone book using name or position recall (continued)

2. Enter the name if you select **Name recall** or the position number if you select **Position recall** and press .
3. Press and hold down . The question **Erase?** appears.
4. Press  to erase the number.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Overview

[Four message types \(page 75\)](#)

[Information that a message has arrived \(page 77\)](#)

[Looking up the messages \(page 78\)](#)

[Reading page messages \(page 79\)](#)

[Confirming a page message \(page 81\)](#)

[Dial the phone number in a page message \(page 82\)](#)

[Erasing a page message \(page 83\)](#)

Tip Click on a topic.

- Using this guide
- Overview DT570
- Contents
- Preparing for use
- Basic use
- Telephoning options
- Advanced telephoning
- Phone book
- Mail
- Settings
- Extra features
- Using networks
- Tips
- Troubleshooting
- Maintenance
- Safety instructions
- Technical specifications
- Glossary

Four message types

With the DT570 you can receive 4 different message types:

- Page messages
- Voice messages
- Text messages
- Other messages

Page messages

Page messages consist of text. You can read this text in the display. You can reply to a page message by sending a confirmation (Accept or Decline). You can also answer a page message by easily dialling a phone number included in the message.

Voice, Text and Other messages

Voice messages consist of voice or sounds. **Text** messages consist of text. Unlike page messages text messages cannot be confirmed and do

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



not have the possibility of dialling an included phone number. **Other** messages are all messages not being page, voice or text messages.

The handling of **Voice**, **Text** and **Other** messages strongly depends on the network and cannot be described in this user's guide. Please contact your network administrator for more information on the availability of these message types on your network.

Storage of up to 10 messages in the cordless phone memory

Up to 10 page messages can be stored in the cordless phone memory. When the cordless phone has received more than 10 page messages, it automatically erases the oldest read one. You can also erase page messages yourself.

[Using this guide](#)

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)



Information that a message has arrived

The cordless phone informs you as follows when a message has arrived:

- A beep sounds.
- The indicator light on the top of the cordless phone flashes green rapidly.
- The message icon is displayed. The message icon is being displayed as long as there are messages that you have not read.
- If the cordless phone is in stand-by, a new page message is displayed automatically. Messages of other types you always have to look up yourself.



Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Looking up the messages

To look up messages

Route: Mail

1. Press  to select the message type you want to read: **Page**, **Voice**, **Text** or **Other**.
The number between () brackets indicates the number of new messages. If the number of new messages is not known, a ? is displayed.
2. Press .
A display for the particular message type is shown.
3. The handling of **Page** messages is described in the next paragraphs.

For **Voice**, **Text** and **Other** messages: if the mailbox number is available to the phone, you can call this number to check the messages. Press .



MAIL
Page
(3)



Call
Mailbox?

Reading page messages

To read page messages

Route: Mail » Page

1. Select **Page**.

The number between () brackets indicates the number of new messages. If the number of new messages is not known, a ? is displayed.

2. Press .

Now is displayed:

- A message tag: **Confirm** (confirmation required), **New** (message has not yet been read), or **Old** (message has been read and has been confirmed, if required).
- The time when the message was received. If the message is more than one day old, the date will be displayed.
- **From:** with the sender's name or phone number

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

New
02:00 pm
From: ...

print

find

contents

DT570 menu

index

back

To read page messages (continued)

3. Browse through the messages with the  key.
4. Press  to read a message.
5. Browse through the text lines with the  key.
6. Now you can choose:
 - Press  to end reading the message.
 - Press  if you want to confirm the message, to call the included phone number or to erase the message (see below).

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Confirming a page message

You can confirm the sender of a page message that you have received it. You can choose between sending an **Accept** or **Decline** as reply.

To confirm a page message

Route: Mail » Page

1. Press  to select a message and press .
2. Press .
The message **Confirm?** is displayed.
3. Press  to confirm the message.
The message **Send?** is displayed.
4. Press  to select **Accept** or **Decline**.
5. Press .
 - The message **Sending. Please wait** is displayed.
 - If thereafter **Finished** is displayed, the confirmation has been sent. In case of **Unsuccessful. Please retry**, the confirmation was not sent.



Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Dial the phone number in a page message

To dial a phone number in a page message

Route: Mail » Page

1. Select the message with the phone number using  and  and press .
2. Press .
The message **Confirm?** is displayed.
3. Press  or  until the message **Call?** is displayed.
4. Press .
5. If more phone numbers are available in the message, press  to select.
6. Press  to make the call.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Erasing a page message

To erase a page message

Route: Mail » Page

1. Select the message to erase with , and press .
2. Press .
The message **Confirm?** is displayed.
3. Press  or  until the message **Erase?** is displayed.
4. Press  to erase the page.
The message **Page erased!** is displayed.

Tip

You can quickly erase a message when reading it. When reading a page message, press . When the message **Erase?** appears, press  ( = cancel).

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Overview

[Ring level \(page 85\)](#)[Ear volume \(page 87\)](#)[Ring type \(page 88\)](#)[Edit melody \(page 89\)](#)[Key sound \(page 91\)](#)[Display light \(page 92\)](#)[Answering mode \(page 93\)](#)[Greeting text \(page 95\)](#)[Own line settings \(page 97\)](#)[Master reset: clear all settings \(page 105\)](#)

Tip Click on a topic.

- Note**
- For **Keylock** see: “Blocking the keys” on page 117.
 - For **Call info** see: “Call statistics” on page 107.
 - For **Language** see: “Step 4: Set display language” on page 13.

[Using this guide](#)[Overview DT570](#)[Contents](#)[Preparing for use](#)[Basic use](#)[Telephoning options](#)[Advanced telephoning](#)[Phone book](#)[Mail](#)[Settings](#)[Extra features](#)[Using networks](#)[Tips](#)[Troubleshooting](#)[Maintenance](#)[Safety instructions](#)[Technical specifications](#)[Glossary](#)

Ring level

You can turn the ringing signal off (0) or choose a ringing signal that rises in steps from the quietest to the loudest level.

To set the ring signal volume

Route: Settings » Ring level

1. Select **Ring level** and press .
2. Use the  key to decrease or increase the volume. Maximum 6 steps can be made. If you increase the level with  you hear the cordless phone ring.
3. Press  to confirm your choice.

Notes • If you turn the ringing signal off, all audible signals will also be turned off. You will, however, be informed of an incoming call by the indicator light on the top of the cordless phone and by the display. As reminder that the ringing signal is off, the ring off icon is shown in the display.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

SETTINGS

Ring level

print

find

contents

DT570 menu

index

back

Tip

- You can have one ring volume setting when the cordless phone is used as a hand-held unit and another setting when it is used with Ericsson external audio accessories. The same applies when using a vibrator.

Use the volume keys at the side of the cordless phone to change the level silently.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Ear volume

To change the earpiece volume

Route: Settings » Ear volume

1. Select **Ear volume** and press .
2. Use the  key or the volume keys at the side of the cordless phone to adjust the volume.
3. Press  to confirm your choice.

Tip

During a call you can use the volume keys at the side of the cordless phone to adjust the volume.

SETTINGS

Ear volume

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Ring type

To choose one of the ring signal types

Route: Settings » Ring type

1. Select **Ring type** and press .
2. Select the ring type that you want and press .
Set different ring signals for external calls, internal calls and call-back calls

Tip

Use the volume keys at the side of the phone to scroll silently through the available ring types.

RING TYPE

DECT ext
(Medium)

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Edit melody

You can program your own melody. The cordless phone can handle a range of tones ranging over two octaves. See the table below for the relationship between the tones and numeric keys on the cordless phone.

Press	To
 - 	Insert notes. To get a short note press the key for a short time. To get a long note, hold down the key
	Increase or decrease the pitch of the note to the left of the cursor in half tone steps. Press once for sharp, twice for flat and three times for normal pitch.
	Insert a short pause
	Get a higher or a lower octave for the note you have inserted. A '+' in front of the note indicates a higher octave.
	Erase the note to the left of the cursor. Press and hold down to erase the whole melody.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

To program a melody

Route: Settings » EditMelody

1. Select **EditMelody** and press .
2. Use keys as described in the table above to enter notes.
3. Press  to listen to your melody.
The question **Ready?** appears in the display.
4. Press  to save the melody or  to continue entering notes.

SETTINGS

EditMelody

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Key sound

To set the key sound

Route: Settings » Key sound

1. Select **Key sound (current mode)** and press .
Now you can choose:
 - clicks
 - tones
 - nothing (silent)
2. Select the key sound you want and press .

Note The only sound available for the volume keys is the click sound.

SETTINGS

Key sound
(Click)

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Display light

To set the display light

Route: Settings » Light

1. Select **Light (current mode)** and press .
Now you can choose:
 - automatic
 - off
 - on (all the time)
2. Select the display light setting you want and press .

In automatic mode, the display light is turned off automatically 10 seconds after the last key has been pressed. It will be turned on again when a key is pressed or when a call or message is received.

Note You can have one setting when the phone is used as a hand-held unit and another setting when the phone is used with any Ericsson external audio accessories equipment.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

SETTINGS

Light
(Auto)

print

find

contents

DT570 menu

index

back

Answering mode

Specifying an answering mode can be useful when, for example, the cordless phone is used with handsfree equipment.

To select an answering mode

 
Route: Settings » Answering mode

1. Select **Answering mode** and press .
2. Use  to select one of the following options:
 - **Any key:** you can answer an incoming call by pressing any key except the  key if the cordless phone is used with handsfree equipment.

ANSWER MODE

Any key
(Off)

To select an answering mode *(continued)*

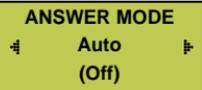

- **Auto**: an incoming call is answered automatically after one ring signal if the cordless phone is used with handsfree equipment. Before the call is answered automatically a signal can be heard.
3. Press  to confirm.
The answering mode has now been changed.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Greeting text

When switching on the cordless phone the greeting text is displayed. It is possible to enter a new greeting text. You can also turn the greeting on or off.

To enter your new greeting text

Route: Settings » Greeting » New text

1. Select **New text** and press .
2. Enter the greeting text using the numeric keys. Maximum length = 24 characters. For more information on how to enter letters, see “[About the phone book](#)” on page 63.
3. When you have entered your greeting, press .

GREETING

New text

()

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

To turn the greeting on/off

Route: Settings » Greeting

1. Select **Greeting** and press .
2. Choose **On** or **Off**.
3. Press  to confirm your choice.

GREETING

On

()

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Own line settings

When are Own line settings required?


You only need to make **Own line settings** if one or more of the following situations are applicable:

- If you want to make calls in different networks using the phone book.
- If you want to store international phone numbers in the phone book with a + for the international access code.
- If internal numbers are stored in the phone book as complete phone numbers with at least the PBX prefix.

- Using this guide
- Overview DT570
- Contents
- Preparing for use
- Basic use
- Telephoning options
- Advanced telephoning
- Phone book
- Mail
- Settings
- Extra features
- Using networks
- Tips
- Troubleshooting
- Maintenance
- Safety instructions
- Technical specifications
- Glossary

The elements of a phone number

In **Own line settings** you need to fill in the elements of your own phone number. A phone number can be divided into the following elements:

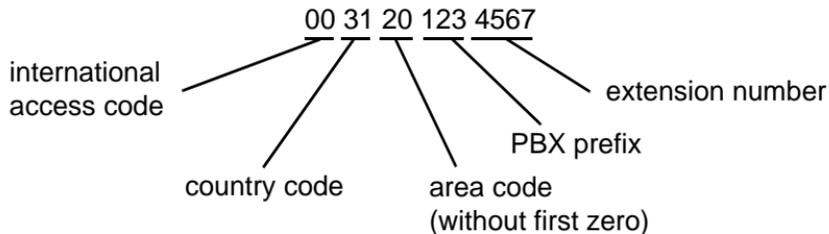

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Settings

International access code

Required digits when you want to make an international call (e.g. 00).
Only in the phone book a + can be used instead.

Country code

A code for the country, one or more digits.

Area code

Countries can have area codes for phone numbers in geographically different areas.

PBX prefix

When connected to a switchboard, all phone numbers of the connected phones start with the same first part. This common part is the **PBX prefix** (for examples, see below).

Extension number Unique part of the phone number, distinguishing the phone number from other phone numbers.

Note When making the own line settings you also need to fill in the external line prefix (**Ext. line**). This prefix (for example: 0) may be required before you can make an external call. This external line prefix is not part of the phone number.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Examples of PBX prefix and extension number

Example 1: All phones connected to a switchboard in a company start with 123. A complete phone number in this company is 1234567. The PBX prefix is 123 and the extension number is 4567.

Example 2: All phones connected to a switchboard in a company start with 8989. A complete phone number in this company is 8989123. The PBX prefix is 8989 and the extension number is 123.

Own line settings and phone book entries

If you want to make calls using the phone book in different networks and use own line settings, you have to store the phone numbers in the phone book with the phone number elements that differ per network.

For example, you want to make calls using the phone book in networks in different countries. Then you have to store the phone numbers with international access code, country code, area code, etc.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Settings

If, for another example, you want to make calls using the phone book in networks with different area codes, you have to store the phone numbers with at least the area code.

Tip If you want to make calls using the phone book in different networks but you are not sure how to store the phone numbers, it is advised to store the phone numbers in full, with international access code, country code, etc. The cordless phone will automatically detect which part of the phone book number should be dialled.

Specifying “Own line settings”

The procedure below assumes, as an example, that your own phone number is: 00 31 20-1234567. This number consists of:
00 = international access code; 31= country code; 20 = area code (without first zero); 123 = PBX prefix; 4567 = extension number. The external line prefix is 0.

Tip It is advised to fill in all own line settings, to guarantee that dialling will function properly in all networks.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



To specify own line settings for a network

Route: Settings » Own line

1. Make sure the phone is subscribed to the network you want to specify own line settings for. Only then you can specify own line settings.
2. Select **Own line** and press .
The first entry of the network list is displayed.
3. Press  to select the network for which you want to enter the own line settings.
4. Press  to confirm.
PBX prefix is displayed.
5. If the phone is connected to a switch board and has a PBX prefix common to other phone numbers, proceed with the next step. Otherwise continue with step 9.
6. Press  to enter the **PBX prefix**.
7. Enter the PBX prefix and press .
In the example: 123

SETTINGS

Own line

DECT LINE

PBX prefix
()

To specify own line settings for a network (continued)

- Some companies may use two PBX prefixes. To enter a second PBX prefix, press . Enter the second PBX prefix. Press .
- If you have to enter extra digits to get an external line, scroll to **Ext. line** and press . **Enter ext. line prefix** is displayed.
- Enter the required digits to get an external line and press .
In the example: 0
- Scroll to **Area code** and press . **Enter area code** is displayed.
- Enter the area code of your phone number (with or without first zero) and press .
In the example: 020 or 20
- Scroll to **Count.code** and press . **Enter country code** is displayed.

DECT LINE

Ext. line

()

DECT LINE

Area code

()

DECT LINE

Count. code

()

[Using this guide](#)[Overview DT570](#)[Contents](#)[Preparing for use](#)[Basic use](#)[Telephoning options](#)[Advanced telephoning](#)[Phone book](#)[Mail](#)[Settings](#)[Extra features](#)[Using networks](#)[Tips](#)[Troubleshooting](#)[Maintenance](#)[Safety instructions](#)[Technical specifications](#)[Glossary](#)[print](#)[find](#)[contents](#)[DT570 menu](#)[index](#)[back](#)

To specify own line settings for a network (continued)

14. Enter the country code of your telephone number and press .
In the example: 31
15. Scroll to **Int. code** and press .
Enter int. code is displayed.
16. Enter the international access code and press .
In the example: 00

DECT LINE

Int. code

()

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Master reset: clear all settings

To reset the cordless phone to the default values

Route: Settings » Master reset

1. Select **Master reset** and press .
2. Enter the phone lock code (default is 0000) and press .

SETTINGS

Master
reset

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical
specifications

Glossary

print

find

contents

DT570 menu

index

back

Extra features

Overview

[Call statistics \(page 107\)](#)

[Call diversion \(page 110\)](#)

[Phone lock code protection \(page 112\)](#)

[Looking up the IPEI code \(page 116\)](#)

[Blocking the keys \(page 117\)](#)

Tip Click on a topic.

Using this guide

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

Call statistics

During a call, the duration of the call is shown in the display. Additional the following statistics are available:

- Last call information
- Total call information

To check the time of the last call

Route: Info » Last call

- Select **Last call** and press .
The duration of the last call (incoming or outgoing) is displayed.

To select the type of call information

Route: Settings » Call info

1. Select **Call info** and press .

INFO

Last call
0:20

SETTINGS

Call info
(Time: All)

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

To select the type of call information (continued)

2. Select the type of call information:
3. **Time: All** : for incoming and outgoing calls
4. **Time:Outg.**: for outgoing calls
5. Press  to confirm your choice.

To check total call time

Route: Info » Tot calls

- Select **Tot calls** and press .
Depending on the **Call info** setting, you can check:
 - The duration of both incoming and outgoing calls.
 - The duration of all outgoing calls.



Using this guide

- Overview DT570
- Contents
- Preparing for use
- Basic use
- Telephoning options
- Advanced telephoning
- Phone book
- Mail
- Settings
- Extra features
- Using networks
- Tips
- Troubleshooting
- Maintenance
- Safety instructions
- Technical specifications
- Glossary

To reset the total call time meter

Route: Info » Tot calls

1. Select **Tot calls** and press .
The message **Reset?** appears.
2. Press  to reset the meter.

TOT CALLS

Reset?

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Call diversion

Call diversion can be made by using divert codes (network dependent). Divert codes are numbers containing a # or *.

The divert codes should be stored in the phone book as normal phone numbers (see “[Adding name and phone number](#)” on page 67).

With the option **Divert** you can easily activate the divert codes.

To activate a call divert

Route: Divert

1. Select **Divert** and press .
The phone book is automatically activated.
2. Select the appropriate divert code according to the procedure “[Call by name](#)” on page 42.

MENU

Divert

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

To activate a call divert *(continued)*

3. If necessary, add digits to the divert code by pressing the number keys.
4. Press  to activate the divert code.
The phone dials the divert code.

Tip

To cancel a call divert, choose the required divert code (network dependent) with the **Divert** option.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Phone lock code protection

The phone lock protects the cordless phone against unauthorized use. If you want to activate the phone lock change the factory-programmed phone lock code (0000) to any 3- to 8-digit personalized code.

To activate the phone lock

Route: Access » Phone lock

1. Look up the IPEI code of the cordless phone and write it down. See “[Looking up the IPEI code](#)” on page 116. If you happen to forget the phone lock code, you will need the IPEI code to unlock the cordless phone.
2. Select **Phone lock** and press  .
The current selection is shown in the display.
3. Select **Full lock** and press  .

ACCESS
Phone lock
(Unlocked)

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

To activate the phone lock (continued)

4. Enter your phone lock code (the default code is 0000).
5. Press  to confirm your choice.

If the phone lock is on, the message **Phone locked** is displayed briefly each time the cordless phone is turned on or if you want to change specific settings in the cordless phone. The message is followed by the prompt **Enter lock code**. Enter the phone lock code and press  to use the cordless phone.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

To change the phone lock code

Route: Access » Phone lock - Change code

1. Select **Phone lock Change code** and press .
 2. Enter your old (current) code and press .
 3. Enter your new code and press .
 4. Repeat your new code and press .
- The message **New code** confirms that the code has been changed.

If the message **Wrong code** appears in the display, the cordless phone returns to stand-by mode. Your old code was entered incorrectly. The phone lock code has not been changed. Repeat the procedure above.

If the message **Matching error** appears, the new phone lock code was not entered correctly. Repeat the procedure above.

ACCESS
Phone lock
Change code

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

To cancel the phone lock

Route: Access » Phone lock

1. Select **Phone lock** and press .
The current selection is shown in the display.
2. Select **Unlocked** and press .
3. Enter your phone lock code.
4. Press  to confirm your choice.

ACCESS

Phone lock
(Full lock)

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Looking up the IPEI code

The IPEI code is a unique code of the cordless phone. You may need the IPEI code to unblock the phone if you have forgotten the phone lock code.

To display the IPEI code

- In the stand-by display, press: *#06#

Once the cordless phone has been locked with the phone lock code, you have to enter the phone lock code before the IPEI code is displayed. So it is advised to look up the IPEI code before setting the phone lock code.

Note Write down the IPEI code for future use. Keep the IPEI code secret to prevent misuse of your phone.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Blocking the keys

The keylock feature helps you to avoid accidental dialling, which can happen if you keep your cordless phone in your pocket. You can choose between manual keylock and automatic key lock.

To lock the keys manually

- Select **Keylock On?** in the main menu and press




To set the automatic keylock

Route: Settings » Keylock

1. Select **Keylock** and press 
2. Select **Auto** and press .
If no keys are pressed within 25 seconds, the keys are locked.

A key icon informs you that the keys are locked.

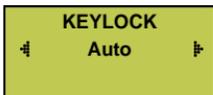

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Extra features

The keys remain locked until you:

- Answer an incoming call.
- Unlock the keys.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Using networks

Overview

[Connecting to networks \(page 120\)](#)

[Automatic network search \(page 123\)](#)

[Searching for a specific network \(page 125\)](#)

[Ordering the network list \(page 126\)](#)

[Editing the network name \(page 128\)](#)

[Erasing a network \(page 129\)](#)

Tip Click on a topic.

Using this guide

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

Connecting to networks

Subscribing to a network

You only have to subscribe to a network once. When subscription is completed, you can make and receive calls whenever you are within range of that network. A subscribed network can be selected automatically or manually.

During the subscription process the cordless phone receives an extension number by which it can be called by another phone on the network.

See “[Step 6: Subscribe to a network](#)” on page 15 for the subscription procedure.

Network connection

If your cordless phone is connected to a network, the name of the current telephone network is displayed and a signal strength indicator is shown.

Using this guide

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)



NETWORK

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

Using networks

It is possible to connect a cordless phone to 8 networks. If the signal strength indicator is visible, you can make and receive telephone calls.

If the indicator is empty, then the cordless phone is not connected to a network. Causes may be:

- You are out of range of the network.
Check that the network is operating correctly and that you are within range.
- There is no access to the network.
The cordless phone is not able to connect or its access rights may have changed. Try switching the phone off and on again. You can also try selecting the network again (see “[Searching for a specific network](#)” on page 125). If this does not help, contact your network administrator.

Operating range

You can use your cordless phone in the area that is covered by the network. Outside this area, you lose contact with the network, the signal

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

121

Using networks

strength indicator disappears and the indicator light on the cordless phone does not flash green.

Network list

The cordless phone contains a list with the network names. In case of automatic network selection, the cordless phone tries to connect to the network in the order of the list; first network entry 1, followed by network entry 2 etc. To change the network order, see [“Ordering the network list”](#) on page 126.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Automatic network search

In automatic search mode the cordless phone first searches for the first network in the network list. If this network is not available, the phone starts searching for another available network. The phone follows the order of the network list that is stored in the phone.

To enable automatic network search

Route: Networks » Searchmode

1. Select **Searchmode** and press .
The next setting is displayed.
2. Use the  key to select **Auto**.
3. Press  to enable automatic network search.

If you are entering another network (to which the cordless phone is subscribed to) the cordless phone automatically searches for right network settings. In some cases, however, it might be useful to start a new search manually. Proceed as follows:

SEARCHMODE

Auto

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

To start a new automatic network search

Route: Networks » New search

- Select **New search** and press . **Searching** may be displayed for a short while.

NETWORKS

New search

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Searching for a specific network

To search for a specific network

1. Select **Networks » Searchmode** and press .
The current setting is displayed.
2. Use the  key to select **Manual**.
3. Press  to confirm.
Manual network search is now on.
4. Select **Networks » Select net** and press .
Please wait is briefly displayed and then the first network name in the list is displayed.
5. Use  to select a network name.
6. Press  to confirm.
The cordless phone will search for the selected network.

SEARCHMODE

Manual

NETWORKS

Select net

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Ordering the network list

In automatic search mode, the cordless phone searches for a network in the order of the network list, starting with number 1. You can change this order.

To change the order of the network list

Route: Networks » Edit list

1. Select **Edit list** and press .
The first network name in the network list is displayed.
2. Use the  key to select a network name.
3. Press .
Move is displayed.
4. Press  to select.
New pos: is displayed.

NETWORKS

Edit list

EDIT LIST

Name (1)

Move

MOVE

Name

New pos: _

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

To change the order of the network list (continued)

5. Enter the number of the new position in the list.
6. Press  to confirm.
The network name is moved to the position you have chosen. The other network names in the list are re-arranged accordingly, keeping their relative positions.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Editing the network name

You can give each subscribed network a name. The name is displayed when the phone is connected to that network and in stand-by. When you change the name, the subscription data remain unchanged.

To edit the network name

Route: Networks » Edit list

1. Select **Edit list** and press .
2. Use  to select the name to edit.
3. Press .
Move is displayed.
4. Select **Rename** and press .
5. Change the name using the  key (delete) and the number keys.
6. Press  to finish.

Tip

Use the network names as a personal identity for the phone or to identify an area.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

NETWORKS

Edit list

EDIT LIST

Name ()

Rename

print

find

contents

DT570 menu

index

back

Erasing a network

The network list contains the names of the networks to which the cordless phone can connect. If a network is no longer required, you can erase it.

To erase a network from the list

Route: Networks » Edit list

1. Select **Edit list** and press .
The first network name in the network list is displayed.
2. Use  to select the network name that you want to delete.
3. Press .
Move is displayed.
4. Select **Erase** and press .
The network name has been removed from the network list.



NETWORKS

Edit list



EDIT LIST

Name ()

Erase

print

find

contents

DT570 menu

index

back

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Overview

[Call using the phone book \(page 40\)](#)

[Redialling one of the last dialled numbers \(page 46\)](#)

[Turning off the microphone during a call \(page 52\)](#)

[Mute ring signal temporarily \(page 53\)](#)

[Using the display as scratch pad \(page 54\)](#)

[Second call and conference call \(page 58\)](#)

[Transferring a call \(page 57\)](#)

Tip Click on a topic.

- [Using this guide](#)
- [Overview DT570](#)
- [Contents](#)
- [Preparing for use](#)
- [Basic use](#)
- [Telephoning options](#)
- [Advanced telephoning](#)
- [Phone book](#)
- [Mail](#)
- [Settings](#)
- [Extra features](#)
- [Using networks](#)
- [Tips](#)
- [Troubleshooting](#)
- [Maintenance](#)
- [Safety instructions](#)
- [Technical specifications](#)
- [Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

Troubleshooting

Overview

The cordless phone does not come on (page 132)

The phone lock is activated (page 133)

No network (page 134)

Phone lock code forgotten (page 135)

Cannot understand the language in the display (page 136)

Long beep at regular intervals (page 137)

External call requires wait for dial tone (page 138)

Unable to make an international call (page 139)

Tip Click on a topic.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



The cordless phone does not come on

The battery may have to be charged or replaced. For replacing the battery see “[Changing the battery](#)” on page 143. For charging the battery see “[Charging the battery](#)” on page 37.

[Using this guide](#)

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

The phone lock is activated

If the phone lock is activated, you need to enter the phone lock code before you can use the phone. If the message **Enter lock code** appears in the display, enter your phone lock code and press . See for more information “[Phone lock code protection](#)” on page 112.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

No network

- Check if the cordless phone is subscribed to a network. See for more information “[Subscribe to a network](#)” on page 15.
- If so, try to search for a network: use either auto search or manual search. See “[Automatic network search](#)” on page 123 or “[Searching for a specific network](#)” on page 125.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Phone lock code forgotten

You can use the IPEI code to unlock the cordless phone.

If the message **Enter lock code** appears in the display, enter the IPEI code. The phone lock code will be reset to '0000'.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Cannot understand the language in the display

Reset to English (the default language), enter the sequence *#0000#. For other languages see “[Set display language](#)” on page 13.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Long beep at regular intervals

A long beep at regular intervals is audible when the battery of the phone is almost flat. For charging the battery see “[Charging the battery](#)” on page 37.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



External call requires wait for dial tone

On some networks you can only make an external call if you first wait for the dial tone. You can insert a pause to have the cordless phone waiting for the dial tone. See [“Inserting a pause”](#) on page 61.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Unable to make an international call

You can make an international call in two ways:

- Using the phone book.
You can store international phone numbers in the phone book with the international + sign in front. The + replaces the international access code.
To enter the +, press and hold down  until the + appears.
- By dialling the complete international phone number. You have to enter the international access code and the required country code in front of the phone number.

Note The + sign can be used only in the phone book.
You cannot directly enter the + sign and then dial an international number.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Maintenance

Overview

[Required service \(page 141\)](#)

[Cleaning \(page 142\)](#)

[Changing the battery \(page 143\)](#)

Tip Click on a topic.

- Using this guide
- Overview DT570
- Contents
- Preparing for use
- Basic use
- Telephoning options
- Advanced telephoning
- Phone book
- Mail
- Settings
- Extra features
- Using networks
- Tips
- Troubleshooting
- Maintenance
- Safety instructions
- Technical specifications
- Glossary

print

find

contents

DT570 menu

index

back

Required service

The cordless phone does not contain user serviceable parts. If your cordless phone requires service you should return it to your dealer or retailer.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Cleaning

Clean the cordless phone with a soft cloth moistened with water only.

The use of soap and other cleaning products can discolour and damage the cordless phone.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index


back

Changing the battery

Rechargeable batteries have a limited lifespan. If the stand-by time for the cordless phone becomes too short, you should replace the battery. Please contact your dealer or retailer for more information.

The battery does not contain cadmium and is therefore more environmentally-friendly than other rechargeable batteries. However, all batteries should be treated as chemical waste.

You can remove the battery as shown. Ensure that the cordless phone is turned off before you remove the battery.

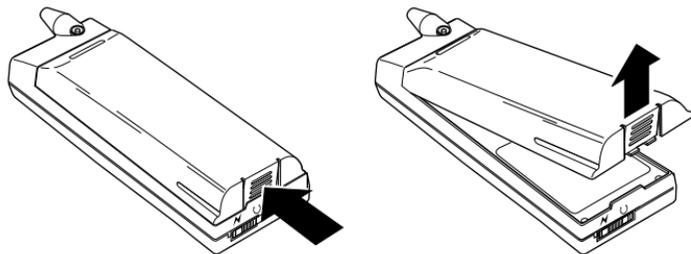

Safety instructions

Intrinsic safety

Do not use the cordless phone and charger in conditions where there is a danger of electrically ignited explosions.

Exposure to sunlight, heat and moisture

Do not expose the cordless phone and charger to direct sunlight for long periods. Keep the cordless phone and charger away from excessive heat and moisture.

Battery disposal

Defective batteries must be returned to a collection point for chemical waste disposal.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Spare parts and accessories

Use only approved spare parts and accessories. The operation of non-approved parts cannot be guaranteed and may even cause damage. For more information contact your dealer or retailer.

Antenna

Do not use the cordless phone with a damaged antenna. Take your cordless phone to your dealer or retailer for repair. Use only the designated Ericsson antenna.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Technical specifications

Power supply

Battery NiMH pack 650 mAh, 4.8 V

Standards and regulations

CE regulations 1999/5/EC, 73/23/EEC, 89/336/EEC, 93/68/EEC

CE marking CE 0344

DECT standards CAP EN 300 824, TBR6, TBR10, TBR22 + A1

Safety standards EN60950, IEC950, ETS 300 175-8
AS/NZS 3260, ACA TS001

EMC standards ETS 300 329, AS NZS 3548

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Technical specifications

Maximum environmental values during use

Temperature	0 to +40°C
Relative air humidity	Up till to 95% non-condensing

Dimensions and weight

L x W x Th	129 x 48 x 24 mm
Weight	95 g (without battery pack), Battery pack: 70 g

Performance

Battery	NiMH, 500 to 1000 charge cycles
Stand-by time	Up to 50 hours
Call time	Up to 10 hours
Charge time	2 hours maximum

[Using this guide](#)

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)



Technical specifications

Volume

Ring signal Adjustable in 6 steps (max. 110 dB (A) at 1 cm)

Earpiece Adjustable in 4 steps

Phone book

Maximum name length 16 characters

Maximum number length 20 digits

Entries max. 1100 (max. 1000 in the company phone book;
max. 100 in the user phone book)

Connectors

Accessory connector For hands-free equipment, programming tools, etc.
Contact your dealer or retailer for more information.

Battery connector For battery charging

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Authentication Code (AC)

The authentication code is required when subscribing a phone to a network. It prevents other phones subscribing to the network without your approval. Contact your network administrator for this code.

Call back

Some networks call you back when you for instance transfer an external call to another phone without waiting for an answer but the third party does not respond. The reasons for call back depend on the type of network.

DECT

Digital Enhanced Cordless Telecommunications (DECT) is a digital access technology which ensures a sound quality equal to that of a fixed phone and provides maximum privacy. Eavesdropping or breaking in on the line by strangers is virtually impossible.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

Divert

Call divert enables you to forward calls to another phone number.

DTMF or touch tone

Dual Tone Multi Frequency (DTMF) allows you to send number key presses as tone signals over the telephone line. These tones can be used for interactive telephone services, for accessing an answering machine, etc.

External call

A call is external when a phone connected to the network makes or receives a call via an external line.

External line prefix

The external line prefix (for example a '0') may be required before you can make an external call.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



IPEI

International Portable part Equipment Identity. Unique code assigned to your cordless phone by the manufacturer.

Internal call

A call is internal when a phone connected to the network calls another phone on the network.

International sign (+)

Phone book only: the plus sign automatically adds the correct international access numbers in front of a telephone number of the country you are calling from when you are making an international call.

Menu

The phone's menu helps you to access its functions. The menus are arranged in a hierarchical way and can be accessed when scrolling with the arrow keys.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Other message

Messages that are not page, voice or text messages (network dependent).

Page message

A page message consists of up to 160 characters. The sender of a page message can require you to confirm the message. An urgent page message can be put on the cordless phone display directly.

PARK

Portable Access Rights Key (PARK) is a network identification for the phone. It is sometimes required to subscribe a phone to a network. Contact your network administrator for this code.

Phone book

The phone book consists of a company phone book and a user phone book.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



Glossary

- The company phone book is programmed with a special accessory. The numbers are marked with an  icon and cannot be edited.
- You can also add telephone numbers yourself. These numbers are the user phone book. You can edit these numbers.

Phone lock code

The phone lock code prevents unauthorized use of the cordless phone. The default code from factory is 0000. The code can be changed to a personal one.

Scroll

To move between the menus using the arrow keys.

Subscription

Subscription is a record with the necessary information to connect the phone to a network. Only with a subscription the phone can use the network.

[Using this guide](#)

[Overview DT570](#)

[Contents](#)

[Preparing for use](#)

[Basic use](#)

[Telephoning options](#)

[Advanced telephoning](#)

[Phone book](#)

[Mail](#)

[Settings](#)

[Extra features](#)

[Using networks](#)

[Tips](#)

[Troubleshooting](#)

[Maintenance](#)

[Safety instructions](#)

[Technical specifications](#)

[Glossary](#)

[print](#)

[find](#)

[contents](#)

[DT570 menu](#)

[index](#)

[back](#)

Glossary

Text message

A text message consists of up to 160 characters. A text message cannot be confirmed like a page message.

Voice message

Message consisting of voice or sounds.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



AAC [15](#)Accessories [145](#)Add name and number [67](#)Answer a call [22](#)Answered calls list [50](#)Answering mode [93](#)Area code [99](#)Authentication Code [15](#)Automatic network search [123](#)**B**

Battery

attach [10](#)change [143](#)**C**

Call

by name [42](#)by name (quick) [41](#)by phone book [40](#)by phone book position [43](#), [44](#), [45](#)by phone book position 1-9 [44](#)conference [58](#)consult others [56](#)divert [110](#)handsfree [93](#)information [24](#), [25](#)international [139](#)off hook [21](#)on hold [56](#)on hook [20](#)receive [22](#)receive second call [58](#)reject [23](#)return calls [48](#)statistics [107](#)stop ringing [23](#)transfer [57](#)Change earpiece volume [51](#)Charging [11](#), [37](#)time [11](#), [37](#)

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Cleaning [142](#)
Clear settings [105](#)
Conference call [58](#)
Consult others [56](#)
Country code [99](#)

D

Date
 format [35](#)
 setting [35](#)
Delete name and number [72](#)
Display information [24](#)
 call duration [25](#)
 call type [24](#)
 caller's number [24](#)
 current date [26](#)
 current time [26](#)
 network name [24](#)
 redirected call [25](#)
Display light [92](#)
Divert calls [110](#)
Divert codes [110](#)

E

Earpiece volume [87](#)
Enter
 (special) characters [65](#)
 letters [65](#)
 names [65](#)
 single phone book entries [97](#)
Erase network [129](#)
Erase page message [83](#)
Extension number [99](#)
External line prefix [99](#), [103](#)

F

Full lock [113](#)

G

Greeting text [95](#)

H

Handsfree equipment settings [93](#)

Using this guide

Overview [DT570](#)

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

I

- Information in display [24](#)
- Inserting pause [61](#)
- International access code [99](#)
- International call [139](#)
- Intrinsic safety [144](#)
- IPEI [116](#), [151](#)

K

- Key sound [91](#)
- Keylock
 - activate (automatic) [117](#)
 - activate (manual) [117](#)

L

- Last call info [107](#)
- Last dialled number [46](#)

M

- Maintenance [141](#)
- Manual network search [125](#)
- Master reset [105](#)

Melodies [88](#)

Message

- other [75](#)
- page [75](#)
- text [75](#)
- voice [75](#)

Missed calls [48](#)

- list [48](#)

N

Name and number. See Phone book

Navigation keys [4](#)

Network

- connecting to [120](#)
- connection [120](#)
- erase [129](#)
- list [122](#)
- name [24](#)
- operating range [121](#)
- possible troubles [121](#)

Network order [126](#)

O

Off hook dialling [21](#)

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

On hook dialling [20](#)
Operating range [121](#)
Other messages [75](#)
Overwrite protection [69](#)
Own line settings [97](#), [102](#)

P

Page messages [75](#)
PARK [15](#)
Pause in phone number [61](#), [138](#)
Phone book [40](#), [62](#)
 (special) characters [65](#)
 add name and number [67](#)
 area code [99](#)
 country code [99](#)
 delete name and number [72](#)
 edit name and number [70](#)
 elements [98](#)
 entry [98](#)
 external line prefix [103](#)
 international access code [99](#)
 letters [65](#)
 names [65](#)
 single entries [97](#)
 store entry on same position [69](#)

Phone lock [112](#)
 activate [112](#)
 cancel [115](#)
 change code [114](#)
 code [113](#)

Phone number [99](#)
Portable Access Rights Key [15](#)
Program own melody [89](#)
Pulse dialling [59](#)
Put call on hold [56](#)

Q

Quick call
 by name [41](#)
 by phone book position [43](#), [44](#)
 by phone book position 1-9 [44](#)
Quick redial
 last dialled numbers [46](#)

R

Range network [121](#)
Receive
 calls [22](#)
 second call [58](#)

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

Redial **46**
last dialled numbers **46, 47**

Reject a call **23**

Reset
display language (to English) **13**
total call info **109**

Retrieve IPEI code **116**

Return calls **48**

Ring volume **85**

Ringer
melodies **88**
off **85**
tones **88**

Route indication **4**

S

Search
automatic **123**
available network **123**
manual **125**
specific network **125**

Second call **58**

Selection network priority **126**

Service **141**

Spare parts **145**

Stand-by mode **12**

Store number on same position **69**

Subscription
AC **15**
PARK **15**

Switch
cordless phone off **38**
cordless phone on **12**

T

Text messages **75**

Text when switching on **95**

Time setting **36**

Tone dialling **59**

Total call info **107**

Transfer call **57**

Turning microphone off **52**

U

Unanswered calls **48**

Using menus **4**

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

V

Voice messages **75**

Volume

earpiece **87**

ringer **85**

W

Wait for dial tone **61, 138**

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back



About this user's guide

This user's guide is published by Ericsson Business Mobile Networks BV, without any warranty. Improvements and changes to this user's guide necessitated by typographical errors, inaccuracies of current information, or changes to programs and/or equipment, may be made by Ericsson Business Mobile Networks BV at any time and without notice. Such changes will, however, be incorporated into new editions of this user's guide. All rights reserved.

Declaration of Conformity

Hereby, Ericsson Business Mobile Networks, declares that this DT570 cordless phone is in conformity with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Using this guide

Overview DT570

Contents

Preparing for use

Basic use

Telephoning options

Advanced telephoning

Phone book

Mail

Settings

Extra features

Using networks

Tips

Troubleshooting

Maintenance

Safety instructions

Technical specifications

Glossary

print

find

contents

DT570 menu

index

back

