

PARTS LIST

for

KitchenAid®

MIDLINE 4-SLICE TOASTER

MODELS:

KMTT400B0 (Onyx Black)
KMTT400ER0 (Empire Red)
KMTT400GC0 (Gloss Cinnamon)
KMTT400BW0 (Blue Willow)
KMTT400SS0 (Stainless Steel)




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



UNIT PARTS

For Variations of Models: KMTT400__0

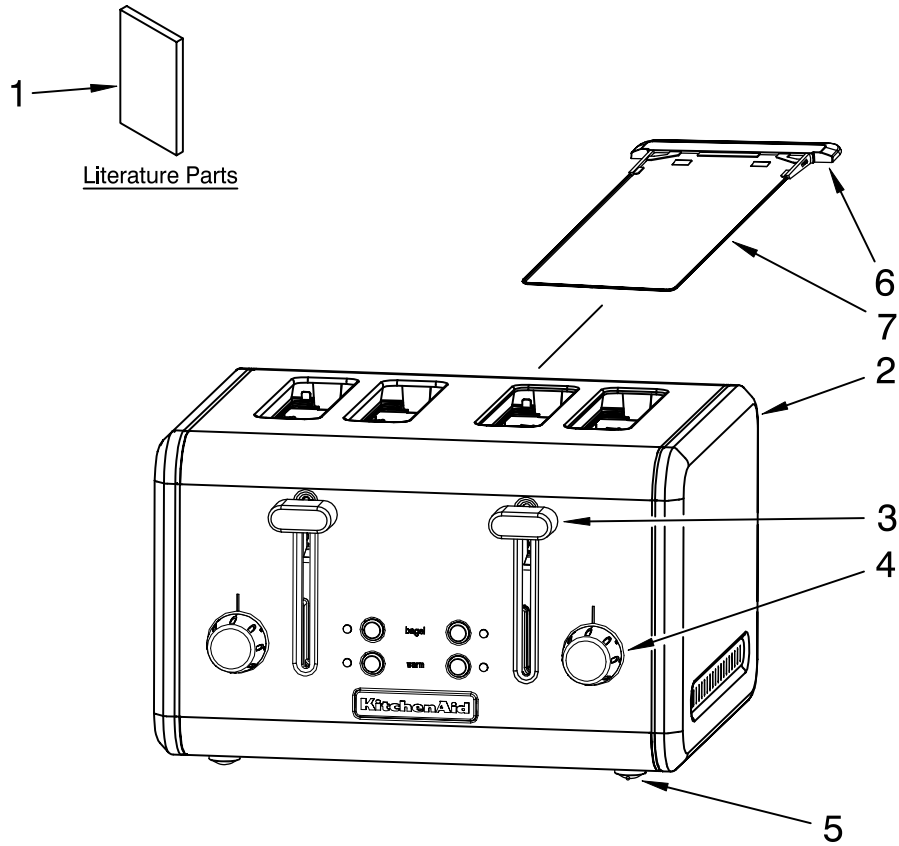

| Illus. No. | Part No. | DESCRIPTION |
|------------|----------|-------------------|
| 1 | | Literature Parts |
| | 8212358 | Use & Care Guide |
| | 8212308 | Repair Parts List |
| 2 | | ◆ Unit, Toaster |
| 3 | 8212355 | Knob, Lifter |
| 4 | 8212356 | Knob, Control |
| 5 | 8212354 | Foot, Rubber |
| 6 | 8212352 | Handle, Tray |
| 7 | 8212353 | Tray, Crumb |

◆ **Note:**
 Parts not sold separately.
 Must be purchased as a
 complete unit.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST