



EK-PSK2 / EK- PSK4 EK-PAK2 / EK- PAK4

2/4 ports PS2 KVM Switches

Quick Installation Guide

Introduction

The Edimax KVM switch series is a 2/4-port Slim Palmtop PS/2 KVM Switch with *optional* audio and microphone switching function. It allows you to access, control, boot and reboot multiple PS/2-enabled computers using only one keyboard, video, mouse, and *optional* speaker set and microphone. It also offers user-programmable *simultaneous/independent* switching of PC channel and Audio/Mic channel for flexible multimedia application with KVM switching. For users who might need to use a hotkey preceding sequence other than two scroll locks, we also offer five key alternatives for free configuration.

Before you install

The default setting of the KVM switches is appropriate for most systems. The KVM Switch is a Plug-and-Play device for installation. In fact, you do not need to configure the KVM Switch before installation.

For the first time installation of the KVM Switch, please follow the instructions below for correct setup sequence:

The correct setup sequence is

(1) Connect the shared keyboard, monitor and mouse (and optional speaker set and microphone) to the KVM Switch first, and then connect your computers.

(2) Power up your connected computers...


Since the KVM Switch receives power from the computer's PS/2 interface, it is powered up when you connect the KVM Switch to a PC.

Out-of-the-box Installation

Take the KVM Switch out of the box and begin installation....

DO NOT TRY to connect the KVM Switch to the computers while the computers are still in powered-on states. Otherwise, the computer will have difficulty recognizing your shared keyboard and mouse.

- Step 1. Make sure all the computers that are to be connected to the KVM Switch and their peripherals are in powered-off state. If not, power them off before you proceed with the following steps.
- **Step 2.** Connect the shared PS/2 keyboard, mouse, monitor, speaker set and microphone to the KVM switch.
- **Step 3.** Connect each of your computers to the KVM switch, using appropriate KVM & Audio/Mic cables.

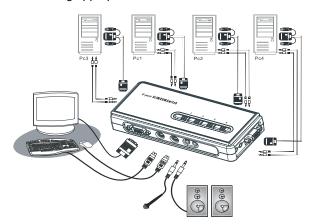

Configuration Diagram

Step 4. (Now your KVM Switch should have been powered-up....) Power up the connected computers one by one. After your computers are powered up, the

keyboard and mouse will be recognized and now you can begin operating the KVM switch.

Easy Operation

There are two methods to control your KVM Switch for PC switching: using the face-panel push button or a hotkey sequence. For audio/mic switching, use the hotkey command. See Quick Reference Sheet

Face-panel buttons

The face-panel buttons allows you a direct control over PC port switching. Simply press the button to switch PC port. By default, PC port switching and Audio/Mic port switching are bound together (both will be switched simultaneously). If you want to enable the binding of PC and audio/mic port switching, use the hotkey sequence, ScrLk + ScrLk + Q. To disable the binding again, just hit ScrLk + ScrLk + W. See Quick Reference Sheet

Keyboard hotkey

A keyboard hotkey sequence consists of at least three specific keystrokes: <u>See Quick Reference Sheet</u>

Hotkey sequence = [ScrLk] + [ScrLk] + Command key(s)

* User-definable = SCROLL LOCK, CAPS, ESC, F12 or NUM
LOCK

Hotkey preceding sequence configuration: For users who want to use a preceding sequence other than two consecutive Scroll Locks, there is also one convenient way to configure it:

- Step 1. Hit ScrollLock + ScrollLock + H, then two beeps will signal readiness for new preceding sequence selection. [or Press and hold down the last front-panel button (Button 2 or Button 4) until you hear two beeps, and then release the button.]
- Step 2. Select and press the key you would like to use as your preceding sequence (SCROLL LOCK, CAPS, ESC, F12 or NUM LOCK keys are available for selection) and you'll hear a beep for selection confirmation. Now you can use the new preceding sequence to execute your hotkey commands.

Another way to activate the Hotkey preceding sequence configuration is to press the last front-panel button (button 2/button 4) for over 3 seconds to set the KVM switch into hotkey configuration mode. Then you select and press the key that you'll choose as the preceding sequence.

Each keystroke within a hotkey sequence should be pressed within 2 seconds. Otherwise, the hotkey sequence will not be validated.

For detailed Hotkey sequences and their corresponding functional commands, please refer to the Quick reference sheet.

Quick Reference Sheet

2/4-port Slim Palmtop PS/2 KVM Switch Operation Commands for Hotkeys/ Face-Panel Buttons Hotkey sequence = [ScrLkj + [ScrLkj + Command key(s) * User-definable Preceding sequence = SCROLL LOCK, CAPS, ESC, F12 or NUM LOCK			
Command	Hotkeys	Face-panel Buttons	Description
Select PC Channel (Joint-select PC port and Audio/Mic port, if binding is enabled) ²	ScrLk + ScrLk + (x) 1 (x is a top-row number key) x = 1 ~ 2 or 1 ~ 4 for PC channel no		Select the active PC channel (Joint-select PC & Audio/Mic port, if binding is enabled)
Select Audio/Mic Channel	ScrLk + ScrLk + (Fx) (Fx is a function key) x = 1 ~ 2 for Audio mic channel no		Select the active Audio/Mic channel (Joint-select PC & Audio/Mic port, if binding is enabled)
Bind PC & Audio/Mic Switching [default]	ScrLk + ScrLk + Q		Enable the binding of PC and Audio/Mic switching. (Once this feature is enabled, PC and Audio/Mic switching is bound together) [factory default]
Unbind PC & Audio/Mic Switching	ScrLk + ScrLk + W		Disable the binding of PC and Audio/Mic switching
Next lower PC channel (Joint-select PC port and Audio/Mic port, if binding is enabled) ²	ScrLk + ScrLk + ((arrow up)	Press the face-panel button to switch to next PC channel -	Select the next lower PC channel (joint-select PC port and Audio/Mic port, if binding is enabled)
Next higher PC channel (Joint-select PC port and Audio/Mic port, if binding is enabled) ²	ScrLk + ScrLk + [] (arrow down)	Press the face-panel button to switch to next PC channel1	Select the next higher PC channel (joint-select PC port and Audio/Mic port, if binding is enabled)
Previous PC channel	ScrLk + ScrLk + ← (Backspace)		Toggle between the previous channel and current channel
Define Hotkey Preceding Sequence	y = SCROLL LOCK, CAPS, ESC, F12 or NUM LOCK	Press and hold down last button (Button 2 / Butotn4) till two beeps, release the button and then press y key	Select the hotkey preceding sequence among 5 alternative keys
Console Mouse/Keyboard Reset	ScrLk + ScrLk + End		Reset keyboard and mouse on the console side
Autoscan	ScrLk + ScrLk + S		Auto-scan through every connected channel for quick screen browsing of each channel (scan delay = 5 sec.).
Autoscan with Programmable Delay Time	ScrLk + ScrLk + S + (x) ¹ $x = 0 \sim 9$ 1 \rightarrow 10"; 2 \rightarrow 20"; 3 \rightarrow 30"; 4 \rightarrow 40"; 5 \rightarrow 50" 6 \rightarrow 60"; 7 \rightarrow 70"; 8 \rightarrow 80"; 9 \rightarrow 90"; 0 \rightarrow 100"		Auto-scan with a user-defined delay time within a range of 5 ~ 100 seconds
Stop Autoscan	Press any key on keyboard	Press any button	Terminate Auto-scan activity

Notes:

- 1. Note that (x) denotes a number key for the selected port number (x = 1 ~ 2). You can use either the top row number keys or the number pad for the hotkey commands.
- 2. When the binding of PC & Audio/Mic port switching is enabled by the hotkey sequence: ScrLk + ScrLk + Q, any PC and Audio/Mic switching are bound together. To remove this binding, hit ScrLk + ScrLk + W. Hotkey convention: The hotkey notation ScrLk + ScrLk + (key), denotes that you should hit the individual key consecutively one at a time, not simultaneously.

 Mouse Troubleshooting: If your mouse hangs or behaves abnormally, you can hit the following hotkey commands for mouse reset:
- (a) When you are using a PnP OS such as Windows 98 Second Edition or later Windows operating systems such as Win2k, WinXP, etc., hit ScrLk + End for mouse reset.
- (b) When you are using a non-PnP OS such as Linux, NT4.0, etc, just hit one of the following hotkey commands for mouse reset according to your mouse configuration on the non-PnP OS -
 | ScrLk + | ScrLk + | M + 1 | for a 2-key mouse setting; | ScrLk + | M + 2 | for a 3-key wheel mouse setting; | ScrLk + | M + 3 | for a 5-key wheel mouse setting.