


# Hi-Fi Component System SC-S2050

## Operating Instructions

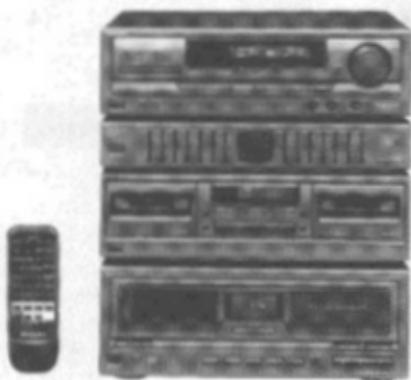

COMPACT  
**disc**  
DIGITAL AUDIO

This manual explains the audio components of the above system.



# Technics®

Before connecting, operating or adjusting these components, please read these instructions completely.  
Please save this manual.

P

RQT4449-P

## Table of contents

### Dear Customer

Thank you for purchasing this product.  
For optimum performance and safety, please read these instructions carefully.

The model number and serial number of this product can be found on either the back or the bottom of the unit.  
Please note them in the space provided below and keep for future reference.

	MODEL NUMBER	SERIAL NUMBER
Receiver	: SA-G68	_____
Graphic equalizer	: SH-GE50	_____
Cassette deck	: RS-TR180	_____
CD changer	: SL-MC59	_____

#### User memo:

DATE OF PURCHASE \_\_\_\_\_  
DEALER NAME \_\_\_\_\_  
DEALER ADDRESS \_\_\_\_\_  
\_\_\_\_\_  
TELEPHONE NUMBER \_\_\_\_\_

### CAUTION! (For SL-MC59)

THIS PRODUCT UTILIZES A LASER.  
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.  
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

### Before use

Supplied accessories	3
Precautions	4
Placement	5
Equipment connections	6
Antenna connections	8
Speaker connections	10
The remote control	12
The liner notes organizer	12
Setting/Removing discs	13
A note on compact discs	14
A note on cassette tapes	14
Front panel controls	15

### Listening

Listening to radio broadcasts	17
To listen to the radio without presetting stations	17
Preset tuning	18
Listening to compact discs	20
Sequential play	20
Single disc play	21
Direct access play	22
Disc grouping play	23
Program play	26
Direct programming	28
Search function	28
Skip function	29
Listening to tapes	30
Series playback	32
To fast-forward or rewind the tape	33
Tape counter	33
Changing the tone and other functions	34
To adjust the tone quality	34
To adjust the sound balance	34
To mute the sound level	34
To enjoy external sources	34
To listen through headphones	34

### Recording

Making a recording	35
Recording from the radio or external source (Deck 2 only)	35
Tape-to-tape recording	36
To make blank tapes (Deck 2 only)	37
To record on the VCR (VCR 1)	37

### Adjusting the sound field and sound quality

Enjoying sound with DOLBY PRO LOGIC	38
Using the graphic equalizer	41

 
### Using the remote control

Remote control operation	43
--------------------------	----

### Reference


Maintenance	48
Listening caution	48
Technical specifications	49
Troubleshooting guide	51
Product service	53
Disc index	54

## Supplied accessories



Please check and identify the supplied accessories

 - AC power supply cords  
(long thick type) (SJA172) .....2 pcs.  
(short thin type) (SJA172\*) .....2 pcs.



\*Replacement will be long thick type.

 
- Stereo connection cables  
(RJL2P004B08) .....5 pcs.



- FM indoor antenna  
(RSA0006) .....1 pc.




- AM loop antenna set (RSA0010)  
AM loop antenna .....1 pc.  
AM loop antenna holder .....1 pc.  
Screw .....1 pc.



- Remote control transmitter  
(EUR644353) .....1 pc.



 
- Batteries .....2 pcs.



- Notebook-like binder [Liner notes organizer]  
(RFA0622-K1) .....1 pc.



 - Numbered stickers sheet  
(QLA0321) .....1 pc.



Use numbers indicated in parentheses when asking for replacement parts.

To order accessories call PASC Accessory Dept. 1-800-211-7262.

## CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Notice: This system complies with new Part 15, except for the radio receiver, which complies with old Part 15, Subpart C of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation. The radio receiver is not subject to above item (2).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

## WARNING:

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPLIANCE TO RAIN, SPLASHING, DRIPPING OR MOISTURE.**



### CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## Precautions

Before using this unit please read these operating instructions carefully. Take special care to follow the warnings indicated on the unit itself as well as the safety suggestions listed below. Afterwards keep them handy for future reference.


### Safety

1. **Power Source** -- The unit should be connected to power supply only of the type described in the operating instructions or as marked on the unit.
2. **Polarization** -- If the unit is equipped with a polarized AC power plug (a plug having one blade wider than the other), that plug will fit into the AC outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
3. **Power Cord Protection** -- AC power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the plug or cord if your hand is wet, and always grasp the plug body when connecting or disconnecting it.
4. **Nonuse Periods** -- When the unit is not used, turn the power off. When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

### Installation

#### Environment

1. **Outdoor Antenna Grounding** -- If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1990, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure below.

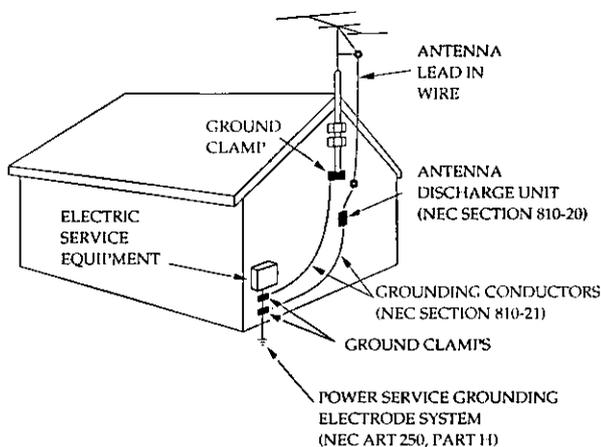

NEC-NATIONAL ELECTRICAL CODE

2. **Water and Moisture** -- Do not use this unit near water-for example, near a bathtub, washbowl, swimming pool, or the like. Damp basements should also be avoided.
3. **Heat** -- The unit should be situated away from heat sources such as radiators and the like. It also should not be placed in temperatures less than 5°C (41°F) or greater than 35°C (95°F).

4. **Condensation** -- Moisture may form on the lens in the following conditions...

- immediately after a heater has been turned on.
- in a steamy or very humid room.
- when the unit is suddenly moved from a cold environment to a warm one.

If moisture forms inside this unit, it may not operate properly.

To correct this problem, turn on the power and wait about one hour for the moisture to evaporate.

#### Placement

1. **Ventilation** -- The unit should be situated so that its location or position does not interfere with its proper ventilation. Allow 10 cm (4") clearance from the rear of the unit.
2. **Foreign Material** -- Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.
3. **Magnetism** -- The unit should be situated away from equipment or devices that generate strong magnetic fields.
4. **Stacking** -- Do not place heavy objects, other than system components, on top of the unit.
5. **Surface** -- Place the unit on a flat, level surface.
6. **Carts and Stands** -- The unit should be used only with a cart or stand that is recommended by the manufacturer. The unit and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart combination to overturn.



7. **Wall or Ceiling Mounting** -- The unit should not be mounted to a wall or ceiling, unless specified in this operating instructions.

#### Maintenance (See page 48 for details.)

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution.

Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.


#### Service

1. **Damage Requiring Service** -- The unit should be serviced by qualified service personnel when:
  - (a) The AC power supply cord or the plug has been damaged;
  - (b) Objects have fallen or liquid has been spilled into the unit;
  - (c) The unit has been exposed to rain;
  - (d) The unit does not appear to operate normally or exhibits a marked change in performance;
  - (e) The unit has been dropped, or the enclosure damaged.
2. **Service** -- The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to authorized service personnel. (Only for U.S.A.)  
Call 1-800-211-7262 for the address of an authorized factory servicenter.

## Placement

### Placement of each unit

Stack the units as shown in the illustration.

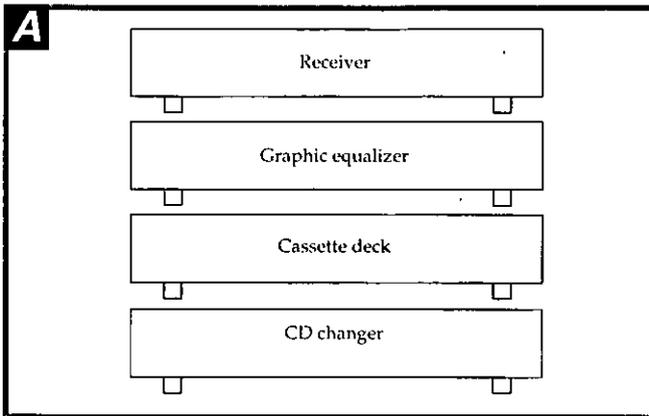

### Placement of speakers

The illustration shows where to place the speakers so as to best enjoy sound with Dolby Pro Logic systems and SFC function.

We recommend that surround speakers be placed on the side of or slightly behind the listener, and about one meter higher than ear level.

However the position should be adjusted to your personal preference, because the effect varies to some degree depending upon the source.


The sound reproduced by a speaker is easily influenced by such factors as room acoustics and the system's location in the room. Before finally deciding where the speakers are to be placed, please read the following information carefully.

- The bass sound will be increased if the speakers are placed on the floor or close to a wall due to reverberation. It is therefore possible to adjust the bass sound to some extent by adjusting the speaker's distance from the wall and/or floor.
- Undesirable resonance or reverberation will occur if the speakers face a hard wall or window. Curtains or similar materials can be used to prevent this.
- Keep the speakers away from sources of heat, high humidity and direct sunlight.

#### Note for front/center speakers

These speakers are made so as to be able to be used in close proximity to the TV, but irregular coloring may result due to how the system is placed. If such distortion occurs, turn off the TV for some time between 15 and 30 minutes. The demagnetizing function of the TV will eliminate the distortion. If the irregular coloring is still visible, then move the speakers further away from the TV.

Please note that if there is a magnetic object near the TV, irregular coloring may result due to the interaction between the TV and the speaker.

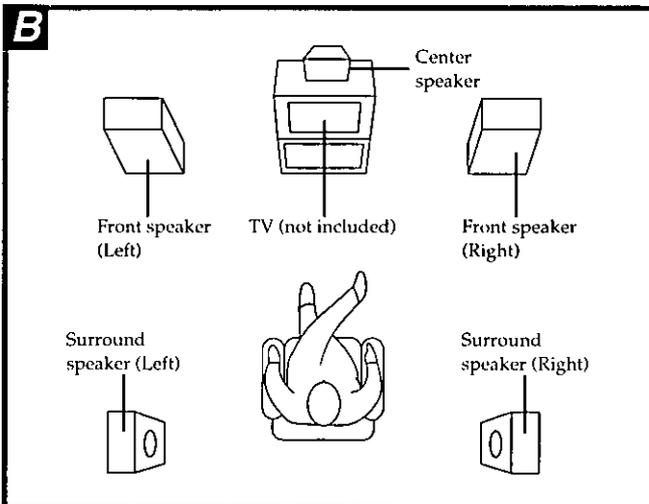

### Cautions on moving the CD changer

Before moving the changer to another location, be sure to remove all discs from the slots and turn off the changer.

Failure to do so will expose the compact discs and the changer to the risk of severe damage.

#### CAUTION

The changer mechanism automatically locks when power is turned off, to protect it against damage in transport.

Therefore, always press POWER and make sure "OFF" appears on the display before you unplug the changer.

 

#### Other cautions

Outside light or noise may sometimes cause the changer to detect a disc when there isn't one. However, the changer always correctly detects the disc when in the play mode no matter what.

Do not leave the front panel open. Dust or other matter getting into the changer may lead to damage or malfunction.

Connecting system components

Before use

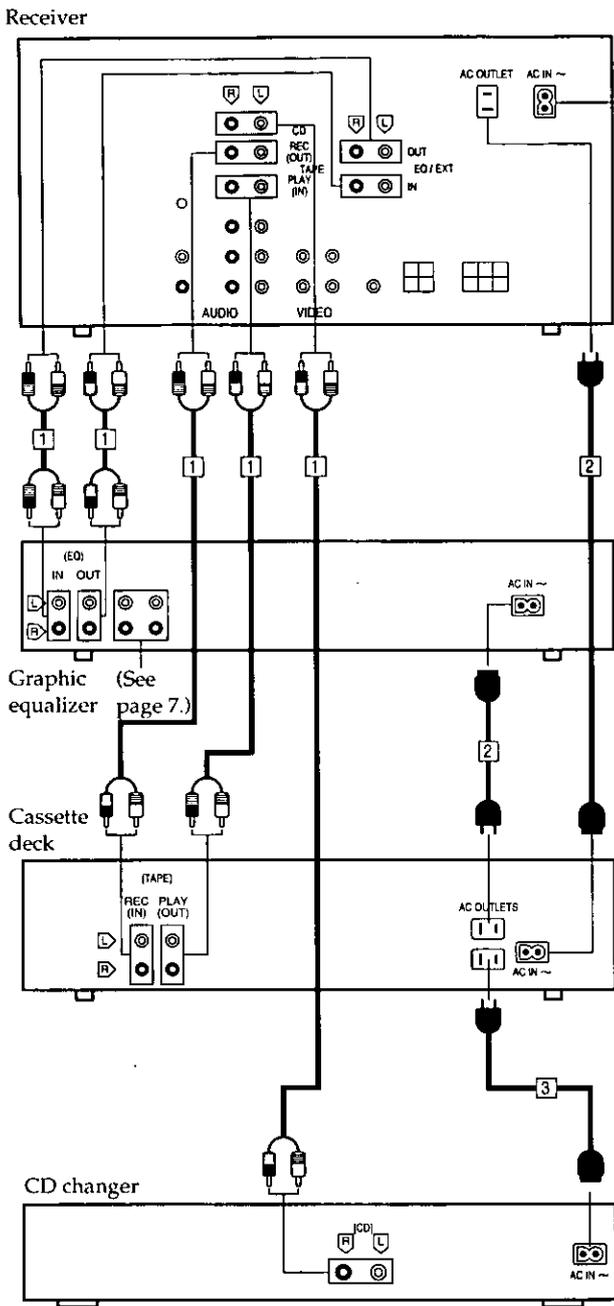

Make connections to each component by using the included cords and cables.

- 1** Connect the stereo connection cables (5 pcs.).
- 2** Connect the AC power supply cords (short thin type) (2 pcs.).
- 3** Connect the AC power supply cord (long thick type) (2 pcs.).

**AC outlets of each unit**

Do not connect video equipment (such as a TV, etc.) to these outlets. (These outlets are intended for audio equipment.)  
 Do not exceed the indicated power ratings when connecting to these outlets.

**“SWITCHED” outlet**


Power is controlled by the power switch.

**“UNSWITCHED” outlet**

Power is always available, regardless of power switch.

**“EQ/EXT” terminals of the receiver**

When these terminals are not in use, be sure to insert the shorting pins (included).

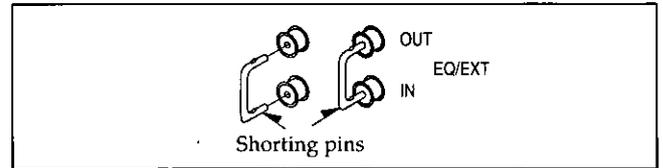


Connect this cord after all other cables and cords are connected.

 Household AC outlet (AC 120 V/60 Hz)


## Connecting a turntable, VCR and TV
 
### Stereo connection cable (not included)

White (L)  
Red (R)




For details, refer to the instruction manual of the unit to be connected.

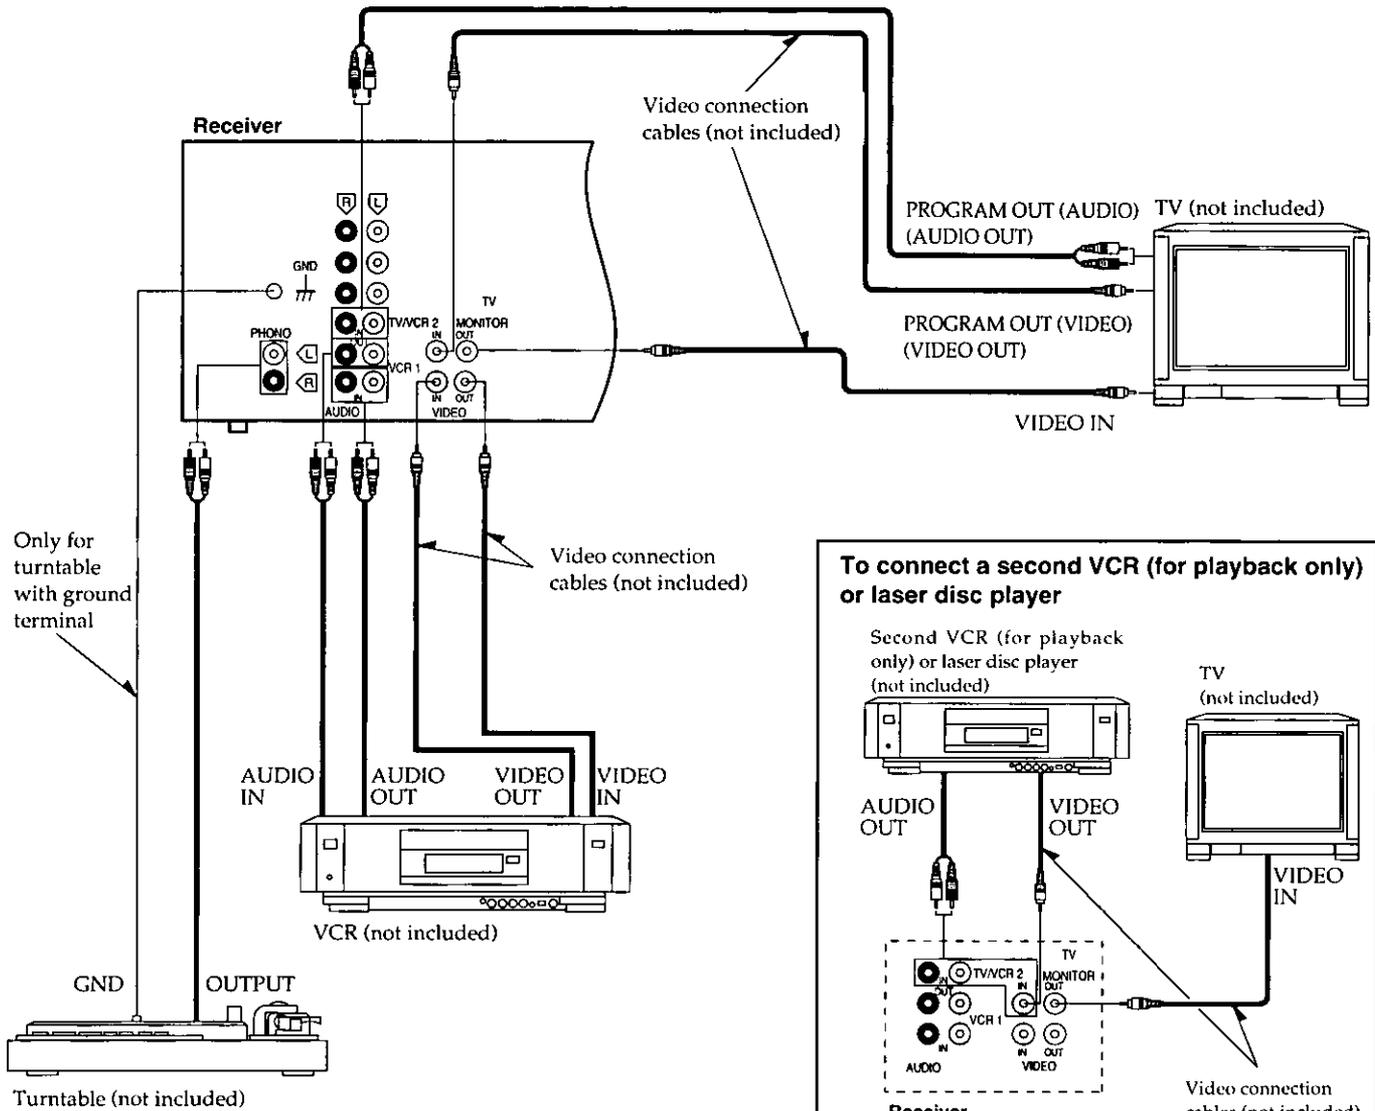

## Connecting a second cassette deck

### Second cassette deck (not included)

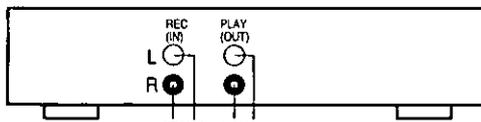

(R)(L) (R)(L)

### Graphic equalizer



(R)(L)(R)(L)



## Antenna connections

### FM indoor antenna (included) **A**

Attach to a wall (using tape) facing in the direction of best reception.



**For best reception sound quality:**  
An FM outdoor antenna is recommended.

### AM loop antenna (included) **B**

Install the AM loop antenna holder (included) to a column, wall or rack, and then attach the AM loop antenna to the AM loop antenna holder (facing in the direction of best reception).

**Pay attention to the following points when mounting the antenna.**

- Mount the antenna so that the hinge is vertical.
- Do not mount it close to power supply cords, speaker wires or metal surfaces (doing so will result in noise).
- Do not mount it close to a cassette deck. When the cassette deck is being used, chirping or beeping sounds may result.

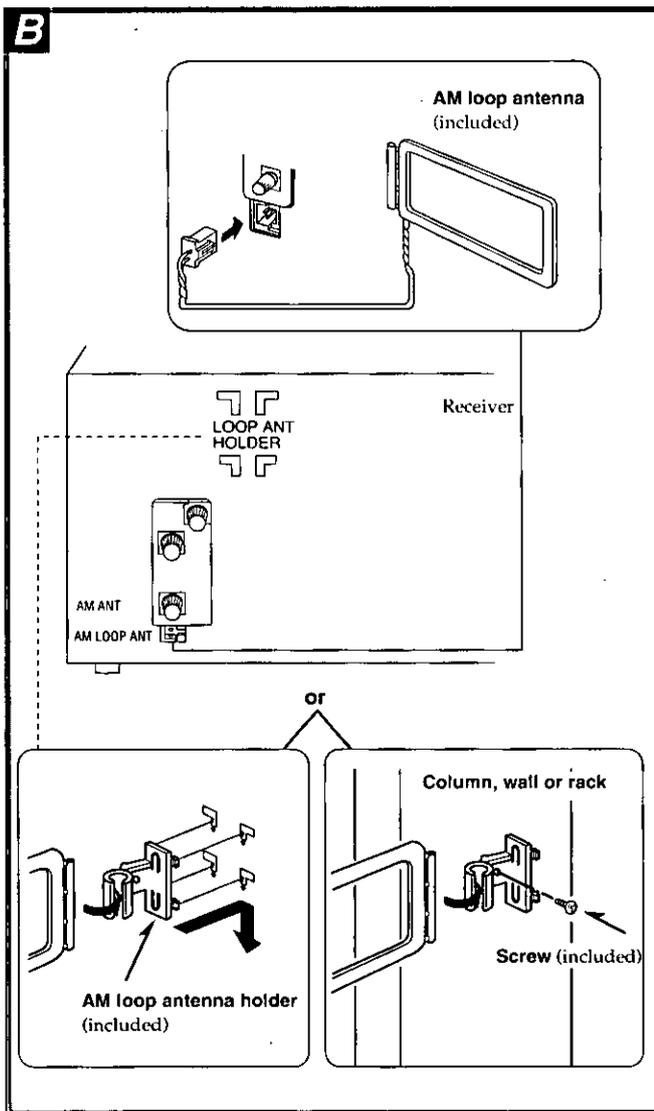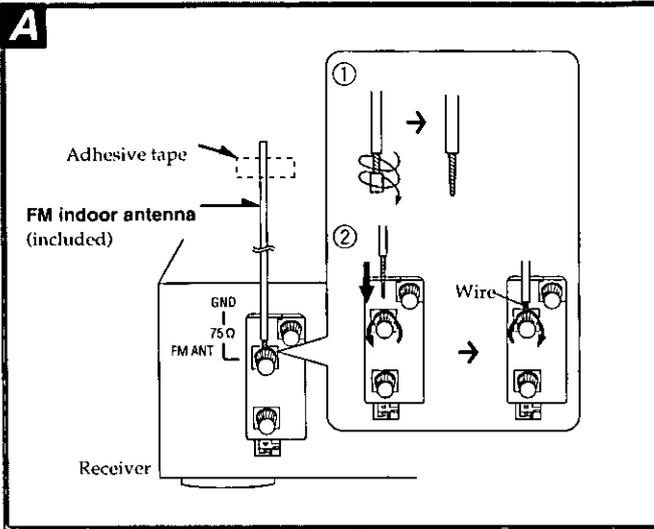

## Antenna connections

### Outdoor antenna

The outdoor antenna should be used when using the system in mountainous areas or in spaces enclosed by reinforced concrete where the FM indoor antenna (included) and/or the AM loop antenna (included) do not provide satisfactory reception.

#### FM outdoor antenna (not included) **A**

Disconnect the FM indoor antenna if an outdoor antenna is installed.



#### Note

An outdoor antenna should be installed by a qualified technician only.


#### AM outdoor antenna (not included) **B**

Be sure to connect the AM loop antenna even when an AM outdoor antenna is used.

Stretch 5-12 m (16-40 ft.) of vinyl-covered wire horizontally across a window frame or other convenient location, keeping it as high as possible from the ground.

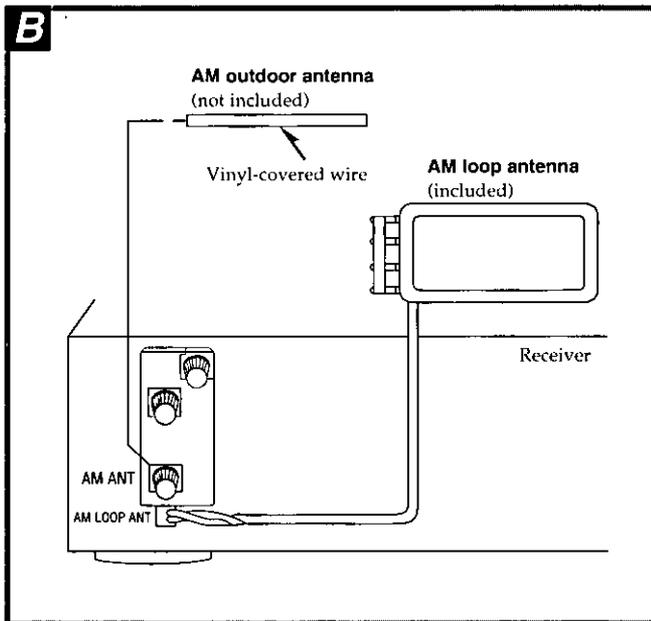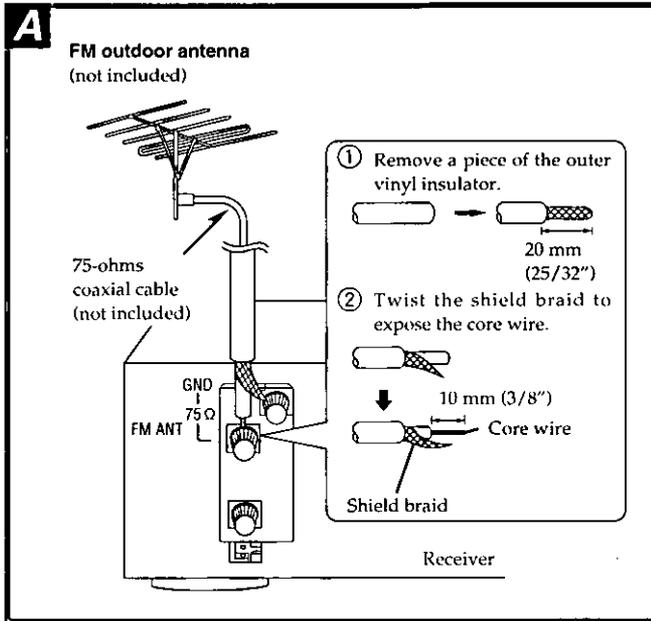

## Speaker connections

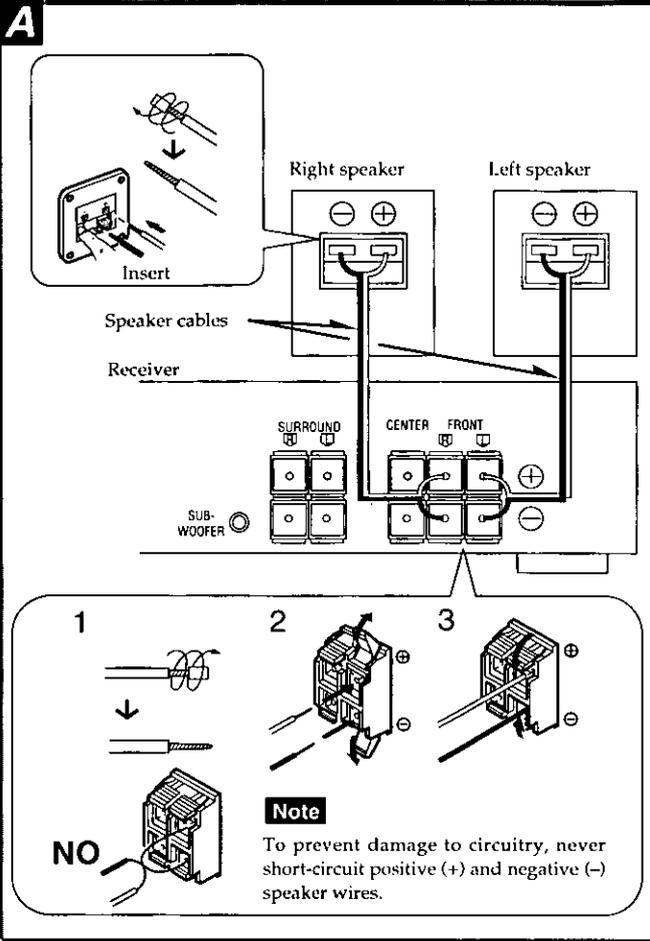

### Connection of front speakers **A**

#### ■ Speaker impedance

The impedance of any speaker used with this unit must be 8 Ω.


### Connection of surround speakers **B**


#### Note

1. Sound will only come out when the SURROUND mode of the Dolby Pro Logic System is on.
2. If only one of the surround speakers is connected, no sound will come out. Be sure to connect both speakers.
3. Do not connect the surround speakers to the front speaker terminals. The surround speakers may be damaged if connected to the front terminals due to the output power difference between the front and surround terminals.

#### ■ Speaker impedance

The impedance of any speaker used with this unit must be 4-8 Ω.

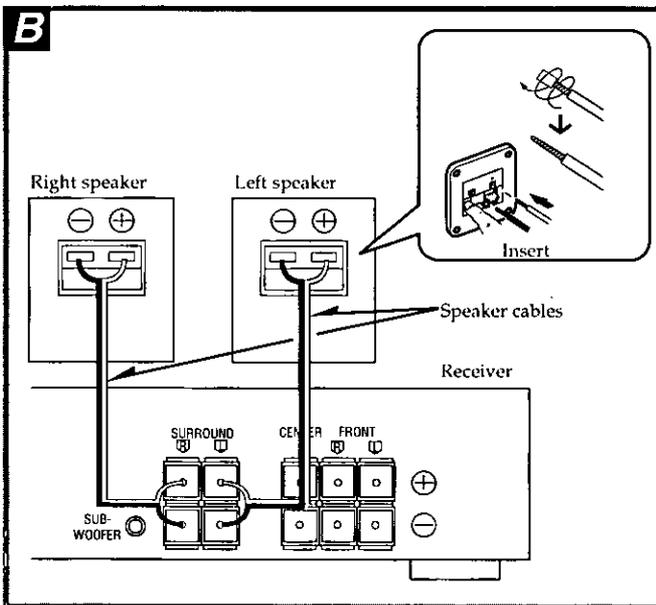

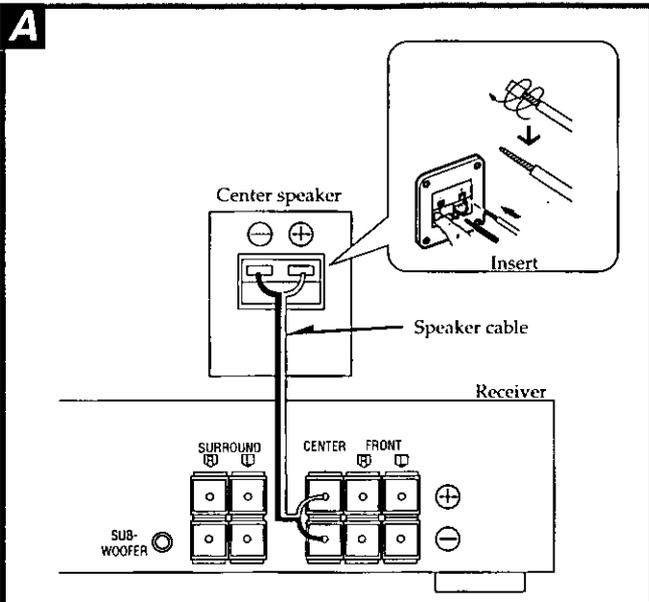

**Connection of center speaker** **A**

**Note**

Sound will only come out when the Dolby Pro Logic System is on.

**Speaker impedance**

The impedance of any speaker used with this unit must be 8 Ω.

**Connection of subwoofer** **B**

You can amplify bass sounds by connecting a subwoofer to your receiver.


When connected, the subwoofer can be placed in any position.

**Note**

This unit has no amplifier section designed especially for the subwoofer, so you cannot adjust the subwoofer volume level by the receiver.




**Connecting a subwoofer which does not have a built-in amplifier**

Connect an optional amplifier to the "SUBWOOFER" terminals of this unit and then connect a subwoofer to the speaker terminals of the amplifier.

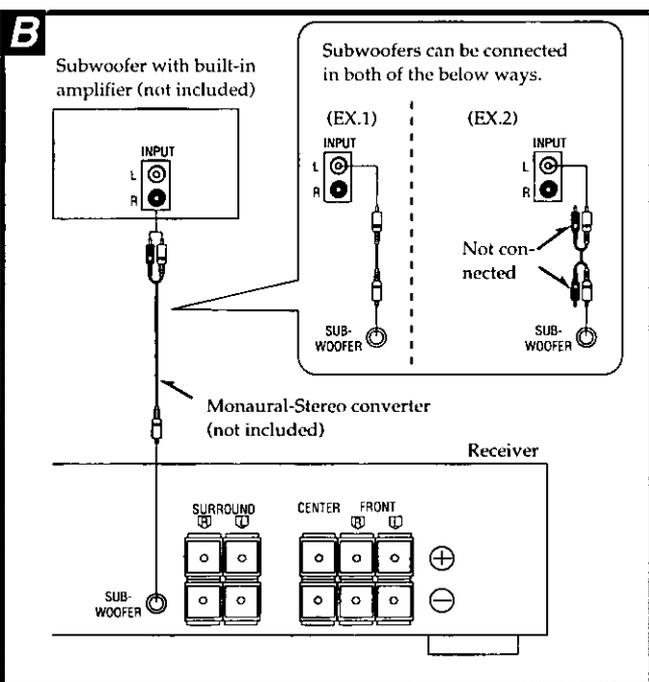

**Caution**

Use the speakers only with the recommended system. Failure to do so may lead to damage to the receiver and/or the speakers, and may result in the risk of fire. Consult a qualified service person if damage has occurred or if you experience a sudden change in performance.

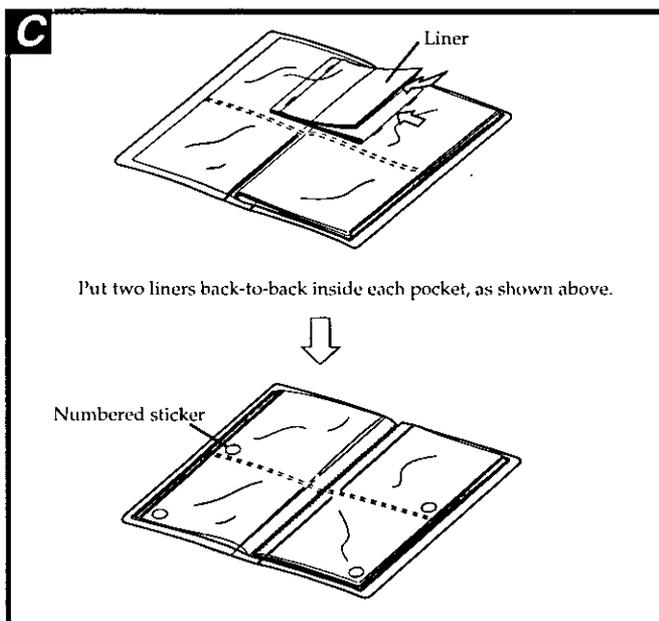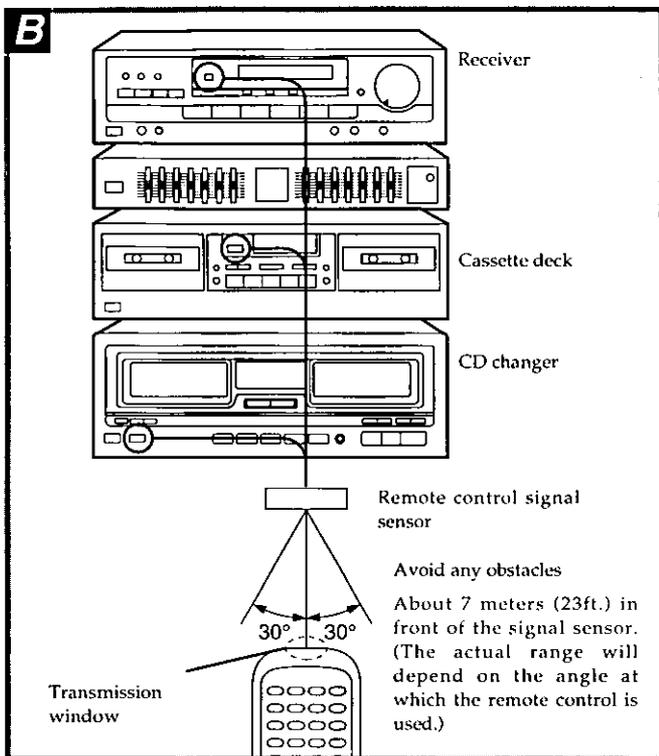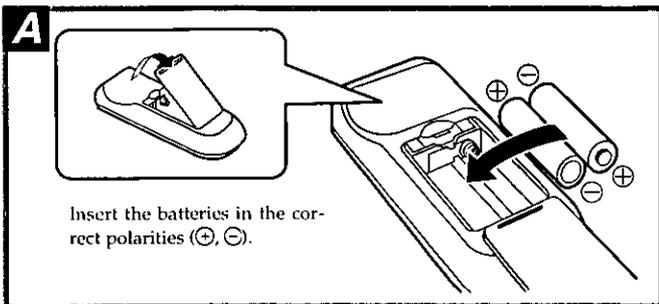

## The remote control

### Battery installation **A**

Load the batteries (included) as shown in the illustration.

#### When you need to replace these batteries

Use two R6/LR6, AA size, UM-3 or equivalent batteries.

### Battery notes

- Do not mix old and new batteries, or batteries of different types (carbon and alkaline, etc.).
- Always remove old, weak or worn-out batteries promptly and dispose of them properly.
- Battery life is about one year. Although battery life varies depending on how often the device is used, the batteries should be replaced about once every year on the average.
- The batteries should be replaced if commands from the remote control transmitter do not operate the unit even when the transmitter is held close to the front panel.
- Never subject batteries to excessive heat or flame; do not attempt to disassemble them; and be sure they are not short-circuited.
- If the remote control is not to be used for a long period of time, remove the batteries and store them in a cool, dark place.
- If a battery leaks, remove all batteries and dispose of them properly. Thoroughly clean the battery compartment before inserting new batteries with a dry cloth. If battery acid comes into contact with skin or clothes, flush with water immediately.
- Keep batteries out of reach of children.
- Do not use rechargeable type batteries.
- Do not attempt to recharge alkaline or carbon batteries.

### Method for use **B**

Use the remote control within a 60 degree span and within 7 meters (23 ft.) of the unit, while pointed directly at the remote control signal sensor.



#### Note

Be sure the transmission window and the unit's sensor are free from dust. Excessive dust might effect performance.

The operation may not be correct if direct sunlight or another strong light source strikes the receiving sensor of this unit. If there is a problem, place the unit away from the light source.

## The liner notes organizer **C**

Your changer comes with a notebook-like binder (liner notes organizer) in which you can keep your CD liners. There are also numbered stickers to indicated slot numbers in the binder. This is a convenient way to keep track of what disc is in what slot.

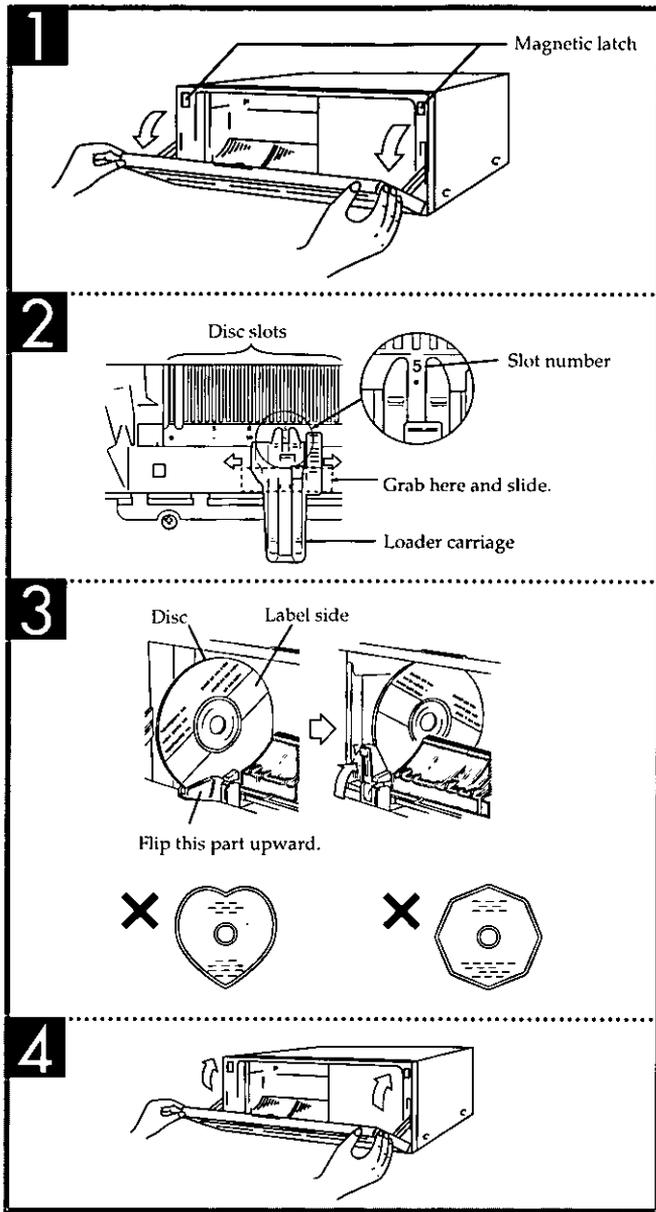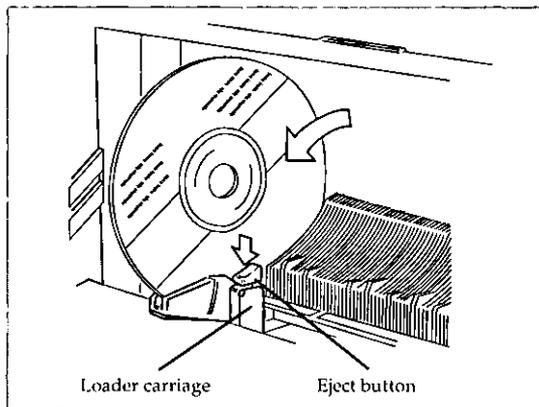**A****B****Setting/Removing discs****How to set discs****A**

- 1** Pulling gently from both ends, open the front panel.

**Caution**

- Except when setting or removing discs, keep hands out of the changer while open. You could injure yourself if somehow entangled in the internal mechanism.
- Keep cassette tapes away from the magnetic latches.

- 2** Slide the loader carriage to the slot No. where the disc is to be inserted.

**Note**

Slot No. 0 (SINGLE) is reserved for single disc play. (See page 21.)

- 3** Set the disc on the loader and flip the loader upwards.

**Caution**

- Do not use 3" (8 cm) discs fitted with expander rings. Expander rings could damage the disc slots.
- Do not use cleaning discs or warped discs. All of these could damage your changer.
- Do not use discs with poorly attached labels or stickers. Adhesive protruding from peeled off stickers can cause the changer to malfunction.
- Do not use irregular shape CDs (heart-shape, octagonal, etc.).
- Do not put anything other than discs in the changer.

- 4** Close gently the front panel.

**Note**

If you leave the front panel open while a disc is in play, the changer will stop when the disc is finished.






**How to remove discs****B**

- 1.** Open the front panel.
- 2.** Slide the loader carriage to the slot you want.
- 3.** Press the eject button on the loader carriage.

**Special notes**

You can set and remove discs while another disc is playing.

- Do not set a disc in the slot of the disc being played (slot flashes). The disc in play is returned to its slot when finished. If two discs somehow jam the slot, one or both could be damaged. When this happens, the message "TAKE OUT" will appear on the display. Remove the disc that doesn't belong in the slot and press the stop button.
- Do not open the CD front panel and press the eject button when "CHECKING DISCS" appears in the display. The CD mechanism will be damaged if the eject button is pressed at this time.
- Sometimes the front panel cannot be opened while a disc is playing. In such case, wait until you can open it.

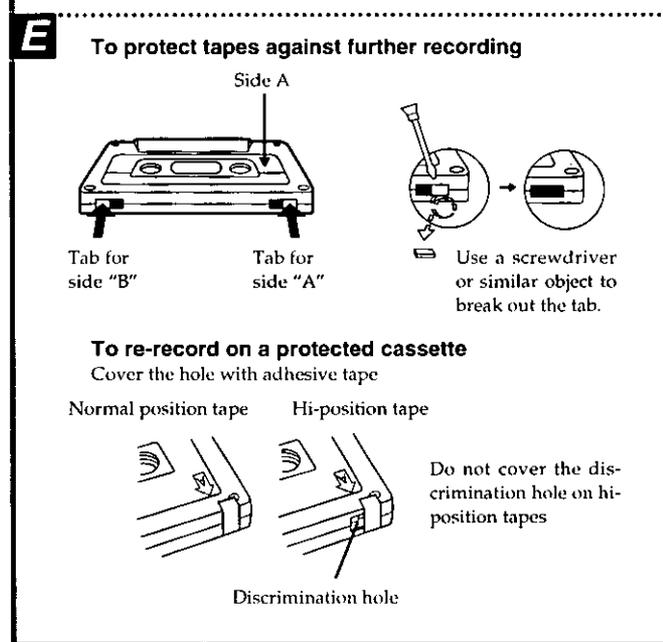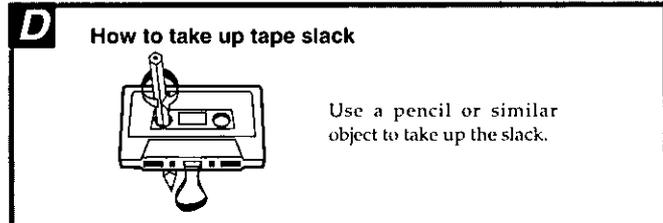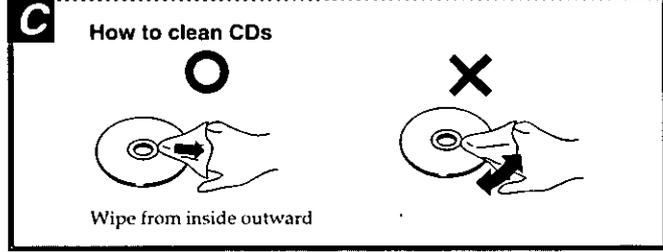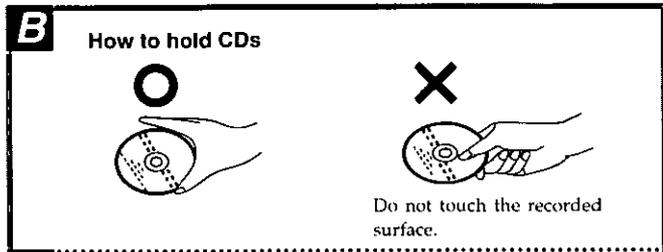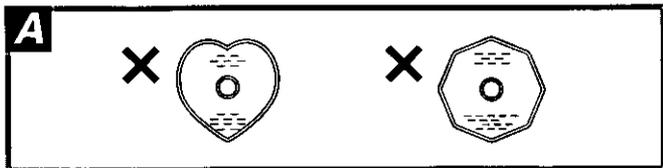

## A note on compact discs

With this changer, you can only play compact discs having this mark: However, do not use irregular shape CDs (heart-shape, octagonal, etc.). CDs of this sort can damage the unit. (A)



### Handling precautions

Handle CDs as shown on the left (B - C)

- If you are taking the disc from a cold to a warm environment, moisture may form on the disc. Wipe this off with a soft, dry, lint-free cloth before using the disc.
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not use discs with poorly attached labels or stickers. Adhesive protruding from peeled off stickers can cause the changer to malfunction.

### Storage precautions

Be sure to store discs in their cases to protect them from dust, scratches, and warping.

**Do not place or store discs in the following places**

- Locations exposed to direct sunlight
- Humid or dusty locations
- Locations directly exposed to a heat vent or heating appliance
- In the glove compartment or on the rear deck of an automobile

## A note on cassette tapes

### Selection of cassette tapes

Tapes can get caught on the capstans. Use caution with the following types of tapes.

#### Cassette tapes exceeding 100 minutes

That tapes are made of a thin film material. Do not repeatedly advance and stop tape, or the fast-forward it or rewind it.

#### Endless tapes

Endless tapes with auto reversing capability can get caught on the capstans if used in the wrong way. Always read the instructions provided with the tape before using it.

### Tape slack


Tape slack may cause the tape to break.

### Erasure prevention

### Storage precautions

Do not place or store tapes in the following places

- In areas of high temperature (95°F/35°C or higher) or high humidity (80% or higher).
- In a strong magnetic field (near a speaker, on top of a TV, etc.). This can erase a recording
- Locations exposed to direct sunlight

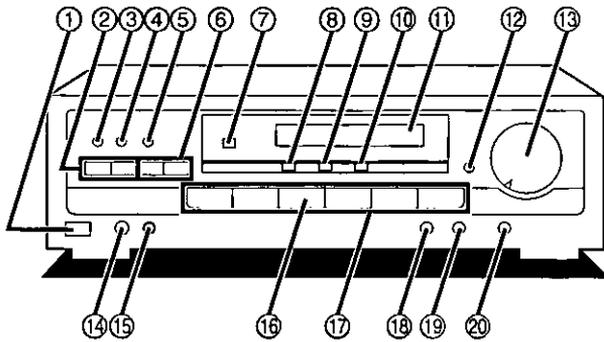
**A**

## Front panel controls

### Receiver

**A**

- ① Power "STANDBY  $\odot$ /ON" switch  
(POWER, STANDBY  $\odot$ /ON)  
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ② Tuning buttons (TUNING)
- ③ Band select button (BAND)
- ④ FM mode select button (FM AUTO/MONO)
- ⑤ Memory button (MEMORY)
- ⑥ Preset channel buttons (PRESET)
- ⑦ Remote control signal sensor (SENSOR)
- ⑧ Surround button (SURROUND)
- ⑨ 3 stereo button (3 STEREO)
- ⑩ Center mode select button (CENTER MODE)
- ⑪ Display
- ⑫ Muting button (MUTING)
- ⑬ Volume control (VOLUME)
- ⑭ Headphones jack (PHONES)
- ⑮ Speaker ON/OFF button (SPEAKERS)
- ⑯ Tape monitor button (TAPE MONITOR)
- ⑰ Input select buttons
- ⑱ Bass control (BASS)
- ⑲ Treble control (TREBLE)
- ⑳ Balance control (BALANCE)


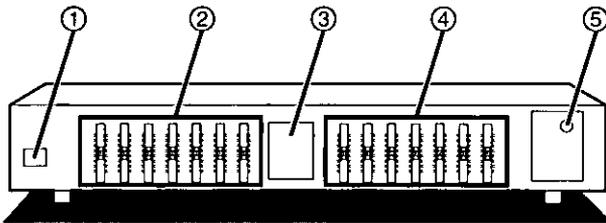
**B**

### Graphic equalizer

**B**

- ① Power switch (POWER)
- ② Left channel band-level controls/indicators
- ③ Signal level display (SIGNAL LEVEL)
- ④ Right channel band-level controls/indicators
- ⑤ Input select button (INPUT SELECTOR)

**A**

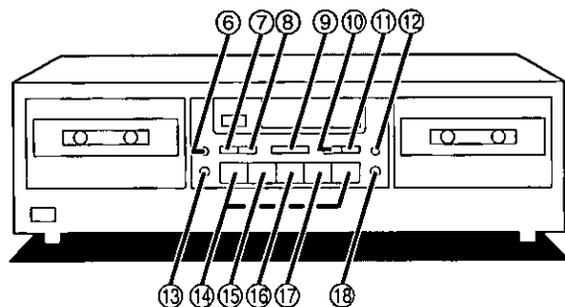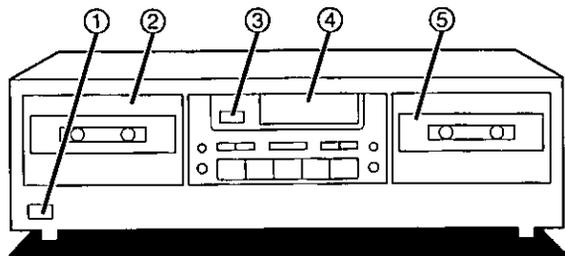


**Cassette deck**

**A**

- ① Power "STANDBY  $\odot$ /ON" switch (POWER, STANDBY  $\odot$ /ON)  
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ② Cassette holder for deck 1
- ③ Remote control signal sensor (SENSOR)
- ④ Display
- ⑤ Cassette holder for deck 2
- ⑥ Counter reset button (COUNTER RESET)
- ⑦ Synchro-start button (SYNCHRO START)
- ⑧ Tape-to-tape recording-speed button (SPEED)
- ⑨ Tape deck select button (DECK 1/2)
- ⑩ Dolby noise-reduction button (DOLBY NR)
- ⑪ Reverse-mode select button (REVERSE MODE)
- ⑫ Rec pause button (● REC PAUSE)
- ⑬ Open button for deck 1 ( $\blacktriangle$  OPEN)
- ⑭ Rewind/fast-forward buttons ( $\blacktriangleleft$ ,  $\blacktriangleright$ )
- ⑮ Reverse-side playback button ( $\blacktriangleleft$ )
- ⑯ Stop button ( $\blacksquare$ )
- ⑰ Forward-side playback button ( $\blacktriangleright$ )
- ⑱ Open button for deck 2 ( $\blacktriangle$  OPEN)

**B**

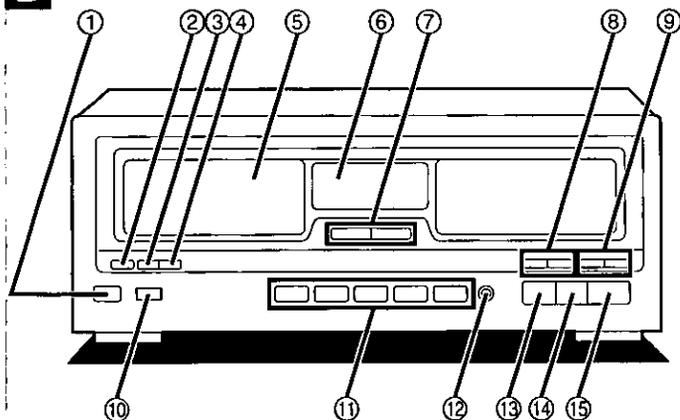


**CD changer**

**B**


- ① Power "STANDBY  $\odot$ /ON" switch (POWER, STANDBY  $\odot$ /ON)  
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ② Single disc play button (SINGLE  $\blacktriangleright$ )
- ③ Direct programming button (DIRECT)
- ④ Programming button (PROGRAM)
- ⑤ Window
- ⑥ Display
- ⑦ Disc skip buttons (DISC SKIP  $-/+$ )
- ⑧ Search buttons ( $\blacktriangleleft$ ,  $\blacktriangleright$ )
- ⑨ Track skip buttons ( $\blacktriangleleft$ ,  $\blacktriangleright$ )
- ⑩ Remote control signal sensor (SENSOR)
- ⑪ Disc group buttons (DISC GROUPING PLAY, A, B, C, D, E)
- ⑫ Group enter button (GROUP ENTER)
- ⑬ Stop button ( $\blacksquare$ )
- ⑭ Pause button ( $\blacksquare$ )
- ⑮ Play button ( $\blacktriangleright$ )

**Disc slot section**

**C**

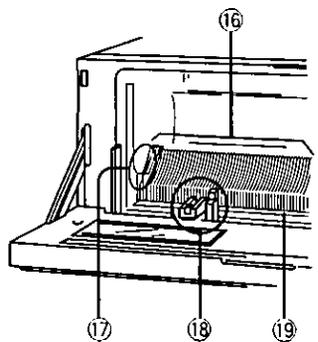

Disc slot for single disc play

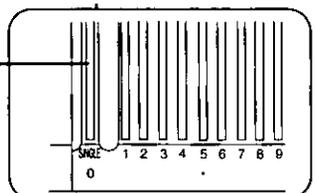

For an explanation on how to open the front panel, see page 13 "How to set discs".

- ⑯ Disc slots
- ⑰ Disc slot for single disc play (SINGLE)
- ⑱ Loader carriage
- ⑲ Slot numbers

## Listening to radio broadcasts

### To listen to the radio without presetting stations

#### Sequential tuning

You can use the tuning buttons to tune-in radio broadcasts.

Before operation, set VOLUME to the "MIN" position

#### 1 Press POWER of the receiver.

At power ON, if the "TAPE MONITOR" indicator flashes on the receiver's display  
Press TAPE MONITOR and check the indicator goes out.

#### 2 Press SPEAKERS to turn on the speaker systems.



#### 3 Press TUNER.

#### 4 Press BAND to select "FM" or "AM".

#### 5 Press TUNING (∨ or ^) to tune to the desired broadcast.

Tuning intervals  
FM: 0.2 MHz AM: 10 kHz

#### 6 Turn VOLUME to adjust the volume level.

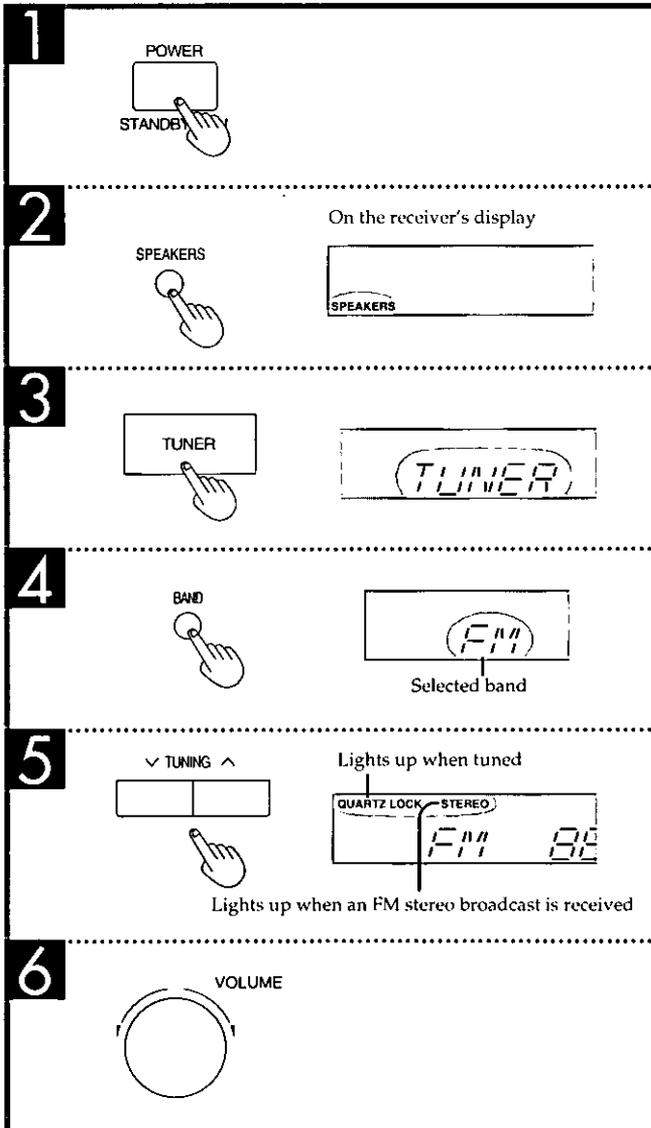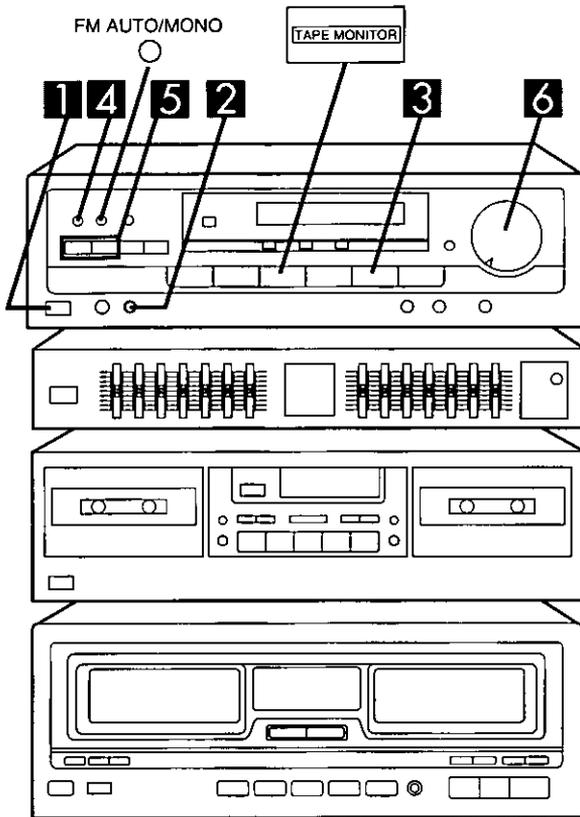

#### After listening is finished

Be sure to reduce the volume level, and switch the power to the standby condition by pressing POWER of the receiver.

The power for the system can thereafter be switched on and to the standby condition by using the power switch of the receiver. (provided that the power cords are connected as on page 6.)

#### Automatic scanning

If either of the tuning button is held down for an instant until the frequency begins to scroll, the broadcast stations can be tuned in automatically when a broadcast station is found.

#### Note


Tuning may stop automatically if any jamming is encountered.

#### If noise is excessive in the FM stereo mode

Press FM AUTO/MONO. (The "STEREO" indicator will switch off, and "MONO" indicator will light up.)

The broadcast will be monaural, but noise will be reduced. If the button is pressed once more, stereo mode will be resumed.

**A**

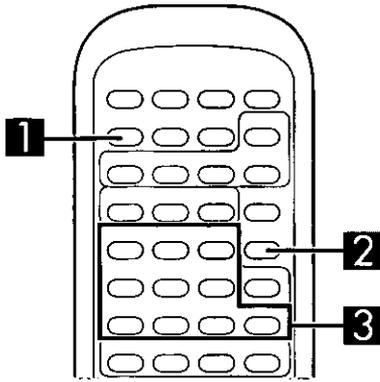


**1**  TUNER

---

**2**  DIRECT TUNING/DISC ENTER




 ---


**3**   If the desired FM frequency is 107.9 MHz, press **1**→**0**→**7**→**9**



**B**

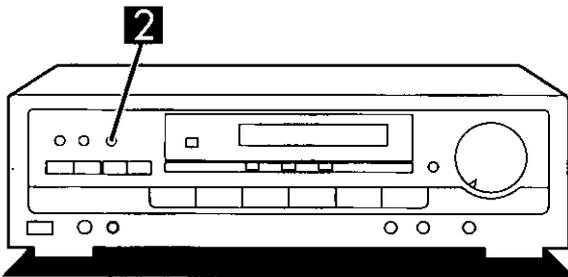

**2**  MEMORY-MANUAL-AUTO

 

When a broadcast station is preset



**Listening to radio broadcasts**

**Direct tuning <sup>A</sup>**

(Only available from the remote control.)

Specify the frequency using the numeric buttons on the remote control transmitter to directly tune to the desired broadcast station.

**Preparation**

First select between FM and AM with the BAND button on the receiver.

- 1** Press **TUNER**.  
This will set the remote control to operate the tuner.
- 2** Press **DIRECT TUNING/DISC ENTER**.
- 3** (While cursor display is flashing [approx. 10 seconds])  
Press the appropriate numeric buttons to enter the frequency.  
If the frequency has been input correctly, the frequency display will blink once.

**Note**

1. If no button is pressed while the cursor display is flashing, the display will return to the frequency which is currently being received. To re-specify the frequency, repeat the procedure from step 2.
2. If the frequency has not been input correctly, "ERROR" indication will be displayed. In this case, re-enter the frequency.

**Preset tuning**

Presetting radio stations into the memory channels of this unit makes selecting stations easy and simple. A total of 30 FM and AM stations can be preset. There are two methods for presetting broadcast frequencies in the memory: the automatic method and the manual method.

**Automatic memory presetting <sup>B</sup>**

The broadcast frequencies of the selected band are automatically preset into the memory: channels 1 to 30 are available for the presetting of FM stations and channels 21 to 30 are available for AM stations.

If the FM stations are preset and then the AM stations are preset, the setting for FM channels 21 to 30 will be replaced by the AM settings which were subsequently preset.

- 1** Set to the frequency from which you want to start automatic memory presetting.  
(Refer to "Sequential tuning" or "Direct tuning".)
- 2** Press **MEMORY** until the frequency begins to change.  
Automatic memory presetting will start.  
The memory indicator and the preset channel number will be displayed for approximately 1 second.





To stop, press MEMORY once again.

**When presetting is completed**

The last broadcast station to be preset will be displayed.

**Note**

Frequencies may not be preset correctly in cases where the broadcast waves are too strong or too weak. In such cases, carry out presetting manually.

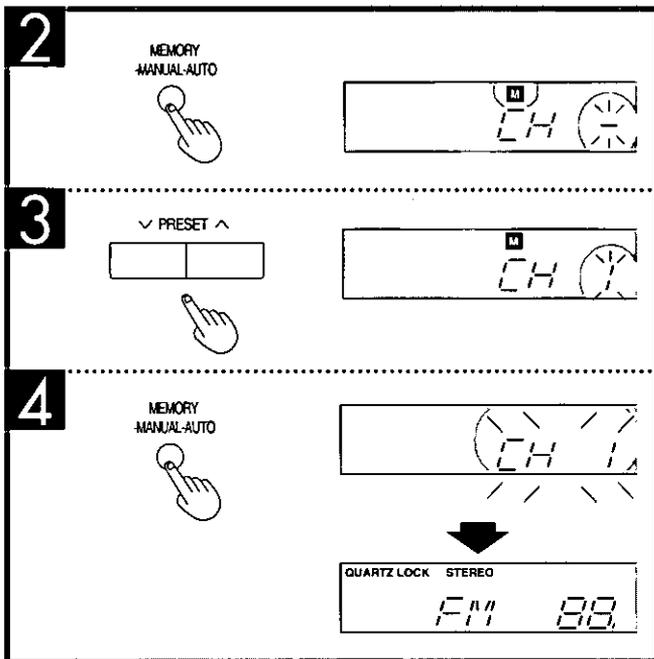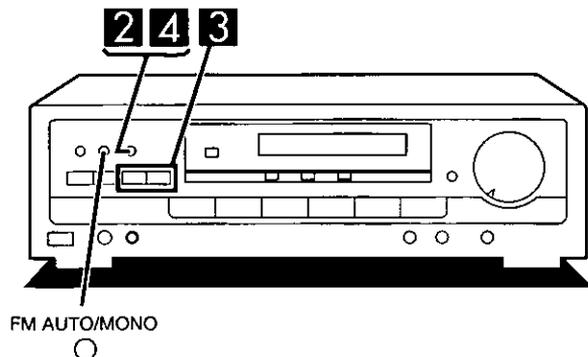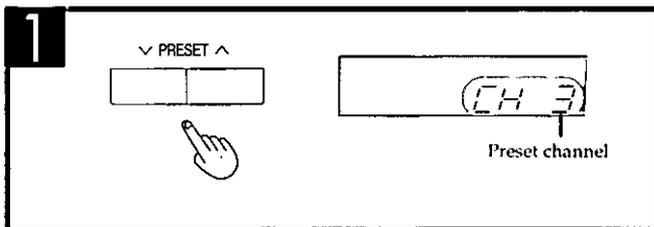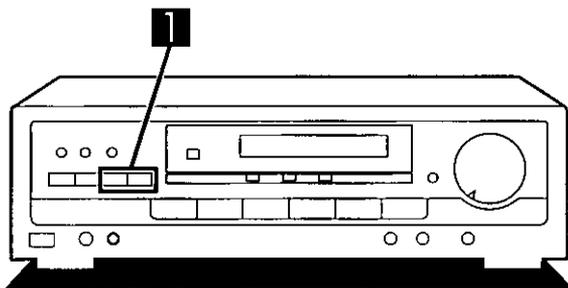**A****B****Listening to radio broadcasts****Manual memory presetting A**

The desired broadcast stations can be preset into the desired channels by the user.

This can also be used as a method for changing selected broadcast stations that were preset in "Automatic memory presetting".

**1 Set to the desired broadcast.**

(Refer to "Sequential tuning" or "Direct tuning".)

If interference or static is keeping you from enjoying an FM broadcast, press FM AUTO/MONO and change to monaural. You can preset the memory in monaural as well as in stereo.

**2 Press MEMORY.** (Touch only.)

To cancel the memory function, press MEMORY again.

**3 Press PRESET (∨ or ∧) to select the desired channel.**

Holding the buttons down lets you scroll through channels faster.

**4 Press MEMORY.**

The channel will blink on the display.

**To continue presetting**

Repeat steps 1 through 4.

**To listen to preset broadcast stations B****1 Press PRESET (∨ or ∧) to select the desired channel.**

Holding the buttons down lets you scroll through channels faster.

**To confirm the channel number of the broadcast station being received**

Press TUNER.

(The channel number will be displayed for approximately 1 second.)


**Note**

The channel number is not displayed if you change the reception frequency or FM mode setting.

**For your reference**

Even if the power cord is disconnected from the household AC outlet, the memory will retain its contents for approximately one month.

## Listening to compact discs

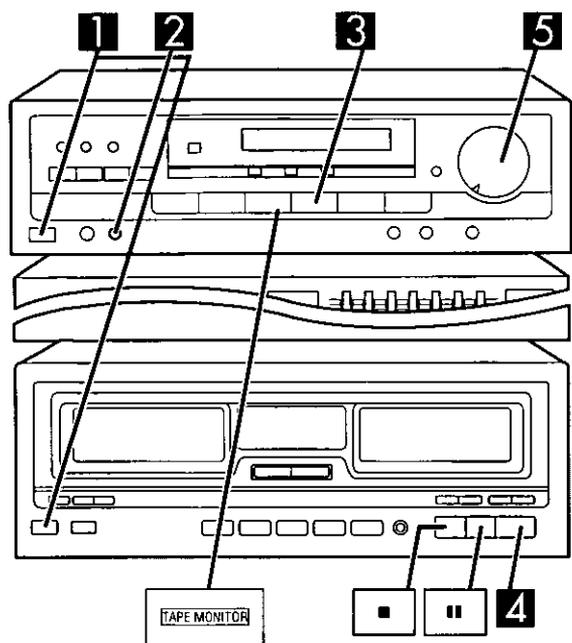

### Sequential play

The changer plays all the tracks on all the discs in order and stops automatically when the last track on the last disc finishes playing.

Before operation, set VOLUME of the receiver to the "MIN" position, and load your discs.

- 1 Press POWER of the receiver and CD changer.**  
First switch on the power of the receiver.

The units will switch on.  
Momentarily, the message "CHECKING DISCS" will appear on the display.  
When it goes out, the last disc played will be displayed

**At power ON, if the "TAPE MONITOR" indicator flashes on the receiver's display**

Press TAPE MONITOR and check the indicator goes out.

- 2 Press SPEAKERS to turn on the speaker systems.**
- 3 Press CD.**
- 4 Press ▶.**  
Play will begin.

The disc number is the same as the slot number.

- 5 Turn VOLUME to adjust the volume level.**

### To stop play

Press ■.  
The display will show the total number of tracks and the total playing time of the current disc. (See page 21.)

### Note

It takes roughly 3 seconds from the time you press ■ until the disc is returned to the slot.

Press ▶ to re-start play.

### After listening is finished

Be sure to reduce the volume level, and switch the power to the standby condition by pressing POWER of the receiver.

The power for the system can thereafter be switched on and to the standby condition by using the power switch of the receiver. (provided that the power cords are connected as on page 6.)

### To temporarily stop play

Press ||.  
The "||" indication will light up.  
Press ▶ to resume play.

**1** On the CD changer's display


**2** On the receiver's display

**3** On the receiver's display

**4** On the CD changer's display


**5**

## Listening to compact discs

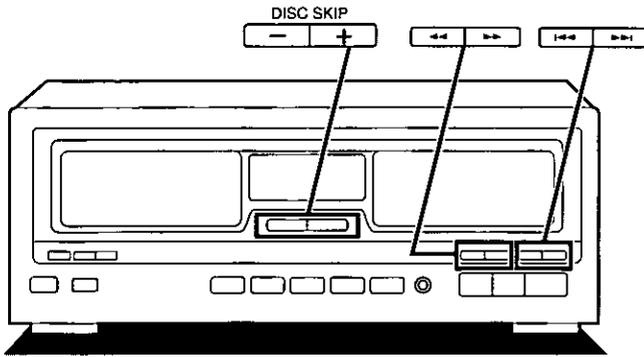

To search for the desired position	
To skip tracks	
To skip discs	DISC SKIP 

(For detailed information concerning these buttons, please refer to pages 28-29.)

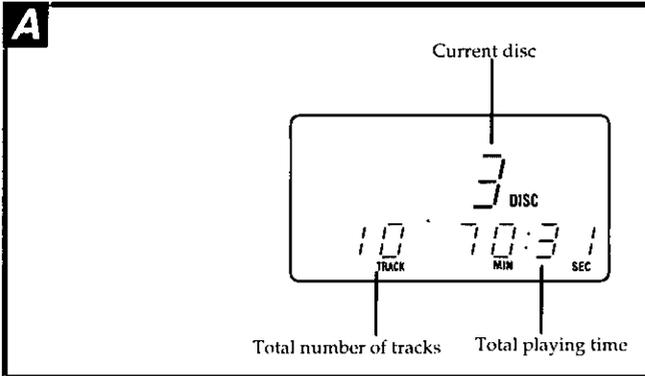

### Displayed information when play is stopped **A**

The total playing time displayed includes the silent sections between tracks. For this reason, it may be a few seconds longer than the playing time indicated on the disc.

When you open the front panel, the total number of tracks and the total playing time go out.

### Single disc play **B**

Single disc play is convenient when you want to playback a specific disc right away, without going through the usual selection procedure, for example, to listen to a disc you just bought.

#### 1 Open the front panel, and set the disc in slot No. 0.




Face the label to the right and flip the loader upwards to set the disc.





#### 2 Close the front panel and press SINGLE ▶.

The changer plays all the tracks in order and stops automatically when the last track finishes playing.

#### To cancel single disc play mode

- Skip to another disc with DISK SKIP (- or +).
- Select a group.
- Select another disc with the numeric buttons of the remote control transmitter.

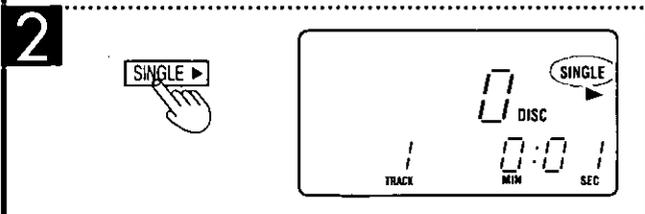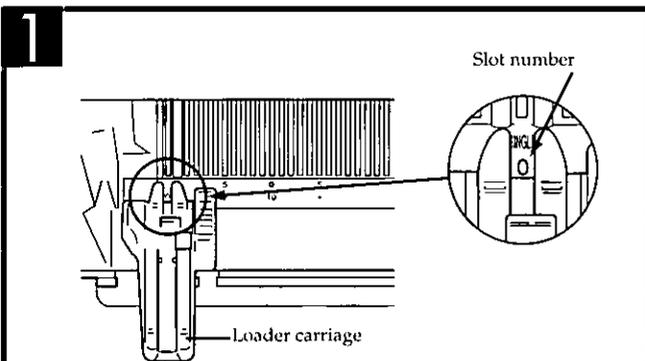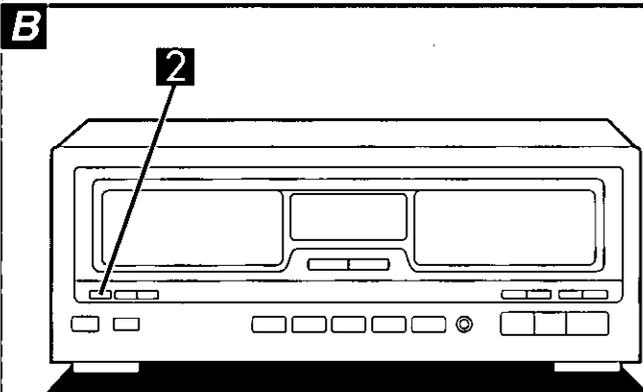

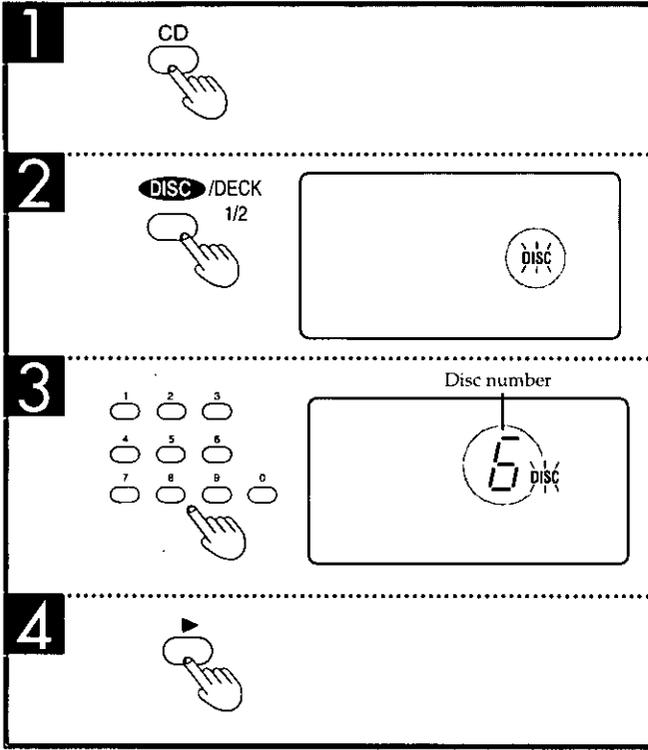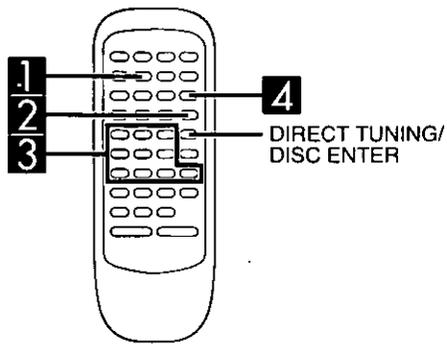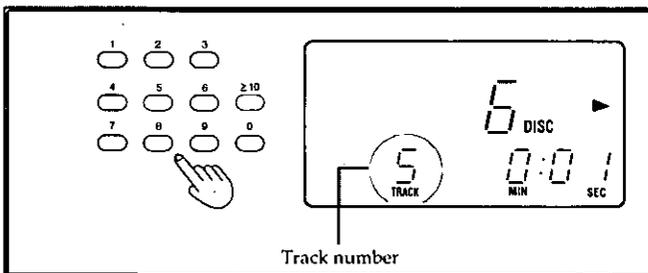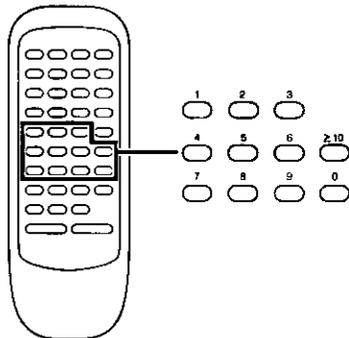**A****B**

## Listening to compact discs

**Direct access play**

(Only available from the remote control.)

**To directly access a specific disc **A****

- 1** Press **CD**.  
This will set the remote control to operate the CD changer.
- 2** Press **DISC/DECK 1/2**.
- 3** [Within 7 seconds]  
**Select the disc you want with the numeric buttons.**

To select a disc from 1 to 9

For example: "6"

To select a disc from 10 to 60

For example: "19"

 → 

Push the button within 7 seconds of each other.

**Note**

When selecting discs, the ≥10 button does not respond to touch.

- 4** [Within 7 seconds]  
**Press ▶.**  
The changer will start playing the selected disc from the first track.

**For your reference**

- If you press DISC ENTER instead of ▶ to select a disc, the disc number will be displayed but play will not start automatically.
- When in the stop mode, if you select an empty slot, the message "NO DISC" will appear on the display.
- While a disc is playing, if you select an empty slot, the changer will automatically play the next disc available.
- If you select "0", the changer will switch to the single disc play mode.

**To directly access a specific track **B****

After selecting a disc, select a track with the numeric buttons.

**Press the numeric button(s) to select the track.**

To select a track from 1 to 9

For example: "6"


To select a two-digit track number 10 or higher

For example: "19"

 →  → 

Push the button within 7 seconds of each other.

Play will begin from the selected track.

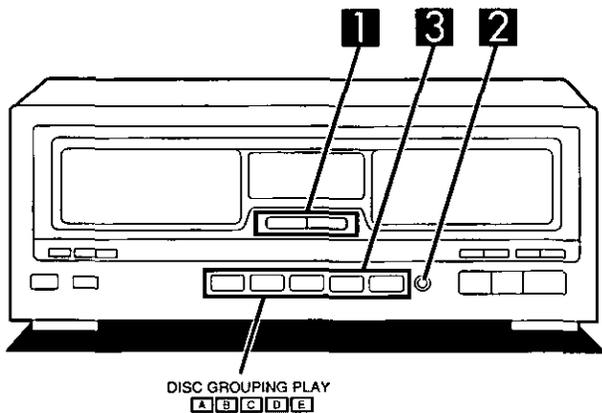

## Disc grouping play

With disc grouping play, you can register discs into any of the five available groups (A-E) and then play only the discs in a specific group.

- The same disc can be registered in as many groups as you like.
- Each group can hold up to 60 discs.
- You can name each group.

### To make groups

- 1 [In the stop mode]  
Press either DISC SKIP (- or +) until reaching the disc you want.

#### Note

- You cannot select slot No. 0.
- The changer skips over empty slots.

#### For your reference

You can also select disc number by using the remote control. (See page 22.)

- 2 Press GROUP ENTER.
- 3 [Within 7 seconds]  
Press the DISC GROUPING PLAY button you want. (This inputs the disc in the group.)

For example: To input disc in group A.  
Press [A].

- 4 Repeat steps 1, 2 and 3 until you have completed all items.

### To cancel disc grouping play mode

- 1 [In the stop mode]  
Press the DISC GROUPING PLAY button indicated on the display.

(The group indication on the display will go out.)


#### For your reference

The group contents will remain stored in memory even after the unit is switched off.


However, if the power cord is unplugged or the power supply is otherwise interrupted for an extended length of time, the contents will be erased from memory.

- 1 **DISC SKIP**  
- +
- 2 **GROUP ENTER**  
  
GROUP [A] [B] [C] ENTER  
5 DISC  

In any groups have been registered already, their letters will light up.
- 3 **DISC GROUPING PLAY**  
A B C D E  
  
GROUP [A] [B] [C] ENTER  
5 DISC  
INPUT A

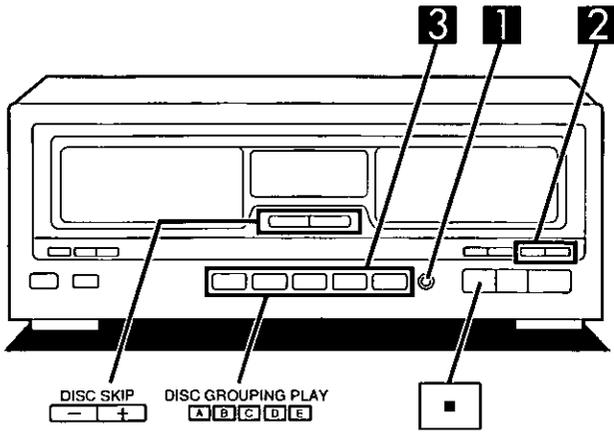

**1** **GROUP ENTER**

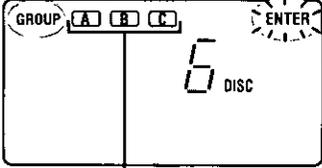If any groups have been registered already, their letters will light up.

**2**




**3**

**DISC GROUPING PLAY**





**Listening to compact discs**

**To name groups**

You can name your groups. The changer has several preset names to choose from.

- 1** [During sequential play or while it is on stop]  
**Press GROUP ENTER.**
- 2** [Within 7 seconds]  
**Select the name you want with ◀◀ and ▶▶.**  
Names change in rotation as shown below, every time you press ◀◀ or ▶▶.

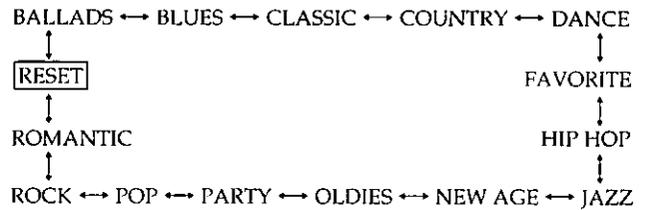

- 3** [Within 7 seconds]  
**Press the DISC GROUPING PLAY button for the group you want to name.**

For example: To name group A  
Press [A].

- 4** **Repeat steps 1, 2 and 3 to name other groups.**

**To cancel names**





Select "RESET" in step 2 and then the name of the group you want to cancel in step 3. Thereafter, the group will appear as "GROUP ... (A,B,C,D or E)".

**To check what discs are in what groups**

1. [During sequential play or while it is on stop]  
Press the DISC GROUPING PLAY button (A, B, C, D or E) you want and then press ■.
2. Press either DISC SKIP (- or +).  
Every time you press DISC SKIP, the next disc number in order is displayed.

**Note**

After checking, if you press the button of a group that is lit on the display, the disc grouping mode disengages.

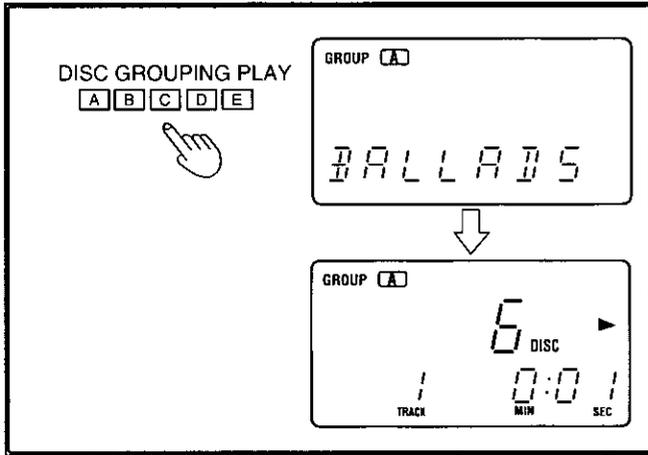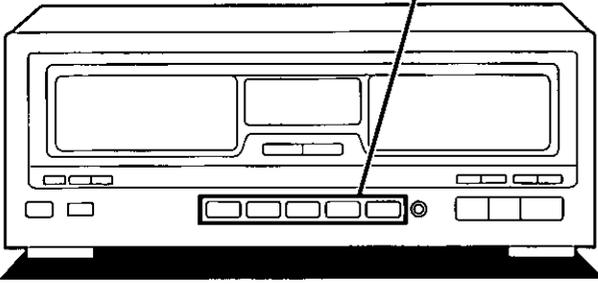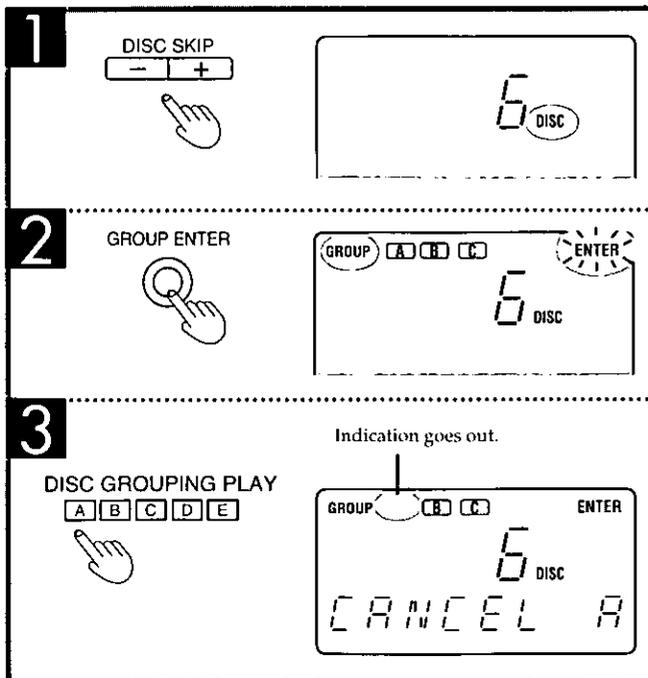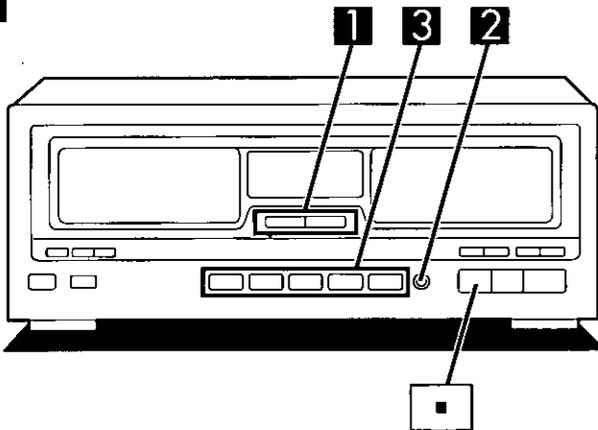**A**DISC GROUPING PLAY  
A B C D E**B****Listening to compact discs****To start play **A****

Unless otherwise specified, the changer selects sequential play.

[During sequential play or while it is on stop]

**Press the DISC GROUPING PLAY button of the group you want.**

For example: To hear group A

Press **A**.

**Note**

- Unnamed groups will be displayed as "GROUP A, B, C ..." and so forth.
- If you press the group button of a group which has no discs registered in it, the message "NO INPUT" will appear on the display.

**To cancel discs from groups **B******1**

[In the stop mode]

**Press either DISC SKIP (- or +) until reaching the disc you want.**

**2**

**Press GROUP ENTER.**

**3**



[Within 7 seconds]

**Press the DISC GROUPING PLAY button you want.**

For example: To cancel disc No. 7 from group A.

Press **A**.

If the disc is registered in more than one group, you can cancel it from all groups in a single operation by pressing **■** in step 3 (in the stop mode).

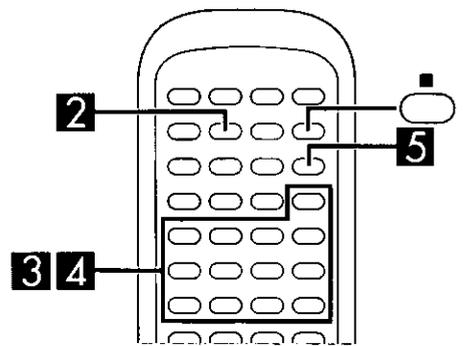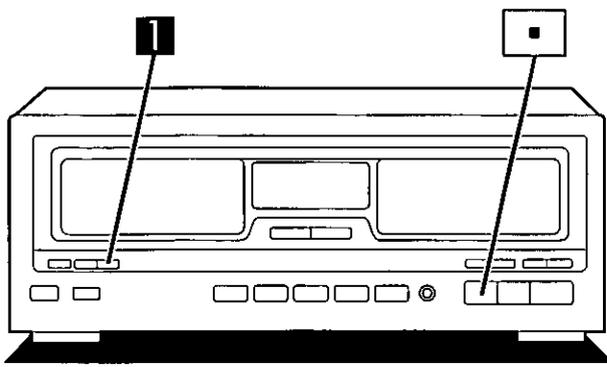

**1**

**2**

**3**   
Specified disc number

**4**   
Specified track number      Program order

**5**

*Listening to compact discs*

**Program play**

Program play lets you playback your favorite tracks in the sequence you want to hear them. The program can hold up to 32 steps.

- 1** [In the stop mode]  
**Press PROGRAM.**
- 2** **Press CD.**  
This will set the remote control to operate the CD changer.
- 3** **Select the disc(s) you want with the numeric buttons.**

**For example:**  
To select disc 3.  
**DISC/DECK 1/2 → 3 → DIRECT TUNING/  
DISC ENTER**

The "ALL" indication shows that all the tracks on the disc are selected.  
To program by means of disc numbers only, repeat the above operation. (The count will increase by one for each operation.)  
You can select slot No. 0.

- 4** **Press the numeric button(s) to specify the track.**

**For example:**  
To select track No. 20  
≥10 → 2 → 0


To program another track from the same disc, simply specify the track No.

**Repeat steps 3 and 4 until you have completed all entries.**  
If you attempt a 33rd selection, the "PGM FULL" indication will be displayed.  
  
If you enter non-existing disc(s) or track(s), the corresponding indicator illuminates and the entry is included in the count. In the play mode, the changer will cancel the non-existing entry.

- 5** **Press ► to start play.**  
To enter additional selections during play, repeat steps 3 and 4.

**To clear all programmed contents**

[In the stop mode]  
Press ■.

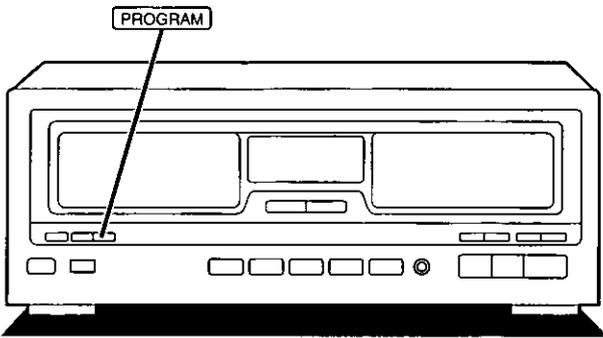

**To quit the program mode**

[In the stop mode]

**Press PROGRAM.**

The changer will return to the sequential play mode.

The programmed contents will remain stored in memory until they are cleared, even after the program mode is canceled.

Therefore, after program, it is possible to cancel the program mode and use another play mode and then hear the same program again at a later time.

In addition, if discs are changed, the program will be played using the new discs. If non-existing entries are found at this time, the changer will cancel them

**For your reference**

The program will remain stored in memory even after the unit is switched off.




However, if the power cord is unplugged or the power supply is otherwise interrupted for an extended length of time, the contents will be erased from memory.

**Special note on recording programs**

The changer needs time to change the discs and find the tracks.

Consequently, it will take the changer slightly longer than the total track time to record everything. Exactly how much longer depends on the contents of the program.

A

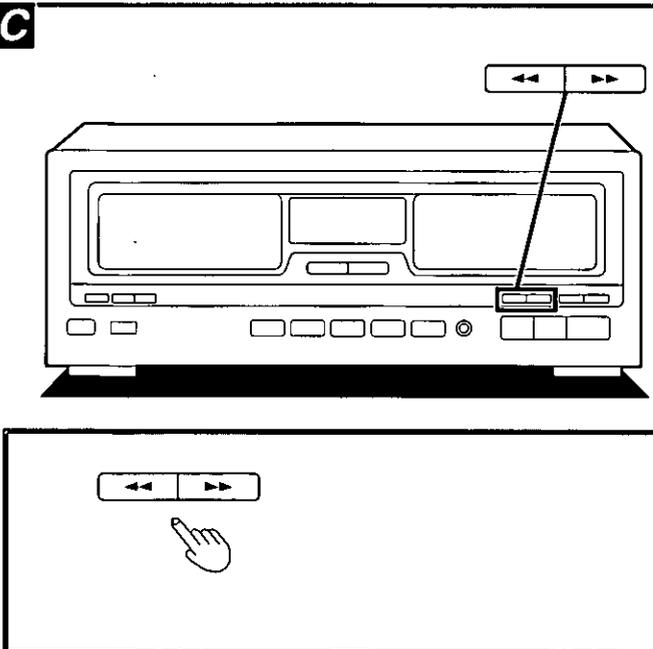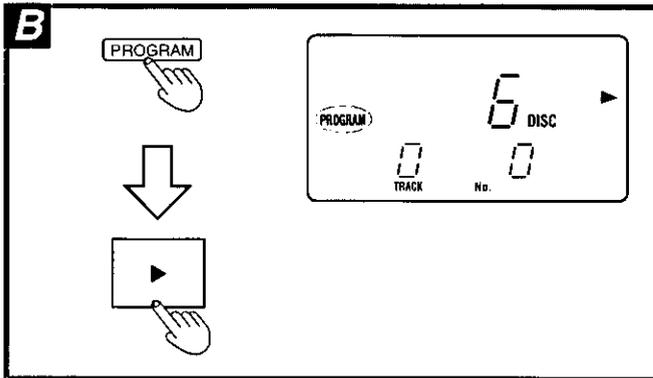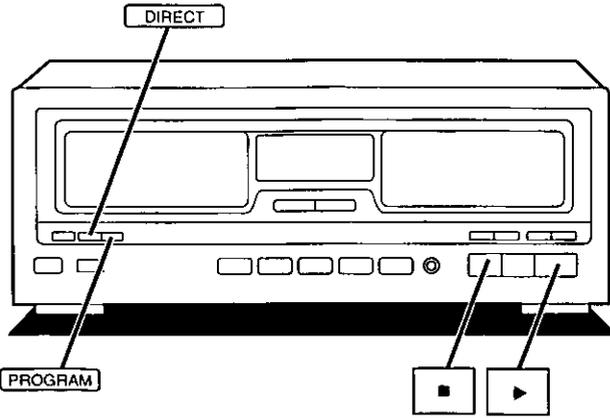

## Listening to compact discs

## Direct programming

A

If, while listening to a certain track, you decide that you want to add that track to your program, you can with direct programming.

[While the track you want to program is playing]

**Press DIRECT.**

The current track will be added to the tail end of the program. When you make a program as explained under "Program play", and then perform the above procedure without clearing the program first, the selected track is added to the end of the program.

**Note**

- You cannot add to the program if already full, that is, if 32 selections have already been programmed. If you press DIRECT in this case, the message "PGM FULL" will be displayed. Therefore, direct programming is possible only when 31 or less tracks have been programmed.
- During program play, the DIRECT button does not respond to touch.

## To listen to programmed tracks B

[In the stop mode]

**Press PROGRAM and check "PROGRAM" appears on the display, then press ▶.**

The program will start from the first track.

## To clear all programmed contents.

[In the stop mode]

Press ■.

## Search function

C

You can search rapidly forward or backward on the disc for specific sections.

[In the play or pause mode]

**Press and hold ◀◀ or ▶▶.**

◀◀: You can search backward.

▶▶: You can search forward.

Release the button when you reach the desired point.

The changer will return to the previous mode (play or pause).

**In the sequential/disc grouping play mode**


When the changer finishes searching the current disc, it starts searching the next one.

**In the single disc play mode**

You can search forward or backward only within the current disc.

**In the program play mode**

You can search forward or backward only within the current track.

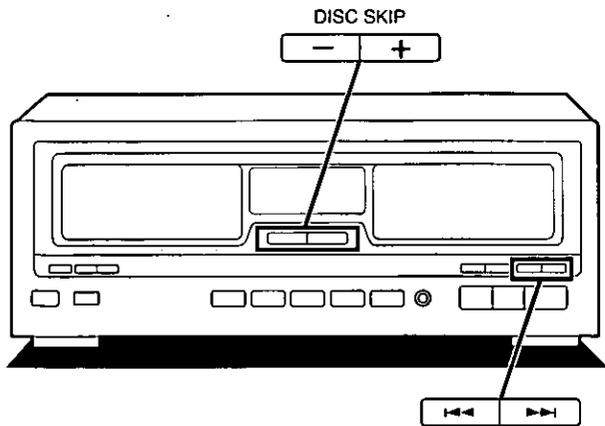

### Skip function

#### To skip discs **A**

Use this function to skip discs to select a disc you wish to listen to.

You can use this function in stop, sequential play and disc grouping play modes.



**Press either DISC SKIP (- or +) until you reach the desired disc.**

-: Skips backwards to the preceding disc.

+: Skips forward to next disc.

#### Note

- The changer skips over empty slots.
- This function does not work during program play.
- If you attempt to use this function during single disc play, the changer will cancel single disc play.

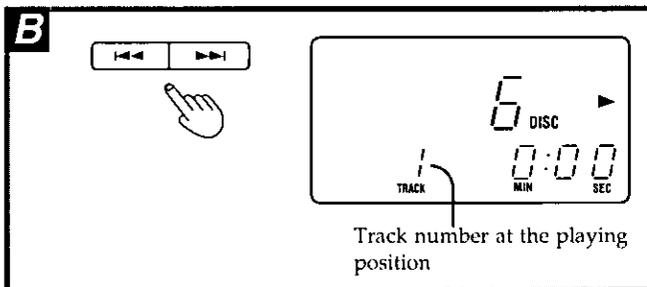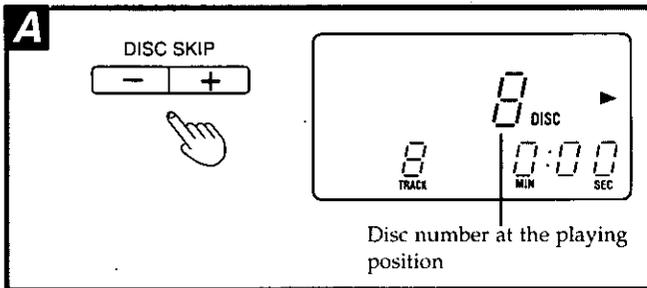

#### To skip tracks **B**

Use this function to skip tracks to select a track you wish to listen to.

**Press either <<< or >>> until you reach the desired track.**

<<<: You can skip backward.

>>>: You can skip forward.

**In the sequential/single disc/disc grouping/program play mode**

In the program play mode, you can skip from one track to another in the programmed sequence.


In any other mode, you can skip forward and backward within the current disc only.

<<<: You can skip to the beginning of the track being played. If you press this button again quickly, you can skip to the beginning of the previous track.

>>>: You can skip as many tracks as the number of times you press the button.

You can also skip tracks when the changer is in the stop mode or pause mode.

## Listening to tapes

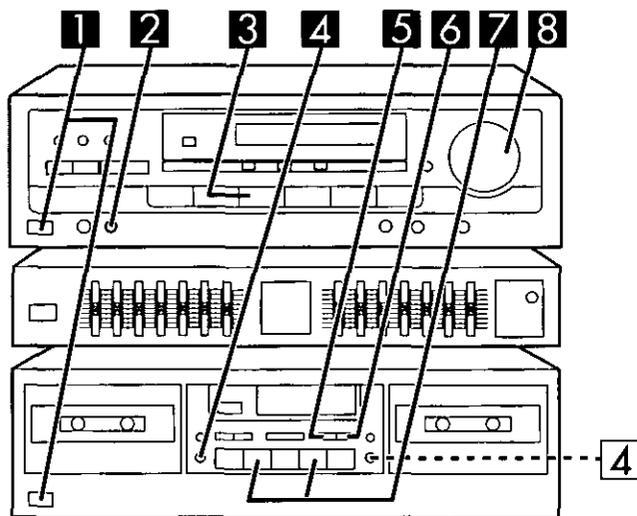

Types of tapes which can be played on this unit:


Normal position/TYPE I	<input type="radio"/>
High position/TYPE II	<input type="radio"/>
Metal position/TYPE IV	<input type="radio"/>

The unit automatically identifies the type of tape.



The procedures described below are an example of playback on Deck 1.

Before operation, set VOLUME of the receiver to the "MIN" position.

- 1** Press **POWER** of the receiver and cassette deck.
- 2** Press **SPEAKERS** to turn on the speaker systems.
- 3** Press **TAPE MONITOR**.
- 4** Press **▲ OPEN** on Deck 1, and then insert the cassette tape.  
Close the cassette holder by hand.  
To play back on Deck 2, in press the button (4) for Deck 2.
- 5** Press **DOLBY NR** to listen to tapes recorded by Dolby B-type noise-reduction.  
(Refer to "Dolby noise-reduction system" on page 31.)
- 6** Press **REVERSE MODE** to select the appropriate reverse mode.  
Each time the button is pressed, the indicator will change in the order:
  - : One side only.
  - : Both sides repeatedly (up to 8 times).
  - : Both sides, once only.
(Refer to "Reverse function" on page 31.)
- 7** Press **▶ (or ◀)**.  
Playback will begin.  
▶ : To begin from the forward side.  
◀ : To begin from the reverse side.
- 8** Turn **VOLUME** to adjust the volume level.

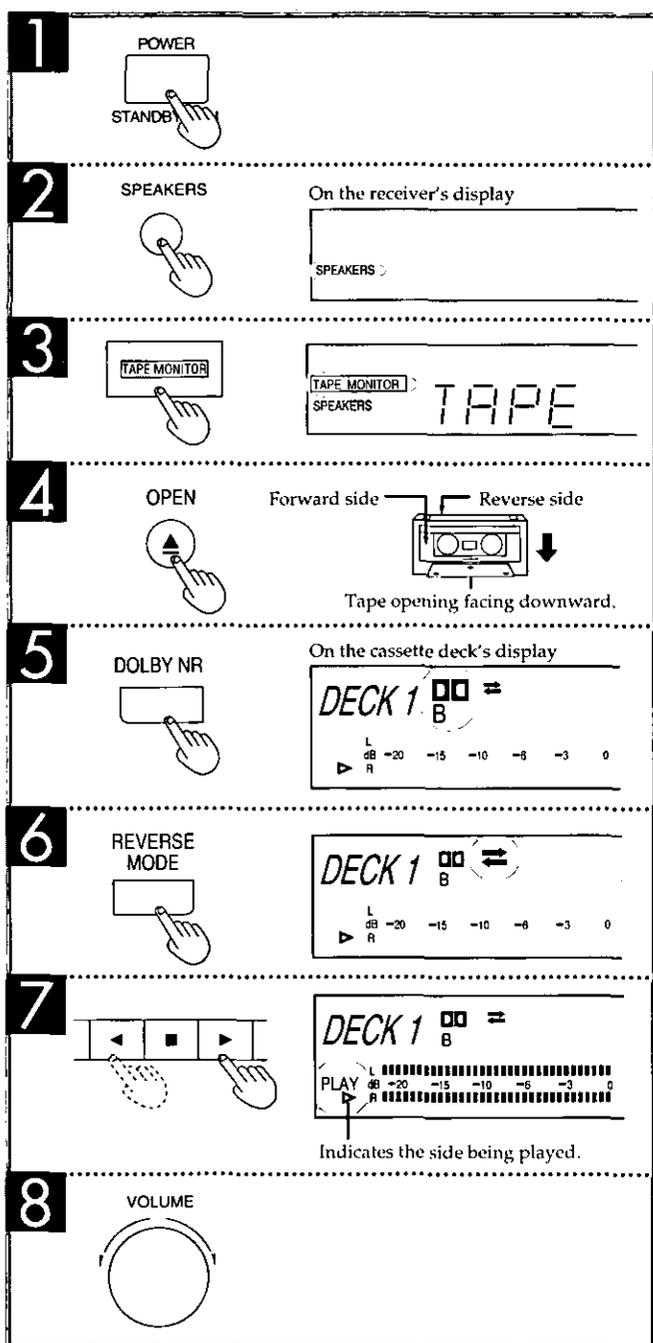

(Continued on next page)

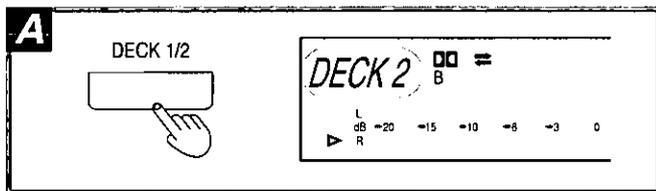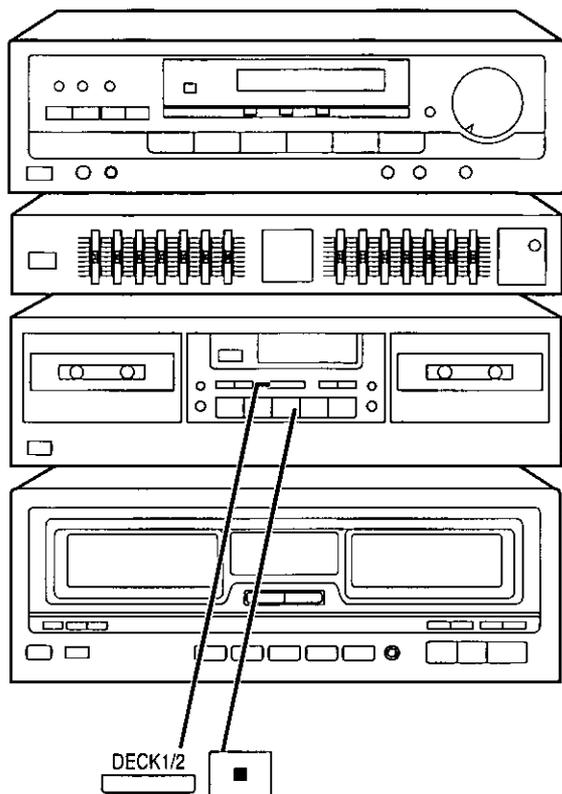

**To stop playback**

Press ■.

**After listening is finished**

Be sure to reduce the volume level, and switch the power to the standby condition by pressing POWER of the receiver. The power for the system can thereafter be switched on and to the standby condition by using the power switch of the receiver. (provided that the power cords are connected as on page 6.)

**To change the Deck to be used A**

**Press DECK 1/2 to select the Deck you want to play.**

Each time the button is pressed, the indicator will change: DECK 1 ↔ DECK 2

The indicator changes only if a tape is loaded in the other deck.

**Reverse function**

The reverse function on this unit has three modes (↔, ↻, ↺). Read the descriptions below and select the mode as desired.

Mode	Tape travel
↔	Only one side of the tape (either the forward side or the reverse side) will be played, and operation will automatically stop when playback has been completed.
↻	Both sides of the tape will be played repeatedly eight times, and then operation will automatically stop. (If playback is begun from the reverse side, the forward side will be played seven times.)
↺	<p><b>When there is a tape in only one of the decks</b> Both sides of the tape will be played once, and then operation will automatically stop. (If playback is begun from the reverse side, the forward side will not be played.)</p> <p><b>When there is a tape in each of the decks</b> The forward and reverse sides of the tape in Deck 1 will be played, followed by the forward and reverse sides of the tape in Deck 2, and after this operation is repeated eight times, operation will automatically stop. (If playback is begun from Deck 2, the tape in Deck 1 will be played seven times.)</p>

**Dolby noise-reduction system**

The Dolby noise-reduction system is designed to effectively reduce the annoying high-frequency "hissing" noise which can occur with cassette tapes. During recording, the system functions to increase the high-frequency sound level, and then, during playback, that same portion is weakened to bring it back to the previous level.


**Dolby B-type noise-reduction**

 

 

 

Noise is reduced to about one-third.

Use this system when playing back tapes recorded by the Dolby-B noise-reduction system, such as prerecorded music tapes, etc.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.

"DOLBY" and the double-D symbol □□ are trademarks of Dolby Laboratories Licensing Corporation.

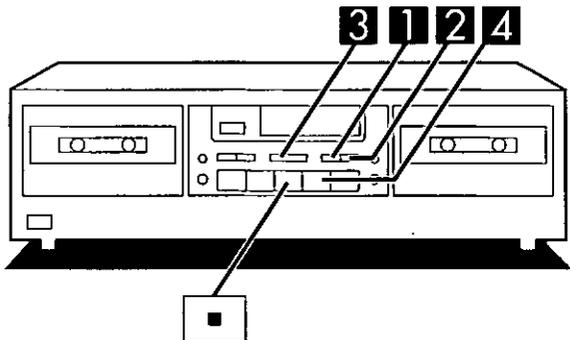
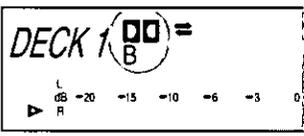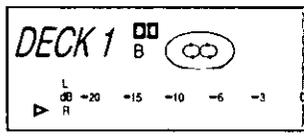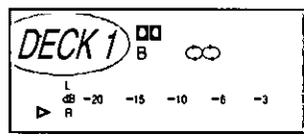
<b>1</b>	<p>DOLBY NR</p> 	
<b>2</b>	<p>REVERSE MODE</p> 	
<b>3</b>	<p>DECK 1/2</p> 	
<b>4</b>		

### Series playback

Both sides of the tape in Deck 1 will be played, followed by both sides of the tape in Deck 2. (Repeated up to eight times.)

#### Preparation

Load the tapes to be played into Deck 1 and Deck 2. Note that for series playback it is not possible to select different types of Dolby NR for Deck 1 and Deck 2. It is recommended that you use two tapes which were recorded using the same type of Dolby NR (or both recorded without Dolby NR).


- 1** Press DOLBY NR to listen to tapes recorded by Dolby B-type noise-reduction.
- 2** Press REVERSE MODE to select the "∞" mode.
- 3** Press DECK 1/2 to select Deck 1.
- 4** Press ▶. Series playback will begin from the forward side of the tape in Deck 1.

#### To stop playback

Press ■.

#### For your reference:

It is also possible to begin series playback from the reverse side of the tape in Deck 1 or from Deck 2. (Refer to "Reverse function" on page 31.)

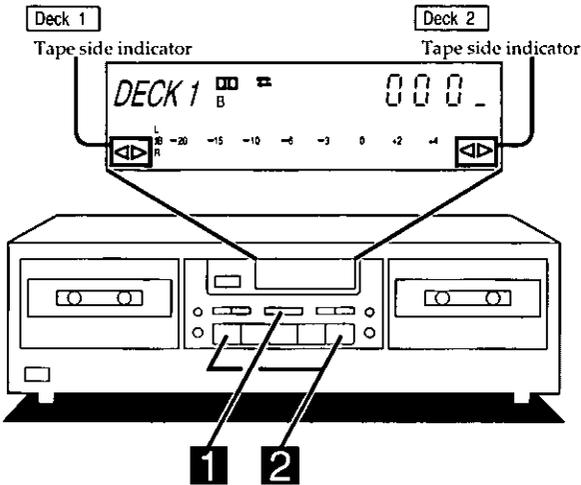

**To fast-forward or rewind the tape**

- 1 Press DECK 1/2 to select the Deck (1 or 2).
- 2 Press ◀◀ or ▶▶.

Because this unit is capable of playing back both sides of the tape, the operation changes in accordance with the direction of the tape side indicator.

- The tapes in Deck 1 and Deck 2 can be advanced or rewound at the same time.

**Tape counter**

The tape counter indicates the amount of tape travel as a numerical value based on the number of revolutions of the tape hub. As you switch between Deck 1 and Deck 2, the tape counter shown on the display changes too.

**To reset the tape counter**

 
**Press COUNTER RESET.**

The tape counter of the currently selected deck will revert back to "000", while that of the other deck will remain unchanged.


**For your reference:**

When the tape is traveling in the reverse direction, the value displayed on the tape counter will count down. After "000" is reached, the display will switch to "999" and will then continue counting down.

**1** DECK 1/2




**2**

 

Tape side indicator	Rewind	Fast forward
▶	◀◀	▶▶
◀	▶▶	◀◀

B

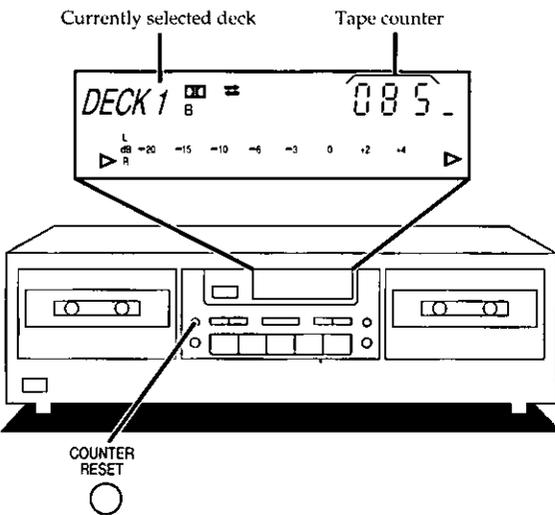

## Changing the tone and other functions

### To adjust the tone quality **A**

Turn **BASS** to adjust the low-frequency sound.

Turn **TREBLE** to adjust the high-frequency sound.

### To adjust the sound balance **B**

Turn **BALANCE** to adjust the left/right sound balance.

This will not adjust the left/right volume balance of the surround speakers.

### To mute the sound level **C**

Press **MUTING**.

The message "MUTING ON NOW" runs repeatedly from right to left across the display as long as the muting function is on.

Press once again to return to the previous volume level.

#### Note

When the receiver is turned off, the muting operation will be automatically canceled.

### To enjoy external sources **D**

Press to select the desired source, and start the desired source.

(Refer to the appropriate operating instructions for details.)

**VCR 1:** To watch video tapes (VCR 1)

**TV/VCR 2:** To watch TV or video tapes (VCR 2)

**PHONO:** To listen to phono discs

#### Note

To watch a video or the TV, set the TV to either the TV mode or VIDEO mode as indicated below.

•To enjoy videos (VCR 1 or VCR 2)

Set it to VIDEO mode.

•To watch TV

Set it to TV mode.

### To listen through headphones **E**

Use **VOLUME** to reduce the volume level, and connect the headphones.






Plug type: 6.3 mm (1/4 in.) stereo

If you do not want sound from the speakers, press **SPEAKERS** and check the "SPEAKERS" indication goes out.

If a subwoofer is connected to your system, turn off power to it or the subwoofer amp you are using.

#### Note

Avoid listening for prolonged periods of time to prevent hearing damage.

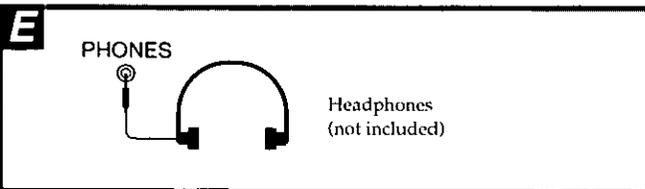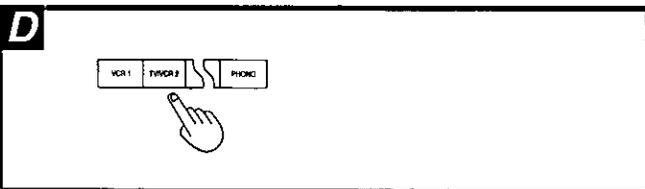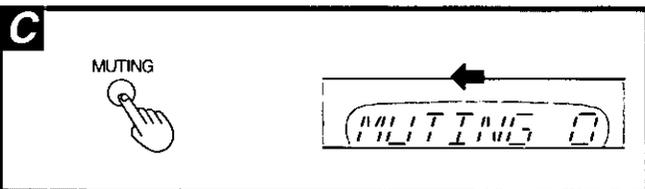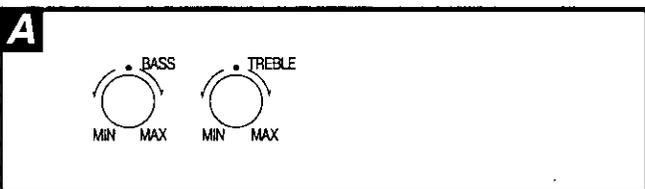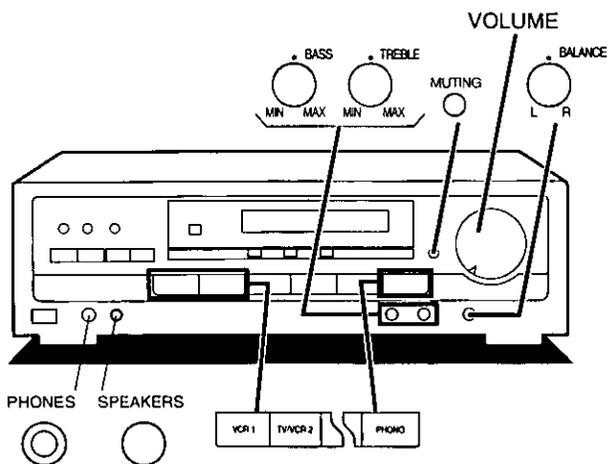

## Making a recording


### Recording from the radio or external source (Deck 2 only)

Types of tapes which can be used for recording:

Normal position/TYPE I	<input type="radio"/>
High position/TYPE II	<input type="radio"/>
Metal position/TYPE IV	<input type="radio"/>

#### Preparation


Load a tape which has been advanced to the end of the leader tape (the transparent part at both ends of the tape) into Deck 2.

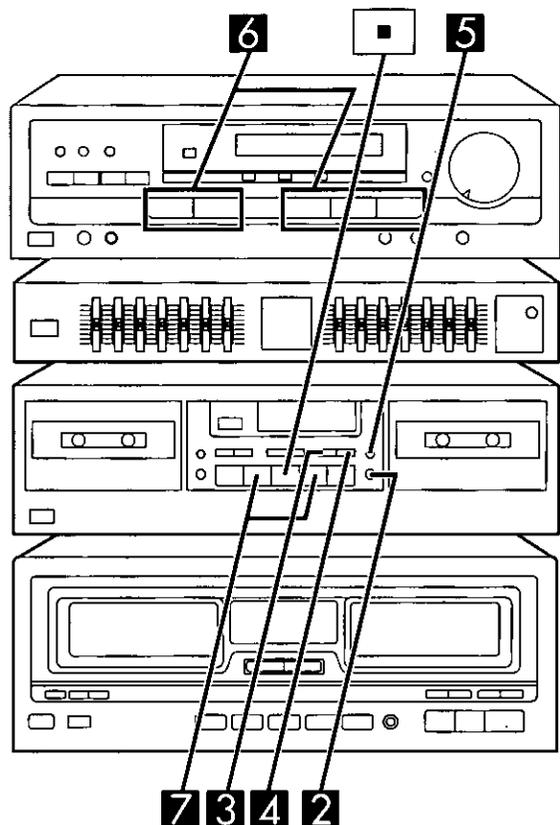

**2** OPEN





 Forward side      Reverse side





**3** DOLBY NR

 
On the cassette deck's display.

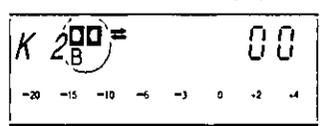
**4** REVERSE MODE

 

**5** ● REC PAUSE

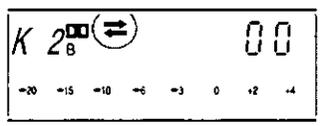



**6**

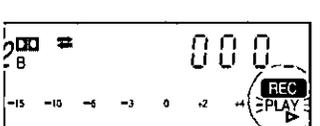

 
**7**

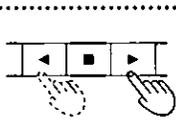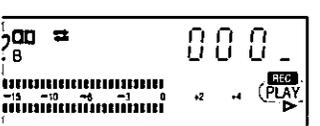- 1** Turn on the power of the systems.
- 2** Press **▲ OPEN** on Deck 2, and then insert the cassette tape.  
Close the cassette holder by hand.
- 3** Press **DOLBY NR** to record by Dolby B-type noise-reduction system.  
When recording a tape without using a Dolby NR system, press so that the indicators go off.
- 4** Press **REVERSE MODE** to select the desired reverse mode.  
Each time the button is pressed, the indicator will change in the order: 

  : Only one side will be recorded, and then operation will automatically stop.

 ,  : Both sides (the forward side first, and then the reverse side) will be recorded, and then operation will automatically stop.

- 5** Press **● REC PAUSE**.  
The unit will be in the recording standby mode.
- 6** Press to select the desired source to be recorded.
- 7** Press **▶** (or **◀**) to begin recording, and play the source to be recorded.  
▶: To begin recording from the forward side.  
◀: To begin recording from the reverse side.

#### Note

When recording on both sides of the tape, be sure to press the **▶** button.



#### To stop recording

Press **■**.

#### To temporarily stop recording

Press **● REC PAUSE**.

To resume recording  
Press either **◀** or **▶**, corresponding to the side of the tape side indicator (**◀** or **▶**) which is lit.

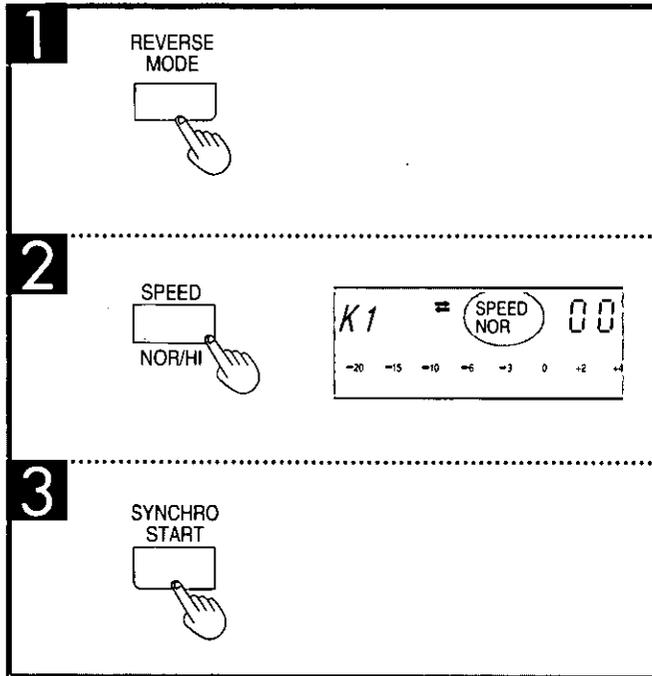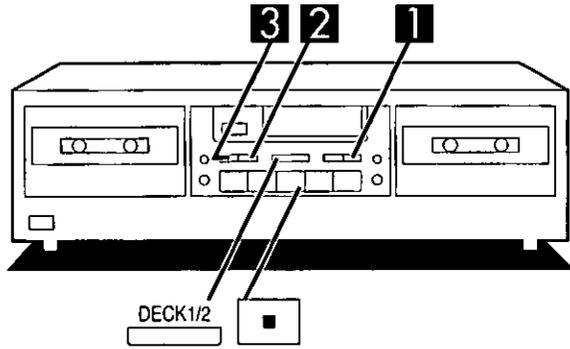

## Making a recording

### Tape-to-tape recording

Use Deck 2 to record the sound being played back on Deck 1.

#### Preparation

Load tapes which have been advanced to the end of the leader tape into both decks.

Deck 1: For playback    Deck 2: For recording

#### 1 Press REVERSE MODE to select the desired reverse mode.

Each time the button is pressed, the indicator will change in the order:

: Only one side of the tape will be recorded, and then operation will automatically stop.

: Both sides of the tape (first the forward side and then the reverse side) will be recorded, and then operation will automatically stop.

If the recording tape is longer than the playback tape, the playback tape will be played repeatedly as many as eight times until the recording tape is finished.

: Both sides of the tape (first the forward side and then the reverse side) will be recorded once, and then operation will automatically stop.

#### Note

To record on only one side of the tape, set the tape side indicators (< or >) on Deck 1 and Deck 2 in accordance with the tape sides to be played back and recorded.

To record on both sides of the tape, set the tape side indicators on both Deck 1 and Deck 2 to the forward side (>).

#### 2 Press SPEED to select the recording speed.

Each time the button is pressed, the indicators will change in the order:

**NOR:** normal speed

**HI:** approx. double speed

#### 3 Press SYNCHRO START.

Recording will begin.

#### To stop recording





1. Press DECK 1/2 to select Deck 2.
2. Press

#### Note

In order to avoid operation errors later, be sure to switch off the SPEED button (the "NOR" and "HI" indicator will go out) after the tape-to-tape recording has finished.

#### For your reference:

- The Dolby effects will be recorded as they are on the tape being played back.
- Because the signal being recorded from Deck 1 onto Deck 2 does not pass through the receiver, it is possible to change the setting of the receiver's input selector during recording in order to listen to some other sound source.

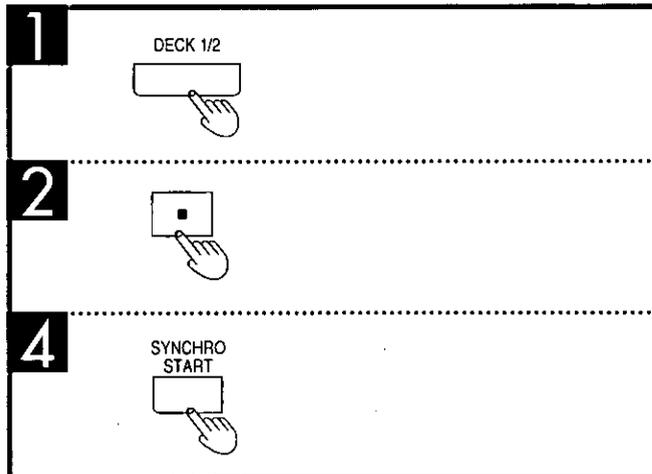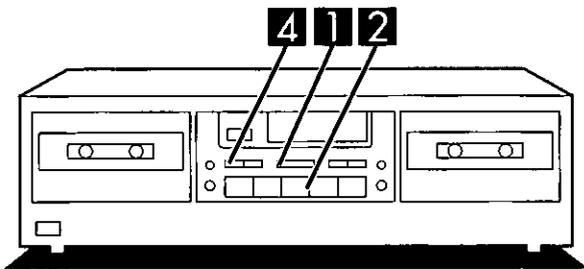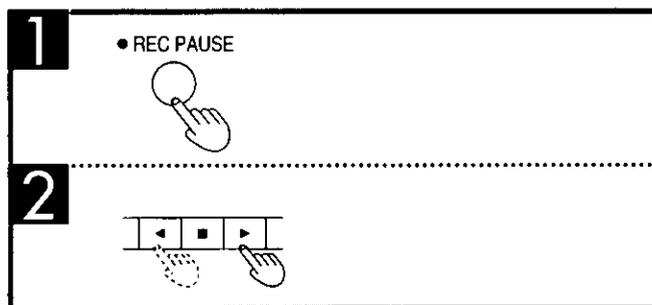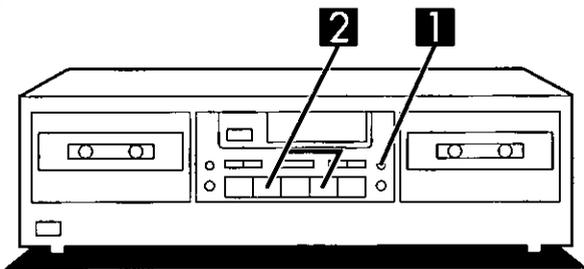**A****B****Making a recording****To record selected tracks A**

- 1** [During recording]  
Press **DECK 1/2** to select Deck 1.
- 2** Press **■**  
Deck 1 will stop, and Deck 2 will record a 4-second silent interval and then enter the recording standby mode.
- 3** Operate Deck 1 to find the track you wish to record.  
It is also possible to change the playback tape at this time.
- 4** Press **SYNCHRO START**.  
Recording will resume.

**To cut unwanted parts during recording B**

- 1** Press **● REC PAUSE** during recording.  
Deck 2, which was recording, will enter the pause mode, and Deck 1 will continue playback.  
(If you were recording at hi-speed, Deck 1 will change to normal speed while Deck 2 is on pause, but will return to hi-speed when you resume recording.)
- 2** [When Deck 1 reaches a part you wish to record]  
Press either **◀** or **▶**, corresponding to the tape side indicator which is lit.  
Deck 2 will resume recording.

**Note**

- When recording with the recording speed set to hi-speed, noise interference may be recorded onto the tape if there is a television set nearby, so make the recording in a location separated from the television set or switch off the television set during recording.
- Noise reduction does not work during playback of tape-to-tape recordings. If the tape was recorded with noise reduction, listen at low treble. Lower the treble with the receiver's treble control before playback.

**To make blank tapes (Deck 2 only)**

1. Switch the receiver to an input source which is not being used.
2. Insert the recorded tape into DECK 2.
3. Press **DOLBY NR** so that the Dolby NR indicator is off.
4. Press **REVERSE MODE** to select reverse mode.
5. Press **● REC PAUSE**.
6. Press **◀** or **▶**, whichever side you want to erase.

**Note**

To erase both sides of the tape, be sure to press the **▶** button.

**To record on the VCR (VCR 1)**

You can record audio and video sources on a VCR when this latter is connected to the "VCR 1" terminal on the receiver.

1. Switch the receiver to the input source that you want to record.


**Note**

Recording from the tape deck is not possible.  
Begin recording on the VCR (VCR 1) and start the desired source.  
(Refer to the appropriate operating instructions for details.)

## Enjoying sound with DOLBY PRO LOGIC

DOLBY PRO LOGIC lets you enjoy movie software (video tapes, laser discs, etc.) in your own home with the same powerful stereo-phantonic effect found in movie theaters.

This unit has two DOLBY PRO LOGIC modes: SURROUND and 3 STEREO.

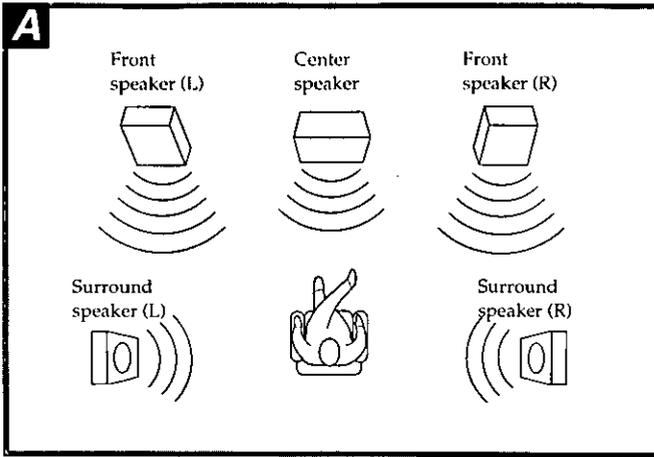


### SURROUND **A**

By reproducing the feeling of depth and movement of sound, video software or compact discs recorded with Dolby Surround provide the listener with a feeling of presence like that of a movie theater.

### 3 STEREO **B**

You can enjoy audio/video sources with clear sound, more presence and a good feeling of orientation. 3 STEREO can be used with sources not recorded in DOLBY SURROUND.

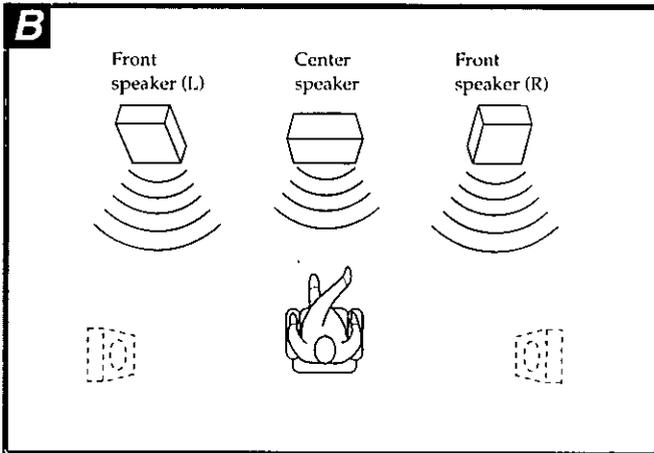


#### Note

Sound is not produced from surround speakers in the 3 STEREO mode.

Manufactured under license from Dolby Laboratories Licensing Corporation.  
DOLBY, the double-D symbol  and "PRO LOGIC" are trademarks of Dolby Laboratories Licensing Corporation.

### Setting the center mode and adjusting speakers output level **C**

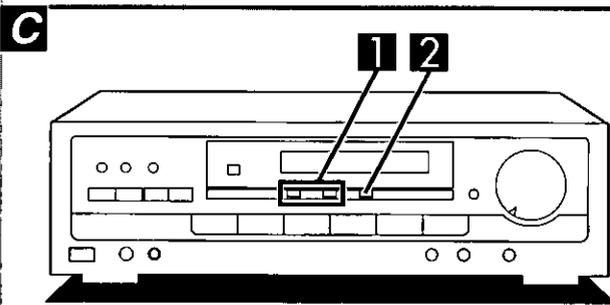

#### Note

- When ready to adjust speaker output level, situate yourself away from the speakers as you normally do when listening.
- First turn ON the speakers with the SPEAKERS button on the receiver.
- If front speakers volume is unbalanced, adjust the balance with the BALANCE control.

#### 1 Press SURROUND (or 3 STEREO).

"SURROUND" (or "3 STEREO") will be displayed for about 1 second.

#### Note

Press 3 STEREO if surround speakers have not been connected.

#### 2 Press CENTER MODE to select the correct center mode.

When the button is pressed, the current center mode is displayed. Pressing it again changes the center mode.

#### NORMAL

When the center speaker is smaller than the front speakers

#### WIDEBAND


When the center speaker is the same size or larger than the front speakers

#### PHANTOM **SURROUND mode only**


When no center speaker is connected.

#### Note

In the PHANTOM mode, the sound which would have been sent to the center speaker will be divided equally between both the left and right front speakers.

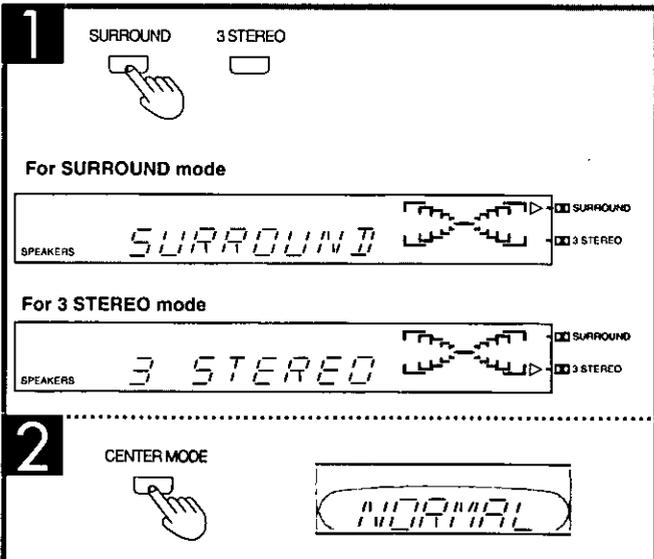

(Continued on next page)

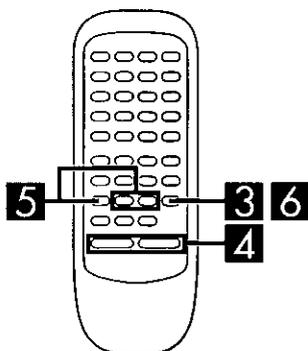

**3** TEST L

**4** L → C → R → S

**5** C 0dB

↓

S 0dB

C +3dB

**6** TEST L

- 3** Press **TEST** to output a test signal.  
 The speaker outputting the test signal is displayed while the test is running.  
 L: Front speaker (left) C: Center speaker  
 R: Front speaker (right) S: Surround speakers (left, right)

**For surround mode**  
 L → C → R → S

**Note**  
 When the center mode is PHANTOM, you can not select the center channel.

**For 3 STEREO mode**  
 L → C → R

- 4** Press **VOLUME (-) or (+)** to set the volume level normally used for enjoying the source.
- 5** Press **CH SELECT** to select the center or surround speakers, and press **CH LEVEL (-) or (+)** to adjust the output level.  
 Adjust the output level of each speaker from the listening position until they are all identical.  
 Output levels can be varied within a range of -12 dB to +12 dB with front speaker output level serving as the zero point.

**Note**  
 The test signal is output only by the speaker you are now adjusting and does not repeat the sequence until adjustments are complete.

- 6** Press **TEST** to stop the test signal.
- To turn off the DOLBY PRO LOGIC systems**  
 Press the button of the currently selected mode (SURROUND or 3 STEREO).

Enjoying with SURROUND or 3 STEREO

Before trying anything, have you set the center mode and adjusted speaker output level?

- 1 Press SURROUND or 3 STEREO to turn on the desired mode.**  
Pressing the same button again turns off the activated listening mode.



- 2 Select the desired source and start the desired source.**

**Note**

When employing SURROUND, use software which has been recorded with Dolby Surround.



**To turn off the DOLBY PRO LOGIC systems**

Press the button of the currently selected mode (SURROUND or 3 STEREO).

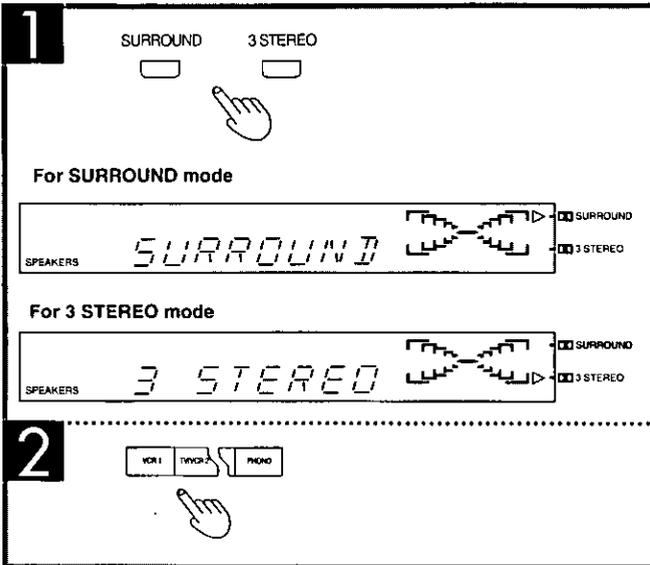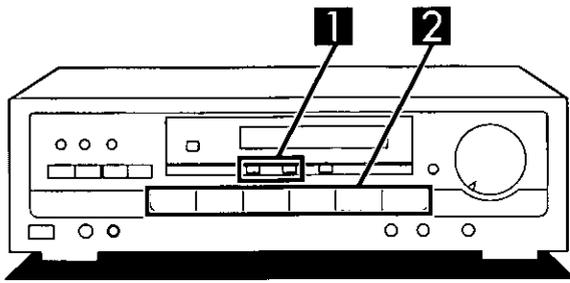

Adjusting the sound field and sound quality

## Using the graphic equalizer

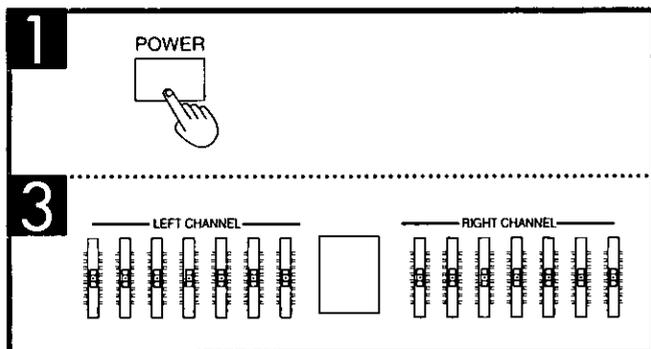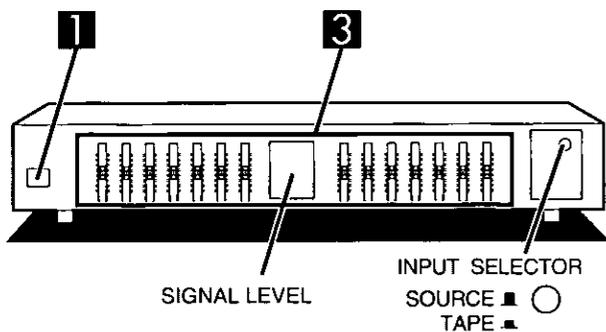

### Adjusting the tone quality

#### Preparation

- Turn Dolby Pro Logic and the SFC mode OFF.
- Set the TREBLE and BASS tone controls to their center positions.

- 1 Press POWER of the graphic equalizer.**  
The graphic equalizer will switch on.
- 2 Start the desired source.**  
The left and right input levels will be displayed.
- 3 Adjust the left and/or right channel tone quality as desired.** (See page 42.)

#### Caution

As with any equalizer, it is not recommended to raise adjacent equalizer level controls by a large amount. This may cause receiver clipping, distortion, or damage to the speakers. It is more effective to raise one equalizer level control and lower the ones on either side, especially if you want to emphasize a particular sound like a drum.

#### To bypass the graphic equalizer

Press POWER to switch off the graphic equalizer.

#### To use a second tape deck or VCR connected to the graphic equalizer

For detailed information concerning tape deck or VCR operation, please read the operating instructions for each unit carefully.

#### To start the tape playback

1. Set INPUT SELECTOR of the graphic equalizer to the "TAPE" position.
2. Start the tape playback.

#### Note

Be sure to set INPUT SELECTOR to the "SOURCE" position to listen to other sources.

#### To record on the tape deck with equalizer correction

This only works for the tape decks, etc., connected to the graphic equalizer.

1. Set INPUT SELECTOR to the "SOURCE" position.
2. Adjust the tone quality as desired.
3. Start recording on the tape deck and then start the desired source to be recorded.

**Characteristics of each frequency range**

The following are examples of typical applications with regards to the equalizer band settings. These statements are used in a general manner of speaking and may not hold true in all cases.

**63 Hz Deep bass range**

The sounds of the bass, drums, etc. are dramatically strengthened.

**160 Hz Bass range**

This range provides the sounds of the saxophone, trombone, etc. sounds can be clarified, if indistinct, by reducing this setting.

**400 Hz Mid-bass range (the fundamental range for music)**

This control can be used to reinforce the sounds of male vocals, etc.

**1 kHz Mid-range**

This control can be used to add clear presence and realism to female vocals, etc.

**2.5 kHz Mid-high range**

This range provides clarity and color variations to stringed instruments, etc.

**6.3 kHz Treble range**

This control can be used to brighten the sounds of the flute and similar instruments. If sounds seem too jarring, softness can be applied by reducing the setting.

**16 kHz Super-treble range**

This control can be used to provide an extra measure of delicate vibration to the sounds of the cymbals, triangle, etc.

If tape "hiss" noises are annoying, this control's setting can be reduced to alleviate such noises.

**Examples of applications**

By using the seven band-level controls, various corrections of the sound field and tone quality are possible.


**For creation of a sound field in the listening room. Correcting room acoustics**

Each room has its own particular effects on frequency characteristics. These effects are determined by a number of conditions, such as room size, furnishings, etc.

The 7 separate divisions of the band level control on this unit make it possible to selectively correct only the frequency ranges necessary to suit the conditions of each listening room.

**An example of room acoustics correction**


In order to correct the peaks and dips in bass sounds caused by reflection, reduce the 160 Hz level 4-6 dB and then, raise the level of sounds below 63 Hz and above 6.3 kHz vicinity slightly.

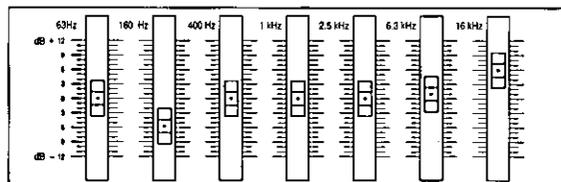

**For editing "live" recordings made on tape, etc. Cutting the noise from live recording tapes**

**Cutting the noise from live recording tapes**

Live tapes recorded outdoors generally contain popping noises caused by wind and various other noises from the surrounding area. In order to effectively eliminate wind noise, cut bass sounds below 63 Hz and raise the level of sounds in the 400 Hz range. Then control sounds made by birds, etc., with a 6.3 kHz adjustment.

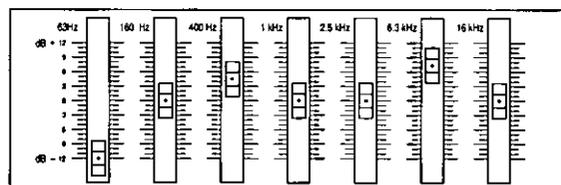


**For creation of unique, individually personalized sounds. Producing clear vocals**

**Producing clear vocals**

For female vocals, raise the level of the 1 kHz-2.5 kHz range by 2-4 dB. To rectify omission, raise the level of the 6.3 kHz vicinity slightly.

Male vocals can be improved by raising the level of the 400 Hz-2.5 kHz range.

Below is an example of a female vocal correction.

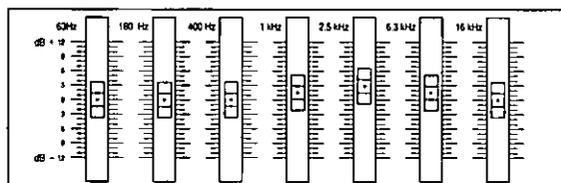

## Remote control operation

This remote control transmitter can be used to operate other units manufactured by this company in addition to the system components you have purchased, including TVs, VCRs and laser disc players.


### Note

Some TVs and VCRs cannot be operated with this remote control.

### Preparations before use

1. Check the appropriate connection of the power cords and connection cables in order to operate the system components correctly.
2. Turn on the speaker system.

## Basic operations
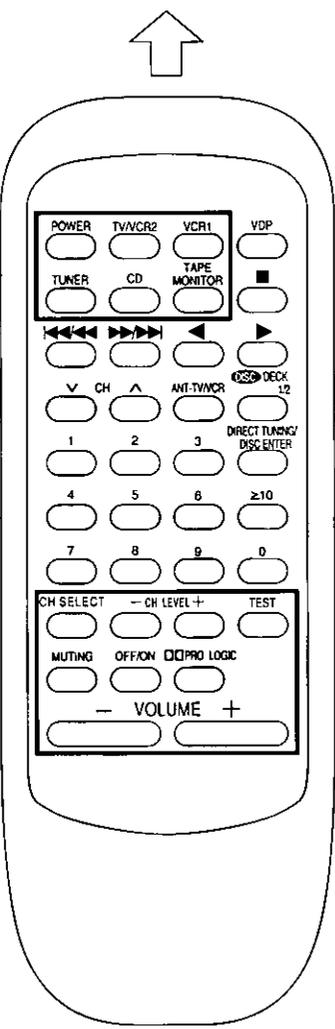
<p>Facing toward the receiver</p> 	<p><b>To turn the power of the receiver ON/OFF</b></p>	<p>TUNER → POWER</p> <p>Once the power has been set to ON, it can be turned ON and OFF simply by pressing POWER.</p> <p><b>Note</b> After turning the power of the TV, VCR or laser disc player ON or OFF, always press TUNER before pressing POWER when turning the power of the receiver ON and OFF.</p>
	<p><b>To select an input source</b></p>	<p>TV/VCR2 VCR1 TUNER CD TAPE MONITOR</p> <p>PHONO can not be selected with this remote control.</p>
	<p><b>To mute the sound level</b></p>	<p>MUTING</p> <p>The message "MUTING ON NOW" runs repeatedly from right to left across the display as long as the muting function is on. Press once again to return to the previous volume level.</p> <p><b>Note</b> When the receiver is turned off, the muting operation will be automatically canceled.</p>
	<p><b>To adjust the volume level</b></p>	<p>- VOLUME +</p>
	<p><b>To enjoy sound with DOLBY PRO LOGIC</b></p>	
	<p><b>To turn on the DOLBY PRO LOGIC and select the desired mode</b></p>	<p>DOLBY PRO LOGIC</p> <p>Changes as follows each time the button is pressed.</p> <p>SURROUND ⇄ 3 STEREO</p>
	<p><b>To output a test signal</b></p>	<p>TEST</p> <p>When the SURROUND or 3 STEREO mode is ON Press once again to stop the test signal.</p>
	<p><b>To adjust the output level of center speaker and/or surround speakers</b></p>	<p>When the SURROUND or 3 STEREO mode is ON</p> <p>CH SELECT ① Selects channel between center (C) and surround (S).</p> <p>↓</p> <p>- CH LEVEL + ② Adjusts output level.</p> <p><b>Note</b> When the SURROUND mode is ON and the center mode is on PHANTOM, you cannot select the center channel. When the 3 STEREO mode is ON, you cannot select the surround channel.</p>
	<p><b>To turn the DOLBY PRO LOGIC OFF and ON</b></p>	<p>OFF/ON</p>

To listen to radio broadcasts

<p>Facing toward the receiver</p>	<p><b>To switch the remote control transmitter to tuner operation mode</b></p> <p>TUNER </p> <p>Be sure to press this button before operating the receiver.</p>
	<p><b>To select the desired channel sequentially (Preset tuning)</b></p> <p> CH </p>
	<p><b>To select the desired channel directly (Preset tuning)</b></p> <p> (Example: Channel 1) (Example: Channel 10) within 10 seconds</p>
<p><b>To select radio stations by frequency (Direct tuning)</b></p> <p>First select between FM and AM with the BAND button on the receiver.</p> <p> →  (Example: 107.9MHz) within 10 seconds</p>	




To listen to tapes

Before use, turn on the power of each unit to be used.

<p>Facing toward the cassette deck</p>	<p><b>To switch the remote control transmitter to cassette deck operation mode</b></p> <p>TAPE MONITOR </p> <p>Be sure to press this button before operating the cassette deck.</p>
	<p><b>To select DECK 1 or DECK 2</b></p> <p></p> <p>The remote control indicator of the cassette deck will change each time the button is pressed.</p> <p>DECK 1 ↔ DECK 2</p>
	<p><b>To start playback</b></p> <p> </p> <p>(Reverse-side) (Forward-side)</p>
	<p><b>To fast-forward or rewind the tape</b></p> <p>While the tape is stopped</p> <p> </p>
	<p><b>To stop playback</b></p> <p></p>


## To listen to compact discs

  Before use, turn on the power of each unit to be used.

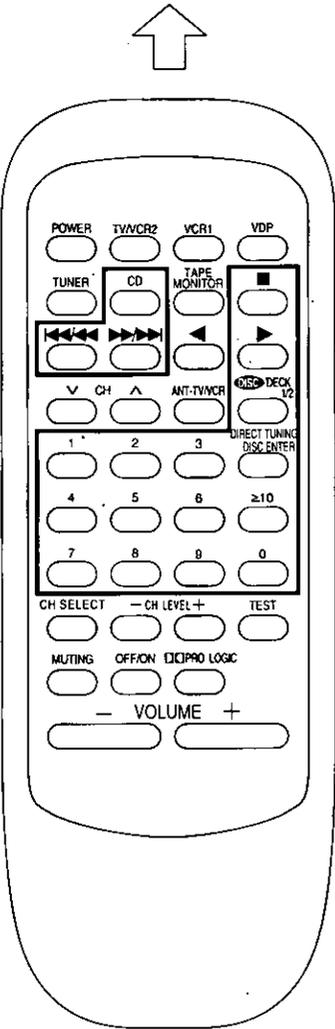
<p>Facing toward the CD changer</p> 	<p><b>To switch the remote control transmitter to CD changer operation mode</b></p>	<p> Be sure to press this button before operating the CD changer.</p>
	<p><b>To start play</b></p>	<p></p>
	<p><b>To start play from the desired disc</b></p>	<p></p> <p>Select the disc number. If you select "0", the changer will switch to the single disc play mode.</p> <p>(When selecting discs, the ≥10 button does not respond to touch.)</p> <p><b>For your reference</b></p> <p> If you press this button instead of the ► button shown in the above procedure, the CD changer, will stop and display the disc number. To start the disc, press ►.</p>
	<p><b>To start play from the desired track</b></p>	<p></p> <p>(Example: Track 1) (Example: Track 10)</p>
	<p><b>To skip a track</b></p>	<p> </p> <p>(Backward) (Forward)</p>
	<p><b>To stop play</b></p>	<p></p>

**To watch TV broadcasts**


The below procedures are examples are shown for when a TV is connected to the "TV/VCR 2" terminals, and VCR is connected to the "VCR 1" terminals.

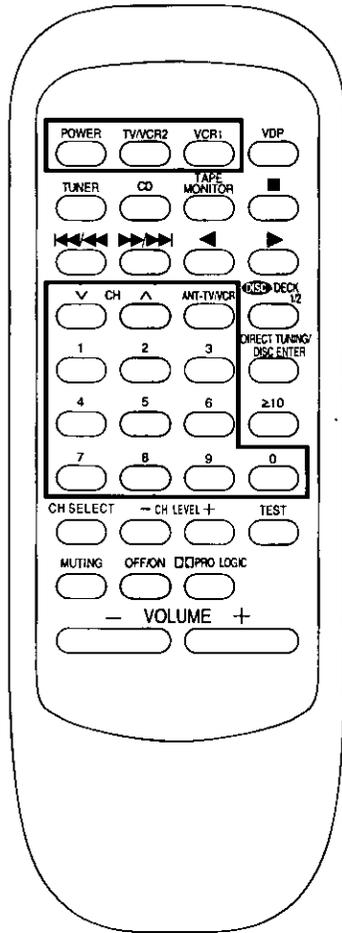


**To watch TV broadcasts with just a TV**

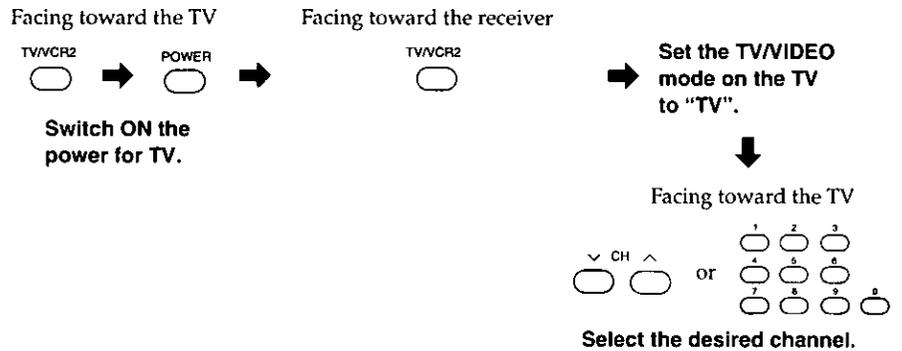

**To watch TV broadcasts with a VCR tuner**

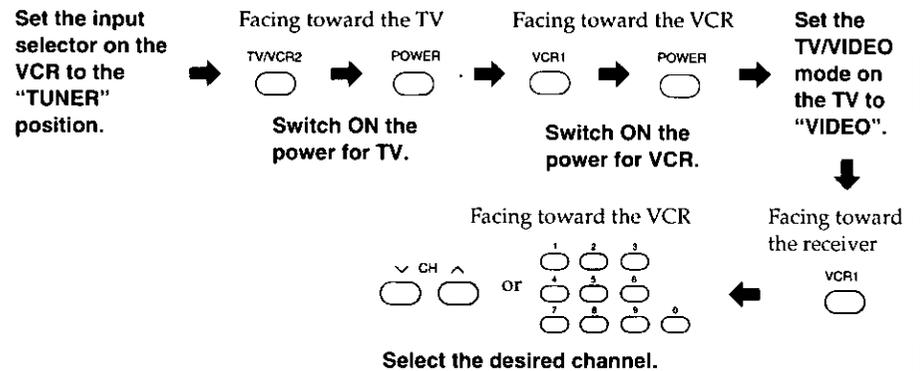

**To switch OFF the power for TV**

 

**To switch OFF the power for VCR**



**How to use the antenna input selection button**



Each time the button is pressed, the antenna input at the VCR changes from "TV" to "VCR" and vice versa.

## To watch video tapes


The below procedures are examples shown for when a TV is connected to the "TV/VCR 2" terminals, and VCR is connected to the "VCR 1" terminals.

	<p>Facing toward the TV</p> <p>TV/VCR2 → POWER</p> <p>Switch ON the power for TV.</p>	<p>Facing toward the VCR</p> <p>VCR1 → POWER</p> <p>Switch ON the power for VCR.</p>	<p>Set the TV/VIDEO mode on the TV to "VIDEO".</p>	<p>Facing toward the receiver</p> <p>VCR1</p> <p>↓</p> <p>Facing toward the VCR</p> <p>▶ Playback will begin.</p>
	<p>To fast-forward or rewind the video tape</p>	<p>In the stop mode</p> <p>VCR1 → ◀◀◀ ▶▶▶</p>		
	<p>To stop playback</p>	<p>VCR1 → ■</p>		
	<p>To switch OFF the power for TV</p>	<p>TV/VCR2 → POWER</p>		
	<p>To switch OFF the power for VCR</p>	<p>VCR1 → POWER</p>		

## To watch laser discs

The below procedures are examples for when a laser disc player is connected to the "TV/VCR 2" terminals.

	<p>Facing toward the TV</p> <p>TV/VCR2 → POWER</p> <p>Switch ON the power for TV.</p>	<p>Facing toward the laser disc player</p> <p>VDP → POWER</p> <p>Switch ON the power for laser disc player.</p>	<p>Set the TV/VIDEO mode on the TV to "VIDEO".</p>	<p>Facing toward the receiver</p> <p>TV/VCR2</p> <p>↓</p> <p>Facing toward the laser disc player</p> <p>▶ Play will begin. ◀ VDP</p>
	<p>To search for the desired position</p>	<p>In the play mode</p> <p>VDP → ◀◀◀ ▶▶▶</p>		
	<p>To stop play</p>	<p>VDP → ■</p>		
	<p>To switch OFF the power for TV</p>	<p>TV/VCR2 → POWER</p>		
	<p>To switch OFF the power for laser disc player</p>	<p>VDP → POWER</p>		

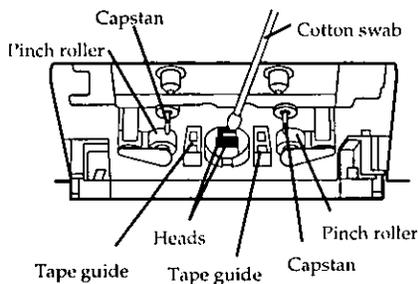**A**

## Maintenance

### Head care (Only for cassette deck)

**A**

To assure good sound quality for recording and playback, be sure to clean the heads after approximately every 10 hours of use.

1) Press OPEN to open the cassette holder.

2) **Switch off the power of the cassette deck.**

3) Clean the heads, pinch roller, capstan shaft and the tape guide with a cotton swab (or with a soft, lint-free cloth) slightly moistened with isopropyl alcohol.

Do not use any solution other than alcohol for head cleaning.

### Maintenance of external surfaces

To clean this unit, use a soft, dry cloth.

For stubborn dirt, soak a soft piece of cloth in soap and water, wring and wipe. Blot up any wet residue with a dry cloth.

- Do not use alcohol or thinner.
- Before using chemically treated cloth, read the instructions provided with the product carefully.

### Listening caution



Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

We recommend you to avoid prolonged exposure to excessive noise.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing.

Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

**Receiver SA-G68**

■ **AMPLIFIER SECTION**

**Rated minimum sine wave RMS power output**  
**40 Hz–20 kHz both channels driven**  
**0.9% total harmonic distortion**  
 70 W per channel (8 Ω)

**1 kHz continuous power output both channels driven**  
 0.9% total harmonic distortion 73 W per channel (8 Ω)

**Total harmonic distortion**  
 rated power at 40 Hz–20 kHz 0.9% (8 Ω)  
 half power at 1 kHz 0.07% (8 Ω)

**Power output at the Dolby Pro Logic operation**  
 0.9% at 1 kHz,  
 Front 2×70 W (8 Ω)  
 Center 70 W (8 Ω)  
 Surround 70 W (8 Ω)

**Low frequency damping factor** 30 (8 Ω)

**Load impedance**  
 Front 8 Ω  
 Center 8 Ω  
 Surround 4–8 Ω

**Frequency response**  
**PHONO** RIAA standard curve ±0.8 dB  
**CD, TAPE MONITOR, TV/VCR 2, VCR 1** 10 Hz–60 kHz, ±3 dB

**Input sensitivity**  
**PHONO** 0.4 mV (3 mV, IHF' 66)  
**CD, TAPE MONITOR, TV/VCR 2, VCR 1** 27 mV (200 mV, IHF' 66)

**S/N (IHF A)**  
**PHONO** 70 dB (78 dB, IHF' 66)  
**CD, TAPE MONITOR, TV/VCR 2, VCR 1** 75 dB (83 dB, IHF' 66)

**Input impedance**  
**PHONO** 47 kΩ  
**CD, TAPE MONITOR, TV/VCR 2, VCR 1** 22 kΩ

**Tone controls**  
**BASS** 50 Hz, +10 to –10 dB  
**TREBLE** 20 kHz, +10 to –10 dB

**Subwoofer frequency response** 7–100 Hz, ±3 dB

■ **FM TUNER SECTION**

**Frequency range** 87.9–107.9 MHz  
**Sensitivity** 11.2 dBf (2µV, IHF' 58)  
**50 dB quieting sensitivity**  
**MONO** 18.3 dBf (4.5 µV, IHF' 58)  
**STEREO** 38.3 dBf (45 µV, IHF' 58)

**Total harmonic distortion**  
**MONO** 0.2%  
**STEREO** 0.3%

**S/N**  
**MONO** 73 dB  
**STEREO** 67 dB

**Frequency response** 20 Hz–15 kHz, +1 dB, –2 dB  
**Alternate channel selectivity** 65 dB  
**Capture ratio** 1.5 dB  
**Image rejection at 98 MHz** 40 dB  
**Spurious response rejection at 98 MHz** 75 dB  
**AM suppression** 50 dB

**Stereo separation**  
 1 kHz 40 dB  
 10 kHz 30 dB

**Antenna terminal** 75 Ω (unbalanced)

■ **AM TUNER SECTION**

**Frequency range** 530–1710 kHz  
**Sensitivity** 20 µV, 330 µV/m  
**Selectivity** 55 dB  
**IF rejection at 1000 kHz** 50 dB

■ **VIDEO SECTION**

**Output voltage at 1 V input (unbalanced)** 1±0.1 Vp-p  
**Maximum input voltage** 1.5 Vp-p  
**Input/output impedance** 75 Ω

■ **GENERAL**

**Power supply** AC 120 V, 60 Hz  
**Power consumption** 175 W  
 (In standby condition: 2W)  
**Dimensions (W×H×D)** 430×136×309 mm  
 (16-15/16"×5-11/32"×12-5/32")  
**Weight** 6.4 kg (14.2 lb.)

**Notes:**

- Specifications are subject to change without notice. Weight and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.

**Cassette deck RS-TR180**

■ **CASSETTE DECK SECTION**

**Deck system** Stereo cassette deck  
**Track system** 4 track, 2 channel  
**Recording system** AC bias  
**Bias frequency** 80 kHz (approx.)  
**Erasing system** AC erase

**Heads**  
**DECK 1** Playback head (Permalloy)×1  
**DECK 2** Recording/Playback head (Permalloy)×1  
 Erasing head (Double-gap ferrite)×1

**Motors**  
**DECK 1** Capstan/Reel table drive (DC servo motor)×1  
**DECK 2** Capstan/Reel table drive (DC servo motor)×1

**Tape speed** 4.8 cm/s (1-7/8 ips)  
**Wow and flutter** 0.18% (WRMS)

**Fast forward and rewind times**  
 Approx. 120 seconds with C-60 cassette tape

**Frequency response (Dolby NR off)**  
**TYPE I (NORMAL)** 40 Hz–14 kHz, ±3 dB  
 20 Hz–17 kHz  
**TYPE II (HIGH POSITION)** 40 Hz–14 kHz, ±3 dB  
 20 Hz–17 kHz  
**TYPE IV (METAL)** 40 Hz–15 kHz, ±3 dB  
 20 Hz–18 kHz

**S/N (signal level=max recording level, HIGH POSITION type tape)**  
**NR off** 54 dB (A weighted)  
**Dolby B NR on** 64 dB (A weighted)

**Input sensitivity and impedance**  
**REC (IN)** 320 mV/47 kΩ

**Output voltage and impedance**  
**PLAY (OUT)** 320 mV/500 Ω

■ **GENERAL**

**Power supply** AC 120 V, 60 Hz  
**Power consumption** 18 W  
**Dimensions (W×H×D)** 430×131×286 mm  
 (16-15/16"×5-5/32"×11-1/4")  
**Weight** 3.8 kg (8.5 lb.)

**Note:**

Specifications are subject to change without notice. Weight and dimensions are approximate.

### Graphic equalizer SH-GE50

#### ■ EQUALIZER SECTION

Frequency response (center position)	5 Hz-100 kHz, -3 dB
Maximum output voltage	6 V (1 kHz)
Output voltage	1 V
Total harmonic distortion	0.007% (20 Hz-20 kHz) 0.005% (1 kHz)
Input sensitivity	1V
S/N	110 dB (IHF 'A)
Maximum input voltage	6 V
Input impedance	33 kΩ
Gain	0±1 dB
Band level controls	+12 to -12 dB (7 continuously variable elements per channel)
Center frequencies	63 Hz, 160 Hz, 400 Hz, 1 kHz, 2.5 kHz, 6.3 kHz, 16 kHz

#### ■ GENERAL

Power supply	AC 120 V, 60 Hz
Power consumption	8.5 W
Dimensions(W×H×D)	430×75×192.5 mm (16-15/16"×2-15/16"×7-19/32")
Weight	1.8 kg (3.95 lb.)

#### Notes:

- Specifications are subject to change without notice. Weight and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.

### CD changer SL-MC59

#### ■ AUDIO

No. of channels	2 (left and right, stereo)
Frequency response	2-20,000 Hz, ±1 dB
Output voltage	2 V (at 0 dB)
Dynamic range	92 dB
S/N	100 dB
Total harmonic distortion	0.007% (1 kHz, 0 dB)
Wow and flutter	Below measurable limit
DA converter	MASH (1 bit)
Output impedance	Approx. 1 kΩ
Load impedance	More than 10 kΩ

#### ■ PICKUP

Wavelength	780 nm
------------	--------

#### ■ GENERAL

Power supply	AC 120 V, 60 Hz
Power consumption	11 W
Dimensions (W×H×D)	430×170×387 mm (16-15/16"×6-11/16"×15-1/4")
Weight	6.3 kg (13.9 lb.)

**MASH is a trademark of NTT.**

#### Note:

Specifications are subject to change without notice. Weight and dimensions are approximate.

### Front speakers SB-A28

Type	3 way 3 speaker bass-reflex
Speaker(s)	
Woofer	30 cm (12") cone type
Midrange	10 cm (4") cone type
Tweeter	6.5 cm (2-9/16") cone type
Impedance	8 Ω
Input power	240 W (MUSIC) 120 W (DIN)
Output sound pressure level	89 dB/W (1.0 m)
Crossover frequency	3 kHz, 6 kHz
Frequency response	35 Hz-35 kHz (-16 dB) 43 Hz-31 kHz (-10 dB)
Dimensions (W×H×D)	380×900×285 mm (14-31/32"×35-7/16"×11-7/32")
Weight	12 kg (26.4 lb.)

### Surround speakers SB-S938

Type	1 way 1 speaker bass-reflex
Speaker(s)	
Fullrange	8 cm (3-5/32") cone type
Impedance	4 Ω
Input power	110 W (MUSIC) 55 W (DIN)
Output sound pressure level	83 dB/W (1.0 m)
Frequency response	130 Hz-20 kHz (-16 dB) 150 Hz-18 kHz (-10 dB)
Dimensions (W×H×D)	160×205×100 mm (6-5/16"×8-1/16"×3-15/16")
Weight	1.2 kg (2.7 lb.)

### Center speaker SB-C938

Type	1 way 2 speaker bass-reflex
Speaker(s)	
Fullrange	8 cm (3-5/32") cone type×2
Impedance	8 Ω
Input power	220 W (MUSIC) 110 W (DIN)
Output sound pressure level	87 dB/W (1.0 m)
Frequency response	130 Hz-20 kHz (-16 dB) 170 Hz-18 kHz (-10 dB)
Dimensions (W×H×D)	320×130×100 mm (12-5/8"×5-1/8"×3-15/16")
Weight	1.7 kg (3.8 lb.)

#### Note:

Specifications are subject to change without notice. Weight and dimensions are approximate.

## Troubleshooting guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of authorized service centers (enclosed with this unit) to locate a conven-

nient service center, or consult your dealer for instructions.

(In U.S.A. consult PASC Authorized Servicenters for detailed instructions or call 1-800-211-7262 for the address of an authorized factory servicenter.)

Reference pages indicated in black circle. (For example: 17)

Problem	Probable cause(s)	Suggested remedy
<b>Problems noted at all times</b>		
<b>No sound is heard when the power is switched ON.</b>	The power cord plug is not completely inserted.	• Confirm that the power cord plug is connected completely.
	Connections are incomplete or incorrect to the speaker systems, etc.	• Check that all connection wires are correctly connected.
	The incorrect input selector of the receiver has been pressed.	• Check that the correct selector is pressed.
	The speaker selector is set incorrectly.	• Set it to the correct position. 17 20 30
	The input selector of the graphic equalizer is not set to the "SOURCE" position.	• Set to the "SOURCE" position. 4
<b>When listening to stereo sound, the sound lacks depth (i.e. thin bass, tinny sound).</b>	One of the speakers is connected out of phase [(+) → (-), (-) → (+)].	• Reconnect the speakers maintaining proper polarity [i.e., (+) → (+), (-) → (-)].
<b>When listening to stereo sound, the left and right sounds are reversed.</b>	The left and right speaker connections, or source connections, are reversed.	• Check all connections and correct them if necessary.
<b>A low-pitched noise ("hum" or "buzz") is heard.</b>	The power cord or a fluorescent light, etc., is near the connection wires.	• Try separating this unit as far as possible from the electric appliance.
<b>Sound is not heard from one of the speaker systems.</b>	The speaker wires are disconnected.	• Check and correct the connections of the speaker wires.
	The balance control is set too far to one side.	• Set so that sounds are heard at the center, between the speaker systems. 30
<b>Sound stops during a performance, or no sound is heard when the power is switched ON.</b>	The volume level is excessively increased.	• Decrease the volume level.
	The protection circuitry has functioned because the positive and negative speaker connection wires are "shorted" or speaker systems with an impedance less than the indicated rated impedance of the receiver are used.	• Switch OFF the power, and, after determining and correcting the cause, switch ON the power once again. • Use a speaker system of the proper impedance rating.

### While listening to radio broadcasts

<b>A strange hissing noise is produced continuously or intermittently.</b>	Caused by the "discharge phenomenon" and the "oscillation phenomenon" of electric appliances (such as fluorescent lights, TV, small series-type motors, rectification equipment, etc.).	• Try placing this unit farther away from such equipment. • Install noise-prevention equipment on this unit or on the electric appliance.
----------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------

### While listening to AM broadcasts

<b>An unusual "beat" sound is heard.</b>	Unit is being used at the same time as the television set.	• Switch OFF the television set, or use this unit farther away from it.
<b>A low-pitched "hum" sound is heard when the broadcast is tuned.</b>	The AM loop antenna connection wires are too close to the power cord.	• Place the antenna connection wires and the power cord farther apart.
	The power supply frequency from the power cord is modulated and heard from the speakers.	• Install a special outdoor antenna. 9

Reference pages indicated in black circles. (For example: 9)

Problem	Probable cause(s)	Suggested remedy
<b>While listening to FM broadcasts</b>		
An unusual hissing noise is heard when listening to the broadcast in stereo, but not heard when listening monaurally.	Due to the differences between a monaural and a stereo signal, a higher level of signal strength is required for proper stereo reception. If the signal level is low, a hissing noise may be produced on the stereo channel.	<ul style="list-style-type: none"> <li>• Try reducing the treble sound by using the treble control of the receiver.</li> <li>• In this case, set for monaural reception to reduce the hiss. Note, however, that the broadcast will not be heard as stereo.</li> </ul>
Noise is excessive in both stereo and monaural broadcasts.	Poor location and/or direction of the antenna. Transmitting station is too far away.	<ul style="list-style-type: none"> <li>• Try changing the location, height and/or direction of the antenna.</li> <li>• If an indoor antenna is being used, change to an outdoor antenna. 9</li> <li>• Try using an antenna with more elements.</li> </ul>
The FM stereo indicator or the quartz lock indicator flickers, without completely illuminating.	Poor location and/or direction of the antenna. Transmitting station is too far away.	<ul style="list-style-type: none"> <li>• Try changing the location, height and/or direction of the antenna.</li> <li>• If an indoor antenna is being used, change to an outdoor antenna. 9</li> <li>• Try using an antenna with more elements.</li> </ul>
Excessive distortion in the sound of stereo broadcasts.	Nearby building or mountain. [Multipath distortion is being caused by the mutual interference of broadcast signals received directly from the transmitting station (direct waves) and signals being reflected from nearby buildings or mountains (reflected waves).]	<ul style="list-style-type: none"> <li>• Try using an antenna with more elements.</li> </ul>
Sound is distorted, "popping" noise is heard, and/or the volume level becomes low.	Broadcast signals are being disturbed by nearby automobile traffic or airplanes.	<ul style="list-style-type: none"> <li>• Relocate the antenna and the connection wires to a place farther away from where automobiles pass.</li> </ul>

<b>While listening to compact discs</b>		
Changer will not play.	A disc(s) or other foreign object(s) has fallen inside the changer.	<ul style="list-style-type: none"> <li>• Open the front panel and remove the object.</li> </ul>
	Moisture has collected in the changer.	<ul style="list-style-type: none"> <li>• Allow the changer to dry out for about one hour before using it.</li> </ul>
The disc in the changer does not play.	The disc label is facing left.	<ul style="list-style-type: none"> <li>• Set the disc with the label facing right. 15</li> </ul>
	The disc is dirty.	<ul style="list-style-type: none"> <li>• Wipe the disc with a soft cloth. 14</li> </ul>
	The disc is scratched.	<ul style="list-style-type: none"> <li>• Replace the disc with a new one.</li> </ul>
	The disc is warped.	
Play stops before changing to the next disc.	The front panel is open.	<ul style="list-style-type: none"> <li>• Close the panel.</li> </ul>
A certain music passage can't be played correctly.	The disc is dirty.	<ul style="list-style-type: none"> <li>• Wipe the disc with a soft cloth. 14</li> </ul>
	The disc is scratched.	<ul style="list-style-type: none"> <li>• Replace the disc with a new one.</li> </ul>
There is noise from the tuner or disturbance on the TV screen.	Caused by high-frequency signals from this changer.	<ul style="list-style-type: none"> <li>• Use the changer further away from the tuner or TV.</li> <li>• If the tuner or TV's antenna is the indoor type, use an outdoor one.</li> </ul>
The error message "NO PGM" appears on the display, when program play is started.	Play was started without a track being programmed.	<ul style="list-style-type: none"> <li>• Program a track. 25</li> </ul>
The error message "ERROR" appears on the display, and the changer stops operating.	The mechanism of the changer has been improperly adjusted.	<ul style="list-style-type: none"> <li>• Turn the unit off and then back on again.</li> </ul>
The error message "F-26" appears on the display and the changer stops operating.	The servo LSI has malfunctioned.	<ul style="list-style-type: none"> <li>• Unplug the changer from its outlet, replug it in and turn the changer ON again.</li> </ul>
The error message "TAKE OUT" appears on the display and the changer stops operating.	A disc has been put in the slot of the disc in play.	<ul style="list-style-type: none"> <li>• Remove the disc whose number is displayed and press the stop button.</li> </ul>
	Because of light or noise, the changer has detected a disc in the slot of the disc being played, even though it is empty.	<ul style="list-style-type: none"> <li>• Check whether there is a disc in the displayed slot. With the front panel close, hold down ■ for at least 4 seconds.</li> </ul>

Reference pages indicated in black circles. (For example: 30)

Problem	Probable cause(s)	Suggested remedy
<b>While using the cassette deck</b>		
Tape moves but no sound is heard.	The input selector of the receiver is not set to the "TAPE MONITOR" position.	• Set to the "TAPE MONITOR" position. 30
Previously recorded sound has not been erased.	Erase head is dirty.	• Clean the head. 45
Sound output is hoarse or unsteady.	Heads are dirty.	• Clean the heads. 45
	Tape is damaged.	• Try operation with a new tape; if there is no problem with the new tape, discard the damaged tape.
Poor sound quality (especially in the high treble and low bass ranges).	The Dolby noise-reduction function is off.	• Press DOLBY NR button. 30
Sound is low, poor tone, intermittent sound, noise.	Heads, capstan and/or pinch roller are dirty.	• Clean the heads, capstan and/or pinch roller. 45
	Tape is damaged.	• Try operation with a new tape.
There is a lot of noise, and the treble is drowned out.	The heads have been magnetized.	• Demagnetize the heads with a commercially sold magnetic eraser.
Recording is not possible.	One of the tape-to-tape recording-speed indicators is illuminated.	Switch off whichever tape-to-tape recording-speed indicator is illuminated (by pressing the SPEED button). 25
Recorded sound is TV noise.	This unit is placed near a TV.	• Try placing this unit farther away from a TV.

<b>While using the digital sound processor or the graphic equalizer</b>		
Equalized sound can't be heard.	The power switch is switched "OFF".	• Switch "ON" the power.

<b>While using the remote control transmitter</b>		
Remote control transmitter does not function.	Batteries are incorrectly installed.	• Insert the batteries so that the positive (+) and negative (-) polarities are correct. 12
	The remote control transmitter batteries are drained.	• Replace them with new batteries.
	There is an obstruction between the remote control transmitter and the system components.	• Remove the obstruction.
	The remote control transmitter is not correctly facing the system components.	• Face the remote control transmitter correctly toward the system components. 12

**Product service**


Do not attempt to remove the cover(s) or repair the unit yourself.  
Refer servicing to qualified personnel only.

**Product information**

For product service, product information or assistance in product operation, refer to the servicenter directory.

**When getting service**

Before bringing in your changer for service, be sure to remove all discs first.  
If the disc in play doesn't return to its slot when you press ■, hold the button down for about 4 seconds. The disc should return to the slot.

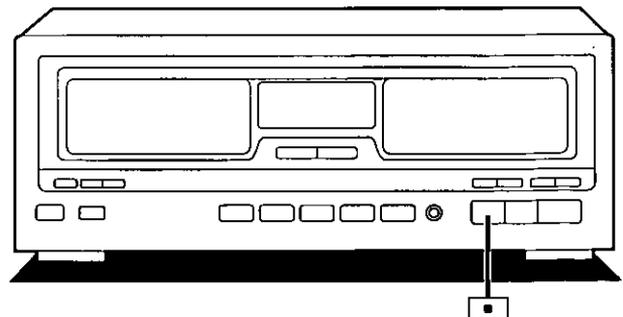

It should be easier for you to remember what disc is in what slot and the group(s) it's in if you record everything in this table.

No.	GROUP					DISC NAME
0	SINGLE					
1	A	B	C	D	E	
2	A	B	C	D	E	
3	A	B	C	D	E	
4	A	B	C	D	E	
5	A	B	C	D	E	
6	A	B	C	D	E	
7	A	B	C	D	E	
8	A	B	C	D	E	
9	A	B	C	D	E	
10	A	B	C	D	E	
11	A	B	C	D	E	
12	A	B	C	D	E	
13	A	B	C	D	E	
14	A	B	C	D	E	
15	A	B	C	D	E	
16	A	B	C	D	E	
17	A	B	C	D	E	
18	A	B	C	D	E	
19	A	B	C	D	E	
20	A	B	C	D	E	
21	A	B	C	D	E	
22	A	B	C	D	E	
23	A	B	C	D	E	
24	A	B	C	D	E	
25	A	B	C	D	E	
26	A	B	C	D	E	
27	A	B	C	D	E	
28	A	B	C	D	E	
29	A	B	C	D	E	
30	A	B	C	D	E	

No.	GROUP					DISC NAME
31	A	B	C	D	E	
32	A	B	C	D	E	
33	A	B	C	D	E	
34	A	B	C	D	E	
35	A	B	C	D	E	
36	A	B	C	D	E	
37	A	B	C	D	E	
38	A	B	C	D	E	
39	A	B	C	D	E	
40	A	B	C	D	E	
41	A	B	C	D	E	
42	A	B	C	D	E	
43	A	B	C	D	E	
44	A	B	C	D	E	
45	A	B	C	D	E	
46	A	B	C	D	E	
47	A	B	C	D	E	
48	A	B	C	D	E	
49	A	B	C	D	E	
50	A	B	C	D	E	
51	A	B	C	D	E	
52	A	B	C	D	E	
53	A	B	C	D	E	
54	A	B	C	D	E	
55	A	B	C	D	E	
56	A	B	C	D	E	
57	A	B	C	D	E	
58	A	B	C	D	E	
59	A	B	C	D	E	
60	A	B	C	D	E	

Write your group names in here.

GROUP	GROUP NAME
A	
B	
C	
D	
E	

# MEMO

---

**Panasonic Consumer Electronics  
Company, Division of Matsushita  
Electric Corporation of America**

One Panasonic Way Secaucus,  
New Jersey 07094

**Panasonic Sales Company,  
Division of Matsushita Electric of  
Puerto Rico, Inc. ("PSC")**

Ave. 65 de Infantería. Km. 9.5  
San Gabriel Industrial Park, Carolina,  
Puerto Rico 00985



RQT4449-P

H1197G0