

SAMSUNG

SyncMaster 550b
SyncMaster 750s
SyncMaster 750b
Color Monitor



**Owner's
Instructions**

Safety Instructions

- 1** Before connecting the AC power cord to an outlet, make sure the voltage designation on your monitor corresponds to the local electrical supply.
- 2** Never insert anything metallic into the monitor openings. Doing so may create the danger of electric shock.
- 3** To avoid electric shock, never touch the inside of the monitor. Only a qualified technician should open the monitor's case.
- 4** Never use your monitor if the power cord has been damaged. Do not allow anything to rest on the power cord, and keep the cord away from areas where people can trip over it.
- 5** Be sure to hold the plug, not the cord, when disconnecting the monitor from an electric socket.
- 6** Openings in the monitor cabinet are provided for ventilation. To prevent overheating, these openings should not be blocked or covered. Also, avoid using the monitor on a bed, sofa, rug, or other soft surface. Doing so may block the ventilation openings in the bottom of the cabinet. If you put the monitor in a bookcase or some other enclosed space, be sure to provide adequate ventilation.
- 7** Put your monitor in a location with low humidity and a minimum of dust.
- 8** Do not expose the monitor to rain or use it near water (in kitchens, near swimming pools, etc.). If the monitor accidentally gets wet, unplug it and contact an authorized dealer immediately. You can clean the monitor with a damp cloth when necessary, but be sure to unplug the monitor first.
- 9** Place the monitor on a solid surface and treat it carefully. The screen is made of glass and can be damaged if dropped, hit or scratched.
- 10** Locate your monitor near an easily accessible AC outlet.
- 11** If your monitor does not operate normally – in particular, if there are any unusual sounds or smells coming from it – unplug it immediately and contact an authorized dealer or service center.
- 12** High temperatures can cause problems. Don't use your monitor in direct sunlight, and keep it away from heaters, stoves, fireplaces, and other sources of heat.
- 13** Unplug the monitor when it is going to be left unused for an extended period of time.
- 14** Unplug your monitor from the AC outlet before any service.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Table of Contents


Your New Monitor	2
Connecting Your Monitor	2
Front Panel	3
Direct Access Buttons	3
Operation	4
On-screen Menu System	4
Monitor function control	5
Brightness	5
Contrast	5
Horizontal Position	5
Vertical Position	5
Horizontal Size	5
Vertical Size	5
Pincushion	6
Geometry	6
Trapezoid	6
Parallelogram	6
Rotation	6
Pinbalance	6
V-Linearity	6
Language	7
Advanced	7
H- Moiré	7
V- Moiré	7
Video Input Level	7
Color Temperature	7
Halftone	7
Zoom	8
Degauss	8
Recall	8
Display Timing	8
OSD Lock/Unlock	8
Troubleshooting	9
Power Saver	10
Display Modes	10
Specifications	11
Index	12

Your New Monitor

 Please make sure the following items are included with your monitor. If any items are missing, contact your dealer.

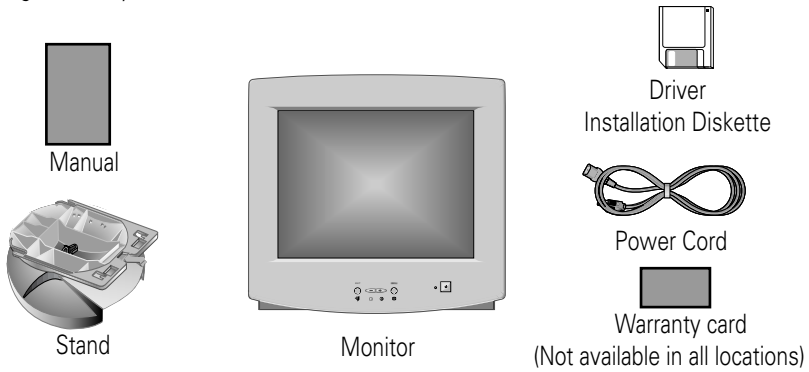


Connecting Your Monitor

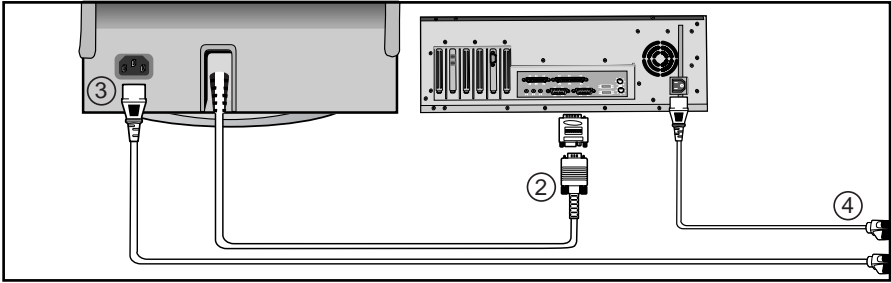 

- 1** Turn off your computer and unplug the power cord.
- 2** **Signal cable**
Connect the end of the signal cable to your computer's video port (Video board, video card, or graphics card). If you are using a Macintosh computer, connect the cable to a Macintosh adapter, and set the pins on your adapter (Adapter not included). A PC-compatible computer does not need an adapter.
- 3** **Power port**
Connect the power cord for your monitor to the power port on the back of the monitor.
- 4** **Power cords**
Plug the power cord for the monitor and the power cord for your computer into a nearby outlet.
- 5** Turn on your computer and monitor. If your monitor displays an image, installation is complete.
- 6** **Install monitor driver**
 - Insert the provided diskette into the A drive.
 - Double click the "install.exe" file.

Your New Monitor

 Front Panel

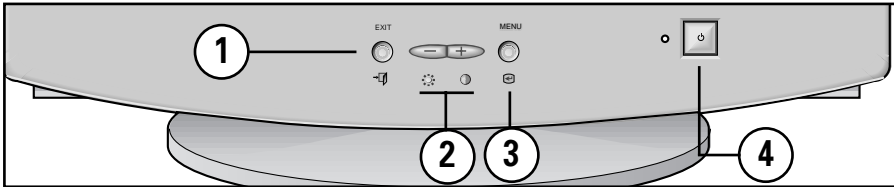

1 EXIT (→|) button

Closes the on-screen menu. It is also used to return to the previous menu when using the on-screen menu system.

2 The ◀ / ▶ (☀ / ●) buttons

These buttons allow you to select and adjust items using the on-screen menu. When adjusting an item using the on-screen menu, the ◀ button lowers the value of the selected function. The ▶ button raises the value of the selected function. These buttons are also direct access buttons for the Contrast and Brightness

feature controls. (See the section below on Direct Access Buttons.)

 
3 MENU (◀) button

Opens the on-screen menu. It is also used to select a highlighted function, open a sub-menu, or move between menus when using the on-screen menu system.

4 Power button ⏻

The power button turns the monitor on and off. The power indicator light glows green during normal operation, see page 10

Direct Access Buttons

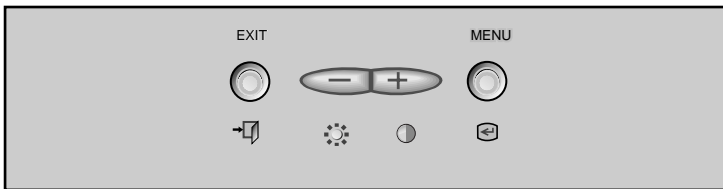











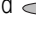


Most of the adjustments you make to your monitor will be accessed through the on-screen menu described in the next section. The Contrast and Brightness features can also be accessed directly from the front of your monitor.


- 1 With the menu off, press the ☀ or ● button on the front of your monitor. The ☀ button accesses the Brightness feature. The ● button accesses the Contrast feature.
- 2 Push the ▶ button to increase or the ◀ button to decrease the value of the selection.
- 3 Press the EXIT button →| twice to exit the on-screen menu.

Operation

On-screen Menu System

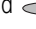Your monitor has an on-screen menu system, accessed by the buttons on the front of your monitor, that allows you to adjust characteristics of the screen image. Display changes are indicated by on-screen adjustment icons. Some functions have sub-menus.

 - 1** Push the menu button  to display the main menu. Function icons are arranged across the top of the on-screen menu.
- 2** Push the  or  button to move through the icons. The name of the function will appear below the rows of function icons.
- 3** To select a function or open a sub-menu, push the  button. The screen will display the options for adjustment. If there is a sub-menu, use the  or  button to highlight the feature you want to adjust, then push the  button to select it.
- 4** Use the  and  buttons to make adjustments.  increases values and  decreases values. On-screen calibration numbers show the effect of your adjustment. If you are in a sub-menu, use the EXIT button  to return to the previous menu.
- 5** Push the EXIT button  to exit and save your changes.

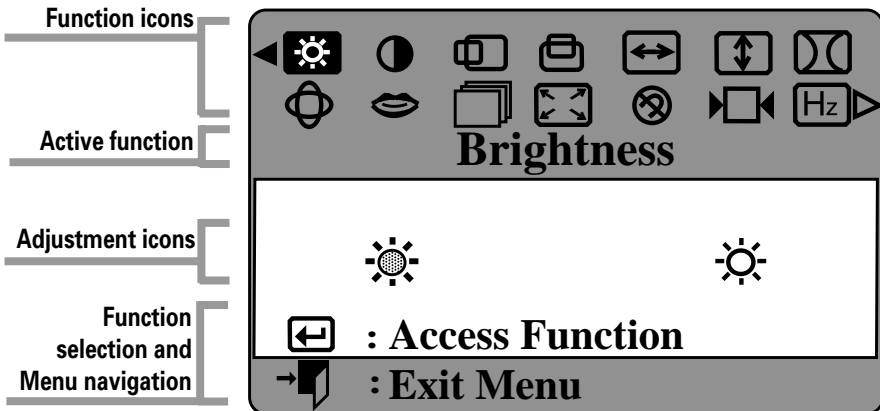

Operation

Icon Monitor Function Control



Brightness

Background brightness of screen.
– Decreases brightness
+ Increases brightness

Brightness



Contrast

Contrast of screen image.
– Decreases contrast
+ Increases contrast

Contrast



Horizontal Position

Horizontal screen position.
– Moves screen left
+ Moves screen right

H-Position



Vertical Position

Vertical screen position.
– Moves screen down
+ Moves screen up

V-Position



Horizontal Size

Horizontal screen size.
– Decreases size
+ Increases size

H-Size



Vertical Size

Vertical screen size.
– Decreases size
+ Increases size

V-Size



 
Operation

Icon Monitor Function Control



Pincushion

- Straightens screen vertical edges.
- Curves image inward
- + Curves image outward



Geometry



Trapezoid

- Width of top and bottom of screen.
- Widens bottom of screen
- + Widens top of screen



Parallelogram

- Skews screen image left
- + Skews screen image right



Rotation

- Rotates entire screen left
- + Rotates entire screen right





Pinbalance

- Curves vertical lines to left
- + Curves vertical lines to right



V-Linearity

- Compresses image at top of screen
- + Compresses image at bottom of screen

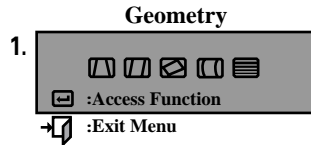  

Operation

 
Icon Monitor Function Control



Language

– and + scroll through on-screen language options.
(English/ Deutsch/ Francais/ Italiano
Português/ Español/ Svenska/ Russian/
Korean)

Language



Advanced



H- Moiré

Corrects for on-screen moiré pattern.
– and + clear Horizontal Moiré



V- Moiré

Corrects for on-screen moiré pattern.
– and + clear Vertical Moiré



Video Input Level

Selects the video signal level
– Select 0.7 V
+ Select 1.0 V



Color Temperature

– 9300k more blue
+ 6500k more red



Halftone

– Off
+ On

Advanced

1.



2.

H-Moiré



Operation

Icon Monitor Function Control



Zoom

- Reduces view of display area
- + Enlarges view of display area

Zoom



Degauss

Removes color distortion caused by magnetic fields. Do not use more than once in 30 minutes.

Degauss



Recall

Returns monitor to original settings.

- No
- + Yes

Recall

 


Display Timing

Monitor display settings.


- Factory timing
- + User timing

Display Timing



OSD Lock/Unlock

Allows you to secure the current control settings so that they cannot be inadvertently changed. You can unlock the OSD controls at any time by using the same procedure.

- Push and hold the Menu () button for 10 seconds or more to Lock or to Unlock.

OSD Lock/Unlock



Troubleshooting

Before calling for service, check the information in this section to see if you can solve the problem yourself. If you do need assistance, please call the phone number on the warranty card, the phone number on the back cover of this manual, or contact your dealer.

There is no screen image

- Check to see that both the monitor and the computer are plugged in and turned on.

“No Connection, Check Signal Cable” appears

- Check the signal cable connection between the computer and the monitor.

“Sync. Out of Range” appears

- The input signal frequency is over or under the synchronization range of the monitor, see “Specifications” on page 11.

The screen image is too light or too dark

- Adjust the brightness or contrast settings, see page 5.

The screen image is too large or too small

- Adjust the size settings, see H-size and V-Size on page 5.
- Adjust the Zoom setting, see page 8.

The colors are distorted with dark or shadowed areas

- Activate the degauss feature, see page 8.
- Adjust the color temperature, see page 7.

The power indicator light is blinking green

- The monitor is using its power management system, see “PowerSaver” on page 10.

You need the monitor driver software

- Download the driver from the internet at <http://www.samsungelectronics.com/support/downloads/monitor/index.html>

PowerSaver

This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal operation when you move the computer's mouse or press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPMS compliant video card installed in your computer. Use a software utility installed on your computer to set up this feature.

State	Normal Operation	Power Saving function mode EPA/NUTEK		
		Standby mode	Suspend mode Position A1	Power-off Mode Position A2
Power Indicator	Green	Green, Blinking (0.5 sec. interval)	Green, Blinking (0.5 sec. interval)	Green, Blinking (1 sec. interval)
Power Consumption	550b: 85 W (Maximum) 70 W (Nominal) 750s/750b: 90 W (Maximum) 75 W (Nominal)	550b: 50 W (Nominal) 750s/750b: 55 W (Nominal)	Less than 15 W	Less than 3 W

NOTE: This monitor is EPA Energy Star® compliant and NUTEK compliant when used with a computer equipped with VESA DPMS functionality.

Display Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync. Polarity (H/V)
IBM, VGA2, 720 x 400	31.469	70.087	28.322	-/+
IBM, VGA3, 640 x 480	31.469	59.940	25.175	-/-
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 640 x 480	43.269	85.008	36.000	-/-
VESA, 800 x 600	46.875	75.000	49.500	+/+
VESA, 800 x 600	53.674	85.061	56.250	+/+
VESA, 1024 x 768	60.023	75.029	78.750	+/+
VESA, 1024 x 768	68.677	84.997	94.500	+/+

Specifications

Specifications	Models: SyncMaster 550b / 750s / 750b
Picture Tube	<ul style="list-style-type: none"> • 550b: 15" (38 cm) Full square type (35 cm Viewable) • 750s / 750b: 17" (43 cm) Full square type (40.6 cm Viewable) • 90° Deflection • Dot pitch: 550b / 750s: 0.24 mm (H) / 0.14 mm (V) 750b: 0.22 mm (H) / 0.13 mm (V) • Silica coated with anti-electronic properties (TCO: Multilayer coating) • Medium-short persistence phosphor
Synchronization	<ul style="list-style-type: none"> • Horizontal: 30 kHz to 70 kHz • Vertical: 50 Hz to 160 Hz
Display Color	• Unlimited
Maximum Resolution	• 1280 Dots • 1024 Lines
Active Display	<ul style="list-style-type: none"> • Horizontal: 550b: 10.5 ± 0.16 inch (267.0 ± 4 mm) 750s / 750b: 12.0 ± 0.16 inch (306.0 ± 4 mm) • Vertical: 550b: 7.9 ± 0.16 inch (200.5 ± 4 mm) 750s/750b: 9.1 ± 0.16 inch (230.5 ± 4 mm)
Input Signal, Terminated	<ul style="list-style-type: none"> • Analog: .7 Vpp positive at 75 ohms • Separate Sync.: TTL level, positive or negative
Maximum Pixel Clock	• 110 MHz
Power Supply	• AC 100-240 V ± 10%, 60 Hz / 50Hz ± 3Hz
Power Consumption	• 550b: 80 W maximum • 750s / 750b: 90 W maximum
Dimensions/Weight (WxDxH)	<ul style="list-style-type: none"> • Unit: 550b: 14.25 x 15.11 x 15.11 inch / 26.5 lbs. (362 x 384 x 384 mm / 12.0 kg) 750s/750b: 16.22 x 16.54 x 16.36 inch / 33.1 lbs. (412 x 420 x 415.5 mm / 15.0 kg) • Carton: 550b: 17.87 x 19.57 x 17.52 inch / 31.5 lbs. (454 x 497 x 445 mm / 14.3 kg) 750s/750b: 21.02 x 21.73 x 18.39 inch / 38.6 lbs. (534 x 552 x 467 mm / 17.5 kg)
Environmental Considerations	<ul style="list-style-type: none"> • Operating temperature: 32°F to 104°F (0°C to 40°C) Humidity: 10% to 80% • Storage temperature: -4°F to 113°F (-20°C to 45°C) Humidity: 5% to 95%

Design and specifications are subject to change without notice.

Index

A

Advanced, 7

B

Brightness, 3, 5

Button , 4

Buttons,  /  ( / ), 3

C

Color temperature, 7

Connecting your monitor, 2

Contrast, 3, 5

D

Degauss, 8

Direct access buttons, 3

Display modes, 8

Display timing, 10

Driver installation diskette, 2

F

Front panel, 3

G

Geometry, 6

H

Halftone, 7

H- Moiré, 7

Horizontal position, 5

Horizontal size, 5

L

Language, 7

M

Menu button, 3

Monitor function control, 5, 6, 7, 8

O

Operation, 5, 6, 7, 8

On-screen menu system, 4

OSD Lock/Unlock, 8

P

Parallelogram, 6

Pinbalance, 6

Pincushion, 6

Power button , 3

Power cords, 2

Power port, 2

PowerSaver, 10

R

Recall, 8

Rotation, 6

S

Specifications, 11

T

Trapezoid, 6

Troubleshooting, 9

V

Vertical position, 5

Vertical size, 5

Video input level, 7

V-linearity, 6

V- Moiré, 7

Y

Your new monitor, 3, 4

Z

Zoom, 8

Regulatory Information

FCC Information

User Instructions

The Federal Communications Commission Radio Frequency Interference Statement includes the following warning:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

User Information

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If necessary, consult your dealer or an experienced radio/television technician for additional suggestions. You may find the booklet called How to Identify and Resolve Radio/TV Interference Problems helpful. This booklet was prepared by the Federal Communications Commission. It is available from the U.S. Government Printing Office, Washington, DC 20402, Stock Number 004-000-00345-4.

Warning

User must use shielded signal interface cables to maintain FCC compliance for the product.

Declaration of conformity for products Marked with FCC Logo

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The party responsible for product compliance:

SAMSUNG ELECTRONICS CO., LTD

America QA Lab of Samsung

85 West Tasman Drive

San Jose, CA 95134 USA

Tel) 408-544-5124

Fax) 408-544-5191

Provided with this monitor is a detachable power supply cord with IEC320 style terminations. It may be suitable for connection to any UL Listed personal computer with similar configuration. Before making the connection, make sure the voltage rating of the computer convenience outlet is the same as the monitor and that the ampere rating of the computer convenience outlet is equal to or exceeds the monitor voltage rating.

For 120 Volt applications, use only UL Listed detachable power cord with NEMA configuration 5-15P type (parallel blades) plug cap. For 240 Volt applications use only UL Listed Detachable power supply cord with NEMA configuration 6-15P type (tandem blades) plug cap.

IC Compliance Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations of ICES-003.

Cet appareil Numérique de classe B respecte toutes les exigences du Règlement ICES-003 sur les équipements produisant des interférences au Canada.

MPR II Compliance

This monitor complies with SWEDAC(MPR II) recommendations for reduced electric and magnetic fields.

U.S.A. :

Samsung Electronics America (SEA)
 One Samsung Place
 Ledgewood, NJ 07852
 Tel. : 1-800-SAMSUNG (1-800-726-7864)

CANADA :

Samsung Electronics Canada Inc.
 7037 Financial Drive
 Mississauga, Ontario L5N 6R3
 Tel. : 1-800-SAMSUNG (1-800-726-7864)
 Fax. : (905) 542-1199

GERMANY :

Samsung Electronics GmbH Samsung-Haus
 Am Kronberger Hang 6/65824 Schwalbach/Ts.
 Tel. : 06196-66-1134
 Fax. : 06196-66-1133

AUSTRALIA :

Samsung Electronics Australia Pty Ltd.
 Unit G, 10-16 South Street,
 Rydalmere, N.S.W. 2116
 P.O. BOX 368
 Tel. : (02) 638-5200

ITALIA :

Samsung Electronics Italia SpA
 Via C. Donat Cattin,
 5-20063 Cernusco sul Naviglio (Mi)
 Tel. : 167-010740

PANAMA :

Servicios Samsung (Zona Libre), S.A.
 50 and 61 Streets Sta, Cecilia
 Bdl. Don Camilo, Panama City
 Tel. : (507) 264-0195 or 269-5571
 Fax : (507) 269-5568

MEXICO

Samsung Electronics Mexico S.A. de C.V.
 Saturno 44 Col. Nva. Industrial Vallejo
 Del. Gustavo A. Madero C.P. 07700
 Mexico D.F. Tel. 5747-5100
 RFC: SEM950215S98

ESPAÑA :

Samsung Electrónica Comercial Ibérica, S.A.
 Ciencias, 55-65 (Polígono Pedrosa) 08908
 Hospitalet de Llobregat (Barcelona)
 Tel. : (93) 261 67 00
 Fax. : (93) 261 67 50

UK :

Samsung Electronics (UK) Ltd.
 Samsung House, 225 Hook Rise South
 Surbiton, Surrey KT6 7LD
 Tel. : (0181) 391 0168
 Fax. : (0181) 397 9949
 <European Service Center & National Service>
 Stafford Park 12 Telford, Shropshire, TF3 3BJ
 Tel. : (01952) 292 262
 Fax. : (01952) 292 033

THAILAND :

Samsung Service Center
 729-729/1 JSP Tower Rachadapisek RD.,
 Bangpongpan, Yannawa, Bangkok 10120
 Tel : (662) 2954508-14
 Fax : (662) 2954267

SOUTH AFRICA :

Samsung Electronics South Africa
 Somerset Office Park 5 Libertas Road
 Bryanston, South Africa
 Tel : (27)-11-463-5678
 Fax : (27)-11-463-5215

BRASIL :

Samsung Eletrônica da Amazonia Ltda.
 R. Prof. Manoelito de Ornellas, 303-2º Andar
 Chácara Sto. Antônio • cep : 04719-040
 São Paulo • SP
 Tel. : (011) 541-8500
 Fax : (011) 523-3995, 522-0726

SWEDEN:

Samsung Electronics Svenska, AB
 Box 713, S-194 27 Upplands Vasby
 Tel.: (468) 590-966-00
 Fax : (468) 590-966-50

IMPORTADO POR: SAMSUNG ELECTRONICS MEXICO S.A. DE C.V.
 SATURNO 44 COL. NVA. INDUSTRIAL VALLEJO
 DEL. GUSTAVO A. MADERO C.P. 07700
 MEXICO D.F. TEL. 5747-5100
 RFC: SEM950215S98

EXPORTADO POR: SAMSUNG ELECTRONICS CO.,LTD.
 JOONG-ANG DAILY NEWS BLDG.
 7 SOON-WHA-DONG CHUNG-KU,
 C.P.O BOX 2775, 1144 SEOUL, KOREA



"As an ENERGYSTAR® Partner, SAMSUNG has determined that this product meets the ENERGYSTAR® guidelines for energy efficiency."

P/N: BH68-00326E - 02



Printed on recyclable paper