

result in corrosion of the inner blades. cutter after each use. Failure to do this may must thoroughly clean and air-dry the foil and the cutter, women who use underarm deodorant 5. To prevent possible damage to the foils and submerged the entire unit in water.

4. Rinse the shaver head only, do not seals.

as they can cause damage to the waterproof Do not use hot water, sea water, or cleaners, the hair can get into the holes of the foil

3. When cleaning, use cold or warm water. **Immediately,**

Also a damaged foil may cause skin

foil will produce poor shaving results,

foils, or drop foils. A warped or distorted pieces. Do not press hard against the

2. The foils are thin and precisely finished or arm before using the shaver.

a skin allergy, should test one section of the leg or easily irritated by shaving, or who suffer from 1. Women whose skin is sensitive to cosmetics

WARNING

SAVE THESE INSTRUCTIONS

#1 brand in personal care appliances.

instructions. Thank you for choosing Conair, the minute to read the following operating and care when using this quality product, please take a ladies dual foil shaver. For maximum satisfaction Congratulations on the purchase of your new

INSTRUCCIONES DE LIMPIEZA

- Asegúrese de que el aparato esté apagado (OFF).
- Sosteniendo firmemente el cabezal, oprima los botones de liberación y alce el cabezal (FIG.1). Tenga cuidado de no presionar las hojas. Son delicadas y pueden dañarse fácilmente.



- Enjuague las cuchillas internas y las hojas bajo agua corriente. No utilice agua caliente. Utilice agua fría o tibia solamente.
- Permita que las cuchillas y las hojas sequen al aire antes de volver a ensamblar el cabezal. Una vez seco, vuelva a instalar el cabezal, presionando hasta que encaje en su lugar. Limpie el cuerpo del aparato con una toalla seca. No seque las hojas. Permita que sequen al aire.

- Reemplace all batteries of a set at the same intended use.
- Always purchase the correct size and grade of battery most suitable for the of the device prior to battery installation.
- Clean the battery contacts and also those unused for an extended period of time.
- Remove used batteries promptly.
- Remove used batteries promptly.
- Always purchase the correct size and grade of battery most suitable for the of the device prior to battery installation.
- Clean the battery contacts and also those unused for an extended period of time.
- Remove used batteries promptly.
- Always purchase the correct size and grade of battery most suitable for the of the device prior to battery installation.
- Remove used batteries promptly.
- Always purchase the correct size and grade of battery most suitable for the of the device prior to battery installation.
- Remove used batteries promptly.
- Always purchase the correct size and grade of battery most suitable for the of the device prior to battery installation.
- Remove used batteries promptly.
- Always purchase the correct size and grade of battery most suitable for the of the device prior to battery installation.

before you judge its performance. 4. Rinse the shaver head only, do not seals. as they can cause damage to the waterproof Do not use hot water, sea water, or cleaners, the hair can get into the holes of the foil 3. When cleaning, use cold or warm water. **Immediately,**

Also a damaged foil may cause skin

foil will produce poor shaving results,

foils, or drop foils. A warped or distorted pieces. Do not press hard against the

2. The foils are thin and precisely finished or arm before using the shaver.

a skin allergy, should test one section of the leg or easily irritated by shaving, or who suffer from 1. Women whose skin is sensitive to cosmetics

OPERATING INSTRUCTIONS FOR HOUSEHOLD USE ONLY

- Remove the battery compartment cover by pushing in and down toward the bottom of the shaver.
- Align the two AAA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery first so it will slip easily into place.
- Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.
- To use your shaver, push ON/OFF switch upwards to ON position.
- After you finish using your shaver, push down on the ON/OFF switch to turn the shaver off.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove the batteries if the batteries are no longer functional or if the shaver is left unused for an extended period of time.
- Clean the battery contacts and also those unused for an extended period of time.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replac



CÓMO AFEITAR SU AXILAS

- Prepare la piel para el tipo de afeitado deseado, con agua o en seco. Asegúrese de que la piel esté limpia, seca y libre de desodorante.
- Encienda el aparato.
- Alce el brazo para estirar ligeramente la piel.
- Si el vello es largo, acórtelo con la cuchilla recortadora integrada, pasando la máquina en dirección contraria al crecimiento del vello.
- Mantenga el aparato en contacto con la piel y aféitese con movimientos suaves.
- No presione mucho. Presionar mucho puede causar irritaciones cutáneas.
- Después de terminar, apague el aparato (OFF). Importante: Necesitará hacer varios intentos hasta encontrar la mejor forma de afeitar sus axilas.

- Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc, or rechargeable (Nickel cadmium or Nickel Metal Hydride) batteries.
- After each shave, switch the unit off and clean shaver head.
- Slide the main switch up to the ON position.
- After each shave, switch the unit off and clean shaver head.
- Do not immerse any part of the unit in water or other liquid.
- The outer foils and inner blades are delicate and must be handled very carefully.
- Before wet shaving, you may wish to prepare your legs and underarms with shaving cream or soap. If a soapy lather is applied to the skin, the shaver will glide smoothly over the skin and clean away oil residue while at the same time removing hair. **Caution: DO NOT use shaving gels, as these products can clog your shaver foils.**
- When dry shaving, be certain that your skin is clean. If you have sensitive skin, you may want to apply talcum powder before and after you shave.
- Clean your shaver after each use. This will insure the best performance. (Please refer to “How to Clean Your Shaver” section for further instructions.)
- The shaver has a bikini pop-up trimmer for your complete shaving needs. To trim the bikini area, use the handy pop-up feature to easily see what you are trimming.
- When you finish shaving, turn the shaver off. Important: After several uses, you will be able to determine the optimum shaving method for legs and bikini area.
- Replac

- Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc, or rechargeable (Nickel cadmium or Nickel Metal Hydride) batteries.
- After each shave, switch the unit off and clean shaver head.
- Slide the main switch up to the ON position.
- After each shave, switch the unit off and clean shaver head.
- Do not immerse any part of the unit in water or other liquid.
- The outer foils and inner blades are delicate and must be handled very carefully.
- Before wet shaving, you may wish to prepare your legs and underarms with shaving cream or soap. If a soapy lather is applied to the skin, the shaver will glide smoothly over the skin and clean away oil residue while at the same time removing hair. **Caution: DO NOT use shaving gels, as these products can clog your shaver foils.**
- When dry shaving, be certain that your skin is clean. If you have sensitive skin, you may want to apply talcum powder before and after you shave.
- Clean your shaver after each use. This will insure the best performance. (Please refer to “How to Clean Your Shaver” section for further instructions.)
- The shaver has a bikini pop-up trimmer for your complete shaving needs. To trim the bikini area, use the handy pop-up feature to easily see what you are trimming.
- When you finish shaving, turn the shaver off. Important: After several uses, you will be able to determine the optimum shaving method for legs and bikini area.
- Replac

- Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc, or rechargeable (Nickel cadmium or Nickel Metal Hydride) batteries.
- After each shave, switch the unit off and clean shaver head.
- Slide the main switch up to the ON position.
- After each shave, switch the unit off and clean shaver head.
- Do not immerse any part of the unit in water or other liquid.
- The outer foils and inner blades are delicate and must be handled very carefully.
- Before wet shaving, you may wish to prepare your legs and underarms with shaving cream or soap. If a soapy lather is applied to the skin, the shaver will glide smoothly over the skin and clean away oil residue while at the same time removing hair. **Caution: DO NOT use shaving gels, as these products can clog your shaver foils.**
- When dry shaving, be certain that your skin is clean. If you have sensitive skin, you may want to apply talcum powder before and after you shave.
- Clean your shaver after each use. This will insure the best performance. (Please refer to “How to Clean Your Shaver” section for further instructions.)
- The shaver has a bikini pop-up trimmer for your complete shaving needs. To trim the bikini area, use the handy pop-up feature to easily see what you are trimming.
- When you finish shaving, turn the shaver off. Important: After several uses, you will be able to determine the optimum shaving method for legs and bikini area.
- Replac



- Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc, or rechargeable (Nickel cadmium or Nickel Metal Hydride) batteries.
- After each shave, switch the unit off and clean shaver head.
- Slide the main switch up to the ON position.
- After each shave, switch the unit off and clean shaver head.
- Do not immerse any part of the unit in water or other liquid.
- The outer foils and inner blades are delicate and must be handled very carefully.
- Before wet shaving, you may wish to prepare your legs and underarms with shaving cream or soap. If a soapy lather is applied to the skin, the shaver will glide smoothly over the skin and clean away oil residue while at the same time removing hair. **Caution: DO NOT use shaving gels, as these products can clog your shaver foils.**
- When dry shaving, be certain that your skin is clean. If you have sensitive skin, you may want to apply talcum powder before and after you shave.
- Clean your shaver after each use. This will insure the best performance. (Please refer to “How to Clean Your Shaver” section for further instructions.)
- The shaver has a bikini pop-up trimmer for your complete shaving needs. To trim the bikini area, use the handy pop-up feature to easily see what you are trimming.
- When you finish shaving, turn the shaver off. Important: After several uses, you will be able to determine the optimum shaving method for legs and bikini area.
- Replac

INSTRUCCIONES FOR USE

PARA USO DOMÉSTICO SOLAMENTE

INSTRUCCIONES DE OPERACIÓN

- Deslice la cubierta del compartimiento de la(s) pila(s) hacia abajo para abrirlo.
- Instale dos pilas AAA, respetando los signos de polaridad. Introduzca el polo negativo primero, teniendo cuidado de no doblar las patas de contacto.
- Cierre la cubierta del compartimiento de la(s) pila(s), empujando hasta que haga clic.
- Para encender el aparato, deslice el interruptor hacia arriba (ON).
- Para apagar el aparato, deslice el interruptor hacia abajo (OFF).
- Siempre respete los signos de polaridad (+/-) al instalar la(s) pila(s).
- Retire la(s) pila(s) al final de su vida útil o si no va a usar el aparato durante un largo período de tiempo.
- Limpie los contactos del aparato y los de la(s) pila(s) antes de instalar ésta(s).
- Retire las pilas usadas sin demora.
- No utilice pilas que no sean del tamaño o de la potencia indicada para uso con este aparato.
- Cambie todas las pilas al mismo tiempo.
- No junte pilas nuevas con pilas usadas. No junte pilas alcalinas con pilas regulares (carbón-zinc) o pilas recargables (NiCd o NiMH).

- Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc, or rechargeable (Nickel cadmium or Nickel Metal Hydride) batteries.
- After each shave, switch the unit off and clean shaver head.
- Slide the main switch up to the ON position.
- After each shave, switch the unit off and clean shaver head.
- Do not immerse any part of the unit in water or other liquid.
- The outer foils and inner blades are delicate and must be handled very carefully.
- Before wet shaving, you may wish to prepare your legs and underarms with shaving cream or soap. If a soapy lather is applied to the skin, the shaver will glide smoothly over the skin and clean away oil residue while at the same time removing hair. **Caution: DO NOT use shaving gels, as these products can clog your shaver foils.**
- When dry shaving, be certain that your skin is clean. If you have sensitive skin, you may want to apply talcum powder before and after you shave.
- Clean your shaver after each use. This will insure the best results, shave against the direction of your skin.
- Keep the full shaving head in contact with down your skin.
- Shave with smooth, steady strokes up and down your shaver on.
- Turn shaver on.
- Prepare your legs for wet or dry shaving.
- NOTE: *Pushing the shaver against the skin too hard will not allow the hairs to enter the foils and be cut. Experience will show just the right pressing to use to maximize performance.*
- Prepare your legs for wet or dry shaving.
- When finished shaving, turn the shaver off. Important: After several uses, you will be able to determine the optimum shaving method for legs and bikini area.
- Replac




SHAVING YOUR UNDERARMS

INSTRUCCIONES DE OPERACIÓN IMPORTANTE

Este aparato ha sido diseñado para proporcionar un afeitado al ras suave y preciso. Requiere 2 pilas AAA (no incluidas). Le aconsejamos que utilice pilas alcalinas, las cuales son más duraderas. Retire la(s) pila(s) al final de su vida útil o si no va a usar el aparato durante un largo período de tiempo. ***Durante tres a cuatro semanas, utilice exclusivamente la máquina de afeitar para afeitar sus piernas/axilas.*** Puede que sus primeros intentos no sean perfectos. Esto es normal. Su piel y sus vellos necesitan tiempo para acostumbrarse a esta nueva técnica de afeitado. Precaución: Presionar las hojas mucho contra la piel no producirá resultados satisfactorios. Se debe pasar la máquina suavemente sobre la piel; presionar mucho aplasta los vellos e impide el afeitado. Sea paciente; utilice el aparato 10–12 veces antes de juzgar su rendimiento.

3. Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water. 4. After wet cleaning, allow the foil frame and cutters to air-dry before closing foil frame and shaver head. Replace shaver head back onto the shaver until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the shaving head air-dry. 5. The cutter can also be cleaned with a cleaning brush.

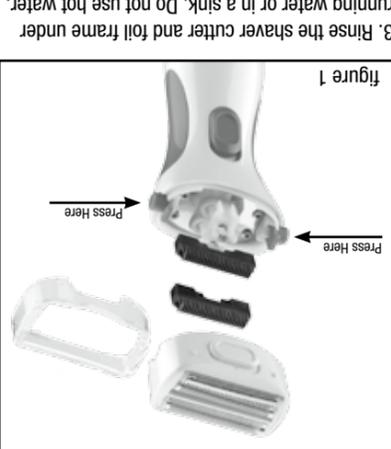

delicate and can easily be damaged. Be careful not to push on the foils. They are each side and lift up (the cutter is now in view). (Fig. 1) then press foil frame release buttons on 2. Hold shaver head and lift up from the back, before cleaning your shaver.

1. Make sure unit is in the “OFF” position

HOW TO CLEAN YOUR SHAVER

Le felicitamos por haber comprado esta máquina de afeitar de doble hoja. Para lograr resultados óptimos, siempre lea las instrucciones de uso y mantenimiento que se encuentran a continuación. Gracias por elegir Conair, el no. 1 en aparatos de cuidado personal.

GUARDE ESTAS INSTRUCCIONES

ADVERTENCIA

- Si su piel es sensible a los productos cosméticos, se irrita fácilmente cuando se afeita o padece de alergia, pruebe el aparato sobre una pequeña sección del brazo o de la pierna antes de usarlo.
- Las hojas de afeitar son delgadas y precisas. No las apriete mucho sobre la piel ni las deje caer. Una hoja lastimada o deformada impedirá el buen funcionamiento del aparato y puede provocar heridas. Reemplace las hojas defectuosas inmediatamente.**
- Limpie las hojas en agua fría o tibia únicamente. No utilice agua caliente, agua salina o limpiadores, porque esto puede dañar los sellos de impermeabilidad del aparato.
- Enjuague el cabezal solamente. No sumerja el aparato en agua.
- Si use desodorante, lave bien y deje secar las hojas y las cuchillas al aire después de cada uso. Si no lo hace, las cuchillas se pueden oxidar.




Manual de instrucciones




Modelo LWD1

6. If the body of the shaver becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.
7. Once dried, carefully place the protective cap on.
CAUTION
1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the unit.
2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

2. Push one side of the inner blades to unlock it and take out. (see figure 4) Be careful not to lose the small spring as it will be needed with the new cutters.

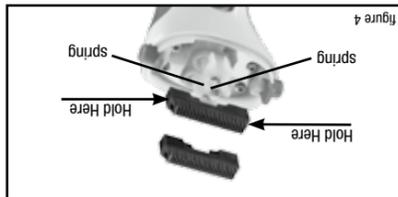

1. Remove the foil frame. (see figure 3)

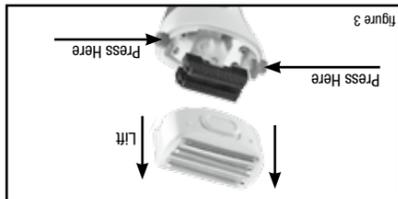

Replace the foil frame when you find you have to push harder on the shaver to get a close shave, or if you have to go over your leg area more often to get a smooth result. It is also time to replace the foils if you experience skin irritation. Replacement time will depend on how often you use your shaver and how quickly your hair grows.
Caution: Never replace the cutters without replacing the foils as well.

PIEZAS DE REPUESTO:

Para pedir piezas de repuesto (véase la lista de las piezas disponibles a continuación), llame al 1-800-3-CONAIR.

Hojas y cuchillas internas (modelo no. CSP21)

Para registrar su producto, visítenos en: www.conair.com/registration


©2011 Conair Corporation
Centro de servicio
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

11PG125237

IB-10927



3. Hold the new inner blades firmly on the sides and guide them gently into the inner blade mount one side at a time until they lock into place.

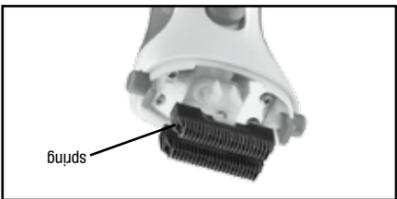

REPLACING THE POP-UP TRIMMER ASSEMBLY

Note: we do not recommend replacing the trimmer assembly yourself. Take or send the shaver to a Conair service center because this requires a special tool for replacement. For most users, this trimmer will stay sharp for as long as you own your shaver.

CAMBIO DE LA CUCHILLA RECORTADORA INTEGRADA

Nota: No le aconsejamos que intente reemplazar la cuchilla recortadora integrada; se necesita una herramienta especial para hacer esto. Si la cuchilla está dañada o no corta, regrese el aparato a un centro de servicio autorizado. Sin embargo, la cuchilla ha sido diseñada para durar tanto como el aparato y es probable que nunca la tenga que reemplazar durante su vida útil.



3. Sostenga las cuchillas por los costados e insértelas sobre el cabezal, un lado tras otro.



4. Presione firmemente hasta que encaje.
5. Vuelva a instalar el cabezal.



IB-10927


©2011 Conair Corporation
Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Please register this product at www.conair.com/registration

LIMITED TWO YEAR WARRANTY
Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.
To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.
ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.
Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.
Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.
This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.
For shaving tips and information on Conair appliances call: **1-800-3-CONAIR** or visit us on the web at www.conair.com

CÓMO REEMPLAZAR LAS HOJAS Y LAS CUCHILLAS

Si siente que debe hacer fuerza para afeitar o si debe pasar la máquina sobre la misma zona varias veces para conseguir un resultado suave, cambie las cuchillas. Cambie las hojas si irritan la piel. La vida útil de las cuchillas/hojas dependerá de la frecuencia de uso del aparato.
Precaución: Siempre reemplace las cuchillas y las hojas al mismo tiempo.

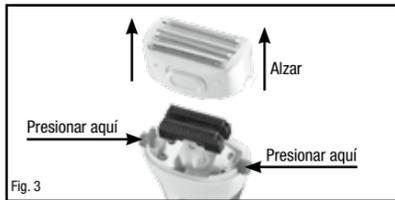

1. Retire el cabezal (Fig. 3).



2. Presione el costado de las cuchillas para liberarlas y retírelas (Fig. 4). Tenga cuidado de no perder el resorte; lo necesitará para instalar las nuevas cuchillas.

Model LWD1



Instruction Booklet



BATTERY OPERATED
Twin Foil Shaver

- Si desea, utilice un pequeño cepillo para limpiar las cuchillas internas.
- Si el cuerpo del aparato está sucio, límpielo con un paño ligeramente humedecido con agua jabonosa, o detergente suave. Nunca utilice disolvente, solventes o limpiadores fuertes.
- Regrese el protector de hojas sobre el cabezal.

PRECAUCIÓN:

- Si tiene que sacudir el aparato para eliminar el exceso de agua, sosténgalo firmemente para no dejarlo caer o desarmar el cabezal.
- No utilice un secador o un calentador para secar el aparato. Esto podría dañarlo o impedir su buen funcionamiento.