

# G912wa2 LCD MONITOR



ENVISION™

SOMETHING TO SEE

## Operation Instructions

Thank you for purchasing this monitor, a high-resolution multi-scan color monitor.

Please read this guide thoroughly before installation.

### FCC Radio Frequency Interference Statement **WARNING: (FOR FCC CERTIFIED MODELS)**

**NOTE:** This monitor has been tested and found to be compliant with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide proper protection against harmful interference to a residential installation. This monitor generates, uses and can radiate radio frequency energy. Harmful interference to radio communication may be caused as a result if it is not properly installed and used. However, there is no guarantee that interference will not occur in a particular installation. If this monitor does cause serious interference to radio or television reception, resetting the monitor may determine it. Moreover, users are encouraged to correct interference by doing one or more of the following:

1. Reorient or relocate the receiving antenna.
2. Move the monitor and the receiver further away from each other.
3. Connect the monitor into an outlet on a circuit different from that to which the receiver is connected.
4. Consult your local dealer or a qualified technician.

### **NOTICE:**

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibility of the user to correct such interference.

### **FCC Warning:**

To assure continued FCC compliance, a user must use a grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. Also, any unauthorized changes or modifications to this monitor would void the user's authority to operate this device.

Note: If necessary, shielded interface cables and AC power cord must be used to meet the emission level limits.

## **Contert**

Safety Precautions	<u>1</u>
First Setup	<u>2</u>
Quick Installation	<u>2</u>
Front View of the Product	<u>4</u>
Main Menu	<u>5</u>
Adjusting the picture	<u>5</u>
Supported Timing Modes	<u>7</u>
Technical Specification	<u>8</u>
Care and Maintenance	<u>9</u>
Troubleshooting	<u>9</u>

## Safety Precautions

This monitor is manufactured and tested on a ground principle that a user's safety comes first. However, improper use or installation may result in danger to the monitor as well as to the user. Carefully go over the following WARNINGS before installation and keep this guide handy.

### WARNINGS:

- This monitor should be operated only at the correct power sources indicated on the label on the rear end of the monitor. If you're unsure of the power supply in your residence, consult your local dealer or power company.
- Do not try to repair the monitor yourself as it contains no user-serviceable parts. The monitor should only be repaired by a qualified technician.
- Do not remove the monitor cabinet. There are high-voltage parts inside that may cause electric shock to human bodies, even when the power cord is disconnected.
- Stop using the monitor if the cabinet is damaged. Have it checked by a service technician.
- Put your monitor only in a clean, dry environment. Unplug the monitor immediately if it gets wet and consult your service technician.
- Always unplug the monitor before cleaning it. Clean the cabinet with a clean, dry cloth. Apply non-ammonia based cleaner onto the cloth, not directly onto the glass screen.
- Keep the monitor away from magnetic objects, motors, TV sets, and transformer.
- Do not place heavy objects on the cable or power cord.
- For PLUG CABLE EQUIPMENT, the Socket-outlet shall be installed near the equipment and shall be easily accessible.

## First Setup

Congratulation for purchasing this monitor of high performance!  
This monitor comes with the following accessories:

1. LCD Monitor
2. Owner's Manual
3. Power Cord
4. D-Sub Cable
5. Audio Cable

## Quick Installation

### 1. Install / Remove the base

Place the display onto the base.

Align the display with the swivel on the base and plug the display into the base.

Hold up the display and then smack the base by hand to remove it.

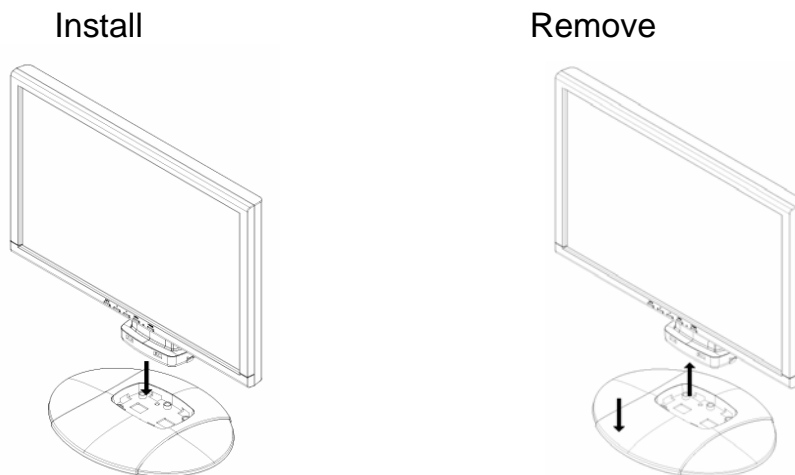


Figure 1 Installing and Removing the Swivel Base

### 2. Connect video cable (D-Sub cable)

Make sure both monitor and computer are powered OFF. Connect the video cable ( D-Sub cable) to the computer,then to the monitor.

### 3. Connect audio cable

Connect one end of the audio cable to the back of the monitor and connect the other end to the computer's audio out port.

### 4. Connect power cord

Connect the power cord to a properly grounded AC outlet,then to the monitor

### 5. Power-ON computer and monitor

Power-ON the computer,then Power-ON the monitor

## 6. Windows users: Setting the Timing Mode(Resolution and Refresh Rate)

*Example: 1440 x 900 @ 60 Hz*

Resolution Right-click on the Windows desktop > Properties > Settings > "Desktop Area". Set the resolution.

Refresh Rate (vertical frequency) See your graphic card's user guide for instructions.

Example:

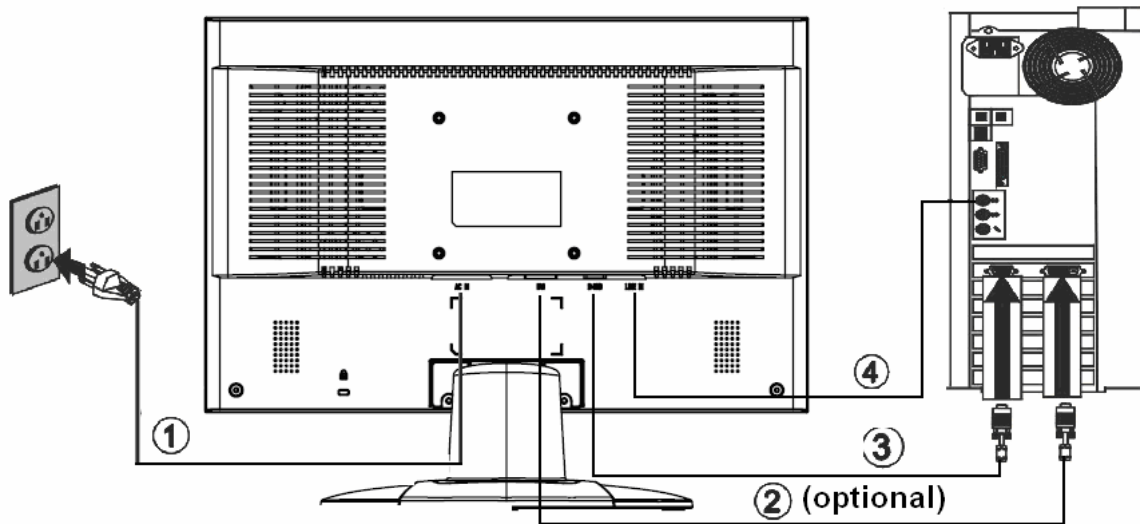


Figure 2 Connecting Cables

1.	AC Power Cord
2.	DVI Cable (Optional)
3.	D-sub Cable
4.	Audio Cable

## Front View of the Product

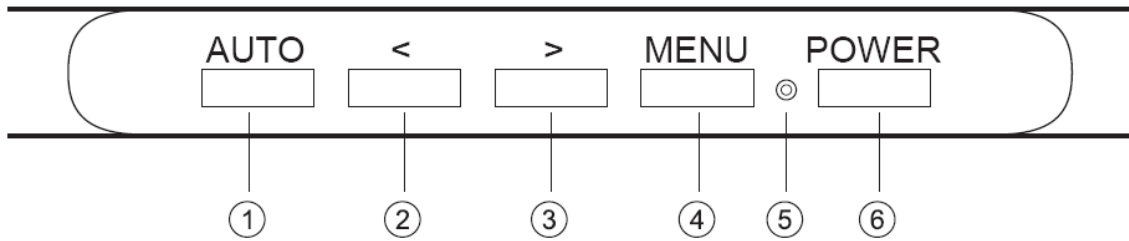


Figure 3 External Control Button

1.	Auto Adjust Key/Exit	2.	Decrease </Input select
3.	Increase>/Audio	4.	MENU
5.	LED	6.	Power Key

Press the **MENU** button (④ in fig. 3) to display the OSD menu on the screen.

1. There are a total of 5 OSD submenus divided by categories. Select the desired submenu by pressing the OSD button **<** or **>** button (② and ③ in fig. 3); see section “OSD Menu Functions”.
2. Press the OSD button **MENU** (④ in fig. 3) to activate the selected function or associated submenu.
3. If you selected submenu, now select the sub-function you want using the OSD buttons **<** or **>**(② and ③ in fig. 3).
4. Set the desired value using the OSD button **<** or **>**(② and ③ in fig. 3).
5. The current settings are automatically saved when you return to the previous level or exit the OSD menu. Repeat setups 2-5 to make further adjustments as needed.
6. The OSD menu automatically disappears if no changes are made for more than 45 seconds (default setting). The current settings will be saved. You can close it manually by pressing the **AUTO** (① in fig. 3) button

## Main Menu







Figure 4 The OSD Message

## Adjusting the picture

The descriptions for function control LEDES

Main Menu Item	Main Menu Icon	Sub Menu Item	Description
Brightness/ Contrast		Brightness	Controls the picture's contrast, brightness, black level and auto level.
		Contrast	
Image Adjust		Auto Adjustment	Automatically selects the optimal settings for image parameters (image position, phase, etc.)
		H-Position	Controls the picture's horizontal position.
		V-Position	Controls the picture's vertical position.
		Clock	Sets up the internal clock. Larger values make the displayed image appear wider; smaller values make it appear compressed.
		Phase	Adjusts the internal clock's time lag in order to optimize the screen image.
		Sharpness	Controls image sharpness (only for resolutions less than 1440 x 900 pixels)



Main Menu Item	Main Menu Icon	Sub Menu Item	Description
Color		9300K	This menu lets you select a preset color temperature ( <b>9300K, 6500K or sRGB</b> ) by pressing the OSD buttons < or >. Changes to the color temperature take immediate effect on screen. If you wish to set individual color values, select the <b>Custom Color</b> option. Then press the <b>MENU</b> button to select the red, green and blue settings and set the desired value using the OSD buttons < or >. The current settings are automatically saved when you return to the previous level or exit the OSD menu.
		6500K	
		Custom color	
		sRGB	
OSD CONTROL		H. OSD Position	Controls the OSD menu's horizontal position
		V.OSD Position	Controls the OSD menu's vertical position.
		OSD Timeout	Determines how long (in seconds) the OSD menu waits before closing automatically after no action has been performed
OTHERS		Language	OSD menu language selection: English, French, German, Italian, Spanish, Dutch, Russian, Polish.
		Input select	Selects Analog (D-sub) or Digital (DVI-D) input
		Speaker Volume	Adjusts the monitor loudspeaker output volume.
		Information	There is an optional OSD window (on/off) that displays the newly adjusted screen resolution settings.
		Autoswitch	This option allows you to decide if the Auto Adjustment function should take effect after each change to the monitor's resolution.
RESET		YES	Activating the factory settings
		NO	With this function all settings are reset to the factory settings without prompting for confirmation.

## Supported Timing Modes

VGA	720 x 400 @ 70Hz
VGA	640 x 480 @ 60 Hz
MAC	640 x 480 @ 67 Hz
VESA	640 x 480 @ 73 Hz
VESA	640 x 480 @ 75 Hz
VESA	800 x 600 @ 56 Hz
VESA	800 x 600 @ 60 Hz
VESA	800 x 600 @ 75 Hz
VESA	800 x 600 @ 72 Hz
MAC	832 x 624 @ 75 Hz
VESA	848 x 480 @ 60 Hz
VESA	1024 x 768 @ 60 Hz
VESA	1024 x 768 @ 70 Hz
VESA	1024 x 768 @ 75 Hz
VESA	1152 x 864 @ 75 Hz
VESA	1280 x 1024 @ 60 Hz
VESA	1280 x 1024 @ 75 Hz
VESA	1280 x 720 @ 60 Hz
VESA	1280 x 768 @ 60 Hz
VESA	1280 x 768 @ 75 Hz
VESA	1360 x 768 @ 60 Hz
VESA	1440 x 900 @ 60 Hz
VESA	1440 x 900 @ 60 Hz
VESA	1440 x 900 @ 75 Hz

**Warning :** Do not set the graphic card in your computer to exceed these maximum refresh rates. Doing so may result in permanent damage to your monitor

## Technical Specification

Input signal	Analog Dsub Digital DVI-D with HDCP Audio
Display Type	19" LCD Widescreen Monitor
Viewable Diagonal size	48.3cm/19"
Native Resolution	1440 x 900 Pixels
Colors	16.7M colors
Pixel Pitch	0.2835 x 0.2835mm
Synchronization	31~ 81 kHz horizontal, 56 ~ 75 Hz vertical
Recommended Resolution	1440x900/60Hz
Supported Resolutions	720 x 400 @ 70Hz; 640 x 480 @ 60 Hz; 640 x 480 @ 67 Hz; 640 x 480 @ 73 Hz; 640 x 480 @ 75 Hz; 800 x 600 @ 56 Hz; 800 x 600 @ 60 Hz; 800 x 600 @ 75 Hz; 800 x 600 @ 72 Hz; 832 x 624 @ 75 Hz; 1024 x 768 @ 60 Hz; 1024 x 768 @ 70 Hz; 1024 x 768 @ 75 Hz; 1152 x 864 @ 75 Hz; 1280 x 1024 @ 60 Hz; 1280 x 1024 @ 75 Hz; 1280 x 720 @ 60 Hz; 1280 x 768 @ 60 Hz; 1280 x 768 @ 75 Hz; 1360 x 768 @ 60 Hz; 1440 x 900 @ 60 Hz; 1440 x 900 @ 60 Hz; 1440 x 900 @ 75 Hz; 848 x 480 @ 60 Hz;
<b>Power consumption</b>	Input:100 V – 240 V, 50 Hz – 60 Hz, 1.0 A ON status: max.50 W; color of the status LED: green Sleep mode: <1.0 W; color of the status LED: Orange
<b>Dimensions</b>	(W)445mmx(H)360mmx(D)210mm
<b>Weight</b>	4.9KG(Net)
<b>Environmental</b>	Operation: 5 - 35°C, humidity:20 - 90% (without condensation) Storage: -20- +60°C, humidity:5 – 90% (without condensation)

The above specification is subject to actual panel specification and is subject to change without prior notice.

## Care and Maintenance

### Care

- Avoid exposing your monitor directly to sunlight or other heat source. Place your monitor away from the sun to reduce glare.
- Put your monitor in a well ventilated area.
- Do not place any heavy things on top of your monitor.
- Make certain your monitor is installed in a clean and moisture-free area.
- Keep your monitor away from magnets, motors, transformers, speakers, and TV sets.

### Note

- Move the LCD out of the package and take off the plastic bag and polystyrene Foam.
- Pull the base from Parallel versus Panel to Vertical.
- Adjust the Panel within 0 degree leaning forward and 20 degree leaning backward. You must bend harder to exceed 20 degree backward but this range is for packing the unit to a small size for storage only.

### Safety Tips

- If smoke, abnormal noise or odor came out from your monitor, caution you should remove the power cord immediately and call your service center.
- Never remove the rear cover of your monitor cabinet. The display unit inside contains high-voltage parts and may cause electric shock to human bodies.
- Never try to repair your monitor yourself. Always call your service center or a qualified technician to fix it.

## Troubleshooting

### No power

- Make sure A/C power cord is securely connected to the power adapter and the power supply is firmly connected to the monitor.
- Plug another electrical device into the power outlet to verify that the outlet is supplying proper voltage.
- Make sure all signal cables are installed.

### Power on but no screen image

- Make sure the video cable supplied with the monitor is tightly secured to the video output port on back of the computer. If not, tightly secure it.
- Adjust brightness.

### Wrong or abnormal colors

- If any colors (red, green, blue) are missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection.
- Connect the monitor to another computer.