 


# 19 inch TFT LCD Monitor

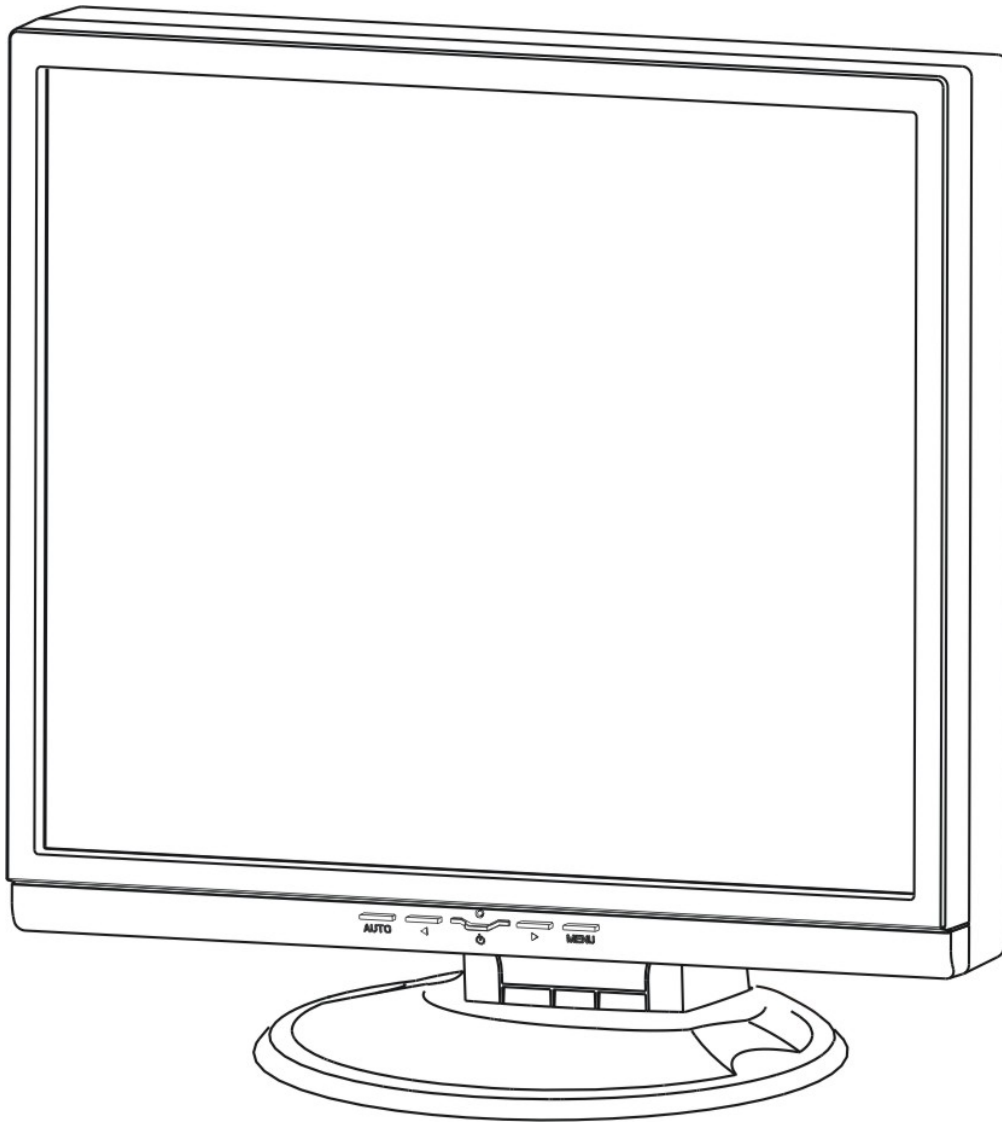

**HANNES·G**

**HS191  
USER'S MANUAL**

Before operating the monitor, please read this manual thoroughly. This manual should be retained for future reference.

## **FCC Class B Radio Frequency Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Parts 15 of the FCC Rule. Operation is subject to the following two conditions : (1) this device may not cause harmful interference ; and (2) this device must accept any interference received, including interference that may cause undesired operations.

### **CANADA**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulation.



This device complies with requirement of EMC directive 89/336/EEC with regard to Electromagnetic Compatibility, and 73/23/EEC and 93/68/EEC with regard to Low Voltage directive.

Socket-outlet shall be near the equipment and shall be accessible.



### **Congratulations!**

The display you have just purchased carries the TCO'03 Displays label. This means that your display is designed, manufactured and tested according to some of the strictest quality and environmental requirements in the world. This makes for a high performance product, designed with the user in focus that also minimizes the impact on our natural environment.

Some of the features of the TCO'03 Display requirements:

#### **Ergonomics**

- Good visual ergonomics and image quality in order to improve the working environment for the user and to reduce sight and strain problems. Important parameters are luminance, contrast, resolution, reflectance, colour rendition and image stability.

#### **Energy**

- Energy-saving mode after a certain time – beneficial both for the user and the environment
- Electrical safety

#### **Emissions**

- Electromagnetic fields
- Noise emissions

#### **Ecology**

- The product must be prepared for recycling and the manufacturer must have a certified environmental management system such as EMAS or ISO 14 001
- Restrictions on
  - chlorinated and brominated flame retardants and polymers
  - heavy metals such as cadmium, mercury and lead.

The requirements included in this label have been developed by TCO Development in cooperation with scientists, experts, users as well as manufacturers all over the world. Since the end of the 1980s TCO has been involved in influencing the development of IT equipment in a more user-friendly direction. Our labelling system started with displays in 1992 and is now requested by users and IT-manufacturers all over the world.

For more information, please visit  
[www.tcodevelopment.com](http://www.tcodevelopment.com)

## Recycling Information

We, the **HannStar Display Corp.** care very much about our environment protection strategy and firmly believe that it helps us have healthier earth via appropriate treatment and recycling of industrial technology devices at the end-of-life.

These devices contain recyclable materials, which can be re-decomposed and re-integrated into brand-new marvels. On the contrary, other material can be classified to hazardous and poisoned substances. We strongly encourage you to contact the provided information to recycle this product.

**United State** : <http://newyork.earth911.org/>

**Asia** : [http://recycle.epa.gov.tw/public/public4\\_2.htm](http://recycle.epa.gov.tw/public/public4_2.htm)

**Europe** :

**Ireland**

**Company** : **McGrath Environmental Consultants Ltd.**

**Contact Person** : **Ms. McGrath Clodagh**

Address: 20 Lower John Street, Cork, Ireland.

Tel : 021 4554833 Fax : 021 4505805

**Norway** :

**Company** : **Bergfald & Co as**      **Contact Person** : **Mr. Solevåg Øystein**

Address : Solavågsvegen 90, EIDSNES, NORWAY ,Post Code : N-6037

Tel : +47 40 23 47 05 Fax : +47 70 19 40 17

Web Site : [http://www.bergfald.no/bergfald\\_english.html](http://www.bergfald.no/bergfald_english.html)

**United Kingdom** :

**Company** : **ARENA Network**      **Contact Person** : **Dr. Tillotson Allen**

Address : Bank Buildings Treforest Estate, Pontypridd, Rhondda Cynon Taff, Kindom Post Code :

CF37 5UR

Tel : 01443 844001 Fax : 01443 844002

Web Site : <http://www.arenanetwork.org>

## TABLE OF CONTENTS

<b>SAFETY NOTICE</b> .....	<b>6</b>
<b>PRECAUTIONS</b> .....	<b>6</b>
<b>SPECIAL NOTES ON LCD MONITORS</b> .....	<b>7</b>
<b>BEFORE YOU OPERATE THE MONITOR</b> .....	<b>8</b>
<b>FEATURES</b> .....	<b>8</b>
<b>CHECKING THE CONTENTS OF THE PACKAGE</b> .....	<b>8</b>
<b>INSTALLATION INSTRUCTIONS</b> .....	<b>9</b>
<b>POWER</b> .....	<b>9</b>
<b>CONTROLS AND CONNECTORS</b> .....	<b>10</b>
<b>ADJUSTING THE VIEWING ANGLE</b> .....	<b>11</b>
<b>OPERATING INSTRUCTIONS</b> .....	<b>12</b>
<b>GENERAL INSTRUCTIONS</b> .....	<b>12</b>
<b>FRONT PANEL CONTROL</b> .....	<b>13</b>
<b>HOW TO ADJUST A SETTING</b> .....	<b>14</b>
<b>PLUG AND PLAY</b> .....	<b>18</b>
<b>TECHNICAL SUPPORT (FAQ)</b> .....	<b>19</b>
<b>Q &amp; A FOR GENERAL DEFECTIVE</b> .....	<b>19</b>
<b>ERROR MESSAGE &amp; POSSIBLE SOLUTION</b> .....	<b>20</b>
<b>APPENDIX</b> .....	<b>21</b>
<b>SPECIFICATIONS</b> .....	<b>21</b>
<b>CONNECTOR PIN ASSIGNMENT</b> .....	<b>22</b>

## **SAFETY NOTICE**

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

### **WARNING:**

To prevent fire or shock hazard, do not expose the monitor to rain or moisture. Dangerously high voltages are present inside the monitor. Do not open the cabinet. Refer servicing to qualified personnel only.

## **PRECAUTIONS**

- Do not use the monitor near water, e.g. near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Do not place the monitor on an unstable cart, stand, or table. If the monitor falls, it can injure a person and cause serious damage to the appliance. Use only a cart or stand recommended by the manufacturer or sold with the monitor. If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of the monitor and to protect it from overheating, be sure these openings are not blocked or covered. Do not place the monitor on a bed, sofa, rug, or similar surface. Do not place the monitor near or over a radiator or heat register. Do not place the monitor in a bookcase or cabinet unless proper ventilation is provided.
- The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- Unplug the unit during a lightening storm or when it will not be used for long period of time. This will protect the monitor from damage due to power surges.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- Never push any object into the slot on the monitor cabinet. It could short circuit parts causing a fire or electric shock. Never spill liquids on the monitor.
- Do not attempt to service the monitor by yourself; opening or removing covers can expose you to dangerous voltages and other hazards. Please refer all servicing to qualified service personnel.
- To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V AC, Min. 5A.
- The wall socket shall be installed near the equipment and shall be easily accessible.

## **SPECIAL NOTES ON LCD MONITORS**

The following symptoms are normal with LCD monitor and do not indicate a problem.

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the Power Switch and then turn it on again to make sure the flicker disappears.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has effective pixels of 99.99% or more. It may include blemishes of 0.01% or less such as a missing pixel or a pixel lit all of the time.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.
- If the screen suddenly flashes erratically or the backlighting fails, please contact your dealer or service center for repair. Do not attempt to repair the monitor yourself.

# BEFORE YOU OPERATE THE MONITOR

## FEATURES

- 19" TFT Color LCD Monitor
- Crisp, Clear Display for Windows
- Recommended Resolutions: 1280 X 1024 @60Hz
- EPA ENERGY STAR®
- Ergonomic Design
- Space Saving, Compact Case Design

## CHECKING THE CONTENTS OF THE PACKAGE

 
The product package should include the following items:

### LCD Monitor

(Reference only, the real feature is depended on selected model)




Screen

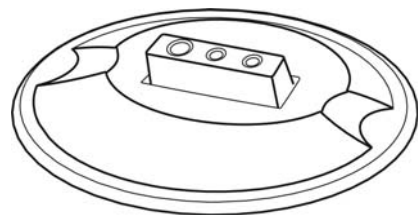


Base

### Cables and User manual

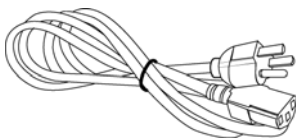 


Power Cord

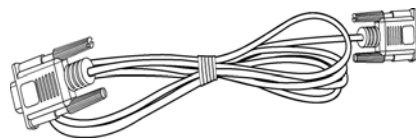 


VGA Cable



 
Audio Cable

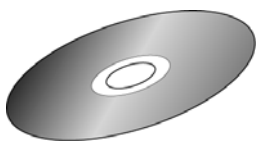

User's manual

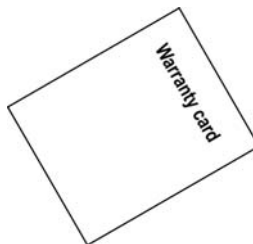 

Warranty card

 

DVI-D Cable (dual input mode optional)



## INSTALLATION INSTRUCTIONS

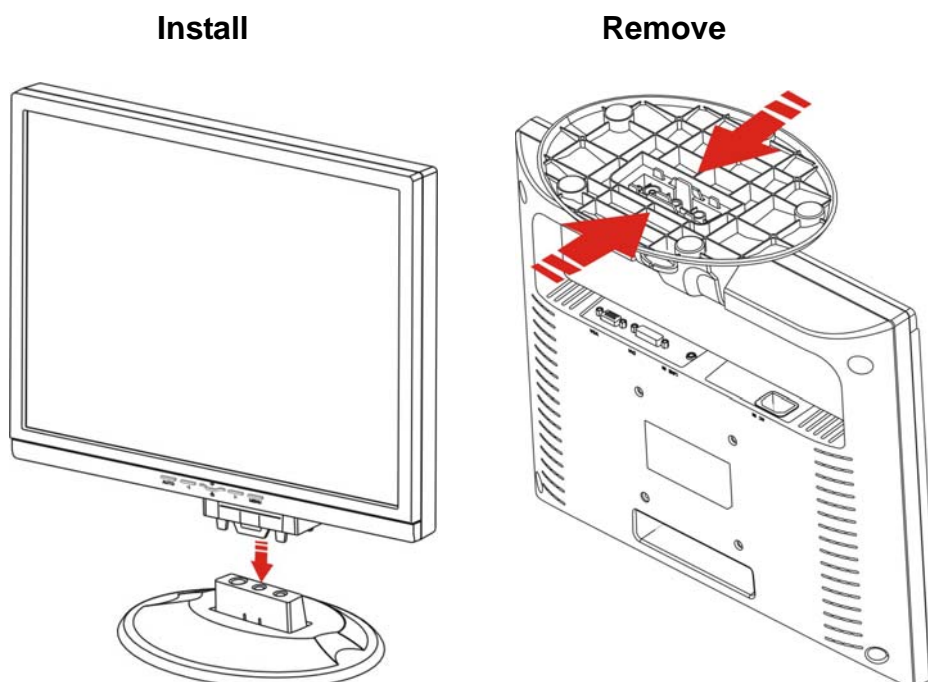 


Figure.1. Installing and Removing the Base

### **INSTALLATION:**

1. Align the monitor with the opening in the base.
2. Note that the longer section of the base points forward.
3. Snap the monitor into its base. A clear click sound will affirm that the base is connected correctly.
4. Verify that the monitor is securely attached to the base by looking at the bottom of the base and making sure that the clips are fully engaged in the base.

### **REMOVAL:**

1. Flip over the monitor so that it is upside down.
2. Press the 2 clips that hold the monitor in place.
3. Gently press and hold the 2 clips while pulling the base from the monitor unit they are unattached.

## **POWER**

### **POWER SOURCE:**

1. Make sure that the power cord is the correct type required in your area.
2. This LCD monitor has an Internal universal power supply that allows operation in either 100/120V AC or 220/240V AC voltage area (No user adjustment is required.)
3. Connect the AC-power cord one end to your LCD monitor's AC-input socket, the other end to wall-outlet .

## CONTROLS AND CONNECTORS

### CABLE CONNECTIONS:

Turn off your computer before performing the procedure below.

1. Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.
2. Connect one end of the 24-pin DVI-D cable (Dual input mode optional) to the back of the monitor and connect the other end to the computer's DVI-D port.
3. Connect the audio cable between the monitor's audio input and the PC's audio output (green port).
4. Plug the AC-power cord one end to LCD monitor's AC input socket, the other end to Wall outlet.
5. Turn on your monitor and computer.

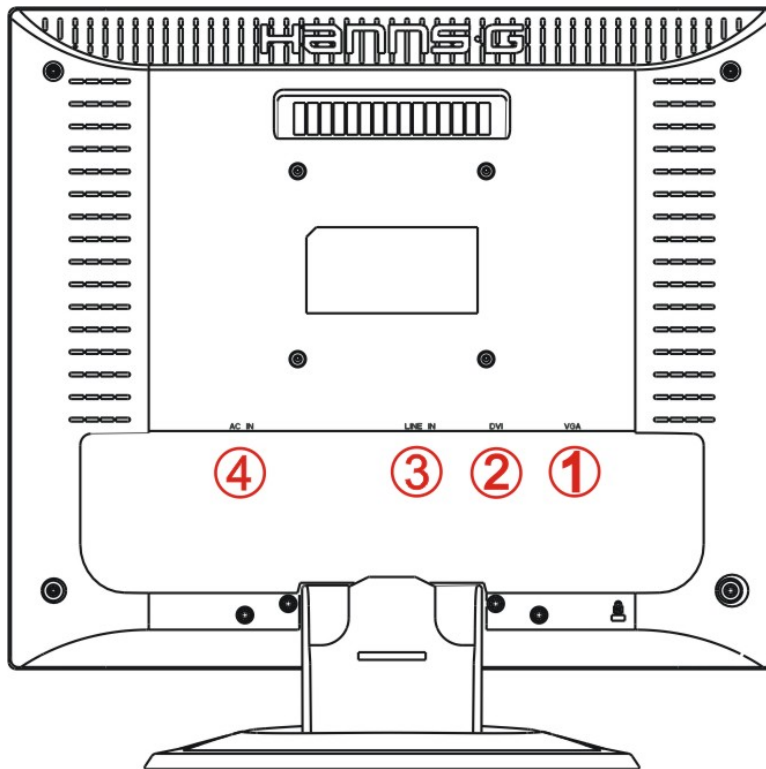 


Figure.2. Connecting Cables

1.	VGA Input	2.	DVI-D Input (optional)
3.	Audio Input	4.	Power AC Input

## ADJUSTING THE VIEWING ANGLE

- For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.
- Hold the stand so you do not topple the monitor when you change the monitor's angle.
- You are able to adjust the monitor's angle from  $0^{\circ}$  to  $20^{\circ}$ .

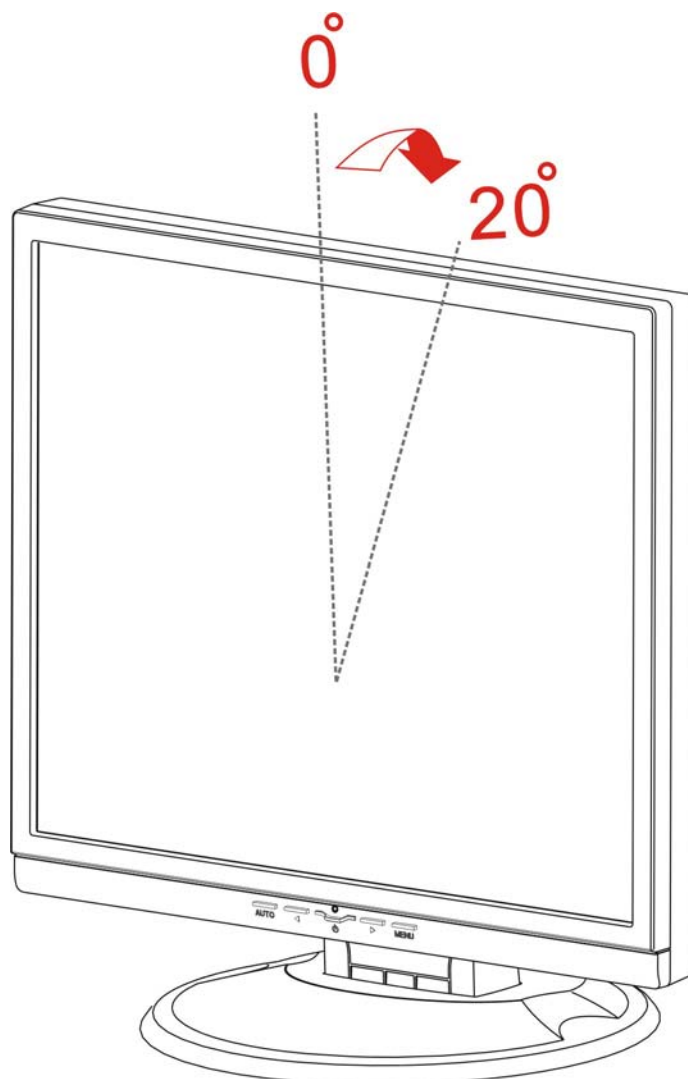 


Figure.3. monitor's angle

### **NOTES:**

- Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
- Be careful not to place fingers or hands near the hinges when tilting the monitor, otherwise pinching can result.

# OPERATING INSTRUCTIONS

## GENERAL INSTRUCTIONS

Press the power button to turn the monitor on or off. The other control buttons are located at front panel of the monitor (See Figure 4). By changing these settings, the picture can be adjusted to your personal preferences.

- The power cord should be connected.
- Connect the Signal cable from the monitor to the VGA card.
- Press the power button to turn on the monitor position. The power indicator will light up.

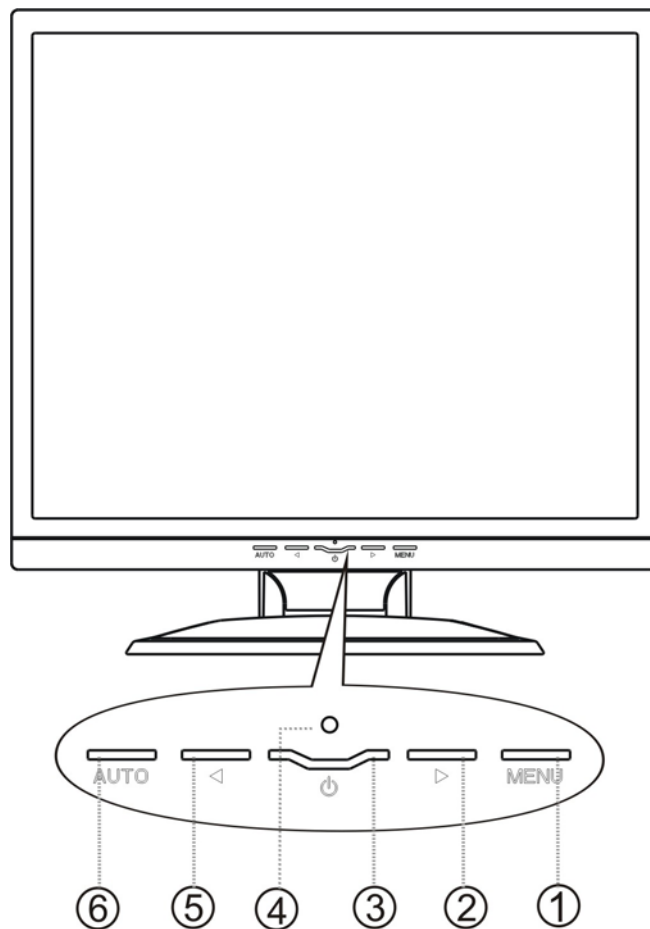 


Figure.4. External Control Button

### EXTERNAL CONTROLS:

1.	Menu / Enter	2.	Volume >
3.	Power Button	4.	Power Indicator
5.	Volume <	6.	Auto Adjustment

 
 
 
 
 
## **FRONT PANEL CONTROL**

 
 
 
 
 
- **Power Button:**  
Press this button to switch ON/OFF of monitor's power.
- **Power Indicator:**  
Green — Power On mode.  
Orange — Off mode.
- **MENU / ENTER:**
  1. Activate the OSD menu or adjust the function settings and confirmation or
  2. Exit OSD menu when in volume OSD status.
- **Volume < >:**
  1. Activates the volume control when the OSD is OFF.
  2. Navigate through adjustment icons when OSD is ON or adjust a function when function is activated.
- **Auto Adjust button:**  
When OSD menu is in off status, press this button to activate the Auto Adjustment function.  
(The Auto Adjustment function is used to optimized the H-Position, V-Position, Clock and Focus.)

### **NOTES:**

- Do not install the monitor in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, or excessive dust or mechanical vibration or shock.
- Save the original shipping box and packing materials, as they will come in handy if you ever have to ship your monitor.
- For maximum protection, repackage your monitor as it was originally packed at the factory.
- To keep the monitor looking new, periodically clean it with a soft cloth. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solution. Never use strong solvents such as thinner, benzene, or abrasive cleaners, since these will damage the cabinet. As a safety precaution, always unplug the monitor before cleaning it.


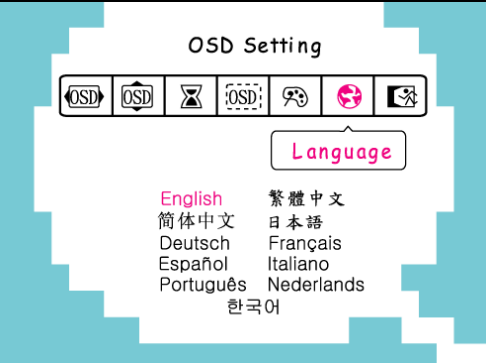 
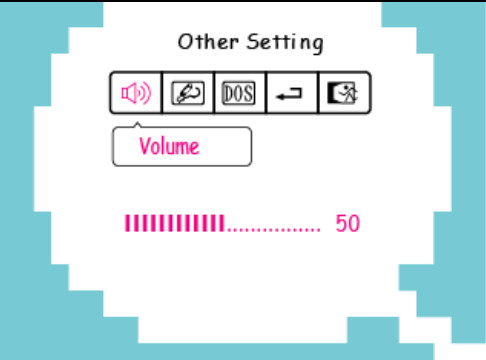 
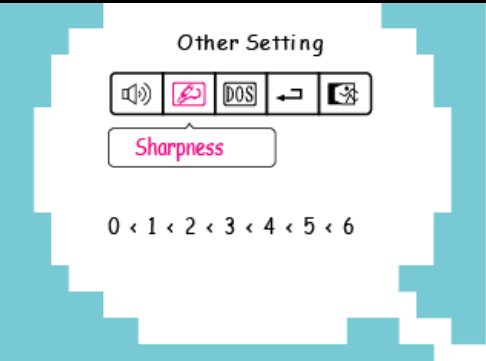 

## HOW TO ADJUST A SETTING

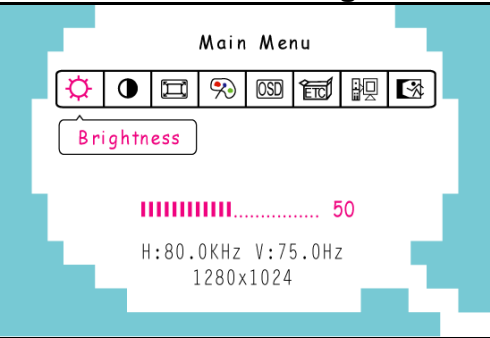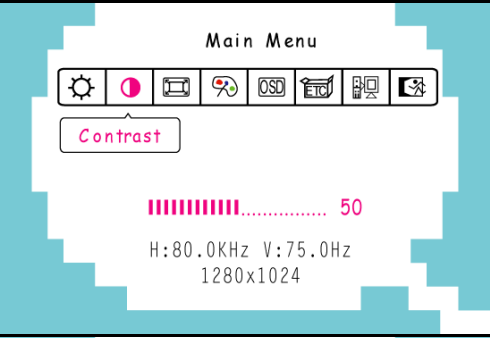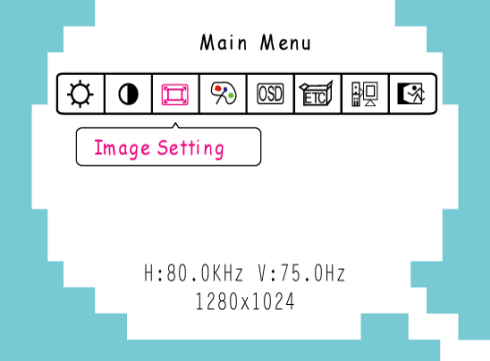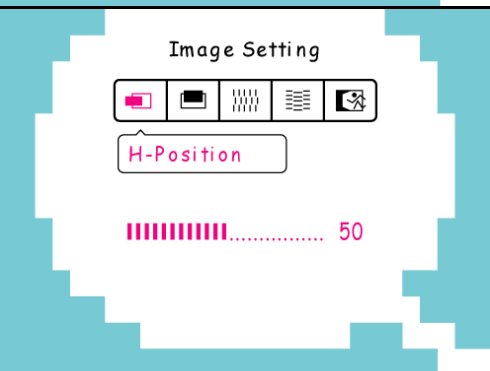
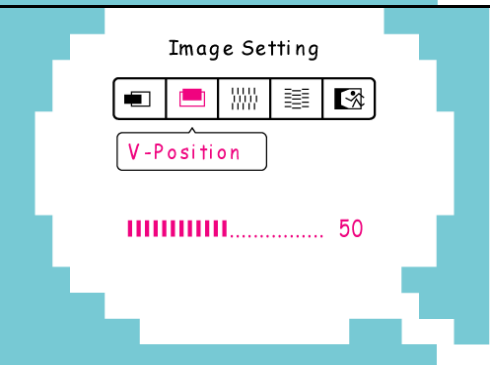
OSD Diagram	OSD Description
 <p>The diagram shows the 'Main Menu' OSD. At the top, it says 'Main Menu'. Below that is a row of icons: a gear (selected), a moon, a monitor, a magnifying glass, 'OSD', a document, a monitor with a cursor, and a power button. Below the icons is a box labeled 'Brightness'. Underneath is a horizontal bar with 10 segments, the first 5 are filled, followed by a dotted line and the number '50'. At the bottom, it displays 'H:80.0KHz V:75.0Hz' and '1280x1024'.</p>	<p><b>Brightness adjustment:</b> Select the 「Brightness」 option on the 「Main Menu」. Enter the option and adjust the level.</p>
 <p>The diagram shows the 'Main Menu' OSD. At the top, it says 'Main Menu'. Below that is a row of icons: a gear, a moon (selected), a monitor, a magnifying glass, 'OSD', a document, a monitor with a cursor, and a power button. Below the icons is a box labeled 'Contrast'. Underneath is a horizontal bar with 10 segments, the first 5 are filled, followed by a dotted line and the number '50'. At the bottom, it displays 'H:80.0KHz V:75.0Hz' and '1280x1024'.</p>	<p><b>Contrast adjustment:</b> Select the 「Contrast」 option on the 「Main Menu」. Enter the option and adjust the level.</p>
 <p>The diagram shows the 'Main Menu' OSD. At the top, it says 'Main Menu'. Below that is a row of icons: a gear (selected), a moon, a monitor (selected), a magnifying glass, 'OSD', a document, a monitor with a cursor, and a power button. Below the icons is a box labeled 'Image Setting'. At the bottom, it displays 'H:80.0KHz V:75.0Hz' and '1280x1024'.</p>	<p><b>How to adjust screen position and quality:</b> Select 「Image Setting」 on the 「Main Menu」, and then enter the option.</p>
 <p>The diagram shows the 'Image Setting' OSD. At the top, it says 'Image Setting'. Below that is a row of icons: a monitor with a red box (selected), a monitor with a black box, a grid, a list, and a power button. Below the icons is a box labeled 'H-Position'. Underneath is a horizontal bar with 10 segments, the first 5 are filled, followed by a dotted line and the number '50'.</p>	<p><b>Horizontal position adjustment:</b> Select the 「H-position」 option to shift the screen image to the left or right. Enter the option and adjust the level.</p>
 <p>The diagram shows the 'Image Setting' OSD. At the top, it says 'Image Setting'. Below that is a row of icons: a monitor with a black box, a monitor with a red box (selected), a grid, a list, and a power button. Below the icons is a box labeled 'V-Position'. Underneath is a horizontal bar with 10 segments, the first 5 are filled, followed by a dotted line and the number '50'.</p>	<p><b>Vertical position adjustment:</b> Select the 「V-position」 option to shift the screen image up or down. Enter the option and adjust the level.</p>

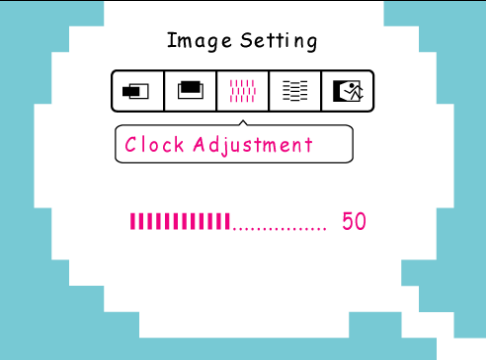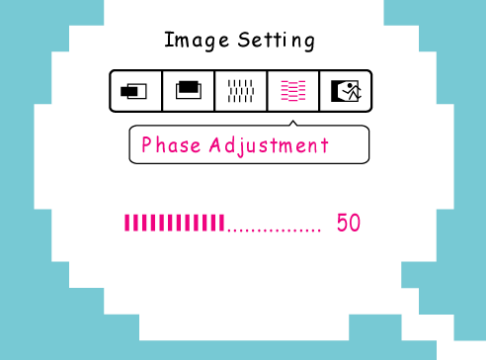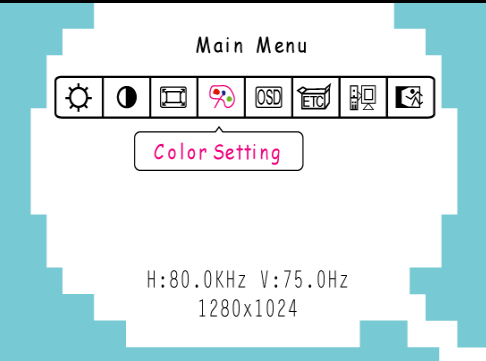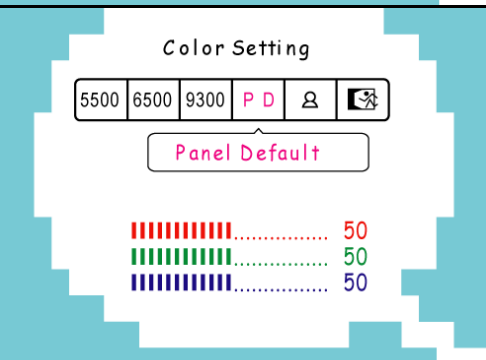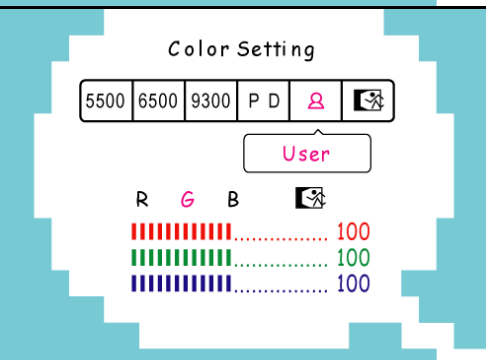OSD Diagram	OSD Description
 <p>The diagram shows the 'Image Setting' menu with five icons. The second icon, representing 'Clock Adjustment', is highlighted with a bracket and the text 'Clock Adjustment'. Below the menu, a horizontal bar of 10 red vertical lines is followed by a dotted line and the number '50'.</p>	<p><b>Clock adjustment:</b>            Select the 「Clock Adjustment」 option to reduce the vertical flicker of characters on the screen. Enter the option and adjust the level.</p>
 <p>The diagram shows the 'Image Setting' menu with five icons. The third icon, representing 'Phase Adjustment', is highlighted with a bracket and the text 'Phase Adjustment'. Below the menu, a horizontal bar of 10 red vertical lines is followed by a dotted line and the number '50'.</p>	<p><b>Phase adjustment:</b>            Select the 「Phase Adjustment」 option to reduce the horizontal flicker of characters on the screen. Enter the option and adjust the level.</p>
 <p>The diagram shows the 'Main Menu' with eight icons. The fourth icon, representing 'Color Setting', is highlighted with a bracket and the text 'Color Setting'. Below the menu, the text 'H:80.0KHz V:75.0Hz' and '1280x1024' is displayed.</p>	<p><b>How to adjust color:</b>            Select the 「Color Setting」 option on the 「Main Menu」, and then enter the option.</p>
 <p>The diagram shows the 'Color Setting' menu with five icons. The second icon, representing 'Panel Default', is highlighted with a bracket and the text 'Panel Default'. Below the menu, there are three rows of color bars: red, green, and blue. Each row consists of 10 vertical lines followed by a dotted line and the number '50'.</p>	<p>Move the cursor to one of the preset options and select it.</p>
 <p>The diagram shows the 'Color Setting' menu with five icons. The fifth icon, representing 'User', is highlighted with a bracket and the text 'User'. Below the menu, there are three rows of color bars: red, green, and blue. Each row consists of 10 vertical lines followed by a dotted line and the number '100'. The letters 'R', 'G', and 'B' are positioned to the left of the red, green, and blue bars respectively.</p>	<p><b>User defined option:</b>            Move the cursor to the User option and select it</p> <ol style="list-style-type: none"> <li>1. To adjust the red, enter the 「R」 option and adjust the level.</li> <li>2. To adjust the green, enter the 「G」 option and adjust the level.</li> <li>3. To adjust the blue, enter the 「B」 option and adjust the level.</li> </ol>

OSD Diagram	OSD Description
 <p>Main Menu</p> <p>OSD Setting</p> <p>H:80.0KHz V:75.0Hz 1280x1024</p>	<p><b>How to set the OSD:</b> Select 「 OSD Setting 」 on the 「 Main Menu 」 , and then enter the option.</p>
 <p>OSD Setting</p> <p>OSD H-Position</p> <p>       ..... 50</p>	<p><b>OSD horizontal adjustment:</b> Select the 「 OSD H-Position 」 option to adjust the horizontal position of the OSD. Enter the option and adjust the level.</p>
 <p>OSD Setting</p> <p>OSD V-Position</p> <p>       ..... 50</p>	<p><b>OSD vertical position adjustment:</b> Select the 「 OSD V-Position 」 option to adjust the vertical position of the OSD. Enter the option and adjust the level.</p>
 <p>OSD Setting</p> <p>OSD Time-out</p> <p>       ..... 50</p>	<p><b>OSD timer setting:</b> Select the 「 OSD Time-out 」 option to set the OSD time out from 10 to 120 seconds. Enter the option and adjust the level.</p>
 <p>OSD Setting</p> <p>OSD Transparency</p> <p>0 &lt; 1 &lt; 2 &lt; 3 &lt; 4 &lt; 5 &lt; 6</p>	<p><b>OSD Transparency setting:</b> Select the 「 OSD Transparency 」 option to adjust the transparency of the OSD. Enter the option and adjust the level.</p>



OSD Diagram	OSD Description
 <p>OSD Setting</p> <p>OSD OSD OSD OSD OSD OSD</p> <p>OSD Color</p> <p>1 2 3 4 5 6</p>	<p><b>OSD color setting:</b> Select the 「OSD Color」 setting option to adjust the color of the OSD. Enter the option and adjust the level.</p>
 <p>OSD Setting</p> <p>OSD OSD OSD OSD OSD OSD</p> <p>Language</p> <p>English 繁體中文          简体中文 日本語          Deutsch Français          Español Italiano          Português Nederlands          한국어</p>	<p><b>Language:</b> Select the 「Language」 option to change the language of the OSD. Enter the option and select a language. (Reference only, the OSD Language is depended on selected model)</p>
 <p>Other Setting</p> <p>Volume Volume</p> <p>       ..... 50</p>	<p><b>Volume adjustment:</b> Select the 「Volume」 option to change the volume level. Enter the option and adjust the level.</p>
 <p>Other Setting</p> <p>Sharpness</p> <p>0 &lt; 1 &lt; 2 &lt; 3 &lt; 4 &lt; 5 &lt; 6</p>	<p><b>Sharpness:</b> Select the 「Sharpness」 option to adjust the sharpness of the display. Set the value from 0 to 6.</p>
 <p>Other Setting</p> <p>DOS Mode</p> <p>720X400 640X400</p>	<p><b>DOS mode:</b> Select the 「DOS mode」 option to set the monitor for use with PC. Enter the option and select 720 × 400 or 640 × 400.</p>

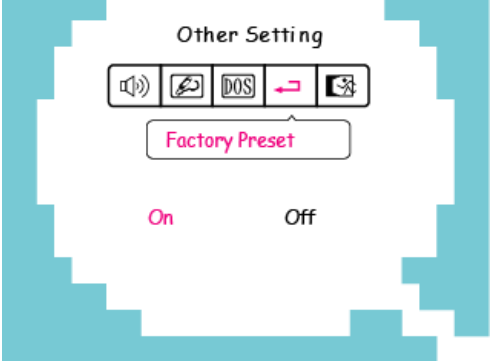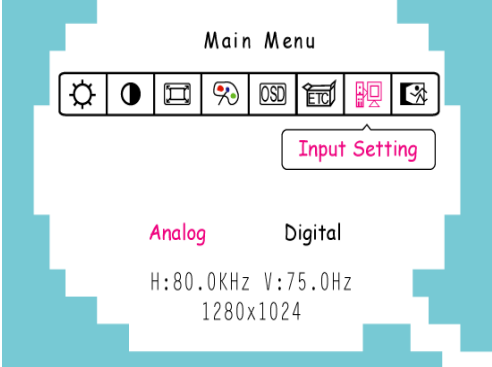  OSD Diagram	OSD Description
	<p><b>Recall the factory settings:</b> Select the 「 Factory Preset 」 option to reset to the monitor's default setting. This will erase the current settings. Enter the option and select On or Off.</p>
	<p><b>Input Setting:</b> Select the 「 Input Setting 」 option to change between the analog (D-Sub) or Digital (DVI) source. Enter the option and select Analog or Digital.</p>

## PLUG AND PLAY

### Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities. The DDC2B is a bidirectional data channel based on the I<sup>2</sup>C protocol. The host can request EDID information over the DDC2B channel.

**THIS MONITOR WILL APPEAR TO BE NON-FUNCTIONAL IF THERE IS NO VIDEO INPUT SIGNAL. IN ORDER FOR THIS MONITOR TO OPERATE PROPERLY, THERE MUST BE A VIDEO INPUT SIGNAL.**

This monitor meets the Green monitor standards as set by the Video Electronics Standards Association (VESA) and/or the United States Environmental Protection Agency (EPA) and The Swedish Confederation Employees (NUTEK). This feature is designed to conserve electrical energy by reducing power consumption when there is no video-input signal present. When there is no video input signal this monitor, following a time-out period, will automatically switch to an OFF mode. This reduces the monitor's internal power supply consumption. After the video input signal is restored, full power is restored and the display is automatically redrawn. The appearance is similar to a "Screen Saver" feature except the display is completely off. The display is restored by pressing a key on the keyboard, or clicking the mouse.

## TECHNICAL SUPPORT (FAQ)

### Q & A FOR GENERAL DEFECTIVE

PROBLEM & QUESTION	POSSIBLE SOLUTION
Power LED is not on	<ul style="list-style-type: none"> <li>*Check if the Power Switch is in the ON position</li> <li>*Power Cord should be connected</li> </ul>
No Plug & Play	<ul style="list-style-type: none"> <li>*Check if the PC system is Plug &amp; Play compatible</li> <li>*Check if the Video Card is Plug &amp; Play compatible</li> <li>*Check if the D-15 plug pin of Video Cable is bent</li> </ul>
Picture is dim, bright or fuzzy	<ul style="list-style-type: none"> <li>*Adjust the Clock, Phase, Contrast or Brightness Controls.</li> </ul>
Picture bounces or a wave pattern is present in the picture	<ul style="list-style-type: none"> <li>*Move away electrical devices that may cause electrical interference.</li> </ul>
The power LED is ON (orange) but there's no video or no picture.	<ul style="list-style-type: none"> <li>*Computer Power Switch should be in the ON position.</li> <li>*Computer Video Card should be snugly seated in its slot</li> <li>*Make sure monitor's video cable is properly connected to the computer.</li> <li>*Inspect monitor's video cable and make sure none of the pins are bent.</li> <li>*Make sure computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.</li> </ul>
Missing one of the primary colors (RED, GREEN, or BLUE)	<ul style="list-style-type: none"> <li>*Inspect the monitor's video cable and make sure that none of the pins are bent.</li> </ul>
Screen image is not centered or sized properly.	<ul style="list-style-type: none"> <li>*Adjust pixel frequency CLOCK and PHASE or press hot-key (AUTO)</li> </ul>
Picture has color defects (white does not look white)	<ul style="list-style-type: none"> <li>*Adjust RGB color or select color temperature</li> </ul>
Horizontal or vertical disturbances on the screen	<ul style="list-style-type: none"> <li>*Use win 95/98/2000/NT/ME/XP shut-down mode Adjust CLOCK and PHASE or perform hot- key (AUTO).</li> </ul>

## **ERROR MESSAGE & POSSIBLE SOLUTION**

▪ **CABLE NOT CONNECTED :**

1. Check that the signal-cable is properly connected, If the connector is loose, tighten the connector's screws.
2. Check the signal-cable's connection pins for damage.

▪ **INPUT NOT SUPPORT :**

Your computer has been set to unsuitable display mode, set the computer to display mode given in the following table.

**FACTORY PRESET TIMING TABLE:**

MODE	RESOLUTION	HORIZONTAL FREQUENCY (KHz)	VERTICAL FREQUENCY (Hz)
1	640x350 @70Hz	31.469	70.087
2	640x400 @56Hz	24.827	56.424
3	640x400 @70Hz	31.469	70.090
4	640x480 @60Hz	31.469	59.940
5	640x480 @67Hz	35.000	66.667
6	640x480 @72Hz	37.861	72.809
7	640x480 @75Hz	37.500	75.000
8	720x400 @70Hz	31.469	70.087
9	800x600 @56Hz	35.156	56.250
10	800x600 @60Hz	37.879	60.317
11	800x600 @72Hz	48.077	72.188
12	800x600 @75Hz	46.875	75.000
13	832x624 @74.6Hz	49.725	74.500
14	1024x768 @60Hz	48.363	60.004
15	1024x768 @66Hz	53.964	66.132
16	1024x768 @70Hz	56.476	70.069
17	1024x768 @75Hz	60.023	75.029
18	1024x768 @75Hz	60.150	74.720
19	1152x864 @75Hz	67.500	75.000
20	1152x870 @75Hz	68.681	75.062
21	1152x900 @66Hz	61.846	66.004
22	1280x720 @60Hz	45.000	60.000
23	1280x768 @60Hz	47.776	59.870
24	1280x960 @60Hz	60.000	60.000
25	1280x1024 @60Hz	63.981	60.020
26	1280x1024 @75Hz	79.976	75.025

# APPENDIX

 
## SPECIFICATIONS

LCD Panel	Driving system	TFT Color LCD
	Size	48.2cm(19.0")
	Pixel pitch	0.294mm(H) x 0.294mm(V)
	Brightness	300cd/m <sup>2</sup> (Typical)
	Contrast	700:1 (Typical)
	Viewable angle	150° (H) 135° (V)
	Response time	8 ms
Input	Video	R,G,B Analog Interface Digital (Dual-Input Model) H/V TTL
	H-Frequency	31KHz – 80KHz
	V-Frequency	55 – 75Hz
Display Colors		16.2M Colors
Max. Resolution		1280 x 1024 @75Hz
Plug & Play		VESA DDC2B™
EPA ENERGY STAR®	ON Mode	≤43W
	OFF Mode	≤1W
Audio output		Rated Power 1.2W rms (Per channel)
Input Connector		D-Sub 15pin DVI-D 24pin (Dual-Input Model)
Maximum Screen Size		Hor. :376.2mm Ver. :301.06mm
Power Source		100~240VAC,50/60HZ
Environmental Considerations		Operating Temp: 5° to 40°C Storage Temp.: -20° to 65°C Operating Humidity: 20% to 80%
Dimensions		407(W) x 406(H) x 194(D) mm 16.02(W)x15.98”(H)x7.64”(D)
Weight (GW/NW)		6.5 kg / 5.3 kg 14.3 lb /11.5 lb
Regulatory Compliance		CCC, UL, VCCI, C-TICK, Nemko GS, BSMI, CE, CB, FCC, CUL, TCO'03, NOM

\*\*\*The above specification is subject to actual panel specification and is subject to change without prior notice.


## CONNECTOR PIN ASSIGNMENT

- **15 - Pin Color Display Signal Cable:**

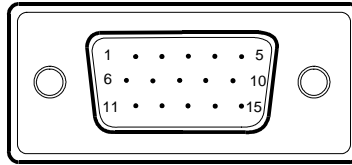

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1.	Red	9.	+5V
2.	Green	10.	Ground
3.	Blue	11.	Ground
4.	Ground	12.	DDC-Serial Data
5.	Ground	13.	H-Sync
6.	R-Ground	14.	V-Sync
7.	G-Ground	15.	DDC-Serial Clock
8.	B-Ground		

 - **24 - Pin Color Display Signal Cable: (Dual Input Mode)**

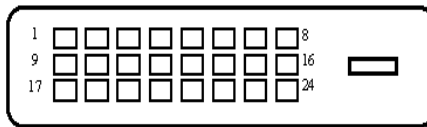

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1.	TMDS Data 2-	13.	TMDS Data 3+
2.	TMDS Data 2+	14.	+5V Power
3.	TMDS Data 2/4 Shield	15.	Ground(for+5V)
4.	TMDS Data 4-	16.	Hot Plug Detect
5.	TMDS Data 4+	17.	TMDS Data 0-
6.	DDC Clock	18.	TMDS Data 0+
7.	DDC Data	19.	TMDS Data 0/5 Shield
8.	Analog Vertical sync	20.	TMDS Data 5-
9.	TMDS Data 1-	21.	TMDS Data 5+
10.	TMDS Data 1+	22.	TMDS Clock Shield
11.	TMDS Data 1/3 Shield	23.	TMDS Clock +
12.	TMDS Data 3-	24.	TMDS Clock -