



Digital
FM Stereo Modulator
Multi-Channel PLL Synthesizer

MODEL : EFM-01
OWNER'S MANUAL

FEATURE

- High reliability PLL synthesized tuning system
- Provide 8 carrier frequencies
- High isolation from nonessential frequencies
- Compact and light, Can be placed behind the radio inside the dashboard.

SPECIFICATIONS

POWER SUPPLY	DC 12V	≅50mA
CARRIER FREQUENCY	88.5MHz-89.9MHz	8 step by 0.2MHz
TUNING SYSTEM	PLL synthesizer	
INPUT IMPEDANCE	≅10KΩ	AUDIO INPUT L&R
INPUT TERMINAL	RCA JACK	L&R
FUSE	250V 1A	Tube type, 6 × 30mm
FROM ANT CABLE	RCA jack	Coaxial
TO TUNER CABLE	RCA plug	Coaxial

- Design and specifications are subject to change without notice.

- WARNING** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK.
DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
- CAUTION** TO PREVENT ELECTRIC SHOCK MATCH POLARITY OF
POWER SOURCE, USE DC12V OF CAR BATTERY ONLY.

IMPORTANT SAFETY INSTRUCTIONS

This unit is fully transistorized and does not contain any parts that can be repaired by the user.

DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

1. Read owner' s manual

After unpacking this unit read the owner' s manual carefully, and follow all the operating and other instructions.

2. Power sources

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your circumference, consult your product dealer.

3. Heat

The product should be situated away from heat sources such as radiators, heat register or other products (including amplifiers) that produce heat.

4. Water and Moisture

Do not use this product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub in a wet basement or near a swimming pool and the lake.

5. Object and Liquid entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spil liquid of any kind on the product.

 
6. Burden

Do not place a heavy object on or step on the product. The object may fall, causing serious personal injury and serious damage to the product.

7. Connecting

When you connect the product to other equipment, turn off the power and unplug all of the equipment from the outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner` s manual of the other equipment carefully and follow the instructions when marking any connections.

CONNECTING TO CAR FM RADIO SYSTEM

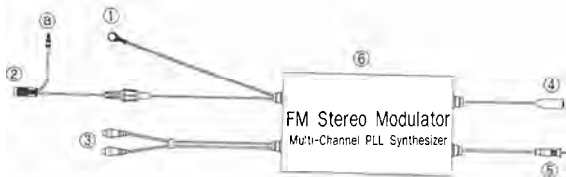


1. Connect GROUND terminal (①). then connect the terminal of fuse cable (②) to DC 12V which to be supplied when you turn on your instruments.
Cut and delete terminal (Ⓐ) if you do not use it. It may cause electric short if you leave as it is, so you may be exposed to any risk or accidents.
2. Connect AUDIO INPUT jack (③) from audio output jack of audio sources. VCR, CD player, DVD, MD, etc.,. This unit is prepared for stereo sound.
white color jack is for LEFT sound and red color jack is for RIGHT sound.
3. Connect FROM ANTENNA input jack (④) from an outside FM antenna.
4. Connect TO TUNER antenna plug (⑤) to antenna input jack of FM tuner on your car.
5. Set this unit (⑥) behind the FM radio inside the dashboard.


HOW TO SET FM FREQUENCY

You can set the FM carrier frequency which can be use in your car FM tuner by setting DIP switch that it is located on bottom side.

 
How to set FM carrier frequencies are as follows.



 88.5 MHz



 
88.7 MHz




88.9 MHz



 
89.1 MHz



 
89.3 MHz



 89.5 MHz



 89.7 MHz



89.9 MHz

※ Pin 1 is not available.