



Model: PM15LCD  
4:3 DIGITAL LCD-Monitor

# 15" LCD MONITOR

OPERATING MANUAL



[www.pyleaudio.com](http://www.pyleaudio.com)

---

## Contents

1	PREFACE	2
2	SAFETY PRECAUTIONS	2
3	FRONT BACK/SIDE CONNECTIONS OF LCD	4
4	INSTALLTION DRAWINGS	Power Cable Connection 5 Connecting Antenna 5 Video Connection 6 S-Video Connection 6 Y Pb Pr Connection 7 PC-RGB Connection 7
5	REMOTE CONTROL FUNCTIONS	Remote control instructions in TV mode 8 Battery Installation 9 Battery Usage Caution 9
6	CONFIGURATION OF THE LCD	Enter picture menu 10 Enter sound menu 10 Enter Timer menu 11 Enter other setting menu 11
9	TROUBLESHOOTING AND ADVICE	12
10	SPECIFICATIONS	13

---

---

## 1. PREFACE

Thank you for buying this TV! Please read this manual thoroughly before operating the monitor. Make sure the monitor was not damaged in transit. Should the monitor is damaged, do not install it and contact your dealer. Check that you have all the accessories according to the model.

## 2. SAFETY PRECAUTIONS


### Preparation



Put the monitor on a stable surface.



Do not place any material on the monitor.

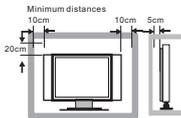

If you have a wall mount, check that it is steady



Do not block or cover the ventilation openings on the monitor



### Connexion cables


Power cord and cables must be properly routed and protected to prevent people from stepping on them and causing the monitor to fall.

---

### Heating sources and humidity



Keep the monitor dry and away from humidity.

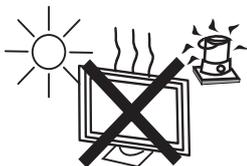

Keep the monitor away from heat sources

### Cleaning and maintenance



Unplug the monitor before cleaning it. Do not use solvents or liquids to clean the monitor.

Only clean the monitor with a soft and dry cloth.

In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits fire or other incidents.

### Departure in holidays



Unplug the LCD during lighting storms or when unused for long periods of time.

---


### 3. FRONT BACK/SIDE CONNECTIONS OF LCD

#### Front View



1. Press "POWER" Switch on the LCD TV when at standby mode or vice versa.
2. Press "UP" or "DOWN" to select option in menu
3. Press "V+" or "V-" to increase or decrease the sound level.
4. Press "MENU" to bring up the main menu to the screen
5. Press "SOURCE" to select the input source

#### Back View and Control Connections

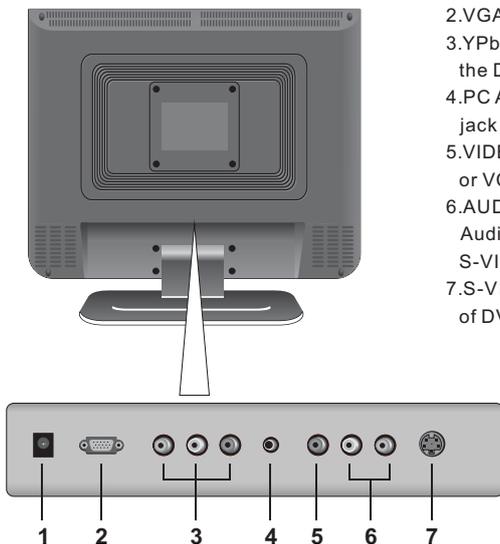

1. DC 12V IN: DC input socket
2. VGA: Connect the PC-RGB output jack of PC
3. YPbPr: Connect the DVD YPbPr output jack of the DVD Player
4. PC AUDIO INPUT: Connect the Audio output jack of PC
5. VIDEO: Connect the Video output jack of DVD or VCR
6. AUDIO LR INPUT: Connect the left and right Audio output jacks of DVD or VCR for VIDEO / S-VIDEO / YPbPr
7. S-VIDEO: Connect the S-VIDEO output jack of DVD or VCR


---

## 4. TV INSTALLTION DRAWINGS


### Power Cable Connection

Connect the power cord correctly as shown.

Press the POWER switch of your LCD VT to switch on the LCD TV. The power indicator on the front panel lights up in green.

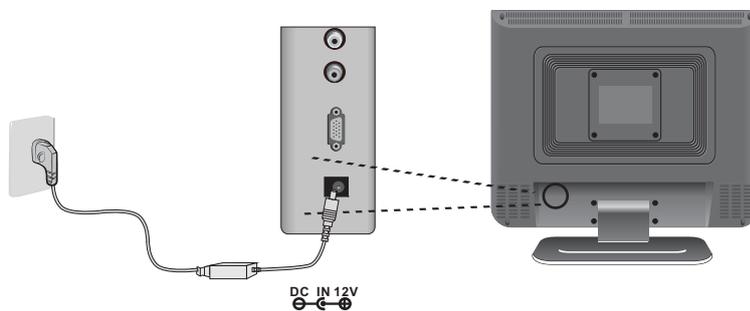


### Connecting Antenna

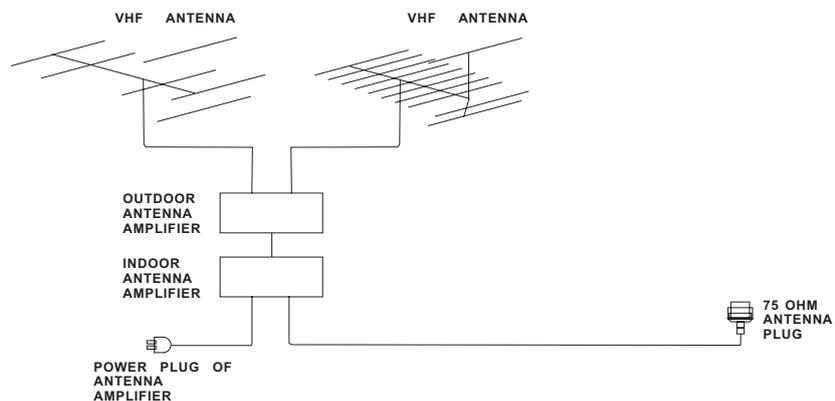

To ensure good picture and sound, TV antenna system needs to be installed. The antenna system as shown can be sourced from TV equipment shops, which will provide service for correct installation and connection. After installation, insert the 75-ohm antenna plug into the antenna jack as shown. In case of signal of closed circuit TV,


---

## Video Connection

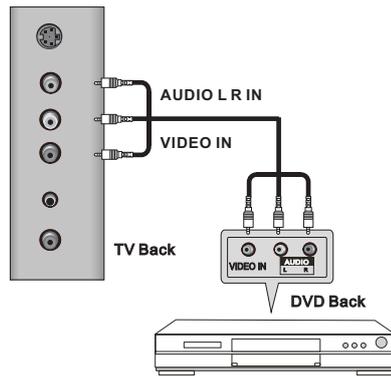

Connect the VIDEO and AUDIO output jack of the DVD or VCR to the AV IN jacks on the set using the RCA cable.  
Select the AV input source with using the SOURCE button on the remote control.


## S-Video Connection

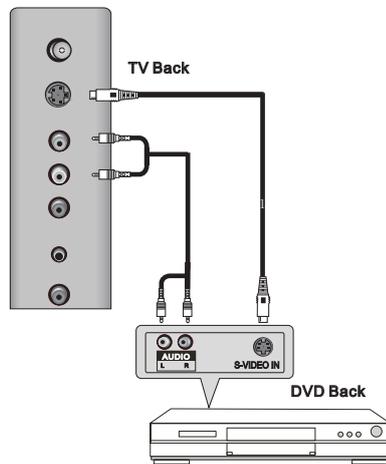

Connect the S-VIDEO output of the DVD or VCR to the S-VIDEO input on the set. The picture quality is improved; compared to connecting a regular VCR to the video input. Connect the Audio output of the DVD or VCR to the Audio input jacks on the set using the RCA cable.  
Select S-VIDEO input source with using the SOURCE button on the remote control.

---


## Y Pb Pr Connection

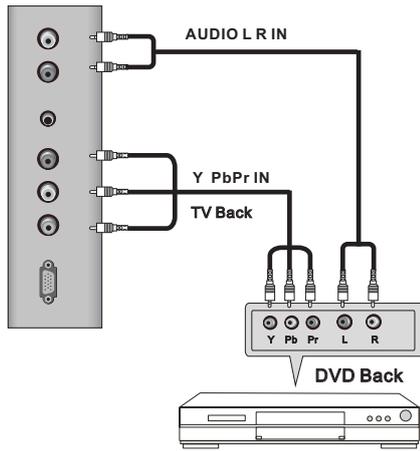

Connect the YPbPr output of the DVD or VCR to the YPbPr input on the set. The picture quality is improved; compared to connecting a regular VCR to the video input. Connect the Audio output of the DVD or VCR to the Audio input jacks on the set using the RCA cable. Select HD input source with using the SOURCE button on the remote control.

---


## PC-RGB Connection

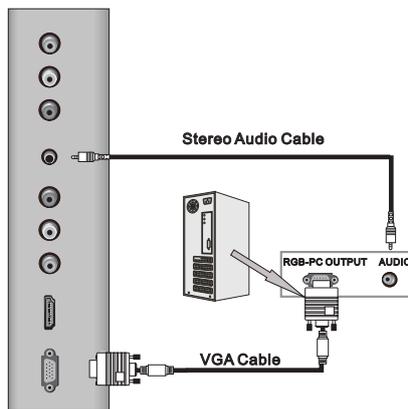

Connect the RGB output of the PC to the VGA in jack on the set. Connect the PC AUDIO output of the PC to the PC AUDIO in jack on the set. Select the VGA input source with using SOURCE button.

---

## 5. REMOTE CONTROL FUNCTIONS

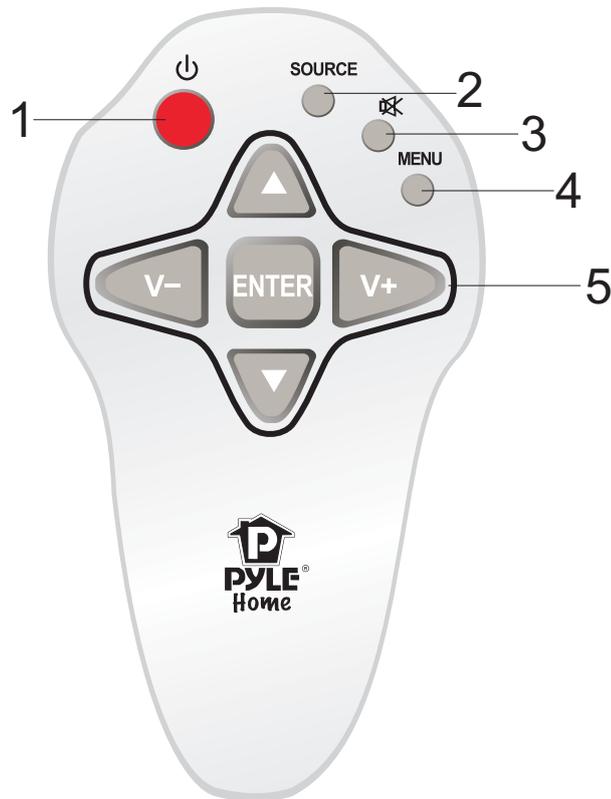


### 6.1 Remote control instructions in TV mode

1. **POWER** Switch on LCD TV when at standby mode or vice versa.
2. **SOURCE** Press to cycle through the input source in following.
3. **MUTE** Press to mute the sound. Press again or press V+ to unmuted.
4. **MENU** Brings up the main menu to the screen.
5. **THUMB STICK (▲ / ▼ / ◀ / ▶ / ENTER)** Allows you to navigate the on-screen menus and adjust the system settings to your preference.

---

## 5.2 Battery Installation

- a) Open the cover
- b) AA size batteries, When inserting the batteries, make sure correct polarities as per "+" and "-" marks on the batteries and within the battery compartment
- c) Replace the battery cover

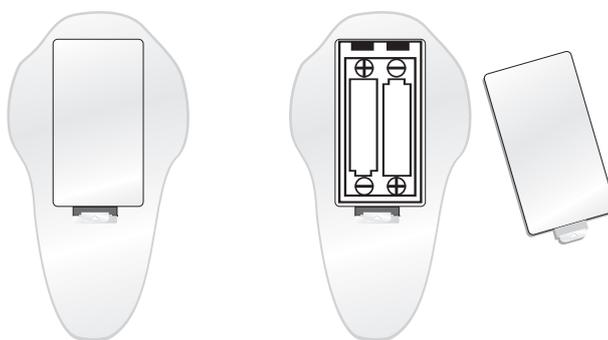

## 5.3 Battery Usage Caution

**To prevent battery leakage which may result in bodily injury or damage to the remote:**

1. Install all batteries correctly, and as marked on the remote control.
2. Do not mix batteries: (OLD and NEW or CARBON and ALKALINE, etc)
3. Remove batteries when the remote is not used for a long time.

---

## 6. CONFIGURATION OF THE LCD

### 6.1 Enter picture menu

1. Press MENU key to open the main menu,




2. Press V-/ + to select:

3. Press V- - enter setting picture menu, the outline border turns green.

4. Then press ▲/▼ to select options in the picture menu

5. After setting, press MENU to quit. Or wait for few seconds it will be quit automatically.

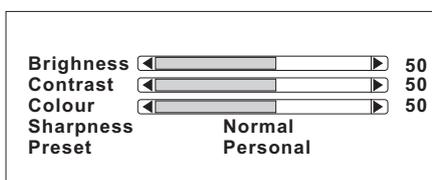

#### Options:

##### 1. Brightness

Press V- - to darken the picture.

Press V+ to brighten the picture.

##### 2. Contrast

Press V- - to decrease contrast

Press V+ to increase contrast

##### 3. Colour

Press V- - to decrease color intensity

Press V+ to increase color intensity

##### 4. Sharpness

Press V- - to soften the picture

Press V+ to sharpen the picture

##### 5. Preset

Press V-/ + to select picture mode

Remark:

Personal ► Soft ► Standard ► Dynamic



### 6.2 Enter sound menu

1. Press MENU key to open the main menu,



2. Press V-/ + to select:

3. Press V- - enter setting sound menu, the outline border turns red.

4. Press ▲/▼ to select option in the sound menu

5. After setting, press MENU to quit. Or wait for few seconds it will be quit automatically.

#### Options:

##### 1. Volume


Press V- - to decrease Volume

Press V+ to increase Volume

##### 2. Mute

When on is muting Volume

When off is closed it.

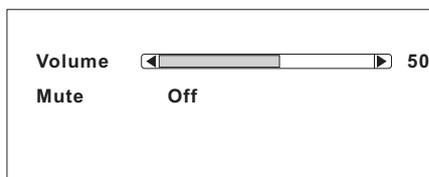

---

### 6.3 Enter Timer menu

1. Press MENU key to open the menu,



2. Press V-/ + in main menu to move menu bar, select
3. Press V- enters other setting menu.
4. Then press ▲/▼ to select option in submenu
5. After setting, press MENU to quit. Or wait for several seconds it will be quit automatically.

**Option:**

**1. Clock**

If you select clock, press 0-9 to set time.

**2. Reminder timer**

When get the right time, the TV will be off automatically

If you select Reminder timer, press V-/ + to select time

Remark:

Off ▶ 5 ▶ 10 ▶ 15 ▶ ... ▶ 115 ▶ 120



**3. off timer**

Press No. key to set the time when clock timer is the same as the off timer then power off the TV.

**4. Switch timer,**

If you select Switch timer, press No. key to set the time when you want to switch program

Clock	--:--
Reminder timer	Off
Off time	--:--
Swith time	--:--

### 6.4 Enter other setting menu

1. Press MENU key to open the menu,

2. Press V-/ + in main menu to move menu bar, select



3. Press V- enters other setting menu.

4. Then press ▲/▼ to select option in submenu

5. After setting, press MENU to quit. Or wait for several seconds it will be quit automatically.

Noise Reduction	Off
Language	English

**Option:**

**1. Noise reduction**

Press V-/ + to off/on the Noise reduction.

**2. Language**

Press V-/ + to select language

Remark:

English ▶ Francais ▶ Español ▶ Portugués ▶ Deutsch ▶ Italy



---

## 7. TROUBLESHOOTING AND ADVICE

Before calling our SAS centre, please check if you can solve the troubleshooting by yourself.

Troubleshooting	Control
No signal	Please check that all cables and cord's are correctly plugged in.
No color shades	Adjust the contrast, the color and the brightness
Stain show on the screen.	May be result from a lighting signal from car, motor, neon light and other electrical devices or appliances.
Double or multiple display image	May be the result of an electrical wave disturb from other TV, Computer and Game machine or Radio
Snow on the screen	The cables of the antenna are not correctly plugged in.
The remote control does not work	Please check the batteries order and alignment. Check that the IR of the remote control is not hidden by something.
"Zip" made noise on TV cover	Even if the display image is correct, the noise may come from an unsteady fixation of the panel.
No sound	Make sure that you have not press the MUTE button of the panel or of the remote control.

## 8. SPECIFICATIONS

<b>Screen Size</b>	15 Inch	
<b>Display Type</b>	TFT LCD	
<b>Resolution(Pixel)</b>	1024 X 768	
<b>Brightness</b>	250cd/m <sup>2</sup>	
<b>Color</b>	16.7M	
<b>Contrast Ratio</b>	450 : 1	
<b>Aspect Ratio</b>	4:3	
<b>Power Source</b>	AC 100-240VAC, 50/60HZ DC 12V Adapter ≤60W	
<b>Video Input Format</b>	PAL / NTSC	
<b>Antenna Input</b>	Standard antenna socket 75 Ω	
<b>Audio Output</b>	L / R 3WX2	
<b>Input</b>	<b>Video</b>	Video 1.0Vp-p 75 Ω; RCA
	<b>S-Video</b>	Y:1.0Vp-p±3db C:0.3Vp-p±3db
	<b>PC</b>	800 600/60Hz 1024 600/60Hz 1280 1024/60Hz
	<b>Audio (S-Video/Video/YPbPr/PC)</b>	R/L 200mVrms (max3.0vp-p) 20K Ω RCA
<b>Weight</b>	3 kgs	
<b>Dimensions (with stand)</b>	400(L) 360 (H) 130 (W) mm	

This manual is only for your reference, any change to the design and specification will not be advised.