Models: PAP 113, PAP 113-S, **PAP 113-W** 

## **IMPORTANT!** Read entire instruction sheet before you start installation and assembly.

Before you start check the parts list below to make sure all of the parts shown are included.

## **A** WARNING

 Installer must verify that the ceiling will safely support four times the combined weight of all attached equipment and hardware.



Note: Actual parts may appear slightly different than illustrated.

\*Notch indicates front of projector. Turn projector upside down. Attach adapter plate (AA) to projector using three screws (BB).



Adhere foam pads (FF) to L-brackets (DD). 2 Secure projector by attaching two L-brackets to adapter plate (AA) using two screws (EE). Tighten all screws using 4 mm security allen wrench (CC).





TO L-BRACKETS

For customer service call 1-800-729-0307 or 708-865-8870.