

# SAMSUNG 790DF/990DF

ndex   Safety Instruc	tions Introduction Setup Adjusti	ng Your Monitor   Troubleshooting   Specifications   Information
. Ma		
1	🚺 Main Page	On-Screen Display
Index	Safety Instructions	Troubleshooting
	Notational	🕒 Check List
	🕞 Power	🕒 Q & A
	Installation	Self-Test Feature Check
	💽 Cleaning	
	🕒 Other	
	Introduction	Specifications
	🕞 Unpacking	G General Specifications
	🕞 Front	🕞 Preset Timing Modes
	🕞 Rear	O PowerSaver
	G Bottom	
	Setup	Information
	Connecting Your Monitor	G Service
	Installing the Monitor Driver	G Terms
	- Automatic	G Regulatory
	– Manual	G Natural Color
	Base Installation	G Authority





Do not touch

Grounding to prevent an electric shock

Index   Selety Instruction	ons Introduction	Setup   Adjusting Your Monitor   Troubleshooting   Specifications   Information
	•	When not used for extended periods of time, set your PC to DPMS. If using a screen saver, set it to the active screen mode.
Notational     Notational     Power     Installation		<ul> <li>If the size of your monitor is small, or if the same image is present for long periods of time, you may see afterimages due to damage to the fluorescent substance on the inside of the CDT.</li> </ul>
<ul> <li>Clean</li> <li>Other</li> </ul>		<ul> <li>Do not use a damaged or loose plug.</li> <li>This may cause an electric shock or fire.</li> </ul>
	0	<ul> <li>Do not pull the plug out by the wire nor touch the plug with wet hands.</li> <li>This may cause an electric shock or fire.</li> </ul>
·	J 🗳	<ul> <li>Use only a properly grounded plug and receptacle.</li> <li>An improper ground may cause electric shock or equipment damage.</li> </ul>
		<ul> <li>Do not excessively bend the plug and wire nor place heavy objects upon them, which could cause damage.</li> <li>Failure to do so may cause an electric shock or fire.</li> </ul>
		<ul> <li>Disconnect the plug from the outlet during storms or lightening or if it is not used for a long period of time.</li> <li>Failure to do so may cause an electric shock or fire.</li> </ul>
	Castral D	<ul> <li>Do not connect too many extension cords or plugs to an outlet.</li> <li>This may cause a fire.</li> </ul>





#### Do not use the monitor without the monitor stand.

- It could break down or cause a fire due to bad ventilation.
- If the monitor must be used without the supplied stand, take steps to insure proper ventilation.





- Do not set a glass of water, chemicals or any small metal objects on the monitor.
  - This may cause damage, electric shock or a fire.
  - If a foreign substance gets into the monitor, disconnect the plug and then contact a service center.







Setup | Adjusting Your Monitor | Troubleshooting | Specifications | Information

- **1. Menu button** Opens the OSD menu. Also used to exit the OSD menu or return to the previous menu.
- 2. Adjust buttons These buttons allow you to highlight and adjust items in the menu.
- 3. Enter button Used to select the OSD menu.

Index

Unpacking
 Front
 Rear
 Bottom

Safety Instructions

- 4. Power button Use this button to turn the monitor on and off.
- **5. Power indicator** This light glows green during normal operation, and blinks green once as the monitor saves your adjustments.
- **Note:** See PowerSaver described in the manual for further information regarding power saving functions. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods.



### (The configuration at the back of the monitor may vary from product to product.)

1. Power port	Connect the power cord for your monitor to the power port on the back of the monitor.
2. Signal Cable	Connect the signal cable to the video port on your computer, video board, video card, or graphics card.

Note: See Connecting Your Monitor for further information regarding cable connections.



- Signal Cable Connect the signal cable to the video port on your computer, video board, video card, or graphics card.
   Power port Connect the power cord for your monitor to the power port on the back of
- the monitor.
- 3. Tilt/Swivel Base You can separate the base from the monitor.

1



- 1. Connect the power cord for your monitor to the power port on the back of the monitor. Plug the power cord for the monitor into a nearby outlet.
- 2. Connect the signal cable to the video port on your computer, video board, video card, or graphics card.
- 3. If you are using a Macintosh computer, connect the cable to a Macintosh adapter, and set the pins on your adapter(Adapter not included). A PC-compatible computer does not need an adapter.
- 4. Turn on your computer and monitor. If your monitor displays an image, installation is complete.

### Setup-For Multimedia model



- 1. Turn off your computer and unplug the power cord.
- 2. Connect the end of the signal cable to your computer's video port(video board, video card or graphics card).
- Connect one end of a sound cable to the Stereo Output jack on your sound card or computer.Connect the other end of the cable to the Stereo Input jack on the back of the monitor stand

Connect one end of the other sound cable to the Mic Input jack on your sound card or computer.Connect the other end of this cable to the Mic By-pass jack on the back of the nonitor stand.

- 4. Plug the DC power cord from the stand into a nearby outlet.
- 5. Connect the power cord for your monitor to the power port on the back of the monitor.
- 6. Plug the power cord for the monitor and the power cord for your computer into a nearby outlet.
- 7. Turn on your computer and monitor.
- 8. Turn up or down the On-Off control terminal on the stand of the monitor until it clicks.
- 9. Execute a sound program, music or sound effect in your computer and then adjust the volume by turning up or down until the sound volume is appropriate.
- 10. Adjust the treble and bass.
  - **Note:** Sound distortion may occur when the monitor is placed on top of a mostly hollow cabinet such as your computer. If this occurs, place a pad or magazine beneath the monitor stand. High sound volume may also cause sound distortion; lower the volume.

### **Multimedia Speaker Stand**



#### 1. Mic By-pass Jack

To transmit your voice, connect a sound cable from the Mic By-pass jack to the mic in jack on the sound card slot in your computer.

- 2. Stereo Input Jack Connect a sound cable from the input source(sound card,computer,CD-ROM drive).
- DC Power Cord Connect DC power cord to monitor DC 12V output jack.
- 4. Power Indicator

Glows green when the speakers are turned on. 5. **On/Off Volume** 

- Turns On/Off and adjusts the output volume. 6. **Treble Control**
- Use to control high frequencies.
- 7. Bass Control
- Use to control low frequencies.
- Mic Input Jack To transmit your voice, connect a microphone to this jack.
- 9. Headphone Jack
  - To listen in privacy, connect headphones here.
- 10. Detachable Stand Top

Index   Salety In:	dructions	Introduction	Setup   Adjusti	ng Your Monitor	Troubleshooting	Specifications	Information
		Automatic		Manual			
Setup Connecting Your Monitor Installing the Monitor Driver Base Installation	Note	included with system to an have.	this monitor. other. Follow t	Driver installat the directions a	or the monitor dr ion is slightly diff s appropriate for	erent from one the operating s	operating ystem you
		Prepare a blar here.	nk disk and dov	vnload the driver	program file at the	e Internet web sit	e shown
		Internet web s	http://www http://www	.samsungusa.co .sec.co.kr/monito	or.com/ (WorldWid m/monitor/ (USA) pr/ (Korea) pr.com.cn/ (China)	e)	
	1.	<b>Windows ME</b> Insert CD into t Click <b>"Window</b>		iver.			
	3.	Choose your m Pick the display adap 53 Inc. Savage4 Pick the ma SyncMonter 7030F20 SyncMonter 7030F20	onitor model in ter which yes want to in nitor which yes want to rough yes want to rough which yes wan	estall the monitor	nen click the <b>"OK"</b>	button.	
	4.	matches the name or on the back labe restart Windows in	II" button in the emerator name that a printed on the front of L II you select the w the "Sale Mode" and elect the correct mo	exactly of your monitor rong monitor, d use this	dow.		
	5.	Monitor driver i	nstallation is co	ompleted.			
	•	Windows XP/200	00				

- Insert CD into the CD-ROM driver.
   Click "Windows XP/2000 Driver".
   Choose your monitor model in the model list, then click the "OK" button.



4. Click the "Install" button in the "Warning" window.



5. If you can see following **"Message"** window, then click the **"Continue Anyway"** button. Then click **"OK"** button.



This monitor driver is under certifying MS logo, and this installation don't damage your system. The certified driver will be posted on Samsung Monitor Homepage http://www.samsung-monitor.com/.

6. Monitor driver installation is completed.

Index	Salety Instr	ructions	Introduction	Setup	Adjusting	Your Monitor	Troubleshooting	Specifications	Information
	Setup ecting Your	Window	Automatic s XP   Window		Windows Me	Manual	) Linux		
Monit Insta Moni		p Note	included w	ith this n	nonitor. D	river installat	or the monitor dr ion is slightly diff s appropriate for	erent from one	operating
			Prepare a b here.	lank disk	and down	load the driver	program file at the	e Internet web sit	e shown
			Internet web	htt htt	p://www.sa p://www.se	amsungusa.co ec.co.kr/monite	or.com/ (WorldWid m/monitor/ (USA) or/ (Korea) or.com.cn/ (China)	le)	

Microsoft<sup>®</sup> Windows<sup>®</sup> XP Operating System

- 1. Insert CD into the CD-ROM driver.
- 2. Click "Start" -> "Control Panel" then click the "Appearance and Themes" Icon.



3. Click "Display" icon and choose the "Settings" tab then click "Advanced..".

A STATE OF		Display Preparities [2]	
program and the second test	× 0-	Thereas   Deskings   Summ Saves   Appenances   Deskings	_
Control of the c		Disable: Plag and Plag Manker on 20 Pagelant II Destination Marker Table by 768 plants Table productions. Adjustment DB: Cancel (2014)	

4. Click the "Properties" button on the "Monitor" tab and select "Driver" tab.



5. Click "Update Driver.." and select "Install from a list or.." then click "Next" button.



6. Select "Don't search ,I will.." then click "Next" and then click "Have disk".



7. Click the **"Browse**" button then choose A:(D:\Driver) and choose your monitor model in the model list and click the **"Next**" button.



8. If you can see following "Message" window, then click the "Continue Anyway" button. Then click "OK" button.



This monitor driver is under certifying MS logo, and this installation don't damage your system. The certified driver will be posted on Samsung Monitor Homepage http://www.samsung-monitor.com/.

9. Click the "Close" button then click "OK" button continually.



10. Monitor driver installation is completed.

Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Operating System

🔯 When you can see "Digital Signature Not Found" on your monitor, follow these steps.

- 1. Choose "OK" button on the "Insert disk" window.
- 2. Click the "Browse" button on the "File Needed" window.
- 3. Choose A:(D:\Driver) then click the "Open" button and then click "OK" button.
- 🔯 How to install
- 1. Click "Start", "Setting", "Control Panel".
- 2. Double click the "Display" Icon.
- 3. Choose the "Settings" tab and then click "Advanced..".
- 4. Choose "Monitor".
  - Case1: If the "Properties" button is inactive, it means your monitor is properly configured. Please stop installation
  - Case2: If the "Properties" button is active, click the "Properties" button then follow next steps continually.
- 5. Click "Driver" and then click on "Update Driver.." then click on the "Next" button.
- 6. Choose "Display a list of the known drivers for this device so that I can choose a specific driver" then click "Next" and then click "Have disk".
- 7. Click the "Browse" button then choose A:(D:\Driver).
- 8. Click the "Open" button, then click "OK" button.
- 9. Choose your monitor model and click the "Next" button then click "Next" button.
- 10. Click the "Finish" button then the "Close" button.

If you can see the "Digital Signature Not Found" window then click the "Yes" button. And click the "Finish" button then the "Close" button.

#### Microsoft<sup>®</sup> Windows<sup>®</sup> Millennium Operating System

- Click "Start", "Setting", "Control Panel".
   Double click "Display" icon.
- 3. Select the "Settings" tab and click "Advanced Properties" button.

- 4. Select the "Monitor" tab.
- 5. Click the "Change" button in the "Monitor Type" area.
- 6. Choose "Specify the location of the driver".
- 7. Choose "Display a list of all the driver in a specific location.." then click "Next" button.
- 8. Click the "Have Disk" button
- 9. Specify A:\(D:\driver) then click "OK" button.
- 10. Select "Show all devices" and choose the monitor that corresponds to the one you connected to your computer and click "OK".
- 11. Continue choosing "Close" button and "OK" button until you close the Display Properties dialogue box.

(You can get some other screen for warning message or others, then click the appreciate option for your monitor.)

#### Microsoft<sup>®</sup> Windows<sup>®</sup> NT Operating System

- 1. Click Start, Settings, Control Panel, and then double-click Display icon.
- 2. In Display Registration Information window, click Settings Tab and then click **All Display Modes**.
- 3. Select a mode that you wish to use (Resolution, Number of colors and Vertical frequency) and then click **OK**.
- 4. Click **Apply** button if you see the screen working normally after clicking Test. If the screen is not normal, change to a different mode (lower mode of resolution, colors or frequency).

**Note:** If there is no Mode at **All Display Modes**, select the level of resolution and vertical frequency by referring to the Preset Display Modes in the user guide.

#### Linux Operating System

To execute X-Window, you need to make the X86Config file, which is a type of system setting file.

- 1. Press Enter at the first and the second screen after executing the X86Config file.
- 2. The third screen is for setting your mouse.
- 3. Set a mouse for your computer.
- 4. The next screen is for selecting a keyboard.
- 5. Set a Keyboard for your computer.
- 6. The next screen is for setting your monitor.
- 7. First of all, set a **horizontal frequency** for your monitor. (You can enter the frequency directly.)
- 8. Set a vertical frequency for your monitor. (You can enter the frequency directly.)
- 9. Enter the **model name of your monitor**. This information will not affect the actual execution of X-Window.
- 10. You have **finished** setting up your monitor. **Execute** X-Window after setting other requested hardware.





Note: The base is detachable.



If your monitor was supplied with the base detached, attach the base as follows.



Remove the twist-tie before attaching the base to the monitor.



### Attaching the Base

- 1. Place the monitor upside-down on a flat work surface.
- Align the tabs on the base with the corresponding slots on the bottom of the monitor.
   Press the base onto the monitor until the tabs are fully engaged in the slots.
- 4. Push the base toward the front of the monitor until the release latch clicks into the locked position. \* Do not bend the snap.

#### **Removing the Base**

- 5. Squeeze and pull up on the release latch on the base.
- 6. Push the base toward the back of the monitor and lift up to remove the base.

Note: The base will align with the monitor slots in only one position.





- 1. Opens the OSD menu. Also used to exit the OSD menu or return to the previous menu.
- 2. These buttons allow you to highlight and adjust items in the menu.
- 3. Used to select the OSD menu.

#### Direct-Access Features

| Brightness |



# | Contrast |



**OSD** Functions

2.	₽	•	0		8	Ð			
$\odot$	₿ĸ	Ð	Ð	Ð	sRGB				
₽	₽	ð	Ħ	I	070	[[]	1220	5	
0									





OSD	Description
⋩	Adjust the Brightness.
0	Adjust the Contrast.
()	A "Moiré" pattern can appear on your screen, looking like a series of concentric circles or arcs. To eliminate this pattern, use the horizontal moire adjustments.
þď	A "Moirë" pattern can appear on your screen, looking like a series of concentric circles or arcs. To eliminate this pattern, use the vertical moire adjustments.
8	The Degauss feature will remove color impurities caused by magnetic fields.
Ð	Use the recall feature to reset these monitor settings to their original levels: Position, Size, Pincushion, Trapezoid, Parallelogram, Pinbalance, Rotation, H-Moire, and V-Moire. <b>Note:</b> If you have selected "Yes", all settings listed above will be reset. All other settings will remain the same.



OSD	Description
lκ	Color temperature is a measure of the 'warmth' of the image colors. The available range is between 5000 to 9300K.
9	Used to adjust the monitor color setting.(Red)
9	Used to adjust the monitor color setting.(Green)
9	Used to adjust the monitor color setting.(Blue)
sRGB	When you adjust the Brightness and Contrast after sRGB mode is selected, sRGB mode exits.



OSD	Description
▣	Follow these instructions to change the horizontal position of the monitor's entire display.
Ē	Follow these instructions to change the vetical position of the monitor's entire display.
ŧ	Follow these instructions to change the horizontal size of the monitor's entire display.
1	Follow these instructions to change the vertical size of the monitor's entire display.
000	Adjust the pincushion setting when the sides of the display are bowed in or bowed out.
[]]]	Adjust the pinbalance setting when the sides of the display are bowed towards the left or right.





You can see the frequency (user control mode) used by the user, the polarity of the operational signals, the default frequency (default mode) set when you buy the monitor and the resolution level. **Note:** These screens do not allow any changes to the settings, they are for information only. Check List

Index

▶ Q & A

Self-Test Feature Check Before calling for service, check the information in this section to see if you can remedy any problems yourself. If you do need assistance, please call the phone number on the warranty card, the phone number on the Information section or contact your dealer.

Specifications Information

#### General

Safety Instructions Introduction Setup Adjusting Your Monitor

Symptom	Check List	Solutions		
No images on the screen. I cannot turn on the monitor.	Is the power cord connected properly?	Check the power cord connection and supply.		
	Can you see "	Check the signal cable connection.		
	If the power is on, reboot the computer to see the initial screen(the login screen), which can be seen.	If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000) and then change the frequency of the video card. (Refer to the Preset Timing Modes) Note: If the initial screen (the login		
		screen) does not appear, contact a service center or your dealer.		
	Can you see " 📧 ?" on the screen?	You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can properly handle.		
		Adjust the maximum resolution and frequency that the monitor can properly handle.		
	There is no image on the screen. Is the power indicator on the monitor blinking at 1 second intervals?	The monitor is in PowerSaver mode. Press a key on the keyboard or move the mouse to activate the monitor and restore the image on the screen.		
l cannot see the On Screen Display.	Have you locked the <b>On Screen</b> <b>Display (OSD)</b> Menu to prevent changes?	Unlock the OSD by pressing the MENU button for at least 10 seconds.		
The image on the screen is shaking.	Check the monitor configuration to see if it is in Interlace Mode. (Interlace Mode: Vertical frequency 43Hz, 87Hz(i), etc)	The signal from the video card exceeds the maximum resolution and frequency of the monitor.		
	Are there any magnetic products such as a power adapter, speaker or a high voltage wire near by?	Move the monitor away from anything that can create a strong magnetic field.		
	Is the voltage stable?	The screen image can appear to shake or vibrate at a particular time of day due to low supply voltage.		
	The screen image can also appo problem with the video card or t	ear to shake or vibrate if there is a the computer's main board.		

,				
The screen shows strange colors or just black and white.	Is the screen displaying only one color as if looking at the screen through a cellophane paper?	Check the signal cable connection. Make sure the video card is fully inserted in it's slot.		
	Have the screen colors become strange after running a program or due to a crash between applications?	Reboot the computer.		
	Has the video card been set properly?	Set the video card by referring to the video card manual.		
The screen suddenly has become	Have you changed the video card or the driver?	Adjust screen image position and size using the OSD.		
unbalanced.	Have you adjusted the resolution or frequency to the monitor?	Adjust the resolution and frequency at the video card. (Refer to the Preset Timing Modes).		
	The screen can be unbalanced or signals. Readjust Position by re	due to the cycle of the video card ferring to the OSD.		
The screen is out of focus or OSD cannot be adjusted.	Have you adjusted the resolution or frequency on the monitor?	Adjust the resolution and frequency of the video card. (Refer to the Preset Timing Modes).		
The screen is partially distorted.	Are there any magnetic products such as an adapter, speaker or a high voltage wire near the monitor?	Enter the OSD and perform a "Degauss". Keep the monitor away from any magnetic products.		
LED is blinking but no images on the screen.	Is the frequency properly adjusted when checking the Display Timing on the menu?	Adjust the frequency properly by referring to the video card manual and the Preset Timing Modes.		
		(The maximum frequency per resolution may differ from product to product.)		
There are only 16 colors shown on the screen. The screen colors have	Have the Windows colors been set properly?	For Windows ME/XP/2000: Set the colors properly at the <b>Control Panel</b> , <b>Display</b> , <b>Settings</b> .		
changed after changing the video card.	Has the video card been set properly?	Set the video card by referring to the video card manual.		
There is a message that reads "Unrecognized	Have you installed the monitor driver?	Install the monitor driver according to the Driver Installation Instructions.		
monitor, Plug & Play (VESA DDC) monitor found".	See the video card manual to see if the Plug & Play (VESA DDC) function can be supported.	Install the monitor driver according to the Driver Installation Instructions.		

#### Check the following items if there is trouble with the monitor.

- 1. Check if the power cord and the cable are properly connected to the computer.
- 2. Check if the computer beeps more than 3 times when booting.
  - (If it does, request an after-service for the main board of the computer.)
- 3. If you installed a new video card or if you assembled the PC, check if the installed the adapter (video) driver and the monitor driver.
- 4. Check if the scanning ratio of the video screen is set at 75Hz or 85Hz.
- (Do not exceed 60Hz when using the maximum resolution.)5. If you have problems in installing the adapter (video) driver, boot the computer in Safe Mode,

remove the Display Adapter at the "Control Panel, System, Device Administrator" and then reboot the computer to reinstall the adapter (video) driver.

Note: If problems repeatedly occur, contact an authorized service center.

 Check List
 Q & A
 Self-Test Feature Check

Question	Answer
How can I change the frequency?	Frequency can be changed by reconfiguring the video card.
	Note that video card support can vary, depending on the version of the driver used. (Refer to the computer or the video card manual for details.)
How can I adjust the resolution?	Windows ME/XP/2000: Set the resolution at the <b>Control Panel</b> , <b>Display</b> , <b>Settings</b> .
	* Contact the video card manufacturer for details.
How can I set the Power Saving function?	Windows ME/XP/2000: Set the function at BIOS-SETUP of the computer or the screen saver. (Refer to Windows/Computer Manual).
The monitor makes a sound when it is turned on.	This is normal as some sound may be generated when the metal case and the electromagnet, which are installed to block any electromagnetic waves, interact with each other.
How can I clean the outer case/Picture tube?	Disconnect the power cord and then clean the monitor with a soft cloth, using either a cleaning solution or plain water.
	Do not leave any remains of the detergent nor scratch the case. Do not allow any water to go inside the monitor.



- 2. Unplug the video cable from the back of the computer.
- 3. Turn on the monitor.
  - If your monitor works normally, the following screen appears.



|--|

## SAMSUNG 790DF



Failure of any of the boxes to appear indicates a problem with your monitor. This box also appears during normal operation if the video cable becomes disconnected or damaged.

4. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after using the previous procedure, check your video controller and computer system; your monitor is functioning properly.

### Warning Messages

If there is something wrong with the input signal, a message appears on the screen or the screen goes blank although the power indicator LED is still on. The message may indicate that the monitor is out of scan range or that you need to check the signal cable.



#### Environment

The location and the position of the monitor may influence the quality and other features of the monitor.

- 1. If there are any woofer speakers near the monitor, unplug and relocate the woofer to another room.
- 2. Remove all electronic devices such as radios, fans, clocks and telephones that are within 3 feet (one meter) of the monitor.
- 3. Degauss the monitor if any devices were removed from the area.

### Useful Tips

• A monitor recreates visual signals received from the PC. Therefore, if there is trouble with the PC or the video card, this can cause the monitor to become blank, have poor coloring, noise, Sync. Out of Range, etc. In this case, first check the source of the problem, and then contact a service center or your dealer.

- Judging the monitor's working condition If there is no image on the screen or an "Sync. Out of Range" message comes up, disconnect the cable from the computer while the monitor is still powered on.
  - o If there is a message coming up on the screen or if the screen goes white, this means the monitor is in working condition.
  - In this case, check the computer for trouble.

PowerSaver

- Preset Timing
- Modes

General			
Model Name	SAMSUNG 790DF		
Picture Tube			
Туре	17"(43cm) DynaFlat (40.6cm viewable)		
Deflection angle	90 °		
Dot Pitch	0.20mm (Horizontal)		
Screen type	Aluminized tri-color phosphor dot trio with black matrix. Anti-doming invar shadow mask. Multi-layer coated with anti-static.		
Maximum Resolution			
1280 x 1024 (NI)			
Active Display			
Horizontal	312 ± 4 mm		
Vertical	234 ± 4 mm		
Synchronization			
lorizontal 30 ~ 70 kHz			
Vertical 50 ~ 160 Hz			
Input Signal Definition			
Video Signal	RGB, Analog 0.7 Vpp positive at 75 ohms		
Sync Signal	Separate H/V sync, TTL level, positive or negative		
Display Color			
Unlimited			
Maximum Pixel Clock			
110 MHz			
Power Supply			
90 ~ 264VAC rms, 60/50 Hz ±	- 3Hz		
Power Consumption			
Less than 90W			
Dimensions (WxDxH)			
401 x 410 x 378mm (After ins	tallation of Stand)		
Weight			
14.3kg			
Environmental consideratio	ns		
Operating Temperature 32°F ~ 104°F(0°C ~ 40°C) Humidity 10% ~ 80%, non-condensing Storage Temperature -4°F ~113°F (-20°C ~ 45°C) Humidity 5% ~ 95%, non-condensing			
Plug and Play Capability			

Information

This monitor can be installed on any Plug & Play compatible system. Interaction of the monitor and computer systems will provide the best operating conditions and monitor settings. In most cases, monitor installation will proceed automatically, unless the user wishes to select alternate settings.

Note: Design and specifications are subject to change without prior notice.

General

PowerSaver

Preset Timing

Modes

General			
Model Name	SAMSUNG 990DF		
Picture Tube			
Туре	19"(48cm) DynaFlat (45.8cm viewable)		
Deflection angle	90 °		
Dot Pitch	0.20mm (Horizontal)		
Screen type	n type Aluminized tri-color phosphor dot trio with black matrix. Anti-doming invar shadow mask. Multi-layer coated with anti-static/Glare.		
Maximum Resolution			
1600 X 1200@ 76Hz			
Active Display			
Horizontal	352 ± 3 mm		
Vertical	264 ± 3 mm		
Synchronization			
Horizontal	lorizontal 30 ~ 96 kHz		
Vertical 50 ~ 160 Hz			
Input Signal Definition			
Video Signal	RGB, Analog 0.7 Vpp positive at 75 ohms		
Sync Signal	Separate H/V sync, TTL level, positive or negative		
Display Color			
Unlimited			
Maximum Pixel Clock			
250 MHz			
Power Supply			
90 ~ 264VAC rms, 60/5	0 Hz ± 3Hz		
Power Consumption			
Less than 110W			
Dimensions (WxDxH)			
445 x 457,5 x 416mm (	After installation of Stand)		
Weight			
18,2 kg			
Environmental consid	erations		
Humidity	23°F ~ 104°F(0°C ~ 40°C) 10% ~ 80%, non-condensing 4°F ~113°F (-20°C ~ 45°C) 6 ~ 95%, non-condensing		
Plug and Play Capabi	ity		
This monitor can be ins	talled on any Plug & Play compatible system. Interaction of the monitor and		

Information

This monitor can be installed on any Plug & Play compatible system. Interaction of the monitor and computer systems will provide the best operating conditions and monitor settings. In most cases, monitor installation will proceed automatically, unless the user wishes to select alternate settings.

Note: Design and specifications are subject to change without prior notice.

#### General

Index

- PowerSaver
  Preset Timing
- Modes

# SAMSUNG 790DF

Information

This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal operation when you move the computer's mouse or press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPMS compliant video card installed in your computer. Use a software utility installed on your computer to set up this feature.

Safety Instructions Introduction Setup Adjusting Your Monitor Troubleshooting

State	Normal Operation	Power-off Mode EPA/ENERGY 2000
Power Indicator	Green	Green, Blinking
Power Consumption	Less than 90W	Less than 2.0W



This monitor is EPA ENERGY STAR<sup>®</sup> compliant and ENERGY2000 compliant when used with a computer equipped with VESA DPMS functionality.

As an ENERGY STAR<sup>®</sup> Partner, SAMSUNG has determined that this product meets the ENERGY STAR<sup>®</sup> guidelines for energy efficiency.

#### General

Index

- PowerSaver
  Preset Timing
- Modes

# SAMSUNG 990DF

Information

This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal operation when you move the computer's mouse or press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPMS compliant video card installed in your computer. Use a software utility installed on your computer to set up this feature.

Safety Instructions Introduction Setup Adjusting Your Monitor Troubleshooting

State	Normal Operation	Power-off Mode EPA/ENERGY 2000
Power Indicator	Green	Green, Blinking
Power Consumption	Less than 110W	Less than 2W



This monitor is EPA ENERGY STAR<sup>®</sup> compliant and ENERGY2000 compliant when used with a computer equipped with VESA DPMS functionality.

As an ENERGY STAR<sup>®</sup> Partner, SAMSUNG has determined that this product meets the ENERGY STAR<sup>®</sup> guidelines for energy efficiency.

# SAMSUNG 790DF

Information

If the signal transferred from the computer is the same as the following Preset Timing Modes, the screen will be adjusted automatically. However, if the signal differs, the screen may go blank while the power LED is on. Refer to the video card manual and adjust the screen as follows.

#### **Table 1. Preset Timing Modes**

Safety Instructions Introduction Setup Adjusting Your Monitor Troubleshooting

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 800 x 600	53.674	85.061	56.250	+/+
VESA, 1024 x 768	68.677	84.997	94.500	+/+



#### Horizontal Frequency

The time to scan one line connecting the right edge to the left edge of the screen horizontally is called Horizontal Cycle and the inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz

#### **Vertical Frequency**

Like a fluorescent lamp, the screen has to repeat the same image many times per second to display an image to the user. The frequency of this repetition is called Vertical Frequency or Refresh Rate. Unit: Hz

General

Index

- PowerSaver
- Preset Timing
- Modes
# SAMSUNG 990DF

Information

If the signal transferred from the computer is the same as the following Preset Timing Modes, the screen will be adjusted automatically. However, if the signal differs, the screen may go blank while the power LED is on. Refer to the video card manual and adjust the screen as follows.

#### **Table 1. Preset Timing Modes**

Safety Instructions Introduction Setup Adjusting Your Monitor Troubleshooting

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 1024 x 768	68.677	84.997	94.500	+/+
VESA, 1280 x 1024	91.146	85.024	157.50	+/+



#### Horizontal Frequency

The time to scan one line connecting the right edge to the left edge of the screen horizontally is called Horizontal Cycle and the inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz

#### **Vertical Frequency**

Like a fluorescent lamp, the screen has to repeat the same image many times per second to display an image to the user. The frequency of this repetition is called Vertical Frequency or Refresh Rate. Unit: Hz

# S A M SUN G

General

Index

- PowerSaver
- Preset Timing

Modes



- Service
- Terms
- Regulatory
- Natural Color
- Authority

#### **AUSTRALIA:**

- Samsung Electronics Australia Pty Ltd. Customer Response Centre 7 Parkview Drive, Homebush Bay NSW 2127 Tel: 1300 362 603 http://www.samsung.com.au/
- **BRAZIL**:

Samsung Eletronica da Amazonia Ltda. R. Prof. Manoelito de Ornellas, 303, Terro B Chacara Sto. Antonio, CEP : 04719-040 Sao Paulo, SP SAC: 0800 124 421 http://www.samsung.com.br/

#### CANADA:

Samsung Electronics Canada Inc. Samsung Customer Care 7037 Financial Drive Mississauga, Ontario L5N 6R3 1-800-SAMSUNG (1-800-726-7864) http://www.samsung.ca/

#### CHILE :

SONDA S.A. Teatinos 550, Santiago Centro, Santiago, Chile Fono: 56-2-5605000 Fax: 56-2-5605353 56-2-800200211 http://www.sonda.com/ http://www.samsung.cl/

#### COLOMBIA :

Samsung Electronics Colombia Cra 9 No 99A-02 Of. 106 Bogota, Colombia Tel.: 9-800-112-112 Fax: (571) 618 - 2068 http://www.samsung-latin.com/ e-mail : soporte@samsung-latin.com

#### ESPAÑA :

Samsung Electronics Comercial Iberica, S.A. Ciencies, 55-65 (Poligono Pedrosa) 08908 Hospitalet de Llobregat (Barcelona) Tel. : (93) 261 67 00 Fax. : (93) 261 67 50 http://samsung.es/

#### FRANCE :

SAMSUNG ELECTRONICS FRANCE Service Paris Nord 2 66 rue des Vanesses BP 50116 Villepinte 95950 Roissy CDG Cedex Tel: 08 25 08 65 65 Fax: 01 48 63 06 38 http://www.samsungservices.com/

#### **GERMANY**:

**TELEPLAN Rhein-Main GmbH** Feldstr. 16 64331 Weiterstadt T. 06151/957-1306 F. 06151/957-1732 \* EURO 0.12/Min http://www.samsung.de/

#### **HUNGARY**:

Samsung Electronics Magyar Rt.

1039, Budapest, Lehel u. 15-17. Tel: 36 1 453 1100 Fax: 36 1 453 1101 http://www.samsung.hu/

ITALY :

Samsung Electronics Italia S.p.a. Via C. Donat Cattin, 5 20063 Cernusco s/Naviglio (MI) Servizio Clienti: 199.153.153 http://www.samsung-italia.com/

#### MEXICO :

SAMSUNG ELECTRONICS MEXICO. S.A. DE C.V. Saturno NO.44, Col. Nueva Industrial Vallejo Gustavo A.Madero C.P.07700, Mexico D.F. Mexico TEL. 52-55-5747-5100 Fax. 52-55-47 52 02 RFC: SEM950215S98 http://www.samsung.com.mx/

IMPORTADO POR: SAMSUNG ELECTRONICS MEXICO. S.A. DE C.V. Saturno NO.44, Col. Nueva Industrial Vallejo Gustavo A.Madero C.P.07700, Mexico D.F. Mexico TEL. 52-55-5747-5100

EXPORTADO POR: Samsung Electronics CO.,LTD. 416, Mae tan-3dong, Yeongtong-gu, Suwon City, Kyoungki-Do Korea

#### NETHERLANDS/BELGIUM/LUXEMBOURG :

Samsung Electronics Benelux B. V. Fleminglaan 12 2289 CP Rijiswijk, NEDERLANDS Service and informatielijn ; Belgium :0800-95214, http://www.samsung.be/ Netherlands : 0800-2295214, http://www.samsung.nl/

PANAMA :

Samsung Electronics Latinoamerica( Z.L.) S.A. Calle 50 Edificio Plaza Credicorp, Planta Baja Panama Tel. : (507) 210-1122, 210-1133 Tel : 800-3278(FAST) http://www.samsung-latin.com/

PERU

Servicio Integral Samsung Av.Argentina 1790 Lima1. Peru Tel: 51-1-336-8686 Fax: 51-1-336-8551 http://www.samsungperu.com/

#### PORTUGAL :

SAMSUNG ELECTRONICA PORTUGUESA S.A. Rua Mário Dioniso, N $^{0}2$  - 1° Drt. 2795-140 LINDA-A-VELHA Tel. 214 148 114/100 Fax. 214 148 133/128 Free Line 800 220 120 http://www.samsung.pt/

#### SOUTH AFRICA :

Samsung Electronics,5 Libertas Road, Somerset Office Park, Bryanston Ext 16. Po Box 70006, Bryanston,2021, South Africa Tel : 0027-11-549-1621 Fax : 0027-11-549-1629 http://www.samsung.co.za/

#### SWEDEN/DENMARK/NORWAY/FINLAND :

Samsung Electronics AB Box 713 S-194 27 UPPLANDS VÄSBY SVERIGE Besöksadress : Johanneslundsvägen 4 Samsung support Sverige: 020-46 46 46 Samsung support Danmark : 8088-4646 Samsung support Norge: 8001-1800 Samsung support Finland: 0800-118001 Tel +46 8 590 966 00 Fax +46 8 590 966 50 http://www.samsung.se/

#### THAILAND :

HAI SAMSUNG SERVICE CENTER MPA COMPLEX BUILDING,1st-2nd Floor 175 SOI SUEKSA VIDHAYA SATHON SOI 12 SILOM ROAD ,SILOM,BANGRAK BANGKOK 10500 TEL : 0-2635-2567 FAX : 0-2635-2556

UKRAINE :

SAMSUNG ELECTRONICS REPRESENTATIVE OFFICE IN UKRAINE 4 Glybochitska str. Kiev, Ukraine Tel. 8-044-4906878 Fax 8-044-4906887 Toll-free 8-800-502-0000 http://www.samsung.com.ua/

#### United Kingdom :

Samsung Electronics (UK) Ltd. Samsung House, 225 Hook Rise South Surbiton, Surrey KT6 7LD Tel. : (0208) 391 0168 Fax. : (0208) 397 9949 < European Service Center & National Service > Stafford Park 12 Telford, Shropshire, TF3 3BJ Tel. : (0870) 242 0303 Fax. : (01952) 292 033 http://samsungservice.co.uk/

U.S.A. :

Samsung Electronics America Service Division 400 Valley Road, Suite 201 Mount Arlington, NJ 07856 1-800-SAMSUNG (1-800-726-7864) http://samsungusa.com



#### Information

- Service
- Terms
- Regulatory
- Natural Color
- Authority

#### Dot Pitch

The image on a monitor is composed of red, green and blue dots. The closer the dots, the higher the resolution. The distance between two dots of the same color is called the 'Dot Pitch'. Unit: mm

Specifications

#### Vertical Frequency

The screen must be redrawn several times per second in order to create and display an image for the user. The frequency of this repetition per second is called Vertical Frequency or Refresh Rate. Unit: Hz

Example: If the same light repeats itself 60 times per second, this is regarded as 60 Hz. In this case, flickering of the screen can be detected. To avoid this problem, there is a Flicker-free Mode using a vertical frequency over 70 Hz.

#### Horizontal Frequency

The time to scan one line connecting the right edge to the left edge of the screen horizontally is called Horizontal Cycle. The inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz

#### Interlace and Non-Interlace Methods

Showing the horizontal lines of the screen from the top to the bottom in order is called the Non-Interlace method while showing odd lines and then even lines in turn is called the Interlace method. The Non-Interlace method is used for the majority of monitors to ensure a clear image. The Interlace method is the same as that used in TVs.

#### Plug & Play

This is a function that provides the best quality screen for the user by allowing the computer and the monitor to exchange information automatically. This monitor follows the international standard VESA DDC for the Plug & Play function.

#### Resolution

The number of horizontal and vertical dots used to compose the screen image is called 'resolution'. This number shows the accuracy of the display. High resolution is good for performing multiple tasks as more image information can be shown on the screen.

Example: If the resolution is 1024 X 768, this means the screen is composed of 1024 horizontal dots (horizontal resolution) and 768 vertical lines (vertical resolution).



### Service

- Terms
- Regulatory
- Natural Color
- Authority

```
FCC Information | IC Compliance Notice | MPR II Compliance |
European Notice (Europe only) | PCT Notice | VCCI | CCC Notice
TCO'95-Ecological requirements for personal computers (TCO'95 applied model only)
TCO'99-Ecological requirements for personal computers (TCO'99 applied model only)
TCO'03-Ecological requirements for personal computers (TCO'03 applied model only)
TCO'03 Recycling Information (TCO'03 applied model only)
```

You must right-click the link for a portable document format (PDF) file and save the file to your harddisk drive. Attempting to link directly to large PDF files causes your system to freeze.

Specifications I Informatic

#### Regulatory (PDF Document)

Regulatory

- To save PDF files (files with an extension of **.pdf**) to your hard-disk drive, right-click the document title, click **Save Target As** in Microsoft® Internet Explorer or **Save Link As** in Netscape Navigator, and specify a location on your hard-disk drive. To view a PDF file, launch Adobe™ Acrobat Reader. Click **File** —> **Open** and select the PDF file. -

Note : You need to run Adobe Acrobat Reader to View PDF Documents.



#### FCC Information

#### **User Instructions**

The Federal Communications Commission Radio Frequency Interference Statement includes the following warning:

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

#### **User Information**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If necessary, consult your dealer or an experienced radio/television technician for additional suggestions. You may find the booklet called How to Identify and Resolve Radio/TV Interference Problems helpful. This booklet was prepared by the Federal Communications Commission. It is available from the U.S. Government Printing Office, Washington, DC 20402, Stock Number 004-000-00345-4.

The party responsible for product compliance: SAMSUNG ELECTRONICS CO., LTD America QA Lab of Samsung 3351 Michelson Drive, Suite #290, Irvine, CA92612 USA Tel) 949-975-7310 Fax) 949-922-8301

#### Warning

User must use shielded signal interface cables to maintain FCC compliance for the product.

Provided with this monitor is a detachable power supply cord with IEC320 style terminations. It

may be suitable for connection to any UL Listed personal computer with similar configuration. Before making the connection, make sure the voltage rating of the computer convenience outlet is the same as the monitor and that the ampere rating of the computer convenience outlet is equal to or exceeds the monitor voltage rating.

For 120 Volt applications, use only UL Listed detachable power cord with NEMA configuration 5-15P type (parallel blades) plug cap. For 240 Volt applications use only UL Listed Detachable power supply cord with NEMA configuration 6-15P type (tandem blades) plug cap.

#### IC Compliance Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations of ICES-003.

Cet appareil Numérique de classe B respecte toutes les exigences du Règlemont NMB-03 sur les équipements produisant des interférences au Canada.

#### MPR II Compliance

This monitor complies with SWEDAC(MPR II) recommendations for reduced electric and magnetic fields.

#### European Notice (Europe only)

Products with the CE Marking comply with both the EMC Directive (89/336/EEC), (92/31/EEC), (93/68/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms:

- EN55022:1998+A1:2000 Radio Frequency Interference
- EN55024:1998 Electromagnetic Immunity
- EN61000-3-2:1995+A1/A2:1998 Power Line Harmonics
- EN61000-3-3:1995 Voltage Fluctuations

#### PCT Notice



#### VCCI

This is a Class B product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual. CCC合格声明

此产品根据GB4943-1995, GB9254-1998, GB17625.1标准获得CCC认证。

#### TCO'95-Ecological requirements for personal computers (TCO'95 applied model only)



#### AB general requirements

#### AB2 Written Eco-document acompanying the products

Congratulations! You have just purchased a TCO'95 approved and labelled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and to the further development of environmentally-adapted electronic products.

#### Why do we have environmentally-labelled monitors?

In many countries, environmental labelling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem as far as monitors and other electronic equipment are concerned is that environmentally harmful substances are used both in the products and during their manufacture. Since it has not been possible so far for the majority of electronic equipment to be recycled in a satisfactory way, most of these potentially damaging substances sooner or later enter Nature.

There are also other characteristics of a monitor, such as energy consumption levels, that are important from both the working and natural environment viewpoints. Since all types of conventional electricity generation have a negative effect on the environment (acidic and climate-influencing emissions, radioactive waste, etc.) it is vital to conserve energy. Electronic equipment in offices consumes an enormous amount of energy, since it is often routinely left running continuously.

#### What does labelling involve?

This product meets the requirements for the TCO'95 scheme, which provides for international environmental labelling of monitors. The labelling scheme was developed as a joint effort by the TCO (The Swedish Confederation of Professional Employees), Naturskyddsforeningen (The Swedish Society for Nature Conservation) and NUTEK (The National Board for Industrial and Technical Development in Sweden).

The requirements cover a wide range of issues: environment, ergonomics, usability, emission of electrical and magnetic fields, energy consumption and electrical and fire safety.

The environmental demands concern among other things restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs (freons), and chlorinated solvents. The product must be prepared for recycling and the manufacturer is obliged to have an environmental plan, which must be adhered to in each country where the company conducts its operations policy. The energy requirements include a demand that the monitor after a certain period of inactivity shall reduce its power consumption to a lower level, in one or more stages. The length of time to reactivate the monitor shall be reasonable for the user.

Labelled products must meet strict environmental demands, for example in respect of the reduction of electric and magnetic fields, along with physical and visual ergonomics and good usability.

TCO Development Unit 1996-11-29 On the page this folder you will find a brief summary of the environmental requirements met by this product. The complere environmental criteria document may be ordered from: TCO Development Unit S-11494 Stockholm Sweden Fax: +46 8 782 92 07 E-mail (Internet): development@tco.se Current information regarding TCO'95-approved and labelled products may also be obtained via the Internet, using the address: http://www.tco-info.com/ TCO'95 is a co-operative project between(3 logos)

#### **Environmental Requirements**

Brominated flame retardants are present in printed circuit boards, cables, wires, casings and housings. In turn, they delay the spread of fire. Up to thirty percent of the plastic in a computer casing can consist of flame retardant substances. These are related to another group of environmental toxins, PCBs, which are suspected to give rise to similar harm, including reproductive damage in fish eating birds and mammals, due to the bioaccumulative processes. Flame retardants have been found in human blood and researchers fear that disturbances in foetus development may occur.

• TCO'95 demand requires that plastic components weighing more than 25 grams must not contain organically bound chlorine and bromine.

#### Lead

Lead can be found in picture tubes, display screens, solders and capacitors. Lead damages the nervous system and in higher doses, causes lead poisoning.

• TCO'95 requirement Permits the inclusion of lead since no replacement has yet been developed.

#### Cadmium

Cadmium is present in rechargeable batteries and in the colour generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses.

• TCO'95 requirement states that batteries may not contain more than 25 ppm (parts per million) of cadmium. The colour-generating layers of display screens must not contain any cadmium.

#### Mercury

Mercury is sometimes found in batteries, relays and switches. Mercury damages the nervous system and is toxic in high doses.

• TCO'95 requirement states that batteries may not contain more than 25 ppm (parts per million) of mercury. It also demands that no mercury is present in any of the electrical or electronics components concerned with the display unit.

#### **CFCs (freons)**

CFCs (freons) are sometimes used for washing printed circuit boards and in the manufacturing of expanded foam for packaging. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on Earth of ultraviolet light with consequent increased risks of skin cancer (malignant melanoma).

• The relevant TCO'95 requirement: Neither CFCs nor HCFCs may be used during the manufacturing of the product or its packaging.

TCO'99-Ecological requirements for personal computers (TCO'99 applied model only)



#### **Congratulations!**

You have just purchased a TCO'99 approved and labelled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and also to the further development of environmentally adapted electronics products.

This product meets the requirements for the TCO'99 scheme which provides for an international environmental and quality labelling labelling of personal computers. The labelling scheme was developed as a joint effort by the TCO(The Swedish Confederation of Professional Employees), Svenska Naturskyddsforeningen(The Swedish Society for Nature Conservation), Statens Energimyndighet(The Swedish National Energy Administration) and SEMKO AB.

The requirements cover a wide range of issuse: environment, ergonomics, usability, reduction of electric and magnetic fields, energy consumption and electrical safety.

#### Why do we have environmentally labelled computers?

In many countries, environmental labelling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem, as far as computers

and other electronics equipment are concerned, is that environmentally harmful substances are used both in the products and during their manufacture. Since it is not so far possible to satisfactorily recycle the majority of electronics equipment, most of these potentially damaging substances sooner or later enter nature.

There are also other characteristics of a computer, such as energy consumption levels, that are important from the viewpoints of both the work (internal) and natural (external) environments. Since all methods of electricity generation have a negative effect on the environment (e.g. acidic and climate-influencing emissions, radioactive waste), it is vital to save energy. Electronics equipment in offices is often left running continuously and thereby consumes a lot of energy.

#### What does labelling involve?

The environmental demands has been developed by Svenska Naturskyddsforeningen (The Swedish Society for Nature Conservation). These demands impose restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs(freons)and chlorinated solvents, among other things. The product must be prepared for recycling and the manufacturer is obliged to have an environmental policy which must be adhered to in each country where the company implements its operational policy.

The energy requirements include a demand that the computer and/or display, after a certain period of inactivity, shall reduce its power consumption to a lower level in one or more stages. The length of time to reactivate the computer shall be reasonable for the user.

Below you will find a brief summary of the environmental requirements met by this product. The complete environmental criteria document may be ordered from:

#### **TCO Development**

SE-114 94 Stockholm, Sweden Fax: +46 8 782 92 07 Email (Internet): development@tco.se

Current information regarding TCO'99 approved and labelled products may also be obtained via the Internet, using the address: http://www.tco-info.com/

#### **Environmental requirements**

#### Flame retardants

Flame retardants are present in printed circuit boards, cables, wires, casings and housings. Their purpose is to prevent, or at least to delay the spread of fire. Up to 30% of the plastic in a computer casing can consist of flame retardant substances. Most flame retardants contain bromine or chloride, and those flame retardants are chemically related to another group of environmental toxins, PCBs. Both the flame retardants containing bromine or chloride and the PCBs are suspected of giving rise to severe health effects, including reproductive damage in fish-eating birds and mammals, due to the bio-accumulative\* processes. Flame retardants have been found in human blood and researchers fear that disturbances in foetus development may occur.

The relevant TCO'99 demand requires that plastic components weighing more than 25 grams must not contain flame retardants with organically bound bromine or chlorine. Flame retardants are allowed in the printed circuit boards since no substitutes are available.

#### Cadmium\*\*

Cadmium is present in rechargeable batteries and in the colour-generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries, the colour-generating layers of display screens and the electrical or electronics components must not contain any cadmium.

#### Mercury\*\*

Mercury is sometimes found in batteries, relays and switches. It damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries may not contain any mercury. It also demands that mercury is not present in any of the electrical or electronics components associated with the labelled unit. There is however one exception. Mercury is, for the time being, permitted in the back light system of flat panel monitors as today there is no commercially available alternative. TCO aims on removing this exception when a Mercury free alternative is available.

#### CFCs (freons)

The relevant TCO'99 requirement states that neither CFCs nor HCFCs may be used during the manufacture and assembly of the product. CFCs (freons) are sometimes used for washing printed circuit boards. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on earth of ultraviolet light with e.g. increased risks of skin cancer (malignant melanoma) as a consequence.

#### Lead\*\*

Lead can be found in picture tubes, display screens, solders and capacitors. Lead damages the nervous system and in higher doses, causes lead poisoning. The relevant TCO'99 requirement permits the inclusion of lead since no replacement has yet been developed.

- \*\* Lead, Cadmium and Mercury are heavy metals which are Bio-accumulative.
- TCO'03-Ecological requirements for personal computers (TCO'03 applied model only)



#### **Congratulations!**

The display you have just purchased carries the TCO'03 Displays label. This means that your display is designed, manufactured and tested according to some of the strictest quality and environmental requirements in the world. This makes for a high performance product, designed with the user in focus that also minimizes the impact on our natural environment.

Some of the features of the TCO'03 Display requirements:

#### Ergonomics

Good visual ergonomics and image quality in order to improve the working environment for the user and to reduce sight and strain problems. Important parameters are luminance, contrast, resolution, reflectance, colour rendition and image stability.

#### Energy

- Energy-saving mode after a certain time-beneficial both for the user and the environment
- · Electrical safety

#### Emissions

- · Electromagnetic fields
- Noise emissions

#### Ecology

- The product must be prepared for recycling and the manufacturer must have a certified environmental management system such as EMAS or ISO 14 000
- Restrictions on
- o chlorinated and brominated flame retardants and polymers o heavy metals such as cadmium, mercury and lead.

The requirements included in this label have been developed by TCO Development in cooperation with scientists, experts, users as well as manufacturers all over the world. Since the end of the 1980s TCO has been involved in influencing the development of IT equipment in a more user-friendly direction. Our labelling system started with displays in 1992 and is now requested by users and IT-manufacturers all over the world.

For more information, Please visit www.tcodevelopment.com

#### TCO'03 Recycling Information (TCO'03 applied model only)

#### [European Residents Only]

For recycling information for TCO'03 certified monitors, for the residents in the following countries, please contact the company corresponding to your region of residence. For those who reside in other countries, please contact a nearest local Samsung dealer for recycling information for the products to be treated in environmentally acceptable way.

<sup>\*</sup> Bio-accumulative is defined as substances which accumulate within living organisms.

	[U.S.A. Residents Only]	[European Residents Only]			
	U.S.A.	SWEDEN	NORWAY	GERMANY	
COMPANY	Solid Waste Transfer & Recycling Inc	ELKRETSEN	Elektronikkretur AS	vfw AG	
ADDRESS	442 Frelinghuysen Ave Newark, NJ 07114	ELKRETSEN Box 1357, 111 83 Stockholm Barnhusgatan 3, 4 tr.	6454 Etterstad 0602 Oslo Fyrstikkalln 3B	Max Plank Strasse 42 50858 Collogne Germany	
TELEPHONE	973-565-0181	08-545 212 90	23 06 07 40	49 0 2234 9587 - 0	
FAX	Fax: 973-565-9485	08-545 212 99	23 06 07 41		
E- MAIL	none	info@el-kretsen.se	adm@elektronikkretur.no	vfw.info@vfw-ag.de	
HOME PAGE	http://www.bcua.org/Solid Waste_Disposal.htm	http://www.el- kretsen.se/	http://www.elretur.no/		



One of the recent problems in using a computer is that the color of the images printed out by a printer or other images scanned by a scanner or a digital camera are not the same as those shown on the monitor.

The Natural Color S/W is the very solution for this problem. It is a color administration system developed by Samsung Electronics in association with Korea Electronics & Telecommunications Research Institute (ETRI). This system is available only for Samsung monitors and makes the color of the images on the monitor the same as the printed or scanned images. For more information, refer to Help (F1) in the software program.

#### How to install the Natural Color software

Insert the CD included with the Samsung monitor into the CD-ROM Drive. Then, the initial screen of the program installation will be executed. Click Natural Color on the initial screen to install the Natural Color software. To install the program manually, insert the CD included with the Samsung monitor into the CD-ROM Drive, click the [Start] button of Windows and then select [Execute].

Enter D:\color\eng\setup.exe and then press the key.

(If the drive where the CD is inserted is not D:\, enter the applicable drive.)

#### How to delete the Natural Color software program

Select [Setting]/[Control Panel] on the [Start] menu and then double-click [add/Delete a program].

Select Natural Color from the list and then click the [add/Delete] button.

## Index | Safety Instructions | Introduction | Satur | Adjusting Your Monitor | Troubleshooting



#### Internenion

- Service
- Terms
- Regulatory
- Natural Color
- Authority

Information in this document is subject to change without notice. © 2004 Samsung Electronics Co., Ltd. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Samsung Electronics Co., Ltd. is strictly forbidden.

Specifications

Samsung Electronics Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Samsung is the registered trademark of Samsung Electronics Co., Ltd.; *Microsoft, Windows* and *Windows NT* are registered trademarks of Microsoft Corporation; *VESA, DPMS* and *DDC* are registered trademarks of Video Electronics Standard Association; the *ENERGY STAR* name and logo are registered trademarks of the U.S. Environmental Protection Agency (EPA). As an ENERGY STAR Partner, Samsung Electronics Co., Ltd. has determined that this product meets the ENERGY STAR guidelines for energy efficiency. All other product names mentioned herein may be the trademarks or registered trademarks of their respective owners.