

'Click' to download complete Manual



SAMSUNG

Printer

## CLP-300 Series CLP-300/XSG

Basic Model : CLP-300

# SERVICE *Manual*

### Samsung Color Laser Printer



**CLP-300**

### The keynote of Product

[The keynote of Product]

[Series Model]

.CLP-300: B/W 16 ppm, Color 4 ppm, SPL-C

.CLP-300N: CLP-300 + Network

[Resolution]

. 2400 x 600 dpi

[CPU]

.Samsung CorrusM 170MHz

[Interface]

.CLP-300 : USB 2.0

.CLP-300N : USB 2.0, Ethernet 10/100 Base TX

[Consumables]

.2K black toner cartridge

.1K color toner cartridge

.Waste toner box

[Paper Handling]

.150 sheets Semi-cassette

.1 sheet manual slot

.150 sheet Face-Down



**ELECTRONICS**

\* This service manual is a property of Samsung Electronics Co., Ltd.  
Any unauthorized use of Manual can be punished under applicable  
international and/or domestic law.

\* This service manual is also provided on the web, the ITSELF  
system Samsung Electronics Co., Ltd.  
“<http://itself.sec.samsung.co.kr>”

© Samsung Electronics Co.,Ltd. June. 2006  
Printed in Korea.

VERSION NO. : 1.00

CODE : JC-0164K

# Contents

<b>1. Precautions</b>	
1.1 Safety Warning . . . . .	1-1
1.2 Caution for safety . . . . .	1-2
1.3 ESD Precautions . . . . .	1-5
1.4 Super Capacitor or Lithium Battery Precautions . . . . .	1-5
<b>2. Product Specification</b>	
2.1 Product Overview . . . . .	2-1
2.2 Specifications . . . . .	2-2
2.3 Model Comparison Table . . . . .	2-7
<b>3. System Overview</b>	
3.1 System Structure . . . . .	3-1
3.2 Main PBA Description . . . . .	3-7
3.3 CRUM . . . . .	3-17
3.4 General Description . . . . .	3-19
<b>4. S/W Structure and Descriptions</b>	
4.1 Architecture . . . . .	4-1
4.2 Language Monitor . . . . .	4-1
4.3 Status Monitor . . . . .	4-1
4.4 Network Interface . . . . .	4-2
4.5 Printer Driver <-> Status Monitor . . . . .	4-2
4.6 System F/W Flow . . . . .	4-3
4.7 Alarm Shortage . . . . .	4-4
4.8 Error status . . . . .	4-4

## Continued

4.9 CRUM Overview . . . . .	4-5
4.10 FW Upgrade . . . . .	4-5
4.11 Initailize Flow . . . . .	4-6

### 5. Disassembly and Reassembly

5.1 Precautions When Replacing Paris . . . . .	5-2
5.2 Parts for Maintenance and Repair . . . . .	5-3
5.3 Information Related in Disassembly and Assembly . . . . .	5-5
5.4 Disassembly Procedure . . . . .	5-10

### 6. Alignment and Adjustments

6.1 Control Panel . . . . .	6-1
6.2 Function . . . . .	6-2
6.3 Jam Removal . . . . .	6-6
6.4 Sample Pattern . . . . .	6-9
6.5 Periodic Defective Image . . . . .	6-10
6.6 How to use EDC (Engine Diagnostic Control) Mode . . . . .	6-11
6.7 Error Message . . . . .	6-17

### 7. Troubleshooting

7.1 Procedure of Checking the Symptoms . . . . .	7-1
7.2 Troubleshooting Checklist . . . . .	7-2
7.3 Solving General Printing Problems . . . . .	7-3
7.4 Solving Print Quality Problems . . . . .	7-7
7.5 Common Windows Problems . . . . .	7-11
7.6 Common Macintosh Problems . . . . .	7-11
7.7 Common Linux Problems . . . . .	7-12
7.8 Major Problems Trouble shooting . . . . .	7-15

## Continued

### 8. Exploded Views & Parts List

8.1 Main . . . . .	8-2
8.2 Top Cover . . . . .	8-3
8.3 Rear Cover . . . . .	8-4
8.4 Front Cover . . . . .	8-5
8.5 Main Driver . . . . .	8-6
8.6 Main Frame . . . . .	8-8
8.7 LSU Cover . . . . .	8-10
8.8 Fuser Unit . . . . .	8-11
8.9 ELA-UNIT OPC DEV . . . . .	8-12
8.10 ITB Unit . . . . .	8-13
8.11 Casstte Unit . . . . .	8-14

### 9. Block diagram

9.1 Block Diagram . . . . .	9-1
-----------------------------	-----

### 10. Connection Diagram

10.1 Connection Diagram . . . . .	10-1
-----------------------------------	------

### 11. Schematic Diagram

11.1 Main Board . . . . .	11-1
11.2 Panel . . . . .	11-16
11.3 DEVE INF . . . . .	11-17
11.4 ITB INF . . . . .	11-18
11.5 SMPS-110V . . . . .	11-19
11.6 SMPS-220V . . . . .	11-20
11.7 HVPS . . . . .	11-21

## Continued

### 12. Reference Information

12.1 Tools for Troubleshooting . . . . .	12-1
12.2 Acronyms and Abbreviations . . . . .	12-2
12.3 Select a location for the printer . . . . .	12-4
12.4 A4 ISO 19752 Standard Pattern . . . . .	12-5

service-repairmanual.com