Biggest Thing in Touch Screen LCD Monitors

LCD-1700VRTS **LCD-1700TS LCD-1211TS LCD-1042TS** LCD-840TS LCD-641TS









LCD-840TS



LCD-1211TS



- 5-wire resistive type touch screens
- Serial type
- RS-232, VGA cable, and power supplies are provided.
- · Touch screen drivers for ELO are available online at www.elotouch.com and will need to be downloaded.
- LCD-1211TS and LCD-1042TS uses PenMount Touch Screen drivers. and can be installed from the disc provided in box.

LCD-1700VRTS	Same as LCD-1700VR*, 17" LCD in rack mount, 8 RU, with ELO touch screen
LCD-1700TS	Same as LCD-1700V*, 17" LCD monitor, with ELO touch screen
LCD-1211TS	Same as LCD-1211VB*, 12.1" sunlight readable LCD, 1250 Nit, with MicroTouch touch screen
LCD-1042TS	Same as LCD-1042VB*, 10.4" sunlight readable LCD, 1200 Nit, with MicroTouch touch screen
LCD-840TS	Same as LCD-840V*, 8.4" LCD monitor, with ELO touch screen
LCD-641TS	Same as LCD-641V*, 6.4" LCD monitor, with ELO touch screen

General Installation

1. Setup LCD touch screen with computer with VGA cable and RS-232 cable. Connect power supply to unit and turn on.

- 2. Set display settings for monitor. Refer to individual specification page for the LCD monitor resolution.
- 3. Download or put in CD for touch screen driver. Install.
- 4. Run setup. Specify what serial port you will use (Com 1, Com 2, Com 5...).
- 5. Run calibration to activate touch screen.

More detailed instructions can be found for touch screen setup on our website at www.totevision.com under Manuals and Instruction Pages.

All touch screen monitors are special order only.

* For detailed specification, including dimensions and inputs, see individual pages for LCD-1700VR, LCD-1700V, LCD-1211VB, LCD-1042VB, LCD-840V, and LCD-641V.

