

ViewSonic®

P225

Color Monitor



With Plug & Play✕
21" (20" Viewable Diagonal)

User Guide

Guide de l'utilisateur

Guía del usuario

Guia do usuário

Contents

Product Registration	2
For Your Records	2

Getting Started

Package Contents	3
Precautions	3
Quick Installation	4

Using the Monitor

Setting the Timing Mode	5
Adjusting the Screen Image	6
Main Menu Controls	8

Other Information

Specifications	12
Troubleshooting.....	13
Customer Support	14
Cleaning the Monitor	15
Limited Warranty	16

Appendix

Safety Guidelines	17
Compliance Information	18
CE Conformity	18

Copyright © ViewSonic Corporation, 2001. All right reserved.

Macintosh and Power Macintosh are registered trademarks of Apple Computer, Inc.

Microsoft, Windows, Windows NT, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.

ViewSonic, the three birds logo, OnView, ViewMatch, and ViewMeter are registered trademarks of ViewSonic Corporation.

VESA is a registered trademark of the Video Electronics Standards Association. DPMS and DDC are trademarks of VESA.

ENERGY STAR® is a registered trademark of the U.S. Environmental Protection Agency (EPA).

As an ENERGY STAR® partner, ViewSonic Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Disclaimer: ViewSonic Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use this product.

In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

Product Registration

To meet your future needs, and to receive any additional product information as it becomes available, please register your product on the Internet at: www.viewsonic.com. The ViewSonic Wizard CD-ROM also provides an opportunity for you to print the registration form which you may mail or fax to ViewSonic.

For Your Records

Product Name:	ViewSonic P225
Model Number:	VCDTS21492-1
Document Number:	P225_UG_204
Serial Number:	_____
Purchase Date:	_____

Product disposal at end of product life

ViewSonic is concerned about the preservation of our environment. Please dispose of this product properly at the end of its useful life. Your local waste disposal company may provide information about proper disposal.

Getting Started

Congratulations on your purchase of a ViewSonic P225 color monitor.

Important! Save the original box and all packing material for future shipping needs.

O E: This product was designed for operation in the magnetic fields of the hemisphere where it was purchased.

Package Contents

Your P225 package includes:

- P225 monitor
- DB-15 video cable
- Power cord
- Setup Guide
- ViewSonic Wizard CD-ROM (including User Guide PDF file and INF/ICM display optimization files)

O E: The supplied INF file ensures compatibility with Windows operating systems, and the ICM file (Image Color Matching) ensures accurate on-screen colors. ViewSonic® recommends that you install both files.

Precautions

-
- For best viewing conditions sit at least 18" from the monitor.
 - **AVOID TOUCHING THE SCREEN WITH YOUR FINGERS.** Oils from the skin are difficult to remove.
 - **NEVER REMOVE THE REAR COVER.** The monitor contains high voltage parts. You may suffer serious injury if you touch these parts.
 - Avoid exposing the monitor to direct sunlight or another heat source. The monitor should be facing away from direct sunlight to reduce glare.
 - Always handle your monitor with care when moving it.
 - Choose a well ventilated area to position your monitor. Do not place anything on the monitor that prevents adequate dissipation of heat.
 - Ensure the area around the monitor is clean and free of moisture.
 - Keep the monitor away from magnets, motors, transformers, speakers, and televisions.
 - Do not place heavy objects on the monitor, video cable, or power cord.
 - If smoke, abnormal noise, or strange odor is present, immediately switch the monitor off and call your dealer or ViewSonic. It is dangerous to continue using the monitor.
-

Quick Installation

1 Connect video cable

Make sure both the monitor and computer are powered OFF.

Connect the DB-15 video cable to the computer. (The monitor can also be connected to a BNC video cable, purchased separately).

Macintosh® users: Models older than G3 require a Macintosh adapter. Attach the adapter to the computer and plug the video cable into the adapter.

To order a ViewSonic® Macintosh adapter, contact ViewSonic. See “Customer Support” on page 14.

2 Connect monitor base cord

Connect the monitor base cord from the AC OUT port to the AC IN port on the monitor.

3 Connect power cord

Connect the power cord from the monitor base to a properly grounded AC outlet.

4 Connect USB devices

Connect the USB cable from your computer USB port to the USB Input on the rear of the monitor base. To use the USB Hub, connect the selected USB devices (up to four) to the USB downstream ports shown below.

5 Power-ON monitor and computer

Power-ON the monitor, then power-ON the computer. This sequence (monitor before computer) is very important.

O E: At this point Windows 98 users may receive a message asking them to install the P225 INF file.

6 Install Display Optimization files (INF and ICM files)

(1) Insert the ViewSonic Wizard CD-ROM into your computer's CD-ROM drive.

O E: If your computer does not have a CD-ROM drive, see “Customer Support” on page 12.

(2) Wait for the CD-ROM to auto-start.

O E: If the CD-ROM does not auto-start: double-click on the CD-ROM icon in Windows Explorer, then double-click on **insta .exe**.

(3) Follow the on-screen instructions.

7 Windows users: Set the Timing

Mode (resolution and refresh rate) *Example:* 1024 X 768 @ 75Hz.

For instructions on changing the resolution and refresh rate, see the user guide for your computer's graphics card.


Installation is complete.

Installation is complete. Enjoy your new 225 monitor.

To be best prepared for any future customer service needs: print this user guide and write the serial number in “For Your Records” on page 1. (See back of monitor.)

To register your product go online to **www.viewsonic.com**.

The ViewSonic Wizard CD-ROM also provides an opportunity for you to print the registration form which you may mail or fax to ViewSonic.

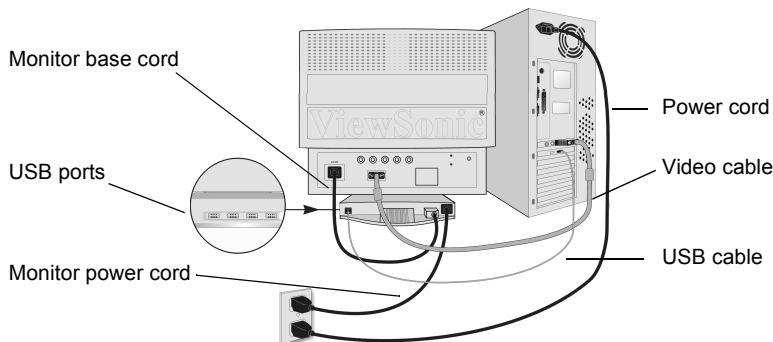

Using the Monitor

Setting the Timing Mode

Setting the timing mode is important for maximizing the quality of the screen image and minimizing eye strain. The **timing mode** consists of the **resolution** (example 1600 x 1200) and **refresh rate** (or vertical frequency; example 85 Hz). After setting the timing mode, use the OnView® controls to adjust the screen image.

The recommended timing modes for this monitor are:

ESA 1600 x 1200 @ 85 Hz.

To set the Timing Mode:

- 1 **Set the resolution:** Right-click on the Windows® desktop > **properties** > **Settings** > **Desktop Area** > set the resolution.
- 2 **Set the refresh rate:** See your graphic card's user guide for instructions.

Note: To minimize the adjustments required for an optimal screen image, select a timing mode from the **recommended timing modes** table below.

Preset Timing Modes

VGA 640 x 400 @ 70 Hz	VESA 1280 x 1024 @ 85 Hz
VGA 640 x 480 @ 60 Hz	VESA 1600 x 1200 @ 75 Hz
VESA 800 x 600 @ 85 Hz	VESA 1600 x 1200 @ 85 Hz
VESA 1024 x 768 @ 75 Hz	VESA 2048 x 1536 @ 75 Hz
VESA 1024 x 768 @ 85 Hz	Macintosh® 640 x 480 @ 66.7 Hz
VESA 1280 x 1024 @ 75 Hz	Macintosh 1152 x 870 @ 75 Hz


Warning: Do NOT set the graphics card in your computer to exceed the maximum refresh rate for each resolution (see below). Doing so may result in permanent damage to your monitor.

Timing Modes with Maximum Refresh Rates

1280 x 1024 NI @ 115 Hz	800 x 600 NI @ 180 Hz
1152 x 870 NI @ 134 Hz	640 x 480 NI @ 180 Hz
1024 x 768 NI @ 151 Hz	1600 x 1200 NI @ 99Hz
	2048 x 1536 NI @ 79 Hz



Adjusting the Screen Image

With the Main Menu shown below, use the buttons on the front control panel to adjust the OnView® controls which display on the screen. The OnView controls are explained at the top of the next page and are defined in “Main Menu Controls” on page 8.

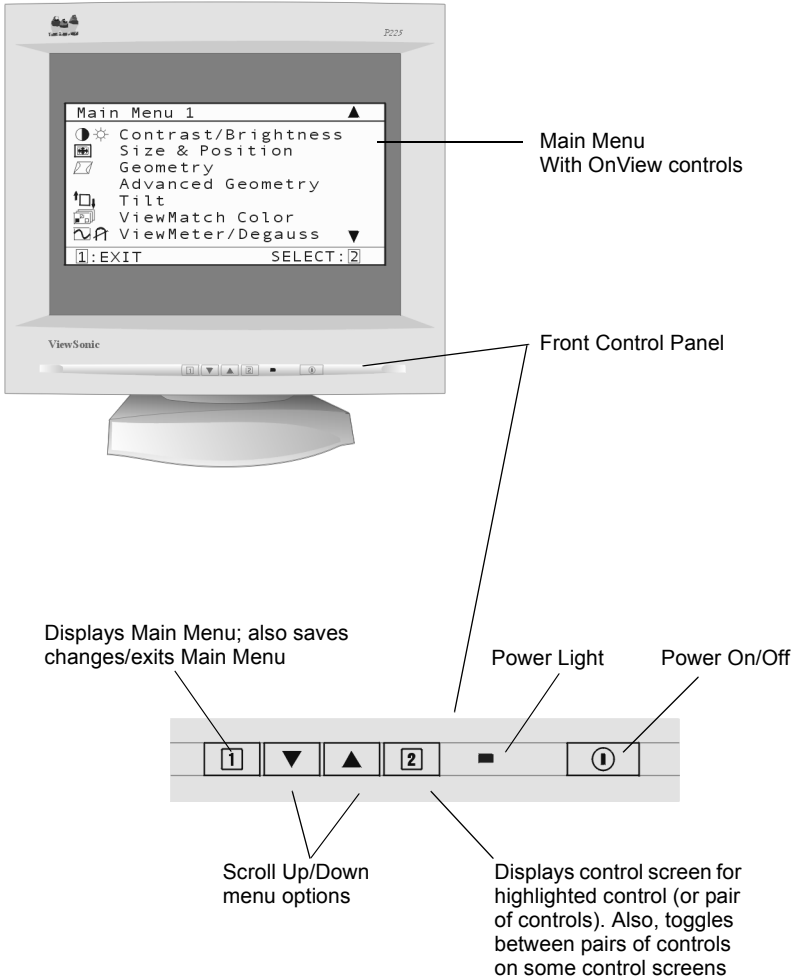

Do the following to adjust the screen image:



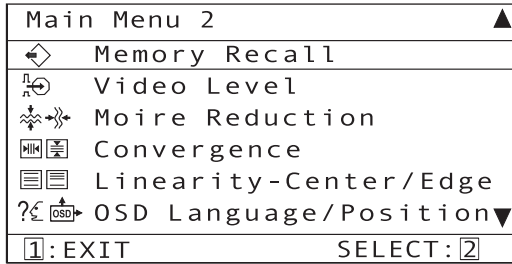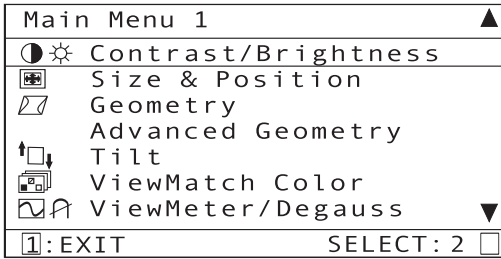









- 1 To display the Main Menu (parts 1 and 2) as shown below, press button [1].



- 2 To select a control you want to adjust, press the arrow buttons on the front control panel of your monitor (ts) and scroll through the choices. When the control you want is highlighted, press button [2].
 - E: Some controls on the Main Menu are listed in pairs, such as Contrast/Brightness. Display control screen. Press button [2] to toggle to the next control in the pair.
- 3 To adjust the selected control, such as **CONTRAST**, press the arrow buttons [▲] and [▼]).
- 4 To save the control setting and Exit the menu press button [1] *twice*.

Main Menu Controls

Adjust the menu items shown below by using the up [▲] and down [▼] buttons.

Control	Explanation
	Contrast adjusts the difference between the image background (black level) and the foreground (white level).
	Brightness adjusts the background black level of the screen image.
	Size & Position: Press button [2] to select one of the following controls to adjust: Zoom , Horizontal Position , Horizontal Size , or Vertical Size .
	Zoom expands and contracts the entire image.
	Horizontal Position moves the screen image left or right.
	Horizontal Size adjusts the width of the screen image.
	Vertical Position moves the screen image up or down.
	Vertical Size adjusts the height of the screen image.
	Geometry: Press button [2] to select one of the following controls to adjust: Vertical Pincushion , Side Pincushion Balance , Trapezoid , or Parallelogram .
	Vertical Pincushion straightens the vertical sides of the screen.
	Side Pincushion Balance curves the screen's vertical edges to the left or right.
	Trapezoid adjusts the top and bottom of the screen image until they have equal length.

Control **Explanation (Continued)**



Parallelogram straightens the four corners of the screen image.

Advanced Geometry Press button [2] to select one of the following controls to adjust: **Top Hooking**, **Bottom Hook**, **Hourglass**, or **Hourglass Bal**.



Top Hooking adjusts the top corners of the screen image.



 
Bottom Hook adjusts the bottom corners of the screen image.

S1

Hourglass straightens the curve at the top or bottom of vertical edges of the screen image appearing as “bulges”.

S2

Hourglass Bal. Allows further straightening of the curve at the top or bottom of the vertical edges of the screen images appearing as “bulges”.



Tilt rotates the entire screen image.



ViewMatch® Color provides several color options: several preset color temperatures and User Color which allows you to adjust red (R), green (G), and blue (B). The factory setting for this product is 9300K (9300° Kelvin).

9300K — Adds blue to the screen image for cooler white (used in most office settings with fluorescent lighting).

7500K — Adds red to the screen image for warmer white and richer red.

6500K — Adds red to the screen image for warmer white and richer red.

5000K — Adds red to the screen image for warmer white and richer red.

User Color — Individual adjustments for red, green, and blue.

Control

Explanation (Continued)



ViewMeter® displays the frequency signal input (horizontal scan and refresh rate) coming from the graphics in your computer. *See your video card's user guide for more details.*

(Input selection): To switch between a computer connected to the D-Sub port (DB-15 cable) and a computer connected to the BNC ports, press [▲] or [▼]



Degauss removes the build-up of magnetic fields that can cause irregular colors to appear around the edges of screen images. There are two ways to degauss the display: automatically by turning the monitor on, or manually by selecting the Degauss control from the menu. With Degauss selected from the menu, press button [2] to manually degauss the monitor.

Important: *Do not degauss repeatedly. Doing so can be harmful to the display. Wait at least 20 minutes (before selecting this control again.*



Memory Recall returns adjustments to the original factory settings if the display is operating in a factory preset timing mode listed in this user guide.

Exception: This control does not affect changes made with the **ser Co or** control.



Video Input Signal Level changes the video input signal level to match the computer's level.



Moire Reduction Press button [2] to select one of the following controls to adjust: **Horizontal Moire, Vertical Moire**



Horizontal Moire reduces vertical interference patterns that appear as ripples, waves, or unwanted background color textures. Interference patterns of this type are most noticeable when viewing images having closely spaced lines or finely detailed patterns.

Control Explanation (Continued)



Vertical Moire reduces horizontal interference patterns that appear as ripples, waves, or unwanted background color textures. Interference patterns of this type are most noticeable when viewing images having closely spaced lines or finely detailed patterns.



Convergence Press button [2] to select one of the following controls to adjust: **Horizontal Convergence, Vertical Convergence.**



Horizontal Convergence adjusts color alignment. Use this control when red or blue borders are present around the vertical segments of black letters on a white background.



Vertical Convergence adjusts color alignment. Use this control when red or blue borders are present around the horizontal segments of black letters on a white background.



Linearity Center adjusts the vertical distortion at the center of the screen image.



Linearity Edge adjusts the vertical distortion at the edge of the screen image.



Language Selection allows the user to choose the language in which the control names are displayed.



OSD Position allows you to move the on-screen display menus and control screens.

Self-Test: The self-test screen appears if you press either button [1], [▲] or [▼], or the [2] button when there is no signal input. This may be because the cable is not connected or no video signal is coming from the computer, or the monitor is in power saving mode.

Other Information

Specifications

CRT	Type Dot Pitch Glass surface	21" (20.0" viewable diagonal area), 90° deflection, 0.25 mm diagonal dot pitch SuperClear™ ARAG®, anti-glare, anti-reflection
Input Signal	Video Sync Sync	RGB Analog (0.7/1.0Vp-p, 75 Ohms f _H : 30-127 kHz, f _v : 50-180 Hz HV Separate (TTL), Composite, SOG
Compatibility	PC Macintosh ¹	VGA up to 2048x1536 Power Macintosh® up to 1,920 x 1,440 (may require Macintosh cable adapter)
Timing Modes with Maximum Refresh Rates²		1280 x 1024 N I @ 115 Hz 800 x 600 N I @ 180 Hz 1152 x 870 N I @ 134 Hz 640 x 480 N I @ 180 1024 x 768 N I @ 151 Hz 1600 x 1200 NI @ 99Hz 2048 x 1536 N I @ 79Hz
Power	Voltage	100-240 VAC 50/60 Hz
Display Area	Default Full scan	396 mm (H) x 297 mm (V) (typical) 406 mm (H) x 304 mm (V) (depends on signal timing)
Operating Conditions	Temperature Humidity Altitude	41° F to 95° F (5° C to +35° C) 5% to 90% (no condensation) To 10,000 feet
Storage Conditions	Temperature Humidity Altitude	-4° F to +140° F (-20° C to +60° C) 5% to 90% (no condensation) To 40,000 feet
Dimensions	Physical (monitor)	498 mm (W) x 501.5 mm (H) x 486 mm (D) 19.6" (W) x 19.7" (H) x 19.1" (D)
Weight	Net	27.5 kg (60.6 lb) (monitor only)
Regulations		UL, CSA, TUV/GS, CE, NOM, DHHS, PTB, FCC-B, TCO '99, MPR II, E2000, ENERGY STAR®
Power Saving Modes	On DPMS™ Suspend Stand by Off	< 148 W TYPICAL (Green LED) < 10 W (Orange LED) < 10 W (Orange LED) < 3 W (Orange LED) (Excluding USB hub)

¹ Macintosh models prior to G3 require a Macintosh adapter. To order a ViewSonic Macintosh adapter, contact Customer Support. You will need to provide the product serial number.

² **Warning:** Do not set the graphic card in your computer to exceed these maximum refresh rates; doing so could result in permanent damage to the monitor.

Troubleshooting

No power

- Make sure power button (or switch) is ON.
- Make sure A/C power cord is securely connected to the back of the monitor and to a power outlet.
- Plug another electrical device (like a radio) into the power outlet to verify that the outlet is supplying proper voltage.

Power on but no screen image

- Make sure the video cable supplied with the monitor is tightly secured to the video output port on the back of the computer. If the other end of the video cable is not attached permanently to the monitor, tightly secure it to the monitor.
- Adjust brightness and contrast.
- Verify whether an adapter is required for proper signal continuity between graphics card and monitor.

Flickering

- Not enough power supplied. Connect the monitor to a different outlet. If using a surge protector, reduce the number of devices plugged in.
- Check the ViewMeter® from the main menu to verify the refresh rate (vertical frequency) is 75 Hz or higher. See “Specifications” on page 12.
- Remove any devices from the area around the monitor that emit magnetic fields such as radios, surge protectors, unshielded speakers, fluorescent lights, AC power converters, desk fans, etc.
- Make sure the graphics card in your computer can use non-interlaced mode at the desired frequencies. To enable your graphics card to support higher refresh rates, try selecting fewer colors or running lower resolutions.

Wrong or abnormal colors

- If any colors (red, green, or blue) are missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection.
- Connect the monitor to another computer.
- Select Degauss from the Main Menu. Do this only once.
- If you have an older graphics card, contact ViewSonic® Customer Support.

Entire screen image (rolls) vertically

- Make sure video input signals are within the monitor's specified frequency range.
- Try the monitor with another power source, graphics card, or computer system.
- Connect the video cable securely.

Control buttons do not work

- Press only one button at a time.

Customer Support

For the most expedient answer to your question, do the following:

- 1 Check Troubleshooting (on the previous page).
- 2 For assistance contact your reseller.
- 3 For further assistance see the contact information listed below.

Ask your reseller to refer you to a service center if contact information for your country or region is not listed below:

O E: You need to provide the serial number (on the back of the product).

Country/Region	T = Telephone F = FAX	Email
United States	T: (800) 688-6688 F: (909) 468-1202	vstech@viewsonic.com
Canada	T: (800) 688-6688 F: (909) 468-1202	vstech@viewsonic.com
United Kingdom	T: 0800 833 648 F: 0044 (0)1293 643910	-----
Europe, Middle East, Baltic countries, and North Africa	T: 0044 (0)1293 643900 F: 0044 (0)1293 643910	-----
Australia	T: (800) 880 818	service.au@viewsonic.com
New Zealand	T: 64-3-366-1135 F: 64-3-366-7006	mbarlass@vistech.co.nz
Singapore/Southeast Asia	T: 65 2734018 F: 65 2731566	service.sg@viewsonic.com
Other Asia/Pacific countries and Indian Peninsula	T: 886 2 2248 4072 F: 886 2 2249 1751	service.ap@viewsonic.com
South Africa	T: 27-11-314-0002 F: 27-11-314-0002	atscom@mweb.co.za

Cleaning the Monitor

- MAKE SURE THE MONITOR IS TURNED OFF.
- NEVER SPRAY OR POUR ANY LIQUID DIRECTLY ONTO THE SCREEN OR CASE.

To clean the screen:

- 1 Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
- 2 If still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.

To clean the case:

- 1 Use a soft, dry cloth.
- 2 If still not clean, apply a small amount of a non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

DISCLAIMER

ViewSonic® does not recommend the use of any ammonia or alcohol-based cleaners on the monitor screen or case. Some chemical cleaners have been reported to damage the screen and/or case of the monitor. ViewSonic will not be liable for damage resulting from use of any ammonia or alcohol-based cleaners.

Limited Warranty

VIEWSONIC MONITORS

What the warranty covers:

ViewSonic® warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, **ViewSonic** will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:

ViewSonic color monitors, including the display tubes, are warranted for three (3) years for all parts and three (3) years for all labor from the date of the first consumer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b. Repair or attempted repair by anyone not authorized by **ViewSonic**.
 - c. Any damage of the product due to shipment.
 - d. Removal or installation of the product.
 - e. Causes external to the product, such as electrical power fluctuations or failure.
 - f. Use of supplies or parts not meeting **ViewSonic's** specifications.
 - g. Normal wear and tear.
 - h. Any other cause which does not relate to a product defect.
3. Removal, installation, and set-up service charges.

How to get service:

1. **For information about receiving service under warranty, contact ViewSonic Customer Support.** You will need to provide your product's serial number.
2. To obtain service under warranty, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product freight prepaid in the original container to an authorized **ViewSonic** service center or **ViewSonic**.
4. For additional information or the name of the nearest **ViewSonic** service center, contact **ViewSonic**.

Limitation of implied warranties:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages:

VIEWSONIC'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. VIEWSONIC SHALL NOT BE LIABLE FOR:

1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
3. ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

Effect of state law:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Sales outside the U.S.A. and Canada:

For warranty information and service on **ViewSonic** products sold outside of the U.S.A. and Canada, contact **ViewSonic** or your local **ViewSonic** dealer.

ViewSonic Monitor Warranty (V2.0)

Release Date: 10-15-1999

Appendix

Safety Guidelines

CAUTION: The socket-outlet shall be installed near the equipment and shall be easily accessible.

CAUTION: Use a power cable that is properly grounded. Always use the appropriate AC cord that is certified for the individual country. Some examples are listed below:

USA.....	UL	Switzerland.....	SEV
Canada.....	CSA	Britain.....	BASE/BS
Germany.....	VDE	Japan.....	Electric Appliance Control Act

IMPORTANT NOTICE CONCERNING POWER CORD SELECTION

The power cord set for this unit has been enclosed and has been selected according to the country of destination and must be used to prevent electric shock. Use the following guidelines if it is necessary to replace the original cord set, or if the cord set is not enclosed.

The female receptacle of the cord set must meet CEE-22 requirements and will look like (Figure A1 below):



For the United States and Canada

In the United States and Canada the male plug is a NEMA5-15 style (Figure A2), UL Listed, and CSA Labeled. For units which are mounted on a desk or table, type SVT or SJT cord sets may be used. For units which sit on the floor, only SJT type cord sets may be used. The cord set must be selected according to the current rating for your unit. Please consult the table below for the selection criteria for power cords used in the United States and Canada.



Cord Type	Size of Conductors in Cord	Maximum Current Rating of Unit
SJT	18 AWG	10 Amps
	16 AWG	12 Amps
	14 AWG	12 Amps
SVT	18 AWG	10 Amps
	17 AWG	12 Amps

For European Countries

In Europe you must use a cord set which is appropriate for the receptacles in your country. The cord set is HAR-Certified, and a special mark that will appear on the outer sheath, or on the insulation of one of the inner conductors.

AC PLUG CORD PRECAUTIONS FOR THE UNITED KINGDOM

FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET THEN THE PLUG SHOULD BE CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO AN APPROPRIATE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

WARNING: THIS APPLIANCE MUST BE EARTHED.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

Green-and-Yellow:	Earth
Blue:	Neutral
Brown:	Live

If the coloured wires of the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the Earth symbol or coloured GREEN or GREEN-AND-YELLOW.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

If you have any questions concerning which proper power cord to use, please consult with the dealer from whom you have purchased the product.

Compliance Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning

To assure continued FCC compliance, the user must use grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. If a BNC cable is going to be used, use only a shielded BNC(5) cable. Also, any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Notice for Japan

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

CE Conformity



The device complies with the requirements of the EEC directive 89/336/EEC as amended by 92/31/EEC and 93/68/EEC Art.5 with regard to "Electromagnetic compatibility," and 73/23/EEC as amended by 93/68/EEC Art.13 with regard to "Safety."

ViewSonic® Corporation

381 Brea Canyon Road

Walnut, CA 91789

Tel (909) 869-7976

Tel (800) 688-6688

Fax (909) 468-1202