

ie

ewPanel®

Copyright © ViewSonic Corporation, 2001. All rights reserved.

Macintosh and Power Macintosh are registered trademarks of Apple Computer, Inc.

Microsoft, Windows, Windows NT, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.

ViewPanel, ViewSonic, the three birds logo, OnView, ViewMatch, OptiSync, and ViewMeter are registered trademarks of ViewSonic Corporation.

ENERGY STAR is a registered trademark of the U.S. Environmental Protection Agency (EPA).

VESA is a registered trademark of the Video Electronics Standards Association. DPMS and DDC are trademarks of VESA.

Disclaimer: ViewSonic® Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specification without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

As an ENERGY STAR® partner, ViewSonic Corp. has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Product Registration

To meet your future needs, and to receive any additional product information as it becomes available, please register your product on the Internet at: www.viewsonic.com. The ViewSonic Wizard CD-ROM also provides an opportunity for you to print the registration form, which you may then mail or fax to ViewSonic.

For Your Records

Write the Serial Number (see back of ViewPanel) and the Purchase Date in the spaces below. Keep this User Guide as a permanent record of your purchase to help with identification in the event of theft or loss.

Product Name:	ViewSonic VG181
Model Number:	VLCD521594-1
Document Number:	VG181_UG_227
Serial Number:	_____
Purchase Date:	_____

Product Disposal at End of Product Life

ViewSonic is concerned about the preservation of our environment. Please dispose of this product properly at the end of its useful life. Your local waste disposal company may provide information about proper disposal.

CONTENTS

For Your Records	1
----------------------------	---

Getting Started

Package Contents	3
Before using the ViewPanel®	4
Precautions	4
Important Safety Instructions	5
Quick Installation*	6
Installation-Wall Mount (optional)	7

Using the ViewPanel

Setting the Timing Mode	8
Preset Timing Modes	8
Maximum Refresh Rates	8
Landscape/Portrait Modes	9
Raising and Lowering the Display	9
Adjusting the Screen Image	10

Other Information

Specifications	17
Troubleshooting	18
Customer Support	19
Cleaning the ViewPanel	20
Warranty	21

Appendix

Power Cord Safety Guidelines	22
FCC Information	23
CE Conformity	23

*To meet your future needs, and to receive any additional product information as it becomes available, please register your monitor's warranty on the Internet at: <http://www.viewsonic.com>.

Getting Started

Congratulations on your purchase of a **ViewSonic VG181** color monitor! You have selected one of the most advanced display devices in the industry. Features include OptiSync™ technology making the **VG181** capable of accepting virtually any of today's analog and tomorrow's Digital Video Interface (DVI) input sources.

Also, you can easily raise and lower the display manually. The display can operate in landscape or portrait mode and tilts or swivels in a desk mount or wall mount.

NOTE: *Save the original box and all packing material for future shipping needs.*

NOTE: The word "Windows®" in this user guide refers to the following Microsoft® operating systems: Windows '95, Windows '98, Windows NT®.

Package Contents

- **ViewSonic VG181ViewPanel**
- **DC Power Supply (AC adapter)**
The power cable connects to the AC Adapter. The other end of the AC Adapter connects to the back of the ViewPanel (the DCIn port).
- **Detachable video cable (15 pin D-sub)**
Required to receive Analog RGB video signal from PC
- **Power cord/USA type**
Connects the wall outlet to DC Power supply.
- **Power cord/SCHUKO type for Europe**
Connects wall outlet to DC Power supply
- **Quick Start Guide**
- **ViewSonic Wizard CD-ROM**
Includes User Guide PDF files and INF/ICM Display Optimization files.
- **PerfectPortrait™ CD-ROM**
PerfectPortrait software must be installed for the ViewPanel to be used in Portrait mode (see page 9).

***IMPORTANT:** The supplied **INF file** assures compatibility with Windows operating systems, and the **ICM file** (Image Color Matching) ensures accurate on-screen colors. ViewSonic® recommends that you install both files as shown in the Quick Installation section.

Before Using the ViewPanel®

- Read **Precautions** on this page, the Important Safety Instructions on the next page, and **Power Cord Safety Guidelines** in the Appendix.
- Read **Setting the Timing Mode** on page 8 before you adjust the ViewPanel. This will prevent you from making adjustments unnecessarily.

Precautions

- For best viewing conditions sit at least 18" from the ViewPanel.
- **AVOID TOUCHING THE SCREEN WITH YOUR FINGERS.** Oils from the skin are difficult to remove.
- The ViewPanel contains high-voltage parts. You may suffer serious injury if you touch these parts.
- Avoid exposing the ViewPanel to direct sunlight or another heat source. The ViewPanel should be facing away from direct sunlight to reduce glare.
- Choose a well ventilated area to position your ViewPanel. Do not place anything on the ViewPanel that prevents adequate dissipation of heat.
- Always handle your ViewPanel with care when moving it.
- Ensure the area around the ViewPanel is clean and free of moisture.
- Do not place heavy objects on the ViewPanel, video cable, or power cord.
- **CAUTION:** If smoke, abnormal noise, or strange odor is present, immediately switch the ViewPanel off and call your dealer or ViewSonic. It is dangerous to continue using the ViewPanel in this condition.

Important Safety Instructions

- 1 Read these instructions thoroughly.
- 2 Follow all warnings and instructions marked on this product.
- 3 Unplug the product from the wall outlet before cleaning. See the *Cleaning the ViewPanel* section in this guide.
- 4 Do not use the product near water. Never spill liquid of any kind on the product.
- 5 Do not place the product on an unstable cart, stand, or table. Doing so may cause the product to fall, which can seriously damage it.
- 6 Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation, never block these ventilation slots by placing the product on a bed, sofa, rug, or similar surface. This product should never be placed near or over a radiator or heat register; or installed in any enclosure that prevents proper ventilation.
- 7 Make sure the power source complies with the power recommendation printed on the back of the product. If you are not sure of the type of power provided by the wall socket, consult your dealer or local power company.
- 8 Do not place any object on the power cord. Do not place this product where people could walk on the power cord.
- 9 If you use an extension cord with this product, make sure the total ampere rating of the product(s) plugged into the extension cord does not exceed the ampere rating of the extension cord.
- 10 Never push objects of any kind through the ventilation slots at the back of the product. To do so could risk fire or electric shock.
- 11 Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltage that could cause fire or electric shock. Refer all servicing needs to authorized service personnel.
- 12 Unplug this product from the wall outlet and contact authorized service personnel under the following conditions:
 - a) When the power cord or plug is damaged or frayed.
 - b) If a liquid has been spilled into or on the product, including rain.
 - c) If the product does not operate normally when operating instructions are followed. Only adjust those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - d) If the product has been dropped or the cabinet has been damaged.
 - e) If the product exhibits a distinct change in performance, indicating a need for service.

Quick Installation

Available options: wall mount (contact ViewSonic or your dealer), turn the display from Landscape to Portrait mode (see Using the ViewPanel section), raise or lower the display up or down (see the next page). However, if you just want the quickest and easiest way to get connected, follow the Quick Installation instructions below.

1 Connect video cable

Make sure that both the ViewPanel® and the computer are powered OFF. Connect the video cable from the back of your computer to the analog and/or the Digital Video Interface (DVI) inputs on the back of the display depending on the signal of your computer(s). If you have both analog and digital inputs, see Using the ViewPanel in this guide to toggle between the two ports.

Macintosh® users: Connect a Macintosh adapter (part No. VMAC-1) to the video cable, then to the ViewPanel. To order an adapter for older Macintosh systems send an email to: vsparts@viewsonic.com, or call ViewSonic® customer service (see the Customer Support section of this guide). You will need to provide your ViewPanel's serial number.

2 Connect AC/DC adapter and power cord

Connect the power cord to a properly grounded AC (i.e., wall) outlet, then to the AC/DC adapter and to the ViewPanel as shown below.

3 Power-ON ViewPanel and computer

Power-ON the ViewPanel, **THEN** power-ON the computer.

NOTE: At this point Windows® 98 users may receive a message asking them to install the VG181's INF file.

4 Install Display Optimization files (INF and ICM files)

(1) Insert the ViewSonic Wizard CD-ROM into your computer's CD-ROM drive.

NOTE: If your computer does not have a CD-ROM drive, see Customer Support in this manual.

(2) Wait for the CD-ROM to auto-start.

NOTE: If the CD-ROM does not auto-start: double-click on the CD-ROM icon in Windows Explorer, then double-click on **install.exe**.

(3) Follow the on-screen instructions.

5 Windows users: Setting the Timing Mode

 
See page 8 for procedures to set the timing mode.

Installation is complete!

Enjoy your new ViewPanel!

To be best prepared for any future customer service needs:

- Write the serial number (see back of the ViewPanel) in "For your Records" on page 1 of this guide.
- Register the product on the Internet at: www.viewsonic.com

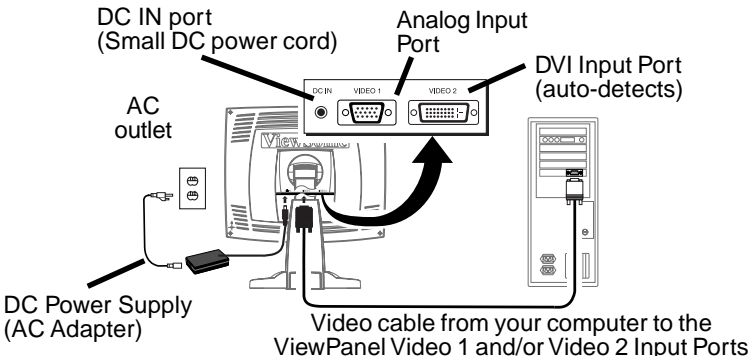

Installation-Wall Mount (optional)

To get a wall mounting kit, contact ViewSonic® or your local dealer. The VG181 is compatible with the VESA wall mounting standards. To convert the desk-mounted VG181 to a wall-mount installation, do the following:

1 Disconnect DC power.

Make sure the power is turned off and then disconnect the DC power cord from the back of the ViewPanel.

2 Lie the ViewPanel face down on a flat surface.

Be sure nothing sharp can scratch or puncture the LCD surface (the face of the ViewPanel).

3 Pull the square-like cover from the back of the ViewPanel.


The plastic cover should hang over the back of the neck of the ViewPanel to expose the four screws to the wall mount.

4 Remove the four screws to disconnect the base from the back of the ViewPanel.

Store the base in a safe place.

5 Attach the ViewPanel to the wall mounting kit.

 Follow the instructions that come with the wall mounting kit.

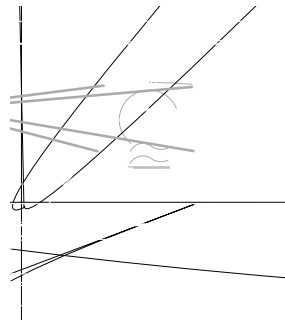

Using the ViewPanel

Setting the Timing Mode

The timing mode consists of the resolution and refresh rate (vertical frequency). After setting the timing mode, use the ViewSonic OnView® controls in this section to make adjustments. The recommended timing mode for this ViewPanel is: **1280 x 1024 @ 60Hz**.

To set the Timing Mode:

- 1 Set the resolution: Right-click on the Windows® desktop > **Properties** > **Settings** > **Desktop Area** > set the resolution (example 1280 x 1024 @ 60Hz).
- 2 Set the refresh rate: See your graphic card's user guide for instructions.

NOTE: To minimize the adjustments required for an optimal screen image, select a timing mode from the **Preset Timing Modes** table below.

Preset Timing Modes

VGA 640 x 350 @ 70Hz VGA 640 x 400 @ 70Hz VESA 640 x 480 @ 75Hz VESA 800 x 600 @ 75Hz	VESA 1024 x 768 @ 75Hz VESA 1280 x 1024 @ 60Hz & 75Hz Macintosh® 640 x 480 @ 67Hz
--	---

- 3 For best image quality, activate AUTO TUNE from the IMAGE ADJUST menu.
- 4 If necessary, make small adjustments using H POSITION and V POSITION (Horizontal Position and Vertical Position) from the IMAGE ADJUST menu until the screen image is completely visible. (The black border around the edge of the screen should barely "touch" the illuminated "active area" of the ViewPanel.)

WARNING: Do NOT set the graphics card in your computer to exceed the maximum refresh rate for each resolution shown below in the **Maximum Refresh Rates** table. Doing so may result in permanent damage to your ViewPanel.


Maximum Refresh Rates

1280 x 1024 @ 75Hz 1024 x 768 NI @ 75 Hz	800 x 600 NI @ 75Hz 640 x 480 NI @ 75 Hz
---	---


(NI= Non Interlaced)

Landscape/Portrait Modes*

 The **VP181** ViewPanel® can operate in either Landscape or Portrait mode (see below).

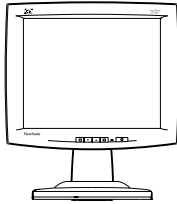

Landscape

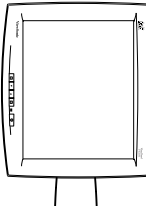 

Portrait

NOTE: Before using the portrait display mode, first install the **PerfectPortrait™*** software included with your **VG181** ViewPanel. Follow the instructions that accompany the **PerfectPortrait** software.

 
 
To switch from Landscape (default) to Portrait modes, do the following: (1) Face the front of ViewPanel. (2) Pull the bottom of the ViewPanel toward you to tilt the bottom away from the base. (3) After tilting the ViewPanel, manually rotate the VP181 clockwise 90°.

To switch from Portrait to Landscape mode, follow steps 1 - 3 above, but manually rotate the **VP181** panel *counter-clockwise* 90°.

*PerfectPortrait software is compatible with most PCI and AGP graphics (video) cards. For information on compatible graphics cards and approved hardware configurations, go to the ViewSonic website, <http://www.viewsonic.com>, and select the following path: Customer support > Support options > Document area > PPCHART.XLS. The PPCHART.XLS spreadsheet will provide information on compatibility with your graphics card.

To Raise and Lower the display

You can easily raise and lower the display panel (the head) manually. As you face the front of the display, take hold of each side of the head and pull upward or down to meet your personal preference.

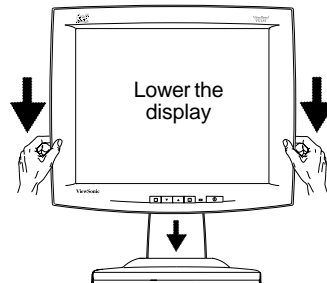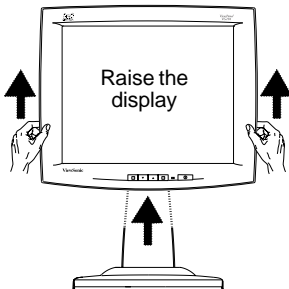

Adjusting the Screen Image

 
 
Adjust the screen image using the buttons on the **Front Control Panel** to select from the menus and make adjustments. For descriptions of each control see the next few pages.

IMPORTANT: The main menu shown below and submenus on following pages are available only when connected to an analog source. The Digital source uses only the brightness and contrast control with no menus.

Main Menu

See the steps below for accessing the menus. See the next few pages for descriptions of menu selections.

All menus and adjustment screens disappear automatically.

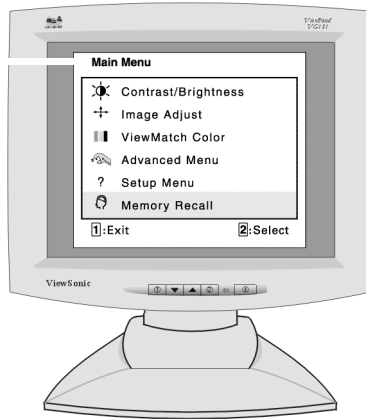

Adjusting the Screen Image..continued

 
The following steps show an example of how to access the **O Menu** from ViewSonic®, the **Submenus**, and make adjustments to the screen image. For more information on each control see the

- 1 Press the [1] button on the Front Control Panel to display the Main Menu shown on the right.



- 2 Press the [▼] or [▲] button to scroll down or up the menu to the desired option.
- 3 Press the [2] button to select a menu option. A control screen like the sample shown below appears (see Step 4A). Or, another menu appears with more options (see Step 4B).


Command lines show what to do next: i.e., [▼] or [▲] or [1] or [2]

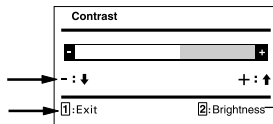

Control screen (sample)

In this example, pressing button [2] goes to the Brightness control screen.

 - 4 Do one of the following:
 - A With a control screen displayed like the one shown above in Step 3, press the [▼] or [▲] button to make adjustments.
 - B With another menu displayed like the sample shown on the right, press [▼] or [▲] to select an option. Then, press the [2] button to go to the control screen. Press [▼] or [▲] to make adjustments.

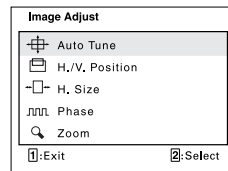


Submenu (sample)

- 5 After making adjustments, press the [1] button to save changes and exit the screen.

Main Menu

 The Main Menu is shown below.

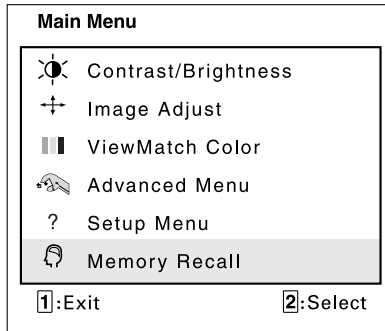

CONTRAST adjusts the difference between the image background (black level) and the foreground (white level).

[▼] decreases contrast, [▲] increases contrast.


BRIGHTNESS adjusts background black level of the screen image.

[▼] decreases brightness, [▲] increases brightness.

....continued

Image Adjust Menu

The Image Adjust menu is shown below.

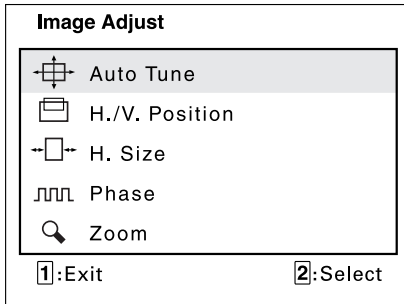 

AUTO TUNE automatically sizes, centers, and fine tunes the video signal to eliminate "noise" and distortion.

Press [2] to activate.

Shortcut: Before displaying the Main Menu, press [2] to activate AUTO TUNE.



H POSITION (Horizontal Position) moves the screen image to the left or to the right.

[▼] moves screen image left, [▲] moves screen image right.

V POSITION (Vertical Position) moves the screen image up or down.

[▼] moves screen image down, [▲] moves screen image up.



H SIZE (Horizontal Size) adjusts the width of screen image.

[▼] decreases the width of screen image, [▲] increases the width of screen image.

Phase minimizes the video distortion.

Press [▼] or [▲] to adjust to your preference.



Zoom expands and contracts the entire screen image.

 
[▼] Expands the screen image.

[▲] Contracts the screen image.

....continued

ViewMatch® Color Menu

The ViewMatch Color menu is shown below:

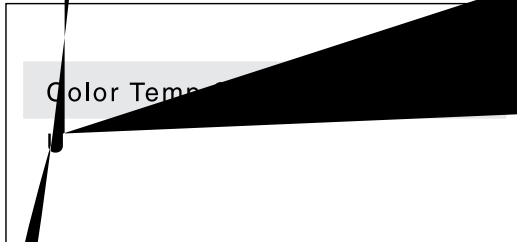

Color Temp Select provides several color options: several preset color temperatures and **User Color** which allows you to adjust red (R), green (G), and blue (B). The factory setting for this product is 9300K (9300 Kelvin).

Press [▼] or [▲] to scroll to your selection.

9300K — Adds blue to the screen image for cooler white (used in most office settings with fluorescent lighting).

6500K — Adds red to the screen image for warmer white and richer red.

5400K — Adds green to the screen image for a darker color.

 
5000K — Adds blue and green to the screen image for a darker color.

User Color — Individual adjustments for red, green, and blue.

Press [▲] to increase blue.

Advanced Menu

Selecting the Advanced Menu from the main menu takes you to the submenu shown below.

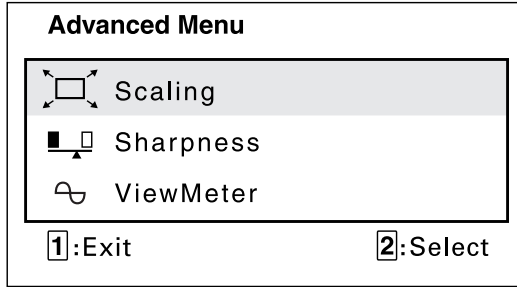

Scaling adjusts the video input signal to the screen size using the following options.

Press [▼] or [▲] to select from the following options:

1:1 adjusts the video signal so that the height and width of the picture are the same.



Sharpness adjusts the clarity and focus of the screen image.

Press [▼] or [▲] to adjust the image sharpness.



 
ViewMeter[®] displays the timing mode (video signal input) coming from the graphics card in your computer. See page 8 for instructions on changing the resolution. Also, see your graphic card's user guide for instructions on changing the refresh rate (vertical frequency).

NOTE: See the Preset Timing Modes chart on page 8. *Example:*

VESA[®] **1280 x 1024 @ 60Hz** (recommended) means that the resolution is **1280 x 1024** and the refresh rate is 60 Hertz.

Setup Menu

The Setup Menu takes you to the submenu shown below.

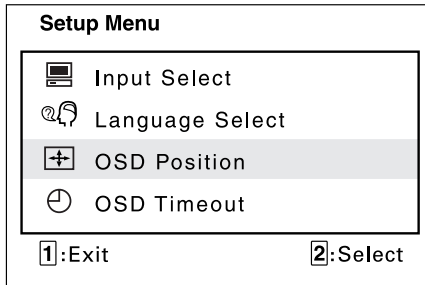

Input Select allows you to toggle between two input ports – between an analog and digital signal. Press [▼] or [▲] to select an input signal.



Language Select allows you to choose the language used in the menus and control screens. Press [▼] or [▲] to select a language (English, French, German, Spanish, or Italian).



OSD Position allows you to move the on-screen display menus and control screens. Press [▼] or [▲] to move the OSD.



OSD Timeout sets the length of time the on-screen display screen is displayed. For example, with a “30 second” setting, if a control is not pushed within 30 seconds, the display screen disappears.

Memory Recall returns adjustments to the original factory settings if the display is operating in a factory Preset Timing Mode listed in this user guide.

Exception: This control does not affect changes made with the **User Color** control.

Note: Using this control resets color to 9300K.

Other Information

Specifications

LCD	Type	18.1" (full viewable diagonal area), TFT (Thin Film Transistor), Active Matrix XGA LCD, 0.2805mm pixel pitch
	Color Filter Glass surface	RGB vertical stripe Anti-Glare
Maximum Viewing Angles	Horizontal	160° CR<10
	Vertical	160° CR<10
Input Signal		RGB analog (0.7 /1.0 Vp-p, 75 ohms), DVI Digital,
Video Sync		Separate Sync, Composite Sync, Sync On Green, f _h : 30-82 kHz, f _v : 50-75 Hz
Compatibility	PC	Up to 1280 x 1024 NI
	Macintosh®*	Power Macintosh® up to 1280 x 1024
Power	Voltage	90-264 VAC, 50/60 Hz (auto switch) DC Power Supply (AC Adapter)
Display Area	Full scan	359.0 mm (H) x 287.2mm (V) 11.2" (H) x 8.4" (V)
Operating	Temperature	32°H) x 287.2mm 4140 JET42.452 4140 9 m362.855 350.69 IS2[

Preset Timing Modes (pre-adjusted to VESA® 1280 x 1024 @ 60Hz) see page 8 for Preset Timing Modes table.

* Macintosh computers may require a ViewSonic® Macintosh adapter. To order an adapter, send an email to vsparts@viewsonic.com, or contact ViewSonic.

Troubleshooting

No power

- Press Power button ON.
- Make sure AC power cord is securely connected to the DC power supply and the power supply is firmly connected to the ViewPanel.
- Plug another electrical device (like a radio) into the power outlet to verify that the outlet is supplying proper voltage.
- Make sure all short cables are installed see Installation section.

Power on but no screen image

- Make sure the video cable supplied with the ViewPanel® is tightly secured to the video output port on the back of the computer. If the other end of the video cable is not attached permanently to the ViewPanel, tightly secure it to the ViewPanel.
- Adjust brightness.

Wrong or abnormal colors

- If any colors (red, green, or blue) are missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection.
- Connect the ViewPanel to another computer.
- Check ViewMatch® color menu for proper settings

Entire screen image scrolls (rolls) vertically

- Make sure video input signals are within the ViewPanel's specified frequency range.
- Try the ViewPanel with another power source, graphics card, or computer system.
- Connect the video cable securely.

Control buttons do not work

- Press only one button at a time.

Customer Support

For the most expedient answer to your question, do the following:

- 1 Check the **Troubleshooting** section of this manual (on the previous page).
- 2 For assistance contact your reseller.
- 3 For further assistance see the contact information listed below.

NOTE: If contact information is not listed below for your country or region, your reseller will refer you to a service center.

Country/Region	T = Telephone; F = Fax	Email
United States	T: (800) 688-6688 F: (909) 468-1202	vstech@viewsonic.com
Canada	T: (800) 688-6688 F: (909) 468-1202	vstechs@viewsonic.com
United Kingdom	T: 0800 833 648 F: 0044 (0)1293 643910	-----
Europe, Middle East, Baltic countries, and North Africa	T: 0044 (0)1293 643900 F: 0044 (0)1293 643910	-----
Australia	T: 800 880 818	service.au@viewsonic.com
New Zealand	T: 64-3-366-1135 F: 64-3-366-7006	mbarlass@vistech.co.nz
Singapore/Southeast Asia	T: 65-273-4018 F: 65-273-1566	service.sg@viewsonic.com
Other Asia/Pacific countries and Indian Peninsula	T: 886-2-2248-4072 F: 886-2-2249-1751	service.ap@viewsonic.com
South Africa	T: 27-11-314-0002 F: 27-11-314-0002	atscom@mweb.co.za

Cleaning the ViewPanel®

- DO NOT APPLY PRESSURE TO THE SCREEN.
- NEVER POUR OR SPRAY ANY LIQUID DIRECTLY ONTO THE SCREEN OR CASE OF THE VIEWPANEL.

To clean the screen:

- 1 Gently wipe the screen with a clean camel hair lens brush, or a soft, clean, lint-free cloth. This removes dust and other particles that can scratch the screen.
- 2 If still not clean, blow on the screen and gently wipe with a soft, clean, lint-free cloth.

DISCLAIMER

ViewSonic® does not recommend the use of any liquid cleaners on the ViewPanel screen or case. Chemical cleaners have been reported to damage the screen and/or case of the ViewPanel. Further, ViewSonic does not recommend applying pressure when wiping the ViewPanel screen clean. ViewSonic will not be liable for damage resulting from use of liquid cleaners or resulting from applying pressure to the screen.

LIMITED WARRANTY

VIEWSONIC LCD VIEWPANEL®

What the warranty covers:

ViewSonic® warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, **ViewSonic** will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:

ViewSonic LCD ViewPanels are warranted for three (3) years for all parts including the light source and three (3) years for all labor from the date of the first consumer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b. Repair or attempted repair by anyone not authorized by **ViewSonic**.
 - c. Any damage of the product due to shipment.
 - d. Removal or installation of the product.
 - e. Causes external to the product, such as electrical power fluctuations or failure.
 - f. Use of supplies or parts not meeting **ViewSonic's** specifications.
 - g. Normal wear and tear.
 - h. Any other cause which does not relate to a product defect.
3. Removal, installation, and set-up service charges.

How to get service:

1. FOR INFORMATION ABOUT RECEIVING SERVICE UNDER WARRANTY, CONTACT **VIEWSONIC CUSTOMER SUPPORT**. YOU WILL NEED TO PROVIDE YOUR PRODUCT'S SERIAL NUMBER.
2. To obtain service under warranty, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product freight prepaid in the original container to an authorized **ViewSonic** service center or **ViewSonic**.
4. For additional information or the name of the nearest **ViewSonic** service center, contact **ViewSonic**.

Limitation of implied warranties:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages:

VIEWSONIC'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. VIEWSONIC SHALL NOT BE LIABLE FOR:

1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
3. ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

Effect of state law:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Sales outside the U.S.A. and Canada:

For warranty information and service on **ViewSonic** products sold outside of the U.S.A. and Canada, contact **ViewSonic** or your local **ViewSonic** dealer.

Rev. 9/20/99

Appendix

Power Cord Safety Guidelines

Caution : Use a power cable that is properly grounded. Always use the AC cords listed for each country below:

USA	UL	Switzerland	SEV
Canada	CSA	Britain	BASEC/BS
Germany	VDE	Japan	Electric Appliance Control Act

In other areas, use AC cord which meets local safety standards.

AC PLUG CORD PRECAUTIONS FOR THE UNITED KINGDOM

FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET THEN THE PLUG SHOULD BE CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO AN APPROPRIATE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

WARNING: THIS APPLIANCE MUST BE EARTHED.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

Green-and-Yellow:	Earth
Blue:	Neutral
Brown:	Live

If the coloured wires of the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the Earth symbol or coloured GREEN or GREEN-AND-YELLOW.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

IMPORTANT NOTICE CONCERNING POWER CORD SELECTION

The power cord set for this unit has been enclosed and has been selected according to the country of destination and must be used to prevent electric shock. Use the following guidelines if it is necessary to replace the original cord set, or if the cord set is not enclosed.

The female receptacle of the cord set must meet CEE-22 requirements and will look like (Figure 1 below):

Figure 1 

For the United States and Canada

In the United States and Canada the male plug is a NEMA5-15 style (Figure 2), UL Listed, and CSA Labelled. For units which are mounted on a desk or table, type SVT or SJT cord sets may be used. For units which sit on the floor, only SJT type cord sets may be used. The cord set must be selected according to the current rating for your unit. Please consult **Table A** below for the selection criteria for power cords used in the United States and Canada.

Figure 2 

For European Countries

In Europe you must use a cord set which is appropriate for the receptacles in your country. The cord set is HAR-Certified, and a special mark that will appear on the outer sheath, or on the insulation of one of the inner conductors.

If you have any questions concerning which proper power cord to use, please consult with the dealer from whom you have purchased your ViewPanel.

Table A

CordType	Size of Conductors In Cord	Maximum Current Rating of Unit
SJT	18AWG	10Amps
	16AWG	12Amps
	14AWG	12Amps
SVT	18AWG	10Amps
	17AWG	12Amps

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning:

To assure continued FCC compliance, the user must use grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. If a BNC cable is going to be used, use only a shielded BNC(5) cable. Also, any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Power Supply Cord USA

For units with 100 - 120V input voltage in the USA, use the following :

UL Listed and CSA Certified Type SVT or SJT No. 18/3 AWG rated 125Vac 7 A min.

One end terminated in a molded on parallel blade, grounding attachment cap or hooded attachment cap (15A, 125V configuration), other end terminated in a mold-on appliance coupler.

Notice for Germany

The x-rays generated in this unit are shielded sufficiently. High voltage: Max. 30 kV. Also, for ergonomic reasons, we recommend that you do not display blue characters on a dark background. Doing so may produce insufficient contrast that could lead to eye strain.

Notice for Japan

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

CE Conformity



The device complies with the requirements of the EEC directive 89/336/EEC as amended by 92/31/EEC and 93/68/EEC Art.5 with regard to "Electromagnetic compatibility", and 73/23/EEC as amended by 93/68/EEC Art. 13 with regard to "Safety".

NOTES

ViewSonic® Corporation