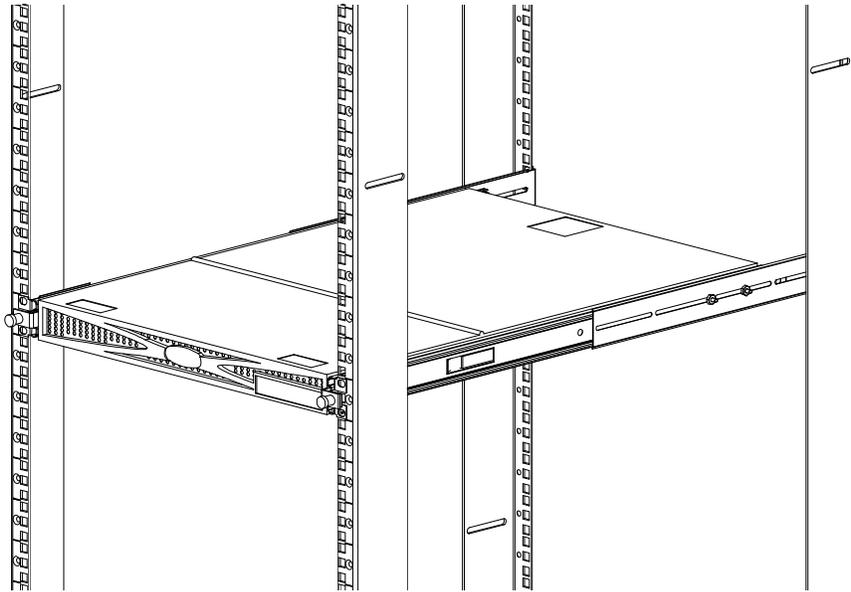
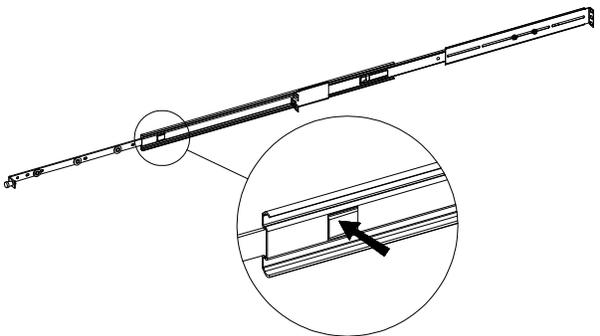
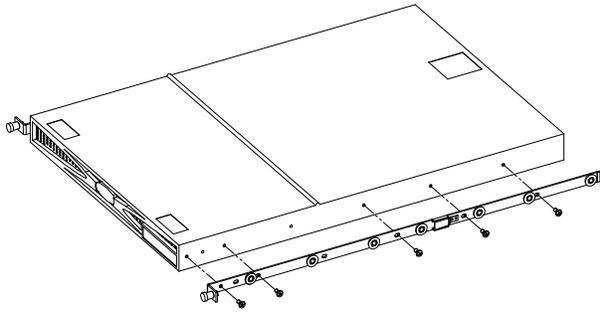
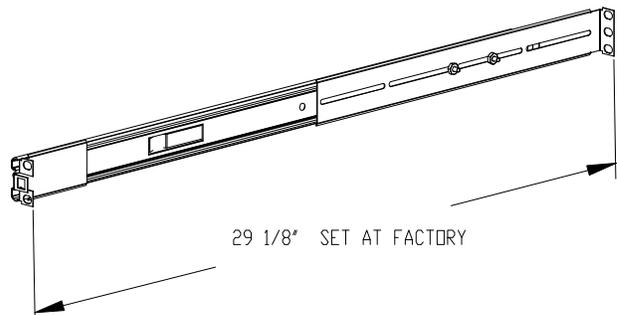
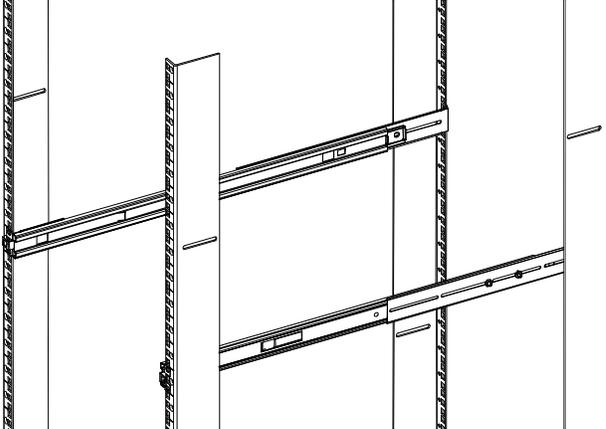
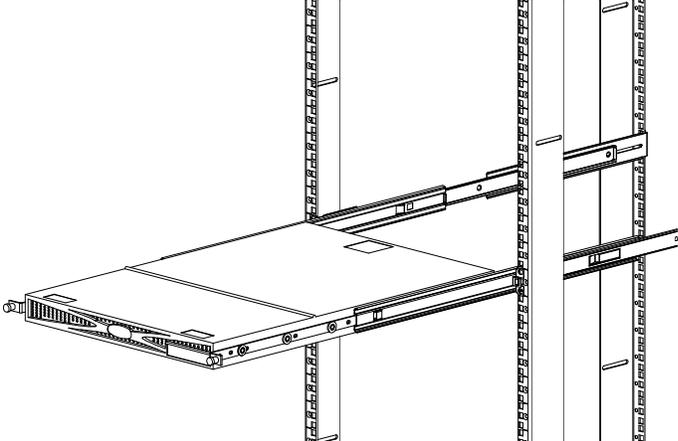
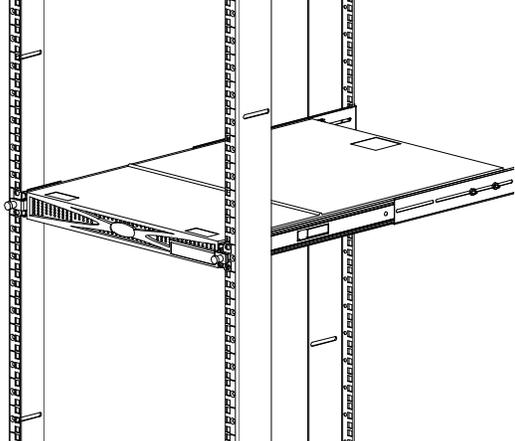

V210/V240-R19-H Rack Mount Kit Installation Guide



V210/V240-R19-H Rack Mount Kit Installation Guide

Step	Detail
<p>1. Separate the Slide Assemblies by detaching the Inner Slide Member from the Outer Slide Member. Remove the Inner Slide Member from the Slide Assembly by first fully extending the Inner Slide Member. Next depress the slide stop, which allows for the Inner Slide Member to be detached.</p>	
<p>2. Attach the Inner Slide members to both sides of the server using (5) M4 pan head screws.</p>	
<p>3. Adjust the Slide Mounting Brackets to the correct Depth. To adjust:</p> <ul style="list-style-type: none">• Loosen the two nuts at the rear of the slide using a 11/32" wrench• Move the Rear Slide-Mounting bracket to the correct depth• Tighten the nuts.	 <p>29 1/8" SET AT FACTORY</p>

V210/V240-R19-H Rack Mount Kit Installation Guide

Step	Detail
<p>4. Install the Outer Slide Member in the rack enclosure. Attach the Front Mounting Bracket to the Front Rack Rail using (2) 10-32 x 1/2" pan head screws. Attach the Rear Mounting Bracket to the Rear Rack Rail using (3) 10-32 x 1/2" pan head screws.</p> <p>5. Repeat step 3 for the left Outer Slide Member.</p>	 A technical line drawing showing a side view of a rack enclosure. Two horizontal rails are visible. An outer slide member is being inserted into the rails. The front of the slide has two mounting brackets, one on each side, which are being secured to the rails with screws. The rear of the slide has three mounting brackets, one on each side and one in the center, also being secured to the rails with screws.
<p>6. Install the server into the rack enclosure. Approach the rack with the rear of the server facing the rack enclosure. Align the Inner Slides on the server with the Outer Slide Rails attached to the rack enclosure. Slide the server all the way into the rack enclosure until it stops. The slides will lock into place in the slide rails.</p>	 A technical line drawing showing a server being inserted into a rack enclosure. The server is shown from a perspective view, with its front bezel facing left and its rear panel facing right. The server is being pushed into the rack enclosure, which has the outer slide members installed. The server's internal slides are aligning with the rack's rails. The server is shown partially inserted, with its front bezel still outside the enclosure.
<p>7. Secure the server in the rack by tightening the (2) thumbscrews mounted on either side of the server's front bezel.</p>	 A technical line drawing showing the server fully inserted into the rack enclosure. The server's front bezel is now flush with the rack's front panel. Two thumbscrews are shown on either side of the bezel, being tightened to secure the server in place. The server's front panel is now fully visible, and the rack enclosure is closed.

Warranty

LIMITED WARRANTY AND WARRANTY DISCLAIMER - Seller warrants that the System will be free from defects in materials and workmanship for a period of one (1) year from date of delivery to customer premises. Seller's sole liability and Customer's sole and exclusive remedy for any breach of this warranty is, at Seller's option and expense, to repair or replace any defective System that is returned to it by Customer. Seller will have no obligation under this section to the extent any defect in the System is caused by or is attributable to negligence, accident, misuse, abuse, use of the System than in accordance with Seller's documentation or user manual, modifications, alterations or repairs to the System made by a party other than Seller, or actions of third parties or like events outside Seller's reasonable control. EXCEPT AS EXPRESSLY SET FORTH IN THIS SECTION, TO THE EXTENT PERMITTED BY APPLICABLE LAW, SELLER DISCLAIMS ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUALITY, OR NONINFRINGEMENT, AND ANY WARRANTIES ARISING FROM COURSE OF DEALING OR USAGE OF TRADE.

LIMITATIONS OF LIABILITY - IN NO EVENT WILL SELLER BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS OR REVENUE, LOSS OF USE, LOST BUSINESS OPPORTUNITIES OR LOSS OF GOODWILL), OR FOR THE COSTS OF PROCURING SUBSTITUTE PRODUCTS, ARISING OUT OF OR IN CONNECTION WITH THESE TERMS OF SALE OR THE USE OF THE SYSTEM, WHETHER SUCH LIABILITY ARISES FROM ANY CLAIM BASED UPON CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, WHETHER OR NOT SELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. IN NO EVENT WILL SELLER'S TOTAL CUMULATIVE LIABILITY, FROM ALL CAUSES OF ACTION AND ALL THEORIES OF LIABILITY, EXCEED THE TOTAL AMOUNTS ACTUALLY PAID TO SELLER BY CUSTOMER UNDER THE ORDER THAT GIVES RISE TO ANY LIABILITY HEREUNDER.

During the warranty period, purchaser must promptly call SharkRack (877-427-5722) to log any such defects in materials and workmanship.