## Operating instructions for your



COBRA ELECTRONICS CORPORATION 6500 W. Cortland Street Chicago, Illinois 60707



Citizens Band 2-way Handheld CB Radio





How to use your





## 2-WAY HANDHELD RADIO

CONTENTS:		Selecting a channel10
Introduction	3	LED Display10
Features		Transmit / Receive10
Technical Support and service	3	In Vehicle Use11
Controls and Indicators		How your CB can serve you12
The CB Story		Never Used A CB Before?12
FCC Warnings		A few rules you should know13
Included with your HH33		Channel 9 Emergency Messages14
Getting Started		CB 10 Codes15
Antenna		Frequency Ranges16
Battery Chamber		Specifications17
Operation		If You Think You Need Service18
Turning your Hand-Held CB on		Warranty Information19
Setting the Squelch		Optional Accessories20

### INTRODUCTION

The HH33 is designed to give you consistent, outstanding performance in virtually all conditions and situations. To insure you get the most from the Cobra HH33, please read this operating guide carefully before using the unit.

### **FEATURES**

-Full 4 Watts Power Output

-40 CB Radio Channels -High Efficiency Flexible Antenna -Battery Saver Circuitry

-Low Battery Indicator

-BNC Antenna Connector

-Transmission/Receive Indicators

### **TECHNICAL SUPPORT**


For technical assistance, please call our Automated Help Desk which can assist you by answering the most frequently asked questions about Cobra products.

> (773) 889-3087 24 hours a day, 7 days a week.

A Consumer Service Representative can be reached through this same number 8:00 am - 8:00 pm, Monday through Friday, CST.

Technical assistance is also available on-line in the Frequently Asked Question (FAQ) section at www.cobraelec.com or by e-mail to productinfo@cobraelec.com

3

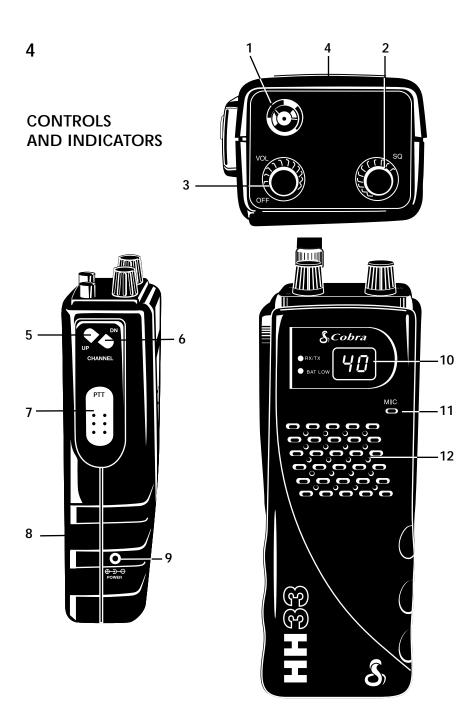

- 1. BNC Antenna Connector
- Squelch Control
  On/Off Volume Control

- Belt Clip
  Channel Up Key
  Channel Down Key
  PTT (Push To Talk) Key
  Battery Chamber
- DC Power Jack
- 10. LED Display Panel
- 11. Microphone12. Speaker

### THE CB STORY

The Citizens Band lies between the shortwave broadcast and 10-meter Amateur radio bands, and was established by law in 1949. The Class D two-way communications service was opened in 1959. (CB also includes a Class A citizens band and Class C remote control frequencies.)

FCC regulations permit only "transmissions" (one party to another) rather than "broadcasts" (to a wide audience). Thus, advertising is not allowed on CB Channels because that is "broadcasting."

### **FCC WARNINGS**

Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Cobra, may cause violation of the technical regulations of Part 95 of the FCC Rules, or violation of Type Acceptance requirements of Part 2 of the Rules.

Citizens Band (CB) Radio operators are no longer required to obtain an FCC license to operate their CB equipment or provide station identification.

Nevertheless, an operator of a CB radio station is still required to comply with the communications act and with the rules of CB Radio Operation.



### **GETTING STARTED**

### **ANTENNA**

Attach antenna securely by turning clockwise.




### **BATTERIES**

Insert (10) new "AA" Alkaline batteries (not provided) into the battery chamber. To install batteries, (1) remove the battery chamber cover from the unit. (2) Install the batteries according to the polarity markings provided on the chamber. Note: Incorrect battery installation can damage the batteries and chamber. (3) Return battery chamber cover.

#### Alkaline batteries:

Top grade Alkaline batteries should be used.

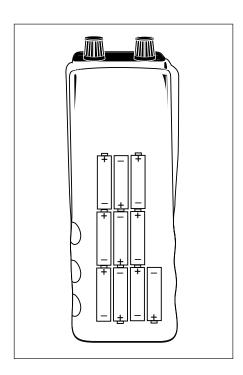

# OPERATION TURNING ON/SQUELCH

# TURNING YOUR HANDHELD CB ON


Rotate the power ON-OFF Volume Control clockwise.

Open the squelch by fully turning counterclockwise and adjust the volume to a comfortable level.




Think of your squelch control as a gate for incoming signals. If you turn the squelch control fully clockwise, you effectively close the "gate" and no signals will pass through. If you turn the squelch control fully counterclockwise, you open the gate and all signals come through.

To achieve the **Desired Squelch Setting (DSS)**, turn the squelch control counterclockwise until you just hear noise. Then turn the squelch control back clockwise just until the noise stops. This **DSS** setting only lets strong signals through.

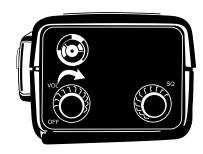

9

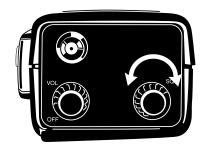

### **OPERATION SELECT CHANNEL/DISPLAY/TRANSMIT**

# **OPERATION**

10

### **SELECTING A CHANNEL**

Turn on your HH33.

To select a higher channel, push the UP arrow key.

To select a lower channel, push the DOWN arrow key.

\*\*Note: To quick advance channels, press and hold the selection key.

### LED DISPLAY

- Red LED for TRANSMIT (TX)
- Green LED for RECEIVE (RX)
- Red BATT LOW Indicator
- Red SoundTracker™ "ON" Indicator

### TRANSMIT / RECEIVE

To transmit, push the PTT button. The Red TX LED will be displayed during transmissions.

Hold the HH33 mic about 2 inches from vour mouth.


Speak into the microphone in a normal voice.

Release the PTT button to receive incoming transmissions.

\*\*Note: While the PTT button is depressed, you cannot receive transmissions. The Green RX LED is displayed when the radio is in receive mode.





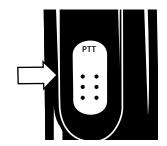

# IN VEHICLE USE

### IN VEHICLE USE

Your HH 33 can be connected to a 12 volt power source with the cigarette power cord adaptor provided. Connect adaptor as shown.

\*\*Note: Due to the characteristics of CB transmissions, it may be difficult to transmit and receive from inside your car. Roof mounted antennas can dramatically improve transmissions and will increase your range. You will need a quality roof mount antenna and a BNC/SO239 adapter. See accessories section for details.



11

### **OPERATION** HOW YOUR CB CAN SERVE YOU

### **OPERATION** A FEW RULES YOU SHOULD KNOW

12 13

### **HOW YOUR CB CAN SERVE YOU**

- Warn of traffic tie ups ahead.
- Provide weather and road information.
- Provide help fast in event of emergency or breakdown.
- Suggest good spots to eat and sleep.
- Make long trips more interesting. and help keep you awake.

- Provide direct contact with your office or home.
- Make friends as you travel.
- Provide "local information" to find vour destination.
- Help law enforcement officers by reporting drunk and reckless drivers.

### **Never Used A CB Before?**

### WHAT TO EXPECT FROM YOUR NEW COBRA CITIZENS BAND TRANSCEIVER

Citizens Band Two-Way Radios operate on an AM frequency, just like your car radio.

#### FIRST:

When you first use your new CB you should tune to channel 19. At first, you may hear what you think is a lot of noise and garble.

What you are hearing are parts of many faraway conversations that are drifting into your transceiver. To eliminate the "noise" you need to set up the SQUELCH control. It will silence the "noise" by tuning your receiver to "hear" only close-by communications. Turn the SQUELCH control to the right until you silence the noise. You will need to adjust this control as the "noise" level will go up or down depending on your location.

#### SECOND:

Try a broadcast. Say, "Break One-Nine for a Radio Check." Listen for a response from another CBer near you. If you do not get a response repeat the message. When you get a response ask, "How are you receiving my transmission?" NOW YOU ARE ON THE AIR! Try asking about the road conditions, the weather conditions, a good place to eat. Don't be afraid to talk.

#### A FEW RULES YOU SHOULD KNOW

- 1. You are not allowed to carry on a conversation with another station for more than five minutes at a time without taking a one-minute break to give others a chance to use the channel.
- 2. You are not allowed to blast others off the air by overpowering them with illegally amplified transmitter power or illegal high antennas.
- 3. You can't use the CB to promote illegal activities.
- 4. You are not allowed to use profanity.
- 5. You may not play music in your CB.
- 6. You may not use your CB to sell merchandise or professional service.

### 14

### **USE CHANNEL 9 FOR EMERGENCY ONLY**

**Operating Procedure for Emergency Communications** 

- **1.** For **EMERGENCY** communications, **set radio to Ch. 9**. For non-emergency communications, select desired Channel by rotating the CHANNEL UP/DOWN tuning knob until reaching the desired Channel.
  - Be sure the antenna is properly connected to the radio before transmitting. Prolonged transmitting without an antenna, or use of a poorly matched antenna, could cause damage to the transmitter.
- 2. When asking for aid on Channel 9 it is suggested that you request a REACT base to respond by saying "Break Channel 9 for a REACT base" and provide the CB DISTRESS DATA (called "CLIP):

**C**ALL SIGN-Identify yourself and vehicle.

LOCATION-Be exact.

INJURIES-Number. Type. Trapped?

 $\underline{\textbf{P}} ROBLEM\text{-}$  Give details and help required. Air  $\underline{\textbf{CLIP}}$  repeatedly so any monitor can aid you.

If you don't receive a response on Ch. 9; try Ch.14 or 19.

FCC gives the following examples of permitted and prohibited types of communications for use on Channel 9. These are guidelines and are not intended to be all-inclusive.

### Permitted Example Message

Yes	"A tornado sighted six miles north of town."
No	"This is observation post number 10. No tornado sighted."
Yes	"I am out of gas on Interstate 95 at mile marker 121."
No	"I am out of gas in my driveway."
Yes	"There is a four-car collision at Exit 10 on the Beltway, send police and ambulance."
No	"Traffic is moving smoothly on the Beltway."
Yes	"Base to Unit 1, the Weather Bureau has just issued a thunderstorm warning. Bring the sailboat into port."
No	"Attention all motorists. The Weather Bureau advises that the snow tomorrow will accumulate 4 to 6 inches."
Yes	"There is a fire in the building on the corner of 6th and Main Streets."
No	"This is Halloween patrol unit number 3. Everything is quiet here."

### **CB 10-CODES**

Citizens Band radio operators have largely adopted the "10-code" for standard questions and answers. Its use permits faster communications and better understanding in noisy areas. The following table lists some of the more common codes and their meanings:

Code	Meaning	Code	Meaning
10-1	Receiving poorly	10-37	Wrecker needed at
10-2	Receiving well	10-38	Ambulance needed at
10-3	Stop transmitting	10-39	Your message delivered
10-4	OK, message received	10-41	Please turn to channel
10-5	Relay message	10-42	Traffic accident at
10-6	Busy, stand by	10-43	Traffic Tie up at
10-7	Out of service, leaving air	10-44	I have a message for you
10-8	In service, subject to call	10-45	All units within range
10-9	Repeat message		please report
10-10	Transmission completed,	10-50	Break channel
	standing by	10-60	What is next
10-11	Talking too rapidly		message number?
10-12	Visitors present	10-62	Unable to copy,
10-13	Advise Weather/Road	10 / 2	use phone
	conditions	10-63	Net directed to
10-16	Make pick up at	10-64	Net clear
10-17	Urgent business	10-65	Awaiting your next message/assignment
10-18	Anything for us?	10-67	All units comply
10-19	Nothing for you, return to base	10-07	Fire at
10-20	My location is	10-70	Proceed with transmission
10-21	Call by telephone	10-71	in sequence
10-22	Report in person to	10-77	Negative contact
10-23	Stand by	10-81	Reserve hotel room for
10-24	Completed last assignment	10-82	Reserve room for
10-25	Can you contact	10-84	My telephone number is
10-26	Disregard last information	10-85	My address is
10-27	I am moving to channel	10-91	Talk closer to mike
10-28	Identify your station	10-93	Check my frequency on
10-29	Time is up for contact		this channel
10-30	Does not conform to FCC rules	10-94	Please give me a
10-32	I will give you a radio check		long count
10-33	EMERGENCY TRAFFIC	10-99	Mission completed, all
10-34	Trouble at this station		units secure
10-35	Confidential information	10-200	Police needed at
10-36	Correct time is		

# 16 FREQUENCY RANGE

The COBRA HH33 transceiver represents one of the most advanced AM two-way radios used as a Class D station in the Citizens Radio Service. This unit features advanced Phase Lock Loop (PLL) circuitry providing complete coverage of all 40 CB channels as shown below.

CB	Channel Freq.	CB	Channel Freq.
Channel	in MHz	Channel	in MHz
1	26.965	21	27.215
2	26.975	22	27.225
3	26.985	23	27.255
4	27.005	24	27.235
5	27.015	25	27.245
6	27.025	26	27.265
7	27.035	27	27.275
8	27.055	28	27.285
9	27.065	29	27.295
10	27.075	30	27.305
11	27.085	31	27.315
12	27.105	32	27.325
13	27.115	33	27.335
14	27.125	34	27.345
15	27.135	35	27.355
16	27.155	36	27.365
17	27.165	37	27.375
18	27.175	38	27.385
19	27.185	39	27.395
20	27.205	40	27.405

### **HH-33 SPECIFICATIONS**

GEN	IERAL
-----	-------

CHANNELS CB - 40 CH

FREQUENCY RANGE CB - 26.965 TO 27.405 MHZ

FREQUENCY TOLERANCE 0.005 %

FREQUENCY CONTROL PLL (PHASE LOCK LOOP) SYNTHESIZER

OPERATING TEMPERATURE RANGE -30° C TO + 65° C

MICROPHONE ELECTRET, PUSH-TO-TALK INPUT VOLTAGE 12V VDC, INTERNAL BATTERIES

13.8 VDC. EXTERNAL

ANTENNA CONNECTOR TYPE BNC

#### TRANSMITTER

POWER OUTPUT 3.5 W AT 12 VDC - HIGH, 1.0 W IN LOW

4.0 W AT 13.8 VDC - HIGH, 1.0 IN LOW

MODULATION AM

FREQUENCY RESPONSE 300 - 3000 HZ AT -6 DB OUTPUT IMPEDANCE 50 OHMS, UNBALANCED

#### **RECEIVER**

CB

SENSITIVITY LESS THAN 1 uV FOR 10 DB S/N

IF FREQUENCY DUAL CONVERSION

1 ST - 10.690 MHZ, 2ND - 455 KHZ AUDIO OUTPUT 500 mW MAXIMUM AT 10 % DISTORTION

FREQUENCY RESPONSE 300 - 3000 HZ AT -6 DB

2ND IF IMAGE REJECTION GREATER THAN 60 DB

ADJACENT CH. REJECTION 50 DB MIN. AUTOMATIC NOISE LIMITER BUILT- IN.

FREQUENCY CONTROL PLL (PHASE LOCK LOOP)

### If You Think You Need Service. Call 773-889-3087

"If your product should require factory service please call Cobra first before sending your unit in. This will ensure the fastest turnaround time on your repair."

You may be asked to send your unit to the Cobra factory. It will be necessary to furnish the following, in order to have the product serviced and returned.

- 1. For Warranty Repair, include some form of proof-of-purchase, such as a mechanical reproduction or carbon or sales receipt. If you send the original receipt it cannot be returned.
- 2. Send the entire product. Must include CB unit and microphone.
- 3. Enclose a description of what is happening with the unit. Include a typed or clearly printed name and address of where the unit is to be returned.
- 4. Pack unit securely to prevent damage in transit. If possible, use the original packing material.
- 5. Ship prepaid and insured by way of a traceable carrier (to avoid loss in transit) such as UNited Parcel Service (UPS), Roadway Parcel Service (RPS), or First Class Insured Mail to Cobra Factory Service, Cobra Electronics Corporation, 6500 W. Cortland St., Chicago, IL 60707. Cobra is not responsible for units not received if package has not been properly insured.
- 6. If the unit is in warranty, upon receipt of your unit it will either be repaired or exchanged depending on the model. Please allow approximately 3 to 4 weeks before contacting us for status. If the unit is out of warranty a letter will automatically be sent informing you of the repair charge or replacement charge. If you have any questions, please call 773-889-3087 for assistance.

For technical assistance, please call our Automated Help Desk which can assist you by answering the most frequently asked questions about Cobra products.

(773) 889-3087

24 hours a day, 7 days a week.

A Consumer Service Representative can be reached through this same number

8:00 am - 8:00 pm, Monday through Friday, CST.

Technical assistance is also available on-line in the Frequently Asked Question (FAQ) section at www.cobraelec.com or by e-mail to productinfo@cobraelec.com

### LIMITED TWO YEAR WARRANTY

COBRA ELECTRONICS CORPORATION warrants that its COBRA CB Radios, and the component parts thereof, will be free of defects in workmanship and materials for period of two (2) years from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A.

COBRA will, without charge, repair or replace, at its option, defective CB radios, products or component parts upon delivery to the COBRA factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at Cobra's expense, if the product is repaired or replaced under warranty. For further details concerning procedures for obtaining service, see the "If You Think You Need Service" section of the Owner's Manual.

**Exclusions:** This limited warranty does not apply; 1) to any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) if the serial number has been altered, defaced or removed; 4) if the owner of the product resides outside the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty.

COBRA shall not be liable for any incidental, consequential or other damages; including, without limitation, damages resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

> COBRA ELECTRONICS CORPORATION 6500 W. Cortland Street Chicago, Illinois 60707

NOTES 21

### **OPTIONAL ACCESSORIES**

You can find these fine accessories at your local Cobra CB dealer.



Replacement DC Power Cord for in vehicle use 420-017-N-001 \$7.00

Magnetic Mount Weather Antenna (not shown). Allows greater transmission range while in a moving vehicle. (Requires a CA-43 connector)
ATW-400 \$39.75



BNC/SO239 antenna adapter. Allows connection of your handheld CB to standard antennas. CA-43 \$5.00

Long Range antenna. Doubles the range of your handheld CB. CA-41 \$15.95

### If you wish, you can order directly from Cobra

Order by phone:

Call 1-773-889-3087 (Press 1 from the main menu) 8a.m.-8p.m. M-F CST.

Order by mail or fax: Please fill out order form below, and mail/fax directly to Cobra.

Part No.	Cost Ea. X Qty. = Amount		
420-017-N-001	\$7.00		
CA-43	\$5.00		
CA-41	\$15.95		
ATW-400	\$39.75		

- \*\* Illinois residents add 7%
  - \*\* Cook Co. residents add .75% (7.75% total)

    \*\* Chicago residents add 1% (8.75% total)
- \*\* Indiana residents add 5%
- \*\* Michigan residents add 4 %
- \*\* Minnesota residents add 6%
- \*\* Ohio residents add 6%
- \*\* Wisconsin residents add 5%

Discover

(Prices subject to change without notice.)

Customer Signature \_
Circle One: Visa

(	mange maneur near		
Fax to: 1-773-622-2269	Amount (Tax if applicable ) Shipping//handling Total	\$3.75	Mail to: Cobra Accessories Dept. 6500 W. Cortland St., Chicago, IL 60707
Please print clearly:  Name			
,	P.O. Box)	State	Zip

Allow 4 to 6 weeks for delivery. Offer valid in Continental U.S. only.

Credit Card No. \_\_\_\_\_ Exp. Date \_\_\_\_

MasterCard